

A-1 - Safety


This manual covers both the FastBack® Model 90E (with 4 mounting feet on the drive unit) and Model 90E-G2 (with 3 mounting feet on the drive unit). As of the writing of this manual, the model 90E-G2 is the most current version being produced. Except for the number of mounting feet, the 90E and the 90E-G2 are identical, and will throughout this manual be considered synonymous and referred to simply as Model 90E.

The FastBack® Model 90E is designed for safe operation by trained personnel. As with all machinery involving moving components, injury may occur if proper safety procedures are not followed. The correct use, inspection, cleaning, and safe operation of the equipment is of paramount importance to your company and to Heat and Control.

Operators and maintenance staff should fully understand the proper use and care of the FastBack® Model 90E. Please read this entire manual before operating the FastBack®.


General Safety Guidelines

- Report all unsafe conditions, equipment, and practices to your supervisor.
- Know the location of the emergency disconnect switch. This red and yellow switch is located on the power module enclosure, which is attached to the drive assembly (see Photo 1-1).

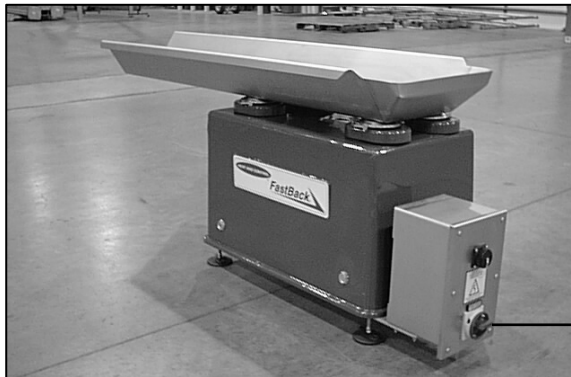

Emergency
Disconnect
Switch


Photo 1-1 – Emergency Disconnect Switch

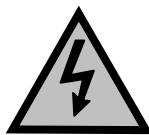


The FastBack® Models 50E/90E is powered by high voltage. Only authorized personnel should service the equipment.

The Heat and Control Service Office in Lititz, PA offers training in the operation and maintenance of the FastBack® Models 50E/90E. Contact the Service Office at (800) 648-5313 or (717) 519-5240 to schedule a training session for your facility's maintenance personnel.

A-1 - SAFETY

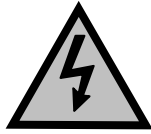

The FastBack® Models 50E/90E has multiple voltage sources. Isolate all sources before servicing.

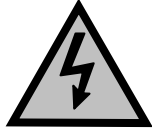

Overcurrent protection is required for 24V and 120V circuits.



WARNING

- Always disconnect power to the FastBack® before performing any maintenance.
- Observe all cautions and warnings placed on the equipment and printed in this manual.
- Inspect all equipment and tools before use. Do not use faulty or broken equipment.
- Do not wear jewelry or watches when operating the FastBack®.



CAUTION

- Use only ladders, platforms, steps, and handrails that your facility has approved for safety.
- Always wear eye and ear protection when operating the FastBack®.
- Keep other objects out of the equipment work area.
- Clean up spilled product immediately.

Emergency Shutdown Procedure

To shut off the FastBack® immediately, rotate the emergency disconnect switch counterclockwise to the OFF position.