


***SPRAY
DYNAMICS***

HEAT AND CONTROL

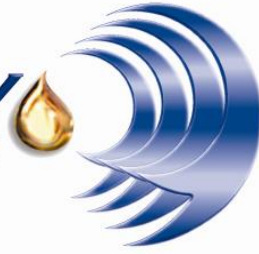

SCARF FEEDER

ORIGINAL INSTRUCTIONS

When ordering parts, be sure to use the Spray Dynamics part number whenever possible to assure fast service and the correct part.

SPRAY DYNAMICS

SCARF FEEDER®

CONTENTS

GENERAL DESCRIPTION

PREFACE.....	3
Safety Measures.....	3
GENERAL DESCRIPTION.....	4
Introduction.....	4
Construction.....	4-5
Feeder Drawing.....	6
System Framework.....	7
Vibratory Scarf Feeder.....	7
Controls.....	7
INSTALLATION.....	8
Installing components onto the frame.....	8
Setup and Adjustment.....	8
NORMAL OPERATION.....	9
MAINTENANCE.....	9-10
VIBRATORY CONTROLLER.....	11
Controller Setup Parameters.....	11-12
Autotune Controller.....	12
Reset Accelerometer Error.....	13
RECOMMENDED SPARE PARTS.....	14

SPRAY DYNAMICS

SCARF FEEDER®

PREFACE

Safety Measures

Throughout this manual there are 2 symbols next to information which should be read and carefully understood before doing any maintenance or operating the machine. The symbols are



Electrical warning



General warning

All operators should be adequately trained and specialized personnel should carry out any repairs beyond the regular service of the machine. These would include maintenance personnel, and line managers.



Before opening any electrical panel, proper Lock-Out/Tag-Out procedures should be followed. This includes pneumatics.



Ear plugs and safety glasses should be worn when in the vicinity of this machine.



The airborne noise levels for the Scarf Feeder are negligible. Less than 50 dB.



Care should be taken when installing the Scarf Feeder onto its frame. Use lifting straps as needed. Keep fingers away from pinch points during installation.



If the system has a cover, be aware of the potential to pinch fingers when closing the cover.



For Scarf Feeders mounted to frames with castors, keep feet away from castors while moving equipment.