



VI. Operational Use

6.1. Control Panel (See Diagram 6.1)

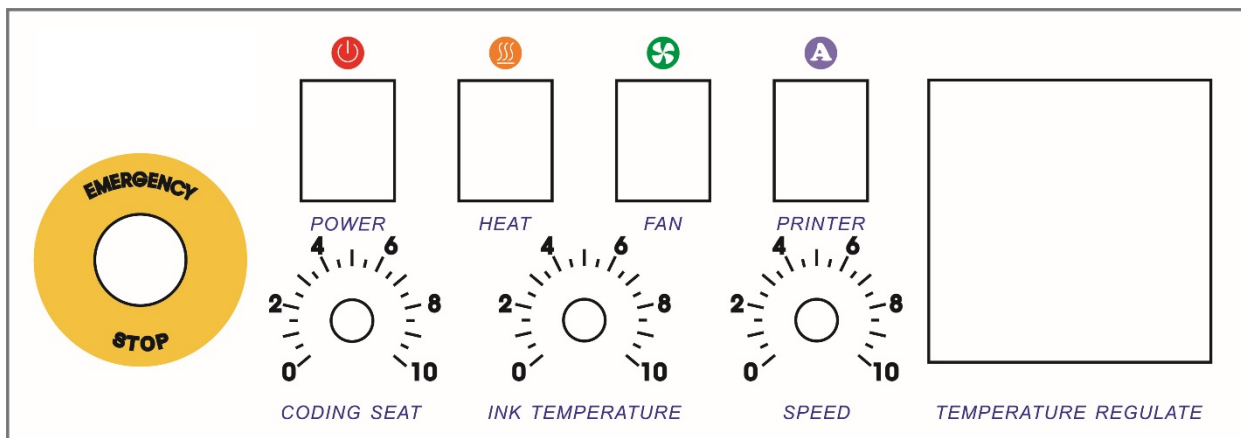


Diagram 6.1

6.2. Prepare the machine for use


- 6.2.1. This machine is equipped with a three-prong grounded socket. Be sure that the socket is well connected for safe operation.
- 6.2.2. First-time use or too long intermission will make the heating elements damp. It is necessary to preheat at lower temperature for several minutes before the normal operation.
- 6.2.3. Adjust the height and position of the conveyor table to get the required sealing position for your application.
- 6.2.4. Adjust the position of feed opening according to the external size from sealing line to bag opening.
- 6.2.5. According to the thickness and material that to be sealed, adjust the clearance between two heating blocks and two cooling blocks, so that both clearances are approximately equal to the thickness of packing bag in one layer. This will guarantee sealing firmness and high definition of embossing, and ensure a suitable length extended from the two ends of seal.



6.3 Sealing Belt Adjustment / Replacement

- 6.3.1 Remove the safety cover, after the heating blocks cool, turn stopping flakes on both upper heating block and upper cooling block by 90° to lift both, then loosen the springs on both embossing roller and pinch roller, meanwhile, remove the guiding belt, to prepare it for removing sealing belts. (see Diagram 6.2)
- 6.3.2 Move the driven wheel seat (adjusting block) towards heating block and remove the sealing belt.
- 6.3.3 Replace with a new sealing belt and install the guiding belt back.
- 6.3.4 Put the driven wheel, heating/cooling blocks, and pinch roller to the original position.
- 6.3.5 Connect to the power supply to test the machine. If irregular sealing appears on the belt, make adjustment by adjusting screws on the driven wheel seat (adjusting block)(see Diagram 6.3).
- 6.3.6 Install the safety cover. When the temperature reaches the set temperature, the machine is ready.

Diagram 6.2

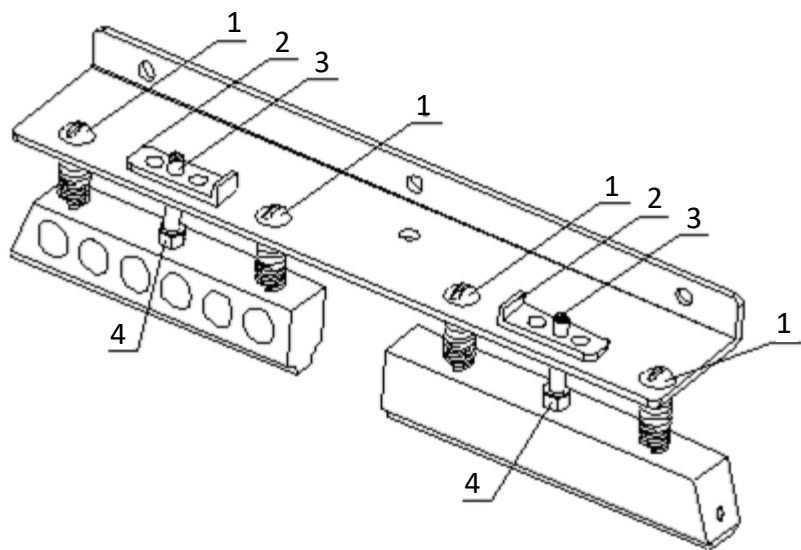

1	101516	Bolt
2	101517	Withdraw Stopping Flake
3	101518	Tightening Bolt
4	101519	Nut



6.4 Drive Wheel Block Adjustment

If the sealing belt is off tracking, adjust the screws on driven wheel seat (adjusting block), shown as Diagram 6.4.

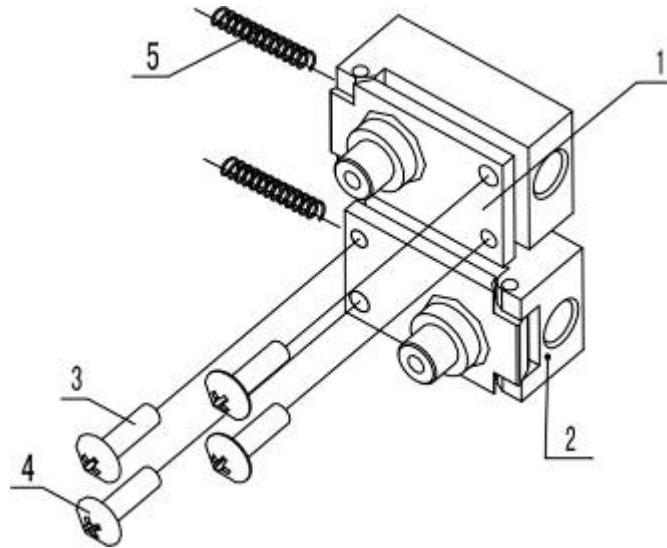


Diagram 6.3


1	driven wheel seat adjusting plate - Upper
	driven wheel seat adjusting plate - Lower
2	driven wheel seat adjusting block - Upper
	driven wheel seat adjusting block -Lower
3 / 4	adjusting screw
5	spring



6.5 Conveyor Belt Adjustment / Replacement

When making adjustments to the conveyor table, loosen two nuts (1) at the bottom of the conveyor table. There are three location holes on the housing (2), insert bolts in them as needed, then fasten the nuts. Then move the conveyor table and equip the connecting shaft (3) that would be in the spare parts into the universal joints. (see diagram 6.4).

Diagram 6.4

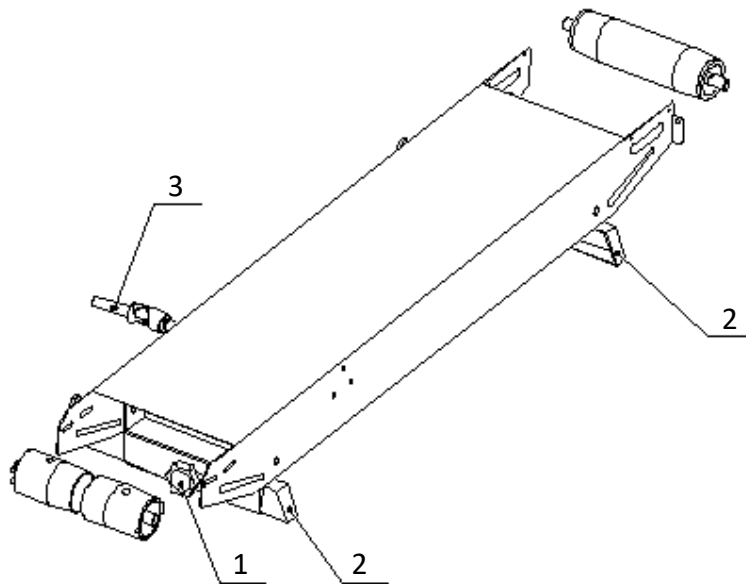

1	101521	Adjusting Knob
2	101522	Housing
3	105038	Universal Joint



6.6 Print Wheel Setup

This machine uses a solid-ink roller coding mechanism which is controlled by electromagnetic clutch intermittent mechanism.

6.6.1. Typeface Wheel Arrangement

The “R” Arrange typeface wheel has a horizontal / longitude text arrangement.

The “T” Arrange typeface wheel has a vertical, axial arrange text arrangement.

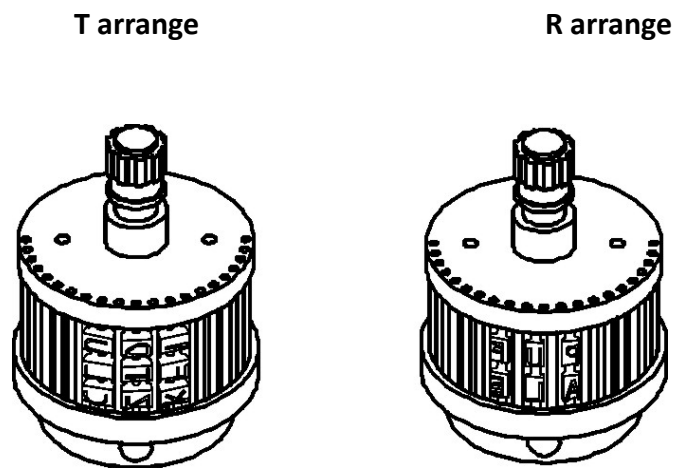


Diagram 6.6



6.7 Print Wheel Typeface Setup

Setting typeface on print wheel (see Diagram 6.7):

- 6.7.1. Turn the holding latch on the printing wheel cover to twist the traverse pin out of the groove, the printing wheel cover will then pop up. To remove its cover, press the silicon rubber bar. Replace the traverse pin into the groove of the cover and turn to fasten.
- 6.7.2. Then press the silicone bar on it and put printing wheel cover.
- 6.7.3. At last, insert the traverse pin back into the groove, and rotate for fastening.

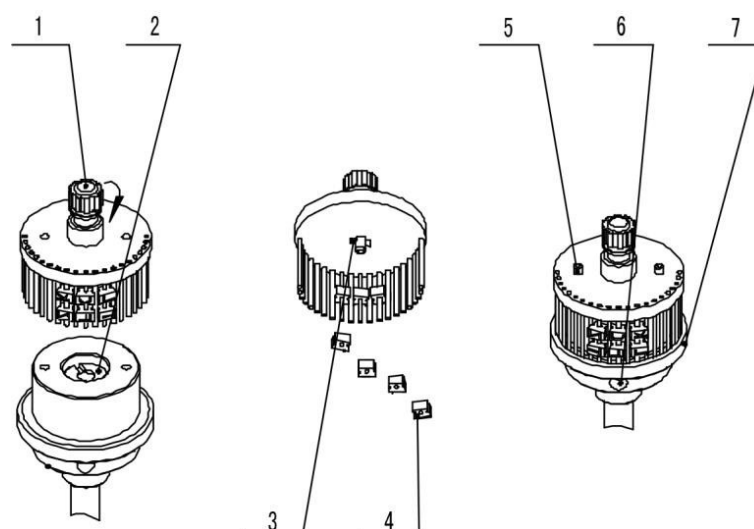


Diagram 6.7

1	201016	Holding Latch	5	101525	Fixed Pin
2	201015	Cover	6	101526	Print Wheel Holding Screw
3	101523	Traverse Pin	7	201013	Print Wheel
4	101524	Typeface Letters			



6.8. Ink Roller and Print Wheel Clearance Adjustment

Adjust the adjusting screw (5) for the ink roller's swing pole, rotate the printing wheel, and make the types' surface touch the ink roller's (1) surface slightly. If the ink roller can be easily driven by rotating the printing wheel with hand, it should be ok (see Diagram 6.8).

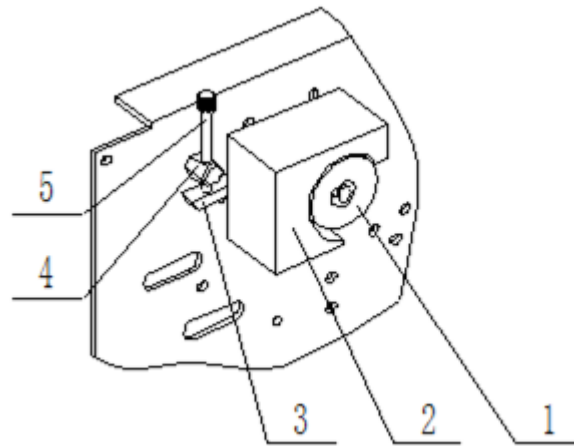


Diagram 6.8

1	911005	Ink Wheel	4	101528	Adjusting Pole
2	201002	Ink Wheel Heating Block	5	101529	Adjusting Bolt
3	101527	Swing Pole			



6.9 Print Wheel and Silicone Wheel Pressure Adjustment

The typefaces on the print wheel should not touch the silicone wheel when it is not in printing process. They only touch each other when the printing imprint is in process.

- 6.9.1. Loosen the screw (4) in the front of the silicone wheel, then rotate the eccentric sleeve (3), so as to make the types' surface slightly touch the silicone wheel's (2) surface.
- 6.9.2. If the machine is used to print relatively thicker packing bag, the screw should be loosened accordingly and the pressure may not be oversized, fasten the screw (4) after making adjustment (see Diagram 6.9).

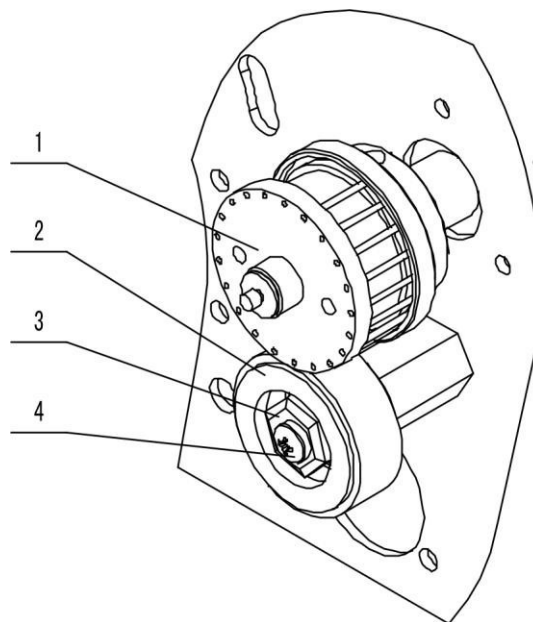


Diagram 6.9

1	201013	Print Wheel
2	101530	Silicone Wheel
3	101531	Eccentric Cover
4	101532	Bolt



6.10. Print Wheel and Ink Roller Temperature Adjustment

- 6.10.1. All the knobs of this machine are set to position 0 before leaving factory. Users need to make adjustments suitable to their specific application.
- 6.10.2. For a new ink roller or when there is extended time between previous use, the temperature should be relatively lower.
- 6.10.3. After a period of operation time, the temperature can be raised to higher degree, which can make the deep-seated ink ooze and prolong the ink roller's life-span.
- 6.10.4. When the ink roller reaches the working temperature, use a piece of white paper to touch the ink surface. As long as it can stick a little ink, it should be in position. The temperature can't be too high or too low.
- 6.10.5. The ink roller that is suited for this machine is specified in following table, including colors of white, yellow, red, blue, green, brown and black.
- 6.10.6. If the packing bag needs steam cooking after printing, you should choose the ink rollers of moderate temperature or high temperature.

Model	Outer diameter (mm)	Height (mm)
Low temperature series 120-150°C (NO:935)	Φ36	16
	Φ36	32
	Φ36	40
Moderate temperature series 135-165°C (NO:932)	Φ36	16
	Φ36	32
	Φ36	40
High temperature series 150-175°C (NO:930)	Φ36	16
	Φ36	32
	Φ36	40



6.11. Adjustment of coding position

Users can set the coding position by adjusting the coding position knob according to the length of bag opening.

6.12. Adjustment of number of lines in printing label

Arrange types within stipulated range in **Section IV Performance Features**, and then use the provided silicone bar to secure the typefaces in required axial position.



6.13 Starting procedure

- 6.13.1 Connect to the power supply and press the Start switch, which will turn the indicator light on. You can then adjust the speed controller knob to the desired speed. All transmission parts start to run synchronously.
- 6.13.2 Fine tune the knob of embossing roller to make the wheel swivel and achieve the proper pressure.
- 6.13.3 Turn Heat Seal switch ON, the green light of the electronic temperature controller will light up. According to the material and thickness of the packing bag, adjust the temperature controller to the necessary temperature. When the heating blocks begin to preheat, the machine needs to be started and kept running at low speed.
- 6.13.4 According to the material and thickness that is being sealed, turn on the cooling fan if your application requires.
- 6.13.5 Flatten and align the bag opening, then feed the bag by aligning the bag opening with the guide plate. The bag opening is gripped by the sealing belts, which will make the bag move forward automatically. At that moment, do not push it in or pull it out by force, otherwise irregular sealing or breakdown will happen.
- 6.13.6 If there is dirt attached to the sealing belt or the heating block, stop the sealer and clear it. Never clear the dirt with your hand when the temperature is high.
- 6.13.7 Stop operation

In order to prolong the service life of the sealer, before shutting down the machine, you should return the temperature setting to "0" and turn on the fan. The temperature on the indicator will begin to fall and the sealing belts should still be running. Once the temperature drops below 100°C, you can turn off the fan and main power.

6.13.8 Emergency stop switch:

At any time, the machine can be stopped immediately by pressing the emergency stop switch. The emergency stop switch is a self-locking switch, and needs to rotate clockwise 120 degrees to open after self-lock.