

6 FUNCTIONS OF THE OPERATION SCREENS

6.1 Summary

This chapter describes the functions of the Operation screen required for production.

The keys displayed in each operation screen include the keys to call functions directly, the keys to input and set numerical values and alphabets with the Numeric Keypad screen or Keyboard screen, the keys to select items from pop-up keys, drop-down keys or radio buttons, and the keys to switch screens or display modes.

In this chapter, the functions of the keys displayed on the screen are shown in a list, and for the keys with switching and operating functions, the operating procedures are explained in detail.

WARNING

- **Thoroughly understand the contents of "3 OPERATING PANELS" before operating the device.**

CAUTION

- **For operation of the remote control unit and production, follow the instructions described in "3 OPERATING PANELS" and "4 OPERATION PROCEDURES".**

<Contents>

- Functions of each screen

<Purpose>

- To understand the functions and operating procedures of each operation screen, and understand and master the advanced operations.

<Intended reader>

- Operators
- System administrators

6.2 Operation Keys and Operation Levels

The operable levels for each operation key are as follows

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Message Board] key	*	*	*	6.3
[Information Display] key	*	*	*	6.3
[Start-up Assistant] key	*	*	*	6.3
[Language Selection] key	*	*	*	6.3
[Operation Level Selection] key	*	*	*	6.3
[Control Panel] key			*	6.3
[Screen Control] tab			*	6.3.5
[Backlight Saver] display			*	6.3.5.1
[BL Saver On Time] display			*	6.3.5.1
[Wallpaper] display			*	6.3.5.1
[Characters] display			*	6.3.5.1
[Password Set/LangSlct Set] tab			*	6.3.5
[Site Engineer] level			*	6.3.5.2
[Installation] level			*	6.3.5.2
[Destination ID] tab			*	6.3.5
[Destination ID] drop-down key			*	6.3.5.3
[Access Address] key			*	6.3.5.3
[Exit] key			*	6.3.5
[Date & Time Setting] key			*	6.3
[Help] key	*	*	*	6.3
[Zero Adjst] key	*	*	*	6.4
Each [WH] key	*	*	*	6.5
Each [DF] key	*	*	*	6.5
[Slct All WH] key	*	*	*	6.5
[Slct All DF] key	*	*	*	6.5
[Start] key	*	*	*	6.5
[Exit] key	*	*	*	6.5
[Drain] key	*	*	*	6.4
[Auto Zero] lamp key	*	*	*	6.7
[Infeed Control] lamp key	*	*	*	6.7
[Drain STOP] key	*	*	*	6.7
[Drain START] key	*	*	*	6.7
[Exit] key	*	*	*	6.7
[Weight Display] tab	*	*	*	6.7
[Feeder Adjust] tab	*	*	*	6.7
[Live]/[C.G.] switching tab	*	*	*	6.12
Each [DF] key	*	*	*	6.12
Each [RF] key	*	*	*	6.12
[RF Time] lamp key	*	*	*	6.12
[RF AMP] lamp key	*	*	*	6.12
[Head mean] lamp key	*	*	*	6.12
[Section mean] lamp key	*	*	*	6.12
[Increase] key	*	*	*	6.12
[Decrease] key	*	*	*	6.12
[Feeder] pop-up key	*	*	*	6.12
[Radar chart display switching arrow] key	*	*	*	6.12

* : Indicates that the item can be operated.

NOTE

- Some of the keys in the list may not appear depending on the machine status or specifications set by the user.

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Drain] key (Continued)	*	*	*	6.4
[Timing Adjust] tab	*	*	*	6.13
Each [Timing Adjustment Item] key	*	*	*	6.13
[Increase/Decrease] key (10ms)	*	*	*	6.13
[Increase/Decrease] key (100ms)	*	*	*	6.13
[Entr Time] key	*	*	*	6.13
[Auto Cal.] key	*	*	*	6.13
[Full Open] key	*	*	*	6.4
[Unit Select] tab	*	*	*	6.8
[DF] lamp key	*	*	*	6.8
[RF] lamp key	*	*	*	6.8
[PH] lamp key	*	*	*	6.8
[WH] lamp key	*	*	*	6.8
[Feeder Adjust] tab	*	*	*	6.8
[Live]/[C.G.] switching tab	*	*	*	6.12
Each [DF] key	*	*	*	6.12
Each [RF] key	*	*	*	6.12
[RF Time] lamp key	*	*	*	6.12
[RF AMP] lamp key	*	*	*	6.12
[Head mean] lamp key	*	*	*	6.12
[Section mean] lamp key	*	*	*	6.12
[Increase] key	*	*	*	6.12
[Decrease] key	*	*	*	6.12
[Feeder] pop-up key	*	*	*	6.12
[Radar chart display switching arrow] key	*	*	*	6.12
[Close] key	*	*	*	6.8
[Open] key	*	*	*	6.8
[Exit] key	*	*	*	6.8
[Select Preset] key	*	*	*	6.4
[Select Preset] key	*	*	*	6.9.1
[Slt Dsply] key	*	*	*	6.9.1
[Preset No.] key	*	*	*	6.9.1
[Exit] key	*	*	*	6.9.1
[Preset] key		*	*	6.4
[Change Preset No.] key		*	*	6.10.1
[Preset No. Direct Select] key (Take over function equipped)		*	*	6.10.1
[Detail Setting] key		*	*	6.10.1
[Finish Prdct Setting] index		*	*	6.10.1
[Product] tab		*	*	6.10.2
[Product Name] key		*	*	6.10.2.1
[Product Code] key		*	*	6.10.2.1
[Product Category] key		*	*	6.10.2.1
[Photo selection] drop-down key		*	*	6.10.2.1
[Camera] key		*	*	6.10.2.1
[Machine] tab		*	*	6.10.2
[Speed] key		*	*	6.10.2.2
[Dump Count] key		*	*	6.10.2.2
[Average Control] radio button		*	*	6.10.2.2
[Interlock Parameter Number] drop-down key		*	*	6.10.2.2
[Section Parameter Number] key		*	*	6.10.2.2
[Item] tab		*	*	6.10.2
[Auto Feed Target] key		*	*	6.10.2.3
[Disch.Priority Count] key		*	*	6.10.2.3
[Good Efficiency Judgement Value] key		*	*	6.10.2.3
[Feed Multiplier] key		*	*	6.10.2.3
[Hopper Action Parameter Number] drop-down key		*	*	6.10.2.3
[Photo SW] radio button		*	*	6.10.2.3
[Shutter Drive] radio button		*	*	6.10.2.3
[Every Corrected Head Number] key		*	*	6.10.2.3
[Maximum Select Head Number] key		*	*	6.10.2.3
[Minimum Stable Head Number] key		*	*	6.10.2.3
[Others] tab		*	*	6.10.2
[Stable Time] key		*	*	6.10.2.4
[Filter No.] drop-down key		*	*	6.10.2.4

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Preset] key (Continued)		*	*	6.4
[Detail Setting] key (Continued)		*	*	6.10.1
[Feeder Adjustment] index		*	*	6.10.1
Each [RF] key		*	*	6.10.3
Each [DF] key		*	*	6.10.3
[Time] lamp key		*	*	6.10.3
[AMP] lamp key		*	*	6.10.3
[Target Wt] key		*	*	6.10.3
[Read Default] key		*	*	6.10.3
[Read OptimumVal] key		*	*	6.10.3
[Increase] key		*	*	6.10.3
[Decrease] key		*	*	6.10.3
[Feeder] pop-up key		*	*	6.10.3
[Timing Adjustment] index		*	*	6.10.1
Each [Timing Adjustment Item] key		*	*	6.10.4
[Increase/Decrease] key (10ms)		*	*	6.10.4
[Increase/Decrease] key (100ms)		*	*	6.10.4
[Entr] key		*	*	6.10.4
[Auto Cal.] pop-up key		*	*	6.10.4
[Weight Setting] index		*	*	6.10.1
[Extended Upper Limit] key		*	*	6.10.5
[Upper Weight Limit] key		*	*	6.10.5
[Target Weight] key		*	*	6.10.5
[Lower Weight Limit] key		*	*	6.10.5
[Extended Upper Limit Dump Cycle] key		*	*	6.10.5
[Simple Setting] key		*	*	6.10.1
[Product name] key		*	*	6.10.6
[Ease of flow of products] drop down key		*	*	6.10.6
[Quantity of products] drop down key		*	*	6.10.6
[Speed] key		*	*	6.10.6
[Target Wt] key		*	*	6.10.6
[Upper Weight Limit] key		*	*	6.10.6
[Auto set.] key		*	*	6.10.6
[Exit] key		*	*	6.10.1
[Output] key		*	*	6.10.1
[Cancel] key		*	*	6.10.1
[Paste] key		*	*	6.10.1
[Power] key	*	*	*	6.4
[Start] key	*	*	*	6.4
[Combination] tab	*	*	*	6.6
[Select Display] pop-up key	*	*	*	6.6.1
[Combination Result Display] key	*	*	*	6.6.1.1
[Expansion Display] key	*	*	*	6.6.1.1
[Feeder Adjust] tab	*	*	*	6.6
[Live]/[C.G.] switching tab	*	*	*	6.12
Each [DF] key	*	*	*	6.12
Each [RF] key	*	*	*	6.12
[RF Time] lamp key	*	*	*	6.12
[RF AMP] lamp key	*	*	*	6.12
[Head mean] lamp key	*	*	*	6.12
[Section mean] lamp key	*	*	*	6.12
[Increase] key	*	*	*	6.12
[Decrease] key	*	*	*	6.12
[Feeder] pop-up key	*	*	*	6.12
[Radar chart display switching arrow] key	*	*	*	6.12
[Timing Adjust] tab	*	*	*	6.7
Each [Timing Adjustment Item] key	*	*	*	6.13
[Increase/Decrease] key (10ms)	*	*	*	6.13
[Increase/Decrease] key (100ms)	*	*	*	6.13
[Entr Time] key	*	*	*	6.13
[Auto Cal.] key	*	*	*	6.13

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Start] key (Continued)	*	*	*	6.4
[Total Data] tab	*	*	*	6.6
[Total Log] drop-down list key	*	*	*	6.6.4
[Output] key	*	*	*	6.6.4
[Select Total] pop-up key	*	*	*	6.6.4
[Weight Display] tab	*	*	*	6.6
[Write feeder OptimumVal] key		*	*	6.6
[Infeed Control] key	*	*	*	6.6
[Exit] key	*	*	*	6.6
[Stop] key	*	*	*	6.4
[Select Total] pop-up key	*	*	*	6.4
[Current Total] key	*	*	*	6.11
[Output] key	*	*	*	6.11.1
[Exit] key	*	*	*	6.11.1
[Select Total] pop-up key	*	*	*	6.11.1
[Total Log] drop-down key	*	*	*	6.11.1
[X-bar Chart] key	*	*	*	6.11
[Total Log] drop-down key	*	*	*	6.11.2
[Weigher's Transitional Data] key	*	*	*	6.11
[SelectItem] drop-down key	*	*	*	6.11.3
[Per Head - Cmb. Participation Data] key	*	*	*	6.11
[SelectItem] drop-down key	*	*	*	6.11.4
[Total Setting] key		*	*	6.11
[Every Combination Output] radio button		*	*	6.11.5
[Operation Log Output] radio button		*	*	6.11.5
[Error Stop Log] key		*	*	6.11.5
[Warning Log] key		*	*	6.11.5
[Machine Operation Log] key		*	*	6.11.5
[Key Operation Log] key		*	*	6.11.5
[Action for Statistical Mem. Full] radio button		*	*	6.11.5
[BATCH TOTAL INTERVAL] increase/decrease key		*	*	6.11.5
[Data Sampling Interval] increase/decrease key		*	*	6.11.5
[All Total] key		*	*	6.11.5
[Output] key		*	*	6.11.5
[Operation Log] key	*	*	*	6.11
[Error Stop Log] key	*	*	*	6.11.6
[Warning Log] key	*	*	*	6.11.6
[Machine Operation Log] key	*	*	*	6.11.6
[Key Operation Log] key	*	*	*	6.11.6
[Machine Set] pop-up key		*	*	6.4
[Manual Adjustment] index		*	*	6.14
[Weighing Adjst] tab		*	*	6.14.1
[Head] key		*	*	6.14.1.1
[All Head SLCT/CLR] key		*	*	6.14.1.1
[Zero Adjst] key		*	*	6.14.1.1
[WH Span Adjustment] key		*	*	6.14.1.1
[Combi. CalcIt] tab			*	6.14.1
[Display/Cal Select] pop-up key			*	6.14.1.2
[Combination Result Display] key			*	6.14.1.2
[Combination Status Display with Scale] key			*	6.14.1.2
[Single Combination Weighing] key			*	6.14.1.2
[Discharge After Combination Weighing] key			*	6.14.1.2

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Machine Set] pop-up key (Continued)		*	*	6.4
[Manual Adjustment] index (Continued)		*	*	6.14
[AFV Monitor] tab			*	6.14.1
[Zoom in] key			*	6.14.1.3
[Zoom out] key			*	6.14.1.3
[Drive Start] key			*	6.14.1.3
[Drive Stop] key			*	6.14.1.3
[Exit] key			*	6.14.1.3
[Self-diagnosis] index			*	6.14
[Device Check] tab			*	6.14.2
[SIfDiagnosis] radio button			*	6.14.2.1
[Exec.] key			*	6.14.2.1
[In/Output Signal] tab			*	6.14.2
[Relay Unit No.] drop-down key			*	6.14.2.2
[Discharge Completion Signal 1] lamp key			*	6.14.2.2
[Discharge Completion Signal 2] lamp key			*	6.14.2.2
[Error Signal 1] lamp key			*	6.14.2.2
[Error Signal 2] lamp key			*	6.14.2.2
[Infeed Control Signal 1] lamp key			*	6.14.2.2
[Infeed Control Signal 2] lamp key			*	6.14.2.2
[Control Signal 1] lamp key			*	6.14.2.2
[Control Signal 2] lamp key			*	6.14.2.2
[Network Analyze] tab			*	6.14.2
[WCU] key			*	6.14.2.3
[ICU] key			*	6.14.2.3
[DMU] key			*	6.14.2.3
Reconfigure Count [WCU] key			*	6.14.2.3
Reconfigure Count [ICU] key			*	6.14.2.3
Reconfigure Count [DMU] key			*	6.14.2.3
[Output] key			*	6.14.2.3
[Program Number] tab			*	6.14.2
[Output] key			*	6.14.2.4
[Test Drive] tab			*	6.14.2
[Head] key			*	6.14.2.5
[All WH] key			*	6.14.2.5
[DF] lamp key			*	6.14.2.5
[RF] lamp key			*	6.14.2.5
[PH] lamp key			*	6.14.2.5
[WH] lamp key			*	6.14.2.5
[Drive Start] key			*	6.14.2.5
[Drive Stop] key			*	6.14.2.5
[Display & Data/Manager] index		*	*	6.14
[Layout Setting] tab		*	*	6.14.3
[Head No 1 Location Setting] key		*	*	6.14.3.1
[Preset Manager] tab			*	6.14.3
[Initialize] key			*	6.14.3.2
[Source] drop-down key			*	6.14.3.2
[Destination] drop-down key			*	6.14.3.2
[Copy] key			*	6.14.3.2
[All Select] key			*	6.14.3.2
[Machine Set Mngr] tab			*	6.14.3
[Initialize] key			*	6.14.3.3
[Source] drop-down key			*	6.14.3.3
[Destination] drop-down key			*	6.14.3.3
[Copy] key			*	6.14.3.3
[All Select] key			*	6.14.3.3

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Machine Set] pop-up key (Continued)		*	*	6.4
[Various Parameter Setting] index			*	6.14
[Weigh Spec Set] tab			*	6.14.4
[Range] radio button			*	6.14.4.1
[Empty Judgment Weight] key			*	6.14.4.1
[Stable Judgment Weight] key			*	6.14.4.1
[Stable Count] key			*	6.14.4.1
[Auto Zero Tolerance] key			*	6.14.4.1
[Auto Zero Interval] key			*	6.14.4.1
[AFV] radio button			*	6.14.4.1
[Output] key			*	6.14.4.1
[Combination Set] tab			*	6.14.4
[Compensation Value] key			*	6.14.4.2
[Auto Compensation Revision] radio button			*	6.14.4.2
[Output] key			*	6.14.4.2
[Zero Error] radio button			*	6.14.4.2
[PH,WH,BH Hopper Error] radio button			*	6.14.4.2
[Overscale Error] radio button			*	6.14.4.2
[Error Stop Head Number] key			*	6.14.4.2
[Overweight Error Stop Count] key			*	6.14.4.2
[Recheck Error] radio button			*	6.14.4.2
[Sectioning Set] tab			*	6.14.4
[Parameter Select] key			*	6.14.4.3
[Output] key			*	6.14.4.3
[Smallest Head No in section] key			*	6.14.4.3
[Largest Head No in section] key			*	6.14.4.3
[Delete] key			*	6.14.4.3
[Weigher Setting] index			*	6.14
[Active head] tab			*	6.14.5
[Head] key			*	6.14.5.1
[All Head SLCT/CLR] key			*	6.14.5.1
[AFD Setting] tab			*	6.14.5
[AFD Stop for Fewer Available Head] key			*	6.14.5.2
[Cleaning Request] radio button			*	6.14.5.2
[Peripheral Equipment Setting] index			*	6.14
[Pckr Intrck Set] tab			*	6.14.6
[Parameter No. Select] drop-down key			*	6.14.6.1
[Pckr Intrck Set] index			*	6.14.6.1
[Dump Confirm Hold] key			*	6.14.6.1.1
[Multi Dump Initiate] radio button			*	6.14.6.1.1
[Multi Dump Confirm] radio button			*	6.14.6.1.1
[Interface] drop-down key			*	6.14.6.1.1
[Manual Dump Initiate] radio button			*	6.14.6.1.1
[Manual Dmp Confirm] radio button			*	6.14.6.1.1
[RingShutter] index			*	6.14.6.1
[Use] radio button			*	6.14.6.1.2
[Parameter Select] drop-down key			*	6.14.6.1.2
[RS] drop-down key			*	6.14.6.1.2
[Minimum Weight Head Number] key			*	6.14.6.1.2
[Maximum Weight Head Number] key			*	6.14.6.1.2
[Pool in Multi Dump] radio button			*	6.14.6.1.2
[Cycle Pool] radio button			*	6.14.6.1.2
[EXC Number] drop-down key			*	6.14.6.1.2
[EXC Port Number] drop-down key			*	6.14.6.1.2
[Discharge Direction] radio button			*	6.14.6.1.2
[Product Hold step] key			*	6.14.6.1.2

Operation Key	Operation Level			Reference
	Operator	Site Engineer	Installation	
[Machine Set] pop-up key (Continued)		*	*	6.4
[Peripheral Equipment Setting] index (Continued)			*	6.14
[Pckr Intrclck Set] tab (Continued)			*	6.14.4
[DivertingTimingHppr] index			*	6.14.6.1
[Use] radio button			*	6.14.6.1.3
[Parameter Select] drop-down key			*	6.14.6.1.3
[DTH] drop-down key			*	6.14.6.1.3
[Minimum Weight Head Number] key			*	6.14.6.1.3
[Maximum Weight Head Number] key			*	6.14.6.1.3
[Pool in Multi Dump] radio button			*	6.14.6.1.3
[Cycle Pool] radio button			*	6.14.6.1.3
[EXC Number] drop-down key			*	6.14.6.1.3
[EXC Port Number] drop-down key			*	6.14.6.1.3
[Discharge Direction] radio button			*	6.14.6.1.3
[Product Hold step] key			*	6.14.6.1.3
[TimingHopper] index			*	6.14.6.1
[Use] radio button			*	6.14.6.1.4
[Parameter Selection] drop-down key			*	6.14.6.1.4
[TH] drop-down key			*	6.14.6.1.4
[Minimum Weight Head Number] key			*	6.14.6.1.4
[Maximum Weight Head Number] key			*	6.14.6.1.4
[Pool in Multi Dump] radio button			*	6.14.6.1.4
[Cycle Pool] radio button			*	6.14.6.1.4
[EXC Number] drop-down key			*	6.14.6.1.4
[EXC Port Number] drop-down key			*	6.14.6.1.4
[Discharge Direction] radio button			*	6.14.6.1.4
[Product Hold step] key			*	6.14.6.1.4
[Output] key			*	6.14.6.1
[Infeedr Cntl Set] tab			*	6.14.6.2
[Infeeder No] key			*	6.14.6.2
[Infeeder No. Select] drop-down key			*	6.14.6.2
[Smallest head number] key			*	6.14.6.2
[Largest Head number] key			*	6.14.6.2
[Infeed Detector] radio button			*	6.14.6.2
[Transient Intrpt.] key			*	6.14.6.2
[Feed Intrpt.] key			*	6.14.6.2

6.3 Upper Setting Bar

The upper setting bar is constantly displayed at the top of each screen and can be used to set the basic operational environment.



Fig. 6-1

Table 6-1

No.	Name	Function
1	[Message Board] key	Displays the Message Board screen (Refer to "6.3.1 Message Board").
2	[Information Display] key	Displays the operation manual and other information for this device.
3	[Start-up Assistant] key	Displays the Start-Up Assistant screen (The start-up assistant function is available only in the main menu.) (Refer to "6.3.2 Start-Up Assistant").
4	[Language Selection] key	Selects the language (Refer to "6.3.3 Language Selection").
5	[Operation Level Selection] key	Switches the "Operation level" (Refer to "6.3.4 Operation Level Selection").
6	[Control Panel] key	Sets up the screen control, password and destination ID (Refer to "6.3.5 Control Panel Screen").
7	[Date & Time Setting] key	Sets the date and time (Refer to "6.3.6 Date & Time Setting Screen").
8	[Help] key	Displays the descriptions for each key. The [Help] key blinks when pressed. If a desired key is pressed after that, the function details of the pressed key appear. If you touch the screen while the Help window is displayed, the Help function terminates (Refer to "6.3.7 Help Function").

6.3.1 Message Board

The message board is the function for handwriting notes freely on the operation panel. You can freely input any notes including memos about production or messages to the next operators. When a note is entered, the [Message Board] key blinks. The key keeps blinking even while another screen is displayed, which makes it possible for users to recognize the presence of memo data at a glance.

CAUTION

- Use fingertips only for input control. Using a pen or other pointed objects may damage the operation panel.

NOTE

- Display may vary depending on the operation speed or the writing pressure. Letters that are too small may not be displayed clearly.

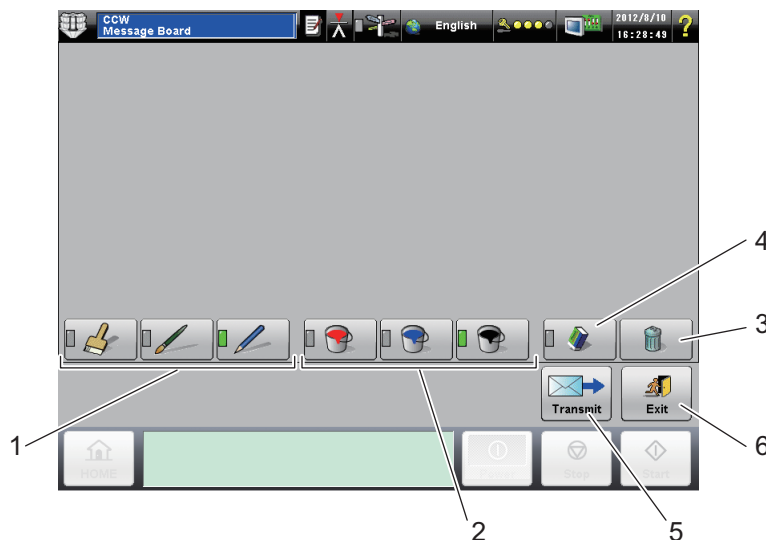


Fig. 6-2

Table 6-2

No.	Name	Function
1	[Line Thickness] key	Selects the line thickness (Thick, Medium, Thin).
2	[Line Color] key	Selects the line color (Red, blue or black).
3	[Eraser] key	Erases the area traced with this key.
4	[Delete All] key	Deletes all memo data being displayed.
5	[Transmit] key	Transmits the message board by e-mail.
6	[Exit] key	Returns to the previous screen.

<Usage>

1. Press the [Message Board] key.
 ► The Message Board screen appears.



Fig. 6-3

2. Select the line thickness and line color with each selection key.
3. Enter letters or drawings with your fingertip.
 ► The letters and drawings as entered with your fingertip are displayed.
 ► The [Message Board] key blinks.

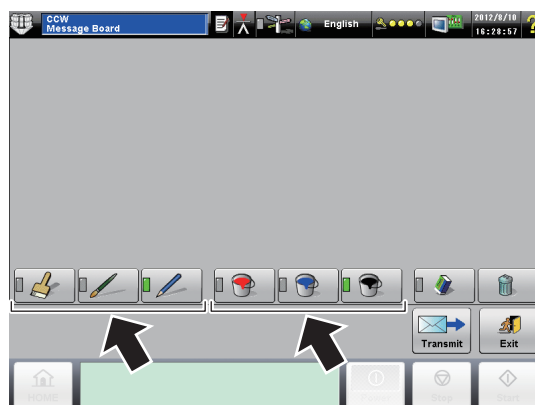


Fig. 6-4

<To erase a part of message>

4. Press the [Eraser] key.
5. Trace the part to be erased with your fingertip.
 ► The traced part is erased.

NOTE

- Even if the entire message is erased with the [Eraser] key, the entire memo data is not deleted and the [Message Board] key keeps blinking. If the [Delete All] key is used, the entire memo data is deleted and the [Message Board] key blinking is canceled (See the following).

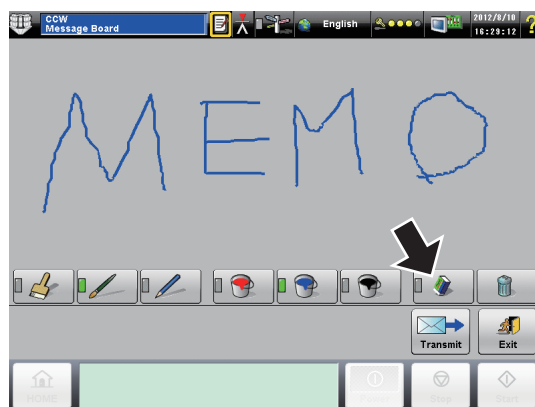


Fig. 6-5

<To delete all memo data>

6. Press the [Delete All] key.

► The confirmation message screen appears.

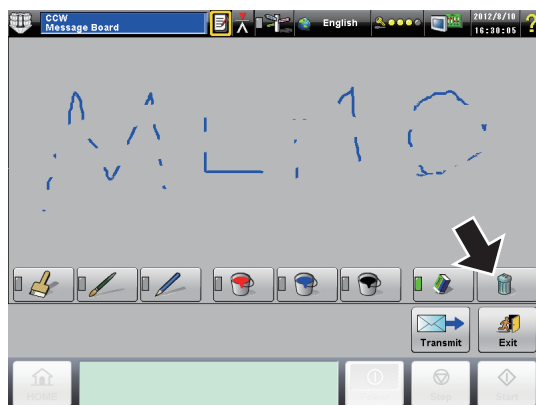


Fig. 6-6

7. When not deleting the message board data, press the [No] key.

► Deleting of the entire message board is canceled.
When deleting the message board data, press the [Yes] key.

► All memo data is deleted.

► The [Message Board] key stops blinking.

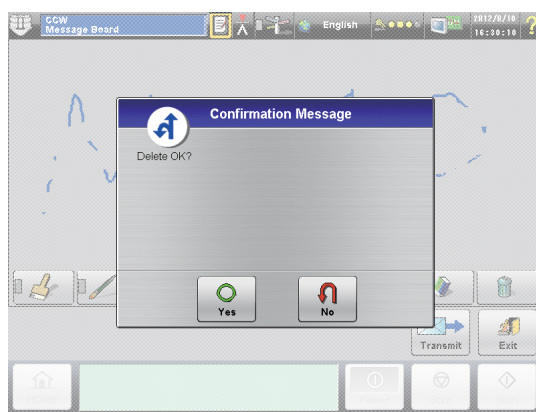


Fig. 6-7

8. To close the Message Board screen, press the [Exit] key.

► The screen previously displayed appears.

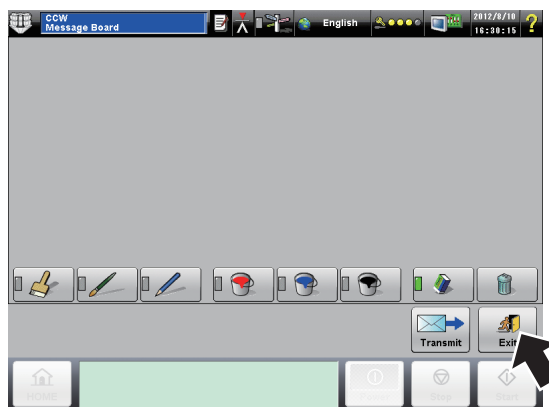



Fig. 6-8

<To transmit memo data by e-mail>


The message board can be sent as image data attached to e-mail.

The destination of the e-mail can be set in [E-mail Setting] in the Destination ID screen of the Control Panel screen (Setting operations are performed by Maintenance level personnel, and therefore are not covered in this manual. Refer to the service manual).

1. In the Message Board screen, press the [Transmit] key.
▶ The confirmation message screen appears.

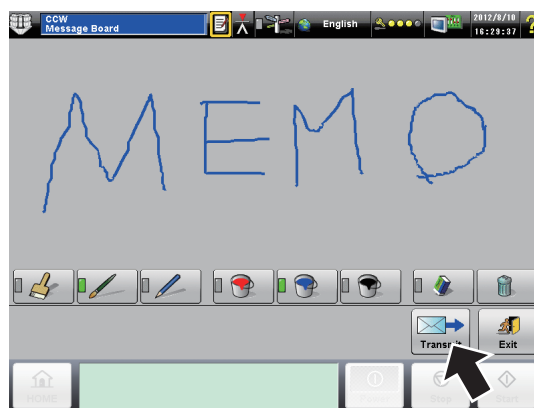**Fig. 6-9**

2. When not sending the message board data, press the [No] key.
When sending the message board data, press the [Yes] key.
▶ The memo data is transmitted.

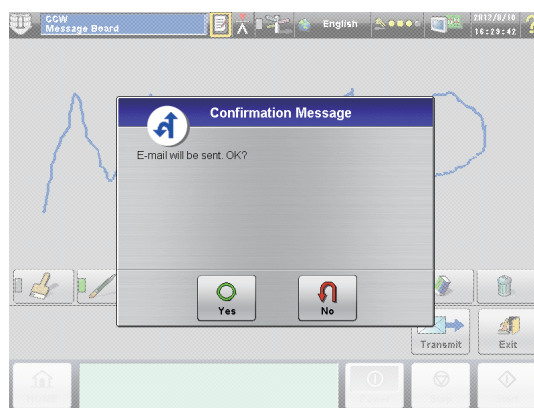**Fig. 6-10**

6.3.2 Start-Up Assistant

The Start-Up Assistant screen is used to guide operations up to production start.

NOTE

- The start-up assistant function is not available while screens other than the [Main Menu] are displayed. Return to the [Main Menu] to start operations.

- In the Main Menu, press the [Start-up Assistant] key.

► The Start-Up Assistant screen appears.



Fig. 6-11

- Until production starts, appropriate messages are displayed as required and the corresponding keys to be operated blink. Follow the guidance for operations displayed on the screen.

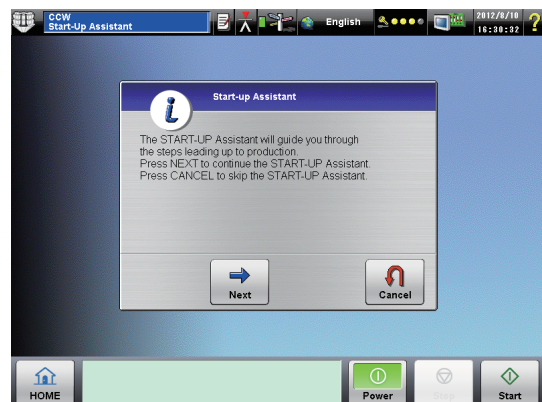


Fig. 6-12

NOTE

- Refer to "4.4.5 Start-up Assistant Function" for start-up assistant operations.

6.3.3 Language Selection

Selects a language to be used on the operation panel.

1. Press the [Language Selection] drop-down key.

- ▶ The Language Selection drop-down list is displayed.



Fig. 6-13

2. Select the language.

- ▶ The selected language lights up.
- ▶ The operation language is switched.



Fig. 6-14

6.3.4 Operation Level Selection

In the Main Menu, press the [Operation Level Selection] drop-down key to display the menu to select the operation level.

There are four operation levels: Operator level, Site Engineer level, Installation level, and Maintenance level. Operable items differ depending on the operation level.

In this section, the levels except for the Maintenance level are described in "Table 6-3".

Table 6-3

Operation Level Name	Authorized User for Operation	Operation Details	Password	
Operator level	Operators	Basic operations for daily production line work.	Not required	Lower level ↑
Site Engineer level	System administrators	In addition to the Operator level operations, registration for weighing and adjustment operation.	Required	
Installation level	Maintenance engineers	In addition to the Site Engineer level operations, adjustment and other operations required for installation of equipment.	Required	Higher level ↓

The operation panel is set to the Operator level as default when power is turned on.

To switch the Operator level to a higher level, a password for the higher level is required.

Passwords are registered as the factory setting shown in the table below. To change the passwords, refer to "6.3.5.2 Password Set/LangSlct Set Tab Screen" in the Control Panel screen.

When switching from higher operation levels to a lower level, no password is required.

Table 6-4

Operation Level	Password
Site Engineer level	1
Installation level	2



CAUTION

- **Passwords for the Site Engineer and higher operation levels are set in order to limit operations to authorized users for each operation. Passwords need to be managed to avoid operation by unauthorized users.**

Refer to the following sections for changing the operation level.

6.3.4.1 Switching to Operator level

No password is required for the Operator level. For switching to the Operator level, follow the procedures below.

1. In the Main Menu, press the [Operation Level Selection] drop-down key.

► The Operation Level Selection drop-down list appears.



Fig. 6-15

2. Select "Operator".

► Switching to the Operator level is completed.



Fig. 6-16

NOTE

- The operation level can be switched to the Operator level even while a screen for higher levels is displayed.
If the operation level is switched to the Operator level while a screen other than the Main Menu for higher levels is displayed, the Main Menu for the Operator level appears.

6.3.4.2 Switching to Site Engineer level

To switch the Operator level to the Site Engineer level, the password for the Site Engineer level is required.

For switching to the Site Engineer level, follow the procedures below.

1. In the Main Menu, press the [Operation Level Selection] drop-down key.
 - ▶ The Operation Level Selection drop-down list appears.



Fig. 6-17

2. Select "Site Engineer".
 - ▶ The Password Input Keyboard screen appears.
3. Enter the password for the Site Engineer level.
 - ▶ The Main Menu for the Site Engineer level appears.



Fig. 6-18

6.3.4.3 Switching to Installation level

To switch the Operator level or the Site Engineer level to the Installation level, the password for the Installation level is required.

For switching to the Installation level, follow the procedures below.

1. In the Main Menu, press the [Operation Level Selection] drop-down key.

► The Operation Level Selection drop-down list appears.



Fig. 6-19

2. Select "Installation".

► The Password Input Keyboard screen appears.

3. Enter the password for the Installation level.

► The Main Menu for the Installation level appears.



Fig. 6-20

6.3.5 Control Panel Screen

The Control Panel screen is used to set up the [Screen Control], [Password Set/LangSlct Set] and [Destination ID].

NOTE

- All functions displayed in the Control Panel screen are available to "Installation" or higher level personnel.

1. Press the [Control Panel] key.

► The Control Panel screen appears.



Fig. 6-21

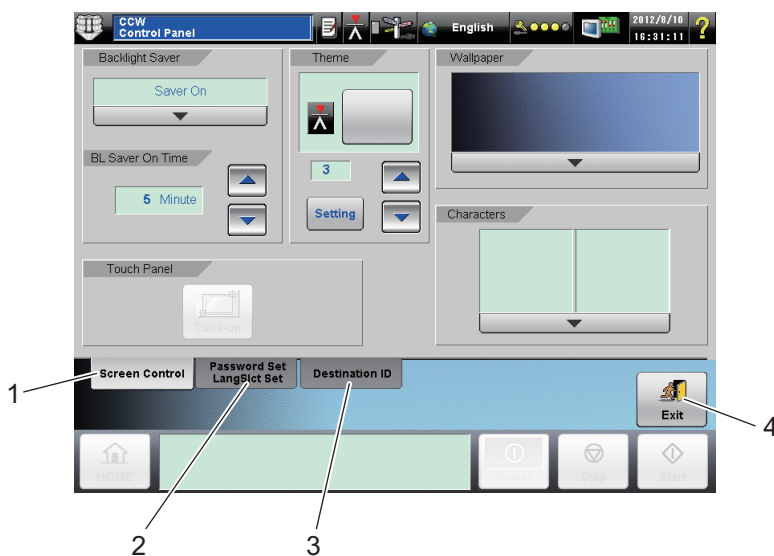


Fig. 6-22


Table 6-5

No.	Name	Function
1	[Screen Control] tab	Changes the screen control settings for the operation panel (Refer to "6.3.5.1 Screen Control Tab Screen").
2	[Password Set/LangSlct Set] tab	Changes the password for the operation level. Selects the language to be displayed in the Language Selection drop-down list (Refer to "6.3.5.2 Password Set/LangSlct Set Tab Screen").
3	[Destination ID] tab	Sets the destination ID and browser settings (Refer to "6.3.5.3 Destination ID Tab Screen").
4	[Exit] key	Closes the Control Panel screen and returns to the previous screen.

6.3.5.1 Screen Control Tab Screen

The Screen Control tab screen is used to set and change the screen control settings for the operation panel.

1. In the Control Panel screen, select the [Screen Control] tab.
► The Screen Control tab screen appears.
2. Set up the items listed in the table below as required.
3. To finish the setting operations, select another setting screen or press the [Exit] key.

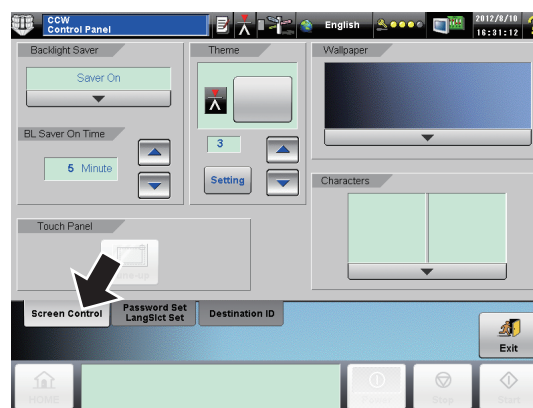**Fig. 6-23**

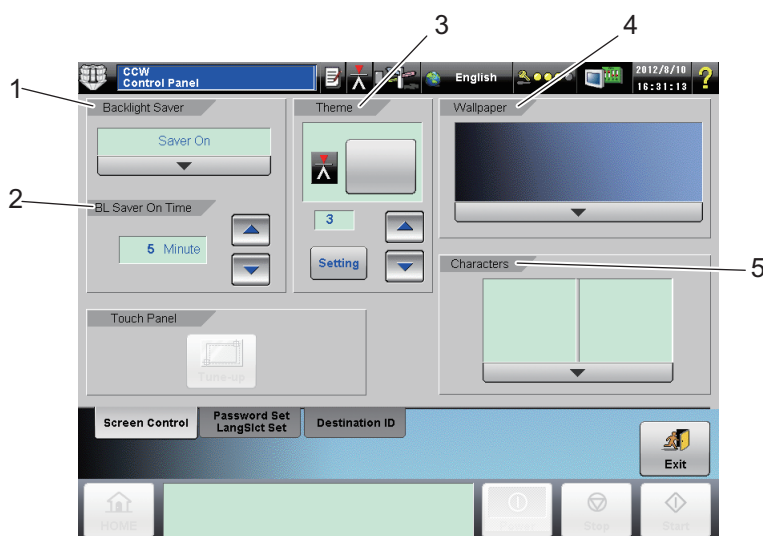


Fig. 6-24

Table 6-6

No.	Name	Function
1	Backlight Saver display	Selects the backlight saver mode from [Saver On], [Half Brightness] and [Full Brightness]. [Saver On]:When the time set for the [BL Saver On Time] has passed after the last screen operation, the screen brightness changes to half brightness. [Full Brightness]:Always displayed in full brightness. [Half Brightness]:Always displayed in half brightness.
2	BL Saver On Time display	Sets the time from the last screen operation to the backlight brightness changing to half brightness when the backlight saver mode is set to [Saver On]. Can be set within the range of 0-255 minutes in increments of 1 minute.
3	Theme display	Select theme from "1:R model", "2:European model", and "3:RV model". The machine is rebooted automatically, with the selected theme when theme is selected and [Setting] key is pushed.
4	Wallpaper display	Selects the screen wallpaper.
5	Characters display	Selects the characters to be displayed in the status display area (lower part of the screen). The device status can be identified by the expression on the character face.

NOTE

- Backlight life may become shorter when the ambient temperature is 5°C or lower.
It is recommended to set to the [Saver On] mode in a low-temperature environment.

6.3.5.2 Password Set/LangSlct Set Tab Screen

The Password Set/LangSlct Set tab screen is used to set and change passwords for each operation level.

NOTE

- The language selection function in the same screen cannot be used by "Installation" or lower level personnel.

- In the Control Panel screen, press the [Password Set/LangSlct Set] tab.
 ► The Password Set/LangSlct Set tab screen appears.



Fig. 6-25

- Select the operation level.
 ► The Keyboard screen appears.
- Enter the password and press the [Return] key.
- To finish the setting operations, select another setting screen or press the [Exit] key.

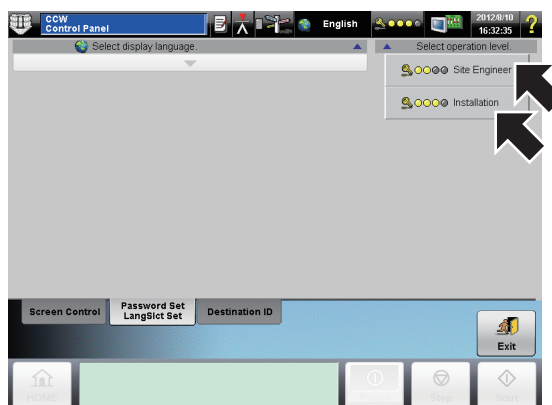


Fig. 6-26

6.3.5.3 Destination ID Tab Screen

The Destination ID tab screen is used to set and change the output destination of data such as preset contents and total contents.

The website address to be displayed on the Information Display screen as well as E-mail settings can be set.

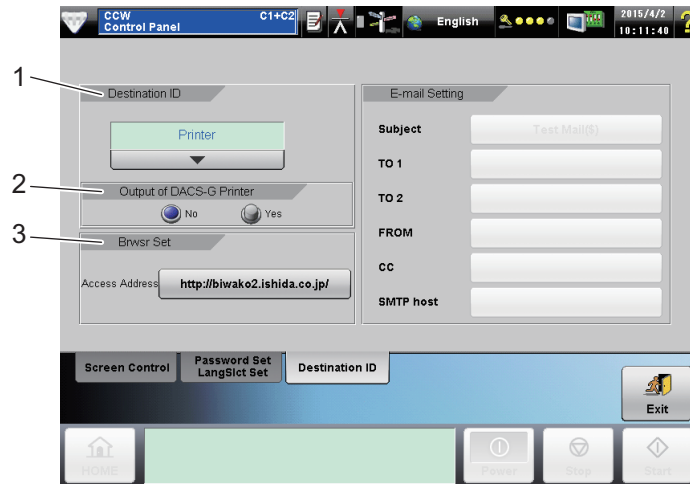


Fig. 6-27

Table 6-7


No.	Name	Function
1	[Destination ID] drop-down key	Selects "Printer", "CF/USB" or "E-mail" as the data output destination or selects not to output data. When the [Output] key is pressed in other screens, the data is output according to the selected output method in this menu.
2	[Output of DACS-G Printer] radio button	Not used. *Set the radio button to "NO".
3	[Access Address] key	Using the Keyboard screen, enter the address of the website to be displayed when the [Information Display] key is pressed.

NOTE


- E-mail settings are performed by "Maintenance" or higher level personnel.

<Output destination setting procedure>


1. In the Control Panel screen, select the [Destination ID] tab.
 ► The Destination ID tab screen appears.

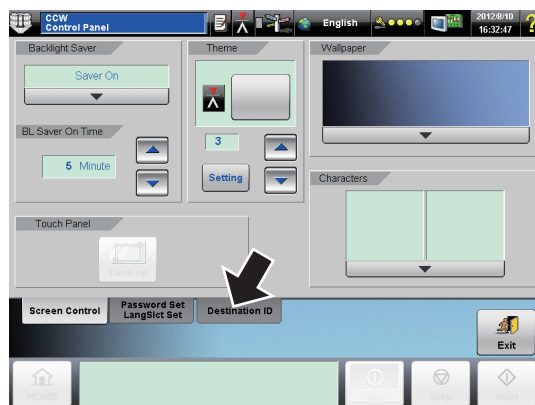**Fig. 6-28**

2. Press the [Destination ID] drop-down key and select "Printer", "CF/USB" or "E-mail" as the data output destination.
 When not outputting the data, press [Off].
3. To finish the setting operations, press the [Exit] key.

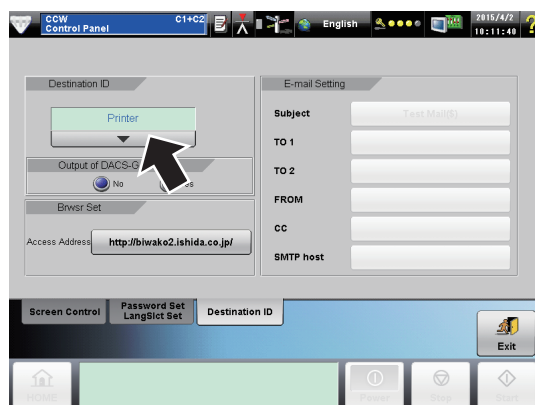**Fig. 6-29****<Access address setting procedure>**

1. In the Destination ID screen, press the [Access Address] key.
 ► The Keyboard screen appears.
2. Enter the Internet address.

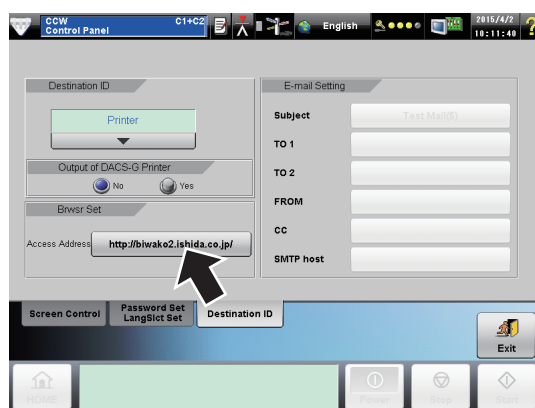**Fig. 6-30**

6.3.5.4 USB Handling

This device is equipped with a USB slot for saving preset data and outputting data such as logs.

1. When saving the output data to a USB, or when reading preset data from the USB, writing data to the USB or copying data between the USB and the main unit, insert the USB into the USB slot.

▶ If the destination ID is set to CF/USB in the Control Panel screen, the output data is saved to the USB.

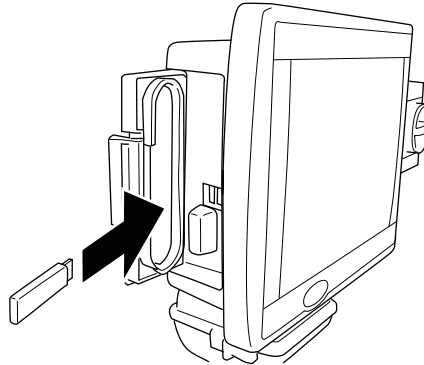


Fig. 6-31

CAUTION

- Do not eject the USB while the read/write operation is being executed (the USB is being accessed). If ejected, the data in the USB may be lost or damaged.

NOTE

- Use the specified USB. Other USB cannot be used.

6.3.6 Date & Time Setting Screen

The Date & Time Setting screen is used to set and change the date and time settings for the operation panel.

NOTE

- The date and time setting is performed by "Installation" or higher level personnel.

- Press the [Date & Time Setting] key.

► The Date & Time Setting screen appears.



Fig. 6-32

- Enter the year, month and day using the [Up/Down] keys.

TIP

- It is also possible to select the date directly from the calendar.

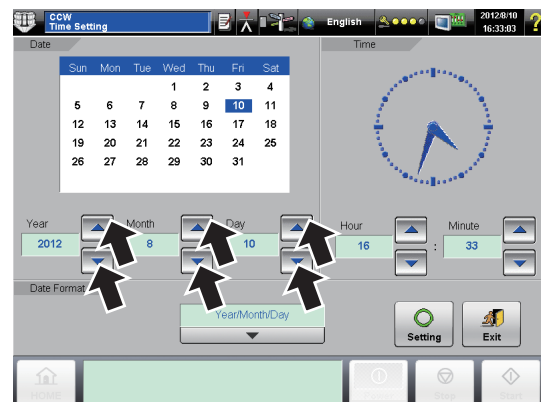


Fig. 6-33

- Enter the time using the [Up/Down] keys or the Numeric Keypad screen.

NOTE

- Time cannot be entered directly from the clock image.

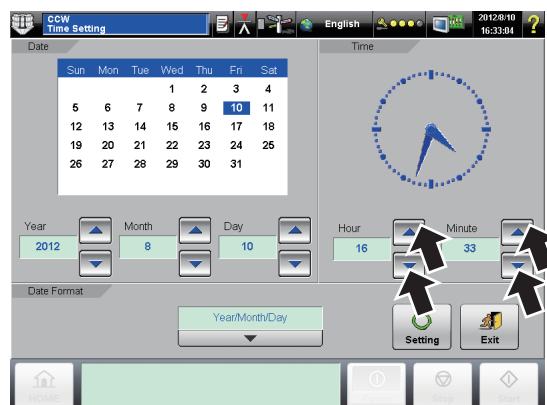



Fig. 6-34

4. Press the [Date Format] drop-down key to select the order of year, month and day.
5. Press the [Setting] key.
▶ The clock starts with the set date and time.

NOTE

- Second is set to 0 when time is set.

6. To close the Date & Time Setting screen, press the [Exit] key.

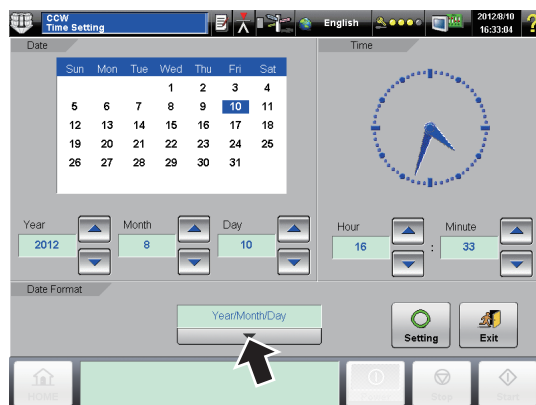**Fig. 6-35**

6.3.7 Help Function

This function gives brief explanation about keys on the screen.

1. Press the [Help] key.

► The [Help] key blinks.



Fig. 6-36

2. Press the key you want to know about (In the example, the [Full Open] key is pressed).



Fig. 6-37

- The function description for the pressed key is displayed.
 3. The help display disappears by touching any point on the screen.
- The [Help] key stops blinking and returns to normal status.



Fig. 6-38

6.4 Main Menu

The Main Menu appears first when the main power switch is turned ON.

NOTE

- The figure below shows the screen with the operation level switched to the Installation level after the main power switch is turned ON. The system normally starts up on the Operator level setting.



Fig. 6-39

Table 6-8

No.	Name	Function
1	[Zero Adjst] key	Displays the Zero Adjustment screen (Refer to "6.5 Zero Adjustment screen").
2	[Drain] key	Displays the Drain screen (Refer to "6.7 Drain screen").
3	[Full Open] key	Displays the Full Open Lock screen (Refer to "6.8 Full Open Lock Screen").
4	[Select Preset] key	Displays the Select Preset screen (Refer to "6.9 Select Preset screen"). When a photo is registered for the preset, the photo is displayed on the key (The key indicated here is an example).
5	[Preset] key	Displays the Preset screen (Refer to "6.10 Preset screen").
6	[Change Preset Item] button	Changes preset settings easily (Refer to "6.10.7 Preset Change Operation").
7	[Select Total] pop-up key	Displays the Select Total pop-up menu (Refer to "6.11 Select Total Pop-up Menu").

Table 6-8

No.	Name	Function
8	[Machine Set] pop-up key	Displays the Machine Set pop-up menu (Refer to "6.14 Machine Set Pop-up Menu").
9	[Stop] key*	Stops production.
10	[Start] key*	Starts production.
11	[Power] key*	Turns on/off the control power.

* The [Stop], [Start] and [Power] keys are displayed in any screen, but are not available when they are greyed out.

6.5 Zero Adjustment screen

The zero adjustment is the function to set the weight with no products on the weigh hopper or dispersion table as 0 g. For accurate weighing, be sure to perform zero adjustment before starting production.

To display the Zero Adjustment screen, press the [Zero Adjust] key on the Main Menu.

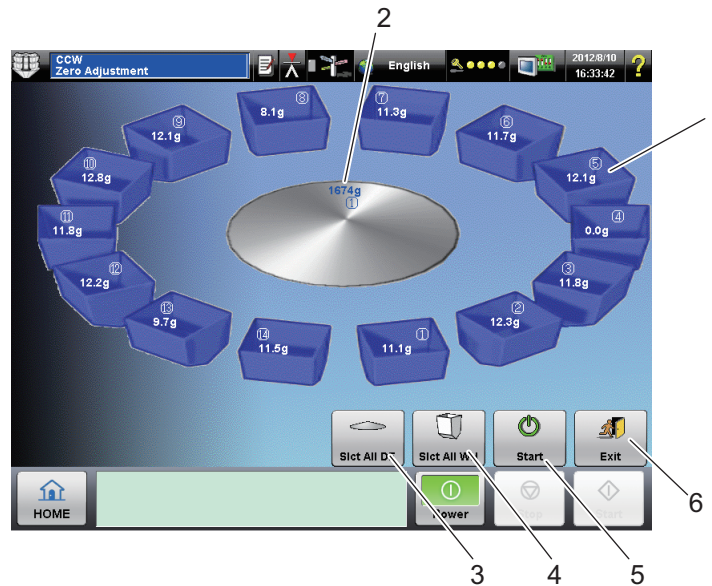


Fig. 6-40

Table 6-9

No.	Name	Function
1	Each [WH] key	Selects the hopper to be adjusted.
2	Each [DF] key	Selects the dispersion table.
3	[Slt All DF] key	Selects or deselects the dispersion table.
4	[Slt All WH] key	Selects or deselects all the weigh hoppers.
5	[Start] key	Starts zero adjustment.
6	[Exit] key	Returns to the Main Menu.

Refer to "4.4.7 Zero Adjustment" for zero adjustment procedures.

6.6 Production screen

To display the Production screen, press the [Start] key in any screen.

CAUTION

- **When the [Start] key is pressed, the feeders and hoppers start to move. Perform a safety check around the device before pressing the key.**
-

NOTE

- The [Start] key cannot be pressed when the control power is off. Press the [Power] key to turn on the control power.
 - The [Start] key cannot be pressed while presetting. After setting is completed, press the [Exit] key to accept the preset.
-

CAUTION

- **DO NOT, UNDER ANY CIRCUMSTANCES, CLOSE THE HOPPERS WITH HANDS OR TOOLS. Doing so may damage the drive unit.**
 - **When the main power switch is turned OFF while the hoppers are open, or when the hoppers remain open due to an electrical power failure, follow the procedures described in "4.9 Handling Drive Unit" for the corrective action.**
-

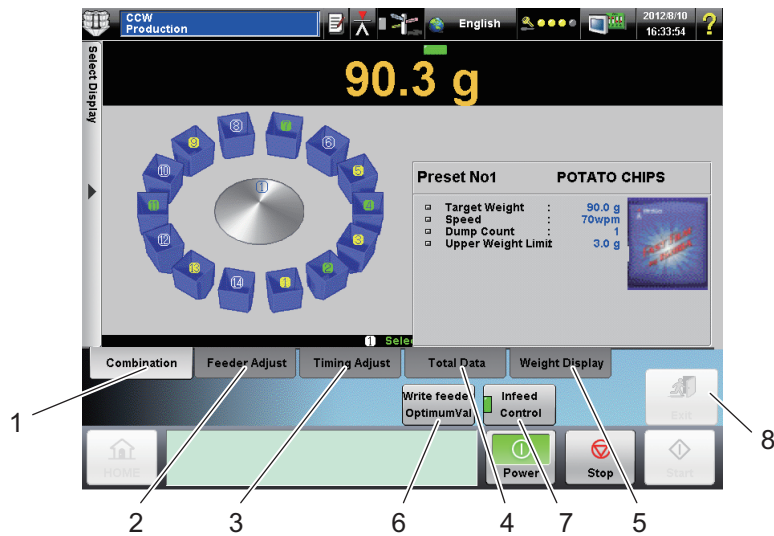


Fig. 6-41

Table 6-10

No.	Name	Function
1	[Combination] tab	Displays the Combination screen.
2	[Feeder Adjust] tab	Displays the Feeder Adjust screen.
3	[Timing Adjust] tab	Displays the Timing Adjust screen.
4	[Total Data] tab	Displays the Total Data screen.
5	[Weight Display] tab	Displays the Weight Display screen.
6	[Write feeder OptimumVal] key	Registers the feeder value currently set. The registered feeder value can be called using [Read OptimumVal] in the preset screen.
7	[Infeed Control] key	Selects whether to stop or to automatically control product infeed to the device. Each time the key is pressed, the lamp turns on and off in turn. When the lamp is on, automatic product infeed to the device is performed. When the lamp is off, automatic product infeed to the device is stopped.
8	[Exit] key	Returns to the Main Menu. Cannot be used while the weigher is in operation.

NOTE

- [Write feeder OptimumVal] is available to "Site Engineer" or higher level personnel.

6.6.1 Combination Tab Screen

To display the Combination tab screen, press the [Combination] tab on the Production screen.

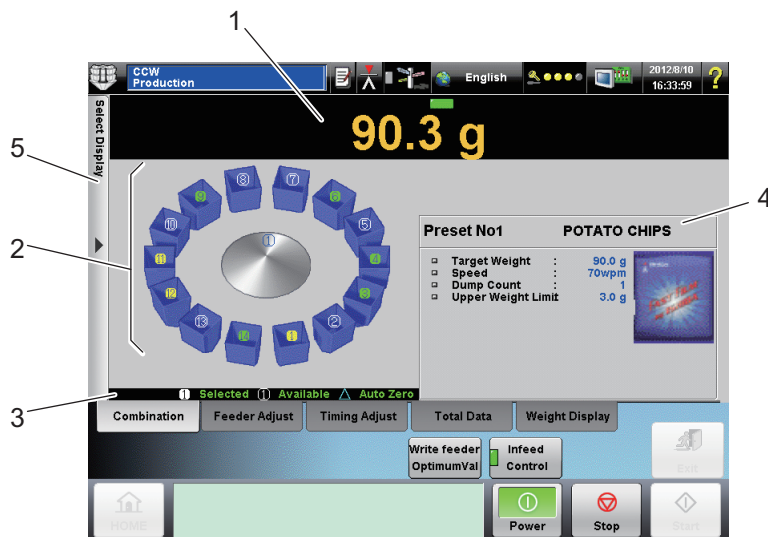


Fig. 6-42

Table 6-11

No.	Name	Function
1	Combination weight display	The combined weight value is displayed on each channel. The lamp indication varies depending on the results. Green lamp: Proper weight Yellow lamp: Overweight Red lamp: Underweight
2	Head condition display	Displays the combination and weighing status. ①: Head which was weighed and is stable. ①: Head which was weighed, was selected for combination and discharged products. The color of the circle indicates the head stability, and there are three levels: green (most stable), white (more stable) and yellow (stable). Empty head. Blank: Unstable head. △: Head under the auto zero adjustment. ✗: Head with error of overload or jam. ✖: Head that is set to be deactivated.
3	Head display guide	Displays the scrolling messages for the descriptions of head symbols.
4	Preset selection display	Displays the selected preset. If the square on the left of each item ([Change Preset Item] button) is pressed, the displayed setting values can be temporarily changed (Refer to "6.10.7 Preset Change Operation").

Table 6-11

No.	Name	Function
5	[Select Display] pop-up key	Selects the display method from either the combination or expansion display. Standard and expansion display icons are displayed by pressing this key. Pressing either icon will switch the display to the selected method.

6.6.1.1 Select Display Pop-up Menu

On the Select Display pop-up menu, either the "Combination Display" or "Expansion Display" mode can be selected.

Press the [Select Display] pop-up key on the Combination screen, and select the desired display mode.

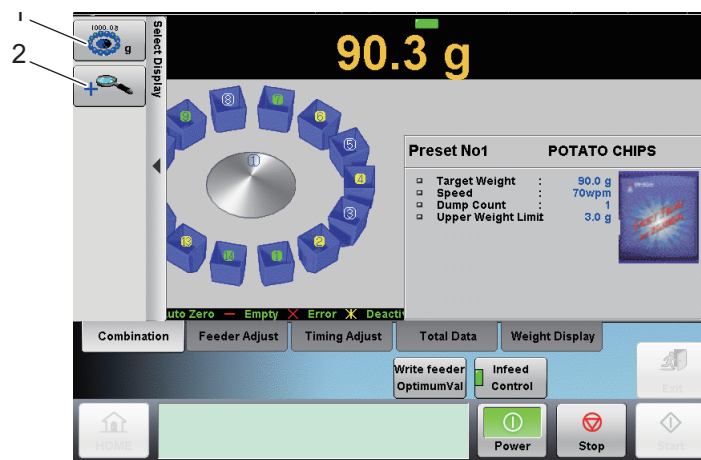


Fig. 6-43

Table 6-12

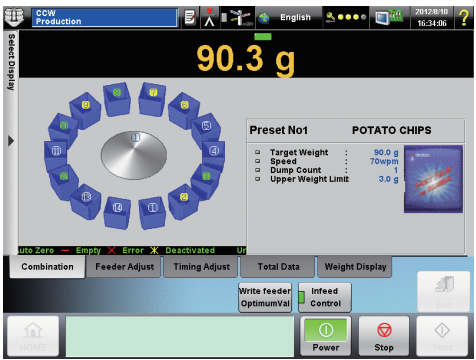
No.	Name	Function
1	[Combination Display] key	Selects the Combination Display screen. 

Fig. 6-44

Table 6-12

No.	Name	Function
2	[Expansion Display] key	Selects the Expansion Display screen for the combination weight.  Fig. 6-45

6.6.2 Feeder Adjust Tab Screen

To display the Feeder Adjust tab screen, press the [Feeder Adjust] tab on the Production screen.

Refer to "6.12 Feeder Adjustment Screen" for feeder adjustment.

Feeder values changed during production are reflected in the preset.

6.6.3 Timing Adjustment Tab Screen

To display the Timing Adjust tab screen, press the [Timing Adjust] tab on the Production screen.

Refer to "6.13 Timing Adjustment Screen" for timing adjustment.

Timing values changed during production are reflected in the preset.

6.6.4 Total Data Tab Screen

To display the Total Data tab screen, press the [Total Data] tab on the Production screen.



Fig. 6-46

Table 6-13

No.	Name	Function
1	[Total Log] drop-down key	Selects the total log to be displayed. Displayed when a total log exists.
2	[Output] key	Outputs total data to a printer or as a file.
3	[Select Total] pop-up key	Displays the Select Total pop-up menu.
4	Total data	Total data is displayed in this area. * Displayed total data depends on the selection.

NOTE

- Total data contents are the same as in the Select Total pop-up menu in the Main Menu. Refer to "6.11 Select Total Pop-up Menu" for details on total data.
- Total data cannot be cleared during production.

6.6.5 Weight Display Tab Screen

To display the Weight Display tab screen, press the [Weight Display] tab on the Production screen.



Fig. 6-47

Table 6-14

No.	Name	Function
1	Head	Displays the weight of each head.
2	Dispersion table	Displays the weight of each dispersion table.

NOTE

- Meaning of each head status display is identical to those displayed in the [Combination] tab.

6.7 Drain screen

To display the Drain screen, press the [Drain] key on the Main Menu.



Fig. 6-48

Table 6-15

No.	Name	Function
1	[Weight Display] tab	Displays the Weight Display tab screen.
2	[Feeder Adjust] tab	Displays the Feeder Adjust tab screen (Refer to "6.12 Feeder Adjustment Screen").
3	[Timing Adjust] tab	Displays the Timing Adjust tab screen (Refer to "6.13 Timing Adjustment Screen").
4	[Auto Zero] lamp key	Selects whether or not to perform auto zero adjustment. Each time the key is pressed, the lamp turns on and off in turn. ON:Auto zero adjustment is performed. OFF:Auto zero adjustment is not performed.
5	[Infeed Control] lamp key	Selects whether to stop or to automatically control product infeed to the device. Each time the key is pressed, the lamp turns on and off in turn. ON:Automatic product infeed to the device is performed. OFF:Automatic product infeed to the device is stopped.
6	[Drain STOP] key	Stops drain temporarily.
7	[Drain START] key	Starts drain.
8	[Exit] key	Stops drain and displays the Main Menu.

NOTE

- Refer to "4.4.10 Discharging the Products" for basic drain procedures.
 - Refer to "6.12 Feeder Adjustment Screen" and "6.13 Timing Adjustment Screen" for feeder adjustment and timing adjustment.
 - Feeder values and timing values changed during drain are not reflected in the preset.
-

6.8 Full Open Lock Screen

To display the Full Open Lock screen, press the [Full Open] key on the Main Menu.

NOTE

- Do not use the [Power] key during full open lock. Doing so may damage the device.



CAUTION

- DO NOT, UNDER ANY CIRCUMSTANCES, CLOSE THE HOPPERS WITH HANDS OR TOOLS.** Doing so may damage the drive unit.
- When the main power switch is turned OFF while the hoppers are open, or when the hoppers remain open due to an electrical power failure, follow the procedures described in "4.9 Handling Drive Unit" for the corrective action.**
- Take care enough not to get your hand caught in the shutting hopper.** All hoppers may close automatically in 60 minutes after the full open lock operation (It depends on the hopper drive method and so on, whether all hoppers close automatically or not).

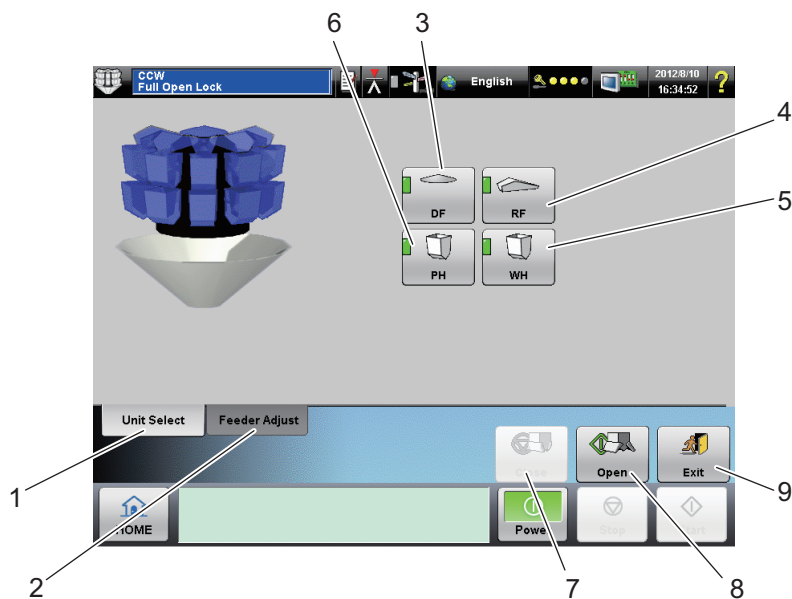


Fig. 6-49

Table 6-16

No.	Name	Function
1	[Unit Select] tab	Displays the Unit Select Tab screen.
2	[Feeder Adjust] tab	Displays the Feeder Adjust tab screen (Refer to "6.12 Feeder Adjustment Screen").
3	[DF] lamp key	Selects whether or not to perform dispersion feeder operation.

Table 6-16

No.	Name	Function
4	[RF] lamp key	Selects whether or not to perform radial feeder operation.
5	[WH] lamp key	Selects whether or not to fully open the weigh hoppers.
6	[PH] lamp key	Selects whether or not to fully open the pool hoppers.
7	[Close] key	Fully closes the hoppers.
8	[Open] key	Fully opens the hoppers.
9	[Exit] key	Closes the Full Open Lock screen.

NOTE

- When the ring shutter, diverting timing hopper or timing hopper is attached as an option, the [RS], [DTH] or [TH] key is added respectively.

6.8.1 Full Open Lock Operation

<Function>

The full open lock is the function to retain the pool hoppers and weigh hoppers open. This function is used to check the operation of each unit.

<Operation procedure>

1. In the Full Open Lock screen, press the lamp key of the hopper to be fully opened or the lamp key of the feeder to be operated.
 - The pressed lamp key of the hopper or feeder lights up in green.

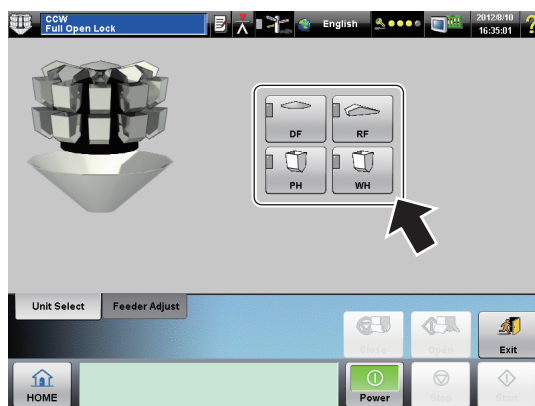


Fig. 6-50

2. Press the [Open] key.
 - The specified hoppers are held open. Or, the specified feeder starts to operate.

NOTE

- Feeder amplitude conforms to the settings in the feeder adjustment (Refer to "6.12 Feeder Adjustment Screen").



Fig. 6-51

3. Press the [Close] key.
 - The hoppers close. Or, the feeder operation stops.

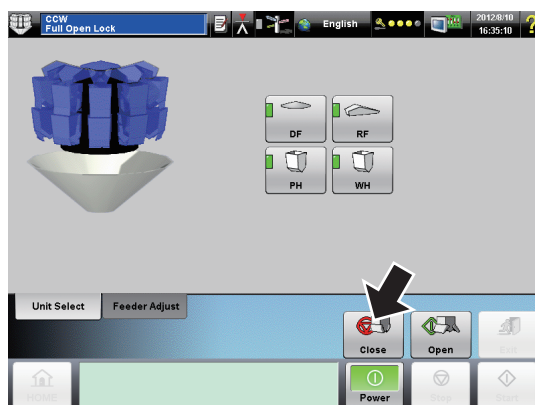


Fig. 6-52

4. Press the [Exit] key.

► The Main Menu appears.

NOTE

- The menu cannot be closed unless all hoppers are closed.

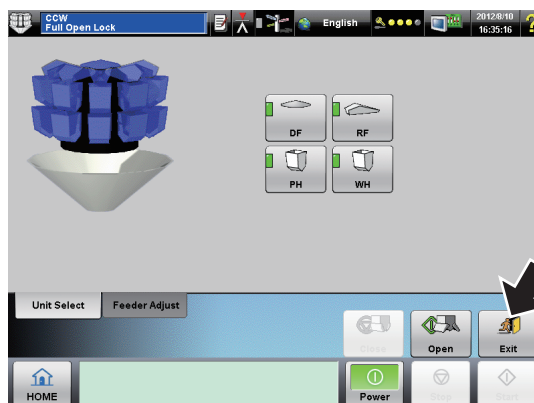


Fig. 6-53

6.8.2 Feeder Adjust Tab Screen

To display the Feeder Adjust tab screen, press the [Feeder Adjust] tab on the Full Open Lock screen.

NOTE

- Refer to "6.12 Feeder Adjustment Screen" for feeder adjustment.
- Feeder values changed during full open lock are not reflected in the preset.

6.9 Select Preset screen

The Select Preset screen is used to display and select the preset data registered in the memory.

6.9.1 Photo Display

To display the Select Preset screen, press the [Select Preset] key (display area of photos or other images)



on the Main Menu.



Fig. 6-54

Table 6-17

No.	Name	Function
1	[Preset No.] display	Displays the selected preset number, product name and target weight.
2	[Select Preset] key	Calls the preset. The key displays the preset number, product name, target weight (or target count), upper weight limit (or upper count limit) and speed. It also displays a photo when it has photo data.
3	[Slct Dsply] key	Switches the display mode to the list display.
4	[Preset No.] key	Selects the preset number directly using the Numeric Keypad screen.
5	[Exit] key	Returns to the Main Menu.

6.9.2 List Display

The screen switches to the list display when the [Slct Dsply] key is pressed in the Select Preset screen.

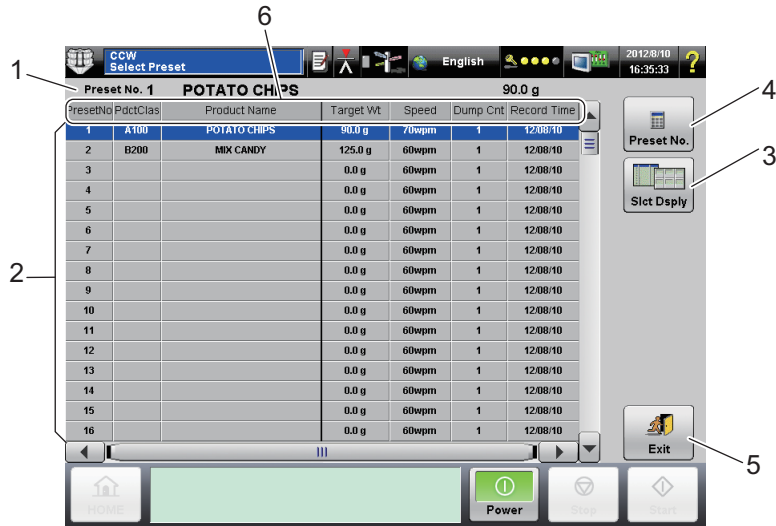


Fig. 6-55

Table 6-18

No.	Name	Function
1	[Preset No.] display	Displays the selected preset number, product name and target weight.
2	Preset selection area	Each row can be used as a key to call the preset. Displays the [PcdtClas], [PresetNo], [Product Name], [Target Wt] (or [Target Cnt]), [Speed], [Dump Cnt] and [Record Time].
3	[Slct Dsply] key	Switches the display mode to the photo display.
4	[Preset No.] key	Selects the preset number directly using the Numeric Keypad screen.
5	[Exit] key	Returns to the Main Menu.
6	Row header	Rearranges the preset data on the basis of the pressed row.

List items can be rearranged. If each row header (e.g. [Product Name]) is pressed, the items will be rearranged in ascending order on the basis of the pressed row.



Fig. 6-56

6.10 Preset screen

To display the Preset screen, press the [Preset] key on the Main Menu.

NOTE

- The preset function is available to "Site Engineer" or higher level personnel.

6.10.1 Preset Basic Function

This is the screen that appears first in the Preset screen. When switching the indices in this screen, you can move to each setting screen. In addition, in the Preset screen, you can change the preset number and output the preset contents to a printer or as a file.

Quick setting screen appears first in the Preset screen when no target weight is set (i.e. 0 g).



Fig. 6-57

Table 6-19

No.	Name	Function
1	[Finish Prdct Setting] index	Configures the settings for the product to be preset.
2	[Feeder Adjustment] index	Performs feeder adjustment.
3	[Timing Adjustment] index	Performs timing adjustment.
4	[Weight Setting] index	Configures the settings for weight.
5	[Simple Setting] key	Displays the Simple Setting screen.
6	[Exit] key	Returns to the Main Menu.

Table 6-19

No.	Name	Function
7	[Paste] key	Copies the preset parameters already registered. A set of parameters under the preset number specified as source are copied to the new preset which you are editing now.
8	[Change Preset No.] key	Selects the desired preset number. If the preset contents have been changed, the confirmation message "Do you wish to save current data with the current preset number?" appears.
9	[Preset No. Direct Select] key (Take over function equipped)	Selects the desired preset number directly using the Numeric Keypad screen. The preset setting parameters which you are editing are copied to the parameters of the selected preset number by checking "Take over preset" on the top of ten-key.
10	[Output] key	Outputs the preset information to a printer or as a file.
11	[Cancel] key	Cancels the preset changes. This key becomes available when the settings are changed.
12	[Load] key	Loads the preset parameters from master data. • Available in the Maintenance level only.
13	[Save] key	Saves the preset parameters to master data. • Available in the Maintenance level only.

NOTE

- When the Preset screen is closed using the [Exit] key, the entered preset contents are accepted and set. If the [Cancel] key is pressed before the [Exit] key is pressed, the preset contents that have been entered will be lost.
- If power supply is shut down within 1 second due to an electrical power failure after the settings are changed, the changes may not be stored.

6.10.2 Finish Prdct Setting Index Screen

To display the Finish Prdct Setting index screen, press the Finish Prdct Setting index on the Preset screen. When switching the tabs in this screen, you can move to each setting screen.

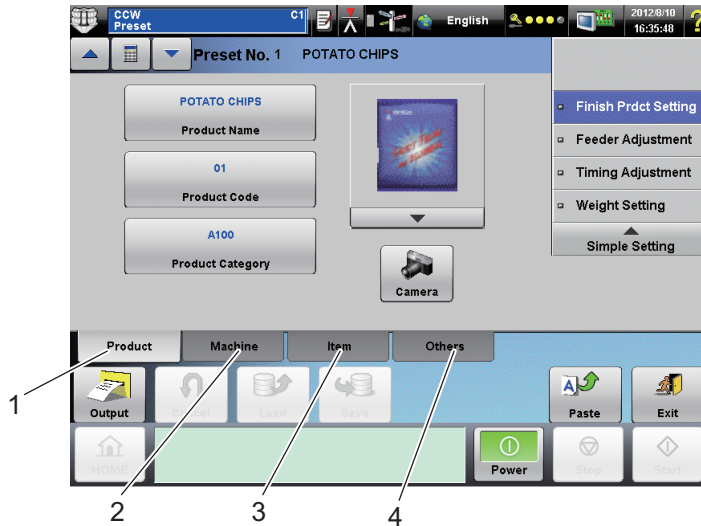


Fig. 6-58

Table 6-20

No.	Name	Function
1	[Product] tab	Configures the settings for the product to be preset (Refer to "6.10.2.1 Product Tab Screen").
2	[Machine] tab	Configures the settings for the weigher in accordance with the product to be preset (Refer to "6.10.2.2 Machine Tab Screen").
3	[Item] tab	Configures the advanced settings for the weighing environment (Refer to "6.10.2.3 Item Tab Screen").
4	[Others] tab	Configures other settings (Refer to "6.10.2.4 Others Tab Screen").

6.10.2.1 Product Tab Screen

The Product tab screen is the screen that appears first in the Preset screen.

While another Preset screen is displayed, press the Product tab screen in the Finish Prdct Setting index screen to display the Product screen.



Fig. 6-59

Table 6-21

No.	Name	Function
1	[Product Name] key	Sets the product name by inputting it from the Keyboard screen. The set product name is displayed on the key. Up to 24 characters can be specified.
2	[Product Code] key	Sets the product code by inputting it from the Keyboard screen. The set product code is displayed on the key. Up to 12 characters can be specified.
3	[Product Category] key	Sets the product category by inputting it from the Keyboard screen. The set product category is displayed on the key. Up to 4 characters can be specified.
4	[Photo Selection] drop-down key	Selects the product photo or illustration.
5	[Camera] key	Takes photos of the products.

TIP

- For the product category, desired alphanumeric characters can be entered. Utilize it for product management.

6.10.2.1.1 Product Photo Taking Procedures

1. Press the [Camera] key.

► The photograph confirmation message screen appears.



Fig. 6-60

2. Press the [Yes] key.

► The Photograph screen appears.
The image being taken by the camera is displayed on the left, and the image previously taken is displayed on the right.

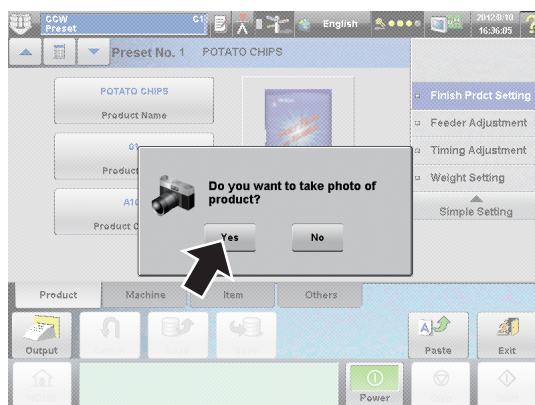


Fig. 6-61

3. When not taking photos, press the [Exit] key.
When taking a photo, point the product at the camera and press the [Photograph] key.
The [Photograph] key functions as the shutter.

► If the [Exit] key is pressed, the display returns to the previous screen without taking a photo.
When the [Photograph] key is pressed, the photo is taken and the photographed image is displayed on the right.

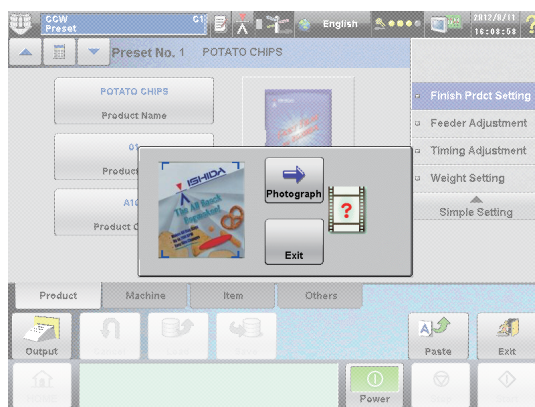


Fig. 6-62

4. To retake the photo, press the [Cancel] key. To save the photo, press the [Save] key.

► The photographed image is saved.

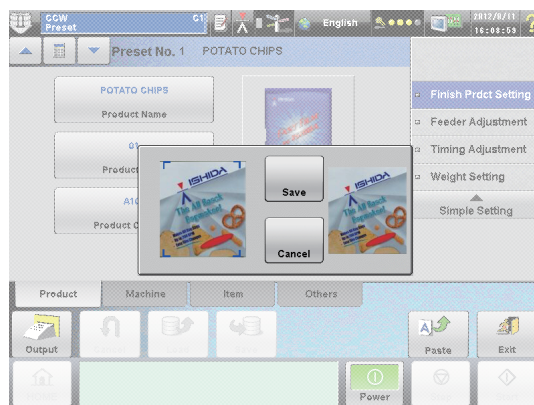


Fig. 6-63

5. Press the [Exit] key.

► Returns to the previous screen.

► The photographed image is registered to the photo list.

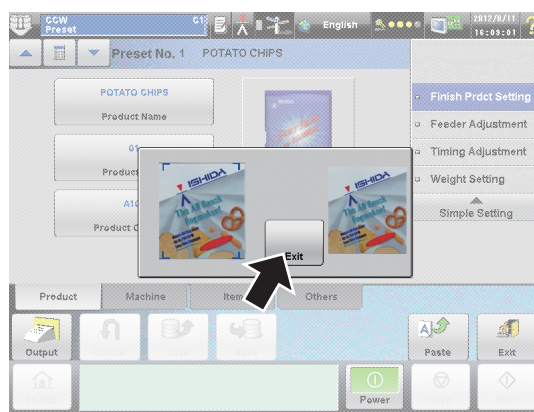


Fig. 6-64

NOTE

- When the camera is not connected, no image is displayed.
- Take a photo of a product with sufficient light. Photos taken in insufficient light may be inferior in image quality.
- Only 1 photo data can be registered per preset.
If a photo is taken for a preset number which already has a photo registered for it, the new photo will replace the previously registered photo.

6.10.2.2 Machine Tab Screen

To display the Machine tab screen, press the [Machine] tab on the Finish Prdct Setting index screen.

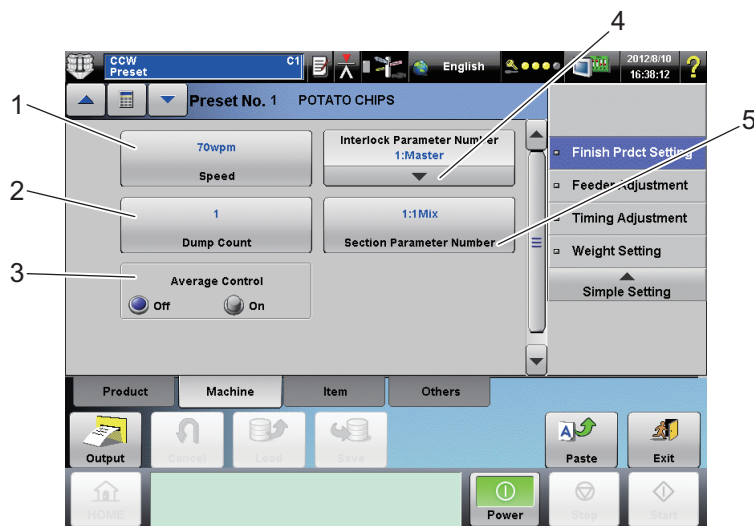


Fig. 6-65

Table 6-22

No.	Name	Function
1	[Speed] key	Sets the speed from the Numeric Keypad screen. - The set value is displayed on the key. - This sets the number of packs to be discharged from the device per minute. - The setting value for speed is determined by factors such as product characteristics, target weight and capacity of the packer.
2	[Dump Count] key	Sets the dump count from the Numeric Keypad screen. - The set value is displayed on the key. - This divides and discharges the product separately to prevent the product from jamming in the packer when the target weight is large or when a product will overflow if weighed all at once. The number of times for division is set here (Refer to "Table 6-23 ").
3	[Average Control] radio button	Selects whether or not to perform average control. - This controls the target weight at a regular interval in order to maintain the discharged weight mean value to be close to the target weight. - If [Off] is selected, products of a weight lower than the target weight are controlled so as not to be dumped.
4	[Interlock Parameter Number] drop-down key	Selects the packer interlock method (Refer to "Table 6-24 ").

Table 6-22

No.	Name	Function
5	[Section Parameter Number] key	Selects the section parameter number from the list. This selects the section division pattern when dividing weigh heads into sections and weighing different products in each section. There are eight different division patterns (1-8). The section division patterns are set at the Installation level in advance.

Table 6-23

Range	Optimum Dump Count (Fractions rounded up)
400/800	Set target ÷ 2277.7
800/1600	Set target ÷ 5461.2
1000/2000	Set target ÷ 7192.7
2000/4000	Set target ÷ 15384.5

Table 6-24

Parameter No.	Mode	Description
1	[Master]	(Refer to "2.5 Term Description")
2	[Slave]	
3	[Stroke On Demand]	
4	[Bag On Demand]	

6.10.2.3 Item Tab Screen

To display the Item tab screen, press the [Item] tab on the Finish Prdct Setting index screen.

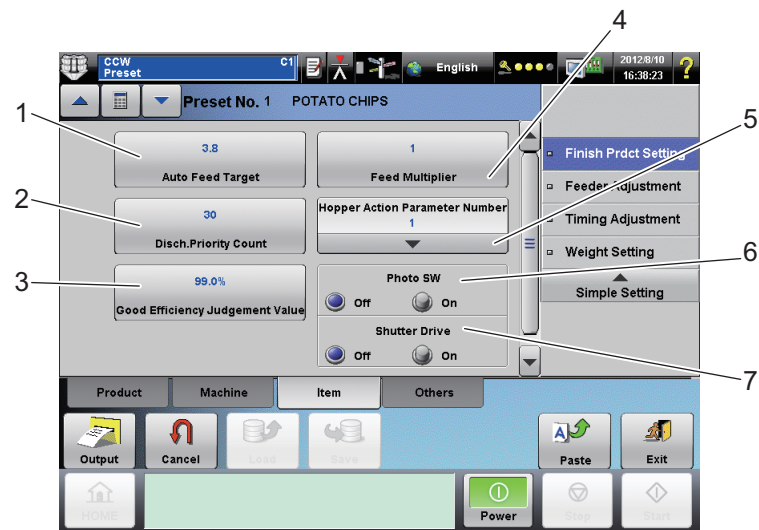


Fig. 6-66

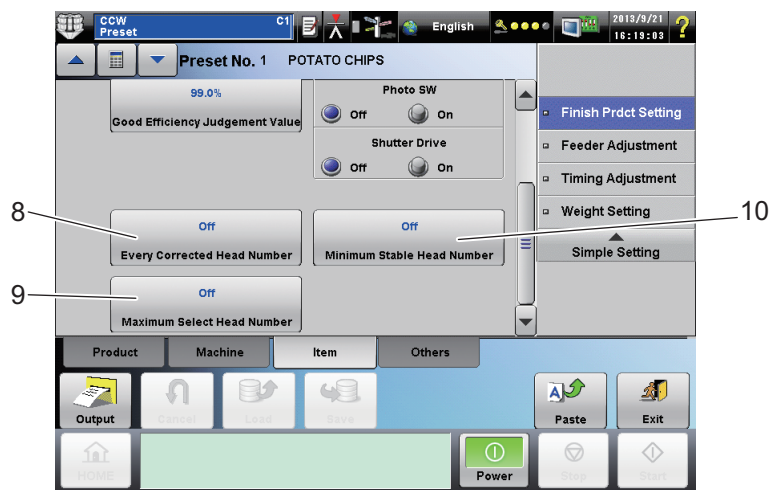


Fig. 6-67

Table 6-25

No.	Name	Function
1	[Auto Feed Target] key	Sets the auto feed target from the Numeric Keypad screen. • This sets the number of weigh hopper heads to be selected for discharge operation in order to obtain the target weight. • When feeder control is not manual, product infeed quantity (feeder value) is automatically controlled so that the target weight is met with the auto feed target. • To enable automatic control of product infeed, set the auto feed target, and then set the feeder control to a mode other than manual (Refer to "6.12 Feeder Adjustment Screen").
2	[Disch.Priority Count] key	Sets the discharge priority count from the Numeric Keypad screen. • This is the function to give priority in participating in combination to the heads having no discharge. • The priority is given to the heads that have not discharged products even after weighing the number of times (5 to 30) set for the discharge priority count.
3	[Good Efficiency Judgement Value] key	Sets the efficiency rate judged as good condition from the Numeric Keypad screen.
4	[Feed Multiplier] key	Sets the multiplying factor for the feeder operation time. This sets the multiplying factor for the feeder operation time set in the Feeder Adjustment screen within the range of 1 to 8. • When the feed multiplier is "2": One pitch of feeder operation time will be 40.0 msec at 50 Hz and 33.2 msec at 60 Hz.
5	[Hopper Action Parameter Number] drop-down key	Selects the parameter for open/close operation conditions for pool hoppers and weigh hoppers. This can be selected among 3 types of parameters (0, 1, 2) which set open/close operation conditions for each hopper, including the pool hopper and weigh hopper. These parameter conditions are set at the factory.
6	[Photo SW] radio button	Selects On/Off for the photo SW. [On]:Select it when using the photo eye sensor. [Off]:Select it when not using the photo eye sensor.
7	[Shutter Drive] radio button	Selects On/Off for the shutter drive. [On]:Select it when using the shutter drive. [Off]:Select it when not using the shutter drive.

Table 6-25

No.	Name	Function
8	[Every Corrected Head Number] key	Sets the every corrected head number from the Numeric Keypad screen. • This is the function to correct weighed value on setting number of heads among selected heads for combination. • When the setting value is "0", or high speed condition: This function is invalid.  CAUTION • When every corrected head number is set, the efficiency or the accuracy of weighing may be lowered depending on the product or the operation condition. So, we recommend using this function when you find a good effect by comparison of operation state before with after.
9	[Maximum Select Head Number] key	Sets the maximum select head number from the Numeric Keypad screen. • This is the function to perform combination weighing by the number of heads less than setting value. • When the setting value is "0": This function is invalid.
10	[Minimum Stable Head Number] key	Sets the minimum stable head number from the Numeric Keypad screen. • This is the function to perform combination weighing by the number of stable heads more than setting value. • When the setting value is "0": This function is invalid.

6.10.2.4 Others Tab Screen

To display the Others tab screen, press the [Others] tab on the Finish Prdct Setting index screen.

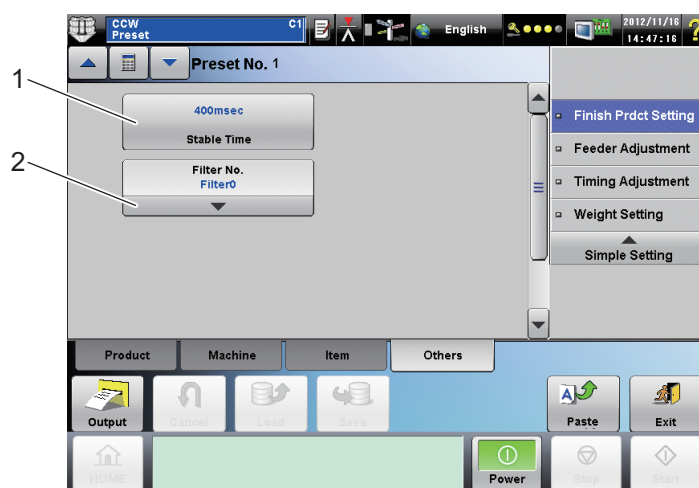


Fig. 6-68

Table 6-26

No.	Name	Function
1	[Stable Time] key	Sets the time up to judgment on whether weighing has been stabilized from the Numeric Keypad screen. Weighing for a period of time less than the time set with this key is not regarded as stable.
2	[Filter No.] drop-down key	Sets the digital filter number. In selecting the filter, consider the cut-off frequency and the weighing time. If a lower cut-off frequency value is set, influence of vibration decreases but the weighing time increases, resulting in lower weighing speed. In selecting the filter number, refer to "Table 6-27".

Table 6-27

Filter Number	Cut-off Frequency [Hz]	Filtering Time [msec]	Weighing Time [msec]*
0	18	160	670
1	15	210	720
2	11	290	800
3	9	370	880
4	7	460	970

* The weighing time means the minimum time that a weigh head can participate in combination weighing.

Even if interlock signals are input at a shorter interval than the weighing time shown in "Table 6-27", the head cannot participate in weighing every time. The weighing time in "Table 6-27" is based on the calculation below.

$$\begin{aligned} \text{(Weighing time)} &= \text{(WH-PH delay time)} + \text{(Combination weighing time)} + \text{(Stable time)} + \text{(Filtering time)} \\ &= 130 + 20 + 360 + \text{(Filtering time)} \end{aligned}$$

6.10.3 Feeder Adjustment Index Screen

To display the Feeder Adjustment index screen, press the [Feeder Adjustment] index on the Preset screen.

NOTE

- Refer to "6.12 Feeder Adjustment Screen" for feeder adjustment procedures or feeder adjustment from the Production screen.

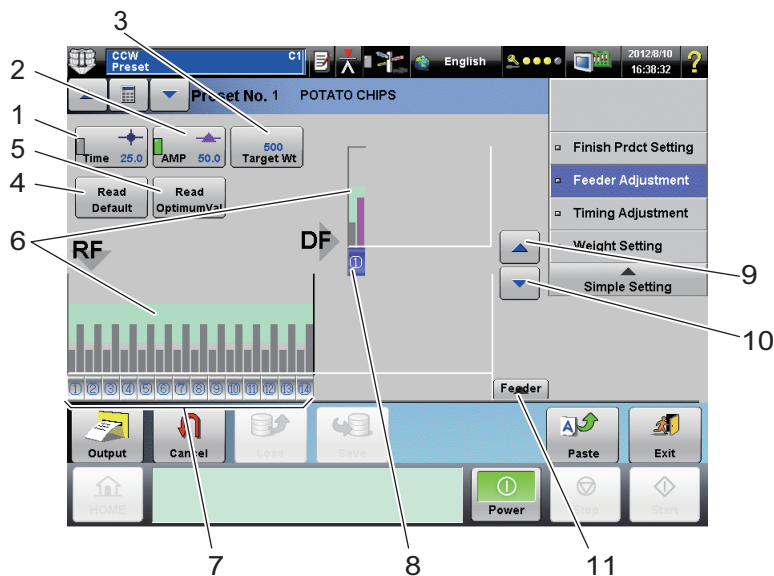


Fig. 6-69

Table 6-28

No.	Name	Function
1	[Time] key	ON:Enables adjustment of feeder operation time.
2	[AMP] key	ON:Enables adjustment of feeder amplitude.
3	[Target Wt] key	Appears if DF is selected. Sets the optimum weight for the dispersion table.
4	[Read Default] key	Calls the feeder default value.

Table 6-28

No.	Name	Function
5	[Read OptimumVal] key	Calls the feeder optimum value. Available only when the feeder optimum value is registered in the Production screen (Refer to "6.6 Production screen").
6	Feeder adjustment graph	The relative graph of time and amplitude of radial feeder and dispersion feeder.
7	Each [RF] key	Selects the radial feeder head to be adjusted. The selected heads are displayed in blue. Each time the key is pressed, it is selected and released in turn.
8	Each [DF] key	Selects the dispersion table. If selected, the key is displayed in blue. Each time the key is pressed, it is selected and released in turn.
9	[Increase] key	Increases the feeder value (RF time or RF amplitude) of the selected head.
10	[Decrease] key	Decreases the feeder value (RF time or RF amplitude) of the selected head.
11	[Feeder] pop-up key	Displays the Feeder pop-up menu.

6.10.4 Timing Adjustment Index Screen

To display the Timing Adjustment index screen, press the [Timing Adjustment] index on the Preset screen.

NOTE

- Refer to "6.13 Timing Adjustment Screen" for timing adjustment procedures or feeder adjustment from the Drain screen.

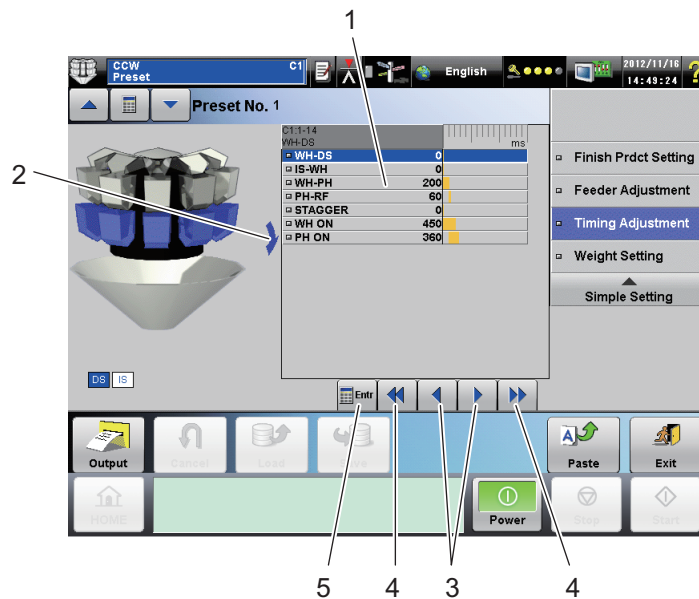


Fig. 6-70

Table 6-29

No.	Name	Function
1	Individual timing adjustment items	Selects the item for which timing is to be adjusted.
2	Adjustment direction	Indicates the direction of adjustment between the units displayed in blue.
3	[Increase/Decrease] key (10ms)	Increases/decreases a value in units of 10 ms.
4	[Increase/Decrease] key (100ms)	Increases/decreases a value in units of 100 ms.
5	[Entr] key	Sets the timing value directly from the Numeric Keypad screen.

6.10.5 Weight Setting Index Screen

To display the Weight Setting index screen (Preset screen), press the [Weight Setting] index on the Preset screen.

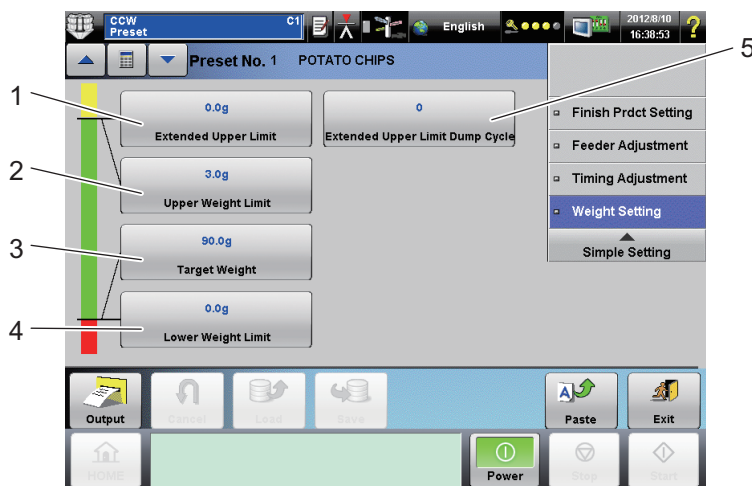


Fig. 6-71

Table 6-30

No.	Name	Function
1	[Extended Upper Limit] key	Aiming at efficiency improvement, sets the tolerance for a certain proper weight from the Numeric Keypad screen so that products can be discharged as proper weight even if the upper limit is exceeded once in a specified number of proper weight dumps. The key is unavailable when the upper weight limit is 0.0 g.
2	[Upper Weight Limit] key	Sets the upper limit of proper weight from the Numeric Keypad screen.
3	[Target Weight] key	Sets the target weight from the Numeric Keypad screen.
4	[Lower Weight Limit] key	Sets the lower limit of proper weight from the Numeric Keypad screen. This key is unavailable while the average control is set to [Off].
5	[Extended Upper Limit Dump Cycle] key	Sets the upper limit of the number of cycles of proper discharge with the tolerance set for the extended upper limit (Item No.1).

6.10.5.1 Target Weight

The target weight sets the weight of products to be discharged from the device to the packer.

The maximum setting value and the setting unit for target weight are as shown below.

Table 6-31

Head Weighing Capacity	Standard (400 g/800 g)	Medium (800 g/1600 g)
Maximum setting value	99999.0 g	99999.0 g
Setting unit	0.1/0.2 g	0.2/0.5 g

6.10.5.2 Upper Weight Limit

The upper weight limit sets the upper limit of the proper weight.

The upper weight limit can be set within the range of 0.0 g to 999.0 g. If 0.0 g is set, the upper weight limit is infinite.

The maximum setting value and the minimum setting unit for upper weight limit are as shown below.

Table 6-32

Head Weighing Capacity	Standard (400 g/800 g)	Medium (800 g/1600 g)
Maximum setting value	999.0 g	999.0 g
Setting unit	0.1/0.2 g	0.2/0.5 g

(e.g.) If the target weight is set to 100.0 g and the upper weight limit to 5.0 g, discharge is performed with the proper weight at 100.0 g to 105.0 g.

6.10.5.3 Lower Weight Limit

The lower weight limit sets the lower limit of the proper weight for using average control.

When average control is used, the lower weight limit is automatically set by entering the target weight. In the lower weight limit setting, the automatically set lower limit can be changed as required. However, the range of change is from 0.0 g to “the automatically set lower weight limit value”.

The maximum setting value and the minimum setting unit for lower weight limit are as shown below.

Table 6-33

Head Weighing Capacity	Standard (400 g/800 g)	Medium (800 g/1600 g)
Maximum setting value	999.0 g	999.0 g
Setting unit	0.1/0.2 g	0.2/0.5 g

(e.g.) If the target weight is set to 100.0 g and the upper and lower weight limit to 5.0 g, discharge is performed with the proper weight at 95.0 g to 105.0 g.

Table 6-34

Target Weight (g)	Automatically Set Value
5.0 to 50.0	9% of the target weight
50.0 to 100.0	4.5 g
100.0 to 200.0	4.5% of the target weight
200.0 to 300.0	9 g
300.0 to 500.0	3% of the target weight
500.0 to 1000.0	15 g
1000.0 to 10000.0	1.5% of the target weight

6.10.6 Simple Setting Screen

To display the Simple Setting screen (Preset screen), press the [Simple Setting] key on the Preset screen.

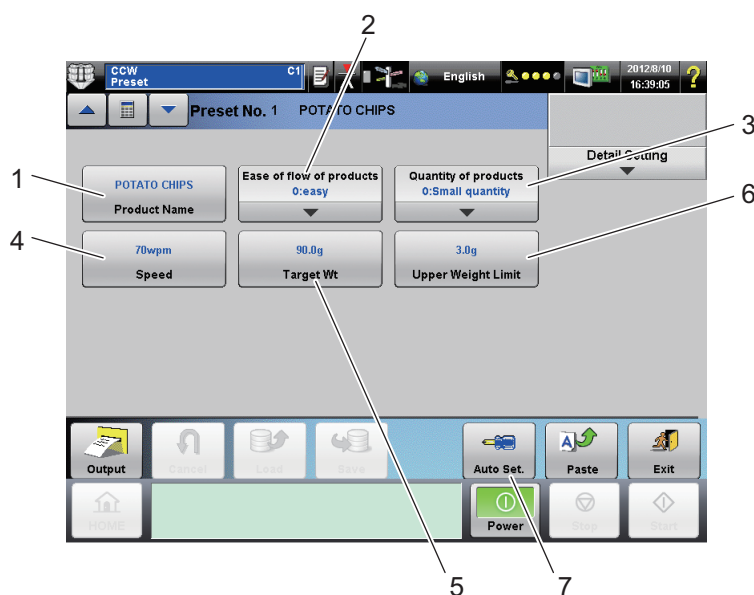


Fig. 6-72

Table 6-35

No.	Name	Function
1	[Product Name] key	Sets the product name by inputting it from the Keyboard screen. The set product name is displayed on the key. Up to 24 characters can be specified.
2	[Ease of flow of products] drop down key	Selects the ease of flow of the product flows on dispersion trough or radial trough. e.g. For water rich product, select the difficulty flowing.
3	[Quantity of products] drop down key	Selects the quantity of products on dispersion trough or radial trough. e.g. For smaller quantity of products has to be weighed accurately, select the small quantity.
4	[Speed] key	Sets the speed from the Numeric Keypad screen. - The set value is displayed on the key. - This sets the number of packs to be discharged from the device per minute. - The setting value for speed is determined by factors such as product characteristics, target weight and capacity of the packer.
5	[Target Wt] key	Sets the target weight from the Numeric Keypad screen.
6	[Upper Weight Limit] key	Sets the upper limit of proper weight from the Numeric Keypad screen.
7	[Auto Set.] key	Sets the feeder value, dispersion weight, filter number and hopper action parameter number automatically and appropriately.

6.10.7 Preset Change Operation

For some of the preset items, the setting values can be changed directly from the [Main Menu] or the Production screen (Refer to "6.4 Main Menu", "6.6 Production screen").

Items that can be changed from the Main Menu:

Product name, Product code, Target weight, Speed, Dump count, Upper weight limit

Items that can be changed from the Production screen:

Target weight, Speed, Dump count, Upper weight limit

NOTE

- This function is available to "Site Engineer" or higher level personnel.
- The setting values changed in the Production screen, which is only a temporary change of preset data during production, are not reflected to the preset data.
If preset selection is performed or power is turned off after a setting change in the Production screen, the changed data will be invalid.



Fig. 6-73

Table 6-36

No.	Name	Function
1	[Change Preset Item] button	Displays the Numeric Keypad screen or the Keyboard screen to be used for changing preset data. The areas that can actually be pressed are the square buttons and the item names.
2	Setting value display	Displays the set values. When setting change is available, the set values are displayed in blue.

NOTE


- In the Operator level, the [Change Preset Item] buttons are not displayed and the settings cannot be changed. In this case, the set values are displayed in black.

6.10.8 Preset Paste


1. Press the [Paste] key.
 ►The paste screen will appear.

**Fig. 6-74**

2. Press the desired preset number the [scroll] key and [scroll] bar.
3. Press the [Exit] key.
 ►The message will appear.

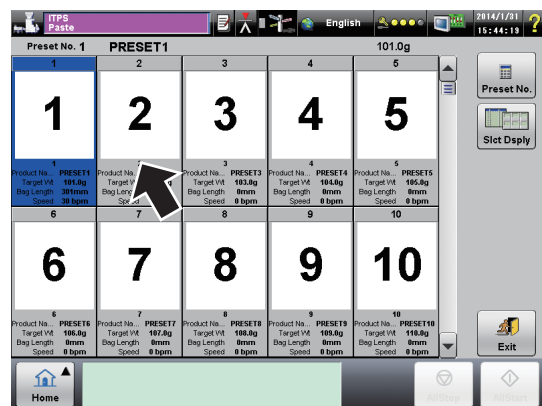**Fig. 6-75**

4. Press the [Yes] key.
 ►The preset parameter selected are copied to the preset number which you are editing now.
 ►It will return to the preset setting screen.

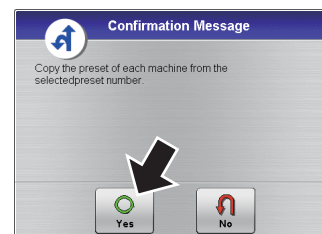**Fig. 6-76**

< Selecting the Preset No. Directly to be Copied >

The preset No. to be copied can be selected directly using the ten-key.

It is convenient if the preset No. is known, and the number is too large to quickly access by scrolling.

1. Press the [Preset No.] key on the paste screen.

► The ten-key will appear.

2. Enter the desired preset number.

► The ten-key will disappear, and the entered preset number will be selected.

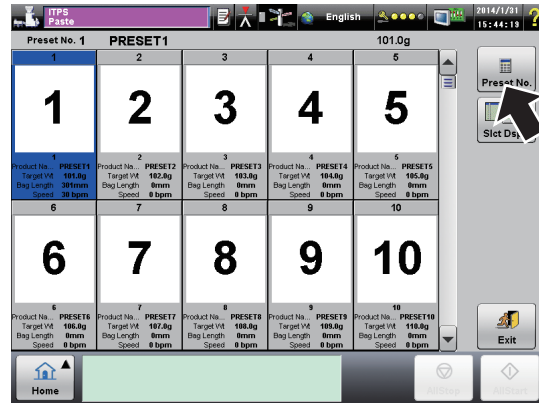


Fig. 6-77

6.10.9 Take Over Preset

1. Press the [Preset No.Direct Select] key on the preset setting screen.

► The ten-key will appear.



Fig. 6-78

2. Press the check button.

3. Enter the desired preset number.

► The ten-key will disappear, and the preset parameter are copied to the entered preset number.

► The display returns to the preset setting screen with the selected preset information set.

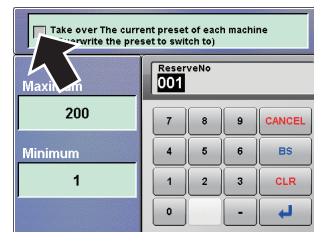


Fig. 6-79