

Installation

Carefully unpack the outer carton and shipping material. Avoid damaging the accumulation table or base.

Remove shipping straps and bolts or brackets securing the accumulation table base to the shipping base. Lift the accumulation table base off the shipping base.


CAUTION! The accumulation table may require more than one person to move safely off the shipping base.

Optional Casters

The accumulation table is delivered with flat leveling feet, standard. If the accumulation table is ordered with optional locking casters, the casters are installed at the factory and the accumulation table is delivered with the casters installed.

Height Adjustment

Each leg of the accumulation table is a threaded leveling leg. (Thread-locking compound is used to secure the feet or optional casters to the leveling leg.) To adjust the leg height, twist to thread the leg into or out of the accumulation table base to adjust each leg up or down.

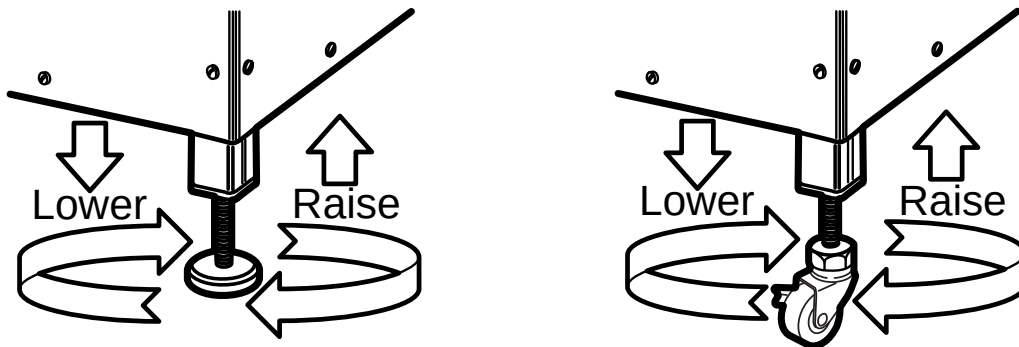

Move the accumulation table to the desired location. The leveling foot may require some lifting, but will easily skid across a smooth, level floor surface. If you have purchased the optional locking casters you can roll the accumulator table easily over a smooth flat surface. Move each caster lever to the locked position to keep the accumulation table from moving.

Location Requirements

When installing the Eastey Accumulation Table please be aware of the following considerations:

1. The floor surface is flat and level where the accumulation table will be placed.
2. Height of nearby packing table or equipment feeding into or receiving product from the accumulation table.
3. Alignment with packaging line.

Customized inlet and/or outlet options may be installed in lieu of the standard circumferential sidewall. Proper alignment with machinery feeding into the accumulation table as well as downstream equipment receiving product from the accumulation table must be taken into consideration when determining the location and position, and installing the accumulation table.

The accumulation table should be placed on a flat, level floor so that it does not rock or move. We recommend that the machine be securely locked in place when used.