
Operator's Guide

Includes:

Machine description

Machine controls

Basic machine operation procedures

Machine adjustments


Machine Description

The Arr-Tech Genesis, Model GV38-40 Counter Stacker can receive product arranged in 2, 3 or 4 rows at up to 180 per lane per minute. This unit will receive, count, stack and release package counts ranging from 6 to 36 per stack, depending on product thickness. Each stack can be up to 5" tall. This unit is designed to handle product from **5" to 12" in size**.

The Counter Stacker is under computer control. A Direct Logic DL-06 PLC Microprocessor Controller handles all counting, product size selection, timing, and ejection of product.

Photo electric sensors are used as input devices to the computer. They are modulated transmitter / receiver detector units, which cannot be falsely triggered by any type of plant lighting, including sunlight.

The computer internal functions are set by the User Interface mounted on the Counter Stacker. This interface enables product size selection, count selection, and timer adjustments. See pages 25 through 29 for detailed operation instructions.

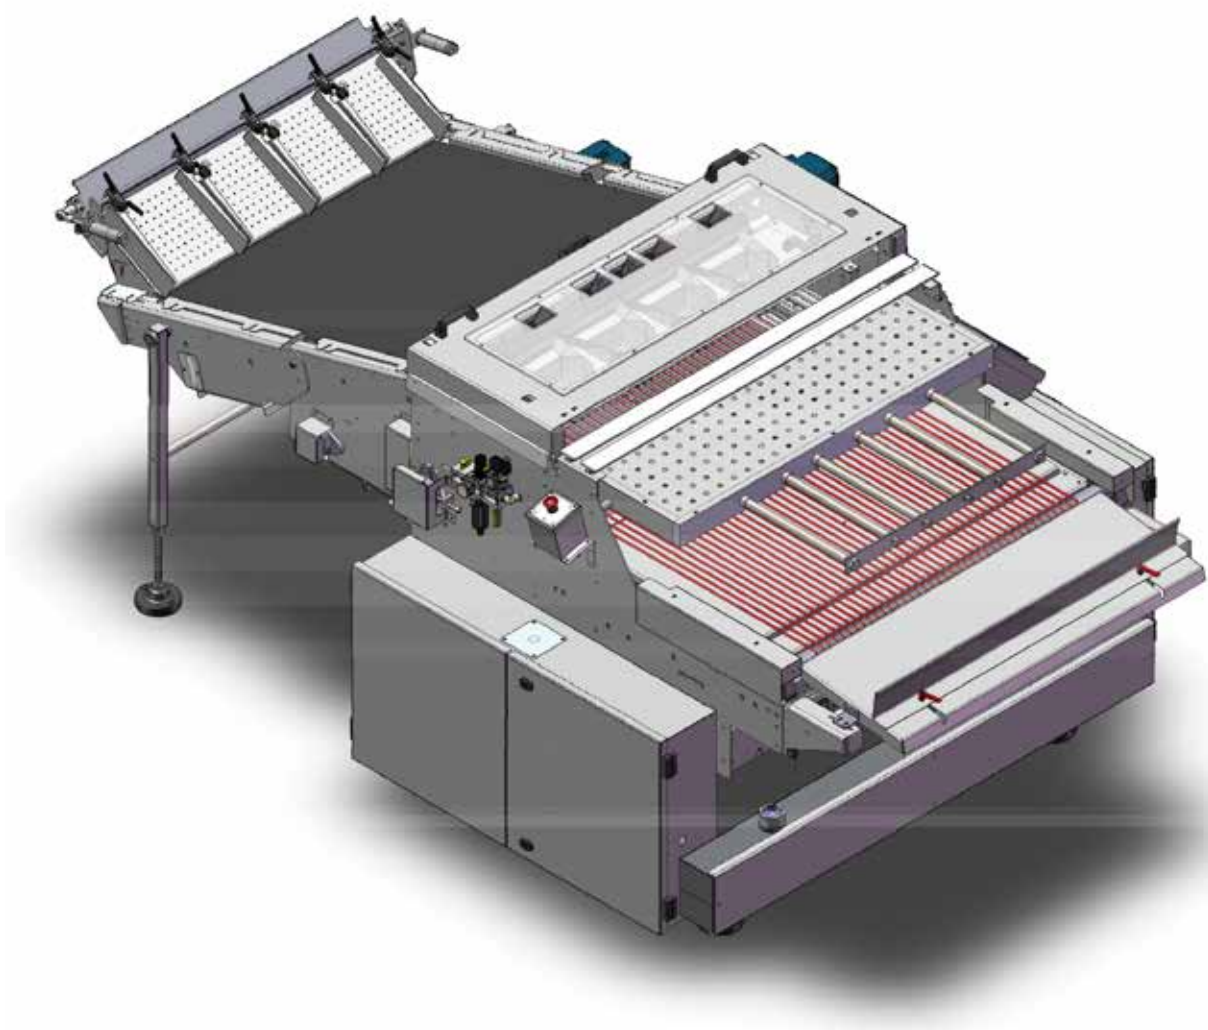

Operation Procedures

All Procedures to be performed by Trained Personnel Only.

Operators PPE - Safety Glasses, Sound Protection and Safety Shoes

Pre-Operation

Check the following:

1. All foreign objects are away from the Counter Stacker.
2. The electrical and the compressed air are disconnected at the source.
3. The motor switches are "Off."
4. The Counter Stacker is located, leveled, properly centered and spaced at the end of the cooler discharge.
5. All of the Counter Stacker hardware is tight.
6. All of the Pulley Belting is connected and tight.
7. The Electrical Controls and the Box Wiring are secure and free of moisture.
8. The air is connected and the regulator is adjusted for 70 pounds max air pressure on the gauge.
The air pressure may be reduced until the desired speed of cylinder performance is achieved. See page 43.
9. Check for air leaks and repair, if necessary.
10. All guards are in place.



*figure 22-1
Air Gate
(orientation may vary)*



*figure 22-2
Air Gauge*

Start-up

1. Verify that the electrical and the pneumatic connections are established as per instructions contained in Installation, page 45.
2. Push the Main Air Valve Switch (located on the main air line) up to the open position.
3. Check the air pressure gauge next to the air regulator and make sure the air pressure is set at 70 psi.
4. Release both **EMERGENCY STOP** buttons by turning them clockwise (if they have been pushed).
5. Push **SAFETY RESET** button.
6. When **CYCLE START** button light flashes push the **CYCLE START** button on the main control console. The startup alarm will sound.



*figure 22-3
Cycle Stop Button*

Normal Shutdown

If there are more than 6 hours between shifts shut down your counter stacker, following the instructions below.

1. Push the **CYCLE STOP** button.
2. When the conveyors have stopped push down the **EMERGENCY STOP** button.
3. Turn off air and disconnect power.



*Figure 22-4
Cycle Start Button*

Operation Procedures

Emergency Shutdown

Push down on either of the **EMERGENCY STOP** buttons.

To restart - wait at least 30 seconds before attempting to re-start to allow motor drives to fully reset, then follow the instructions for Start-up (see page 24).

Change-over

1. Install the Insert Cup Tray for the product size. See page 32.
2. Adjust the alignment guides for the selected product-row configuration. See page 32.
3. On the Home Screen, enter the recipe number for the desired product. See page 27-28.

Change Existing Recipe

For user interface instructions see pages 27-29.

1. Set the desired count using the User Interface. See Pages 28.
2. Adjust the Infeed Conveyor belt speed. See Page 28.
3. Set the Step Down Count. See Page 28.
4. Set the Fork Hold Count. See Pages 28.
5. Press the Save button to save changes to each value.

Single Lane Clear Out

1. To clear a lane of its product, press the button numbered for that lane one time. This will retract the interrupt forks and drop the stacking towers to a full down position allowing the stack to clear out.
2. Once the stack has cleared the stacking towers, press the button a second time. When the next tortilla energizes the corresponding count photoeye the stacking towers will return to the up position and the interrupt forks will engage beginning the collection of tortillas for the next stack.

Note: The stacking towers and interrupt forks will only return to the stack ready position after the clearout button has been pressed the second time and the count photoeye for the lane has been energized.



Figure 23-1
Clear Out Buttons on Main Screen of Display

Clearing Jams

1. Shutdown the Counter Stacker by pressing either **EMERGENCY STOP** button.
2. Remove any debris or scrap, being careful not to allow any pieces to fall into the machine.
3. Carefully inspect machine for any debris fallout.
4. Account for all tools, parts, and materials.
5. Start the Counter Stacker and check for proper operation.

Controls

Main Disconnect

The Main Disconnect is a red switch located on the front of the main electrical panel. The switch must be set to the on position for the machine to run.

Note: The door latches on the electrical panel must be in the closed position before the machine power can be turned on

This switch should be locked into the off position before repairing or maintaining the machine. Pull out the white lever and insert locking device.



figure 24-1
Main Disconnect

EMERGENCY STOP

The **EMERGENCY STOP** buttons is a push button that immediately stops the Counter Stacker when it is pushed down.

To restart the machine the button must be released. To release the button turn the button head clockwise until it pops up.

There are two **EMERGENCY STOP** buttons on the machine. One located on the Main Control Panel and the second on the opposite side of the machine. Both buttons must be released to start the machine.

When the **EMERGENCY STOP** button has been pushed down the button light will come on.

SAFETY RESET

The **SAFETY RESET** button resets the safety circuitry after any **EMERGENCY STOP** buttons have been pushed (and pulled back up) or any Guard has been opened (and re-closed).

CYCLE START

Push this button to start the counter stacker. When the button is lit the line is ready to run.

CYCLE STOP

Press to bring the counter stacker to a stop. The belts will shut down, the interrupt forks will retract, and the stacking towers will lower.

The **START** button can then be used to restart the line.

*WARNING: This is not a SAFE stop. If physical access is needed, then press the **EMERGENCY STOP**.*



figure 24-2
Control Panel