

User Interface

Note: Actual screen appearance and content may vary depending on machine options and access level.

Main

The Main Menu allows the user to navigate to other screens.

Press **Monitor** to check performance and device status.

Press **Login** or **Logout** to change access levels (Login button will change to Settings).

Note: After a short period of inactivity the system will automatically perform a logout to prevent unauthorized access.

Press **Setup** to adjust parameter settings for the current recipe.



The current Stack Count and Production Rate is displayed in the upper right corner.

Press **Reset** to set the Stack Count to zero (0).

Press the current **RECIPE** number to change to a different recipe setup. The name of the current Recipe is displayed to the right of the number.

Press **ESPAÑOL / ENGLISH** to change the language.

The current machine status is displayed near the center of the screen.

Press **Gate Down Up** to lower or raise the infeed gate as desired.

The **CLEAR ROWS** buttons are located on the bottom of the screen. Press one of these buttons to begin a Clear Out Cycle for the corresponding lane.

Monitor (not shown)

Press **Help** to access the help menu.

Press **Performance** to view processing information.

Press **Recipe List** to view a list of programs.

Press **Home** to return to the Main Screen.

Press **Clearout Monitor** to view device status for each row.

Press **PLC I/O** or **Motor Drives** to view device status.

Press **Alarm History** to view a list of past and present alarms.

Press **Linmot Drives** for information for the Linmot System.




Performance

The current package count for each row and the machine is displayed on this screen.

Press **ZERO** to reset the package counts to zero (0).

Press **Rate Trend** to view a Line Graph which displays the Rate Trend in dozens per hour.

Press **HOME** to return to the Main Screen.

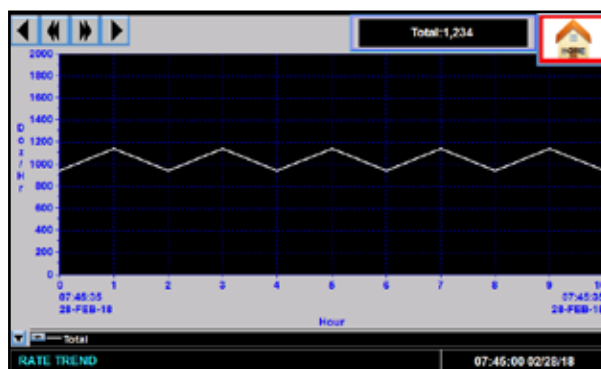

User Interface

On the Settings screens press:

- **HOME** to close the current screen and return to the Main Menu.
- The current value of a variable to make adjustments.
- **Setup** to return to the Setup Menu Screen.
- **SAVE VALUE** - to save the current values for the current recipe.

Note: Actual screen appearance and content may vary depending on machine options and access level.

Setup

Press **Help** to access the Help Menu.

Press **Maint.** to access the Maintenance Menu.

Press **SAVE VALUE** to save changes made to the current recipe parameters.

Press **Home** to return to the Main Screen.

Press **Conveyor Speeds**, **Counters**, **Timers** or **Recipe List** to adjust running parameters for the current recipe.

Press the Active Recipe number to change to a different recipe program.

Press the Active Recipe name to change the name of the current recipe.

Conveyor Speeds

INFEED SPEED is the speed for the infeed conveyor in feet per minute.

DISCHARGE SPEED is the the speed for the discharge conveyor in feet per minute.

VIBRATION SPEED is the rate of vibration in Hz.

Vibration Off On - turn vibration off or on as needed.

Counts

ROWS is the number of rows to run.

Upper Fork Hold Count / **Lower Fork Hold Count** - the product count at which the corresponding set of interrupt forks will retract dropping the stack to the next level (lower forks/stack tower).



Stack Count - the product quantity desired for each stack.

Step Count - The number of pieces between tower 'step downs' to maintain the stack height just below the top of the stack cup.

Second Level Step Count - The number of pieces between tower 'step downs' to maintain the stack height just below the top of the stack cup after the Second Level starts.

Second Level Start - The percentage of the stack to accumulate before the second level starts.

Step Changeover point - the count, based on Second Level Start at which the system will begin to monitor for the Second Level Step Count.

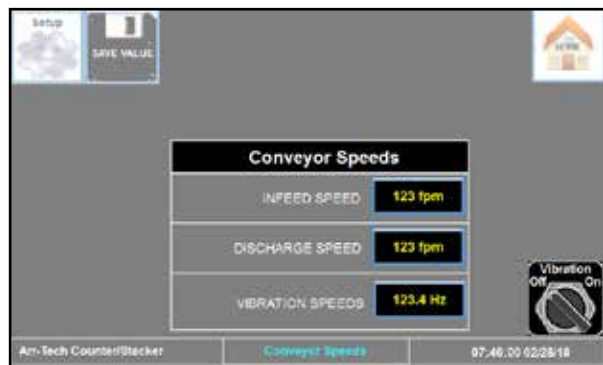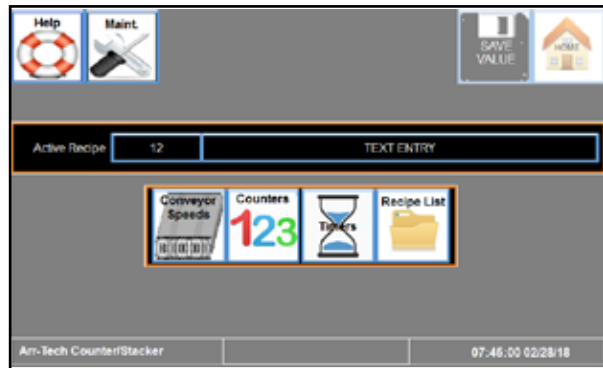

User Interface

On these screens press:

- **HOME** to close the current screen and return to the Main Menu.
- **MAINT.** to transfer to the MAINTENANCE MENU.

Note: Actual screen appearance and content may vary depending on machine options and access level.

Timers

TRAVEL TIME is the amount of time expected for the product to travel from the Count Photo Eye to the Stack Cup.

UPPER FORK DELAY TIME / LOWER FORK DELAY TIME is

the amount of time the towers will drop, once the stack count is complete, before the corresponding interrupt forks will extend to catch the next product.

TOWER DOWN TIME is the amount of time the tower will remain in the down position before rising to catch the next stack.

SENSOR MAX TIME is the time each count photoeye is allowed to remain blocked before initiating the AUTOCLEAR cycle.



Sensor Debounce

Minimum On Time - the minimum amount of time expected for the PE to be blocked for normal product. If the sensor is not blocked for this amount of time the product count will not be incremented.

Debounce Time - The amount of time after which the count sensor is triggered during which any further input from the sensor is ignored. This helps prevent an individual piece of product from being counted more than once due to rapid on/off/on transitions of the sensor as the product travels under it.

DEBOUNCE OFF ON enables or disables the sensor debounce time and the sensor min time monitoring.

Air Assist (Option)

Air Assist Delay - the amount of time after the product clears the count sensor before the Air Assist will be activated.

Air Assist On - the amount of time the Air Assist will remain on.

AIR ASSIST OFF ON - enable or disable the Air Assist system.

User Interface

On these screens press:

- **HOME** to close the current screen and return to the Main Menu.
- **Maint.** to transfer to the Maintenance Menu.

Note: Actual screen appearance and content may vary depending on machine options and access level.

Maintenance Menu

Press **Admin** to adjust passwords and/or the Tower Up Time.

Admin Access Level required.

Press **Setup** to return to the Setup Menu.

Press **PLC Inputs** to view status information for the PLC.

Press **Config** to adjust display settings and view battery status.

Press **Alarm History** to view current and past alarm information.

Press the **Arr-Tech** button to view system and contact information.

DRY CYCLE OFF ON - the machine will run in continuous cycles using simulated parameters.

FORKS RUN TEST - the forks will cycle

Motor Drives

View status information for each of the three drive systems.

PLC Inputs

Input connections are displayed with indicators showing the current status of each.

Press the Arrows at the top of the screen to transfer between the PLC Input screens.



Config Display (not shown)

The battery status for the PLC and for the Display are displayed.

Press Activate Screen Saver to enable the screensaver.

Use the arrows on the bottom center to adjust the screen brightness.

Use the arrows on the bottom right to adjust the time.

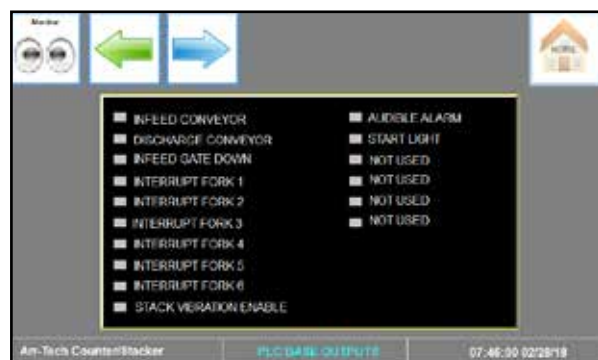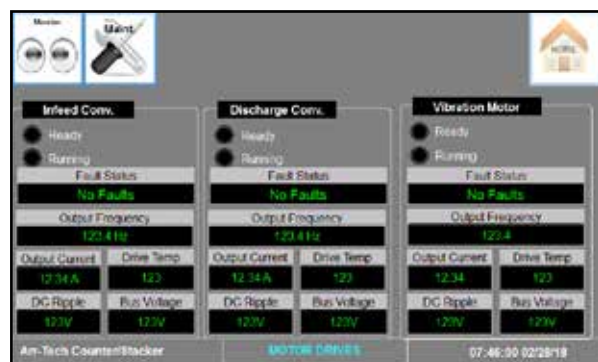

User Interface

On these screens press **HOME** to close the current screen and return to the Main Menu.

Note: Actual screen appearance and content may vary depending on machine options and access level.

Administration

Administrator access allows management of passwords for three separate shifts on this screen.

Maintenance Level access allows access to all machine features except password management.

Tower Up Time - the amount of time allowed by the program for the tower to return to the up position after the TOWER DOWN TIME. The forks cannot release the next stack until the TOWER UP TIME is done.

ClearOut Monitor

The ClearOut Monitor allows the operator to view current status information for each row.

On the bottom of the screen are the **CLEAR LANES** buttons. Press one of these buttons to begin a Clear Out Cycle for the corresponding lane.

