

Adjustments

IMPORTANT:

Adjustments should be done by Trained Personnel Only.
*Operator PPE - Safety Glasses, Sound Protection and
Safety Shoes*

Insert Cup Tray

Note: Insert Tray removal / replacement requires two (2) people wearing the proper personal protection.

Follow Lockout Tagout Procedure.

Remove the Insert Cup Tray.

1. Turn off the power by pushing one of the EMERGENCY STOP button down.
2. Slide the Tray Cover toward the infeed end of the machine (figure 30-1).
3. Slide each interrupt fork to the retracted position.
4. Push back on the red handles on each side of the machine to raise the rubber foot.
5. Lift the Insert Cup Tray up and out of the machine.

Install the Insert Cup Tray.

Follow Lockout Tagout Procedure.

Install the insert cup tray that measures ½" larger than the product size.

1. Turn off the power by pushing one of the EMERGENCY STOP buttons down. If possible, push the STOP (O) button first to clear all remaining product from the stacking towers. When the machine is stopped, the forks will be retracted from the cup.
2. Slide the Tray Cover toward the infeed end of the machine.
3. Slide each interrupt fork to the retracted position (if necessary).
4. Lower the Insert Cup Tray into position, over the guide pegs.
5. Pull the red handles up on each side of the machine to lower the rubber foot, securing the tray in place.
6. Slide the Tray cover back over the Insert Cup Tray (toward the discharge end of the machine) until it locks into place.
7. Pull up all EMERGENCY STOP buttons on the line. Any EMERGENCY STOP buttons that have been pushed down will be lit.
8. Push the RESET button on the main control console.
9. Push the Machine Start button on the left side of the Line Overview screen to start the line.
10. Using the User Interface, check the system for operation by cycling each lane clean out. See page 25, Single Lane Clear.



Figure 30-1
Insert Tray Cover

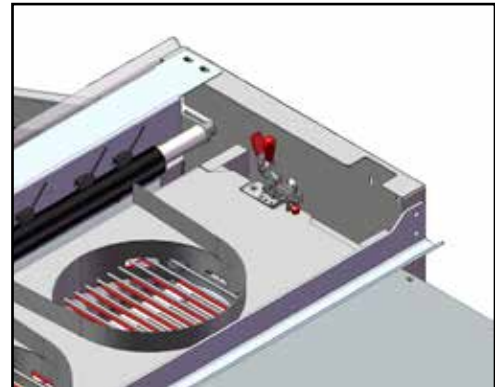


Figure 30-2
Insert Tray



Figure 30-3
Tray Release Handle

Adjustments

Alignment Guides

Note: Potential Pinch Point. Operator must be wearing all personal protection and pay attention while adjusting infeed alignment gates.

The slide guide plates are hinged and should be adjusted for optimum centering and guiding of each line. Product must line up to center of catch cups.

Each guide has three adjustments: the in-Feed placement and two angle adjustments. Each adjustment has a corresponding lock-down knob which is loosened to perform the adjustment and then tightened to lock the adjustment into place.

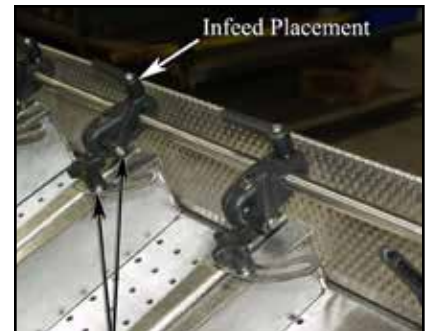


Figure 31-1
Air Chute Alignment Guides

Belt Tension

Counter Stacker Infeed Belt - add or remove links to adjust the tension.

Counter Stacker Discharge Belts - The belt tension can be adjusted by adjusting the position of the tension bolts on the counter stacker. They are located on the side of the Counter Stacker near the center of the machine on either side.

Air Knife Assembly (option)

The position of the Air Knife Assembly may be adjusted forward or back by loosening the bolts on either end of the assembly.

Position the assembly then tighten the bolts back down to secure the position.

Knurled handles allow the operator to loosen each knife assembly and adjust its position along the bar as needed.



Figure 31-2
Counter Stacker - Discharge Belts

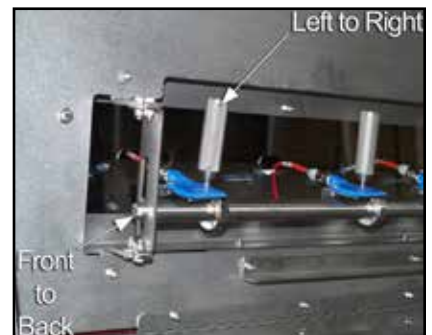


Figure 31-3
Air Knife Assembly

IMPORTANT:

Adjustments should be done by Trained Personnel Only.
Operator PPE - Safety Glasses, Sound Protection and Safety Shoes

Adjustments

Photoeyes

The photoeyes are located so that each photo eye is centered over (or under) its assigned lane. The photo eye positions have been set such that when the row configuration is selected the correct combination of count eyes will automatically be activated for the row configuration.

If the eye does not seem sense the product, check the indicator lights on the end, below the set button. The green light should be lit all the time and the orange light should be lit when product is seen.


To reset the count photo eyes - Place the product on the belt directly under the eye (hanging partly off the belt onto the catch tray), press the set button once. Remove the product and press the set button a second time. Confirm that the eye is working correctly (green light on all the time, orange light on when product is seen)

If the eye does not see product after resetting it, the 'trim pot' number can be adjusted, using the buttons on either side of the display. Increase the number if the eye is not seeing the product. Decrease the number if the eye seems to sense product all the time. The 'trim pot' number on all of the photoeyes should be within 10 digits of each other.


The Photo Eye can be 'locked'. Press and hold both the Increase and Decrease buttons (located on either side of the display) for three seconds to lock the operation buttons and avoid the preset from being changed. "Loc" will flash briefly in the display before it returns to normal. Follow the same procedure to 'unlock' the Photo Eye. "Unl" flashes in the display before it returns to normal.

The Photoeye position can be adjusted if necessary by loosening the bolt and sliding it along the rail.

Figure 32-2 is shown for clarity only. The specific controls for the photo eye are clearly indicated.

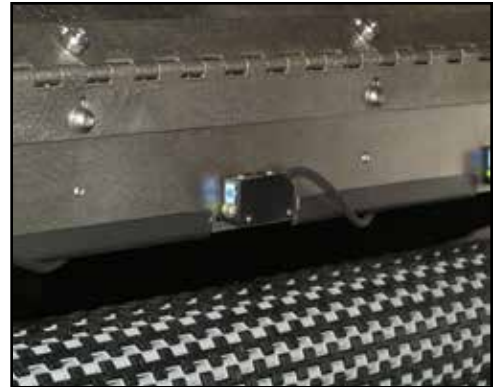

*Figure 32-1
Count Photo Eye*

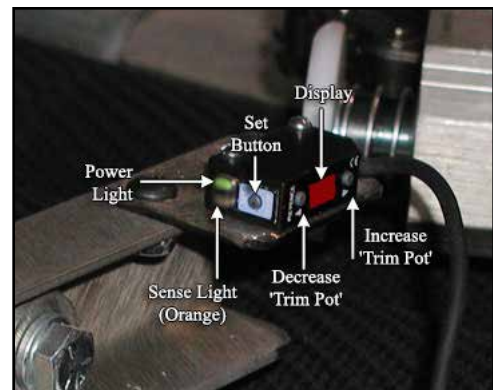

*Figure 32-2
Photo Eyes*