


EX-CF

**Industrial
Semi-Automatic Case Former**

User Guide

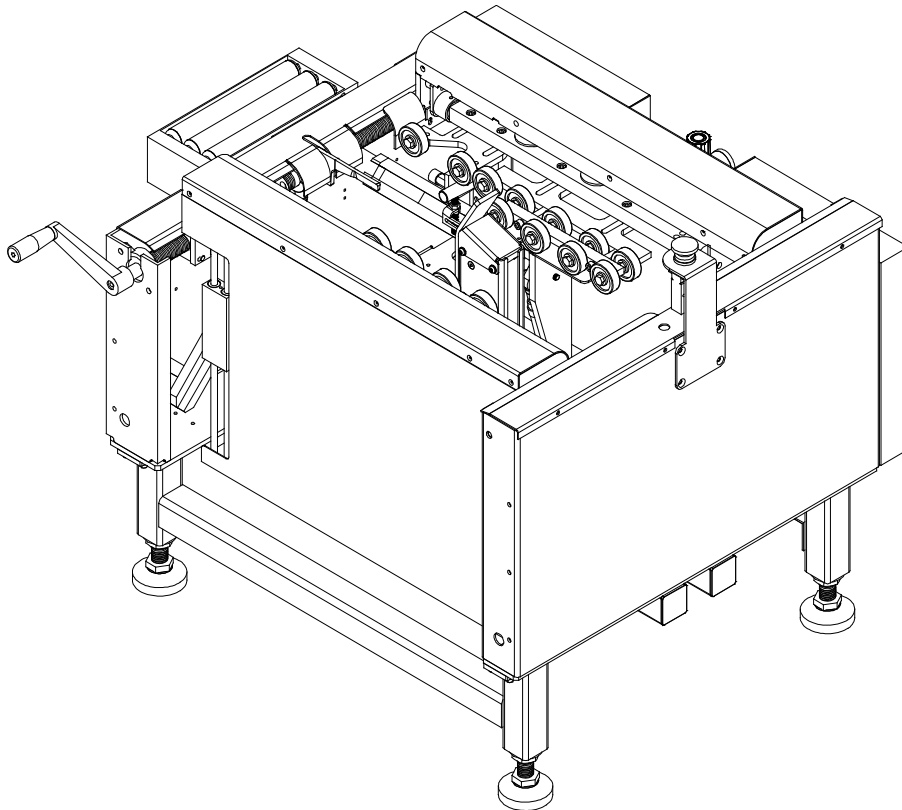

EASTY[®]

EX-CF

Industrial Semi-Automatic Case Former

User Guide

Revised 01/13/2022

P/N EXCF1000 Rev. C1

Copyright and Trademarks

Copyright ©2012-2022 Engage Technologies Corporation
All rights reserved. All trademarks and brand names
are the property of their respective owners.

Eastey
7041 Boone Ave. N.
Brooklyn Park, MN 55428

Phone: (763) 428-4846; Fax (763) 795-8867; 1-800-835-9344
www.eastey.com

Contents

Safety	7
Introduction	9
Semi-Automatic Case Former Overview	9
Specifications	10
Installation	11
Location Requirements	11
Adjustments	13
Case Width.....	13
Case Length.....	14
Major Flap Folder Plates	14
Operation	15
Starting the EX-CF Case Former	15
Erecting a Case.....	15
EX-CF Operating Cycle.....	16
Troubleshooting	18
Parts List.....	19
Pneumatic Parts.....	19
Frame, Front Assembly	21
Slide Spindle Unit.....	23
RH Fold Assembly	25
LH Fold Assembly	26
Frame, Left Side Assembly	27
Frame, Right Side Assembly.....	29
Appendix A: Air Diagram.....	31
Pneumatic Schematic	31
Warranty Statement	33
Customer Support.....	35

Safety

Safety Precautions

Before installing, operating or servicing this equipment, please read the following precautions carefully:

- This machine is equipped with moving parts. Do not place hands near the rear of this unit when the flap folders are moving as fingers may be pinched where belts enter the frame.
- Do not by-pass any factory-designed safety features such as, interlocks and/or switches, etc.
- Never provide service or clear a box jam when machine is running. Activate the red emergency stop button by pressing it down then shut off and disconnect the air supply and make sure the machine is secure before attempting to clear a jam or perform any adjustment or maintenance.
- Do not place hands or body inside the confines of the machine.
- Do not wear loose clothing such as ties, scarves, jewelry etc. Long hair should be pulled back and/or covered while operating this machine.

