

Installation

Location Requirements

When installing the EX-CF Case Former please be aware of the following considerations:

1. The mounting surface is flat and level.
2. Adjoining equipment height.
3. Alignment with packaging line.
4. Adequate clean air supply nearby at required CFM and PSI pressure. Supply must be clean factory air and will be lubricated by the FRL (Filter Regulator Lubricator) unit on the machine.

When the EX-CF Case Former is positioned in the operating location you will need access to:

1. The emergency stop switch.
2. Height and width adjustments.

The machine should be placed on a flat, level floor so that it does not rock or move. We recommend that the machine be securely locked in place when used.

Carefully unpack the outer container. Avoid damaging the machine body.

Remove the shipping bolts that secure the EX-CF Case Former to the shipping pallet.


Lift the Case Former off the pallet.

Attention! The EX-CF Case Former is a very heavy piece of equipment and will require a forklift or several people to move safely off the shipping pallet.

To avoid damage the EX-CF is shipped with the Emergency Stop button bolted to the inside of the frame.

Attention! Do not connect the main air-supply to the case former while installing and connecting the E-Stop assembly.

Remove the E-Stop button assembly from the shipping position and install it in the operating position on the outside of the frame.

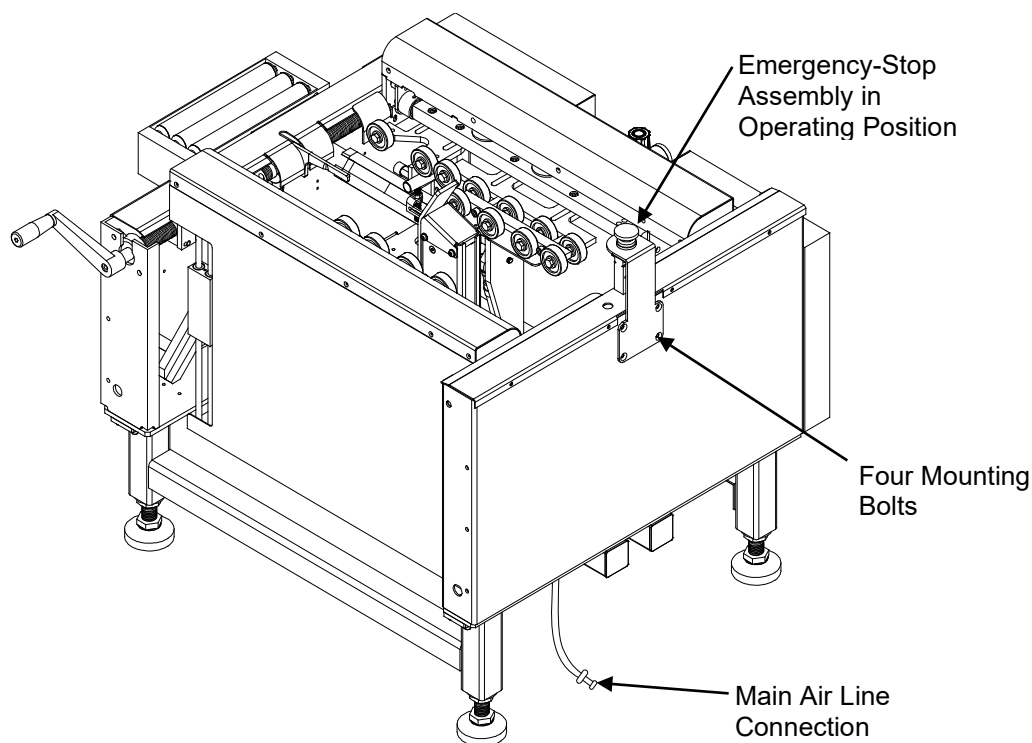

After the E-Stop button has been mounted in the operating position, making sure the red emergency e-stop button is pressed down (off), connect the two air-lines to the E-Stop assembly.

Air pressure should be set to 80 PSI (6 kg/cm²) for most applications, with a minimum setting of 65 PSI (4.5 kg/cm²) and a maximum of 100 PSI (7 kg/cm²).