


Adjustments

There are two major adjustments when setting up the EX-CF Case Former, width adjustment and a length adjustment. There is also an adjustment for the major (long) flap folding plates. After the initial set up the major flap folder plates need only be readjusted if there is a large change in box size.

Caution! Disconnect the main air supply before making any adjustments or changes. Ensure that the emergency stop button is pushed down in the off position.

Case Width

Attach the supplied hand crank to the square shaft on either side of the machine.

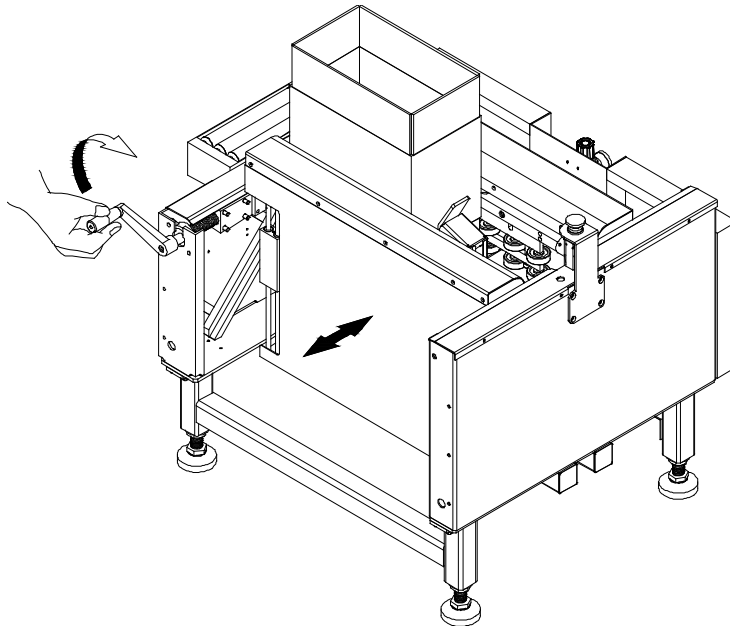


Adjust the width to be wider than the case.

Open a case from a blank flat and insert it into the machine.

Crank in the width adjustment until the red case hold-down rollers are lightly gripping the sides of the case. It should be easy to insert and remove a case but the case should still be maintaining contact with the body switch roller until the case leaves the machine.

Case Length

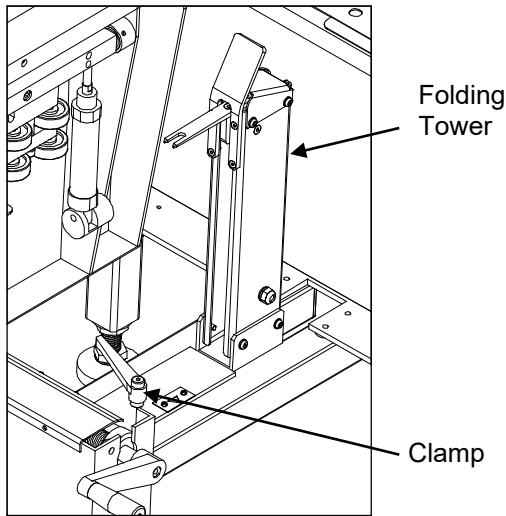

Remove the case and loosen the clamp that is located at the base of and in front of the minor (short) flap folding tower.

Reinsert the case into the machine and position it $\frac{1}{2}$ " back from the minor flap folder at the exit end of the machine.

Push the tower forward until it just contacts the back of the case.

Remove the case and tighten the "tower" clamp.

Major Flap Folder Plates

The major flap folding plates and wheels may need to be extended to provide additional support for wide heavy cases or retracted for narrow ones.

Note: Sliding the plates in towards the machine center increases the case bottom support but limits the minimum width adjustment when the major flap folder wheels contact the minor folder tower. Also, extended folder plates in the down position will wedge against the bottom control valve/flap opener bracket as the machine is adjusted for minimum width. If forced, either of these conditions can damage machine components.

There are two major folder plates on each side of the machine, one small and one large that are adjusted independently.

Loosen the four socket-head cap screws on each side that hold the major folder roller plates in place. Slide the front [large] folder to the desired position and retighten the screws.

Adjust the rear [small] major folder plate. Make sure that the plate will not contact the "floor" switch valve arm as it moves through its arc. For wide cases, the small folder plate will not be able to be extended as far as the large plate and has a separate adjustment for this reason.