

USER NAME HEAT AND CONTROL, INC.



PARTS MANUAL

MODEL NAME CCW-RVE-214W-1S/30-PB

ORDER No. 683867

PROJECT No. 2055376-01

ISHIDA CO., LTD.


HOW TO USE THIS PARTS MANUAL

□ OVERVIEW

This parts manual contains a list of replacement parts for a standard equipped machine. Please refer to this manual when ordering or replacing parts.

□ HOW TO REFER TO THIS MANUAL

- The machine is divided into sections.
- The Parts Section Locator, found on the first page, contains an illustration showing the location of main components (units). Refer to the illustration to locate the corresponding section for the desired unit. Some units may contain sub sections. Sub sections are listed within a section heading on the Parts Section Locator.
- The Table of Contents, found on the second page, contains the section/page number, unit name, part code, and drawing number for each unit. For a detailed list of parts and parts code used within each unit, refer to the corresponding unit section.
- Page references are constructed as follows: section number, sub section number (if any), and page number.
- A disassembly illustration is found on the left-hand side page of each parts list.

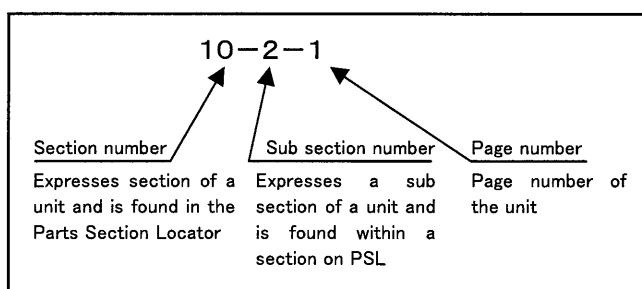

□ ORDERING A PART

When ordering a part, be sure to specify the

part by referring to this manual and advising Ishida of the following information:

- Parts manual number (indicated on the upper side of the Table of Contents)
- Job number of the machine (found on the plate fitted to the main body)
- Company name
- Contact information
- Part code of the required item
- Part name
- Quantity

When you need to order a whole unit, please specify the part code with the marking ● on the itemized list.

REMARK

- The items listed on this manual are original equipment specifications and may be slightly different from the items actually equipped to your Ishida machine now in operation. For this reason, always be sure to indicate job number (indicated on the cover sheet of this manual) when ordering parts.

CCW-RVE

PARTS SECTION LOCATOR

SECTION

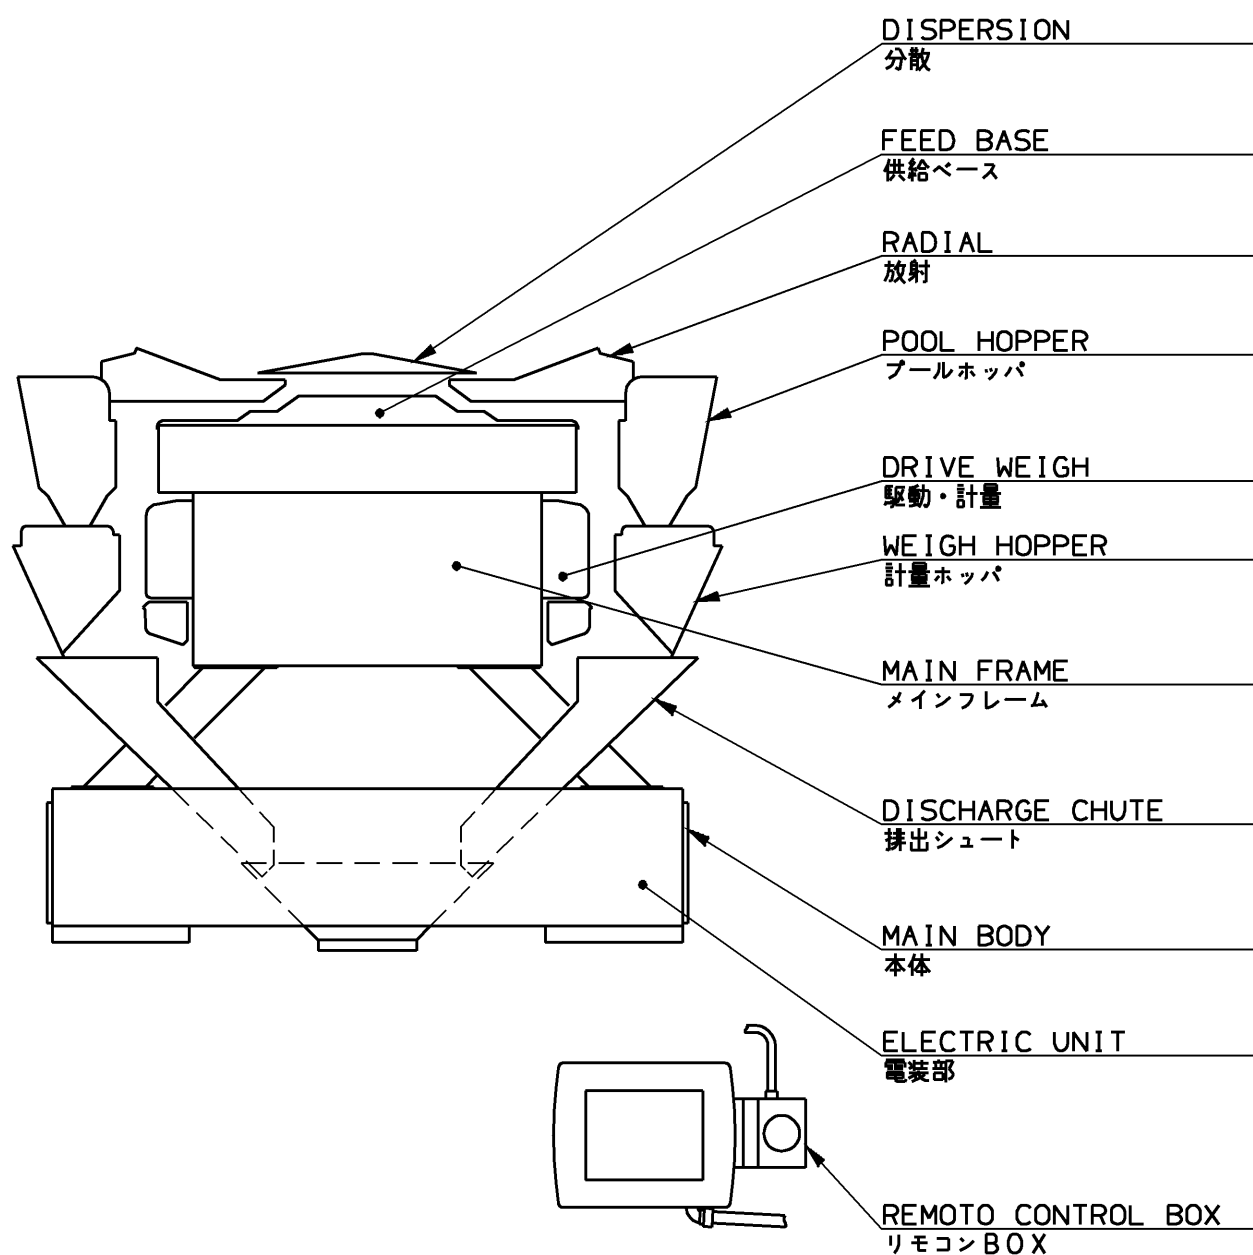


TABLE OF CONTENTS

MODEL NAME CCW-RVE-214W-1S/30-PB
PROJECT No. 2055376-01

SECT- PAGE	UNIT NAME	PART CODE	DRAW No.
10- 1	MAIN BODY UNIT::	100-019-3745-00	4D-56099
10- 2	PLATE UNIT:MAIN BODY:	000-055-6933-09	4D-10137
10- 3	ACCESSORY:MAIN BODY:	000-054-9553-01	4D-09133
20- 1	DRIVE WEIGH UNIT::	000-069-2984-21	4D-54442
22- 1	DRIVE WEIGH UNIT:LEVER:	000-071-9152-07	4D-12590
30- 1	FRAME UNIT:MAIN:	000-065-2471-37	4D-13038
31- 1	ELECTRICAL UNIT:MAIN:	000-109-0834-27	4D-33214
33- 1	FAN UNIT::	000-066-8485-01	4D-13033
40- 1	BASE UNIT:FEED:	000-065-4139-37	4D-32545
40- 2	COVER UNIT:FEEDER:	000-065-4135-14	4D-35374
41- 1	FEEDER UNIT:DISPERSION:	000-061-5777-38	4D-13139
41- 2	TABLE UNIT:DISPERSION:	000-044-0043-15	4D-07436
42- 1	FEEDER UNIT:RADIAL:	000-146-0583-18	4D-47956
42- 2	TROUGH UNIT:RADIAL:	000-041-2292-11	4D-31612
43- 1	CHUTE UNIT:INLET:ROUND	000-041-2256-17	4D-14555
43- 2	GATE UNIT:RING:SET	000-041-0707-21	4D-31040
50- 1	HOPPER UNIT:PH:	100-000-8769-00	4D-12408
51- 1	HOPPER UNIT:WH:	000-069-3549-18	4D-13556
60- 1	CHUTE UNIT:DISCHARGE:	000-119-8632-01	4D-35987
60- 2	CHUTE UNIT:MD:	000-151-3452-08	4D-47151
60- 3	ACCESSORY:CHUTE:	000-128-1907-01	4D-35221
60- 4	ACCESSORY:MD:	000-124-8483-15	4D-39839
70- 1	REMOTE CONTROL BOX UNIT::	100-019-2161-00	4D-48219
70- 2	REMOTE CONTROL BOX AS::	100-019-0647-00	4D-49191
70- 3	PRINTER BOX AS::	000-145-4207-14	4D-31474
71- 1	COVER UNIT:REMOTE CONTROL:	000-107-4601-08	4D-32300
71- 2	SWITCH UNIT:EMERGENCY:	000-099-3655-45	4D-35400
80- 1	RELAY UNIT::	000-135-1905-01	4D-13927
81- 1	PS-0 UNIT::	100-021-0812-00	4D-51255
84- 1	CAL UNIT::	000-117-1261-05	4D-32613
85- 1	HARNESS UNIT::	000-139-6572-11	4D-42810
86- 1	PS-2 UNIT::	000-135-3549-06	4D-32381