



MA10 Mini 3D Printer



User's Manual

CONTENTS

SAFETY WARNINGS AND GUIDELINES	3
INTRODUCTION	4
FEATURES	4
CUSTOMER SERVICE	5
PACKAGE CONTENTS	5
PRODUCT OVERVIEW	6
INSTALLATION	7
SETUP	8
OPTIONAL WI-FI SETUP	12
SOFTWARE INSTALLATION AND SETUP	13
INSTALLING Cura	13
Repetier-Host	17
TECHNICAL SUPPORT	18
REGULATORY COMPLIANCE	19
NOTICE FOR FCC	19
EU DECLARATION OF CONFORMITY	20

SAFETY WARNINGS AND GUIDELINES

- Be careful not to damage the PC paper on the build plate.
- Take care to avoid touching hot parts, including heat blocks, extruder nozzle, extruded filament, and the heated build plate.
- Do not wear gloves when operating or repairing to avoid entanglement.
- Keep the printer and all accessories out of reach of children.
- Do not remove or disconnect the USB cable when printing from a computer.
- Do not pull or twist the black cable at any time.
- Do not force or tear anything during unpacking and setup. This may cause damage to the printer and/or its accessories.
- Do not reach inside the printer during operation.
- Always allow the printer and extruded filament to cool before reaching inside.
- Ensure that the printer is turned off and unplugged from its power source before making repairs or performing service.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- Use only in a well-ventilated area. Do not use in close, confined spaces.

- Prior to operation, check the unit and power cord for physical damage.
- Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.

INTRODUCTION

Thank you for purchasing this 3D printer from MALYAN! This printer features a single extruder, which is capable of printing in PLA, ABS, and other materials. You can print from a Windows® or Mac® PC using a USB connection or can print from 3D model files stored on a memory card, without the need for a PC connection of any kind. This printer is easy to setup and easy to use following the instructions in this manual.

FEATURES

- Single extrusion print head
- Can print PLA, ABS, wood, Copper Fill, Steel Fill, Bronze Fill, and other materials
- Open frame design for ease of use and maintenance
- Includes a memory card with Cura, Repetier-Host, and a sample 3D model

CUSTOMER SERVICE


The MALYAN Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a MALYAN Customer Service representative through our website <http://malyansys.com> or our email at support@malyansys.com.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact MALYAN Customer Service for a replacement.

- 1x 3D printer
- 1x Filament rack
- 1x Plastic scraper
- 1x USB cable
- 1x MicroSD card
- 4x Hex wrench (2mm, 2.5mm, 3mm, 4mm)
- 5x M5x20 screw
- 5x M4x6 screw
- 1x Open-end wrench (8mm)
- 1x AC power cord
- 1x User's manual


PRODUCT OVERVIEW

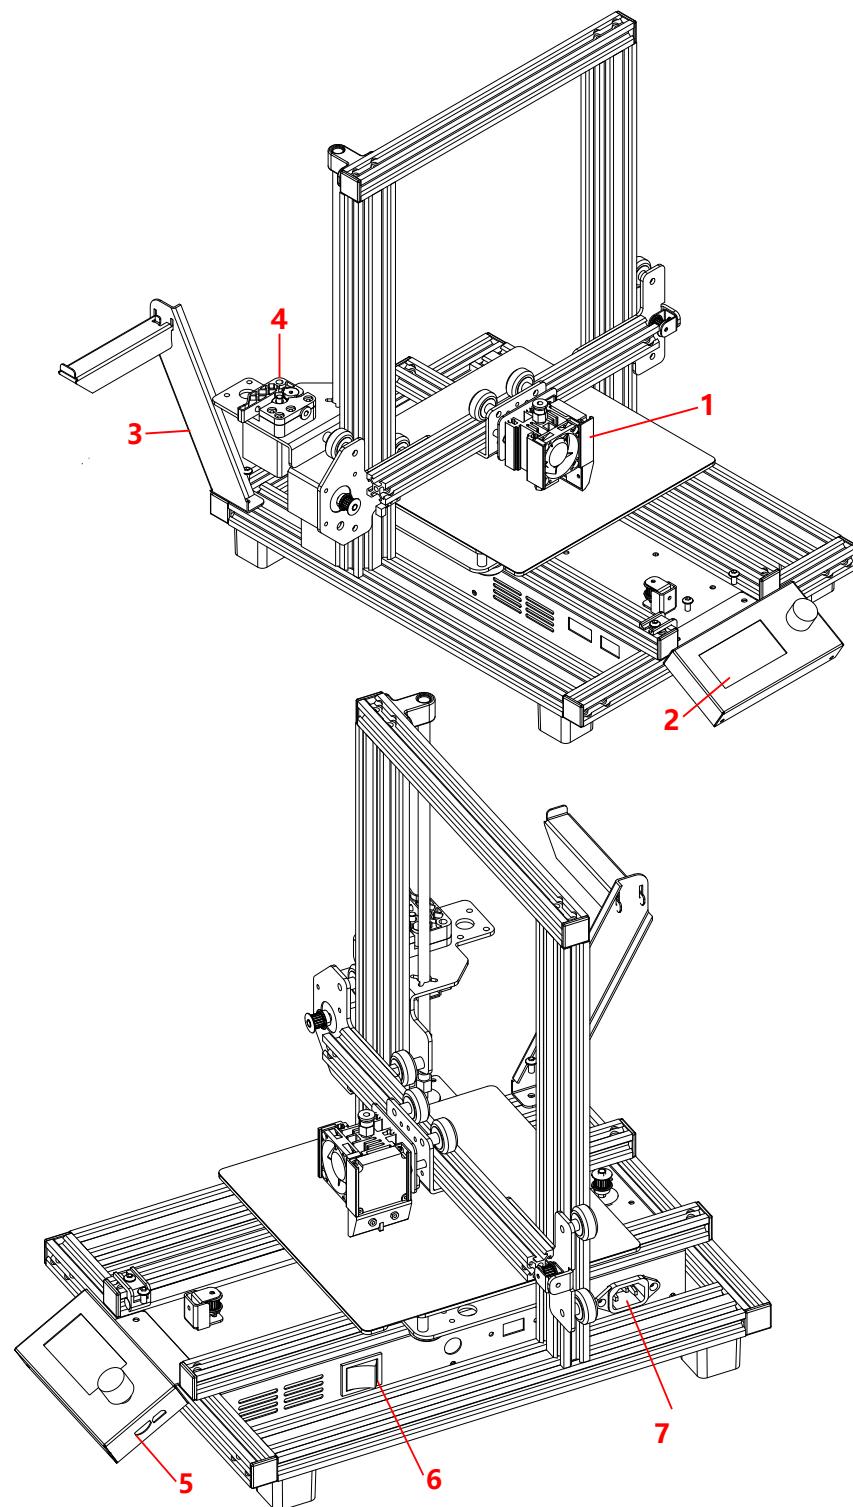

- 1. Extruder
- 3. Filament rack
- 5. Micro USB and microSD™ ports
- 7. AC power connector

- 2. LCD screen
- 4. Feed Mechanism
- 6. Power switch

INSTALLATION

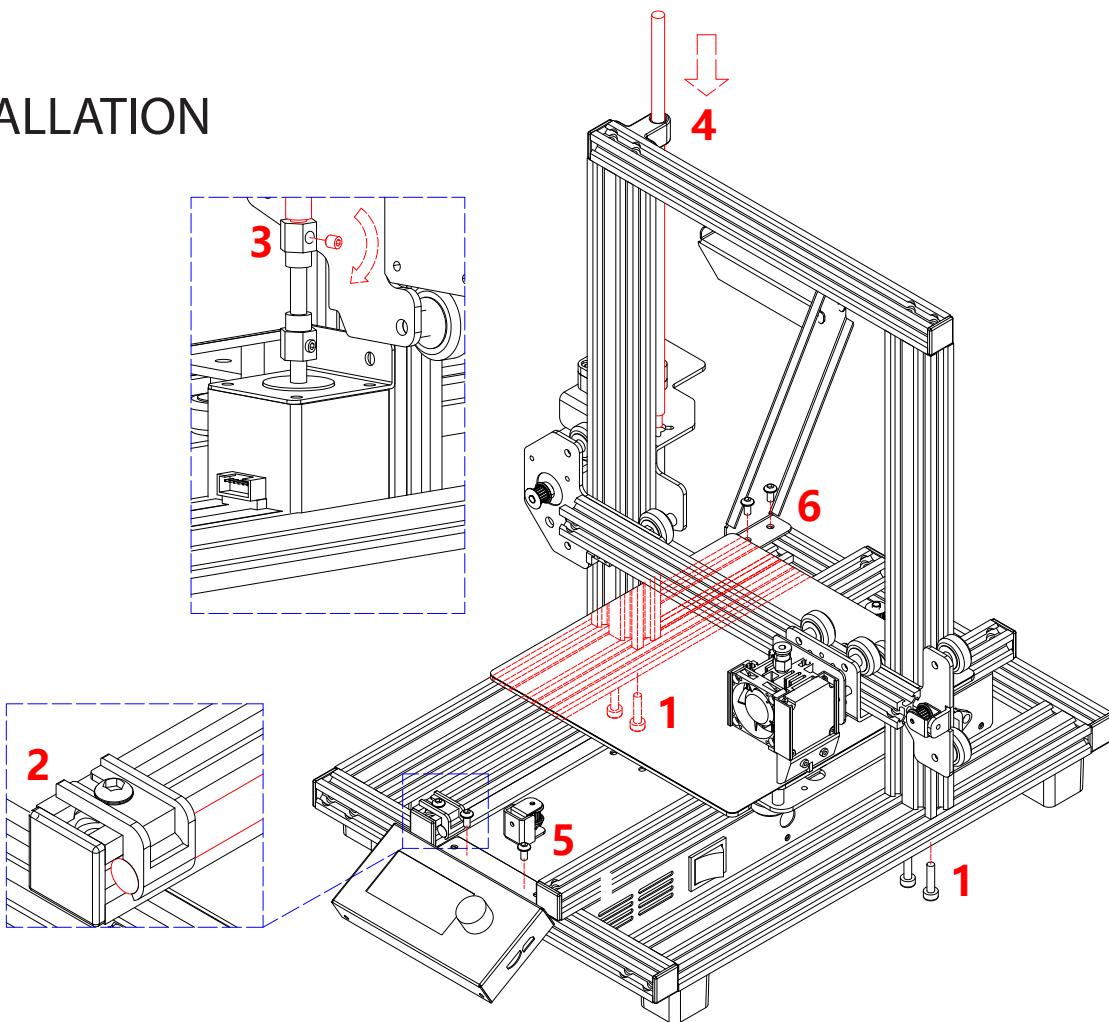

All instructions assume you are looking at the front of the printer during assembly.

1. Use the packaging material to lay the printer on its side so that you can see the holes on the bottom. Position the vertical portion of the frame opposite the holes in the bottom, align the holes on the bottom of the vertical frame with those on the horizontal frame, then use the included 2.5mm hex wrench and 4x M5x20 screws to secure the vertical frame to the horizontal frame (2 screws on each side).

2. Place the printer on its feet so that you have access to both sides.

The Z Axis Lead Screw is stored inside the Left Y Axis Carriage Bar and is secured in place using two plastic brackets. Use the 2.5mm hex wrench to remove the plastic brackets. You will need to move the bed backward to access the rear most bracket. Remove the Z Axis Lead

Screw from the Left Y Axis Carriage Bar, then replace the plastic brackets and tighten the screws to secure them in place.

3. Using the included 3mm hex wrench, loosen the screw in the top of the motor coupling, so that the Z Axis Lead Screw can be inserted.
4. Insert the Z Axis Lead Screw through the hole in the top of the frame, then thread it through the hole on the extruder housing until the unthreaded portion of the screw is fully inserted into the motor coupling. When it is properly inserted, the top will be flush with the frame. Tighten the screw loosened in the previous step to secure the Z Axis Lead Screw to the motor.
5. Using the 2.5mm hex wrench and 2x M4x6 screws, fix the LCD Display Module to the printer frame. Insert the plug into the back of the module.
6. Align the t-nuts in the frame with the holes on the filament holder, then using the 2.5mm hex wrench and 2x M4x6 screws, secure the filament holder to the frame.
7. Mount the extruder hotend to the bracket on the X Axis Gantry by aligning the positioning rods and magnets. Ensure that the cables are on top.
8. Plug the three cable connectors into the appropriate connections on the front left side of the Left Y Axis Carriage, beneath the Z Axis Lead Screw storage location referenced in step 3 above.

SETUP






Warning! Take care not to remove or damage the printing surface on the build platform. This paper is essential to ensure the 3D model properly adheres to the build platform during printing.

Perform the following steps to prepare the printer for use.

1. Put the printer on a flat, stable surface with plenty of ventilation and a nearby AC power outlet.
2. Ensure that the Power Switch is in the OFF position. Plug the included AC Power Cord into the AC Power Connector jack on the right side of the

printer, then plug the other end into a nearby AC power outlet. Flip the Power Switch to the ON position.

3. Insert the included memory card into the slot on the right side of the LCD module, the main menu will display on the screen.
4. Press the center of control wheel and the contents as the following picture will display on the screen. Please rotating the control wheel clockwise to choose the Change SD card if No SD card show on the screen instead of Print from SD.
5. Rotating the control wheel clockwise to move the highlight to Prepare, press the center of control wheel to enter the menu.
6. Rotating the control wheel clockwise to move the highlight to Auto home, the printer will move the extruder to the home position automatically.
7. Check the distance between nozzle and platform, if it is incorrect, please rotating the screw on the bottom of four corners of the platform to adjust the height of platform.
8. Rotating the control wheel counterclockwise to move the highlight to Main, press the center of the control wheel to back to the previous menu. Rotating the control wheel clockwise to move the highlight to the Control and press the center of the control wheel to enter the menu.

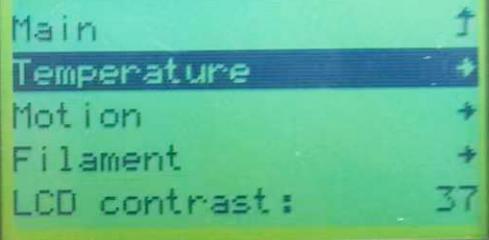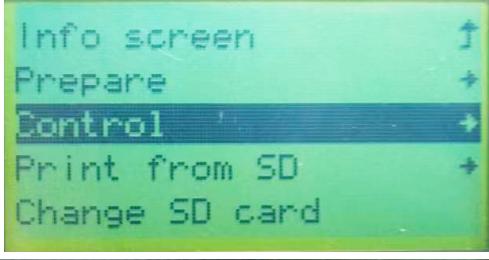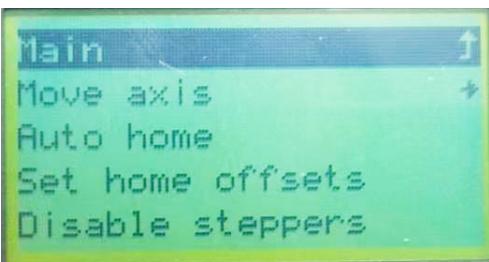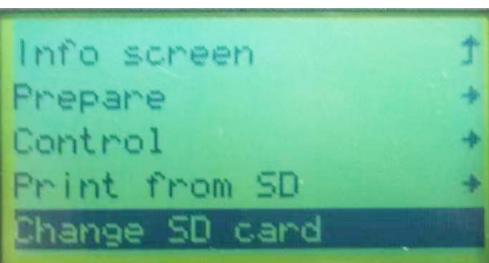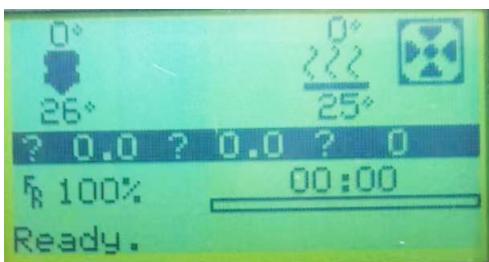

9. Rotating the control wheel clockwise to move the highlight to Nozzle and press the center of control wheel to enter the menu, Rotating the control wheel to set the temperature of the nozzle to your target value, it depends on the filament you plan to use. After you set up your target value, press the center of control wheel



10. Using the same procedure, set the Bed temperature to the target temperature for your filament type.


11. Rotating the control wheel counterclockwise to move the highlight to Control, press the center of control wheel to back to the previous menu.

12. While the printer is heating, open your filament. Using a pair of scissors or side cutters, diagonally snip the end of the filament to make a point, as shown in the images below.



13. Place the filament reel on the filament rack on the left side of the printer.

14. While squeezing the lever on the Feed Mechanism, insert the filament and push it into opening. Keep pushing until you feel resistance as it hits the extruder. Release the lever on the Feed Mechanism.

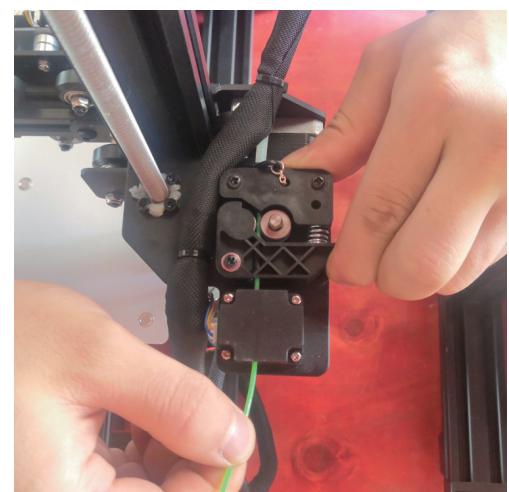

15. Rotating the control wheel clockwise to move the highlight to Print from SD will read the contents of the memory card and display them on screen. Rotating the control wheel to choose the file to start printing the model.



16. When the printing is in progress, compare the first layer with the images in the table below to determine whether the build platform needs to be leveled or not. If it does need adjustment, please rotating the screw on the bottom of four corners of the platform.

Wrong		The nozzle is too far from the platform. This can result in the extruded material not sticking to the build platform.
Correct		The nozzle is at the correct height above the platform.
Wrong		The nozzle is too close to the platform. This can result in damage to the nozzle and build platform.

OPTIONAL WI-FI SETUP

You can connect the printer wirelessly to a 2.4GHz Wi-Fi® network to print models from your Android™ phone or tablet. Perform the following steps to setup the Wi-Fi connection for your device.

1. Open Notepad on your PC to create a new file.
2. Copy the below block of gcode into the empty text file.
3. Replace the SSID in the gcode with your network SSID and the PASSWORD in the gcode with your network's password. Your password cannot contain any semicolons.
4. Save the file using the filename WiFi.gcode onto a microSD™ card.
5. Insert the microSD card into the card slot on the printer.
6. Select Print from the printer's Main Menu. The printer will read the contents of the microSD card.
7. Locate and select the WiFi.gcode file. Once the printer centers the print head, the process has been completed and your printer should connected to your Wi-Fi® network.

Notes:

1. You may have difficulty connecting to the Wi-Fi® network if you have a 2.4GHz and 5GHz network with the same SSID. Try changing the SSID of the 5GHz network if this occurs. For best results, move the printer to a location closer to the Wi-Fi router or access point.
2. The printer cannot use both a Wi-Fi and USB connection.

Gcode Block

M106 S0 ; turn fan off in case it was already on

M106 S200 ; turn fan on to signify start

G28 X Y ; home X & Y to signify start

;

;

M550 SSID

M551 PASSWORD

;

;

G1 X150 Y150 F1000 ;CENTER bed to signify completion

M106 S0 ; turn fan off to signify completion

M84 ; disable motors

Note that in the above gcode block, there are four lines that start with a semicolon. The 1st, 3rd, and 4th lines have a single space after the semicolon and the 2nd line has two spaces after the semicolon. These spaces must be present, so do not use a text Teditor that strips trailing spaces.


SOFTWARE INSTALLATION AND SETUP

As you've seen, you can print a model directly from a gcode file on a microSD™ card and this is the preferred method, as it does not require a continuous connection to your computer. You can download gcode files to the microSD card and print them without having to build any model files. However, you can create your own gcode files using an open source program, such as Cura or Repetier-Host, which are pre-installed on the microSD card that comes with the printer. These programs use 3D models (typically .STL or .OBJ files) and, using machine specific information, generate a gcode file with detailed instructions for the printer to create the selected model. We recommend you start with Cura, since it includes a Slicing Engine.


INSTALLING Cura

1. Use a card reader to read the contents on the included microSD™ card. Locate and double-click the Cura_4.0.0.exe file to start the setup program.


2. Click the Next button on the Welcome screen, then click the I Agree button on the License Agreement screen.

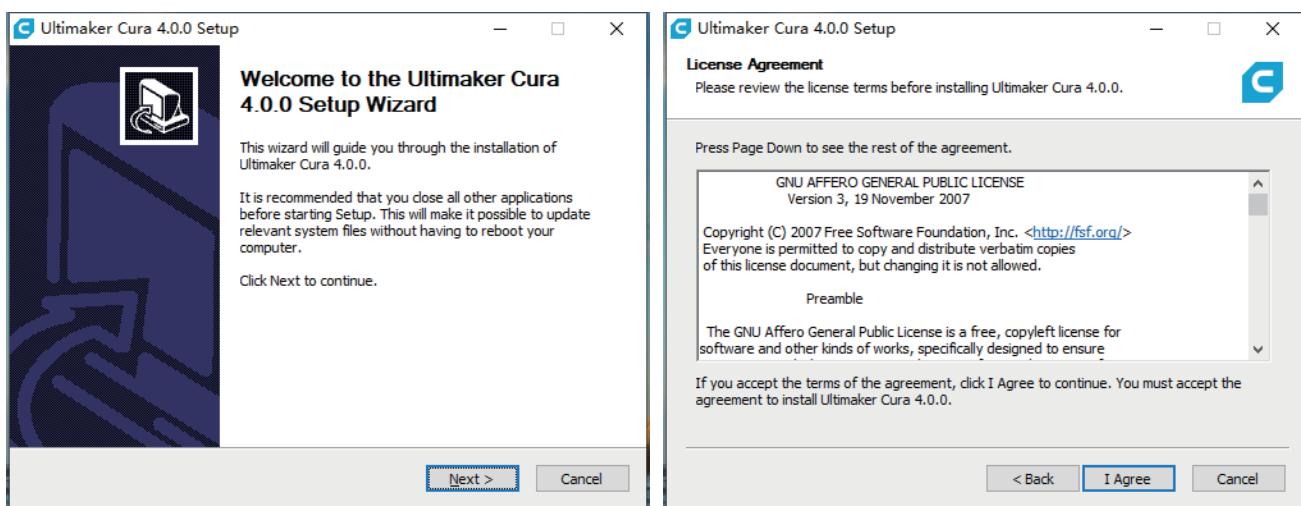


3. Use the file browser to select an install directory or accept the default directory (recommended). Click the Install button to continue.

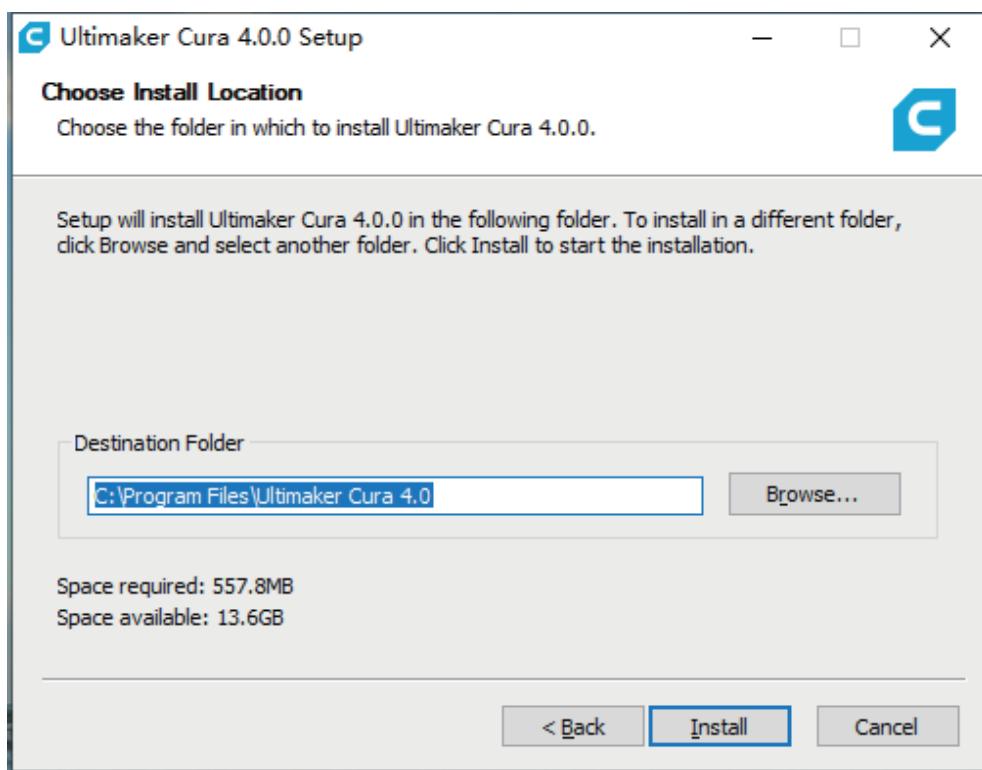


4. The program will start installing.

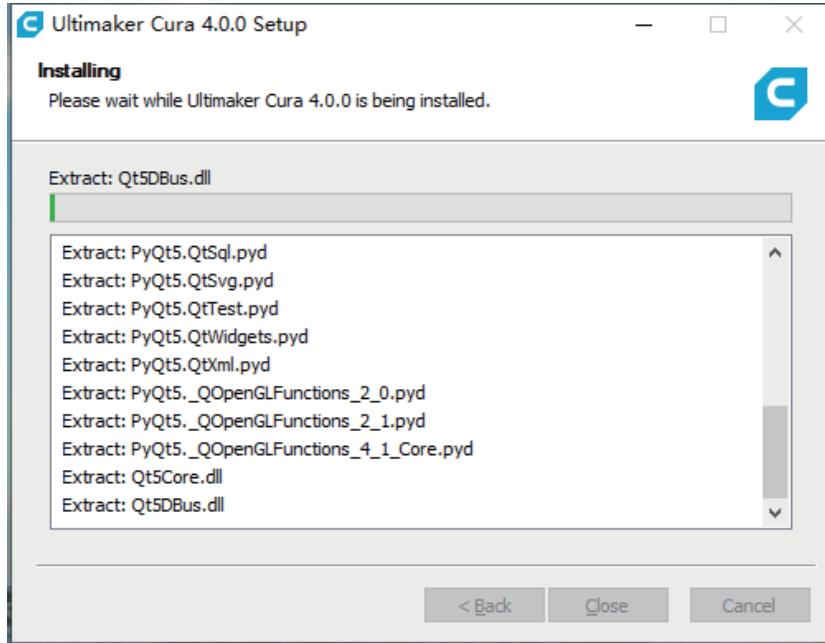

5. Click Close to complete the installation and launch the Cura program.

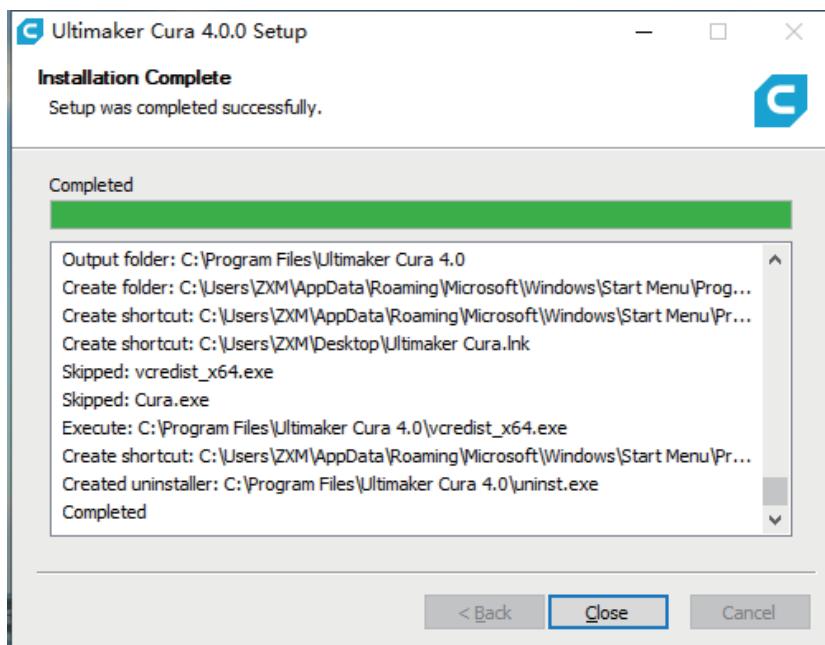


6. Click Settings > Printer > Add Printer...

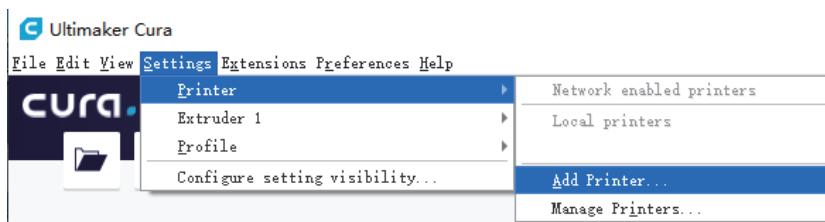


7. Click the Other option, then choose the MALYAN MA10 Mini entry.

Click the Add Printer button to continue.


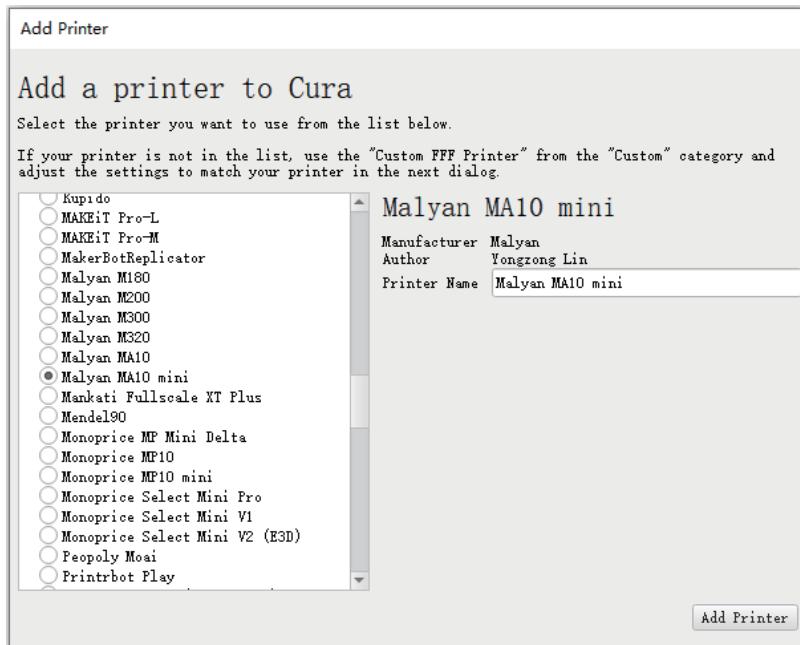



8. The Machine Settings screen will be displayed. Click the Close button to finish the Cura installation.

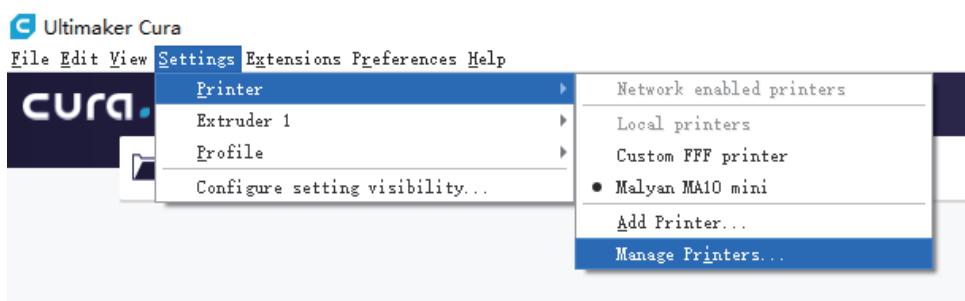

Repetier-Host

You can also install Repetier-Host from the file on the included microSD™ card. The screenshots below show the proper Repetier-Host settings to use for this printer.

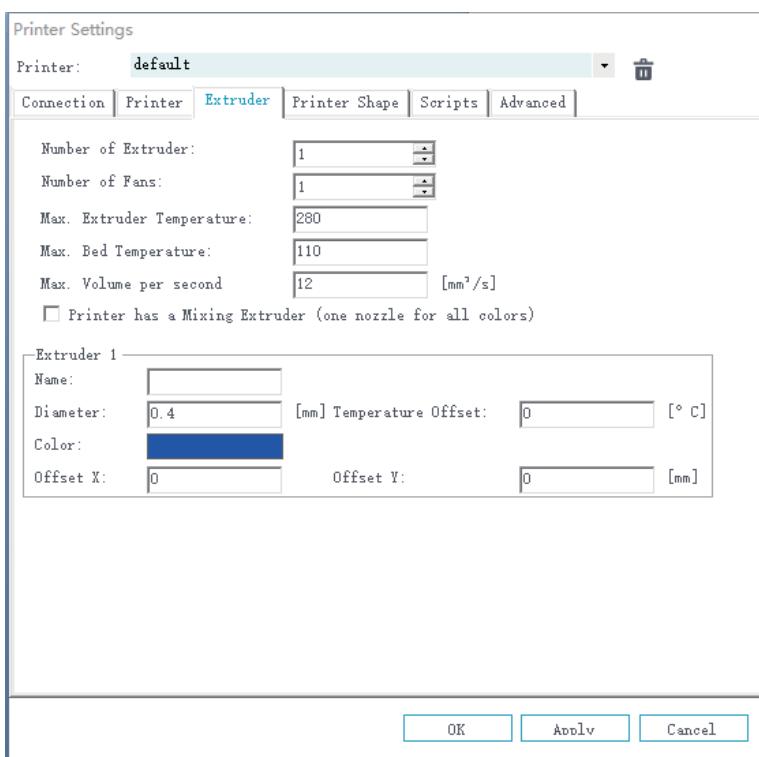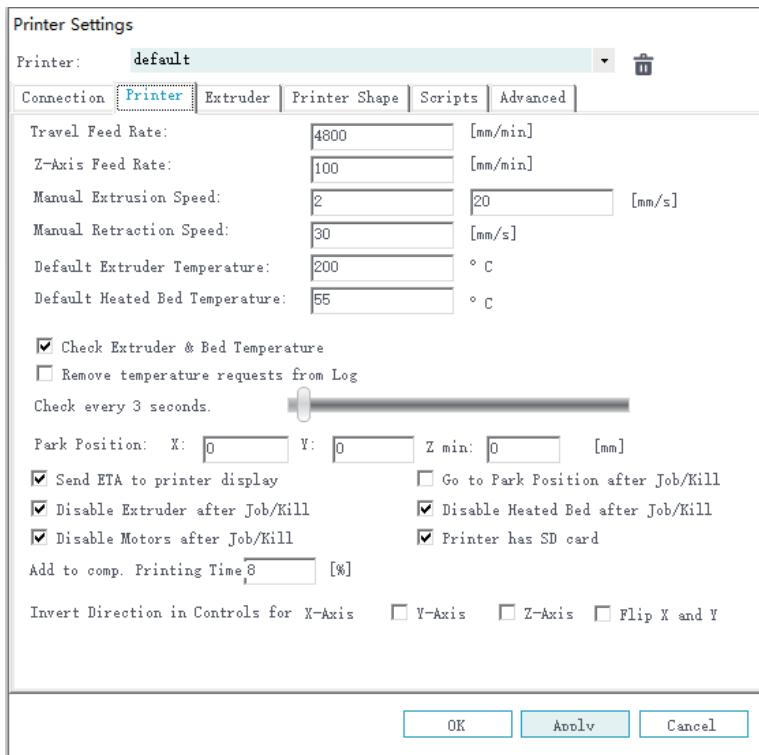

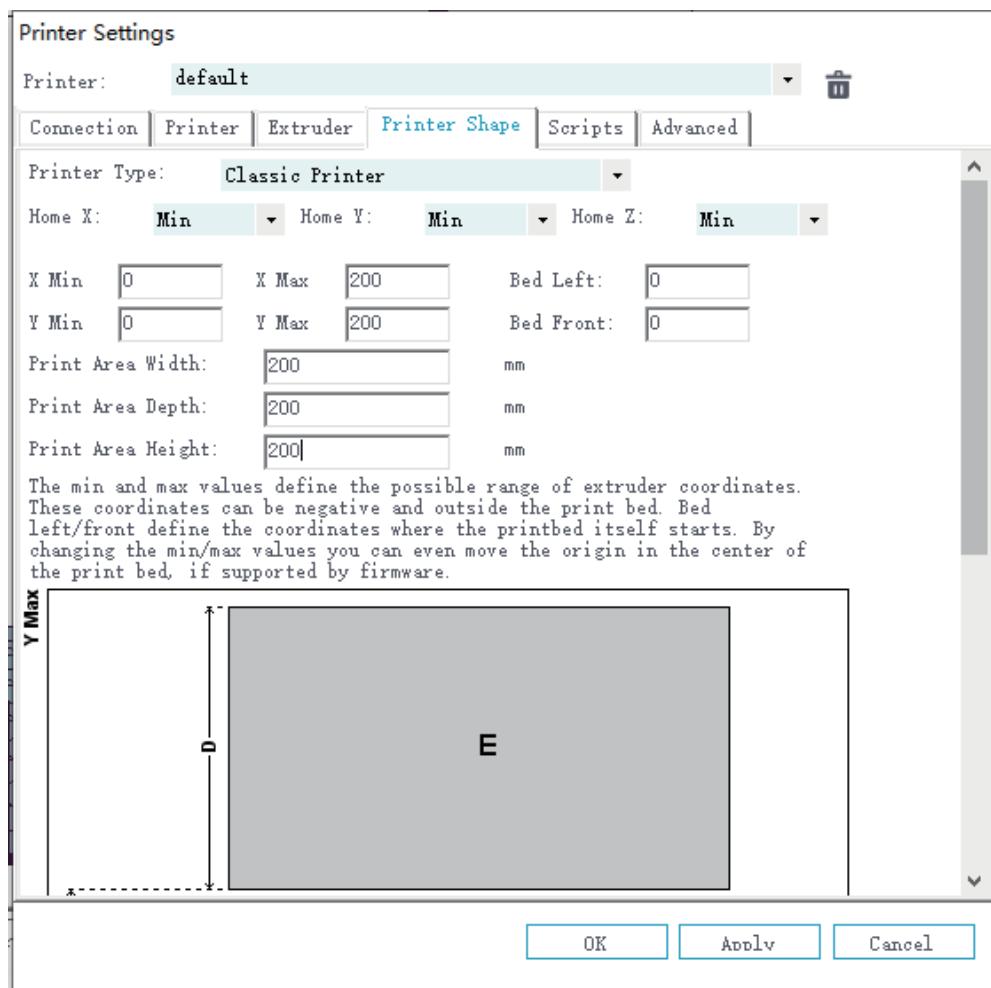

TECHNICAL SUPPORT

MALYAN is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through our website <http://malyansys.com> or through email by sending a message to support@malyansys.com.

REGULATORY COMPLIANCE

NOTICE FOR FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifying the equipment without MALYAN's authorization may result in the equipment no longer complying with FCC requirements for Class A digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.



EU DECLARATION OF CONFORMITY

MALYAN, Inc. declares the product described within this user guide or manual is in compliance with below applicable directives. The full text of the EU Declaration of Conformity is available at the following internet address: <http://malyansys.com/product/ma10mini/> or the CE DoC can be found within this user manual.

- EMC Directive 2004/108/EC
- Low Voltage Directive 2014/35/EU
- RoHS2 Directive 2011/65/EU
- WEEE Directive 2012/19/EC
- Packaging & Packaging Waste Directive 94/62/EC
- REACH Directive 1907/2006/EC