

FULL GUIDE - OFFLINE DANTE XML EDITING

# Dante Config Editor 2026.1

Full user guide

This tool began as an attempt to provide what I personally was missing in Dante Controller: review an entire configuration quickly, correct discrepancies, and prepare a preset offline.

|                                                                                       |                                                                                   |                                                                            |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| One overview<br>Latency, sample rate, network, IP, clock, and channels on one screen. | Consistent renaming<br>Recognized references follow renamed devices and channels. | Offline preparation<br>Review, merge, and edit before official validation. |
|---------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------|

Unofficial third-party tool. It does not connect to the Dante network. Always keep the original and validate the final XML in Dante Controller.

Public project: [github.com/Mamat79/Dante-Config-Editor](https://github.com/Mamat79/Dante-Config-Editor)

## How to use this guide

The guide now follows the normal offline workflow. Each chapter identifies the screen to open, the action to perform, and the checks to complete before moving on.

| Step | Topic               | Expected result                                                   |
|------|---------------------|-------------------------------------------------------------------|
| 1    | Startup             | Install, open, or create a project without altering the original. |
| 2    | General settings    | Review the project, target devices, and apply profiles.           |
| 3    | Per-device settings | Edit identity, network, audio, and Rx/Tx labels.                  |
| 4    | Patch               | Inspect, create, trace, or remove subscriptions.                  |
| 5    | Project composition | Merge XML, duplicate devices, and use banks.                      |
| 6    | Import / Export     | Exchange labels, reports, patchbooks, and synoptics.              |
| 7    | Validation          | Compare, save, recover, and review the XML.                       |
| 8    | Advanced tools      | Create an Atomic Bomb exercise and access help.                   |

Screenshots use an anonymized synthetic preset. Numbers and markers added to images are for guidance only.

## 1. Start safely

Important: this is a third-party tool, not an official Audinate product. It edits XML files offline without connecting to a Dante network or using an Audinate API. Keep the original and validate the generated file in Dante Controller before production use.

The Windows x64 installer includes the application and the required .NET 8 runtime. A separate .NET installation is normally not required.

- The default location is Program Files, with Start menu and desktop shortcuts.
- A 2026.1 installation uses its own AppId, Program Files folder, shortcuts, and local profile so it can coexist with V3.6.
- 2026.1 may copy V3.6 settings into its own profile but never modifies the V3.6 profile in place.
- The 45 templates from DCE Generic Roles 2026.1 and DCE Community Devices 2026.1 are bundled with the application. The wizard may also create shareable copies in a chosen folder without replacing the personal bank.
- Two self-contained 2026.1 DMGs are built on macOS for Apple Silicon and Intel. They include the 2026.1 banks in the Machine Banks folder, and their separate bundle can coexist with V3.6.
- All four French and English PDFs are installed and remain available from the application.
- At startup, DCE quietly checks GitHub Releases. When an update is available, it offers the matching installer, verifies its SHA-256, and launches it only after confirmation. The same check is available under Help > Check for updates.

### Safety principles

- Work on a copy of the exported XML and use Save as.
- The guard tracks devices by stable technical identity, blocks unknown paths, and protects Dante IDs, mediaType, and instance\_id.
- Safe saving: DCE validates a temporary file first. The source and any existing destination receive a copy in DanteConfigEditor\_Backups before replacement.
- A successful import into Dante Controller is the final validation before operation.

### Open or create a project

Click Open XML, choose the file, then review device, TX/RX channel, and active subscription counts. XML files with a default namespace are supported. The first launch uses the light theme; the last selected theme and language are then restored automatically.

## 2. Project and general settings

Windows and macOS organize work by intent: Project, Overview, Devices, Patch, Import / Export, Validation center, History, and Advanced tools. The bank is available directly from Devices.

- The top bar keeps the active file, Save as, Undo, and Redo available.
- The right inspector follows the last device selected in Devices, Patch, or Easy patch and keeps that context when changing pages.
- Navigation, settings, and inspector start expanded; one persistent arrow hides or reopens each area.
- Matrix, Easy patch, Rx-to-Tx list, and Synoptic share stable identities and one session.
- The Validation Center separates internal DCE checks from manual Dante Controller validation.
- Dante XML remains the official exchange file; a .dceproj additionally stores DCE layout, notes, assets, and history.

Every screenshot in this guide is generated with the 2026.1 interface, an anonymized synthetic preset, and the sanitized public bank. No production XML is used.

## Screen map

The top bar opens, merges, saves, undoes, and restores the project. The Project column stays visible for counters, alerts, and search.

| Screen                     | Main purpose                                                                         |
|----------------------------|--------------------------------------------------------------------------------------|
| Overview                   | Counters, audio formats, network, clock, alerts, and latest changes.                 |
| Devices                    | Selected device, channels, quick lists, global actions, and device table.            |
| Patch > Matrix             | Rx/Tx grid, link navigation, detached window, drag, 1:1, zoom, and rename.           |
| Patch > Easy patch         | Selection and 1:1 range tools with immediate apply and optional replacement warning. |
| Patch > Rx-to-Tx list      | Tabular subscription review and editing with filters and detailed state.             |
| Import / Export > Labels   | JSON/CSV, DMT XLSX/ODS, A&H,, and Yamaha exchange with an import report.             |
| Import / Export > Reports  | TXT/PDF reports, TXT/CSV patchbooks, and a simple text topology.                     |
| Import / Export > Synoptic | Locations, order, visibility, zoom, reset, and SVG/PDF exports.                      |
| Validation center          | Errors, warnings, information, XML paths, navigation, and report export.             |
| History                    | Changes, XML comparison, user guides, logs, and diagnostics.                         |
| Advanced tools             | Atomic Bomb: configurable, undoable, offline troubleshooting exercises.              |

## Choose the right workflow

DCE keeps the open XML as the working baseline. Choose the command that matches your goal; the workflows below separate Dante roles, bank templates, and physical devices.

| Goal                          | Start                    | Recommended workflow                                                          |
|-------------------------------|--------------------------|-------------------------------------------------------------------------------|
| Review or correct a preset    | Project > Open Dante XML | Overview > Devices or Patch > Validation center > Save as.                    |
| Merge two installations       | Open the main XML        | Add XML to project > resolve conflicts > review references > Save as.         |
| Reuse a device type           | Device in the project    | Save to device bank > make labels generic > Add from bank in another project. |
| Create a copy in this project | Device in the project    | Duplicate > choose a unique name > retain only the required properties.       |
| Prepare an offline project    | Project > New project    | Choose an initial role > add bank roles > patch > validate > save.            |


### Role, template, and physical device

- A Dante role is a position in a preset. Dante Controller can assign it to the original device or to another compatible device.
- A bank template is a sanitized reusable role: it contains no hardware device\_id, IP address, or reference to the source project.
- Duplicating a role or renaming an identity conflict creates a generic offline role; DCE never invents a fake hardware identifier.
- DCE validation protects XML structure. Final role assignment and hardware checks take place in Dante Controller.

Recommendation: keep the XML exported by Dante Controller unchanged, work on a copy, and use Save as for every significant scenario.

## Adapt the workspace

Navigation, settings, device list, and inspector panes start expanded. Their arrows remain visible when collapsed so every pane can be reopened immediately.

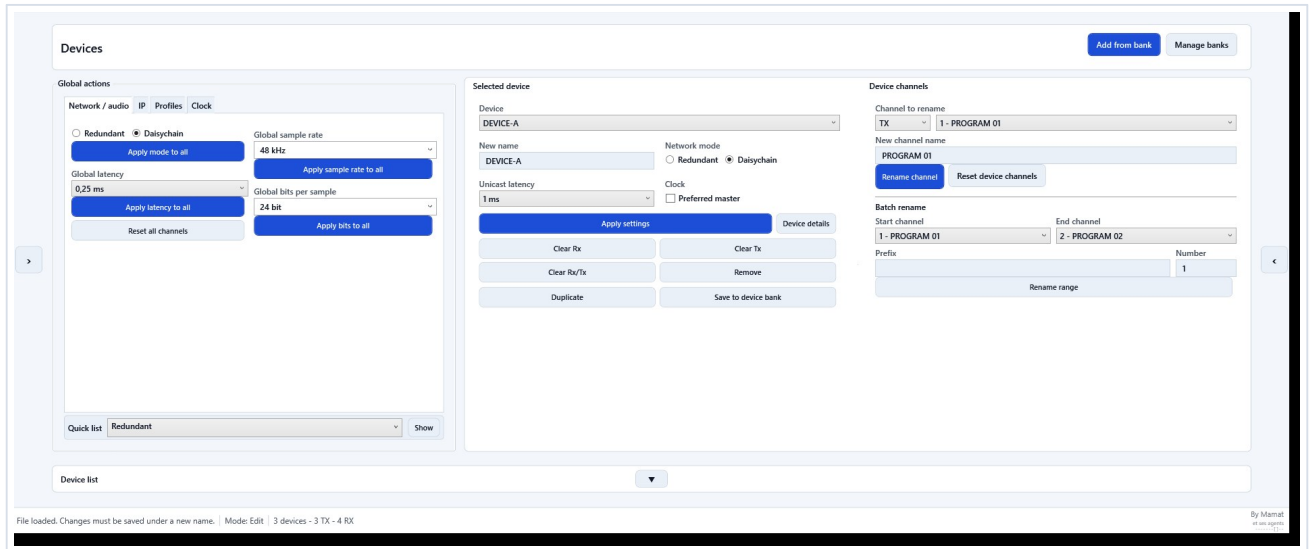

Example with both side panes collapsed: the central workspace grows while the reopen controls remain available.


## The essentials on one screen

The Overview page addresses the software's original need: review an entire preset quickly without opening each Dante Controller page in turn.

Spot issues  
Colored rows and the side banner highlight important discrepancies.

Target safely  
Filters, multiple selection, and locks define exactly which devices are affected.

Review  
Before / after lets you inspect every change before saving.

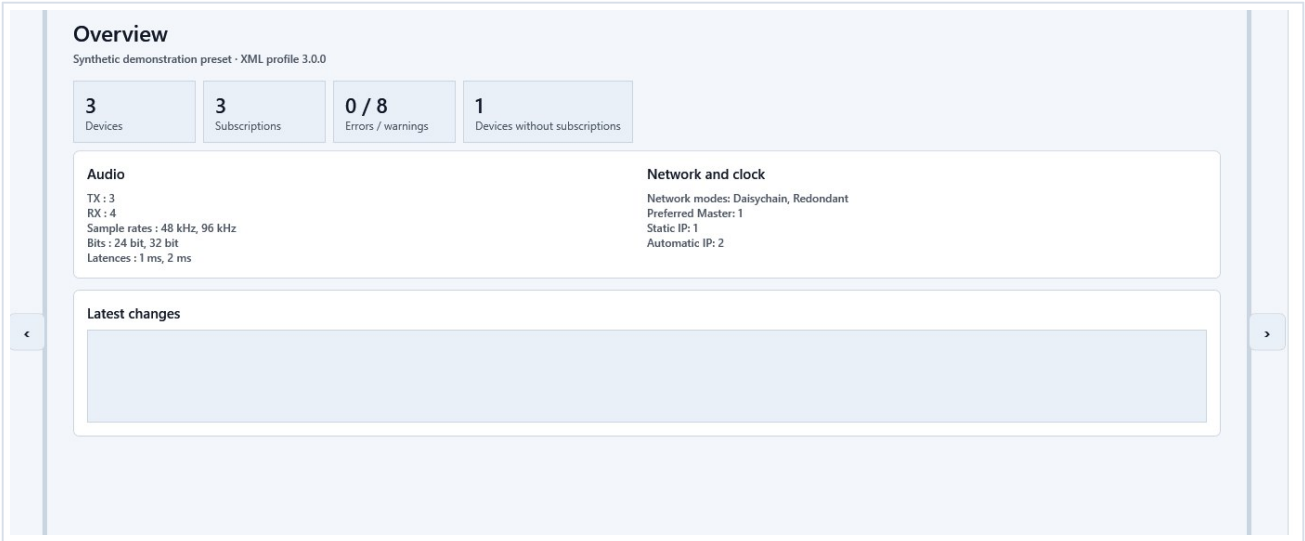

Overview: counters, audio formats, network, clock, and latest changes on one screen.

## General settings, alerts, and profiles

The Items to check banner reports mixed redundant/daisychain modes, static IPs, multiple sample rates, and multiple bit depths.

- Click Show devices, choose an alert, then review the filtered devices.
- After correcting an item, verify that the alert disappears and review the Validation center.


### Quick profiles

| Profile                             | Applied settings                 |
|-------------------------------------|----------------------------------|
| 48 kHz / 24 bit / 1 ms              | Automatic IP                     |
| 48 kHz / 24 bit / 2 ms              | Automatic IP                     |
| 96 kHz / 24 bit / 1 ms              | Automatic IP                     |
| 96 kHz / 24 bit / 2 ms              | Automatic IP                     |
| 48 kHz / 24 bit / 1 ms / Redundant  | Redundant mode and automatic IP  |
| 48 kHz / 24 bit / 1 ms / Daisychain | Daisychain mode and automatic IP |

Verify that every device supports the requested sample rate, bit depth, latency, and network mode.

## Quick profiles and global actions

A global action affects only the displayed target: all unlocked devices, the unlocked selection, or the current filter. Always review the target before confirming.

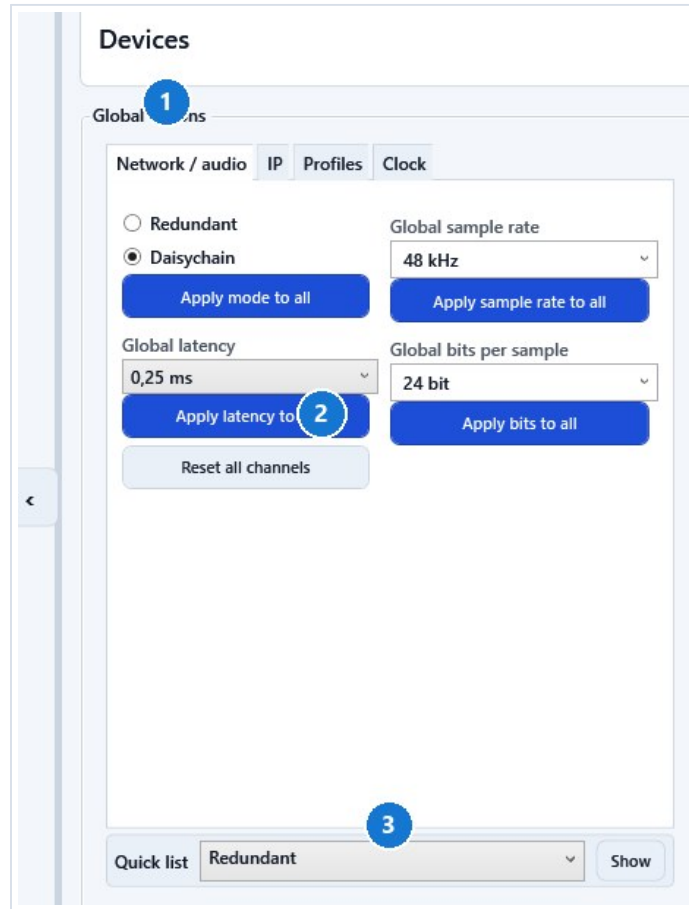

1 Network/audio, IP, Profiles, and Clock tabs; 2 compact Quick list bar; 3 target and locking controls.

### Apply a profile

- Open Global actions > Profiles, choose a profile, then select Apply profile.
- Before / after reviews the initial and resulting states for every device that was actually affected.
- Profiles set sample rate, bit depth, latency, and automatic IP; the last two also set Redundant or Daisy-chain.
- A locked device is always excluded. Undo restores the previous state as one operation.

A profile cannot verify physical hardware capabilities. Check the supported rates, latencies, and network modes.

### 3. Per-device settings and channels

The Devices page combines the template bank, quick lists, global actions, the selected device, its channels, and the complete device table.

#### Selected device

- Apply the name, network mode, latency, and Preferred Master state together with Apply settings.
- Double-click a row or use Device details to edit IP settings, sample rate, bits per sample, TX/RX names, and subscriptions for its Rx inputs.
- A technical setting is available only when its element already exists in that Dante role. Hovering a disabled command explains why; DCE does not invent a missing capability.
- A complete Device details change is grouped into one model rebuild.
- Clear actions can disconnect Rx inputs, remove subscriptions using Tx channels, or do both.
- Deleting a device also removes subscription points that reference it.

#### Device table

- Multiple selection defines the Selected unlocked target. The Lock column protects devices from global actions.
- The complete list starts collapsed behind the Device list bar. Its persistent arrow expands it; fallback scrolling remains available on small displays.
- Preferred Master can be toggled directly in the expanded list.
- Add from bank and Manage banks directly open the global deduplicated list of 45 templates with their source. The personal and bundled banks remain separate.

#### Search, filters, and global actions

- Search finds devices, channels, and subscription references after at least two characters.
- The compact Quick list bar below Global actions displays network modes, latencies, sample rates, bits, static IPs, or Preferred Masters without occupying several rows of buttons.
- Tooltips wrap onto multiple lines: keep the pointer still over a command to read the full explanation, including when the command is disabled.
- Modified only shows changed devices; Before / after lists every difference.
- Choose all unlocked, selected unlocked, or visible unlocked devices. The target remains visible before application.

## Edit a device without leaving the workflow

Device details combines the essential settings and lets you move directly to another device from the top menu.

|                                                                     |                                                            |                                                                                         |
|---------------------------------------------------------------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| <b>Identity</b><br>Device name, network mode, and Preferred Master. | <b>Audio</b><br>Latency, sample rate, and bits per sample. | <b>Network</b><br>Automatic or static primary IP without changing secondary interfaces. |
|---------------------------------------------------------------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------|

1 device settings; 2 selected Tx/Rx channel; 3 range rename.

- The RX then TX tabs rename individual channels.
- Rx patch reviews or disconnects subscriptions received by the device.
- Apply validates the complete edit as one grouped operation; Cancel leaves the XML unchanged.

## IP and audio formats

- Automatic or static IP is editable per device or through a global action.
- Only the primary IPv4 interface, network=0 when available, is targeted. A secondary interface is not changed.
- DNS is not rewritten implicitly. Gateway changes only when the action provides a value.
- Sample rate and bits per sample are editable per device, globally, or through a profile.
- Global actions skip devices without the compatible element and report how many devices were excluded.

Incorrect settings can make a device unreachable or incompatible. Verify actual hardware capabilities.

## Rename Rx and Tx channels quickly

Direct rename works in Configuration, Device details, Patch, and Easy patch. For a Tx channel, DCE also updates every recognized subscription that uses the old name.

Add from bankManage banks

1

device channels

Channel to rename

TX

1 PROGRAM 01

2

New channel name

PROGRAM 01

Rename channelReset device channels

Batch rename

Start channel

3

1 - PROGRAM 01

End channel

2 - PROGRAM 02

Prefix

Number

1

4

Rename range

1 choose Rx or Tx and a channel; 2 enter the name; 3 choose the range; 4 set prefix and starting number.

### Editing shortcuts

| Key          | Action                                                              |
|--------------|---------------------------------------------------------------------|
| Enter        | Validate the name without leaving the current cell.                 |
| Tab          | Validate and open the next channel.                                 |
| Shift + Tab  | Validate and open the previous channel.                             |
| Escape       | Cancel the current edit or fill operation.                          |
| Ctrl / Shift | Extend a channel selection in Easy patch.                           |
| Mouse wheel  | Scroll; use the dedicated zoom controls in the matrix and synoptic. |

## Extend a numbered series like a spreadsheet

The fill handle appears only when the final characters form a number at the end of the label. Drag it to the last required channel; a preview displays the resulting series before release.

| Starting name | Handle  | Result                              |
|---------------|---------|-------------------------------------|
| Mic 4         | Visible | Mic 5, Mic 6, Mic 7...              |
| Mic 04        | Visible | Mic 05, Mic 06, Mic 07...           |
| Wireless 12   | Visible | Wireless 13, Wireless 14...         |
| Mic           | Hidden  | No trailing number found            |
| Mic 4 main    | Hidden  | The name does not end with a number |

- All text before the final number is preserved exactly.
- The number may contain several digits and leading zeroes are retained.
- Fill works in Rx/Tx lists and in the Easy patch matrix.
- Escape cancels the preview. No label changes until the handle is dropped on a valid target.
- One Undo operation restores the complete series.

Important: the trailing number belongs to the label. DCE never renumbers technical Dante IDs.

## Channels and patching principles

- TX/RX channels can be renamed individually or by range with {00}, {000}, {n}, and {device}.
- Renaming a Tx channel updates every recognized subscription alias in the project.
- In Rx/Tx lists, click the name, then press Enter to validate, Tab to validate and move forward, Shift+Tab to move backward, or Escape to cancel the edit.
- In the Easy patch matrix, click a vertical Tx label to rename it. Enter, Tab, Shift+Tab, and Escape behave exactly as they do in the lists.
- The fill handle appears only when the name ends with a number. Mic 4 and Mic 04 can be extended; Mic, Mic left, and Mic 4 main cannot.
- Fill keeps the text before the number and any leading zeroes: Mic 04 becomes Mic 05, Mic 06, and so on. Cancelling the drag changes no channel.
- Dante IDs are not renumbered. The local subscribed\_device="." marker is preserved.
- The Easy patch tab shows Rx channels on the left and Tx channels on the right. Menus and arrows switch devices quickly.
- Select equal Tx and Rx counts for one-to-one mapping, or one Tx to feed several Rx channels.
- Several Tx channels to one Rx and unequal multiple selections are blocked.
- Range patching requires a first Tx, first Rx, and exact count; an incomplete range is blocked as a whole.
- A click or drag immediately applies the affected crosspoints, with no preview step.
- Clicks and drags update only the affected cells: the entire matrix is no longer rebuilt after every action.
- Selections, ranges, and PATCH 1:1 are also applied immediately.
- Warn me when the Rx channel is already patched is selected by default. Clear it only to replace a subscription without that warning.
- In the compact matrix, Rx channels are rows and Tx channels are columns. Click for one assignment, or hold and drag horizontally, vertically, or diagonally for a safe range.
- Each immediate operation remains reversible with Undo.
- In Device details, the top menu switches devices and protects unapplied changes.

| Starting name | Handle  | Result                    |
|---------------|---------|---------------------------|
| Mic 4 [drag]  | Visible | Mic 5, Mic 6, Mic 7...    |
| Mic 04 [drag] | Visible | Mic 05, Mic 06, Mic 07... |
| Mic left      | Hidden  | No fill action offered    |

## 4. Patch: inspect and correct a subscription precisely

Every row represents one Rx channel and its Tx source. Patch is the most precise view for filtering, reviewing local or external sources, replacing a subscription, or removing it.

MatrixEasy patchRx to Tx list

Rx receiver filter

All receivers  
DEVICE-A  
DEVICE-B  
DEVICE-C

Tx transmitter filter

All transmitters  
DEVICE-A  
DEVICE-B  
DEVICE-C

Search device or channel

State filter  
All Rx channels

Tx source to apply  
DEVICE-A

Tx channel to apply

View  
Simple

Apply

Remove

| Rx device | Rx Dante ID | Rx channel | TX device        | TX Dante Id | Tx channel | Status      |
|-----------|-------------|------------|------------------|-------------|------------|-------------|
| DEVICE-A  | 1           | INPUT 01   | LOCAL / DEVICE-A | 1           | PROGRAM 01 | Patch local |
| DEVICE-B  | 1           | INPUT 02   | DEVICE-A         | 1           | PROGRAM 01 | Patch actif |
| DEVICE-B  | 2           | INPUT 03   | DEVICE-A         | 2           | PROGRAM 02 | Patch actif |
| DEVICE-C  | 1           | INPUT 04   |                  | -           |            | Libre       |

☐ Show conflicts only 4 rows - 3 active - 1 local - 0 warning(s) - 0 conflict(s)

a new name. | Mode: Edit | 3 devices - 3 TX - 4 RX


Rx/Tx filters on the left, source selection at the top, and the complete Rx-to-Tx result in the table.

|                                                                        |                                                                                          |                                                                      |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| Simple<br>Shows Rx device/ID/channel, Tx device/ID/channel, and state. | Expert<br>Adds raw source, resolved source, type, active, modified, and complete source. | Local<br>The “.” source means the Rx device itself and is preserved. |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------------|----------------------------------------------------------------------|

- Rx receiver and Tx transmitter filters reduce the table without changing XML.
- Select an Rx row, choose its Tx device and channel, then select Apply.
- Remove disconnects only the selected Rx row.
- A source device missing from a partial preset may be intentional: understand the warning before replacing it.
- Direct Rx and Tx column rename supports Enter, Tab, Shift+Tab, and series fill.

## Easy patch: visual and immediate patching

Easy patch always shows Rx channels for the receiving device on the left and Tx channels for the transmitting device on the right. Menus and arrows move quickly between devices.

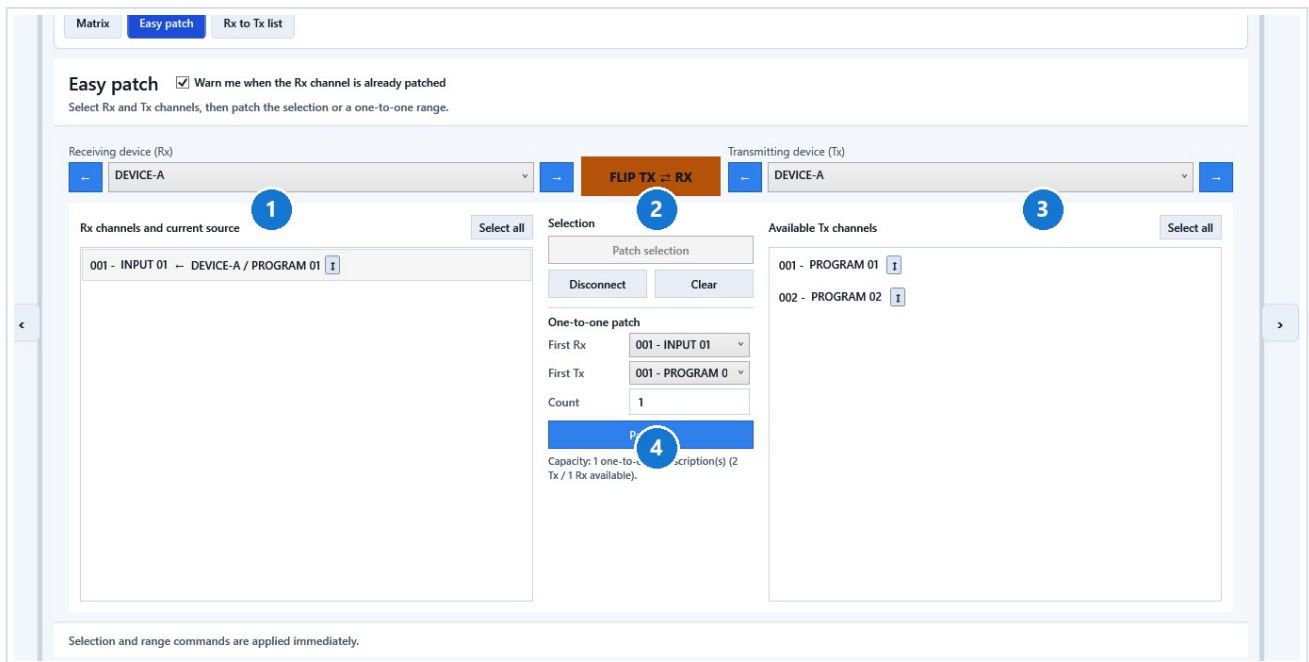


1 Rx device; 2 FLIP exchanges only the displayed roles; 3 Tx device; 4 selection, range, and Patch 1:1.

FLIP does not reverse subscriptions. It only exchanges the two selected devices so you can inspect or create subscriptions in the opposite direction.

## Easy patch: click, drag, range, and PATCH 1:1


| Gesture           | Result                                                                 |
|-------------------|------------------------------------------------------------------------|
| Click one cell    | Immediately applies that Tx source to that Rx channel.                 |
| Drag horizontally | Advances from the starting Tx across columns on one Rx row.            |
| Drag vertically   | Feeds several consecutive Rx channels from one Tx source.              |
| Drag diagonally   | Creates Tx1>Rx1, Tx2>Rx2, and so on.                                   |
| Rx/Tx selection   | Equal counts: one-to-one. One Tx: distribution to several Rx channels. |
| PATCH 1:1         | Click the first intersection, select the count, then apply the series. |

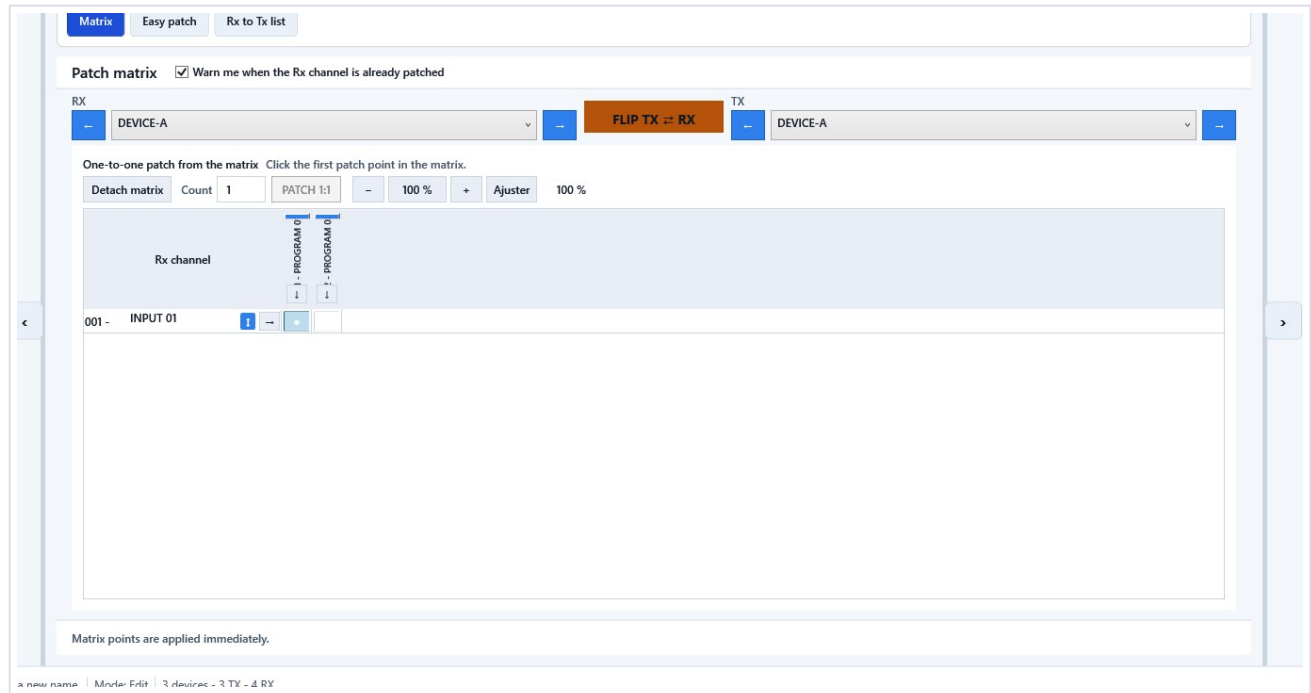

Compact matrix: Rx channels are rows, Tx channels are columns, and every click or drag is applied immediately.

- Every click or drag changes the project immediately; there is no preview batch waiting to be applied.
- Warn me when the Rx channel is already patched is enabled by default. Clear it only when you accept replacement without confirmation.
- A selection containing several Tx and Rx channels must contain equal counts.
- Several Tx channels into one Rx or unequal multiple selections are rejected.
- Rx and Tx labels are directly editable. Tab, Shift+Tab, Escape, and the series handle remain available.
- The button on an Rx row locates its Tx source, selects the transmitting device, and highlights the intersection.
- The button below a Tx header lists every Rx destination. Select one to display and highlight its intersection.
- Detach matrix opens a large window that retains the Rx/Tx selectors, FLIP, PATCH 1:1, and zoom.
- The wheel and -, 100%, +, and Fit controls adjust matrix zoom.
- Undo restores the last immediate operation.

## Trace a connection directly in the matrix

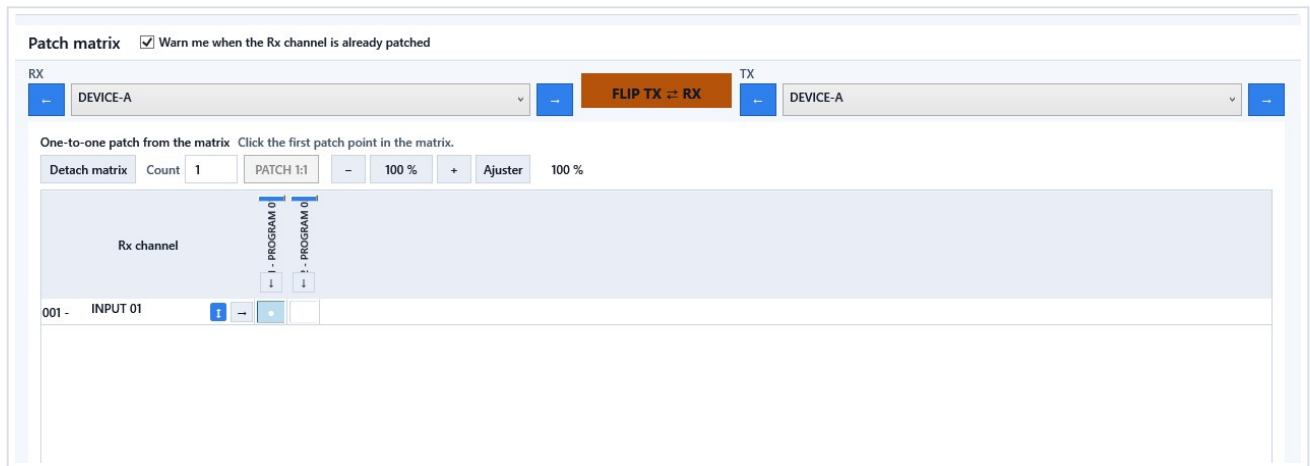

Fill handles stay next to labels. Targeting arrows border the grid: an Rx arrow finds its Tx source, while a Tx arrow lists its Rx destinations.

- On an Rx row, use the arrow immediately before the grid to display the source Tx device and highlight the crosspoint.
- Below a Tx label, use the arrow immediately above the grid to choose an Rx destination.
- The small fill handle remains next to the label and appears only when that label ends with an extendable number.

## **Add XML to project**

- DCE compares names and technical identities before changing the open project.
- Import unique only retains the existing role when it represents the same identity and redirects imported subscriptions to it.
- Automatic or manual rename retains a second role but makes it generic: its hardware instance\_id/device\_id is not copied.
- Imported subscriptions follow the final selected name or the reused existing role.

## 5. Build a project: add another XML file

This command merges roles described by a second preset. It differs from adding from the bank: the second XML retains its compatible role structure and internal subscriptions, while DCE protects hardware identities that cannot be duplicated.

| Step                     | What DCE does                                                                          |
|--------------------------|----------------------------------------------------------------------------------------|
| 1. Open the main project | This XML remains the session and save baseline.                                        |
| 2. Add XML to project    | DCE loads and validates the second file without modifying its original.                |
| 3. Verify format         | Preset version and namespace must match.                                               |
| 4. Detect conflicts      | DCE reports a used name or the same device_id/process_id pair, even when names differ. |
| 5. Choose the result     | Reuse the existing role, or rename to create a second independent generic role.        |
| 6. Adapt references      | Imported subscriptions follow the reused role or the selected new name.                |
| 7. Review                | The result separates added, reused, renamed, and skipped roles.                        |

Import unique only: when the same technical identity already exists, DCE keeps the current role and redirects second-XML subscriptions to its name. Rename: DCE imports a generic role without copying instance\_id/device\_id, network interfaces, multicast flows, or Preferred Master.

- DCE does not generate fake EUI-64 values. A new hardware identity belongs to the physical device to which Dante Controller assigns the role.
- The generic role retains compatible structure, labels, role settings, and subscriptions that can be resolved in the merged project.
- The automatic suffix is customizable and normalized without parentheses.
- Invalid XML, a different preset version, or a different namespace blocks the complete merge.
- A final name that is already used blocks the operation instead of producing an ambiguous duplicate.
- The merge can be undone. Review the Validation center and Before / after before Save as.

This follows the Dante preset model: a saved role can be assigned in Dante Controller to its original device or another compatible device. Audinate documentation: [dev.audinate.com/GA/dante-controller/userguide/webhelp/content/applying\\_presets.htm](https://dev.audinate.com/GA/dante-controller/userguide/webhelp/content/applying_presets.htm)

## Understand the device bank

A bank contains reusable offline role templates. It is not a live network inventory and does not contain deployable Dante hardware identities.

| Action               | Source                     | Result                                                       |
|----------------------|----------------------------|--------------------------------------------------------------|
| Duplicate            | Device in the open project | Independent new device in the same project.                  |
| Save to device bank  | Device in the open project | Sanitized, versioned, reusable template.                     |
| Add from device bank | Bank template              | Independent new instance in the open project.                |
| Add XML to project   | Second XML preset          | Compatible devices and references added to the open project. |
| New project          | Minimal structure and bank | 3.0.0 XML to review before operation.                        |

### Removed from a template

- instance\_id, device\_id, and other hardware identities from the source instance;
- network addresses and interfaces from the source project;
- subscriptions, patches, and flows tied to other devices;
- Preferred Master and project-specific values not explicitly selected.

### Retained when appropriate

- manufacturer, model, category, description, tags, and image;
- compatible role structure and Tx/Rx channel counts;
- generic Tx/Rx labels that remain editable before insertion.

## Manage device banks

Device bank

Bundled sanitized demonstration bank

Displayed banksAll banks - 43 unique templates

Duplicate templates use the version from your active bank.

Search

ManufacturerAll

CategoryAll

Min. Tx

Min. Rx

| Bank                     | Bank template                 | Manufacturer     | Hardware model          | TX | RX | Category            |
|--------------------------|-------------------------------|------------------|-------------------------|----|----|---------------------|
| My bank                  | Dante 64x64                   | Allen & Heath    | Dante 64x64             | 64 | 64 | Audio network card  |
| My bank                  | Dante AVIO Analog Input 2x0   | Audinate         | AVIO-DAI2               | 2  | 0  | Adapter             |
| My bank                  | Dante AVIO Analog Output 0x2  | Audinate         | AVIO-DAO2               | 0  | 2  | Adapter             |
| My bank                  | Dante AVIO USB 2x2            | Audinate         | AVIO-USB                | 2  | 2  | Adapter             |
| My bank                  | Dante AVIO Bluetooth          | Audinate         | Dante AVIO Bluetooth    | 2  | 1  | Adapter             |
| My bank                  | Dante Virtual Soundcard 64x64 | Audinate         | Dante Virtual Soundcard | 64 | 64 | Software interface  |
| My bank                  | Arcadia Central Station       | Clear-Com        | Clear-Com Arcadia       | 64 | 64 | Intercom            |
| My bank                  | DS10 Audio Network Bridge     | d&b audiotechnik | DS10 Audio Network Brid | 4  | 16 | Audio network bridg |
| DCE Generic Roles 2026.1 | DCE Generic 32x32             | DCE              | Generic 32x32           | 32 | 32 | Générique / Formati |
| DCE Generic Roles 2026.1 | DCE Generic 8x8               | DCE              | Generic 8x8             | 8  | 8  | Générique / Formati |
| My bank                  | DI4.1000                      | Fohhn            | DI-AMP DAN              | 0  | 4  | Amplifier           |
| My bank                  | AOIP22                        | GlenSound        | AOIP22                  | 2  | 2  | Audio interface     |
| My bank                  | Beatrice D8                   | GlenSound        | Beatrice D8             | 32 | 32 | Intercom            |
| My bank                  | Beatrice D8+                  | GlenSound        | Beatrice D8+            | 32 | 32 | Intercom            |
| My bank                  | Beatrice R16                  | GlenSound        | Beatrice R16            | 32 | 32 | Intercom            |
| My bank                  | Bella 4                       | GlenSound        | Bella4                  | 0  | 4  | Audio interface     |
| My bank                  | Divine                        | GlenSound        | Divine                  | 4  | 4  | Monitor             |
| My bank                  | Virgil 1                      | GlenSound        | Virgil 1                | 0  | 2  | Audio interface     |
| My bank                  | D 80:4L                       | Lab Gruppen      | D 80:4L                 | 8  | 8  | Amplifier           |
| My bank                  | PLM 20K44                     | Lab Gruppen      | PLM 20K44               | 0  | 8  | Amplifier           |
| My bank                  | LM 44                         | Lake             | LM 44                   | 8  | 4  | Processor           |
| My bank                  | T Series                      | Powersoft        | T Series                | 0  | 4  | Amplifier           |
| My bank                  | PRT666D                       | RAMI Audio       | PRT666D                 | 4  | 8  | Audio interface     |
| My bank                  | RU-LB4                        | RDL              | RU-LB4                  | 4  | 4  | Audio interface     |
| My bank                  | Digiface Dante                | RME GmbH         | Digiface Dante          | 64 | 64 | Audio interface     |
| My bank                  | EM 6000 Dante                 | Sennheiser       | EM6000-Dante            | 4  | 0  | Wireless receiver   |
| My bank                  | Spectera Base Station         | Sennheiser       | Spectera BaseStation    | 32 | 32 | Wireless system     |

Add to project

Edit

Duplicate template

Delete

Import template

Export template

Export bank

Import bank

Close



Dante 64x64

Allen & Heath - Dante 64x64 - Audio network card

64 TX / 64 RX - preset 3.0.0

Sanitized offline role for Dante 64x64, 64 Tx / 64 Rx. Hardware identifiers, network settings, flows and subscriptions are never reused.

Tags: dLive, Avantis, Dante, 64x64

Label preview

TX

001 TX 01

002 TX 02

003 TX 03

004 TX 04

005 TX 05

006 TX 06

007 TX 07

008 TX 08

009 TX 09

010 TX 10

011 TX 11

012 TX 12

Search and filters on the left, template and label preview on the right, add and exchange actions at the bottom.

## Create, share, and reuse a device bank

| Need              | Procedure                                                                                                                                                                     |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Create a template | Select the device > Save to device bank > replace project-specific labels with generic labels > enter metadata > Save.                                                        |
| Add an image      | Choose PNG, JPEG, or WebP. The image is copied into the template folder, so the source file can later be moved.                                                               |
| Browse banks      | Devices > Manage banks opens all 45 templates without duplicates. The Displayed banks filter isolates the personal or a bundled bank, while the Bank column shows its source. |
| Share the bank    | Export bank creates a verified *.dce-bank.zip archive.                                                                                                                        |
| Install a bank    | Import bank and choose a new or empty folder. DCE never silently replaces an existing bank.                                                                                   |
| Add to project    | Select the template > Add to project > choose a unique name and labels > confirm.                                                                                             |

- Editing an inserted device never changes its bank template.
- Editing the template never changes devices already inserted into projects.
- Version, checksum, namespace, channel counts, and preset version are checked before insertion.
- The 45 bundled GitHub templates are sanitized and installed with the application; a personal bank is never replaced.

After insertion or project creation, reopen the XML, review the Validation center, and import a copy into Dante Controller. A generic role without hardware identity must be reviewed before operation.

## Machine bank and generic roles

These functions edit offline preset roles, not real devices. DCE removes hardware identifiers from the source instance and does not claim to create a Dante device identity.

### Duplicate a device

- Select a device, choose Duplicate, and provide a unique role name.
- TX/RX labels may be retained. Network data, settings, flows, Preferred Master, and subscriptions are disabled by default.
- The source is unchanged. The copy is added as one undoable operation and receives a DCE session identity that is never serialized.

### Save and share a template

- Choose Save to machine bank and enter manufacturer, model, category, description, tags, and generic labels.
- An optional PNG, JPEG, or WebP image is copied into the model folder; no fragile external path is kept.
- The default bank is Documents/Dante Config Editor/Machine Bank. You may choose, open, copy, or place it in a synchronized folder.
- Official banks updated by DCE are stored separately under Documents/Dante Config Editor/Included Machine Banks. They take priority over the fallback copies bundled with the application.
- The window combines all installed banks into one deduplicated list of 45 templates. The selector isolates one bank and the Bank column identifies the source; a personal copy takes priority over a bundled duplicate.
- Export bank creates a verified \*.dce-bank.zip archive. Import bank requires a new or empty folder and never replaces existing data.
- Update banks checks the GitHub catalog, verifies SHA-256, prepares the bank in a temporary folder, and backs up the previous official copy before replacement. GitHub banks opens the public page. The 45 bundled templates contain no hardware identity, network data, flow, or subscription.
- Administration supports search, filters, edit, duplicate, confirmed delete, and model ZIP import/export.

### Add a template to the project

- Choose Add from bank, then configure the new name, labels, and only the options you explicitly need.
- The inserted instance is independent from the template. Editing either one never changes the other.
- DCE checks model version, checksum, channel counts, namespace, and preset version before a transactional insertion.

### New offline project

- New project writes a minimal 3.0.0 structure, either empty or with one initial role from the bank.
- An existing file is never overwritten silently. DCE creates and validates a temporary file before replacing the destination.
- Reopen the XML in DCE, review the Validation center, then perform a control import into Dante Controller.

Technical logs are available from History. They explain import, validation, bank, and export failures without changing the project.

# Create a new offline project

### Experimental new project

The 3.0.0 structure follows custom roles from the official Dante Preset Creator, but still requires a real Dante Controller import before production use.

#### Project

XML file to create

Browse

Project name

Description

#### First device

Source

Custom device

Manage

45 reusable template(s) found across 3 bank(s), including installed templates.

Device name

TX

2

RX

2

Sample rate

48000

Encoding

24

Latency

1000

Create project


Cancel

Choose the destination, project name, and a first custom role or bank template.

Project creation remains an offline workflow. Reopen the XML, review the Validation center, then verify its import in Dante Controller.

## 6. Label Import / Export

The Labels tab centralizes generic, DMT, Allen & Heath, and Yamaha exchange. Native files are created from bundled templates; DCE does not ask for an external template file.

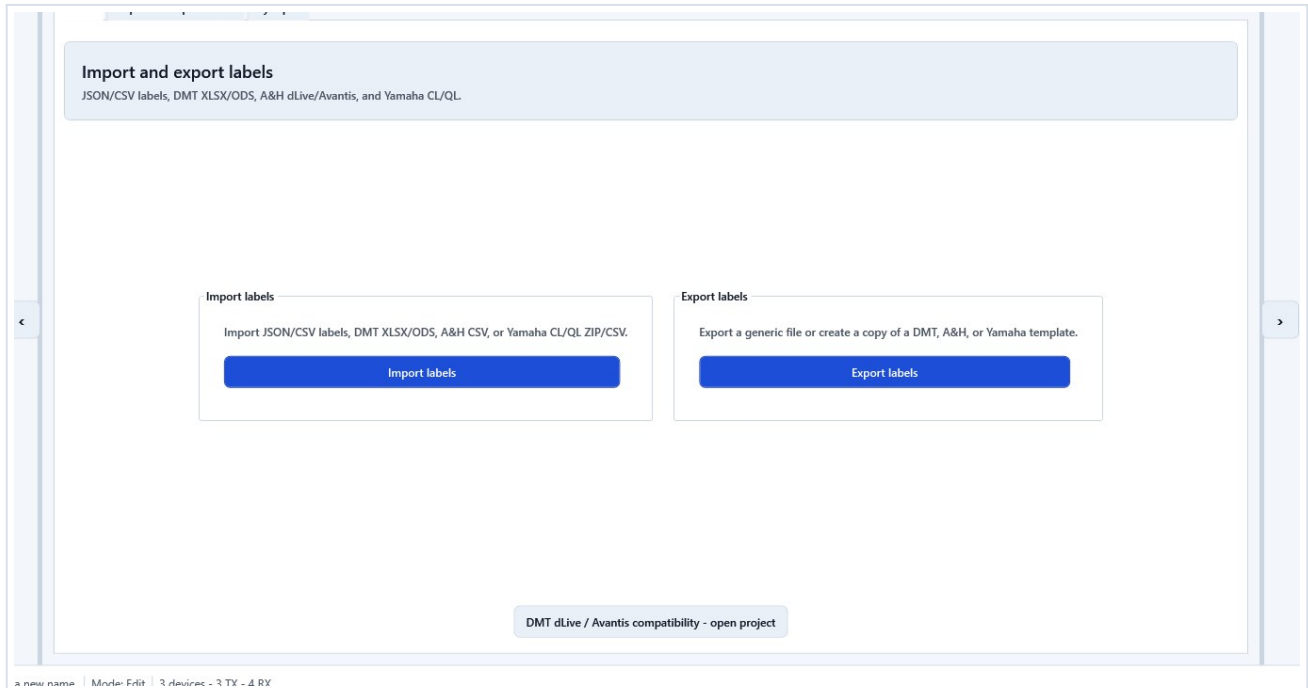

Import is on the left and export on the right. The DMT button opens the associated dLive MIDI Tools project.

- Import: choose the file, review the detection report, associate source lists with devices, and apply only valid changes.
- Export: choose Rx/Tx, devices, range, format, and any required name adaptation, then provide the new output name.
- DMT uses XLSX/ODS or JSON/CSV; dLive and Avantis use their native CSV; CL/QL use the complete native ZIP.
- A second identical import does not enable Apply because labels already match.

## Exchange labels without an external template

dLive, Avantis, Yamaha CL/QL, and DMT templates are bundled with Dante Config Editor. Native export only asks for the new file name and folder.

### Choose the correct format

| Format                       | Destination             | Content                                                       |
|------------------------------|-------------------------|---------------------------------------------------------------|
| Generic JSON / CSV           | DCE or third-party tool | Full Unicode. Do not import into dLive Director.              |
| DMT XLSX/ODS dLive / Avantis | dLive MIDI Tools        | Direct DMT workbook; rows outside the selection are disabled. |
| Native A&H; CSV dLive        | dLive Director          | dLive [Version]/[Channels] structure and Input names.         |
| Native A&H; CSV Avantis      | Avantis Director        | Avantis [Version]/[Channels] structure and Input names.       |
| Native Yamaha ZIP CL / QL    | CL/QL Editor            | Complete nine-CSV package; only InName.csv receives labels.   |

### Workflow

- Under Import / Export > Labels, choose Export labels.
- Choose TX or RX, devices, first channel, and count. A device with RX but no TX automatically switches to RX.
- Choose the native format matching the real model. Devices without channels in the selected direction cannot be checked.
- Review the preview. Enable ASCII/eight-character adaptation only when required, then choose Export.
- DCE opens Save as directly. Output is validated in a temporary file before the destination is replaced, so a failed export does not destroy an existing file.

During import, DCE reports the detected format, source version, lists, devices, channels, ignored rows, empty labels, duplicates, and warnings. Apply requires at least one error-free change. After loading the same labels again, the button intentionally remains disabled and DCE states that the labels already match.

DMT 2.14.0-RC1 JSON/CSV exports are checked with fixtures generated by the DMT exporters at commit 3c34052. XLSX/ODS support continues to target the Channels sheet from observed DMT workbooks.

Before use, always open the generated file in DMT, dLive Director, Avantis Director, or Yamaha CL/QL Editor and verify labels and the selected model.

Bundled DMT workbooks come from Tobias Grupe's MIT-licensed dLive MIDI Tools project. DMT\_LICENSE.txt is included with the application.

## Build and export a synoptic

**Visual synoptic**  
Devices grouped by location, with consecutive subscriptions combined into one cable. 3 devices - 2 grouped cables - 0 hidden

Selected devices location: 1 Assign

| Show                                | Device   | Location | Order | TX/RX |
|-------------------------------------|----------|----------|-------|-------|
| <input checked="" type="checkbox"/> | DEVICE-A |          | 0     | 2/1   |
| <input checked="" type="checkbox"/> | DEVICE-B |          | 1     | 0/2   |
| <input checked="" type="checkbox"/> | DEVICE-C |          | 2     | 1/1   |

2

Zoom: 100 % 100 % Fit Center Location: All locations

Unspecified location

**DEVICE-A**  
Unspecified location  
TX 2 RX 1

**DEVICE-B**  
Unspecified location  
TX 0 RX 2

3

**Grouped subscriptions**

1. DEVICE-A → DEVICE-A  
TX 1 → RX 1 (1 ch)

2. DEVICE-A → DEVICE-B  
TX 1-2 → RX 1-2 (2 ch)

4

☒ Open after export Refresh preview Export synoptic SVG Export synoptic PDF

a new name. | Mode: Edit | 3 devices - 3 TX - 4 RX

1 location; 2 order and visibility; 3 zoomable preview; 4 reset and SVG/PDF exports.

- Select one or more devices, enter or choose a location, then select Assign.
- Within one location, the smallest order number places the device higher.
- Clear Show to hide a device without removing it from the project.
- In the visual editor, drag a device; cables follow. Reset rebuilds a clean automatic layout.
- Consecutive subscriptions are grouped on one range-labelled cable. A link in both directions uses one line with an arrow at each end.
- Zoom, Fit, and the separate preview window help with large projects.
- SVG and PDF are presentation exports. Locations and positions are stored next to the project and never modify Dante XML.

## **Validation, comparison, and Import / Export**

- The Validation center combines statistics, errors, warnings, free/local subscriptions, and compatibility checks.
- XML comparison displays differences in a table.
- TXT/PDF exports include the application version and the By Mamat et ses agents signature.
- Import / Export groups Labels, Reports and patchbook, and Synoptic. The synoptic remembers locations, shows or hides devices, provides a separate preview whose zoom preserves proportions, and exports SVG or PDF; its local layout sidecar never changes Dante XML.

## 7. Review, save, and recover

The Validation center separates blocking errors, warnings, and information. Read the complete row: it identifies the category, affected item, cause, and XML path.

Validation center

13 result(s): 0 error(s), 8 warning(s), 5 information item(s).

XML profile: recognized-complete | Recognition: Complete | Access: Full | Version: 3.0.0

Validation filter

All

Search results

0 blocking error(s)

8 warning(s)

5 information item(s)

DCE internal validation: offline XML structure and consistency. Hardware and live-network behavior must still be reviewed in Dante Controller.

| Level       | Category        | Affected item                  | Message                                                                                  | XML path                                      |
|-------------|-----------------|--------------------------------|------------------------------------------------------------------------------------------|-----------------------------------------------|
| Warning     | Audio format    | Synthetic demonstration preset | Multiple sample rates are present in the preset: 48000, 96000.                           |                                               |
| Warning     | Audio format    | Synthetic demonstration preset | Multiple bit depths are present in the preset: 24, 32.                                   |                                               |
| Warning     | Device          | DEVICE-B                       | DEVICE-B has no TX channel.                                                              | /preset/device[friendly_name="DEVICE-B"]      |
| Warning     | Network         | Synthetic demonstration preset | WARNING: the file mixes 1 redundant device(s) and 2 daisy-chain device(s). Check that th |                                               |
| Warning     | Network         | Synthetic demonstration preset | Static IP detected on 1 device(s): DEVICE-B (192.168.50.20).                             |                                               |
| Warning     | Network         | Synthetic demonstration preset | WARNING: multiple sample rates are present in the preset: 48 kHz (48000), 96 kHz (9600   |                                               |
| Warning     | Network         | Synthetic demonstration preset | WARNING: multiple bit depths are present in the preset: 24 bit, 32 bit.                  |                                               |
| Warning     | Network         | Synthetic demonstration preset | Multiple latencies are present in the preset: 1000, 2000.                                |                                               |
| Information | External review | Synthetic demonstration preset | DCE automatic validation is complete. Hardware behavior, firmware and the live network   | /preset                                       |
| Information | Subscription    | DEVICE-C / RX 1 - INPUT 04     | DEVICE-C / INPUT 04 is unassigned.                                                       | /preset/device[friendly_name="DEVICE-C"]/rxcl |
| Information | Subscription    | DEVICE-A / RX 1 - INPUT 01     | DEVICE-A / INPUT 01 uses the local source ``.                                            | /preset/device[friendly_name="DEVICE-A"]/rxcl |
| Information | Save safety     | Synthetic demonstration preset | XML compatibility: no prohibited change detected.                                        | /preset                                       |
| Information | XML profile     | Synthetic demonstration preset | The file matches DCE's complete recognized XML profile.                                  | /preset                                       |

Warning - Audio format

Multiple sample rates are present in the preset: 48000, 96000.

No safe automatic correction is proposed.

Open item

Export report

a new name | Monte Frit | 3.45virec - 3 TY - 4 RY

Anonymized example: mixed audio formats, mixed network mode, static IP, local subscription, and free Rx.

|                                                                                                       |                                                                         |                                                                                                  |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Validation center<br>Errors, warnings, audio formats, static IPs, local subscriptions, and XML paths. | History<br>Changes, XML comparison, logs, diagnostics, and user guides. | Advanced tools<br>Atomic Bomb, configurable categories, and a key, cover, ARM, LOCK, FIRE panel. |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|

- An error blocks saving; a warning requires review but may describe an intentional condition.
- Items to check > Show devices applies a filter to find affected devices quickly.
- Modified only followed by Before / after reviews the exact scope of the changes.
- History combines changes, XML comparison, logs, diagnostics, and user guides.

## Save and final validation

Use Save as. The temporary XML is reloaded, protected changes are checked, and DCE then replaces the destination. A failure before that replacement leaves the previous destination intact.


| Check            | Recommended action                                                        |
|------------------|---------------------------------------------------------------------------|
| Items to check   | Open affected devices and explain or correct every unexpected difference. |
| Modified only    | Verify that only the intended devices appear.                             |
| Before / after   | Review every changed setting, channel, and subscription.                  |
| Dante Controller | Import the file into a working copy before any field operation.           |

## **Automatic recovery**

After a change, the application waits briefly and writes recovery data in the background without blocking the interface or replacing the source XML.

- When reopening the same XML, choose whether to restore or discard the previous session.
- After Save as, the new file becomes the reference for later edits and recovery data.
- The copy is deleted after saving or reverting; copies older than 30 days are cleaned automatically.

## 8. Advanced tools: prepare an Atomic Bomb exercise

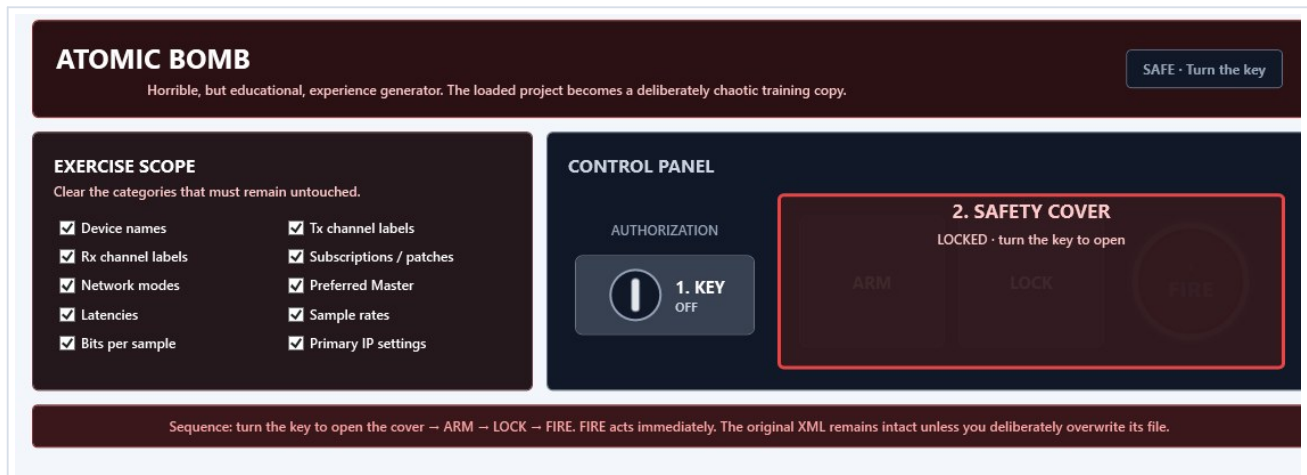

Clear categories that must be preserved. Turn the key to open the cover automatically, then press ARM, LOCK, and FIRE. FIRE immediately changes the in-memory copy.

- Categories cover names, labels, subscriptions, network modes, Preferred Master, latencies, sample rates, bit depth, and primary IP.
- Technical identifiers, namespaces, DNS, gateways, and secondary interfaces remain protected.
- The complete operation is one Undo step.
- The source XML is never overwritten. Use Save as to create the exercise file.

Atomic Bomb does not communicate with any device. The exercise file must still be reviewed in Dante Controller before distribution to trainees.

## Atomic Bomb: create an exercise

- Open Advanced tools, then Atomic Bomb. Clear the categories you want to spare; all are selected by default. Turn the key: the cover opens automatically. Then press ARM, LOCK, and FIRE in order. FIRE applies the exercise immediately.
- The in-memory copy receives unique mythological, audio-themed, or playful names plus a mixture of subscriptions, network modes, Preferred Master states, latencies, sample rates, encodings, and primary IP settings.
- Technical identifiers, namespaces, DNS, gateways, and secondary interfaces remain protected.
- The summary displays the scenario seed. The entire operation is one undo step and the source file is never overwritten.
- Use Save as to provide the trainee preset, then verify its import in the appropriate official Dante tool.

This mode is only for offline training. It does not alter any device or communicate with the Dante network.

## Regression tests

The 2026.1.1 suite runs 435 Core/Windows tests and 22 headless Mac tests. Coverage includes XML guards, rejection of missing technical elements, save and recovery, IPv4 interfaces, subscriptions, large presets, merge reuse and generic-role handling, duplication, the device bank, project creation, .dceproj packages, XML profiles, commands, DMT formats, import reports, synoptic export, Atomic Bomb, Easy patch, verified updates, optional support, and translation consistency.

## Known limitations

- No real-time Dante control and no communication with devices.
- No Audinate SDK/API and no proprietary protocol bypass.
- Compatibility depends on the XML structure; only an official import confirms the final file.
- Undo keeps at most 10 states to limit memory use.
- The matrix displays only the two selected devices to preserve performance on large presets.
- Mac DMGs are ad hoc signed but not notarized; first launch may require right-clicking the application and choosing Open.
- Windows and macOS expose the same main workflows, although some controls retain a slightly different native rendering.
- Duplicate Tx names are ambiguous in Dante subscriptions and must be renamed before using Easy patch.
- Native workbooks match observed DMT 2.13.0 templates and the supplied dLive, Avantis, CL5, and QL5 examples; DMT 2.14.0-RC1 JSON/CSV is tested separately.
- Generic roles duplicated or added from the bank carry no hardware instance\_id/device\_id. Only an actual Dante Controller import can confirm their use with a given version.
- New project writes a minimal 3.0.0 structure. Always review the final file in Dante Controller before operation.

## Help and information

Quick start and Full guide automatically open the French or English PDF for the active language. Public project: [github.com/Mamat79/Dante-Config-Editor](https://github.com/Mamat79/Dante-Config-Editor) - Credit: By Mamat et ses agents.

## Support DCE

Dante Config Editor remains completely free, and every feature is available without contributing.

- The Support DCE button is available in the top banner, while help information remains accessible from History.
- The Support DCE button displays the PayPal QR code for the phone app and a PayPal.Me button for computers; DCE contains no payment system and performs no network request at startup.
- The local reminder does not appear on first launch. It can be postponed for 20 launches or disabled permanently.
- Starring the GitHub project or sharing feedback also helps for free. And if you are truly crazy, you can even do both!

## Help, credits, and optional support

### Support DCE

A completely optional way to support this free project.

A square QR code with a dark blue background and white dots. In the center of the QR code is a large, stylized white letter 'P'.

Dante Config Editor remains completely free, and every feature is available without contributing.

Scan this QR code with the PayPal app on your phone. DCE does not process payments or receive financial information.

You can also help for free by starring the GitHub project or sharing feedback. And if you are truly crazy, you can even do both!

[Open PayPal on this computer](#)[Close](#)

Support is entirely optional. Every DCE feature remains available without contributing.