



PROFESSIONAL USER MANUAL

Dante Config Editor

Complete guide - 2027.1.0

Prepare, review, and transform Dante configurations offline: devices, channels, audio and network settings, subscriptions, preset merging, template banks, and technical deliverables.

Review

Scan latency, sample rate, audio format, network, IP, clock, and alerts at a glance.

Edit without losing patching

Rename devices and channels while recognized subscriptions are updated.

Build offline

Merge XML presets, add templates, and prepare the network before devices are available.

Permanent license: EUR 29 including French VAT, one-time payment.

During the 30-day trial, the reminder can be dismissed immediately. Afterwards, a 60-second countdown precedes full access. Valid activation releases the interface at once. Secure payment through Stripe Managed Payments.

Unofficial third-party tool, independent from Audinate. DCE does not control the live network. Keep the original and review the final XML in Dante Controller.

macOS | Apple Silicon / Intel
www.silemio.com

SiLeMI/O

By Mamat

-----[]--





Interactive contents

Select a chapter to open it. PDF viewer bookmarks use the same structure, and every page provides a direct link back to these contents.

1. Install and update	3
2. License and first launch	4
3. Three ways to work	5
4. Open and inspect XML	6
5. Start without existing XML	7
6. Banks and multiple insertions	8
7. Device selection and identity	9
8. Audio, network, and global actions	10
9. Rename channels and series	11
10. Matrix: immediate patching	12
11. Easy patch and one-to-one patch	13
12. Find sources and destinations	14
13. Merge several installations	15
14. Local StageFlow project	16
15. StageFlow LIVE and label reception	17
16. Map patch entries to Rx	18
17. Synoptic and vector deliverables	19
18. Labels, reports, and patchbook	20
19. Validation, saving, and history	21
20. Atomic Bomb and resets	22
21. Support and final operating checks	23



1. Install and update

In About This Mac, check your processor: select Apple Silicon for an Apple chip, or Intel for an Intel processor. Download the matching DMG from the official public release, open it, and copy Dante Config Editor into Applications.

The package includes its .NET runtime; a separate .NET installation is not required. The package declares macOS 11 as its minimum. This does not mean every macOS version or hardware model has been tested.

Help > Check for updates finds the latest stable version matching your architecture. DCE checks download origin, size, and SHA-256 before opening it. Quit DCE before replacing the application in Applications. Keep your projects and personal bank.

These packages have no Apple Developer ID signature or notarization. macOS may display a warning. Verify the source and checksum before allowing this application in System Settings > Privacy & Security. Do not disable Gatekeeper globally.



2. License and first launch

DCE works independently and offline. During the 30-day trial, the license reminder can be dismissed immediately. Afterwards, a 60-second countdown runs once per process launch, then the application remains fully usable. Valid activation releases the interface immediately.


A permanent license costs EUR 29 including French VAT, paid once through Stripe Managed Payments. Historical DCEP1 and DCEF1 codes remain recognized. New activation-based licenses require a connection for initial activation, then allow offline work.

Before changing computers, use Deactivate this computer when available for your license. Do not delete license files to try to release an activation.

Select Français or English and your theme in the top bar. The first launch uses the light theme; later preferences are retained. This guide illustrates the macOS/Avalonia interface with synthetic projects, not a connected Dante network.



3. Three ways to work

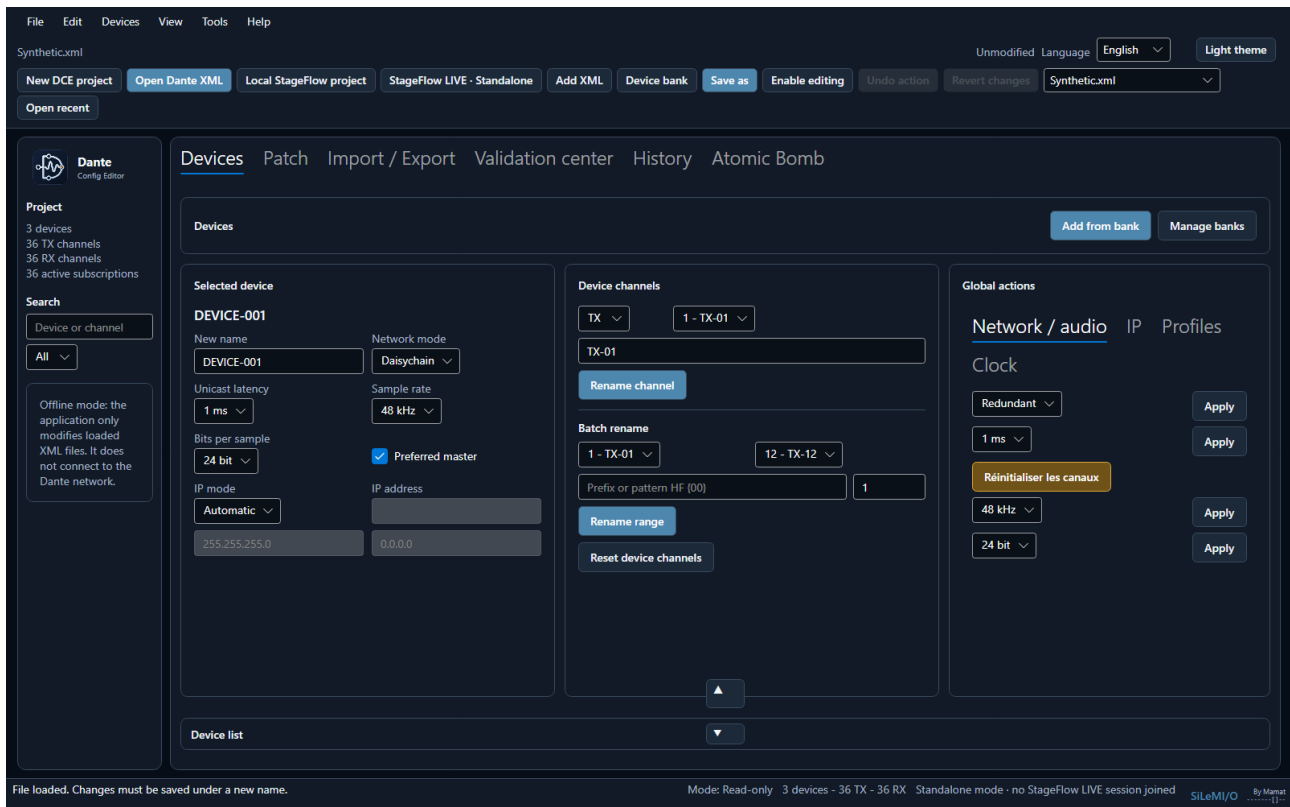

macOS/Avalonia interface, synthetic project.

Standalone: open Dante XML or use New DCE project to assemble templates. StageFlow is not required for device preparation, channel renaming, or patching.

Local StageFlow project: open a .stageflow folder available on your Mac. It holds separate application domains. DCE owns and saves only the Dante domain.

StageFlow LIVE session: deliberately join a session hosted by StageFlow on Windows or Mac using its session code. LIVE exchanges project data between applications. It never controls actual Dante devices.

Before editing, check the project name and mode in the status bar. On Mac, pages are tabs above the content. Their layout differs from the Windows sidebar.



4. Open and inspect XML

File loaded. Changes must be saved under a new name. Mode: Read-only 3 devices - 36 TX - 36 RX Standalone mode - no StageFlow LIVE session joined SiLeMI/O By Mamat

macOS/Avalonia interface, synthetic project.

Choose Open Dante XML, select a preset, then check the device, Tx, Rx, and active patch counts. Empty, truncated, or malformed files are not repaired by inventing data. Keep the original and obtain a valid export.

Use the search area on the left to find a device or channel. The Validation center collects known inconsistencies. Distinguish blocking errors from warnings that require contextual review.

Use Enable editing before making changes. Read-only mode prevents accidental edits while inspecting. Unavailable controls can indicate missing preset properties or unspecified capabilities.

DCE preserves the original XML document and edits recognized elements. Unknown nodes and attributes are not deliberately rebuilt from a reduced data model.



5. Start without existing XML

New DCE project immediately opens an empty, unsaved configuration without asking for a name, path, XML file, or first device. Add devices using Devices > Add from bank, then choose the destination when saving.

For a local StageFlow project without a Dante domain, choose its offered creation action instead of being forced to open old XML. Saving creates the Dante domain.

A bank template describes a configuration role. It does not create a real network device or make every device compatible with that role. In Dante Controller, map the role to compatible hardware and check its capabilities.

Duplication and insertion neutralize hardware identities that must not be copied. Source-project subscriptions are not blindly reintroduced. Review labels and properties for each new instance.



6. Banks and multiple insertions

Open Device bank or Devices > Manage banks. DCE Community holds supplied templates, DCE Generic holds generic roles, and My bank holds your own templates. The combined view avoids already-distributed duplicates.


Search by name, manufacturer, or category and inspect Tx/Rx counts and default labels before insertion. Quantity defaults to one; increase it for multiple independent roles with distinct names. For Yamaha console and I/O-rack templates, Y001-, Y002-, and subsequent device names are editable suggestions that avoid collisions. The bank stays open for further additions.

Save a device to My bank to reuse its type and default labels. An inserted instance remains independent of its template. Images are optional and copied with the template.

Change bank selects another folder without deleting the former one. Export/import banks to share them, or use Update banks to retrieve the public library. Do not overwrite your personal bank with the application bundle.



7. Device selection and identity

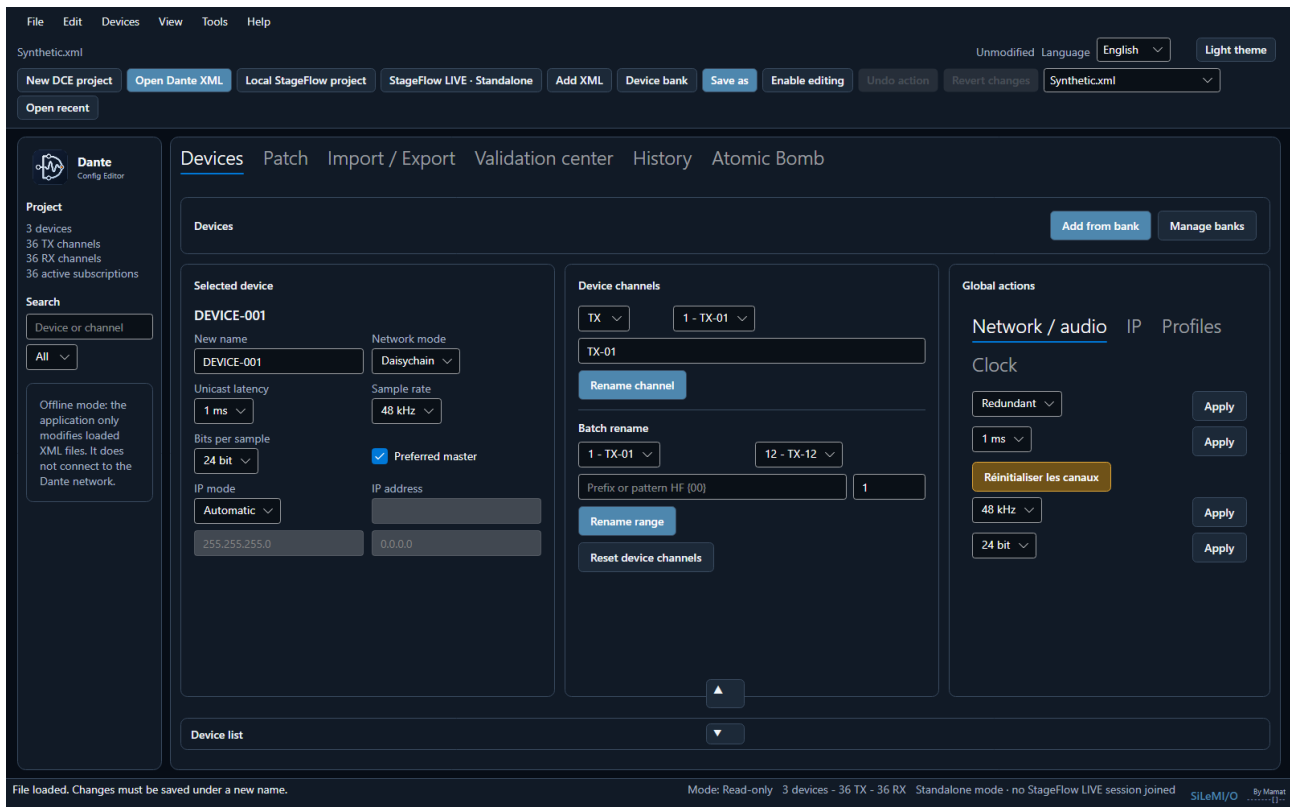

macOS/Avalonia interface, synthetic project.

Expand Device list and select the required device. The Selected device panel and channels refer to this selection. Check it before global changes or resets.

Enter a new name and apply the device properties. DCE updates recognized subscription references so the patch no longer points at the old label. Renaming does not replace a technical identity.

Details exposes properties and channels. Duplicate creates another instance; Delete removes the role from the project and asks for confirmation. Check the effect on destinations in validation.

Editing a bank template does not edit an instance already inserted into a project. When unsure, export a project copy before structural operations.



8. Audio, network, and global actions

In Devices, edit unicast latency, sample rate, audio format, network mode, and Preferred Master only when exposed by the preset. DCE cannot infer hardware capabilities missing from XML.

Redundant/Daisychain remains available when the role contains redundancy. The IP tab stays disabled, with an explanation, when no `ipv4_address` section exists: DCE does not create the missing tag.


Automatic and Static control the recognized IP mode. For a static address, check address, subnet mask, and gateway. Do not duplicate addresses between instances or treat an offline value as an observed network address.

Global actions applies the same setting across the targeted devices. Network/audio, IP, Profiles, and Clock tabs group these operations. Read confirmations, especially reports of unsupported capabilities.

A profile prepares a coherent set of settings. It does not replace checking shared sample rates, redundancy capabilities, and real clocking. DCE never elects a live network leader.



9. Rename channels and series

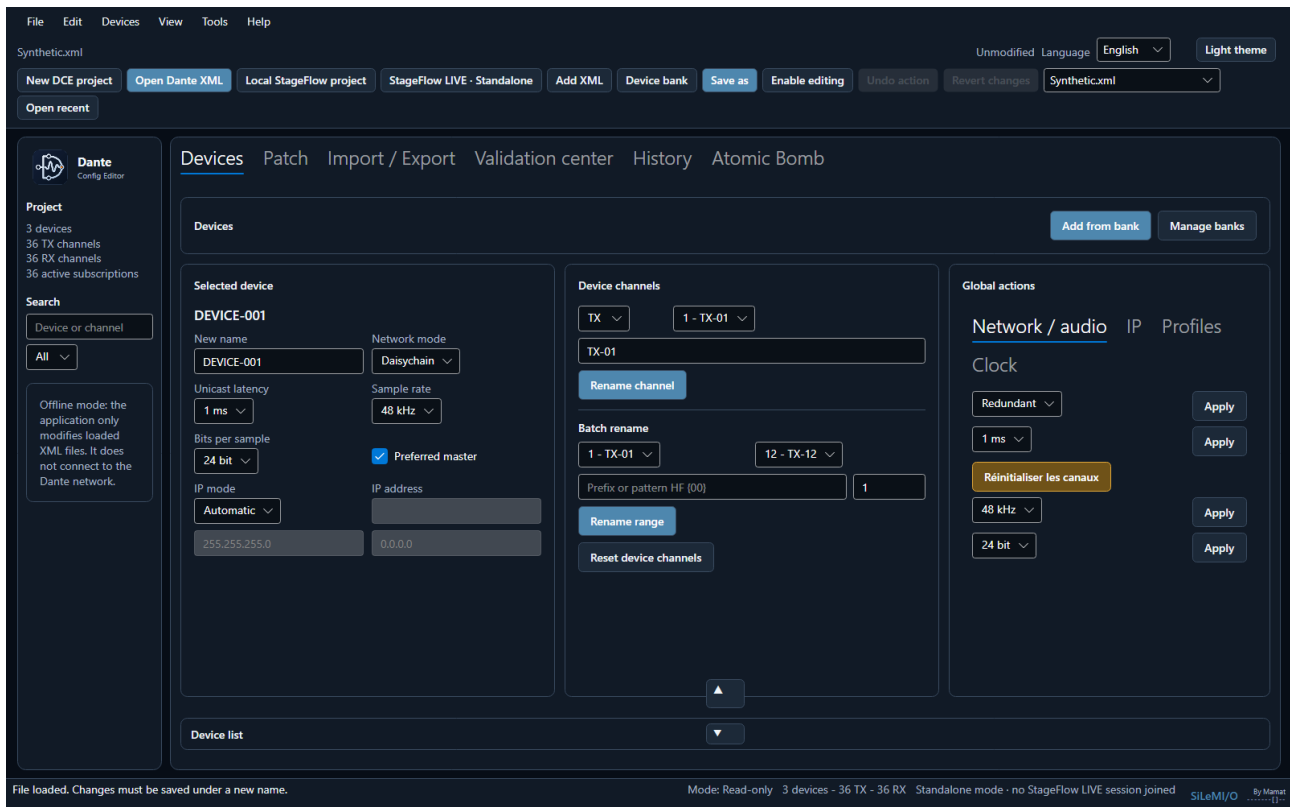

macOS/Avalonia interface, synthetic project.

Select Tx or Rx and the channel, enter its label, then choose Rename channel. Recognized subscriptions are maintained when renaming Tx: receivers keep referencing the renamed source.

On Mac, Batch rename is in Devices. Set the first and last channel, prefix or pattern, and starting number. Check the range, then confirm Rename series. A pattern such as HF {00} reserves two digits.

Do not confuse this panel with the Windows matrix fill handles. Those handles and the drag gesture to extend L/R pairs are not present in the current Mac matrix.

For exact stereo sequences, check labels 1L, 1R, 2L, 2R. On Mac, use individual labels or a prepared, reviewed label import. Duplicate or ambiguous Tx labels can prevent reliable targeting; resolve them before patching.



10. Matrix: immediate patching

Easy patch / Matrix
Every click, selection, drag-and-drop or range immediately updates the patch.

☒ Warn me when the Rx channel is already patched

Receiving device (Rx): DEVICE-002 Transmitted device (Tx): DEVICE-001

Patch matrix Selection and one-to-one patch

Rx channels are rows and Tx channels are columns. A click immediately assigns or removes the subscription.

Rx channel		TX 1 TX-01	TX 2 TX-02	TX 3 TX-03	TX 4 TX-04	TX 5 TX-05	TX 6 TX-06	TX 7 TX-07	TX 8 TX-08	TX 9 TX-09	TX 10 TX-10	TX 11 TX-11	TX 12 TX-12
001 - RX-01	→	•											
002 - RX-02	→		•										
003 - RX-03	→			•									
004 - RX-04	→				•								
005 - RX-05	→					•							
006 - RX-06	→						•						
007 - RX-07	→							•					
008 - RX-08	→								•				
009 - RX-09	→									•			
010 - RX-10	→										•		
011 - RX-11	→											•	
012 - RX-12	→												•

Click a cell to immediately assign or disconnect a subscription.

Close

macOS/Avalonia interface, synthetic project.

In Patch, open Easy patch / Matrix. Choose an Rx device on the left and a Tx device on the right. The central FLIP button swaps that selection. Use two different devices for an inter-device example.

Clicking a cell assigns the column's Tx source to the row's Rx channel. One Rx accepts at most one source; one Tx may feed several receivers. A column can therefore contain several points, while a diagonal represents one-to-one patching.

The warning checkbox is enabled by default and asks before replacing an already-patched Rx. Turning it off suppresses the warning, not the one-source-per-Rx constraint.

Select several Tx channels and drop them on the first Rx to feed successive Rx channels. You can also select several Rx channels and drop them on the first Tx: each Rx receives that Tx and the following Tx channels in order.

Changes immediately affect the open project, not real devices or an already-saved file. There is no preview batch to apply afterwards. Use zoom or Fit to read cells, then save the project.



11. Easy patch and one-to-one patch

Easy patch / Matrix

Every click, selection, drag-and-drop or range immediately updates the patch.

☒ Warn me when the Rx channel is already patched

Receiving device (Rx) DEVICE-002 ↔ Transmitting device (Tx) DEVICE-001

Patch matrix Selection and one-to-one patch

Rx channels and current source

001 - RX-01	<-	DEVICE-001 / TX-01
002 - RX-02	<-	DEVICE-001 / TX-02
003 - RX-03	<-	DEVICE-001 / TX-03
004 - RX-04	<-	DEVICE-001 / TX-04
005 - RX-05	<-	DEVICE-001 / TX-05
006 - RX-06	<-	DEVICE-001 / TX-06
007 - RX-07	<-	DEVICE-001 / TX-07
008 - RX-08	<-	DEVICE-001 / TX-08
009 - RX-09	<-	DEVICE-001 / TX-09
010 - RX-10	<-	DEVICE-001 / TX-10
011 - RX-11	<-	DEVICE-001 / TX-11
012 - RX-12	<-	DEVICE-001 / TX-12

Available Tx channels

001 - TX-01
002 - TX-02
003 - TX-03
004 - TX-04
005 - TX-05
006 - TX-06
007 - TX-07
008 - TX-08
009 - TX-09
010 - TX-10
011 - TX-11
012 - TX-12

Select one or more Tx channels, then drop them

Assign from selected Rx

Disconnect selected Rx

One-to-one patch

First Rx 001 - RX-01

First Tx 001 - TX-01

Count 1

Capacity: 12 one-to-one subscription(s) (12 Tx / 12 Rx).

Apply now

Select one or more Tx channels, then choose the first Rx channel.

Close

macOS/Avalonia interface, synthetic project.

Easy patch and Matrix show the same patch in two forms. In Selection and one-to-one patch, choose the starting Tx/Rx channels, channel count, and the offered patch action.

The first Tx is assigned to the first Rx, then both indexes advance together. Choose a count within both devices' limits. This never sends several Tx sources into one Rx.

The Rx-to-Tx list in the Patch tab provides a tabular view for comparison or removing a subscription. An operation in one view is reflected in the others.

The Easy patch / Matrix window can be enlarged separately. Device selectors and FLIP remain in that window. Closing it does not undo immediate changes already made.



12. Find sources and destinations



macOS/Avalonia interface, synthetic project.

An Rx channel's arrow finds its saved source and displays the matching Tx device and channel. An unpatched receiver has no source to target.

A Tx channel's arrow lists its Rx destinations. Since one Tx can feed multiple devices, select the destination you want displayed in the matrix.

Navigation does not invent connections or change patching. It uses project subscriptions. Resolve missing or ambiguous references before following them.

After renaming, use these arrows to quickly check that a source still feeds the intended receivers. Validation is still required for references outside the displayed device pair.



13. Merge several installations

Open the first project, choose Add XML, then select the second installation. For conflicting names, the rename dialog distinguishes incoming devices before merging.

Review proposals rather than accepting them mechanically: equal names do not prove equal hardware. DCE treats technical identities separately from visible names.

After merging, check the import report, reused/added/renamed devices, channel counts, and subscriptions. Review sample rates, clocking, IP addresses, and network mode for the combined installation.

Keep the source presets. Stop if a conflict or unknown structure cannot be resolved and obtain a usable file. Offline XML merging changes no real devices.



14. Local StageFlow project

Local StageFlow project opens a .stageflow folder on an accessible disk. StageFlow Desktop is free and optional; it does not need to be running for this local workflow.


Start from scratch immediately opens an empty in-memory configuration without asking for a name, path, XML file, or first device. Add devices from the bank. Save adds the Dante domain to the open project; Save As targets a new destination.

Other domains, such as patch sheets and plans, remain owned by their applications. DCE preserves their data and links entries through explicit UUIDs. Matching names alone never establish a reliable association.

If another application changes the Dante domain while you work, DCE reports a conflict rather than overwriting it. Reload and reconcile changes. Share the whole folder, not only project.json.



15. StageFlow LIVE and label reception

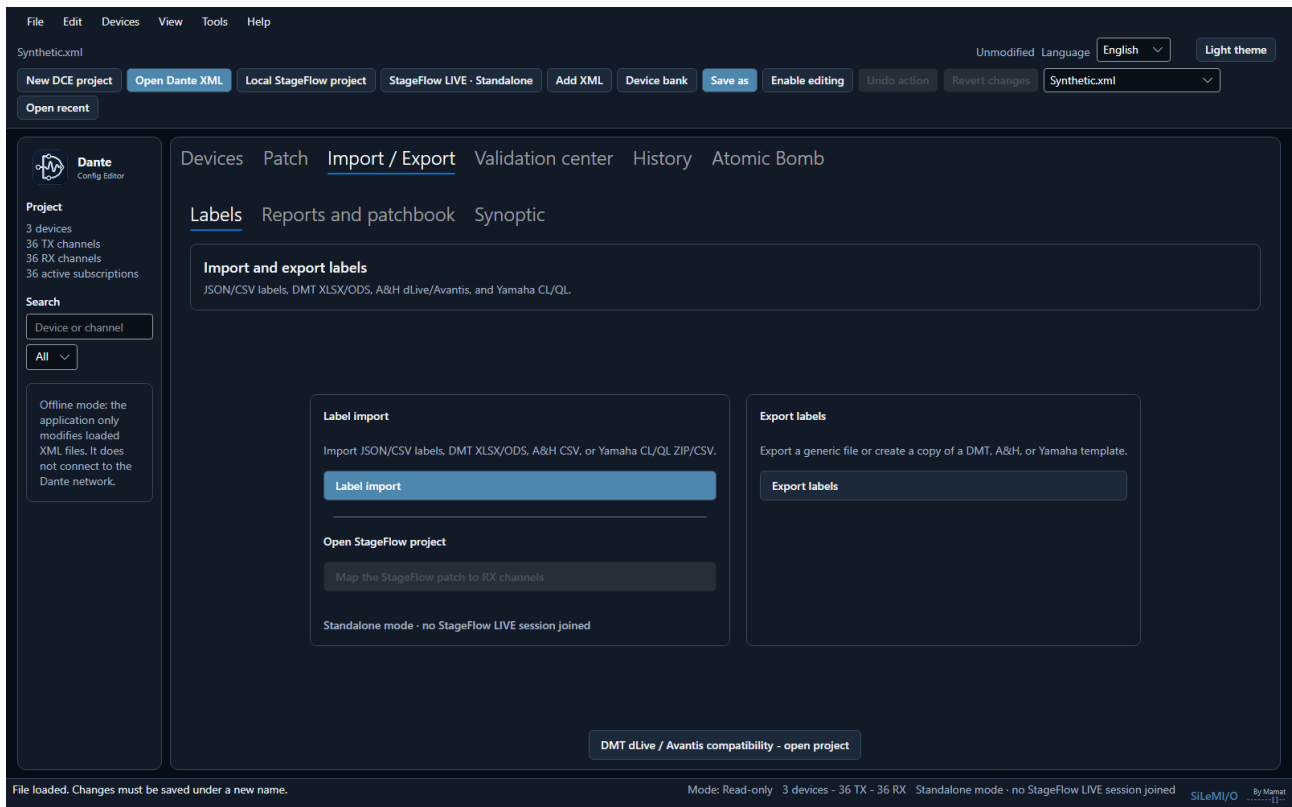

macOS/Avalonia interface, synthetic project.

The StageFlow LIVE button opens the connection center. Choose a discovered session or an explicit address, then enter the six-digit code displayed by the host. Joining is never automatic.


Project name, connection state, and alerts remain visible. Host pause differs from disabling local reception: a session may stay connected while new labels are no longer applied locally.

Only UUID-linked Rx channels participate in synchronization. No Tx is automatically matched to a StageFlow patch input merely because names agree. Review mappings and naming rules.

Alerts show previous/current labels, source, time, and change count. Acknowledge and Acknowledge all apply to this computer, not other participants. The local console controlling certain DCE views remains a separate Windows workflow.



16. Map patch entries to Rx

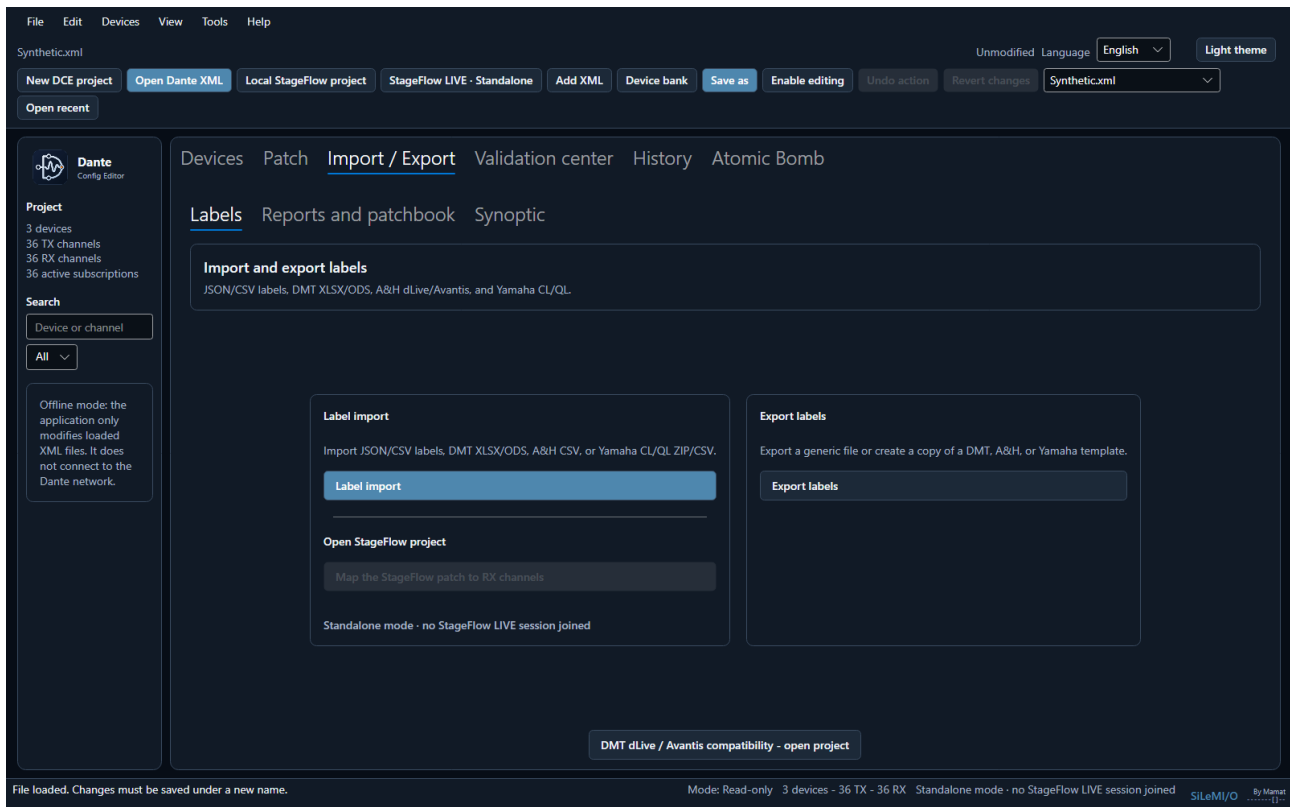

macOS/Avalonia interface, synthetic project.

Under Import / Export > Labels, use StageFlow patch import. Select the patch source and entries, then choose the Rx device and channel range.


Review each mapping before applying. Stored links use an entry's UUID, not just its row number or label. Later patch renames can be followed without losing the association.

Do not confuse physical input names, console labels, and Dante channel labels. Choose a naming rule suited to your workflow. Importing these names does not create audio subscriptions.

Check Rx range limits and the visible result in Devices. If a StageFlow entry was deleted, resolve the broken link instead of arbitrarily matching equal names.



17. Synoptic and vector deliverables

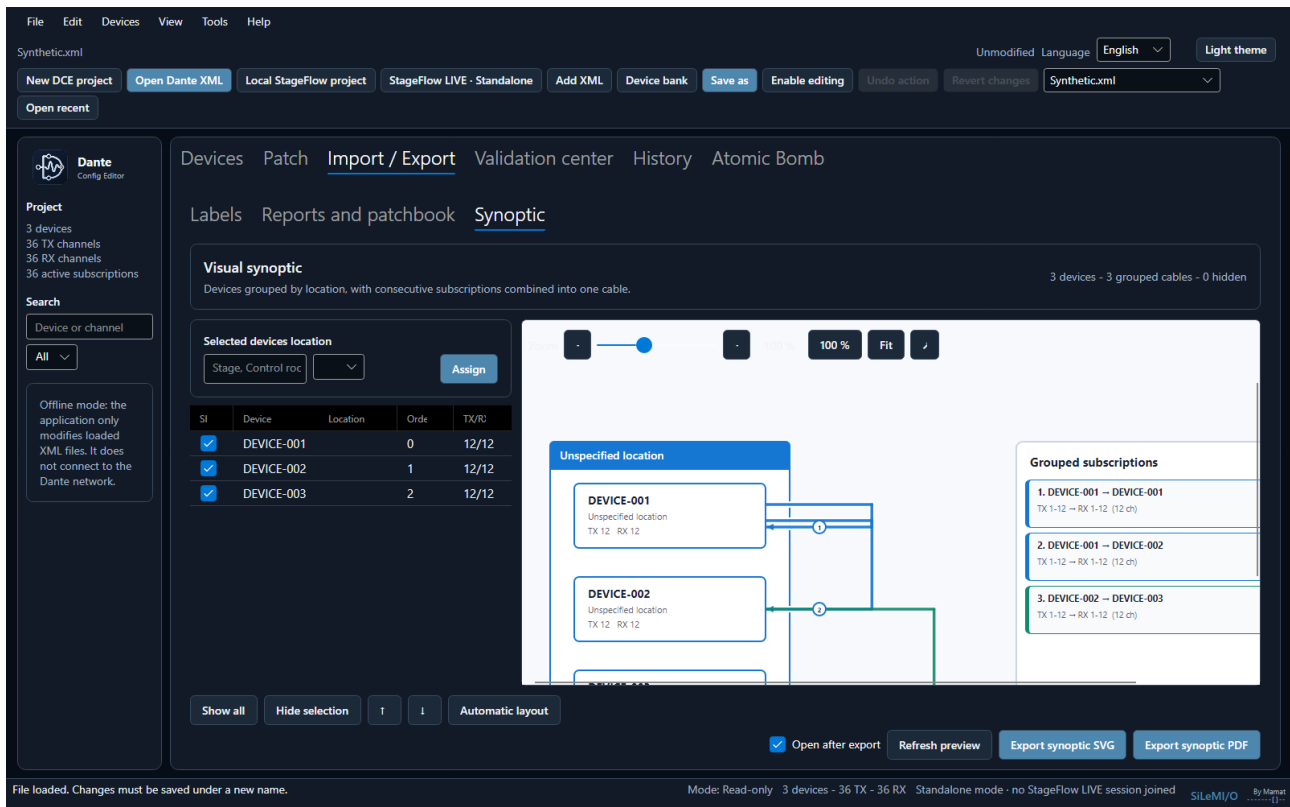

macOS/Avalonia interface, synthetic project.

Open Import / Export > Synoptic. Organize devices by zone and location to make flows readable. Displayed connections come from the project's subscriptions.


Move a device to adjust its position, or move a whole zone to relocate its group. The detached preview provides more space while retaining placement controls. Zoom changes the view, not channel counts.

Hide unnecessary elements and review grouped links. A simplified drawing does not imply missing subscriptions; filters may hide part of the installation.

Export PDF for readable distribution or SVG for editing in a vector application. In a StageFlow project, Save keeps positions, zones, ordering, and visibility in the Dante domain; these presentation data never alter XML patching.



18. Labels, reports, and patchbook

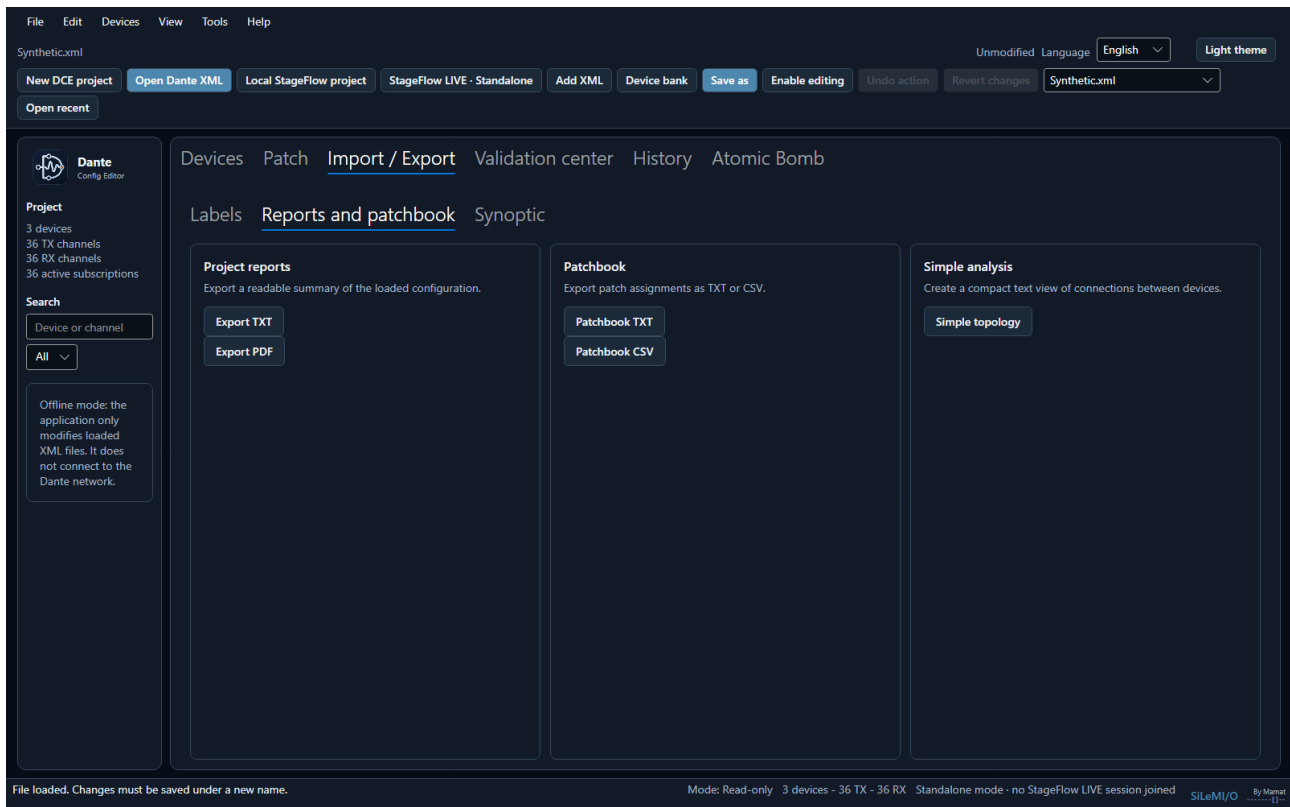

macOS/Avalonia interface, synthetic project.

Import / Export groups label exchange, reports, and synoptic output. Choose a format suited to the receiving tool and verify Tx/Rx direction and target device.


DMT formats and Yamaha CL/QL or Allen & Heath workflows target specific structures. A Yamaha bank template does not automatically add native import/export for every Yamaha editor.

After importing, review the report and transformed labels: length limits, forbidden characters, or duplicates can change the intended result. Keep the source file before applying corrections.

Reports and patchbooks support preparation and operating documentation. They are not Dante Controller presets. Use XML output for Dante configuration and review it in Dante Controller.



19. Validation, saving, and history

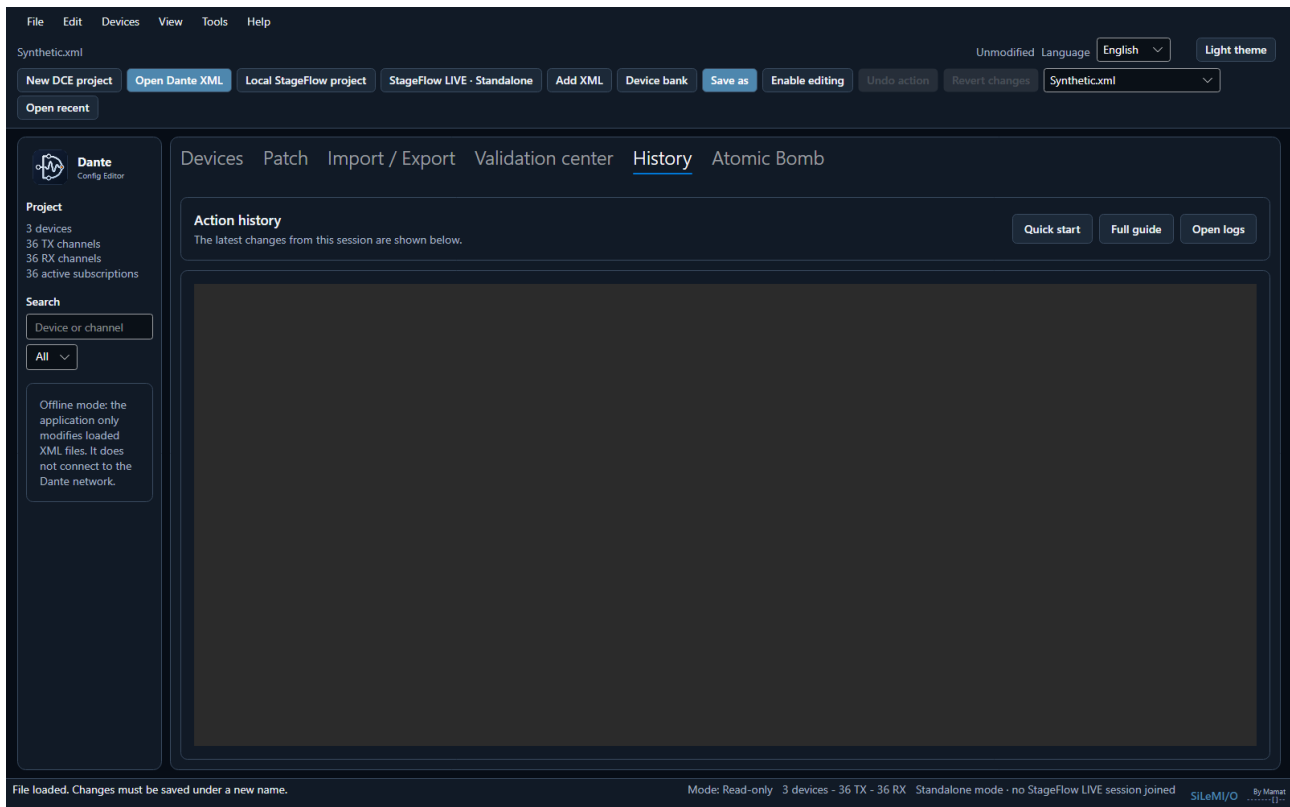

macOS/Avalonia interface, synthetic project.

Before saving, open the Validation center. Export preflight distinguishes blocking errors from warnings. Read the affected element, device, and suggested correction. Unused Rx channels and devices intentionally lacking Tx or Rx are not reported as anomalies. A reference to a Tx missing from a partial preset remains information and does not prevent export.


In standalone mode, Save As offers a new .stageflow project or XML file. Explicitly choose XML for Dante Controller output. Keep the original preset under another name.

In a StageFlow context, Save updates the Dante domain. To produce a Dante Controller file, choose File > Export to Dante Controller, then a .xml file outside the StageFlow folder. The copy is checked before writing; the open project, pending edits, and history remain unchanged, including on cancellation or failure.

History helps explain operations. Undo action reverses an available history operation; Revert changes discards unsaved work. Neither replaces backups on disk.



20. Atomic Bomb and resets

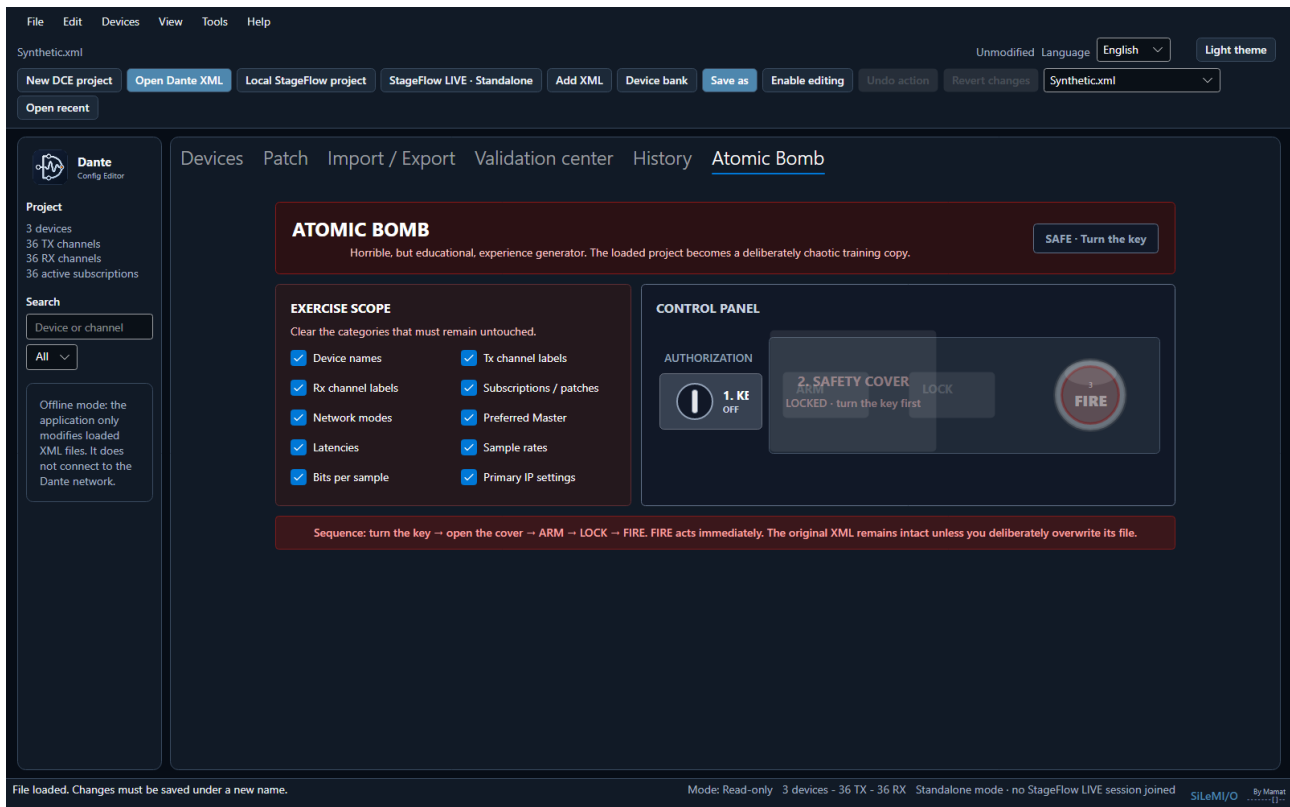

macOS/Avalonia interface, synthetic project.

Atomic Bomb is a deliberately playful training generator. Use only a copy or training project, never your sole production configuration.

Choose affected properties. The key unlocks the cover; the cover protects ARM, LOCK, and FIRE, operated in order. Review the scope before firing.

Targeted names, labels, patches, or settings can become intentionally inconsistent. This is a diagnostic exercise, not a proposed operating configuration.

After training, use history or reopen your reference copy. Channel/device resets elsewhere in DCE serve more focused preparation tasks, but also require checking their effect on patching.



21. Support and final operating checks

When reporting a problem, record the DCE version, macOS version, Intel/Apple Silicon architecture, language, theme, and exact steps. Include a readable screenshot and useful logs, without a complete license code or unnecessary personal data.

Where possible, provide a small XML reproducer. Do not publish a client project or StageFlow domain containing private information without permission.

After exporting, reopen the XML in DCE, then import it into Dante Controller. Check role-to-hardware mapping, labels, subscriptions, sample rates, redundancy, addresses, and clocking.

Automated tests and this guide's rendered views do not prove your real network works. The author has performed hardware validations, but every final installation still requires review. DCE remains an offline editor independent of Audinate.