PROFESSIONAL USER MANUAL

Dante Config Editor

Complete guide - 2027.2.14

Prepare, review, and transform Dante configurations offline: devices, channels, audio and network settings, subscriptions, preset merging, template banks, and technical deliverables.

Review	Edit without losing patching	Build offline
Scan latency, sample rate, audio format, network, IP, clock, and alerts at a glance.	Rename devices and channels while recognized subscriptions are updated.	Merge XML presets, add templates, and prepare the network before devices are available.

Permanent license: EUR 29 including French VAT, one-time payment.
No code or online activation is required to use DCE for free: choose Continue with DCE, even without Internet. During the 30-day trial, no license reminder appears. Afterwards, a 5-second countdown precedes full access. Valid activation releases the interface at once. Secure payment through Stripe Managed Payments.

Unofficial third-party tool, independent from Audinate. DCE does not control the live network. Keep the original and review the final XML in Dante Controller.

macOS | Apple Silicon / Intel
www.silemio.com


SiLeMI/O
By Mamat
-------[]--

Contents

Select an entry to open it. PDF viewer bookmarks use the same hierarchy, and every page provides a direct link back to these contents.

1. Open, add if needed, edit, export . . . 3
2. Install and update . . . 4
3. License and first launch . . . 5
4. Three ways to work . . . 6
5. Open and inspect XML . . . 7
6. Start without existing XML . . . 8
7. Banks and multiple insertions . . . 9
8. Device selection and identity . . . 10
9. Audio, network, and global actions . . . 11
10. Rename channels and series . . . 12
11. Matrix: immediate patching . . . 13
12. Patch: main matrix and point details . . . 14
13. Easy patch and one-to-one patch . . . 15
14. Find sources and destinations . . . 16
15. Merge several installations . . . 17
16. Local StageFlow project . . . 18
17. StageFlow LIVE and label reception . . . 19
18. Map patch entries to Rx . . . 20
19. Synoptic and vector deliverables . . . 21
20. Labels, reports, and patchbook . . . 22
21. Validation, saving, and history . . . 23
22. Atomic Bomb and resets . . . 24
23. Support and final operating checks . . . 25

1. Open, add if needed, edit, export

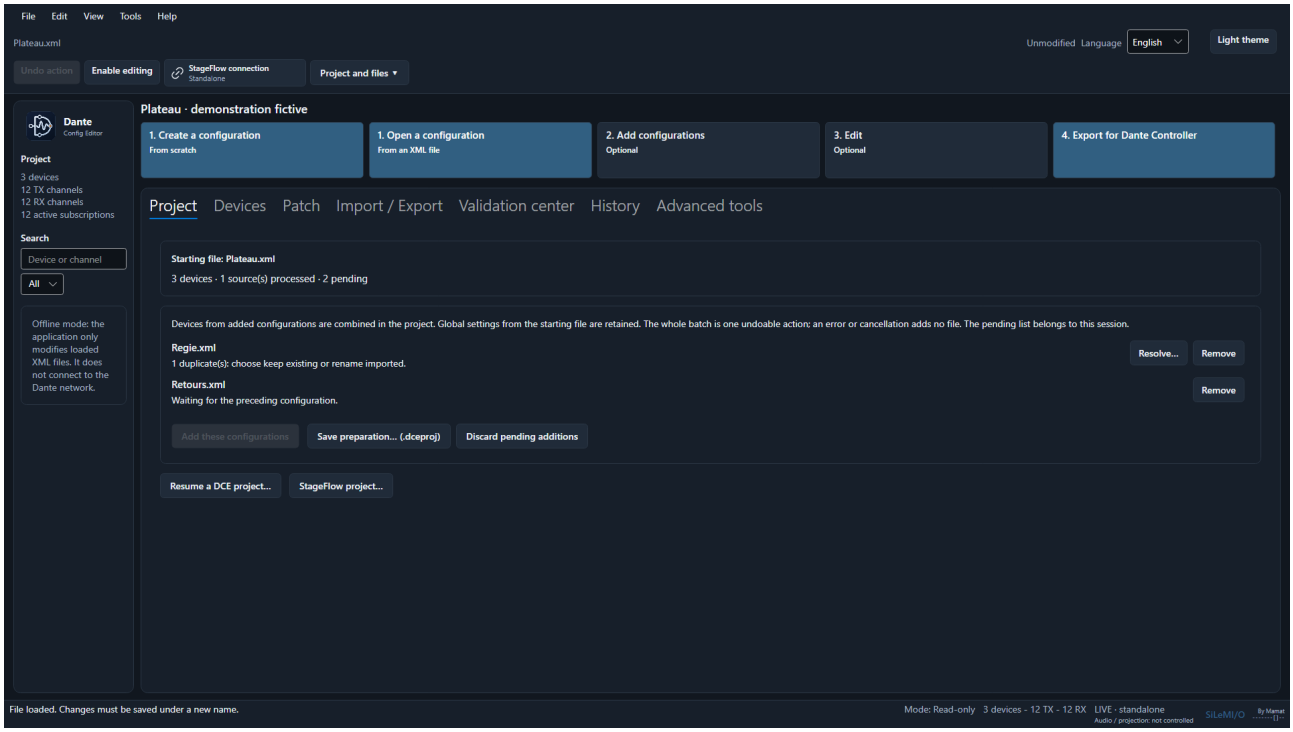

macOS/Avalonia interface, synthetic project.

The configuration name sits above the large commands: Create a configuration and Open a configuration are the two first-step choices, at the same level. Next come Add configurations (optional), Edit (optional), and Export for Dante Controller. Create opens an empty draft; then add devices from the bank. Opening then exporting directly requires neither combining files nor a DCE project.

Select several XML files: they stay in a pending list separate from the starting file. Resolve duplicates, including conflicts between queued files, by keeping existing devices or renaming imported ones. Add these configurations applies the whole batch as one undoable action.

Incompatible version or namespace, invalid XML, or a file changed since selection adds no file from the batch. Discard pending additions clears the list without changing the project; one undo after applying removes the whole batch. Global settings from the starting file remain authoritative.

Edit retains existing views and tools with a compact bar. Export for Dante Controller creates an XML copy under another name with validation. Selected sources are protected; confirm exclusion of any pending additions before continuing.

Save preparation (.dceproj) remains optional: applied XML and provenance are retained without reading external XML on reopening. The pending list is not saved. DCE and StageFlow remain available as other starting points.

2. Install and update

In About This Mac, check your processor: select Apple Silicon for an Apple chip, or Intel for an Intel processor. Download the matching DMG from the official public release, open it, and copy Dante Config Editor into Applications.

The package includes its .NET runtime; a separate .NET installation is not required. The package declares macOS 15 as its minimum. This does not mean every macOS version or hardware model has been tested.

Help > Check for updates finds a stable version newer than the running application and matching your architecture; the installed version is not offered again. DCE checks download origin, size, and SHA-256 before opening it. Quit DCE before replacing the application in Applications. Keep your projects and personal bank.

If GitHub temporarily limits requests, DCE respects the retry deadline across restarts. Manual checks explain when to retry; startup remains silent and offline work continues.

Check the package Apple Developer ID signature and notarization status in its release notes. If macOS displays a warning, verify the package before proceeding. Verify the source and checksum before allowing this application in System Settings > Privacy & Security. Do not disable Gatekeeper globally.

3. License and first launch


To try or use DCE for free, no code, purchase, or online activation is required. Choose Continue with DCE, even without Internet. Permanent-code activation is a separate, optional section. DCE works independently and offline. During the 30-day trial, no license reminder appears. Afterwards, a 5-second countdown runs once per process launch, then the application remains fully usable. Valid activation releases the interface immediately.

Activating a purchased or complimentary permanent code is optional: a valid license removes the reminder and wait. A permanent license costs EUR 29 including French VAT, paid once through Stripe Managed Payments. Historical DCEP1 and DCEF1 codes remain recognized. On Mac, purchased or complimentary V2 codes activate with Internet. DCE creates an installation-specific key in macOS Keychain and saves the signed receipt locally. After activation, verification stays offline, including after closing and restarting DCE. Compatible V1 codes remain locally verified without online activation.

If Keychain refuses access, unlock your user Keychain and allow Dante Config Editor if macOS asks. Also check license-folder permissions. Retry the same code: a lost server response reuses the same identity. A failed replacement retains the active license. Deactivate this Mac requires Internet to release its installation; the local key is removed after saving state. Do not copy a Windows key or delete license files to transfer an activation. Free use remains available if access is refused.

Select Français or English and your theme in the top bar. The first launch uses the light theme; later preferences are retained. This guide illustrates the macOS/Avalonia interface with synthetic projects, not a connected Dante network.

4. Three ways to work

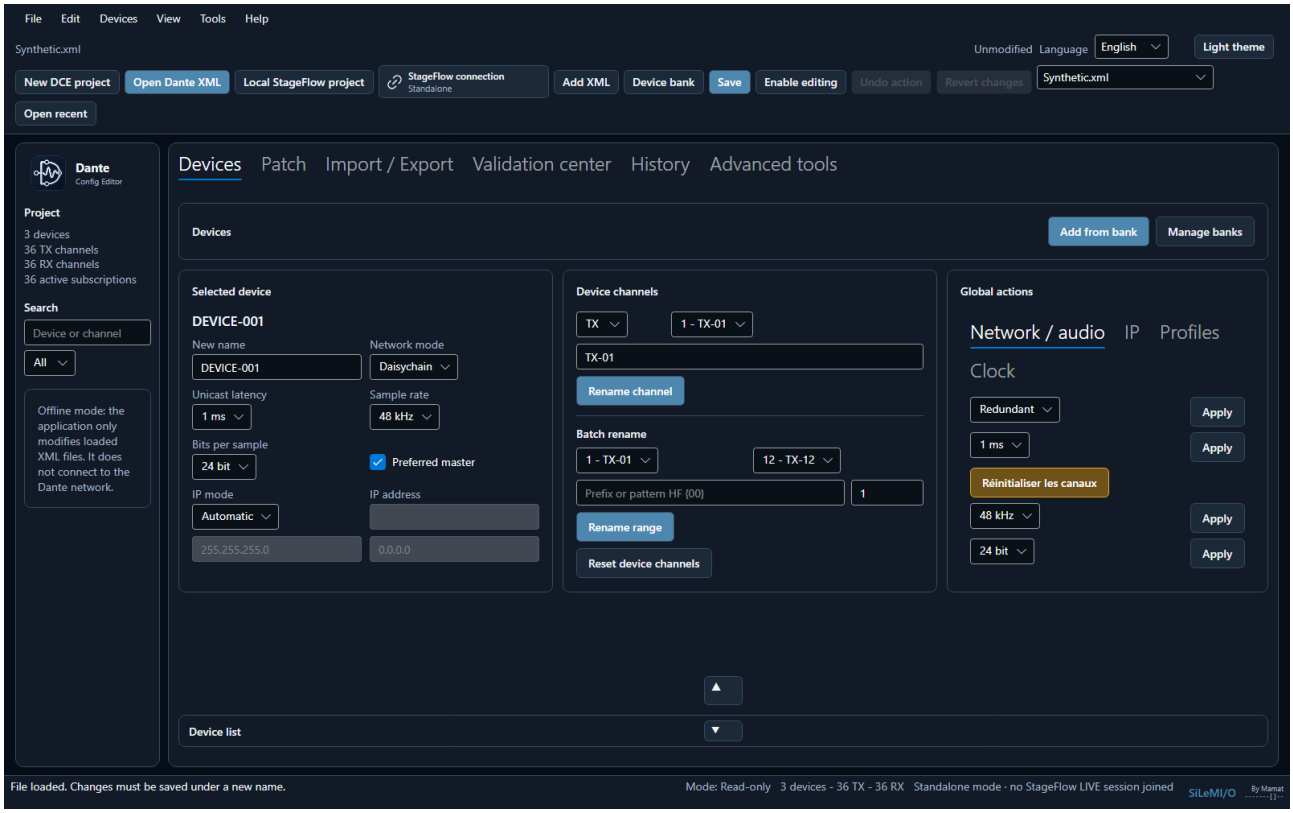

macOS/Avalonia interface, synthetic project.


Standalone: open Dante XML or use New DCE project to assemble templates. StageFlow is not required for device preparation, channel renaming, or patching.

Local StageFlow project: open a .stageflow folder available on your Mac. It holds separate application domains. DCE owns and saves only the Dante domain.

StageFlow LIVE session: deliberately join a session hosted by StageFlow on Windows or Mac using its session code. LIVE exchanges project data between applications. It never controls actual Dante devices.

Before editing, check the project name and mode in the status bar. On Mac, pages are tabs above the content. Their layout differs from the Windows sidebar.

5. Open and inspect XML

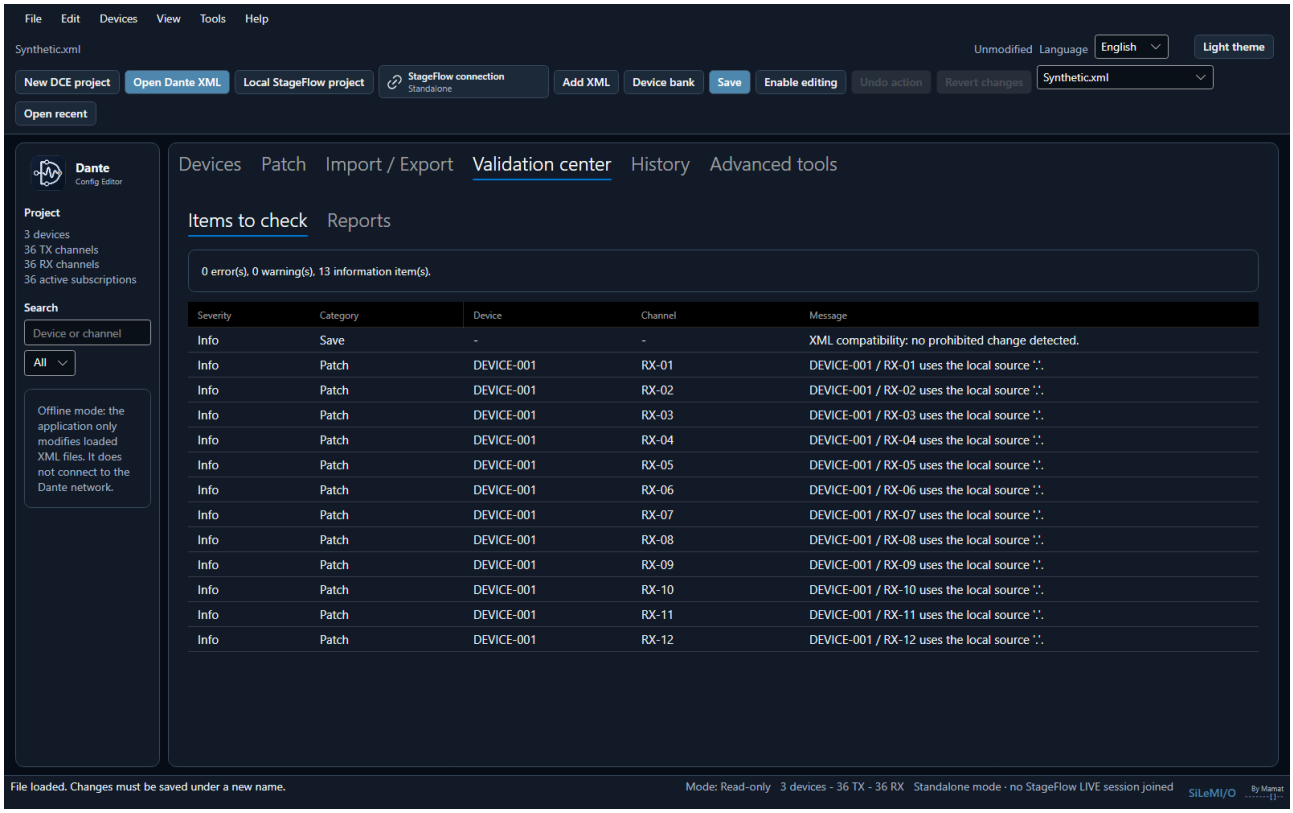

macOS/Avalonia interface, synthetic project.

Choose Open Dante XML, select a preset, then check the device, Tx, Rx, and active patch counts. Empty, truncated, or malformed files are not repaired by inventing data. Keep the original and obtain a valid export.

Use the search area on the left to find a device or channel. The Validation center collects known inconsistencies. Distinguish blocking errors from warnings that require contextual review.

Use Enable editing before making changes. Read-only mode prevents accidental edits while inspecting. Unavailable controls can indicate missing preset properties or unspecified capabilities.

DCE preserves the original XML document and edits recognized elements. Unknown nodes and attributes are not deliberately rebuilt from a reduced data model.

6. Start without existing XML

Create a configuration, at the same level as Open a configuration in the top bar, immediately opens an empty, unsaved configuration without asking for a name, path, XML file, or first device. New DCE project also opens this draft. Add devices using Devices > Add from bank, then choose the destination when saving.

For a local StageFlow project without a Dante domain, choose its offered creation action instead of being forced to open old XML. Saving creates the Dante domain.

A bank template describes a configuration role. It does not create a real network device or make every device compatible with that role. In Dante Controller, map the role to compatible hardware and check its capabilities.

Duplication and insertion neutralize hardware identities that must not be copied. Source-project subscriptions are not blindly reintroduced. Review labels and properties for each new instance.

7. Banks and multiple insertions

Open Device bank or Devices > Manage banks. DCE Community holds supplied templates, DCE Generic holds generic roles, and My bank holds your own templates. The combined view avoids already-distributed duplicates.


Search by name, manufacturer, or category and inspect Tx/Rx counts and default labels before insertion. Quantity defaults to one; increase it for multiple independent roles with distinct names. For Yamaha console and I/O-rack templates, Y001-, Y002-, and subsequent device names are editable suggestions that avoid collisions. The bank stays open for further additions.

Save a device to My bank to reuse its type and default labels. An inserted instance remains independent of its template. Images are optional and copied with the template.

CL3 and QL5 (64 TX / 64 RX), HY144-D (144 TX / 144 RX), and RU-LB4 (4 TX / 4 RX) are explicit generic audio roles rebuilt using catalog channel counts. DCE does not restore a missing mediaType from source XML. Validation is structural; hardware assignment and import must be checked in Dante Controller.

Change bank selects another folder without deleting the former one. Export/import banks to share them, or use Update banks to retrieve the public library. Do not overwrite your personal bank with the application bundle.

8. Device selection and identity

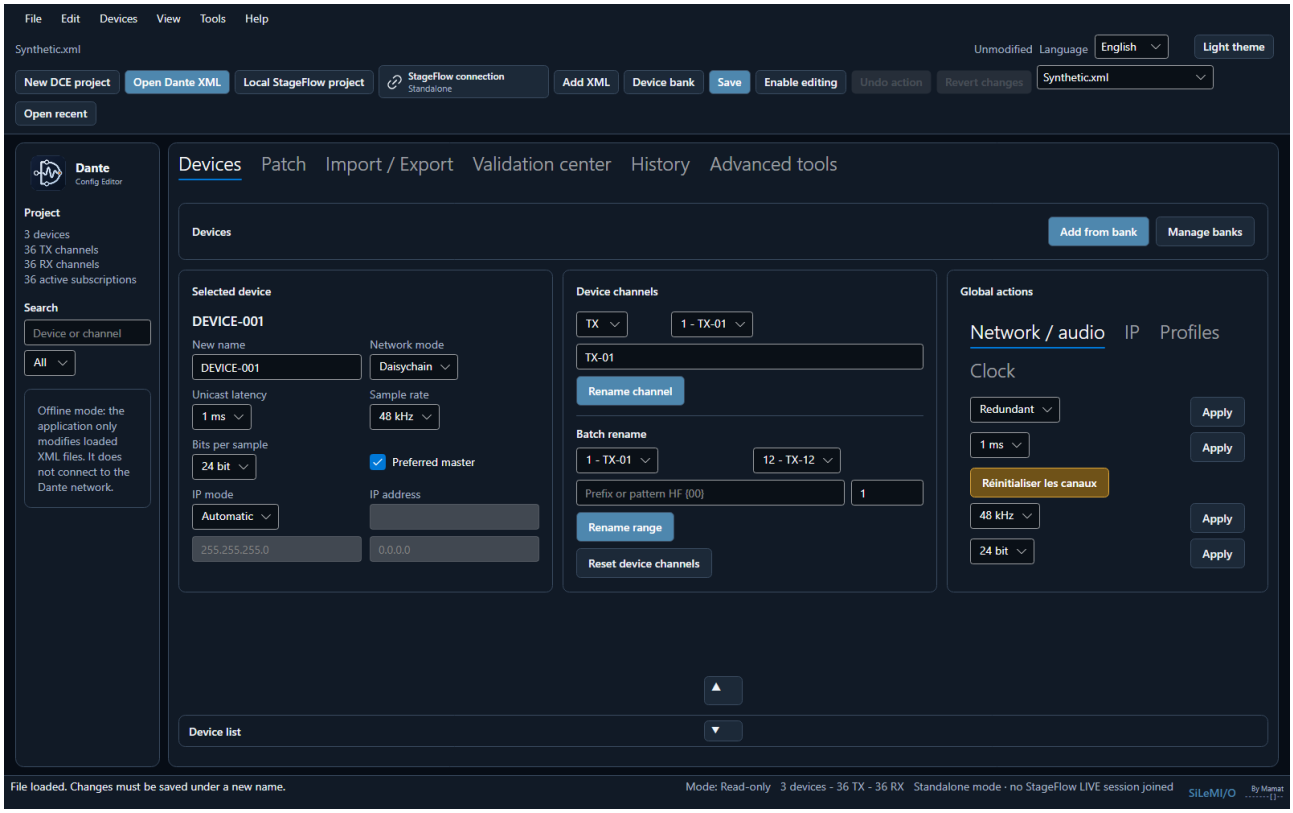

macOS/Avalonia interface, synthetic project.

Expand Device list and select the required device. The Selected device panel and channels refer to this selection. Check it before global changes or resets.

Enter a new name and apply the device properties. DCE updates recognized subscription references so the patch no longer points at the old label. Renaming does not replace a technical identity.

Details exposes properties and channels. Duplicate creates another instance; Delete removes the role from the project and asks for confirmation. Check the effect on destinations in validation.

Editing a bank template does not edit an instance already inserted into a project. When unsure, export a project copy before structural operations.

9. Audio, network, and global actions

In Devices, edit unicast latency, sample rate, audio format, network mode, and Preferred Master only when exposed by the preset. DCE cannot infer hardware capabilities missing from XML.


Redundant/Daisychain remains available when the role contains redundancy. The IP tab stays disabled, with an explanation, when no ipv4_address section exists: DCE does not create the missing tag.

Automatic and Static control the recognized IP mode. For a static address, check address, subnet mask, and gateway. Do not duplicate addresses between instances or treat an offline value as an observed network address.

Global actions applies the same setting across the targeted devices. Network/audio, IP, Profiles, and Clock tabs group these operations. Read confirmations, especially reports of unsupported capabilities.

A profile prepares a coherent set of settings. It does not replace checking shared sample rates, redundancy capabilities, and real clocking. DCE never elects a live network leader.

10. Rename channels and series

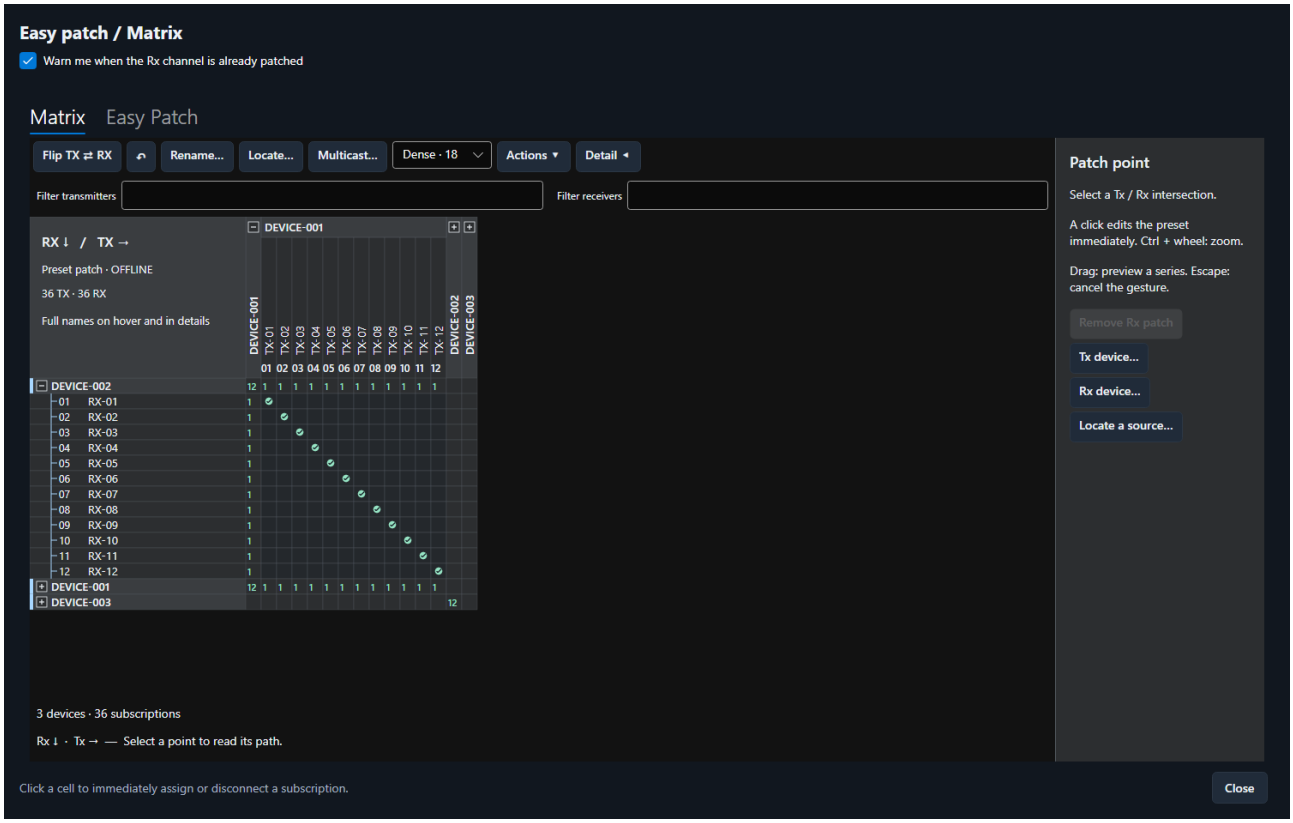


macOS/Avalonia interface, synthetic project.

Double-click a matrix label, or select it and press F2. Enter commits; Escape cancels. Renaming Tx keeps recognized subscriptions linked.

Drag the selected label's fill handle towards following channels to extend a sequence. Shift selects multiple seed labels, including numeric or stereo patterns.

Rename and Series remain in the matrix, alongside Devices batch rename. The HF {00} pattern reserves two digits. Resolve duplicate Tx names before patching.

11. Matrix: immediate patching

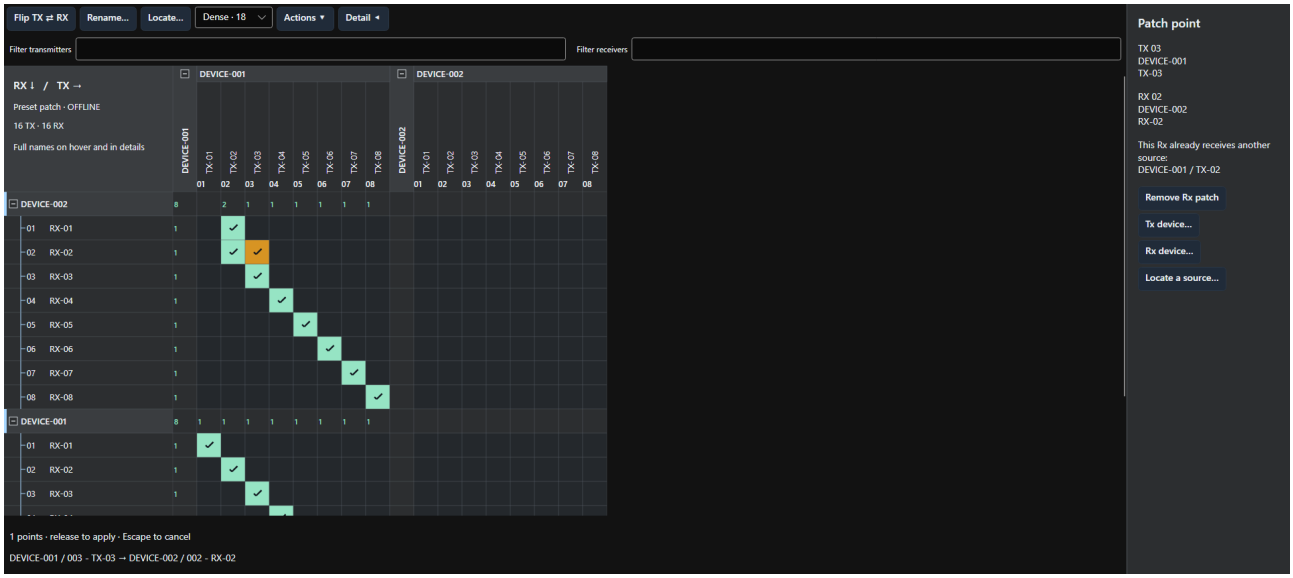

macOS/Avalonia interface, synthetic project.

The matrix represents the offline preset. Dense · 18 uses square cells and vertical Tx labels; Comfort keeps horizontal labels. Devices start collapsed. The + / − buttons or Enter/Space on a group expand its channels; device headers are contrasted and channels indented.

An applied connection fills its entire cell in green; the preview fills the cell in amber before committing. The fill and check mark scale with the grid and zoom. Click to assign or remove a patch. Drag diagonally for 1:1 sequences or along a column for one Tx to multiple Rx. Amber markers preview the points before release; Escape cancels. Gestures are automatic, without a selector.


Click the intersection of two devices, then Flip swaps their visible roles, with TX above and RX on the left; expanded channels stay open. Two fingers scroll, and pinch zooms around the pointer. Tx/Rx filters, Collapse, Expand, and Fine · 14 / Dense · 18 / Spaced · 24 / Comfort adjust the view. Double-click a device for settings. Locate finds sources and destinations.

The warning checkbox asks before replacing an assigned Rx. Each Rx retains one source. Operations edit the offline project, not the network.

Multicast lists all project flows. Select a device and audio Tx channels, then create, update, or delete a flow. Only simple Dante audio flows in 3.0.0 presets are editable. Unknown formats remain intact.

A preset without flows does not guarantee removal from devices; verify this in Dante Controller.

12. Patch: main matrix and point details

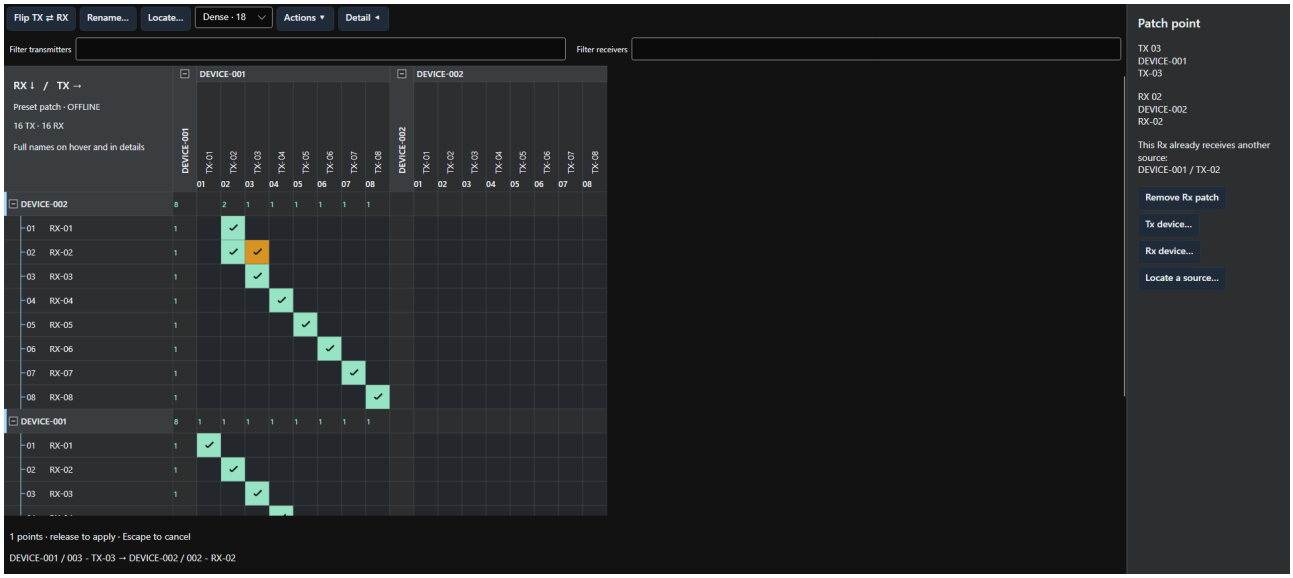

macOS/Avalonia interface, synthetic project.


In Patch, the matrix is integrated into the main window. Dense · 18 uses square cells and vertical Tx labels; Fine · 14, Spaced · 24 and horizontal Comfort adjust the view. Dante numbers remain separate. Independent Tx and Rx filters find devices and channels; scrollbars provide access to large presets.

The Detail panel shows the selected Tx and Rx names in full, then the source actually assigned to the Rx. An empty intersection does not always mean the Rx is free. Arrow keys move the selection without patching. The Detail button collapses or reopens the panel.

A click edits the preset immediately. Drag to preview a series and use Escape to cancel the gesture. Confirm Rx replacements retains Replace, Skip and Cancel when another source is assigned. Actions contains Collapse, Expand, Series and Order.

Rx → Tx list preserves the inspection table. Easy Patch… opens the existing workspace and its selectors. Project and files contains secondary operations and recent files. Theme and language choices remain saved; channel names remain limited to 31 characters.

13. Easy patch and one-to-one patch

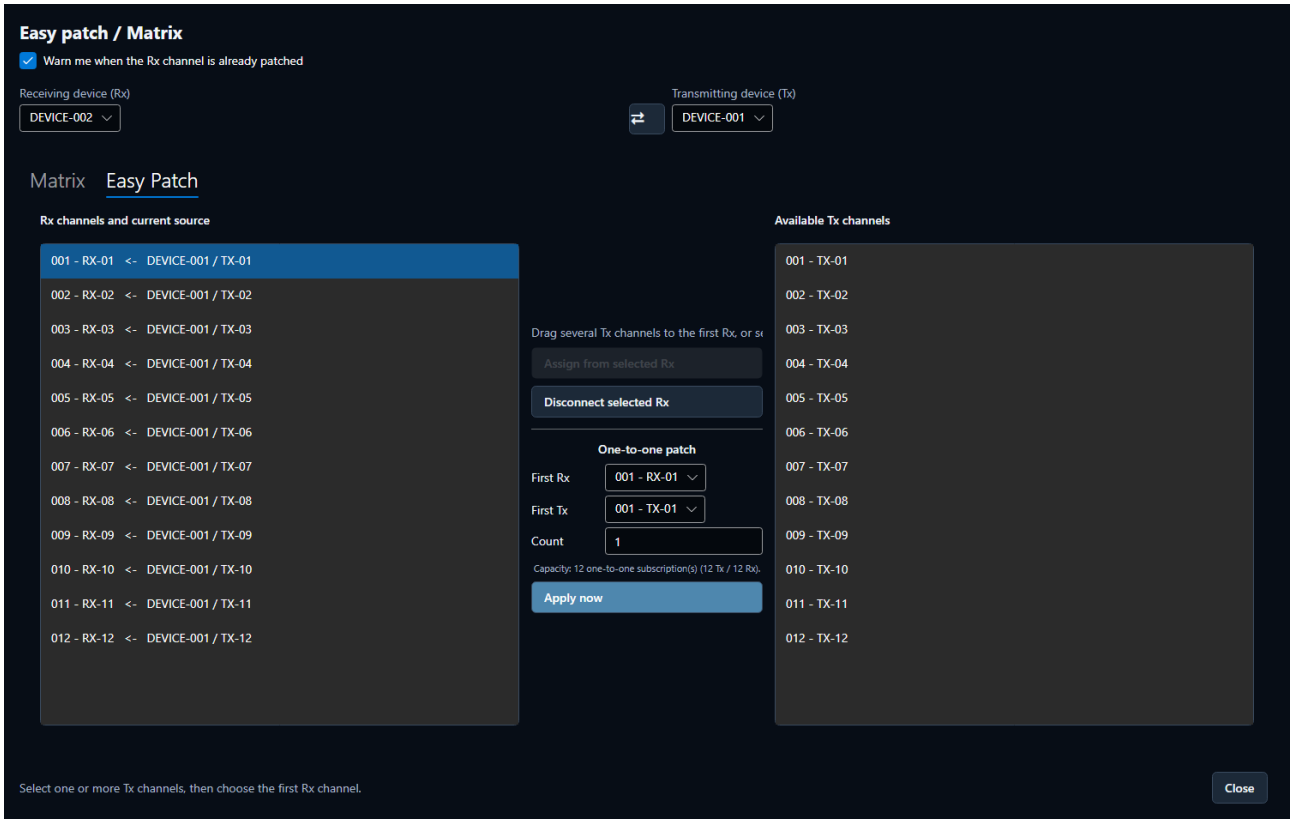

macOS/Avalonia interface, synthetic project.


Easy patch and Matrix show the same patch in two forms. In Selection and one-to-one patch, choose the starting Tx/Rx channels, channel count, and the offered patch action.

The first Tx is assigned to the first Rx, then both indexes advance together. Choose a count within both devices' limits. This never sends several Tx sources into one Rx.

The Rx-to-Tx list in the Patch tab provides a tabular view for comparison or removing a subscription. An operation in one view is reflected in the others.

The Easy patch / Matrix window can be enlarged separately. Device selectors and FLIP remain in that window. Closing it does not undo immediate changes already made.

14. Find sources and destinations

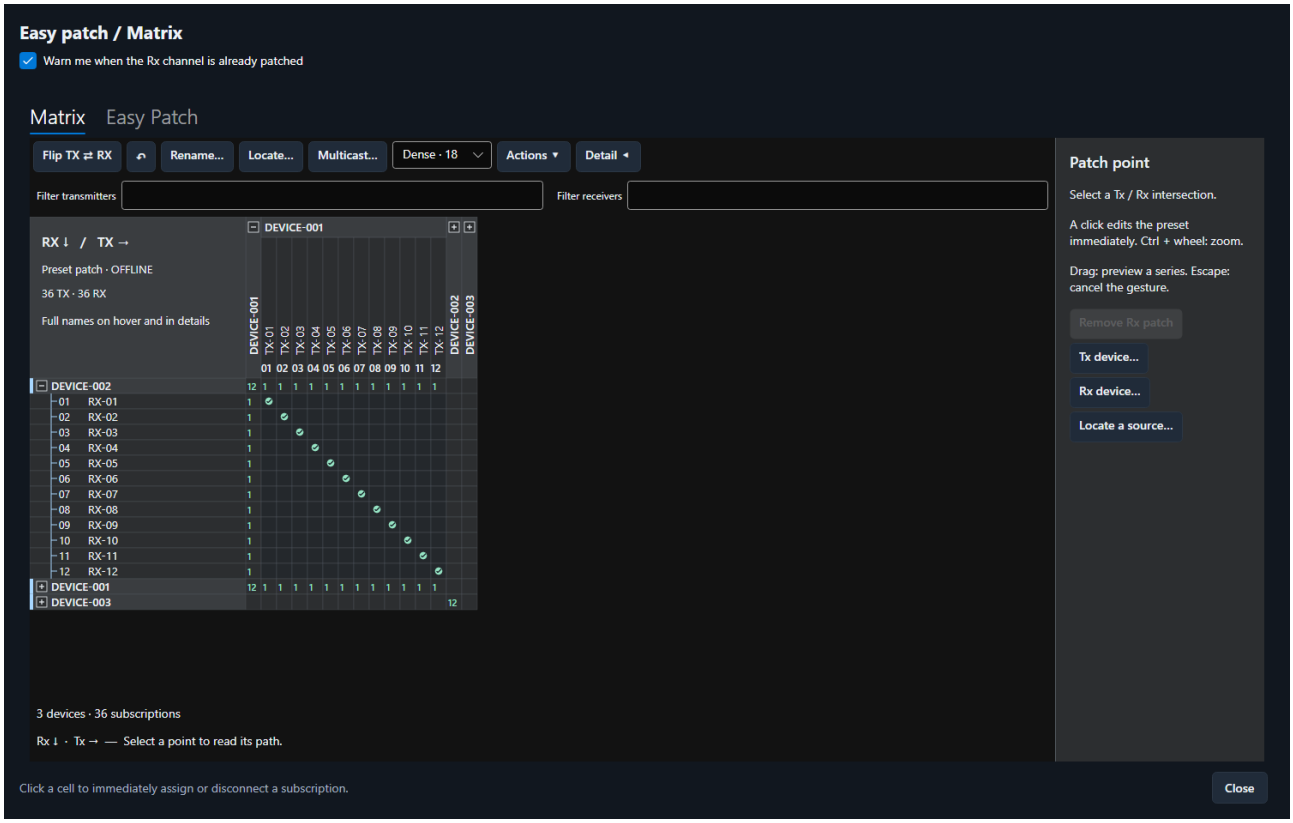

macOS/Avalonia interface, synthetic project.

An Rx channel's arrow finds its saved source and displays the matching Tx device and channel. An unpatched receiver has no source to target.

Locate, then Destinations of a Tx, lists its Rx destinations. Since one Tx can feed multiple devices, select the destination you want displayed in the matrix.

Navigation does not invent connections or change patching. It uses project subscriptions. Resolve missing or ambiguous references before following them.

After renaming, use these arrows to quickly check that a source still feeds the intended receivers. Validation is still required for references outside the displayed device pair.

15. Merge several installations

Open the starting configuration, choose Add configurations, then select the other XML files; they remain pending until the batch is applied. For conflicting names, the rename dialog distinguishes incoming devices before merging.

Review proposals rather than accepting them mechanically: equal names do not prove equal hardware. DCE treats technical identities separately from visible names.

After merging, check the import report, reused/added/renamed devices, channel counts, and subscriptions. Review sample rates, clocking, IP addresses, and network mode for the combined installation.

Keep the source presets. Stop if a conflict or unknown structure cannot be resolved and obtain a usable file. Offline XML merging changes no real devices.

16. Local StageFlow project

Local StageFlow project opens a .stageflow folder on an accessible disk. StageFlow Desktop is free and optional; it does not need to be running for this local workflow.


DCE reads local V1 and V2 formats. Save keeps the open format; Save As from V2 prepares a complete copy in a new directory without overwriting. Only explicit migration in StageFlow creates V2; ordinary DCE creation stays V1. V2 network sessions are refused. V1 with an SF02 table or a distinct common hash is read-only; create an explicit V2 copy in StageFlow.

Start from scratch immediately opens an empty in-memory configuration without asking for a name, path, XML file, or first device. Add devices from the bank. Save adds the Dante domain to the open project; Save As targets a new destination.

Other domains, such as patch sheets and plans, remain owned by their applications. DCE preserves their data and links entries through explicit UUIDs. Matching names alone never establish a reliable association.

If another application changes the Dante domain while you work, DCE reports a conflict rather than overwriting it. Reload and reconcile changes. Share the whole folder, not only project.json.

17. StageFlow LIVE and label reception

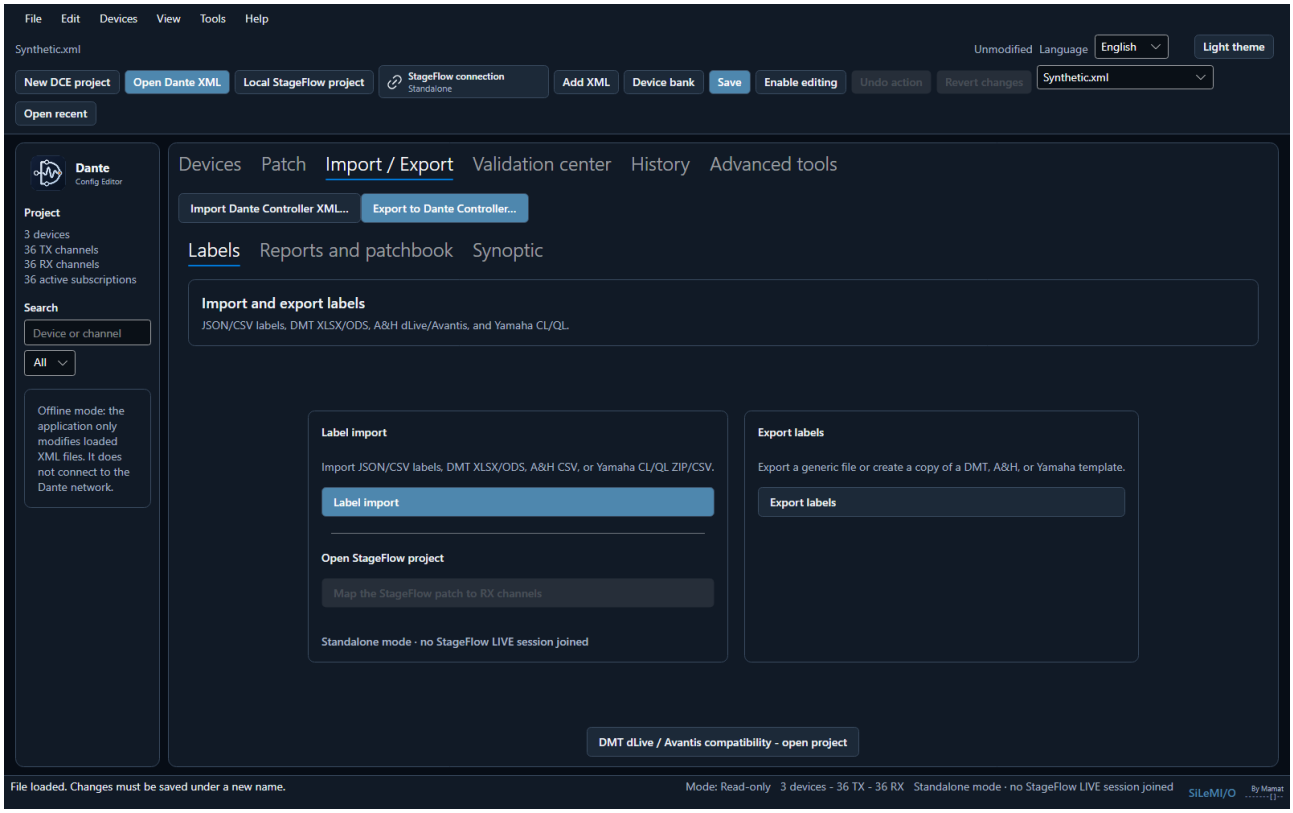

macOS/Avalonia interface, synthetic project.


The StageFlow LIVE button opens the connection center. Choose a discovered session or an explicit address, then enter the six-digit code displayed by the host. Joining is never automatic.

Project name, connection state, and alerts remain visible. Host pause differs from disabling local reception: a session may stay connected while new labels are no longer applied locally.

Only UUID-linked Rx channels participate in synchronization. No Tx is automatically matched to a StageFlow patch input merely because names agree. Review mappings and naming rules.

Alerts show previous/current labels, source, time, and change count. Acknowledge and Acknowledge all apply to this computer, not other participants. The local console controlling certain DCE views remains a separate Windows workflow.

18. Map patch entries to Rx

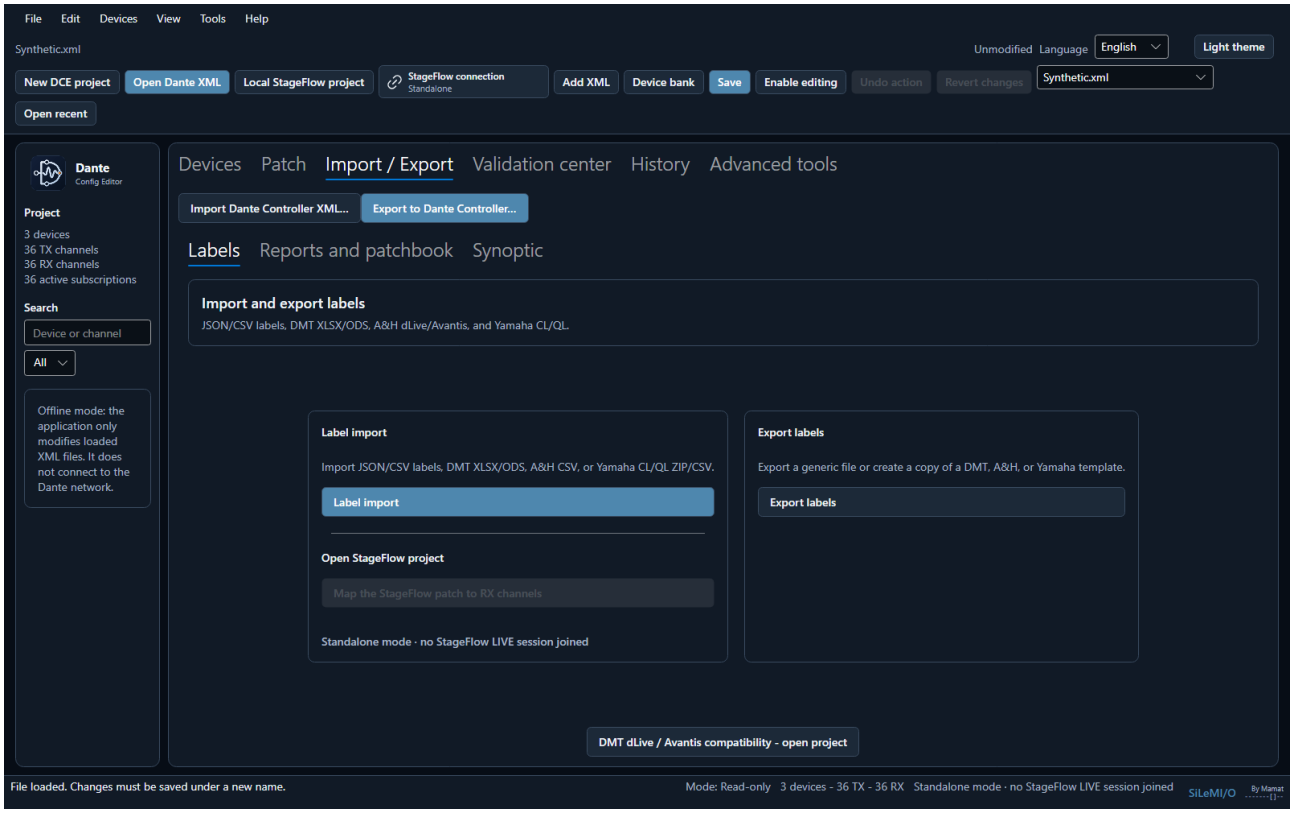

macOS/Avalonia interface, synthetic project.


Under Import / Export > Labels, use StageFlow patch import. Select the patch source and entries, then choose the Rx device and channel range.

Review each mapping before applying. Stored links use an entry's UUID, not just its row number or label. Later patch renames can be followed without losing the association.

Do not confuse physical input names, console labels, and Dante channel labels. Choose a naming rule suited to your workflow. Importing these names does not create audio subscriptions.

Check Rx range limits and the visible result in Devices. If a StageFlow entry was deleted, resolve the broken link instead of arbitrarily matching equal names.

19. Synoptic and vector deliverables

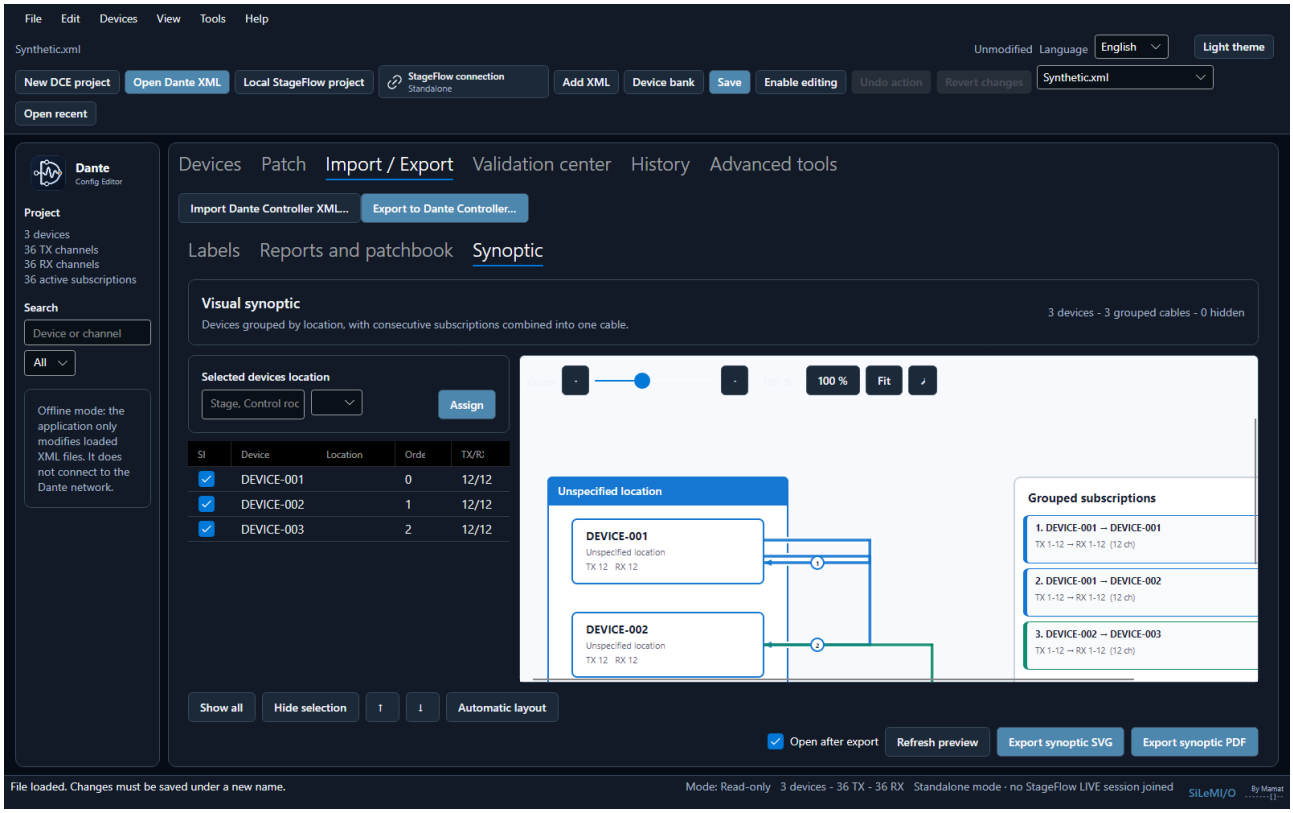

macOS/Avalonia interface, synthetic project.


Open Import / Export > Synoptic. Organize devices by zone and location to make flows readable. Displayed connections come from the project's subscriptions.

Move a device to adjust its position, or move a whole zone to relocate its group. The detached preview provides more space while retaining placement controls. Zoom changes the view, not channel counts.

Hide unnecessary elements and review grouped links. A simplified drawing does not imply missing subscriptions; filters may hide part of the installation.

Export PDF for readable distribution or SVG for editing in a vector application. In a StageFlow project, Save keeps positions, zones, ordering, and visibility in the Dante domain; these presentation data never alter XML patching.

20. Labels, reports, and patchbook

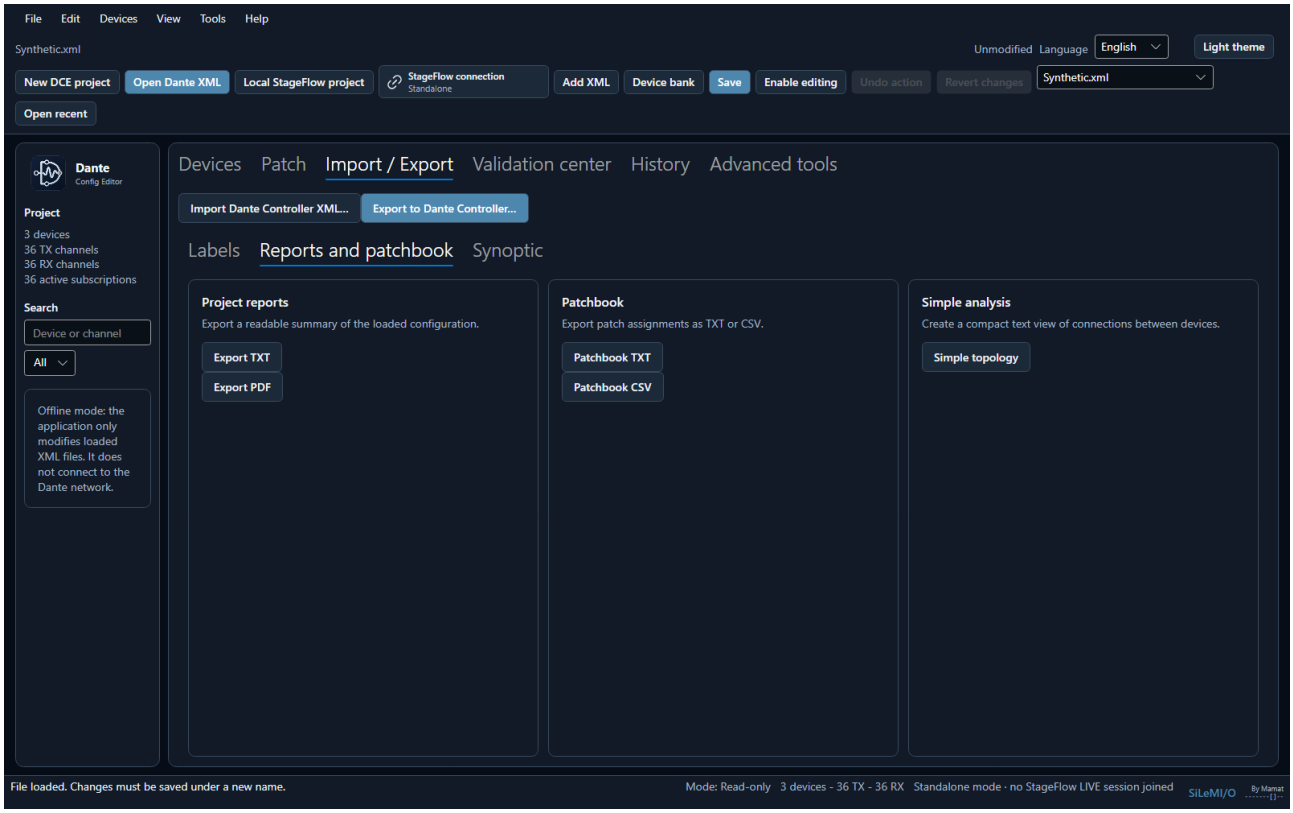

macOS/Avalonia interface, synthetic project.


Import / Export groups label exchange, reports, and synoptic output. Choose a format suited to the receiving tool and verify Tx/Rx direction and target device.

DMT formats and Yamaha CL/QL or Allen & Heath workflows target specific structures. A Yamaha bank template does not automatically add native import/export for every Yamaha editor.

After importing, review the report and transformed labels: length limits, forbidden characters, or duplicates can change the intended result. Keep the source file before applying corrections.

Reports and patchbooks support preparation and operating documentation. They are not Dante Controller presets. Use XML output for Dante configuration and review it in Dante Controller.

21. Validation, saving, and history

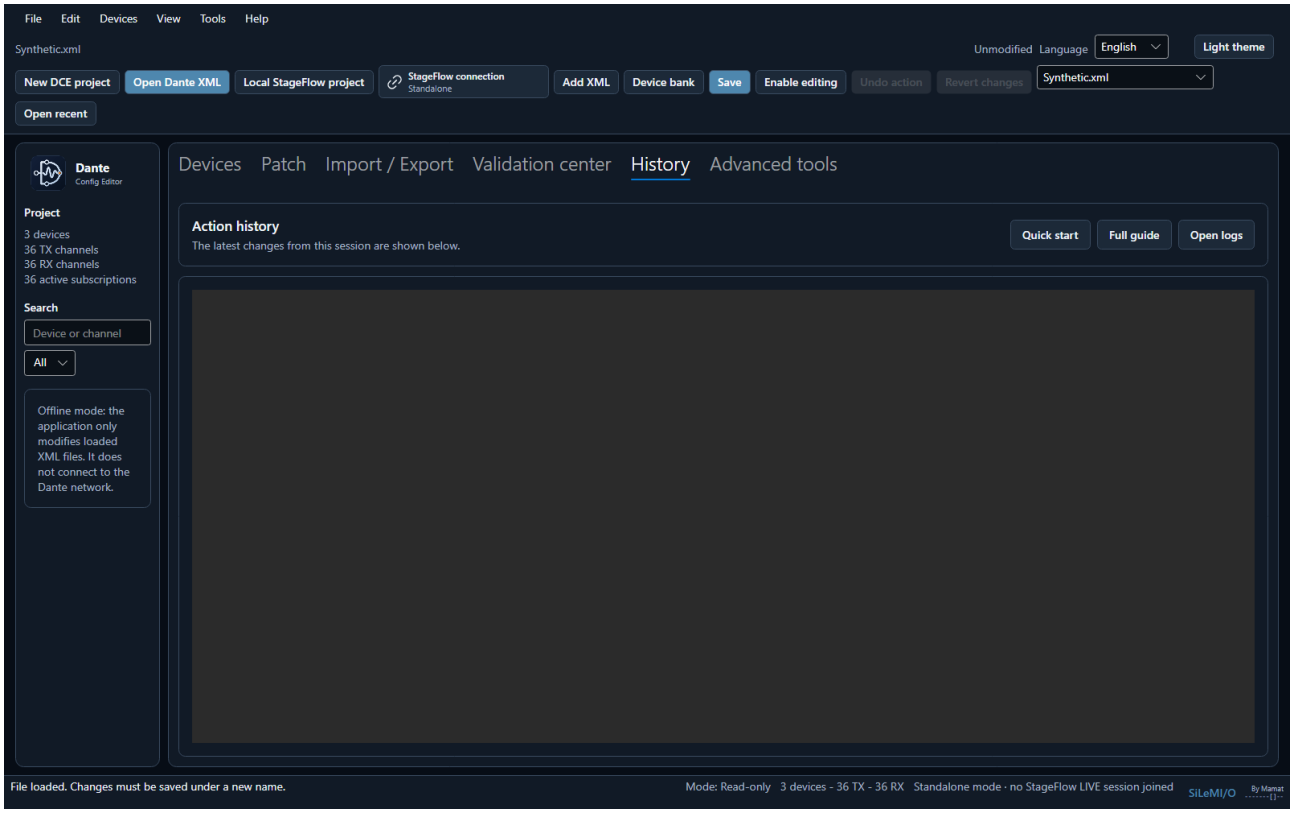

macOS/Avalonia interface, synthetic project.


Before saving, open the Validation center. Export preflight distinguishes blocking errors from warnings. Read the affected element, device, and suggested correction. Unused Rx channels and devices intentionally lacking Tx or Rx are not reported as anomalies. A reference to a Tx missing from a partial preset remains information and does not prevent export.

In standalone mode, Save As offers a new .stageflow project or XML file. Explicitly choose XML for Dante Controller output. Keep the original preset under another name.

In a StageFlow context, Save updates the Dante domain. To produce a Dante Controller file, choose File > Export to Dante Controller, then a .xml file outside the StageFlow folder. The copy is checked before writing; the open project, pending edits, and history remain unchanged, including on cancellation or failure.

History helps explain operations. Undo action reverses an available history operation; Revert changes discards unsaved work. Neither replaces backups on disk.

22. Atomic Bomb and resets

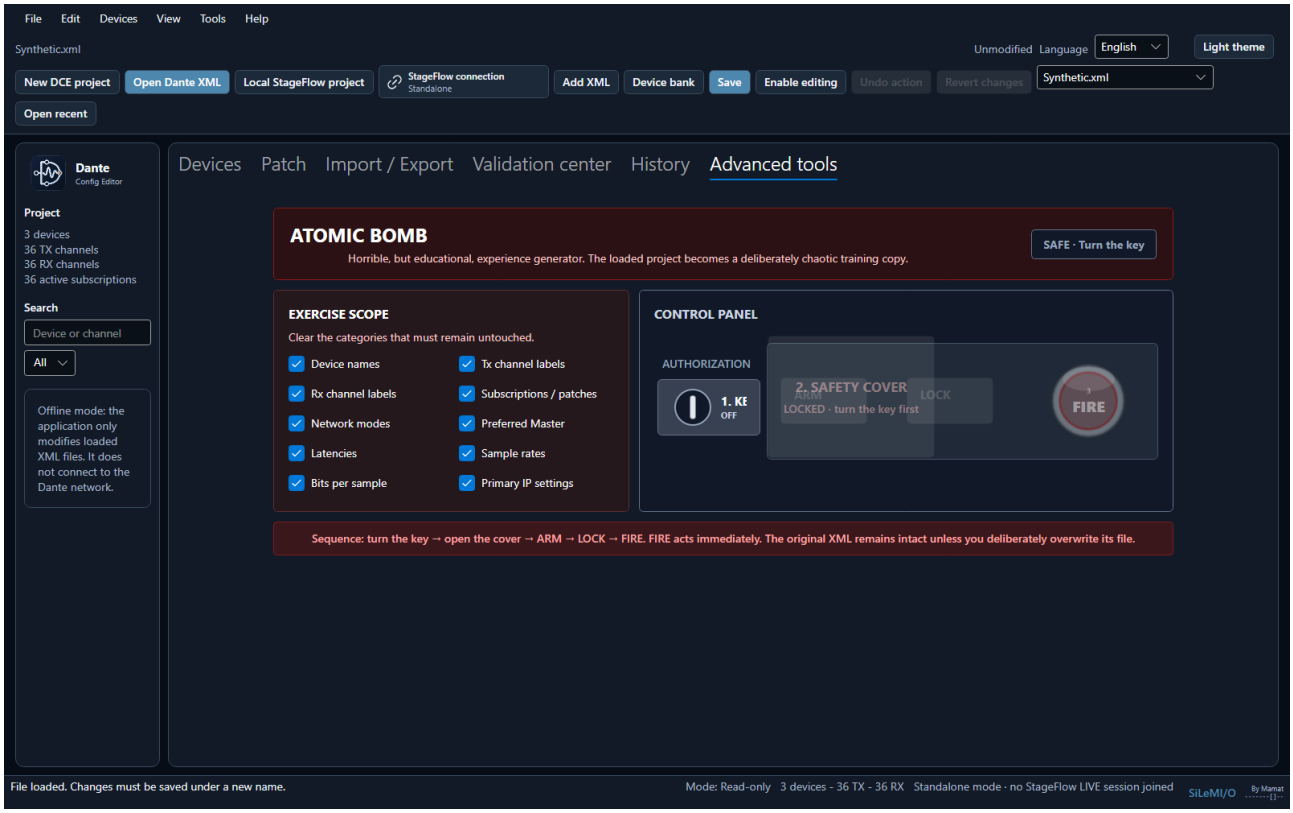

macOS/Avalonia interface, synthetic project.

Atomic Bomb is a deliberately playful training generator. Use only a copy or training project, never your sole production configuration.

Choose affected properties. The key unlocks the cover; the cover protects ARM, LOCK, and FIRE, operated in order. Review the scope before firing.

Targeted names, labels, patches, or settings can become intentionally inconsistent. This is a diagnostic exercise, not a proposed operating configuration.

After training, use history or reopen your reference copy. Channel/device resets elsewhere in DCE serve more focused preparation tasks, but also require checking their effect on patching.

23. Support and final operating checks

When reporting a problem, record the DCE version, macOS version, Intel/Apple Silicon architecture, language, theme, and exact steps. Include a readable screenshot and useful logs, without a complete license code or unnecessary personal data.

Where possible, provide a small XML reproducer. Do not publish a client project or StageFlow domain containing private information without permission.

After exporting, reopen the XML in DCE, then import it into Dante Controller. Check role-to-hardware mapping, labels, subscriptions, sample rates, redundancy, addresses, and clocking.

Automated tests and this guide's rendered views do not prove your real network works. The author has performed hardware validations, but every final installation still requires review. DCE remains an offline editor independent of Audinate.