



Suite practical guide

One project, several tools - from patch preparation to live operation

StageFlow · StageDesk · StageMark · StageMon · Dante Config Editor · AutoCAD


v2027 edition · user guide

Windows and macOS: check the availability matrix. StageFlow and StageMon for Mac are still being ported and are not available.

SiLeMIO / By Mamat----[]---

The idea in one minute

Every application in the range works on its own. As soon as several tools open the same **.stageflow** folder, they share one project without mixing responsibilities. StageFlow is free and optional: it becomes the central console only when you choose to use it.

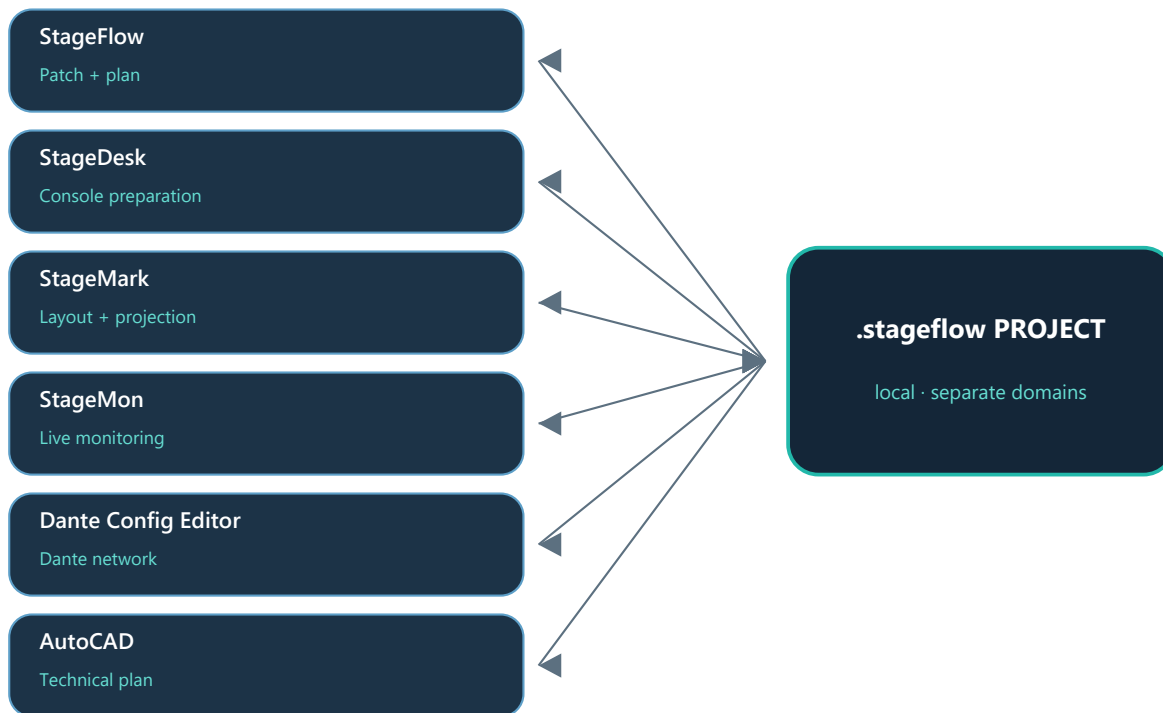

Essential rule

Each application writes to its own project domain. Other domains are preserved, including when several tools enrich the project at the same time.

Who is this guide for?

For people discovering one application and for teams using the whole suite. Start with the short workflow, then open only the chapters that match your role.

Contents

Windows and macOS availability

- 1 · Choose a starting point
- 2 · Build the patch
- 3 · Understand the .stageflow project
- 4 · Prepare with specialist applications
- 5 · Use StageFlow as a central console
- 6 · One connection centre
- 7 · Phones and tablets
- 8 · OSC, MIDI and Stream Deck
- 9 · Safety and troubleshooting
- 10 · Quick workflows and reference

Windows and macOS availability

Each application is delivered separately. This guide describes the v2027 edition; it does not turn a work-in-progress port into an available application.

Application	Windows	macOS
StageFlow	Native application*	Port in progress - not available
StageDesk	Native application*	Native Intel / Apple Silicon*
StageMark	Native application*	Native Intel / Apple Silicon*
StageMon	Native application*	Port in progress - not available
Dante Config Editor	Native application*	Native Intel / Apple Silicon*
AutoCAD	StageFlow 2026 connector*	StageFlow connector not available

* Install only a v2027 installer actually published on the application's Releases page for your platform. A built native application or a Windows release does not guarantee that its Mac edition is available. Also check its release notes.

Where is the show hosted?

The StageFlow host currently runs on **Windows**. Compatible Mac editions of StageDesk, StageMark and Dante Config Editor can join it over the local network with its six-digit code. The Mac client does not need the StageFlow application installed.

Local console and network LIVE are different links

The StageFlow launch cards and console shortcuts described here apply to the Windows workstation. A control channel **on the same Mac** is implemented in StageDesk, but not in StageMark or Dante Config Editor. Both can still join a **StageFlow LIVE session** over the network. Only commands actually offered by the connected application are available.


Local projects, remotes and hardware

A native project or a **Local StageFlow project** works without a host or network connection. Remotes run in a phone or tablet browser; StageMark and StageMon keep standalone QR access on their delivered platforms. AutoCAD for Mac does not make the Windows StageFlow connector Mac-compatible.

Before the first show

Check the version actually installed, its manual's limitations and your hardware. Projection, audio interfaces, MIDI and the connector in real AutoCAD require acceptance on your installation.

1 · Choose a starting point

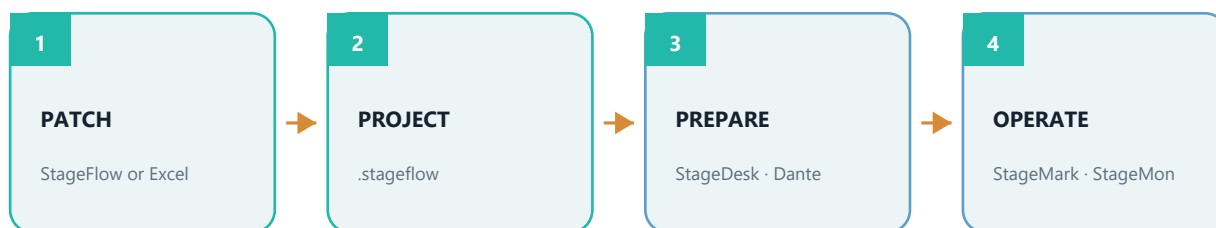

You may start in StageFlow, in Excel, or directly in the application you need. The result can join the shared project later: installing StageFlow is never mandatory.

Application	Primary role
StageFlow	Patch, groups, A4 Excel, simple plan and coordination
StageDesk	Transfer labels and settings between consoles and audio software
StageMark	Layout, cues, projection and show control
StageMon	A/B monitoring, 2 to 6 configured circuits, source selection
Dante Config Editor	Prepare and validate Dante configurations offline

Three workflows, three separate choices

- **<Application> project**: create, open and save the native project without StageFlow.
- **Local StageFlow project**: open the .stageflow folder accessible on this computer; the StageFlow application is not required.
- **StageFlow LIVE session**: select the show and host on the network, then voluntarily join with the six-digit code.

Good habit	Give the .stageflow folder a clear show name and keep it inside the backed-up production folder. Do not treat it as temporary data.
------------	---

2 · Build the patch

In StageFlow, choose the number of pairs and groups. The list offers increments of 20, but any allowed value can be typed. Columns stay balanced and group sheets are designed for landscape A4 printing.

Fast entry

- **Enter** accepts the cell and moves down.
- **Tab** accepts the cell and moves right.
- **Ctrl+C / Ctrl+V** copies and pastes like Excel.
- The fill handle extends a value or sequence down the table.

Common pairs and overrides

The “Common to all groups” set holds recurring sources. For every pair in every group, choose whether the common value appears. A local value overrides only that field; other fields may remain inherited.


- **Show all** enables common pairs for the selected group.
- **Hide all** removes them from that group without deleting common data.
- Each pair has its own visibility choice.
- Inherited values appear grey and italic; local overrides remain clear.

Before reducing

Reducing the pair count may remove data above the new limit. StageFlow asks for explicit confirmation.

3 · Understand the .stageflow project

A .stageflow project is a structured folder. It contains the manifest, shared patch and application-owned domains. It can be copied, backed up and archived with the rest of the show. For transfer or archiving, StageFlow can also package it as one **.stageflowpack** file without changing its internal organization.

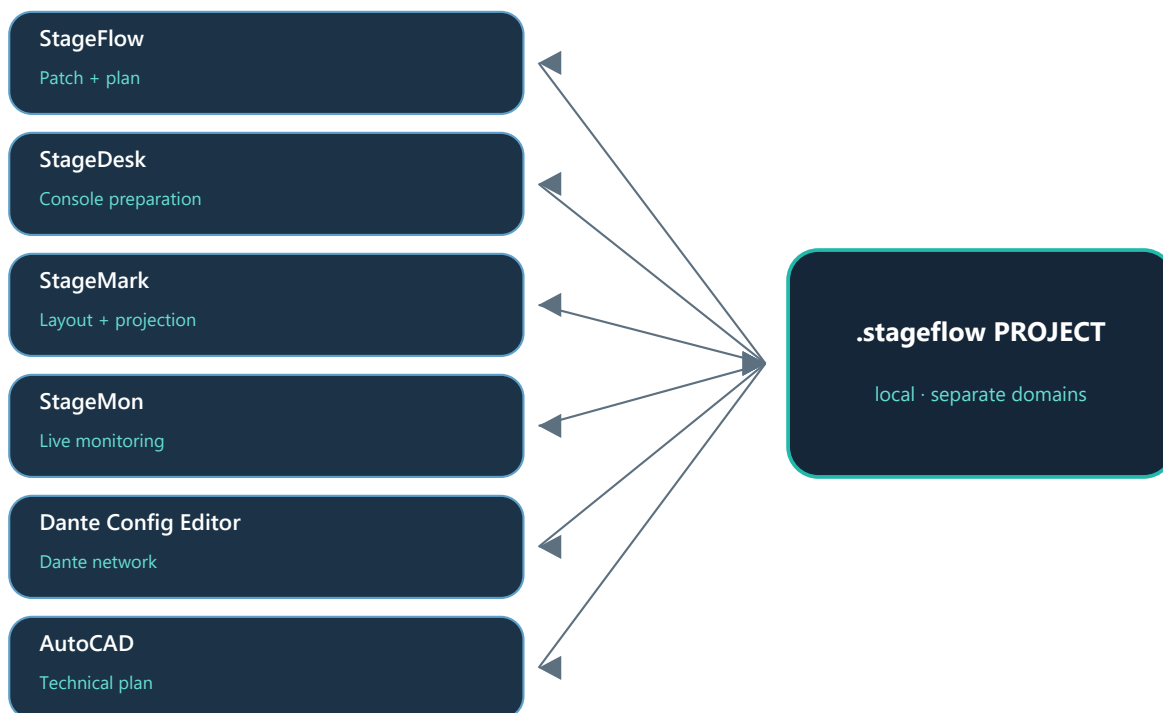

Independence and continuity

- Every application can create, open and save a .stageflow project without StageFlow.
- Someone who owns only StageDesk, StageMark or StageMon can start immediately.
- If another tool is installed later, the same project continues without a global conversion.
- AutoCAD reads the patch and writes only the CAD domain through its connector.

Simultaneous saving

Applications take short locks, then merge independent changes. Two edits to different fields are preserved. If two people change the exact same value, saving is refused and the conflict remains visible: one version never silently overwrites the other.

Remember

The shared project is the source of truth. Excel exports and native projects remain working or exchange tools; they do not automatically overwrite the shared folder.

Excel as a bridge

The StageFlow V3 workbook can be created or imported from StageFlow, StageDesk and StageMon. It carries group count, common pairs, visibility choices and one sheet per group. A hidden technical sheet preserves identifiers for reliable round trips.

- Use **Export Excel** to obtain a pre-filled template.
- Use **Refresh from Excel** to reread the same workbook without losing identifiers.
- Each group sheet fits one landscape A4 page; above 48 pairs, check text size in Print Preview.
- Labels are “Balances” in French and “Sound check” in English; “Overrides” means local replacements.

4 · Prepare with specialist applications

StageDesk

Retrieve a patch from a console, audio application or Excel, edit labels, colours and useful settings, then project it to a destination. The application can create the .stageflow project, update its patch and preserve other domains.

Dante Config Editor

Prepare Dante devices, TX/RX channels, subscriptions and validation offline. From a StageFlow project, associate patch lines with a device’s RX channels to reuse names. Dante Config Editor never controls the live Dante network.

StageMark

Draw the layout, place patch sources, prepare cues and projection. SHOW and BLACKOUT remain visible, and local projection safety always has priority.

StageMon

Prepare the default A/B monitor mixes, select sources, change patches and operate monitoring cues. Circuits C to F appear only after configuration in StageMon: two to six circuits, never fictional controls. Local level limits, mutes and audio protections cannot be bypassed by StageFlow.

Install only what you need

Choose only the applications required on the workstation. A missing card remains visible but greyed out, with a discreet link to its download page.

AutoCAD

The StageFlow Windows installer can add the AutoCAD 2026 connector for Windows. In the SILEMI/O ribbon, the StageFlow Patch palette reads the current project and publishes technical objects to the CAD domain. StageFlow still works without AutoCAD through its simple built-in plan.

The connector distinguishes a standalone drawing, a Local StageFlow project and a StageFlow LIVE session. For network LIVE, select the host and enter all six digits; the received patch stays in memory, with explicit refresh and CAD-only publication. Acceptance in real AutoCAD is still required before operating this version.


5 • StageFlow as a central console

On Windows, the console displays one card per application: installed or missing, closed, open, on the correct project, manually connected or LIVE. Commands depend on the connector actually available; Mac limits are in the availability matrix. Unneeded cards can be hidden without uninstalling applications.

- **Open** starts the installed application on the current StageFlow project.
- **Connect** asks an existing instance to join this project.
- **Show** brings the existing window to the foreground.
- Two essential shortcuts may appear on a card, such as SHOW / BLACKOUT or Clear cue A / B.
- A refused command explains why; StageFlow never bypasses the owning application's safety confirmation.
- **Compact console** keeps suite controls in a small window; return to the full window to edit the patch.

6 • One connection centre

The large status button opens the **StageFlow LIVE session** centre. Project, other computers and QR access are together here. **Computers / applications / mobiles** are counted separately: three applications on one PC are not three PCs. Written status and an icon always accompany colour.

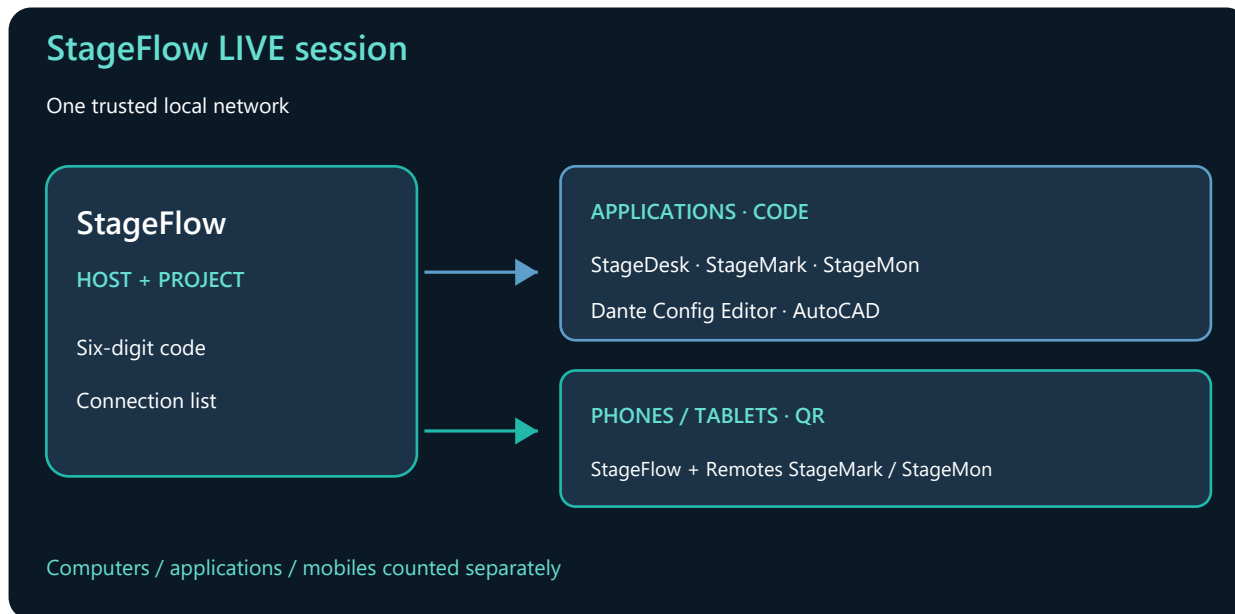

Host or join

- **In StageFlow:** open the project, select the network in StageFlow LIVE session, then **Allow and broadcast**. StageFlow hosts, shows the code and lists clients; it does not join itself.
- **In another application:** choose **StageFlow LIVE session**, select the discovered show and host, or enter the address provided by the host.
- Copy all **six digits**, including leading zeros. No remote folder is requested. Wait for **connected · synchronized**.
- **Disconnect** returns the application to standalone immediately. Rejoining after a loss or stop is always voluntary.

Code and session	The code stays valid for this session. Stopping and restarting the session creates a new code. Correct a wrong code without restarting the application; if the session changed, select it again.
------------------	--

Read the status

Standalone · offline: no LIVE link. **Available:** a session can be joined. **Connected · synchronized:** active link. **Connection lost, session stopped, lease expired or conflict:** read the reason and take action before resuming.

When LIVE is active

- StageFlow saves after a short delay and publishes the current session.
- Compatible applications detect changes to groups, labels and their relevant domains.
- Several computers on the same local network may join with the displayed code, then detach and continue independently.
- Simultaneous writes to independent areas are merged.
- A conflict on the same value stops the write and requires a human decision.
- Turning LIVE off deletes nothing; applications simply return to manual operation.

Label alerts

Label alerts stays on the main page. The host chooses when to emit them; every LIVE client receives them **by default**. The persistent banner shows **old** → **new**, origin, time, a counter and a list. **Local acknowledgement**, individual or bulk, affects only alerts present at the click, never another recipient's alerts or a new alert arriving later.

The host can **Pause change notifications**, then enable them again without stopping LIVE: changes made during the pause are not replayed. Each recipient can also turn reception off locally, without affecting others and without a backlog on re-enabling. Only source labels trigger alerts, never microphones, comments, groups or sound-check notes.

Operational safety

LIVE synchronizes data and project states. It does not start projection, start audio or remove a mute without an explicit command provided by the owning application.

7 • Phones and tablets

In the **StageFlow LIVE session** centre, select the Wi-Fi or Ethernet network shared with the devices, then **Create QR code** under **Phones and tablets**. StageFlow saves the project if required, enables LIVE and displays the QR. Multiple devices may connect: the mobile QR and the six-digit application code serve different purposes.

The three mobile tabs

- **StageFlow**: select, add, rename or delete a group with confirmation; edit sources, microphones and comments; choose common pairs; adjust Sound check / Show; save.
- **StageMark**: display the real StageMark remote with cues, SHOW and BLACKOUT.
- **StageMon**: display the real StageMon remote with the same controls as its normal remote access.

Module access conditions

StageMark or StageMon must be open on the same project and LIVE session with its remote ready, on this computer or another network workstation. Otherwise the tab explains what is missing. On a phone/tablet, or at a different network address, the real Remote opens as a full page; use the browser **Back** button to return to StageFlow.

StageMark and StageMon keep their standalone QR access without StageFlow. StageDesk and Dante Config Editor do not have their own QR Remote: they join the session to work on the project.

Session protection

Up to 24 mobiles have their own connection and alert acknowledgements. Access is limited to the chosen local network; each application keeps its safeguards. **Stop** immediately revokes the link. Starting again creates a new QR.

Trusted network

The portal uses HTTP on the local network. Use trusted Wi-Fi or Ethernet, never forward the port to the Internet, and reject an overly broad firewall rule.

8 • OSC, MIDI and Stream Deck

In **StageFlow on Windows**, open **Tools** → **OSC • MIDI • Stream Deck**. The shared catalogue controls StageFlow and commands actually exposed by StageMark and StageMon. For standalone use, check the application's manual for features supported on your platform.

OSC

- By default, StageFlow listens only on this computer at 127.0.0.1:18040.
- Choose a network adapter or 0.0.0.0 only when another computer on the trusted network must send commands.
- The traffic log shows received, accepted and refused messages.
- Command addresses and state feedback can be customized independently.

MIDI and Stream Deck

- For MIDI, select an input, click Learn next message, then use the control you want to map.
- An optional MIDI output can return state to compatible controllers.
- The Stream Deck plugin is included with StageFlow: install it from the same screen, place the SiLeMIO action on a key, then choose the command.
- StageMark and StageMon commands are available only while the owning application has joined the current LIVE project.

External command reference

These identifiers and OSC addresses are shared by the standalone applications and the StageFlow LIVE relay.

StageFlow

Command	Label	OSC address
stageflow.project.save	Save project	/silemio/stageflow/project/save
stageflow.project.reload	Reload project	/silemio/stageflow/project/reload
stageflow.group.select	Select group	/silemio/stageflow/group/select
stageflow.group.next	Next group	/silemio/stageflow/group/next
stageflow.group.previous	Previous group	/silemio/stageflow/group/previous
stageflow.common.show-all	Show all common pairs	/silemio/stageflow/common/show-all
stageflow.common.hide-all	Hide all common pairs	/silemio/stageflow/common/hide-all
stageflow.live.enable	Enable LIVE	/silemio/stageflow/live/enable
stageflow.live.disable	Stop LIVE	/silemio/stageflow/live/disable
stageflow.live.toggle	Toggle LIVE	/silemio/stageflow/live/toggle

StageMark

Command	Label	OSC address
stagemark.output.show	SHOW	/silemio/stagemark/output/show
stagemark.output.blackout	BLACKOUT	/silemio/stagemark/output/blackout
stagemark.cue.select	Select cue	/silemio/stagemark/cue/select
stagemark.cue.next	Next cue	/silemio/stagemark/cue/next
stagemark.cue.previous	Previous cue	/silemio/stagemark/cue/previous

StageMon

Command	Label	OSC address
monitoring.cue.clear-a	Clear Cue A	/silemio/stagemon/cue/clear-a
monitoring.cue.clear-b	Clear Cue B	/silemio/stagemon/cue/clear-b
monitoring.patch.select	Select patch	/silemio/stagemon/patch/select
monitoring.patch.next	Next patch	/silemio/stagemon/patch/next
monitoring.patch.previous	Previous patch	/silemio/stagemon/patch/previous
monitoring.audio.start	Start audio	/silemio/stagemon/audio/start
monitoring.audio.stop	Stop audio	/silemio/stagemon/audio/stop
monitoring.monitor-a.mute-toggle	Toggle monitor A mute	/silemio/stagemon/monitor-a/mute-toggle
monitoring.monitor-b.mute-toggle	Toggle monitor B mute	/silemio/stagemon/monitor-b/mute-toggle

Always standalone

OSC, MIDI and Stream Deck are optional. Applications keep their local controls and continue to work without StageFlow.

9 • Safety and troubleshooting

An application card is greyed out

- Check that it is installed under its current name: StageFlow, StageMark, StageMon, StageDesk or Dante Config Editor.
- If installed but closed, click Open.
- If open on another project, click Connect and accept the proposal in that application.
- If still unavailable in LIVE, verify the same projectId and session.

The phone cannot reach the QR

- The phone and PC must be on the same local network.
- Choose the correct address in StageFlow LIVE session.
- Allow StageFlow only on the private network if Windows asks for firewall access.
- A guest network may isolate devices; use a shared technical network instead.

The project reports a conflict

Do not keep saving in a loop. Read the message, compare the local value with the shared value, then choose to reload or reapply the edit. Other project domains remain protected.

Printed text is too small

Each group stays fitted to one landscape A4 page. Above 48 pairs, text becomes smaller: remove unused pairs or shorten comments. Excel Print Preview lets you check readability before printing.

What the computer cannot verify alone

An offline project does not prove that Dante subscriptions, cabling, gains, clocking, licences, audio interfaces or real projection are ready on site. Always perform hardware acceptance tests.

When in doubt

Stop LIVE and the remote, save a copy of the .stageflow folder, then investigate outside live operation.

10 • Quick workflows

I only need an Excel patch

Open StageFlow → New → choose pairs and groups → fill common and group data → Export Excel → Create printable workbook.

I start in StageDesk or StageMon

Create or import the patch → choose New StageFlow project → save the .stageflow folder → continue in the same application. StageFlow can be installed later.

I prepare a complete operation

Patch → .stageflow project → StageDesk / Dante Config Editor → StageMark layout → StageMon monitoring → open in StageFlow → LIVE → one QR → hardware acceptance.

StageFlow is free and optional. Install only the tools you need; the shared project is ready to evolve with your team.

Discover StageFlow and its published versions: [official StageFlow page](#). Choose only an installer published for your platform and check its release notes.

SiLeMIO / By Mamat----[]---