



Suite practical guide

One project, several tools - from patch preparation to live operation

StageFlow · StageDesk · StageMark · StageMon · Dante Config Editor · AutoCAD


2027.3 edition · user guide

All five applications are published for Windows and macOS, sometimes with different version numbers by platform. Dante Config Editor for Windows is delivered as 2027.0.2. The AutoCAD connector remains Windows-only.

SiLeMIO / By Mamat----[]---

The idea in one minute

Every application in the range works on its own. As soon as several tools open the same **.stageflow** folder, they share one project without mixing responsibilities. StageFlow is free and optional: it becomes the central console only when you choose to use it.

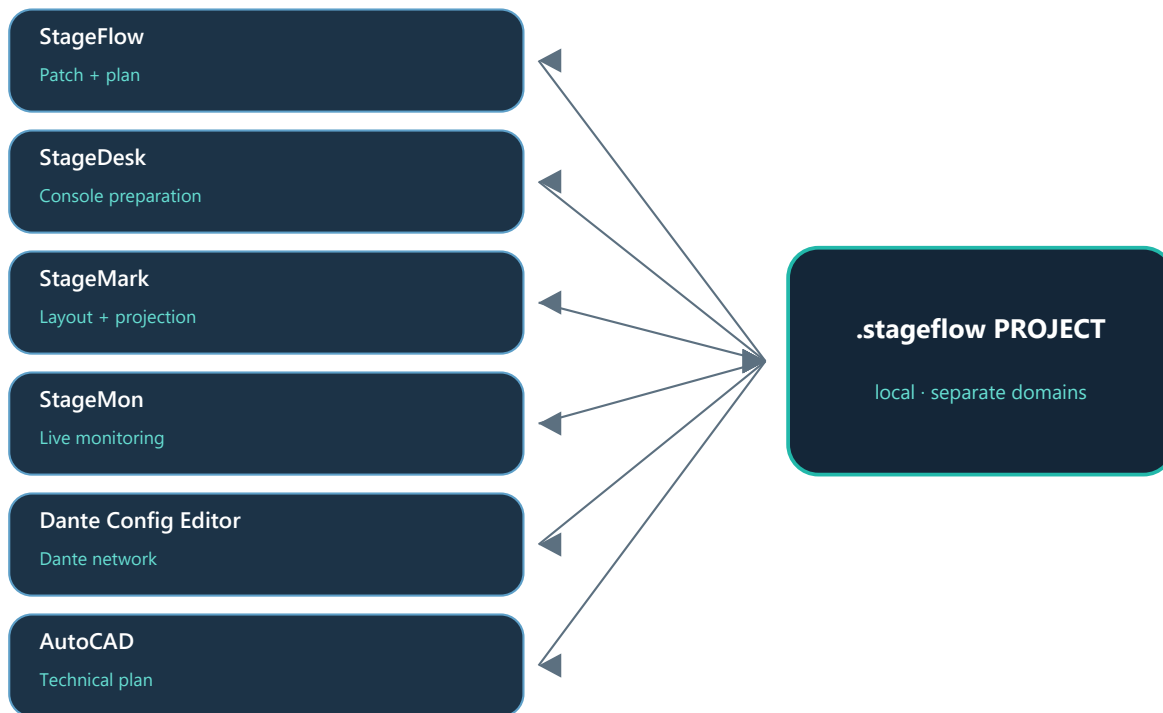

Essential rule

Each application writes to its own project domain. Other domains are preserved, including when several tools enrich the project at the same time.

Who is this guide for?

For people discovering one application and for teams using the whole suite. Start with the short workflow, then open only the chapters that match your role.

Contents

Windows and macOS availability

- 1 · Choose a starting point
- 2 · Build the patch
- 3 · Understand the .stageflow project
- 4 · Prepare with specialist applications
- 5 · Use StageFlow as a central console
- 6 · One connection centre
- 7 · Phones and tablets
- 8 · OSC, MIDI and Stream Deck
- 9 · Safety and troubleshooting
- 10 · Quick workflows and reference

Windows and macOS availability

Each application is delivered separately. The 2027 edition of this guide does not force the same build number or Latest status on every system: use the download button for your platform.

Application	Public Windows	Public macOS
StageFlow	v2027.0.2 · Windows 11 x64	v2027.0.1 · macOS 14+ · Intel / Apple Silicon*
StageDesk	v2027.0.4 · Windows 10+ x64	v2027.0.2 · macOS 12+ · Intel / Apple Silicon*
StageMark	v2027.0.2 · Windows 11 x64	v2027.0.0 · macOS 12+ · Intel / Apple Silicon*
StageMon	v2027.0.2 · Windows 10/11 x64	v2027.0.1 · macOS 12+ · Intel / Apple Silicon*
Dante Config Editor	v2027.0.2 · Windows 11 x64	v2027.0.0 · macOS 11+ · Intel / Apple Silicon*
AutoCAD	StageFlow v2027 · AutoCAD 2026 Windows	Connector not available

* The stated macOS minimum comes from the package; native acceptance may have used a newer system. These packages do not carry a Developer ID signature and are not notarized by Apple. Some products use an ad-hoc integrity signature when their release says so; do not extend that claim to the others. Verify the official source and never disable macOS protections globally.

Reference snapshot: deliveries verified on 6 September 2026. Later fixes may ship on Windows before Mac; they never rename existing Mac packages. Site pages and release notes provide the most recent available versions.

Where is the show hosted?

StageFlow can host the show on **Windows or macOS**. Compatible applications voluntarily join that StageFlow LIVE session over a trusted local network with its six-digit code. A Local StageFlow project remains a folder on the workstation and creates no network connection.

Local console and network LIVE are different links

On Windows and macOS, StageFlow shows application cards and can open an installed tool. On the same Mac, direct project handoff is confirmed for StageDesk; StageMark and Dante Config Editor can be opened on the project but join LIVE explicitly; StageMon joins from its own centre. Over the network, only commands advertised and enabled by the synchronized application are offered.

Local projects, remotes and hardware


A native project or a **Local StageFlow project** works without a host or network. StageMark and StageMon keep standalone QR access on their delivered platforms. StageMon audio start stays local on Mac. AutoCAD for Mac does not make the Windows StageFlow connector Mac-compatible.

Before the first show


Check the version actually installed, its manual's limitations and your hardware. Projection, audio interfaces, MIDI and the connector in real AutoCAD require acceptance on your installation.

Two real 2027 interfaces

Locate the patch in the centre, groups on the left and the suite console at the bottom. These 2027 reference views predate the new Guide and Connection button layout.

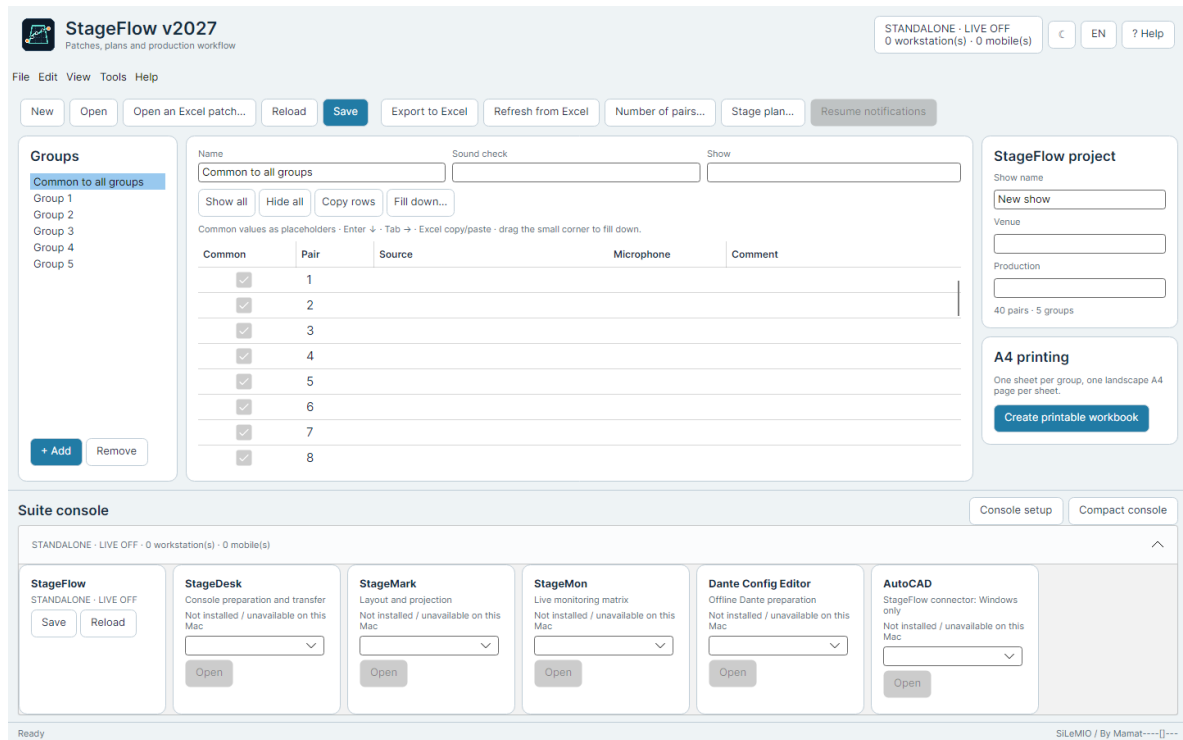


StageFlow v2027 cross-platform native interface: patch, project and suite console.

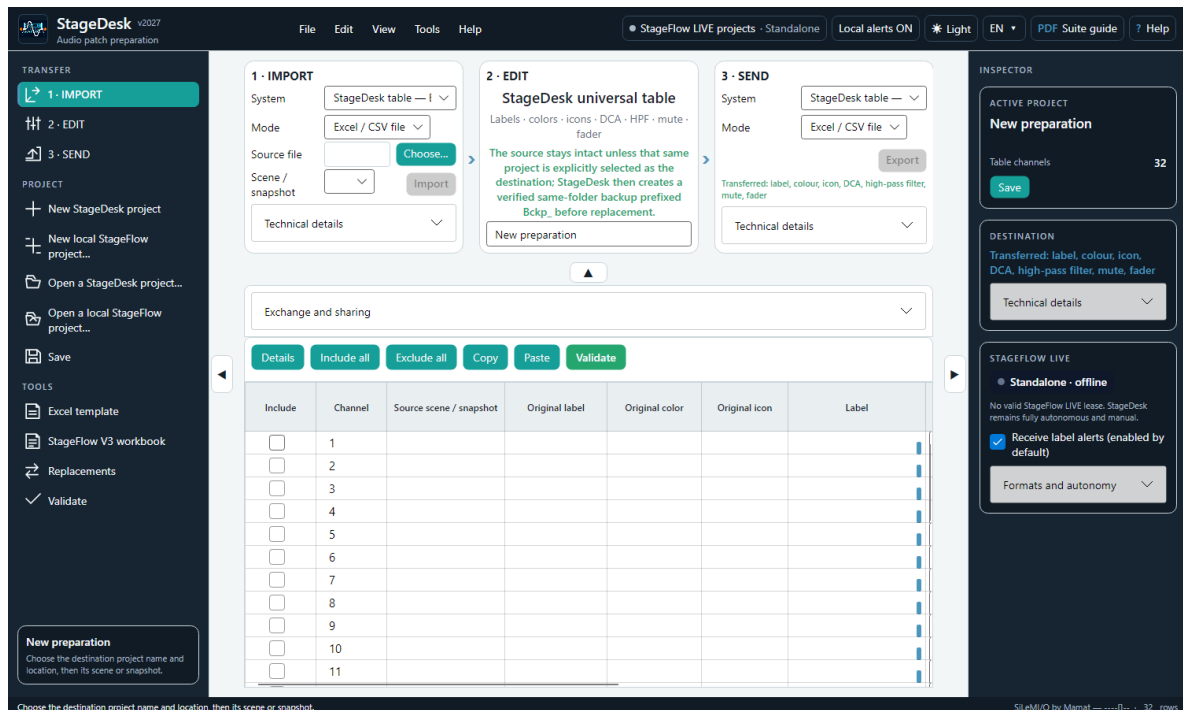

StageDesk v2027: import, edit and send from the preparation table.

1 · Choose a starting point

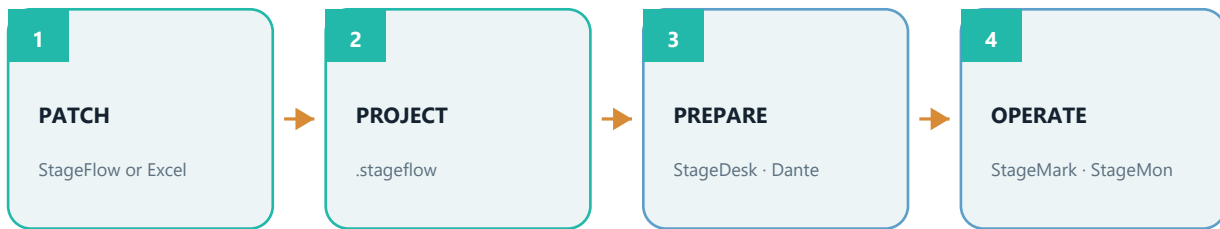

You may start in StageFlow, in Excel, or directly in the application you need. The result can join the shared project later: installing StageFlow is never mandatory.

Application	Primary role
StageFlow	Patch, groups, Excel, printing, plan and coordination
StageDesk	Transfer labels and settings between consoles and audio software
StageMark	Layout, cues, projection and show control
StageMon	A/B monitoring, 2 to 6 configured circuits, source selection
Dante Config Editor	Prepare and validate Dante configurations offline

Three workflows, three separate choices

- **<Application> project:** create, open and save the native project without StageFlow.
- **Local StageFlow project:** open the .stageflow folder accessible on this computer; the StageFlow application is not required.
- **StageFlow LIVE session:** select the show and host on the network, then voluntarily join with the six-digit code.

Good habit	Give the .stageflow folder a clear show name and keep it inside the backed-up production folder. Do not treat it as temporary data.
------------	---

2 · Build the patch

In StageFlow, choose the number of pairs and groups. The list offers increments of 20, but any allowed value can be typed. Columns stay balanced for landscape group printing.

Fast entry

- **Enter** accepts the cell and moves down.
- **Tab** accepts the cell and moves right.
- **Ctrl+C / Ctrl+V** copies and pastes like Excel.
- The fill handle extends a value or sequence down the table.

Common pairs and group-specific values

The “Common to all groups” set holds recurring sources. For every pair in every group, choose whether the common value appears. A local value overrides only that field; other fields may remain inherited.


- **Show all** enables common pairs for the selected group.
- **Hide all** removes them from that group without deleting common data.
- Each pair has its own visibility choice.
- Inherited values appear grey and italic; group-specific values remain clear. Soundcheck is separate information.

Before reducing

Reducing the pair count may remove data above the new limit. StageFlow asks for explicit confirmation.

3 · Understand the .stageflow project

A .stageflow project is a structured folder. It contains the manifest, shared patch and application-owned domains. It can be copied, backed up and archived with the rest of the show. For transfer or archiving, StageFlow can also package it as one **.stageflowpack** file without changing its internal organization.

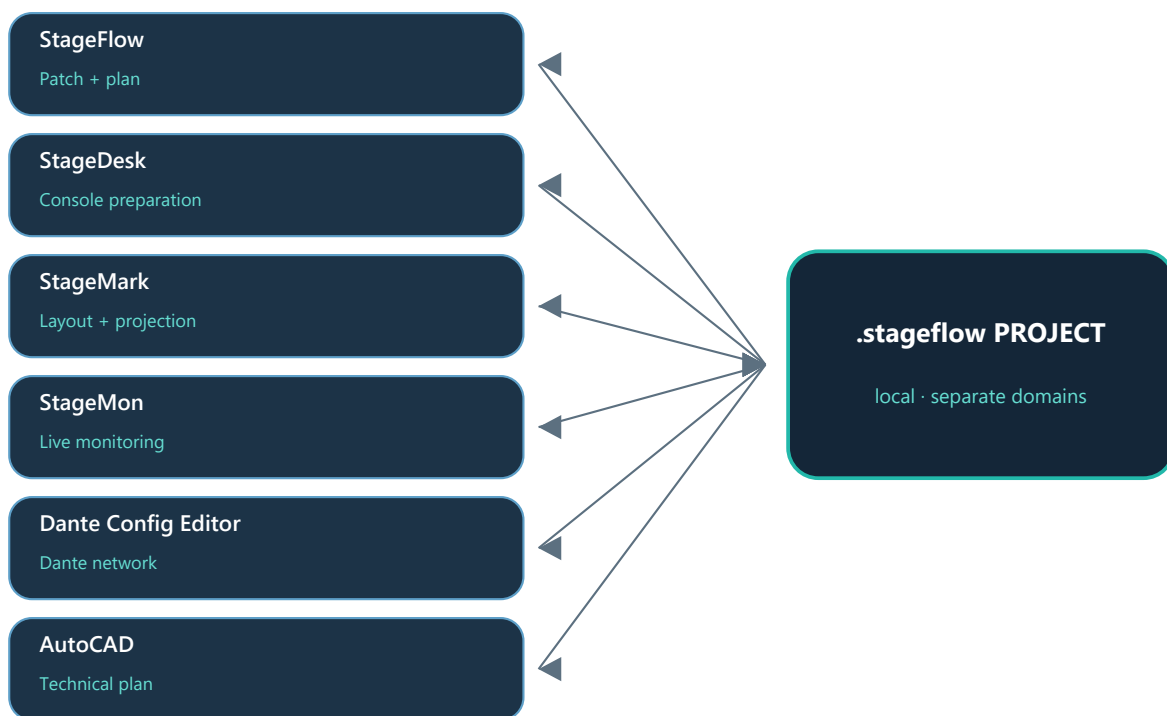

Independence and continuity

- Every application can create, open and save a .stageflow project without StageFlow.
- Someone who owns only StageDesk, StageMark or StageMon can start immediately.
- If another tool is installed later, the same project continues without a global conversion.
- AutoCAD reads the patch and writes only the CAD domain through its connector.

Simultaneous saving

Applications take short locks, then merge independent changes. Two edits to different fields are preserved. If two people change the exact same value, saving is refused and the conflict remains visible: one version never silently overwrites the other.

Remember

The shared project is the source of truth. Excel exports and native projects remain working or exchange tools; they do not automatically overwrite the shared folder.

Excel as a bridge

The StageFlow V3 workbook can be created or imported from StageFlow, StageDesk and StageMon. It carries group count, common pairs, visibility choices and one sheet per group. A hidden technical sheet preserves identifiers for reliable round trips.

- Use **Export Excel** to obtain a pre-filled template.
- Use **Refresh from Excel** to reread the same workbook without losing identifiers.
- In StageFlow Windows, choose A4, A3 or another format, then one or multiple pages per group. Headers repeat; check Excel Print Preview before printing.
- Labels are "Balances" in French and "Sound check" in English; "Overrides" means local replacements.

4 • Prepare with specialist applications

StageDesk

Retrieve a patch from a console, audio application or Excel, edit labels, colours and useful settings, then project it to a destination. The application can create the .stageflow project, update its patch and preserve other domains.

Dante Config Editor

Prepare Dante devices, TX/RX channels, subscriptions and validation offline. From a StageFlow project, associate patch lines with a device's RX channels to reuse names. Dante Config Editor never controls the live Dante network.

StageMark

Draw the layout, place patch sources, prepare cues and projection. SHOW and BLACKOUT remain visible, and local projection safety always has priority.

StageMon

Prepare the default A/B monitor mixes, select sources, change patches and operate cues. A project may contain two to six circuits; only configured circuits appear. On Mac, choose a duplex or aggregate CoreAudio device and start audio locally: no ASIO bridge is supplied. Bounded levels, mutes and local audio safeguards keep priority.

Install only what you need

Choose only the applications required on the workstation. A missing card remains visible but greyed out, with a discreet link to its download page.

AutoCAD

The StageFlow Windows installer can add the AutoCAD 2026 connector for Windows. In the SILEMI/O ribbon, the StageFlow Patch palette reads the current project and publishes technical objects to the CAD domain. StageFlow still works without AutoCAD through its simple built-in plan.

The connector distinguishes a standalone drawing, a Local StageFlow project and a StageFlow LIVE session. For network LIVE, select the host and enter all six digits; the received patch stays in memory, with explicit refresh and CAD-only publication. Acceptance in real AutoCAD is still required before operating this version.


5 • StageFlow as a central console

On Windows and macOS, the console displays one card per application: installed or missing, closed, open, on the correct project, manually connected or LIVE. Commands depend on capabilities actually advertised; unneeded cards can be hidden without uninstalling applications.

- **Open** starts the installed application; the project is passed only when that local handoff is supported.
- **Connect** asks a compatible instance to join this project; otherwise join inside the application with the six-digit code.
- **Show** brings the existing window to the foreground.
- Two essential shortcuts may appear on a card, such as SHOW / BLACKOUT or Clear cue A / B.
- A refused command explains why; StageFlow never bypasses the owning application's safety confirmation.
- **Compact console** keeps suite controls in a small window; return to the full window to edit the patch.

6 · One connection centre

The **StageFlow connection** button keeps its name and separately shows status and **computers / applications / mobiles** counts. The Windows centre has two sections: **StageFlow LIVE** and **StageFlow remote control**. Navigation moves to the top in narrow windows. **Back to project** closes the centre without stopping a connection. Three applications on one PC are not three PCs.

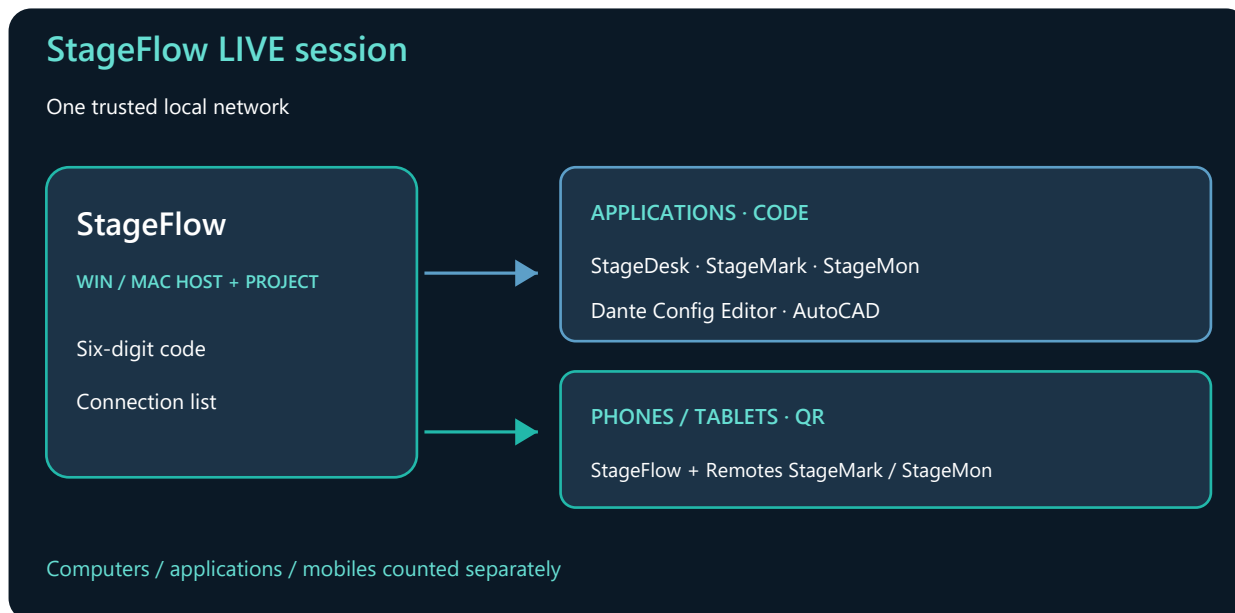

Host or join

- **In StageFlow:** open **StageFlow connection** → **StageFlow LIVE**, choose the network, then **Allow and broadcast**. StageFlow hosts, shows the code and lists clients; it does not join itself.
- **In another application:** choose **StageFlow LIVE session**, select the discovered show and host, or enter the address provided by the host.
- Copy all **six digits**, including leading zeros. No remote folder is requested. Wait for **connected · synchronized**.
- **Disconnect** returns the application to standalone immediately. Rejoining after a loss or stop is always voluntary.

Code and session	The code stays valid for this session. Stopping and restarting the session creates a new code. Correct a wrong code without restarting the application; if the session changed, select it again.
------------------	--

Read the status

Standalone · offline: no LIVE link. **Available:** a session can be joined. **Connected · synchronized:** active link. **Connection lost, session stopped, lease expired** or **conflict:** read the reason and take action before resuming.

When LIVE is active

- StageFlow saves after a short delay and publishes the current session.
- Compatible applications detect changes to groups, labels and their relevant domains.
- Patch-linked labels in StageMark follow validated data independently of alerts. Custom text stays protected; a notification never moves an object or starts projection. Plan changes and conflicts follow StageMark's local decisions.
- Several computers on the same local network may join with the displayed code, then detach and continue independently.
- Simultaneous writes to independent areas are merged.
- A conflict on the same value stops the write and requires a human decision.
- Turning LIVE off deletes nothing; applications simply return to manual operation.

Label alerts

Label alerts stays on the main page. Every new LIVE session enables emission; clients receive alerts **by default**. An intentional pause is preserved within the same session. The banner shows **old** → **new**, origin, time and count. **Local acknowledgement** affects only alerts present at the click on this workstation, never another recipient's alerts.

The host can **Pause change notifications**, then enable them again without stopping LIVE: changes made during the pause are not replayed. Each recipient can also turn reception off locally, without affecting others and without a backlog on re-enabling. Only source labels trigger alerts, never microphones, comments, groups or sound-check notes.

Operational safety

LIVE synchronizes data and project states. It does not start projection, start audio or remove a mute without an explicit command provided by the owning application.

7 • Phones and tablets

Under **StageFlow connection** → **StageFlow remote control**, select the Wi-Fi or Ethernet network shared with the devices, then **Create QR code**. StageFlow saves the project if required, enables LIVE and displays the QR. Multiple devices may connect: the mobile QR and the six-digit application code serve different purposes.

The three mobile tabs

- **StageFlow**: select, add, rename or delete a group with confirmation; edit sources, microphones and comments; choose common pairs; adjust Sound check / Show; save.
- **StageMark**: its native remote keeps cues, SHOW and BLACKOUT. In the new Windows build, when editing is allowed, choose the plan, create and name supported objects, then select and move them by touch.
- **StageMon**: display the real StageMon remote with the same controls as its normal remote access.

Module access conditions

StageMark or StageMon must be in the same LIVE session with its remote ready. An unavailable card remains readable: status and an actionable explanation, without requesting access. Unannounced state remains **unknown**. The application's permissions and locks still apply. A target or session change removes the old controller. On mobile or at another network address, the real Remote opens full-page; browser **Back** returns to StageFlow.

StageMark and StageMon keep their standalone QR access without StageFlow. StageDesk and Dante Config Editor do not have their own QR Remote: they join the session to work on the project.

Session protection

Up to 24 mobiles have their own connection and alert acknowledgements. Access is limited to the chosen local network; each application keeps its safeguards. **Stop** immediately revokes the link. Starting again creates a new QR.

Trusted network

The portal uses HTTP on the local network. Use trusted Wi-Fi or Ethernet, never forward the port to the Internet, and reject an overly broad firewall rule.

8 · OSC, MIDI and Stream Deck

In **StageFlow on Windows or macOS**, open **Tools** → **OSC · MIDI · Stream Deck**. The 24-command catalogue controls StageFlow and relays only capabilities actually exposed by StageMark and StageMon. For standalone use, check the application's manual for features supported on your platform.

OSC

- By default, StageFlow listens only on this computer at 127.0.0.1:18040.
- Choose a network adapter or 0.0.0.0 only when another computer on the trusted network must send commands.
- The traffic log shows received, accepted and refused messages.
- Command addresses and state feedback can be customized independently.

MIDI and Stream Deck

- For MIDI, select an input, click Learn next message, then use the control you want to map.
- An optional MIDI output can return state; StageFlow uses CoreMIDI on Mac.
- The Stream Deck plugin is supplied for Windows and Mac: install the package for your platform, place the SiLeMIO action on a key, then choose the command.
- StageMark and StageMon commands are available only while the owning application has joined the current LIVE project.

Actual scope

The 10 StageFlow and 5 StageMark commands in the table are available on Windows and Mac when enabled. The 9 StageMon identifiers form the shared contract; on Mac, **Start audio** stays local and is not advertised to StageFlow. Other commands may be disabled by state, notably to prevent a local mute from being cleared remotely.

External command reference

These identifiers and OSC addresses are shared by the standalone applications and the StageFlow LIVE relay.

StageFlow

Command	Label	OSC address
stageflow.project.save	Save project	/silemio/stageflow/project/save
stageflow.project.reload	Reload project	/silemio/stageflow/project/reload
stageflow.group.select	Select group	/silemio/stageflow/group/select
stageflow.group.next	Next group	/silemio/stageflow/group/next
stageflow.group.previous	Previous group	/silemio/stageflow/group/previous
stageflow.common.show-all	Show all common pairs	/silemio/stageflow/common/show-all
stageflow.common.hide-all	Hide all common pairs	/silemio/stageflow/common/hide-all
stageflow.live.enable	Enable LIVE	/silemio/stageflow/live/enable
stageflow.live.disable	Stop LIVE	/silemio/stageflow/live/disable
stageflow.live.toggle	Toggle LIVE	/silemio/stageflow/live/toggle

StageMark

Command	Label	OSC address
stagemark.output.show	SHOW	/silemio/stagemark/output/show
stagemark.output.blackout	BLACKOUT	/silemio/stagemark/output/blackout
stagemark.cue.select	Select cue	/silemio/stagemark/cue/select
stagemark.cue.next	Next cue	/silemio/stagemark/cue/next
stagemark.cue.previous	Previous cue	/silemio/stagemark/cue/previous

StageMon

Command	Label	OSC address
monitoring.cue.clear-a	Clear Cue A	/silemio/stagemon/cue/clear-a
monitoring.cue.clear-b	Clear Cue B	/silemio/stagemon/cue/clear-b
monitoring.patch.select	Select patch	/silemio/stagemon/patch/select
monitoring.patch.next	Next patch	/silemio/stagemon/patch/next
monitoring.patch.previous	Previous patch	/silemio/stagemon/patch/previous
monitoring.audio.start	Start audio	/silemio/stagemon/audio/start
monitoring.audio.stop	Stop audio	/silemio/stagemon/audio/stop
monitoring.monitor-a.mute-toggle	Toggle monitor A mute	/silemio/stagemon/monitor-a/mute-toggle
monitoring.monitor-b.mute-toggle	Toggle monitor B mute	/silemio/stagemon/monitor-b/mute-toggle

Always standalone

OSC, MIDI and Stream Deck are optional. Applications keep their local controls and continue to work without StageFlow.

9 • Safety and troubleshooting

An application card is greyed out

- Check that it is installed under its current name: StageFlow, StageMark, StageMon, StageDesk or Dante Config Editor.
- If installed but closed, click Open.
- If open on another project, click Connect and accept the proposal in that application.
- If still unavailable in LIVE, verify the same projectId and session.

The phone cannot reach the QR

- The phone and PC must be on the same local network.
- Choose the correct address in StageFlow connection.
- Allow StageFlow only on the private network if Windows asks for firewall access.
- A guest network may isolate devices; use a shared technical network instead.

The project reports a conflict

Do not keep saving in a loop. Read the message, compare local and shared values, then reload or reapply the edit. Patch labels synchronize independently of notifications; acknowledging an alert never undoes data. A stale base cannot overwrite local changes.

Printed text is too small

In Printing, choose multiple pages to keep rows readable, or A3 for a larger sheet. One page per group remains available, with text reduction. Open Excel → File → Print to check the preview and export to PDF. Table headers repeat on every page.

What the computer cannot verify alone

An offline project does not prove that Dante subscriptions, cabling, gains, clocking, licences, audio interfaces or real projection are ready on site. Always perform hardware acceptance tests.

When in doubt

Stop LIVE and the remote, save a copy of the .stageflow folder, then investigate outside live operation.

10 • Quick workflows

I only need an Excel patch

Open StageFlow → New → choose pairs and groups → fill common and group data → Export Excel → Create printable workbook.

I start in StageDesk or StageMon

Create or import the patch → choose New StageFlow project → save the .stageflow folder → continue in the same application. StageFlow can be installed later.

I prepare a complete operation

Patch → .stageflow project → StageDesk / Dante Config Editor → StageMark layout → StageMon monitoring → open in StageFlow → LIVE → one QR → hardware acceptance.

StageFlow is free and optional. Install only the tools you need; the shared project is ready to evolve with your team.

Discover StageFlow and its published versions: [official StageFlow page](#). Choose only an installer published for your platform. The **Guide** button opens the product manual; **Help** → **Suite guide** opens this document. New workflows in this edition concern Windows; manuals for existing macOS packages remain separate.

SiLeMIO / By Mamat---[]---