



WAVESHARE CORE2350B0 — OFFICIAL P1/P2/P3/P4 PIN NUMBERING


GPIO0..7 = CPU D0..D7 through 330R. Keep inputs until a valid UI12 read cycle.

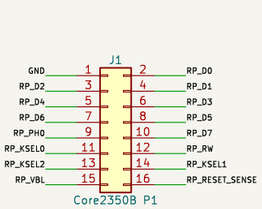


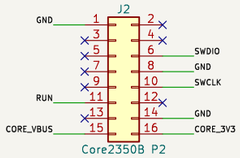


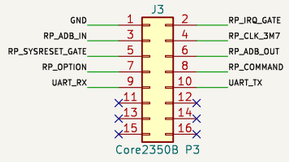




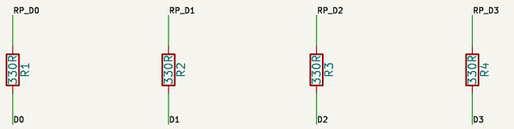

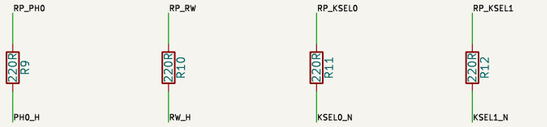


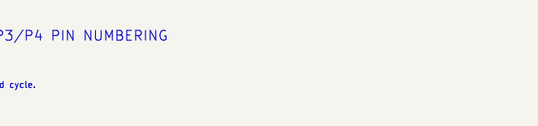

Q1/Q2 are true open-drain IRQ and system-reset pull-downs. Firmware HIGH turns the MOSFET on.

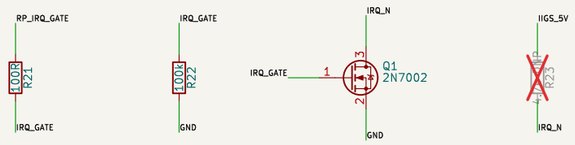

RN1 4.7k: FIT for RP2350 A2 Erratum 9; optional/DNP for A3 or A4.

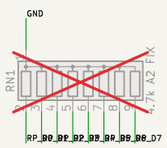

Direct-interface rule: Core2350B must be powered whenever the IIgs can drive a 5 V signal.


UART is 3.3 V. GPIO39 is occupied by the Core2350B onboard LED and is unused.


UI12 PADS — REMOVE ORIGINAL UI12



UI14 pad 41 is not physical ADB; it drives the existing R108 + Q4 stage.


Retain original Q4 and the physical ADB pull-up R107.

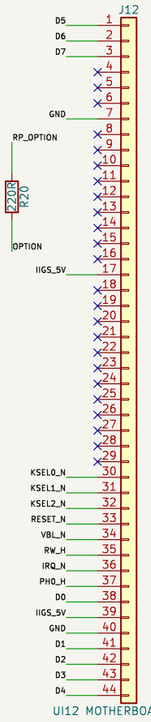

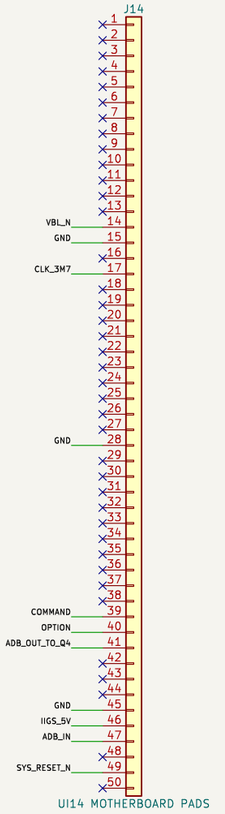



Old MD0..7 / SEL0..3 / STB link is internal in firmware and is not wired.


UI14 pad16 RC RESET: NC. GPIO13 senses UI12 pad33 SYSTEM RESET ONLY.

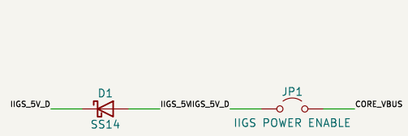


POWER: fit JP1 for IIgs power. REMOVE JP1 before USB is connected while IIgs is powered.









Core2350B0; direct GPIO; IIe keyboard matrix omitted

Open hardware

Sheet: /

File: UI12_UI14_RP2350B_Prototype.kicad_sch

Title: Apple IIgs combined UI12 + UI14 RP2350B prototype

Size: A3	Date: 2026-10-10	**Rev: B**
KiCad E.D.A. 9.0.2		Id: 1/1