

Voice Canceling

Ver 1.0.0

2026.03.31



LGE proprietary and confidential
webOS UX Team

• Platform/ SW version	webOS27
• Launching Time	Initial
• Launching Region	Global
• Programing Language	Enact

About Feature

- **Background Information**
 - This feature allows users to remove only the vocals from the TV audio, enabling them to sing along to the background music. Users can also eliminate specific voices to hear only the sounds they want—creating a new and enhanced viewing experience.
- **Function Description**
 - **Karaoke Mode:** When playing audio from Live TV/external input/OTT apps, the vocals are removed, allowing the music to play as background music. Users can select the available vocal removal levels and adjust the pitch. It supports connection with the Magic Remote or microphone.
 - **Sports Mode :** While watching broadcast content, you can individually remove or adjust the volume of the voice or background sounds. For example, during a sports game, you can remove only the commentator's voice while keeping the background sounds (like crowd noise, cheers, etc.), or conversely, you can remove the background sounds and only hear the commentary.



- **Policy**
 - App switching / Input switching / Live TV channel switching / Automatically turns off the corresponding function when Power Off or On
 - When connected to the soundbar, it should switch back to Last sound out mode after executing the two modes (TBD)
 - This mode execution only works on TV Out Speaker.

Sign In Policy

Sign In essential level of this scenario

	Sign In essential level	Description	Mandatory
1	Needed	Sign In required when launch app.	O
2	Partially Needed	Sign In required when access specific func.	
3	Not Needed	Sign In doesn't required.	

Index

About Feature

1. App Entry

1.1 Settings > Sound

1.2 Sound Settings on App Entry

2. Overlay UI

2.1 Full Panel


2.2 Indicator

2.3 Panel Switching

3. App Closed

1. App Entry

Path : Settings > Sound > Voice Canceling

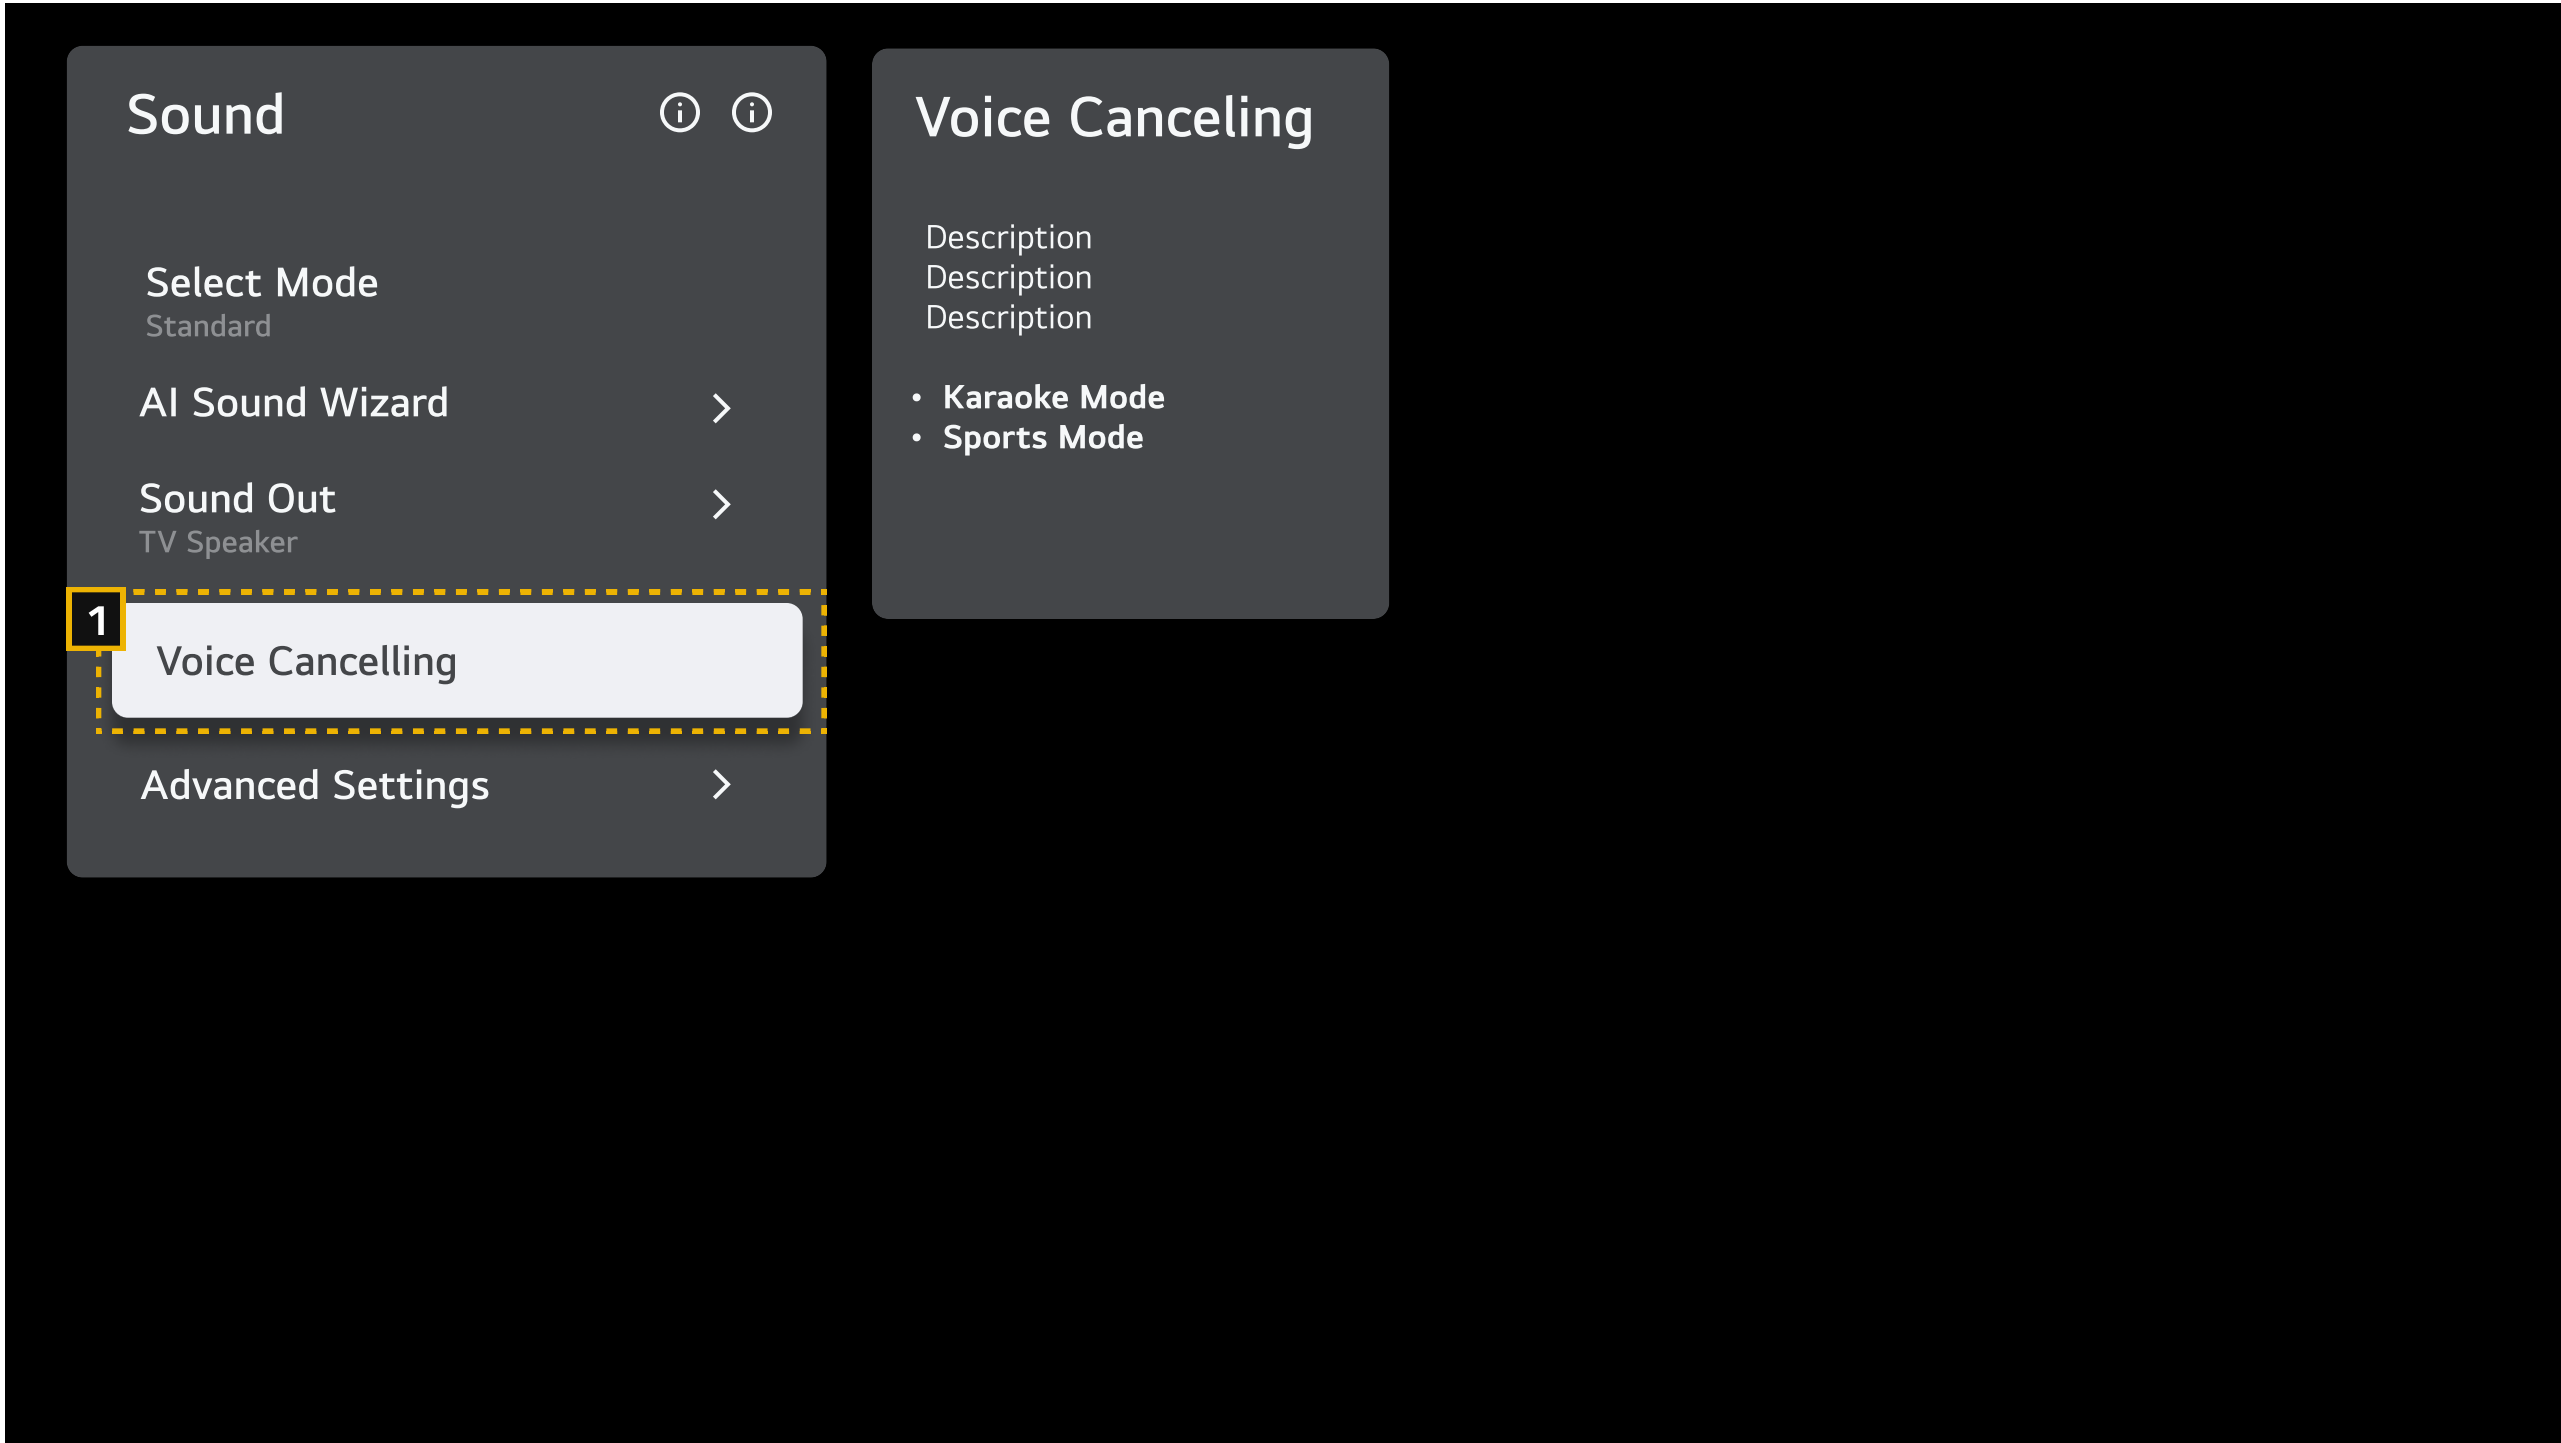


Title		Description
1	Voice Canceling Menu	- Focusing on Voice Canceling displays the help. - Selecting Voice Canceling activates Karaoke mode and opens the Voice Canceling control panel.

Voice Commands (TBD)

Quick Settings (TBD)


1.1 Sound Settings on App Entry

Sound Out Switching Popup (Only when Sound Out is not TV speakers)

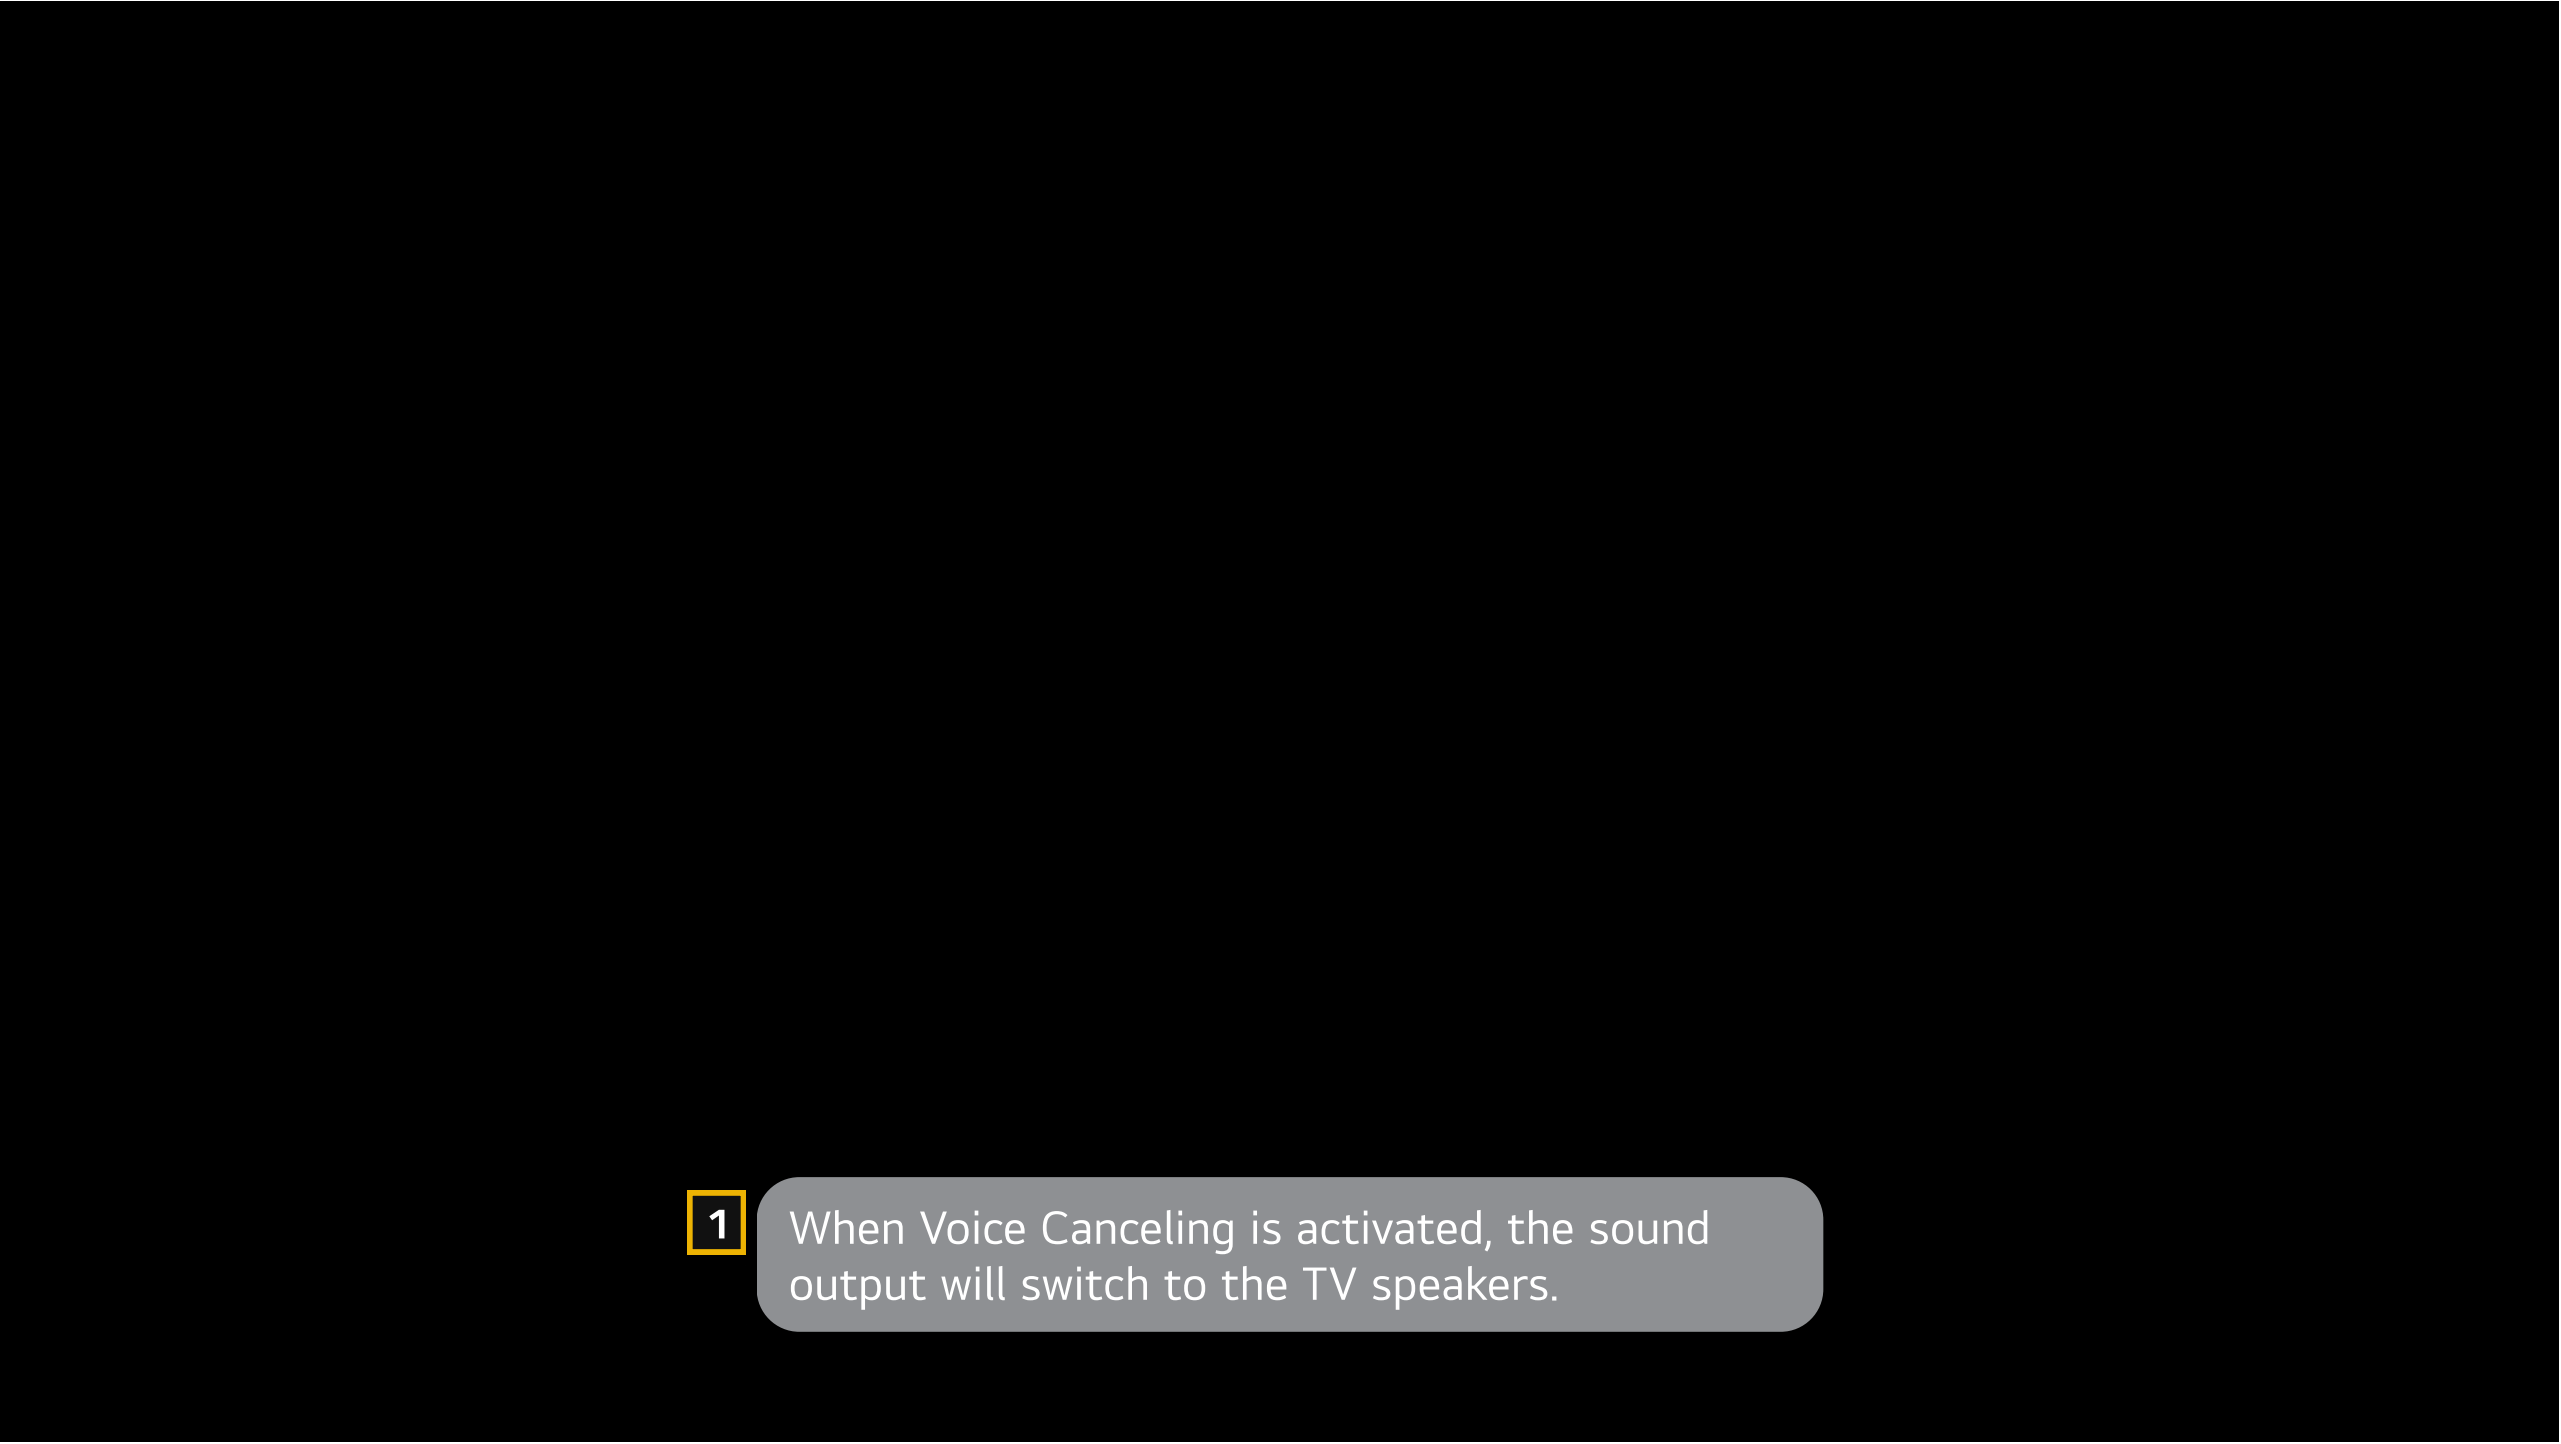


Title		Description
1	Toast Popup	- If Sound-Out is set to a device other than the TV speaker when the app is launched, show a notification toast.
2	Disabled Menu - Mode Change - Sound Out	- While Voice Canceling is active, the sound mode selection and sound out change are not possible, so the corresponding menu UI should be disabled.

Mode Change / Sound Out Menu

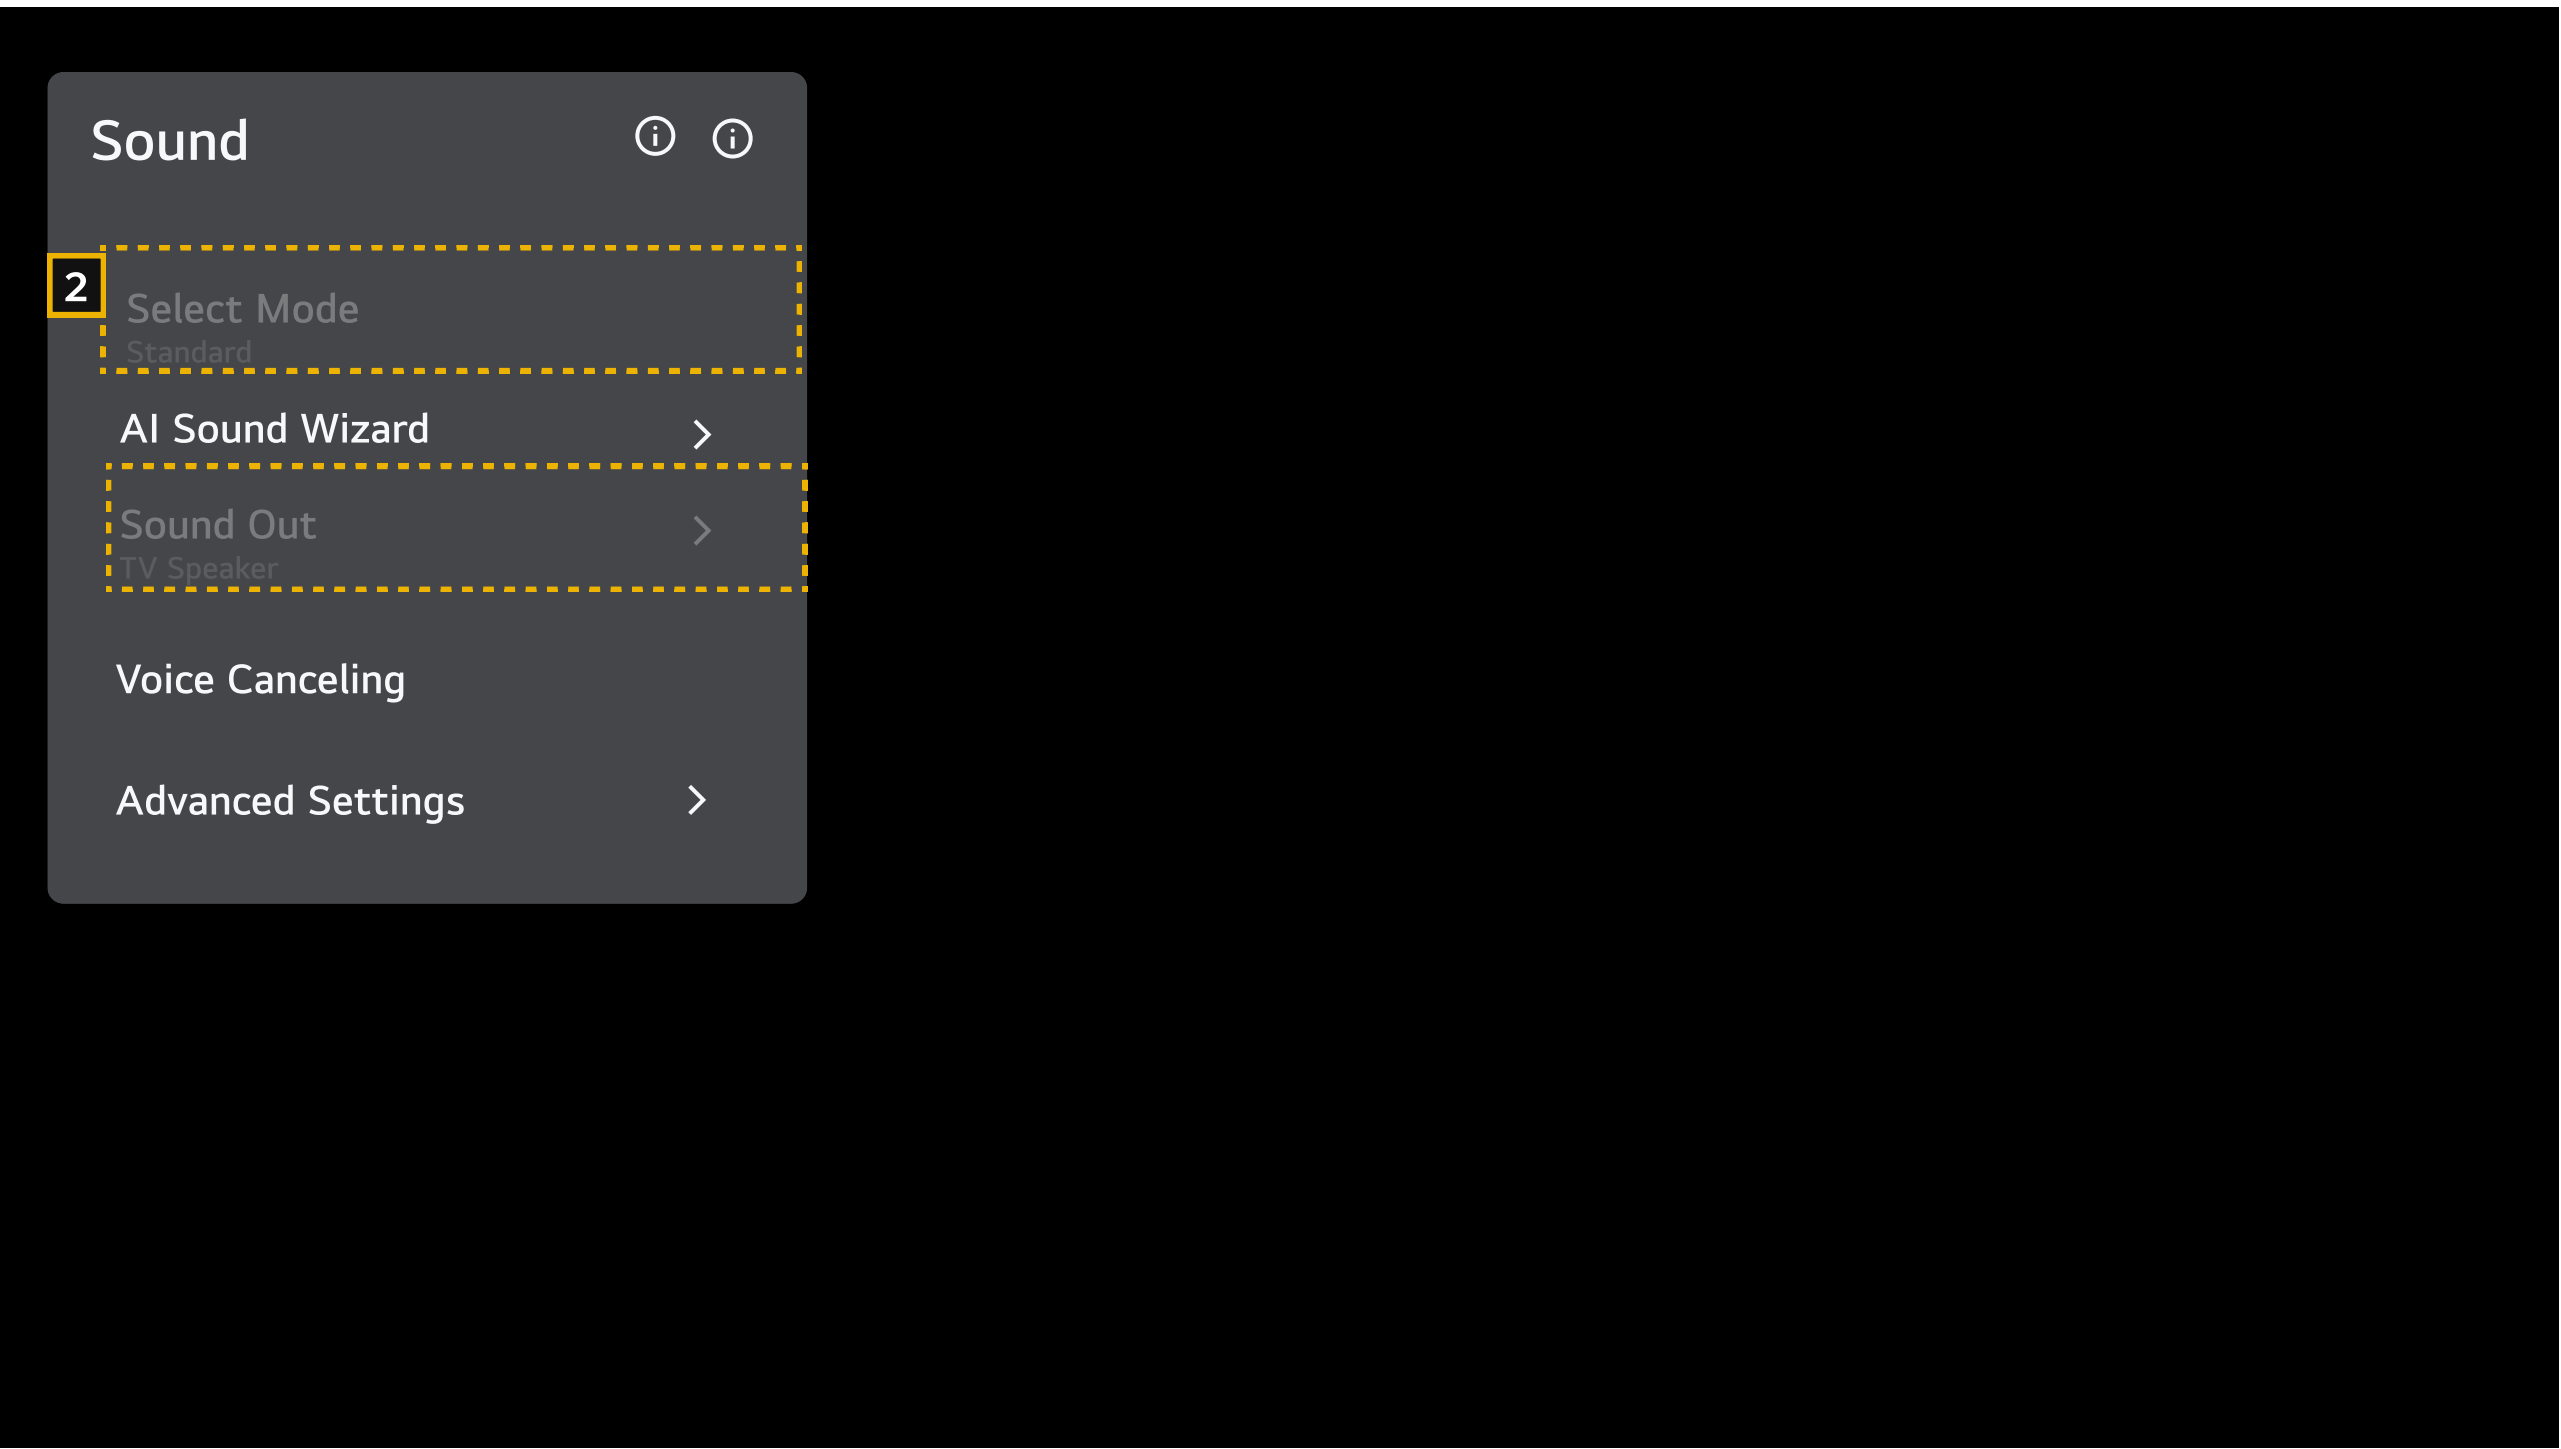


1.1 Sound Settings on App Entry

Sound Out Switching Popup (Only when Sound Out is not TV speakers)

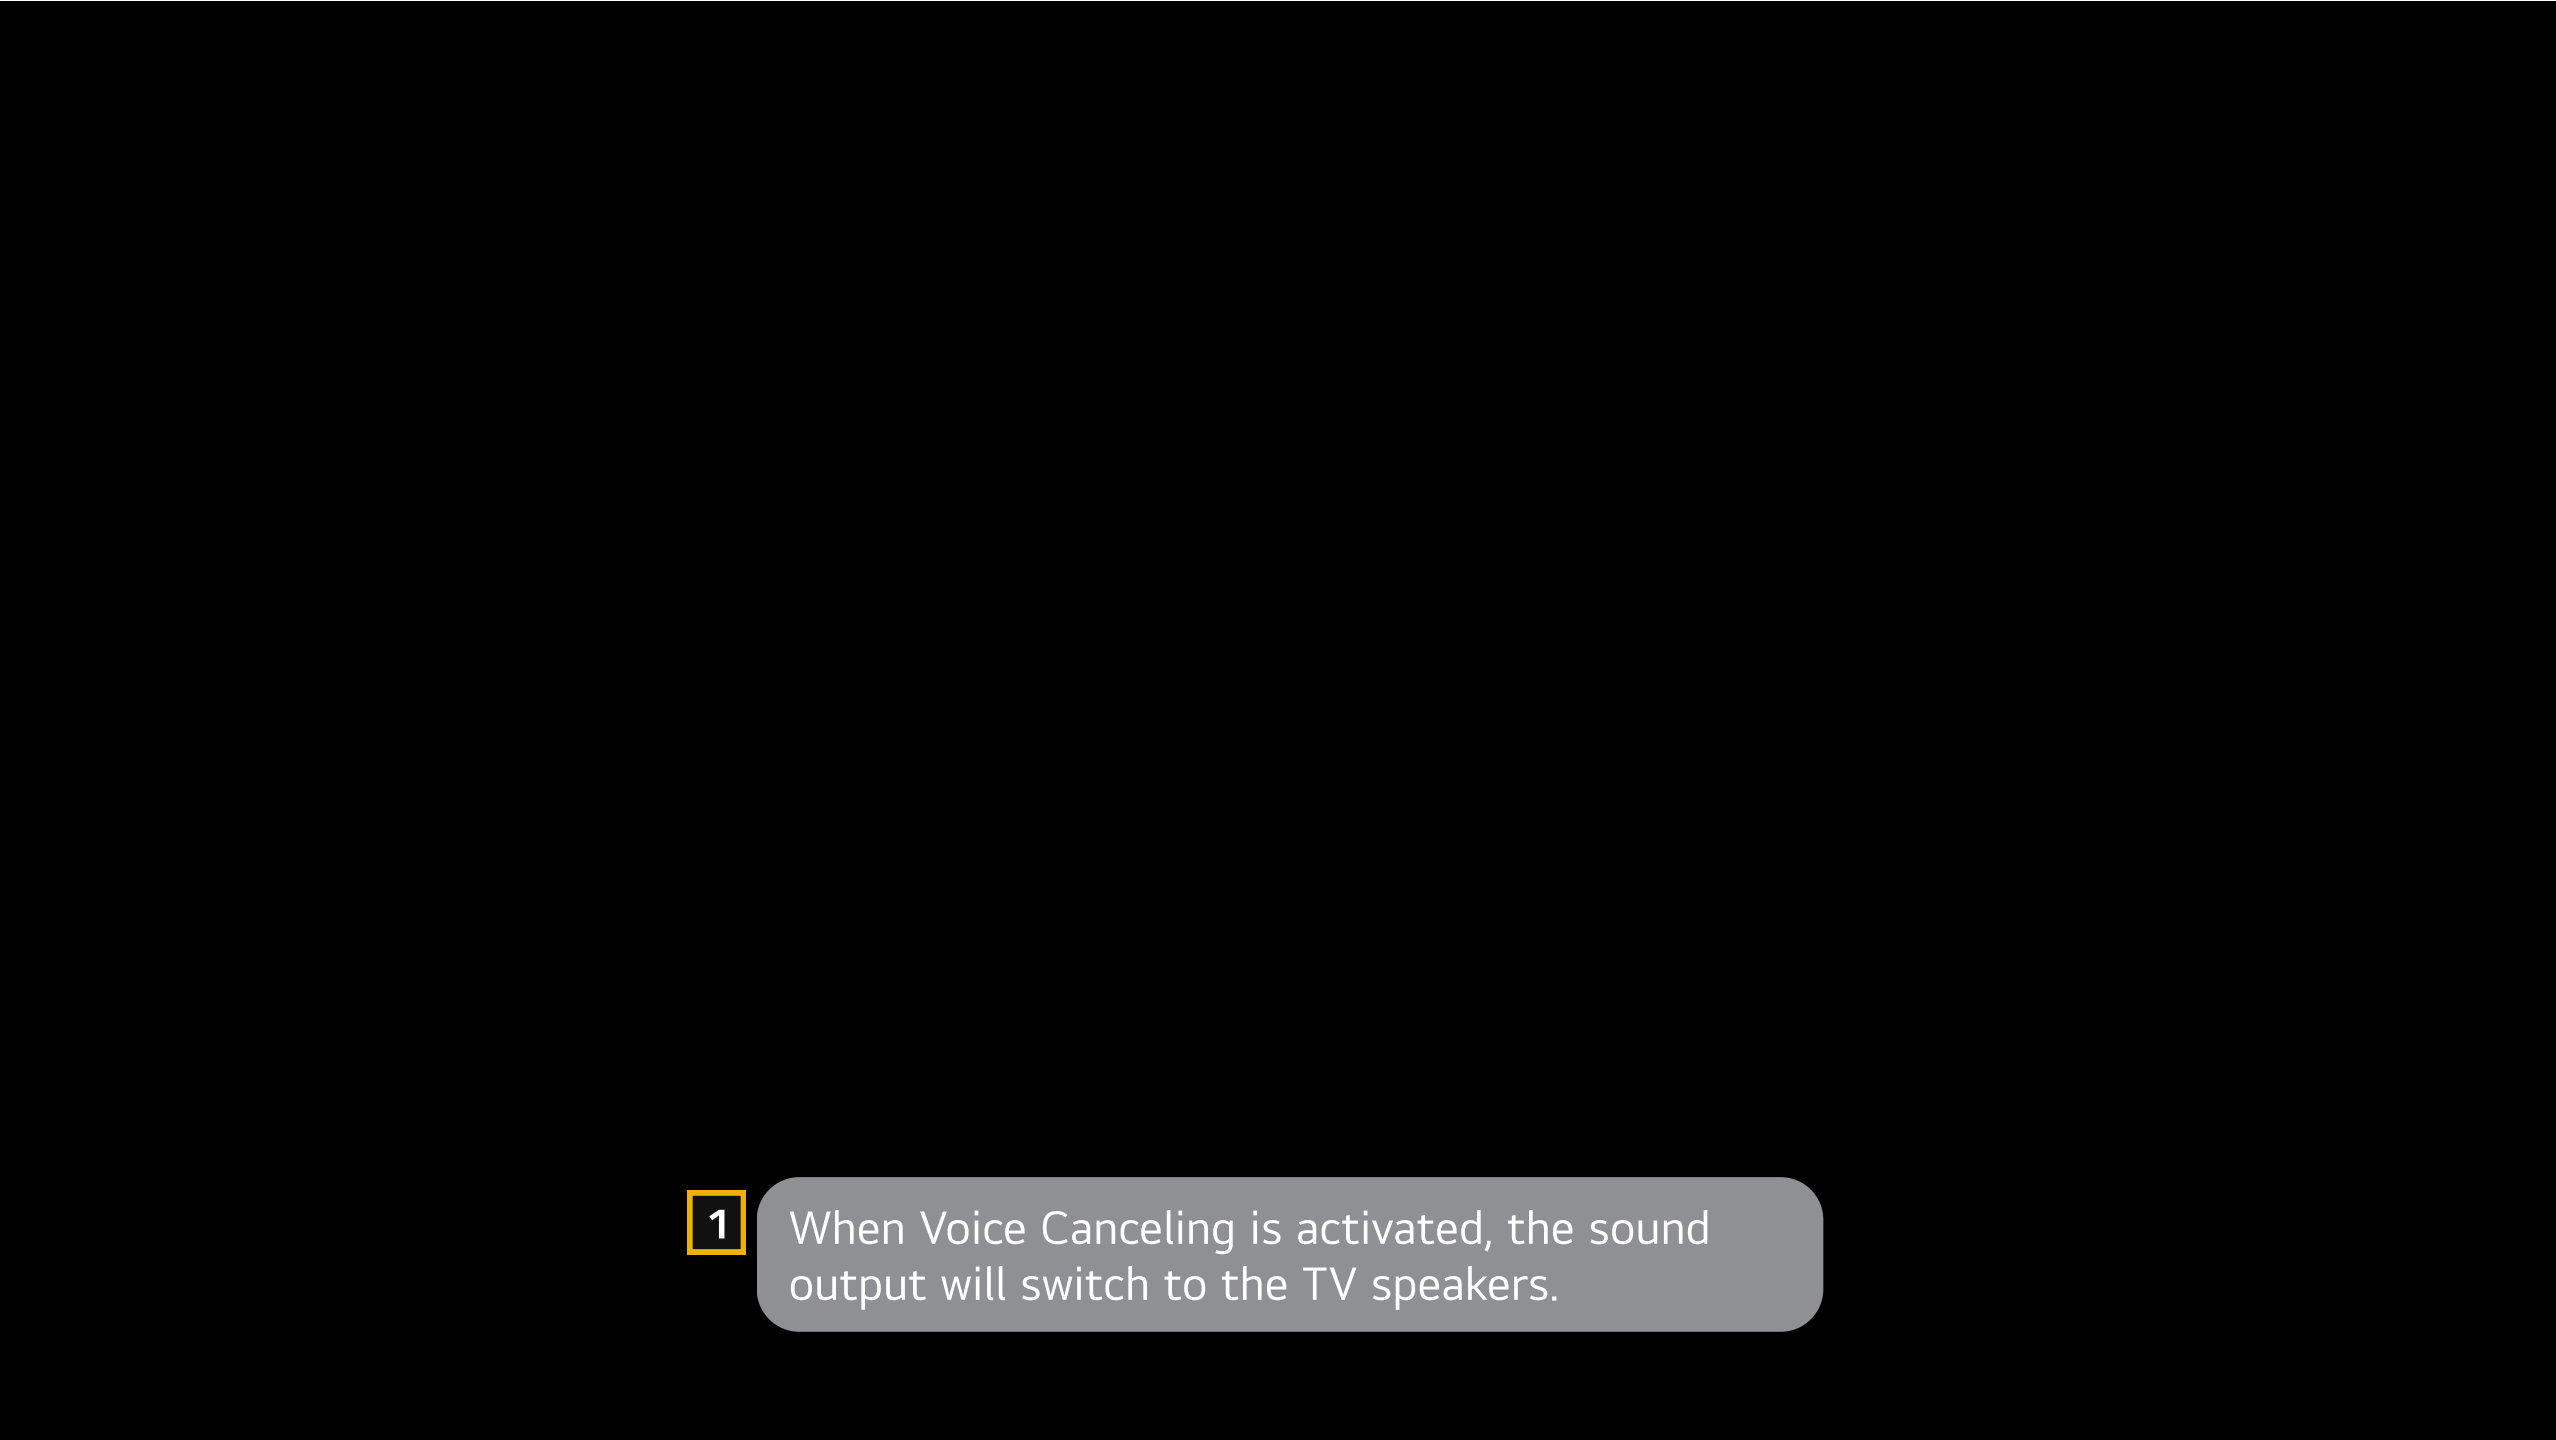


Title		Description
1	Toast Popup	- If Sound-Out is set to a device other than the TV speaker when the app is launched, show a notification toast.
2	Disabled Menu - Mode Change - Sound Out	- While Voice Canceling is active, the sound mode selection and sound out change are not possible, so the corresponding menu UI should be disabled.

Mode Change / Sound Out Menu

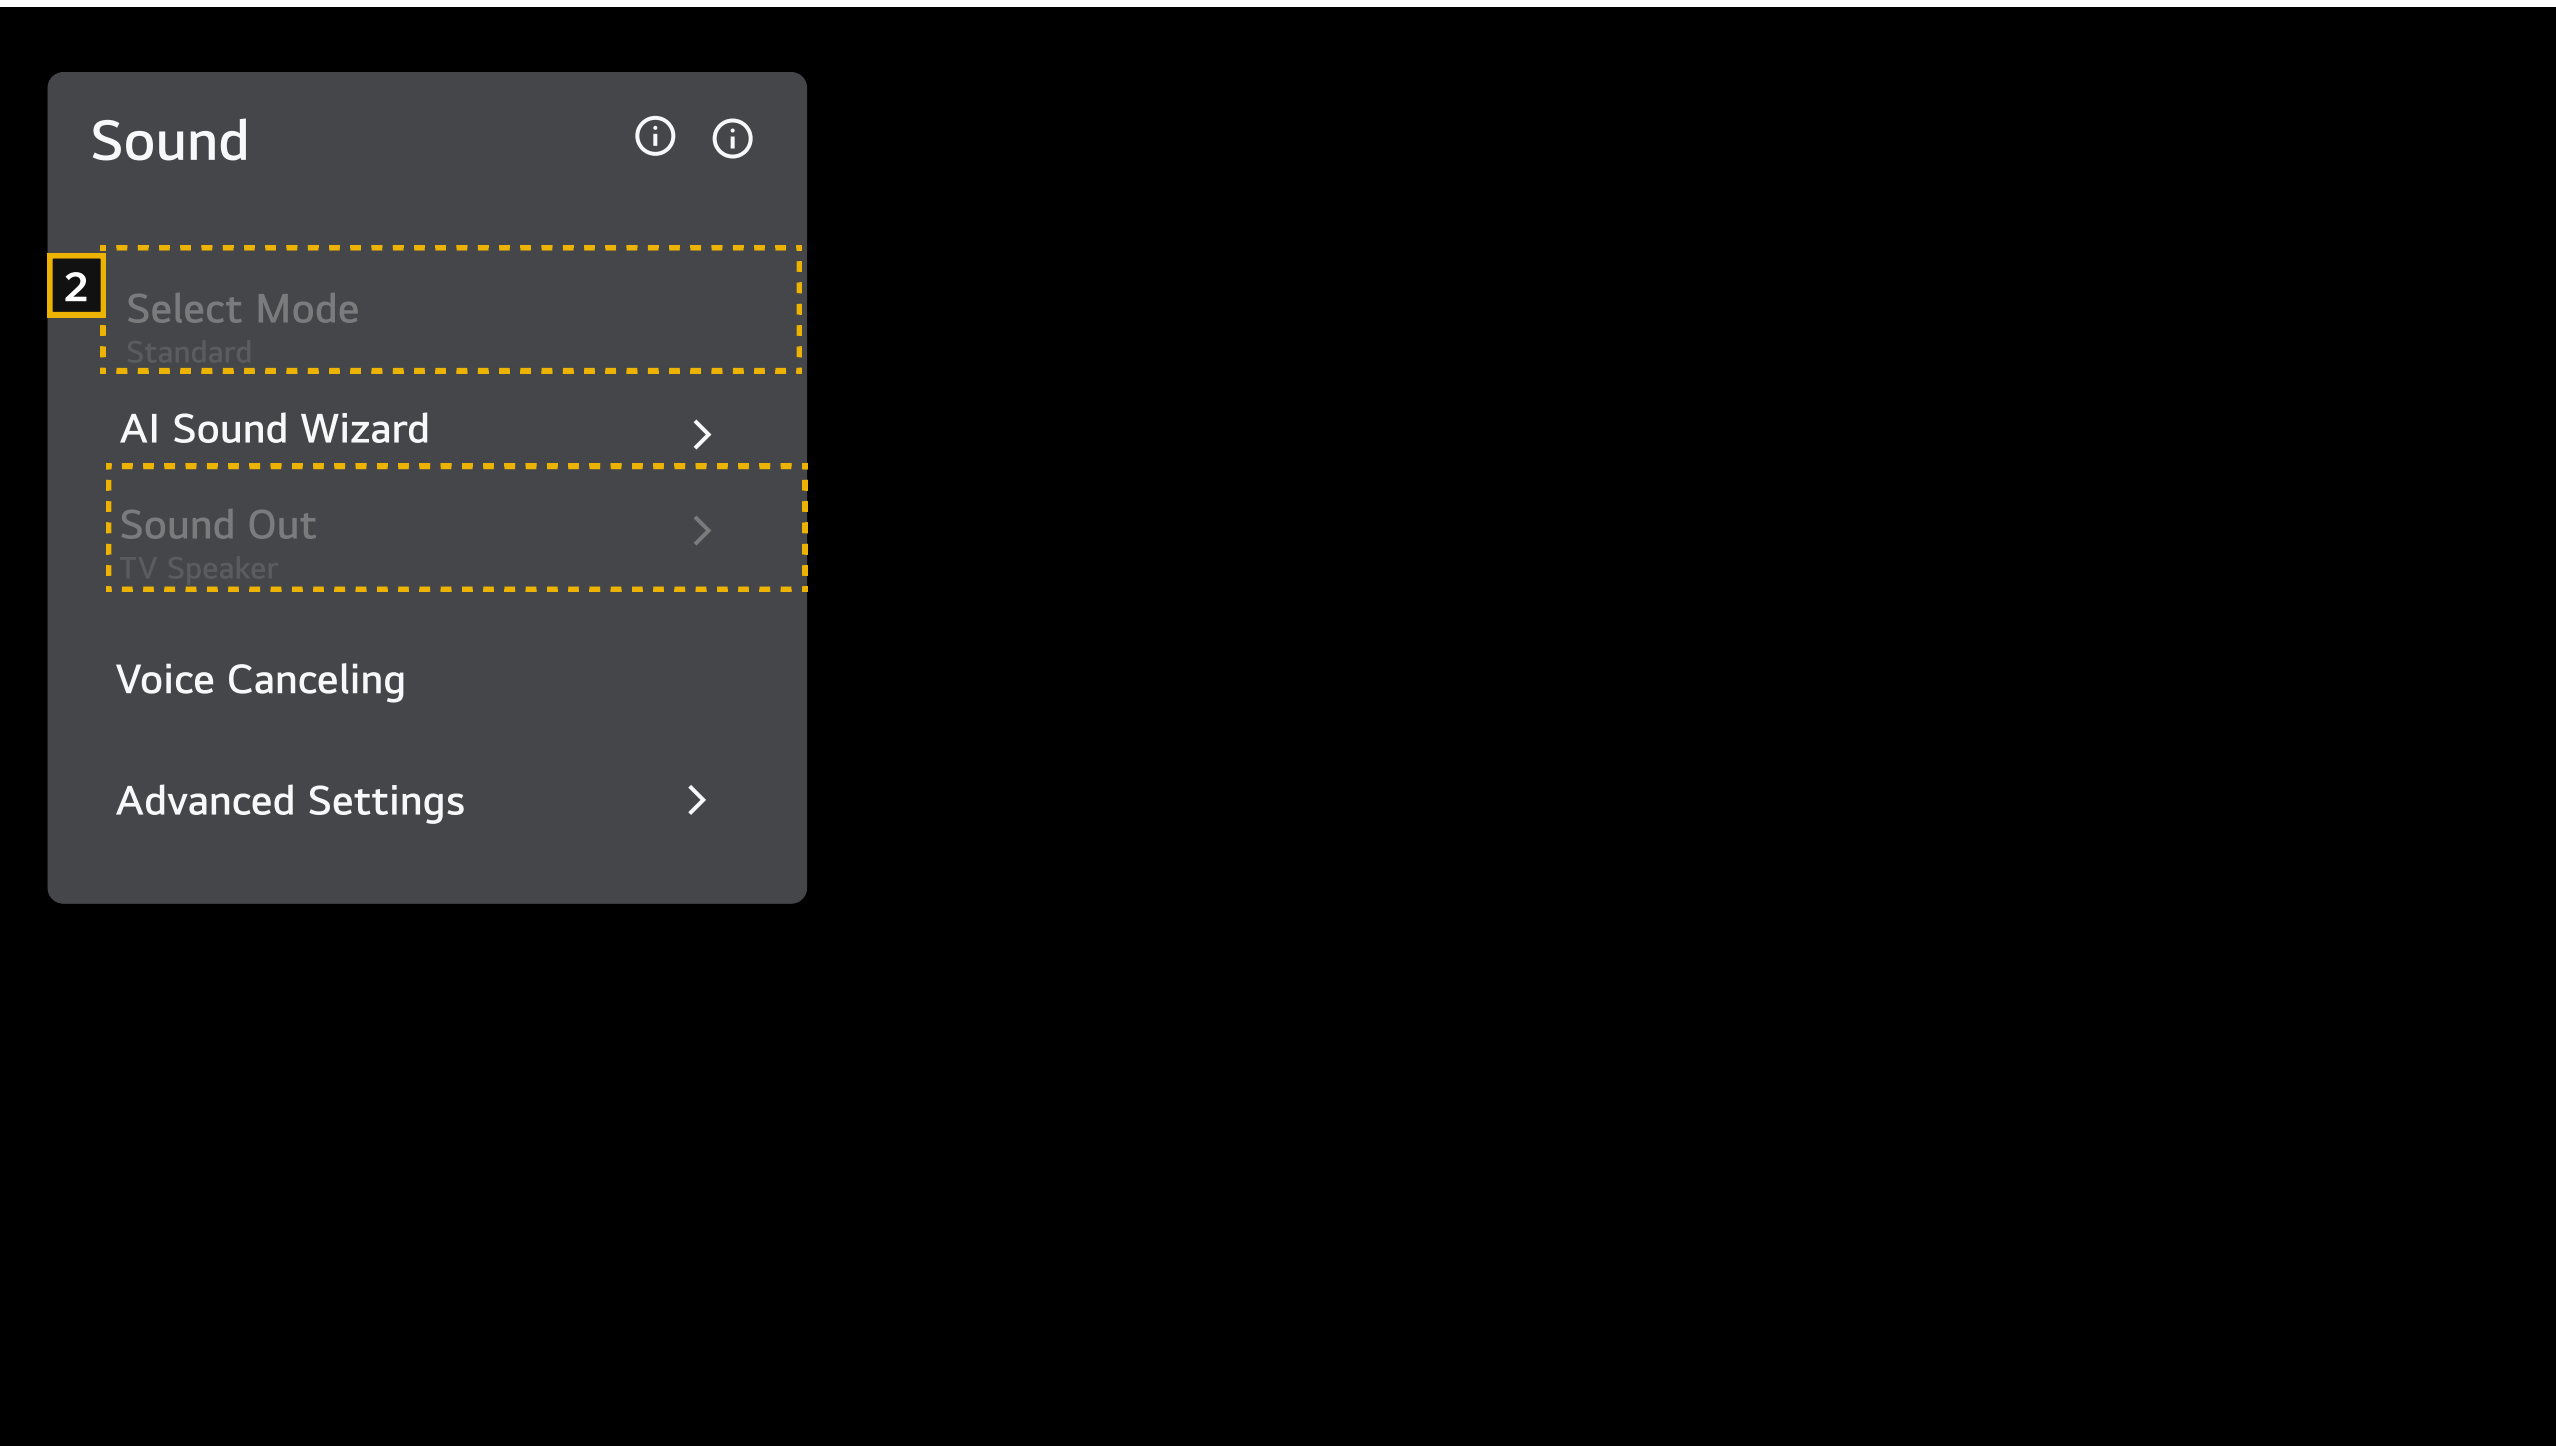


2.1 Overlay UI - Full Pannel

Karaoke Mode

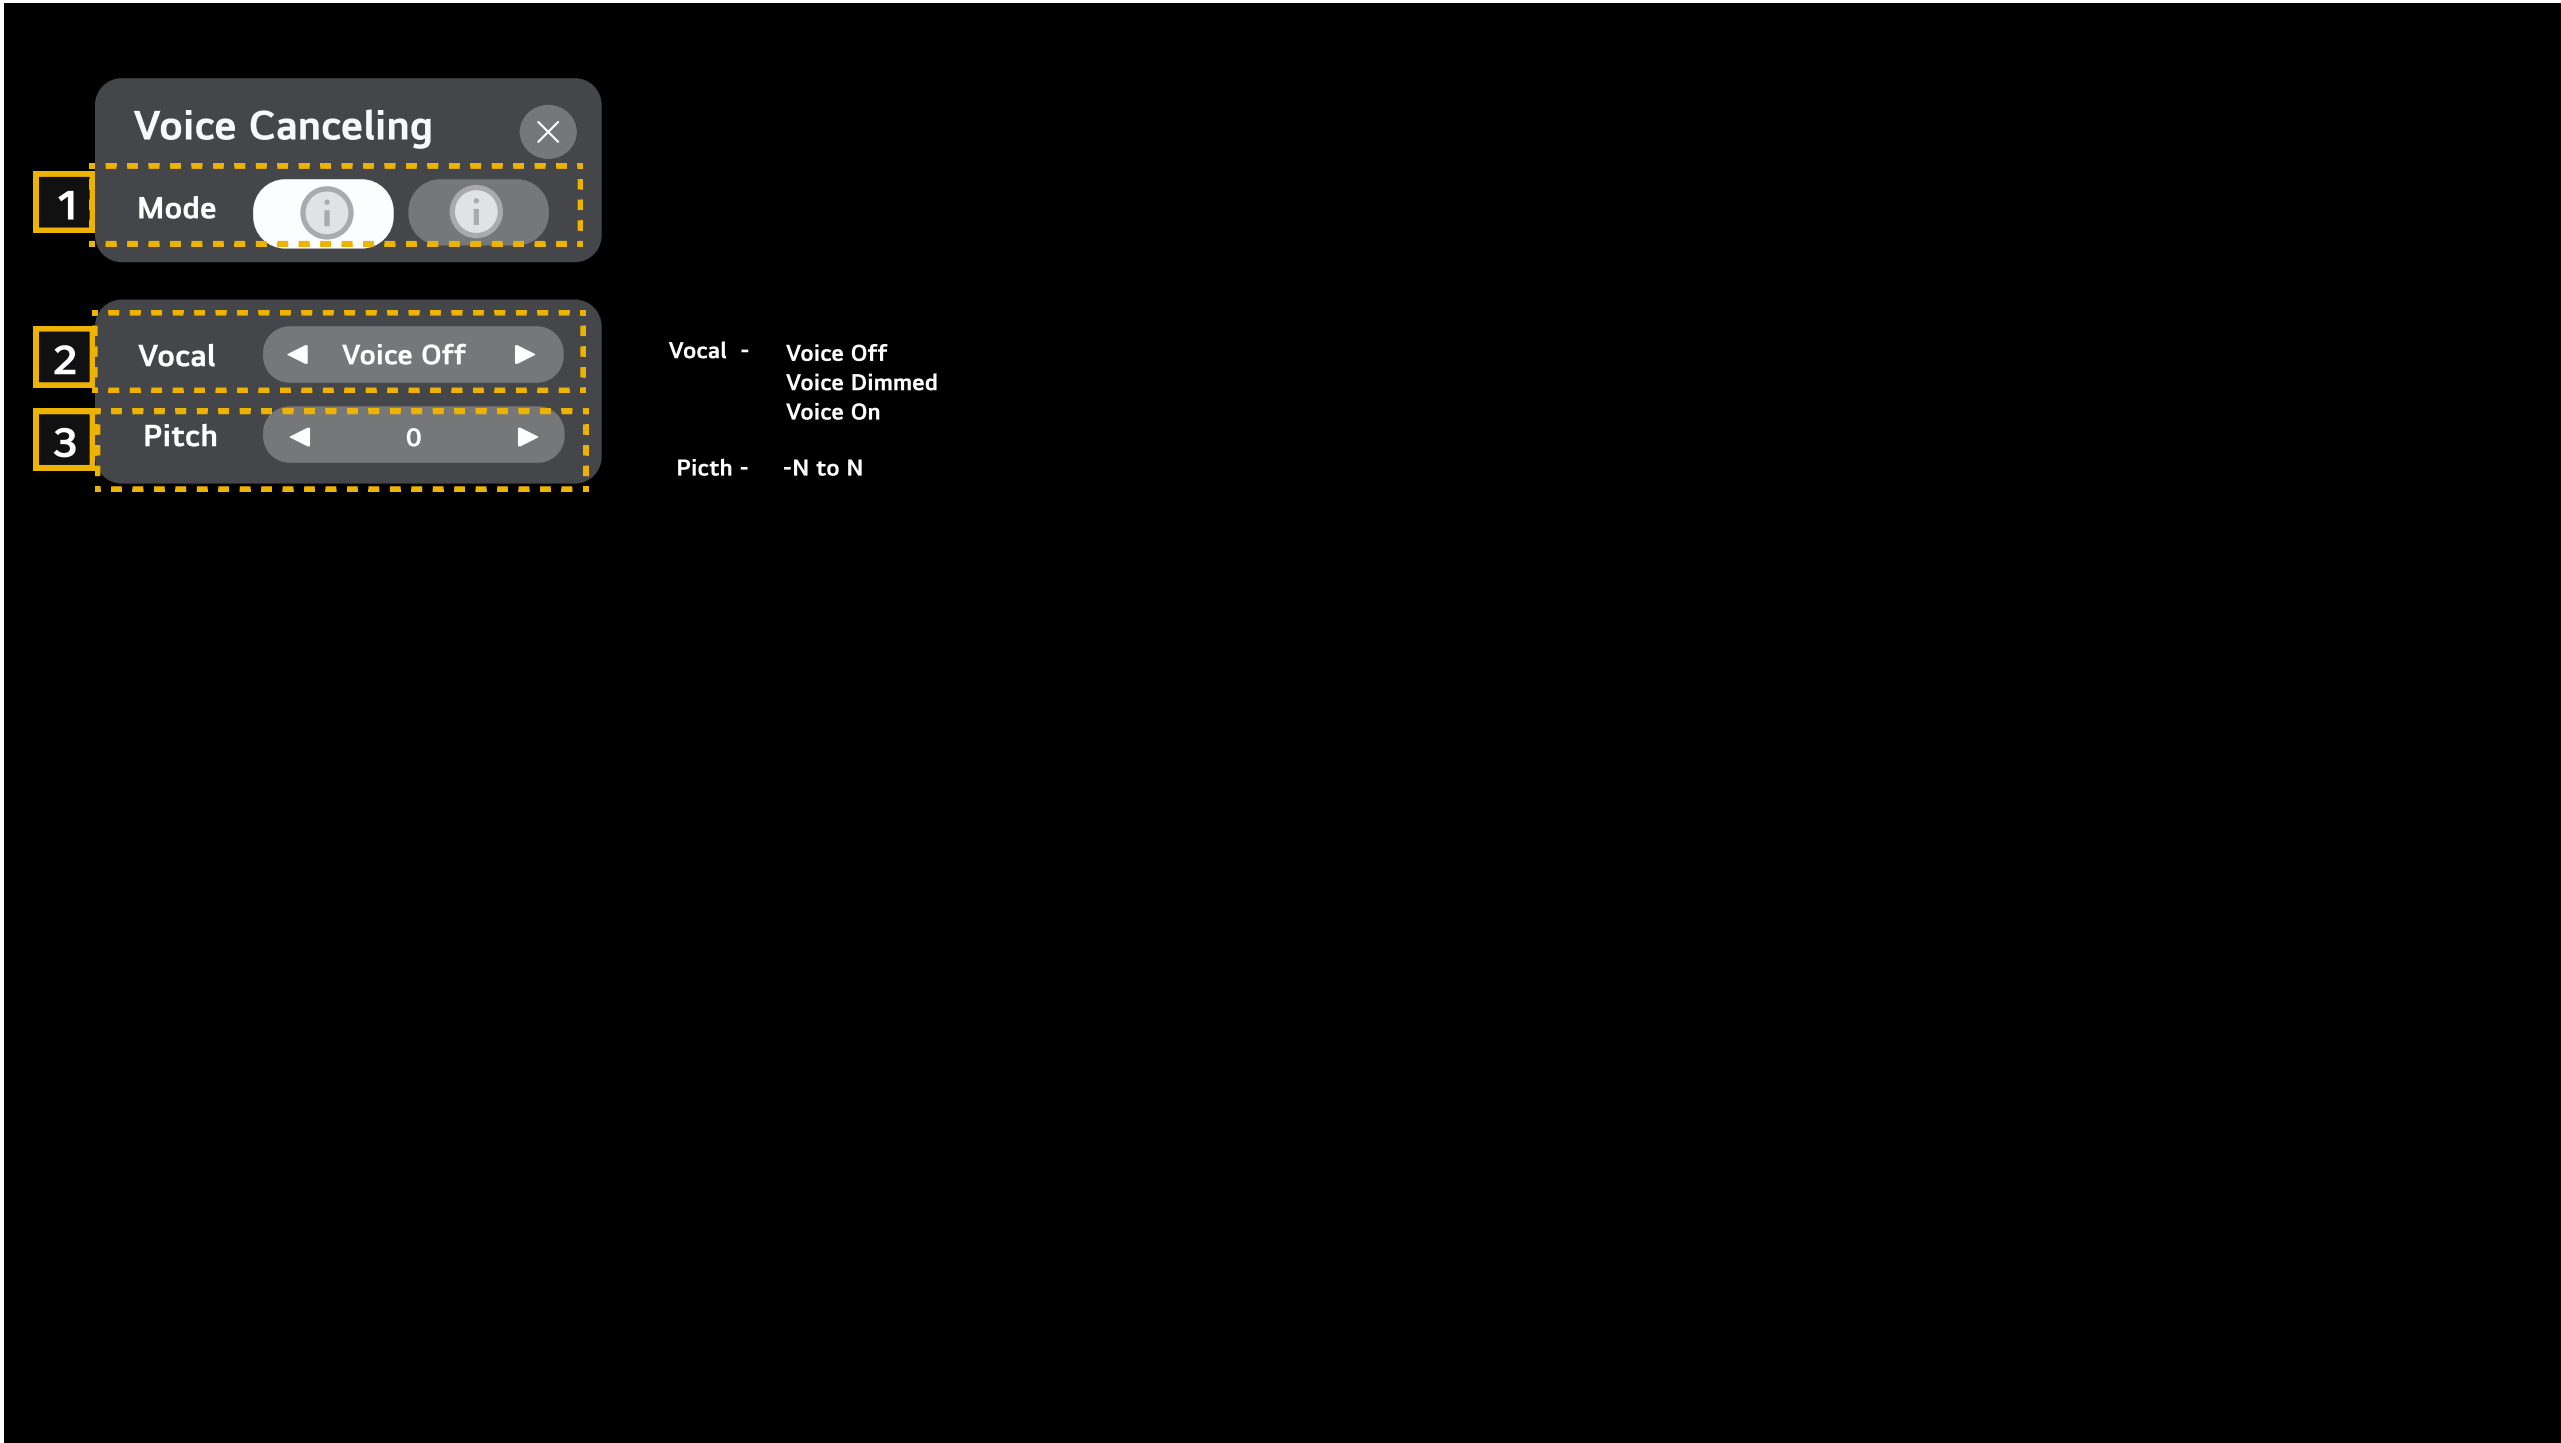

Title		Description
1	Select Mode	- Selectable mode: Karaoke / Sports - Upon entering, Karaoke mode's tab is activated. - Button states to be displayed: Normal / Focused / Selected - Tooltip appears when the button is focused
2 to 4	Select Options	- Vocal : Voice Off / Voice Dimmed / Voice On (Voice Off is the default.)
		- Pitch : -N to N (0 is the default)
		- Voice : Commentary Off * Disable the selection UI when the selected value is singular.
5	Close Button	- When selected, the alert popup below will be generated. Do you want to exit the app? Voice Canceling will be turned off. No Yes

Sports Mode

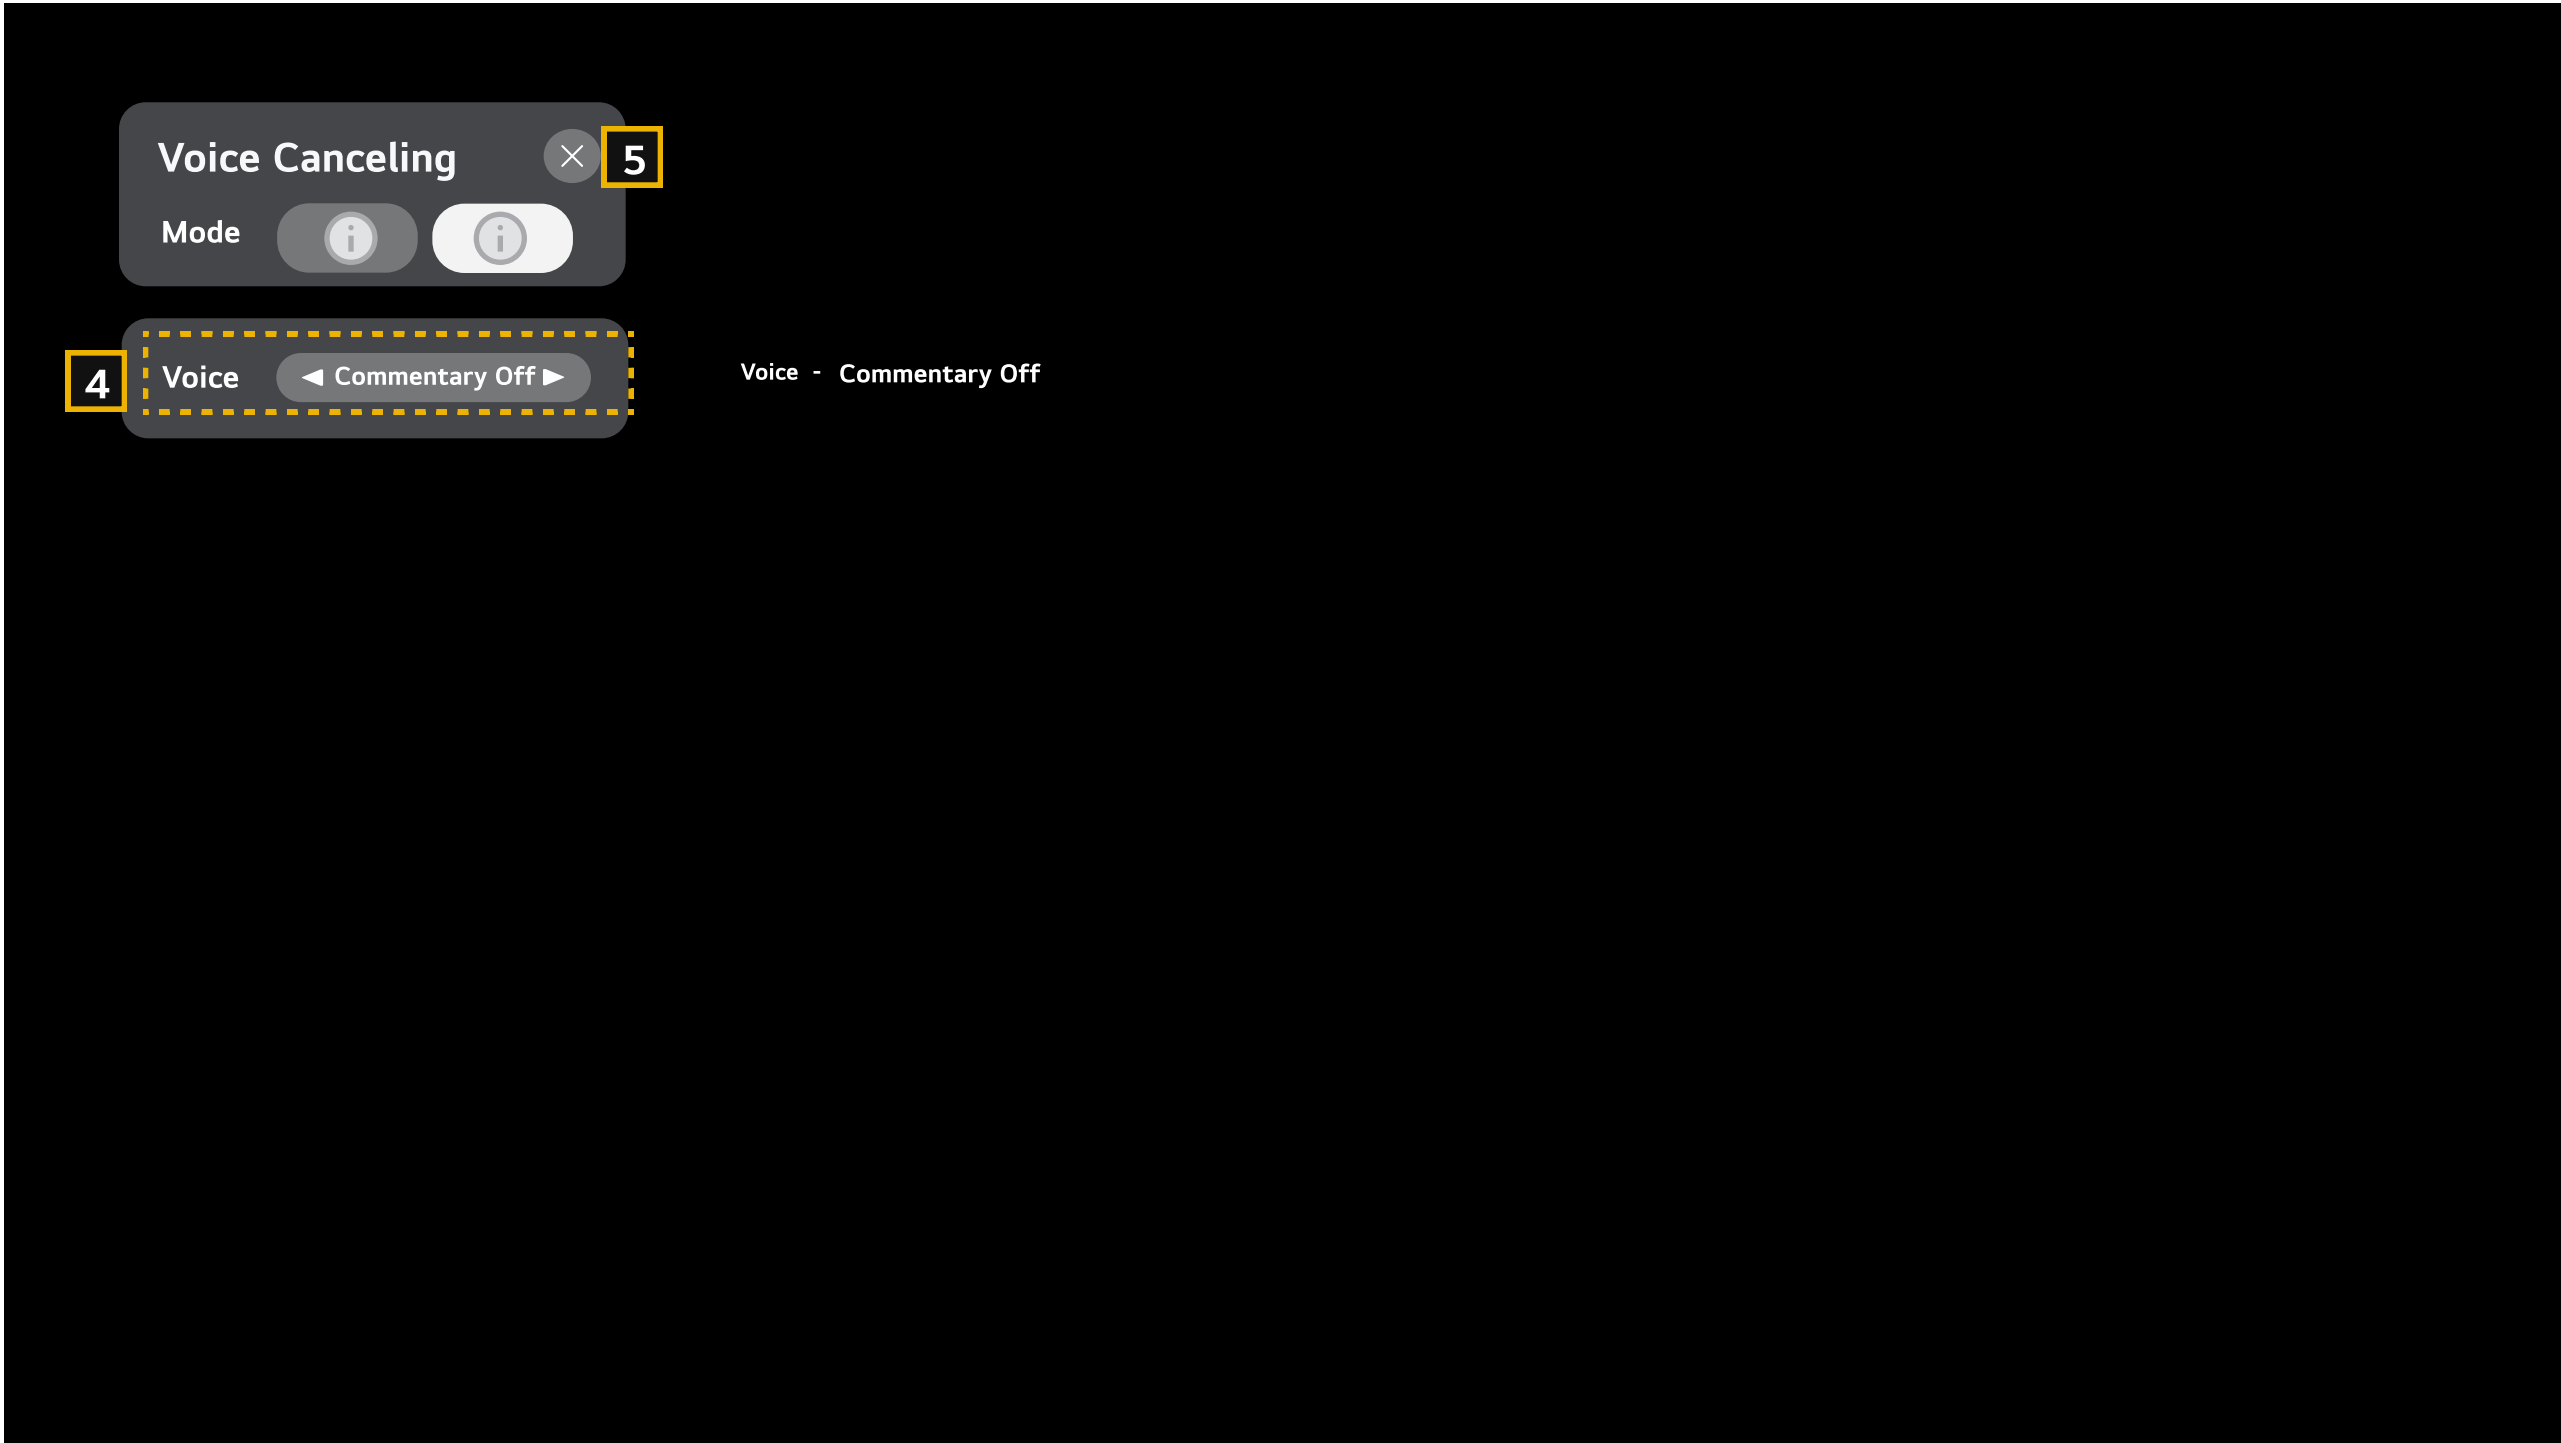


2.2. Overlay UI - Indicator




Title		Description
1	Mode Indicator	- Indicator showing that Voice Canceling is active. - The indicator is selectable, and when selected, it switches to Full Panel UI - GUI : Display an animated icon to indicate that is In Progress

Full Panel Karaoke Mode

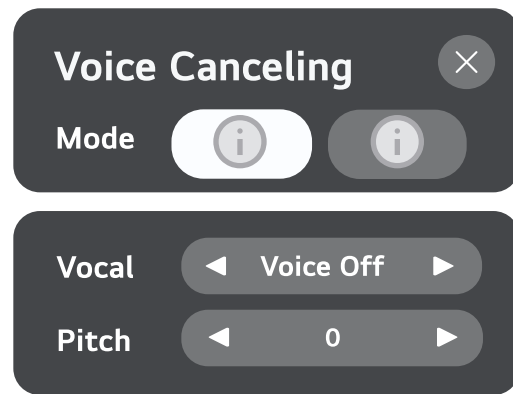


Full Panel Sports Mode

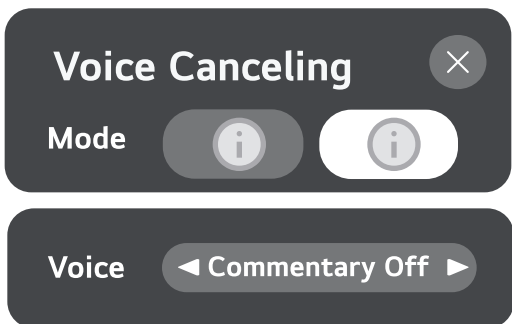

→ After N Seconds
or
Any action that causes focus to
move outside from the full
panel


← Select Voice Canceling indicator
or
Press and hold the [⏮] on Remote
Button

IndicatorVoice Canceling On

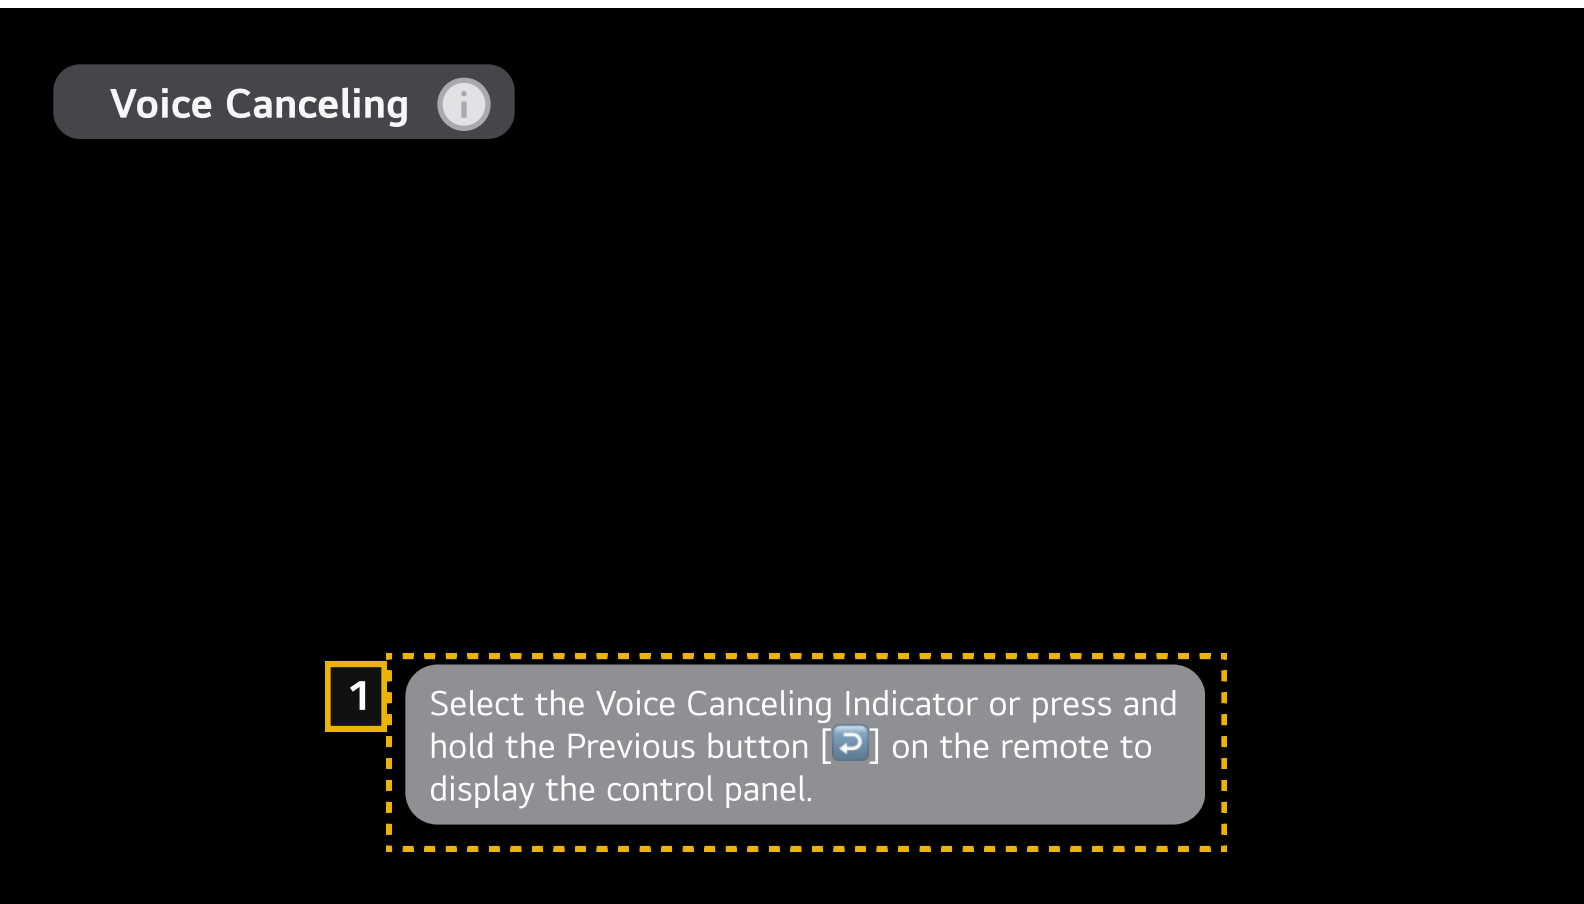

Title		Description
1	Guide alert for switching to full panel.	- Shows the guide once whenever the app is launched.

Display toast popup when switching input/channel/app

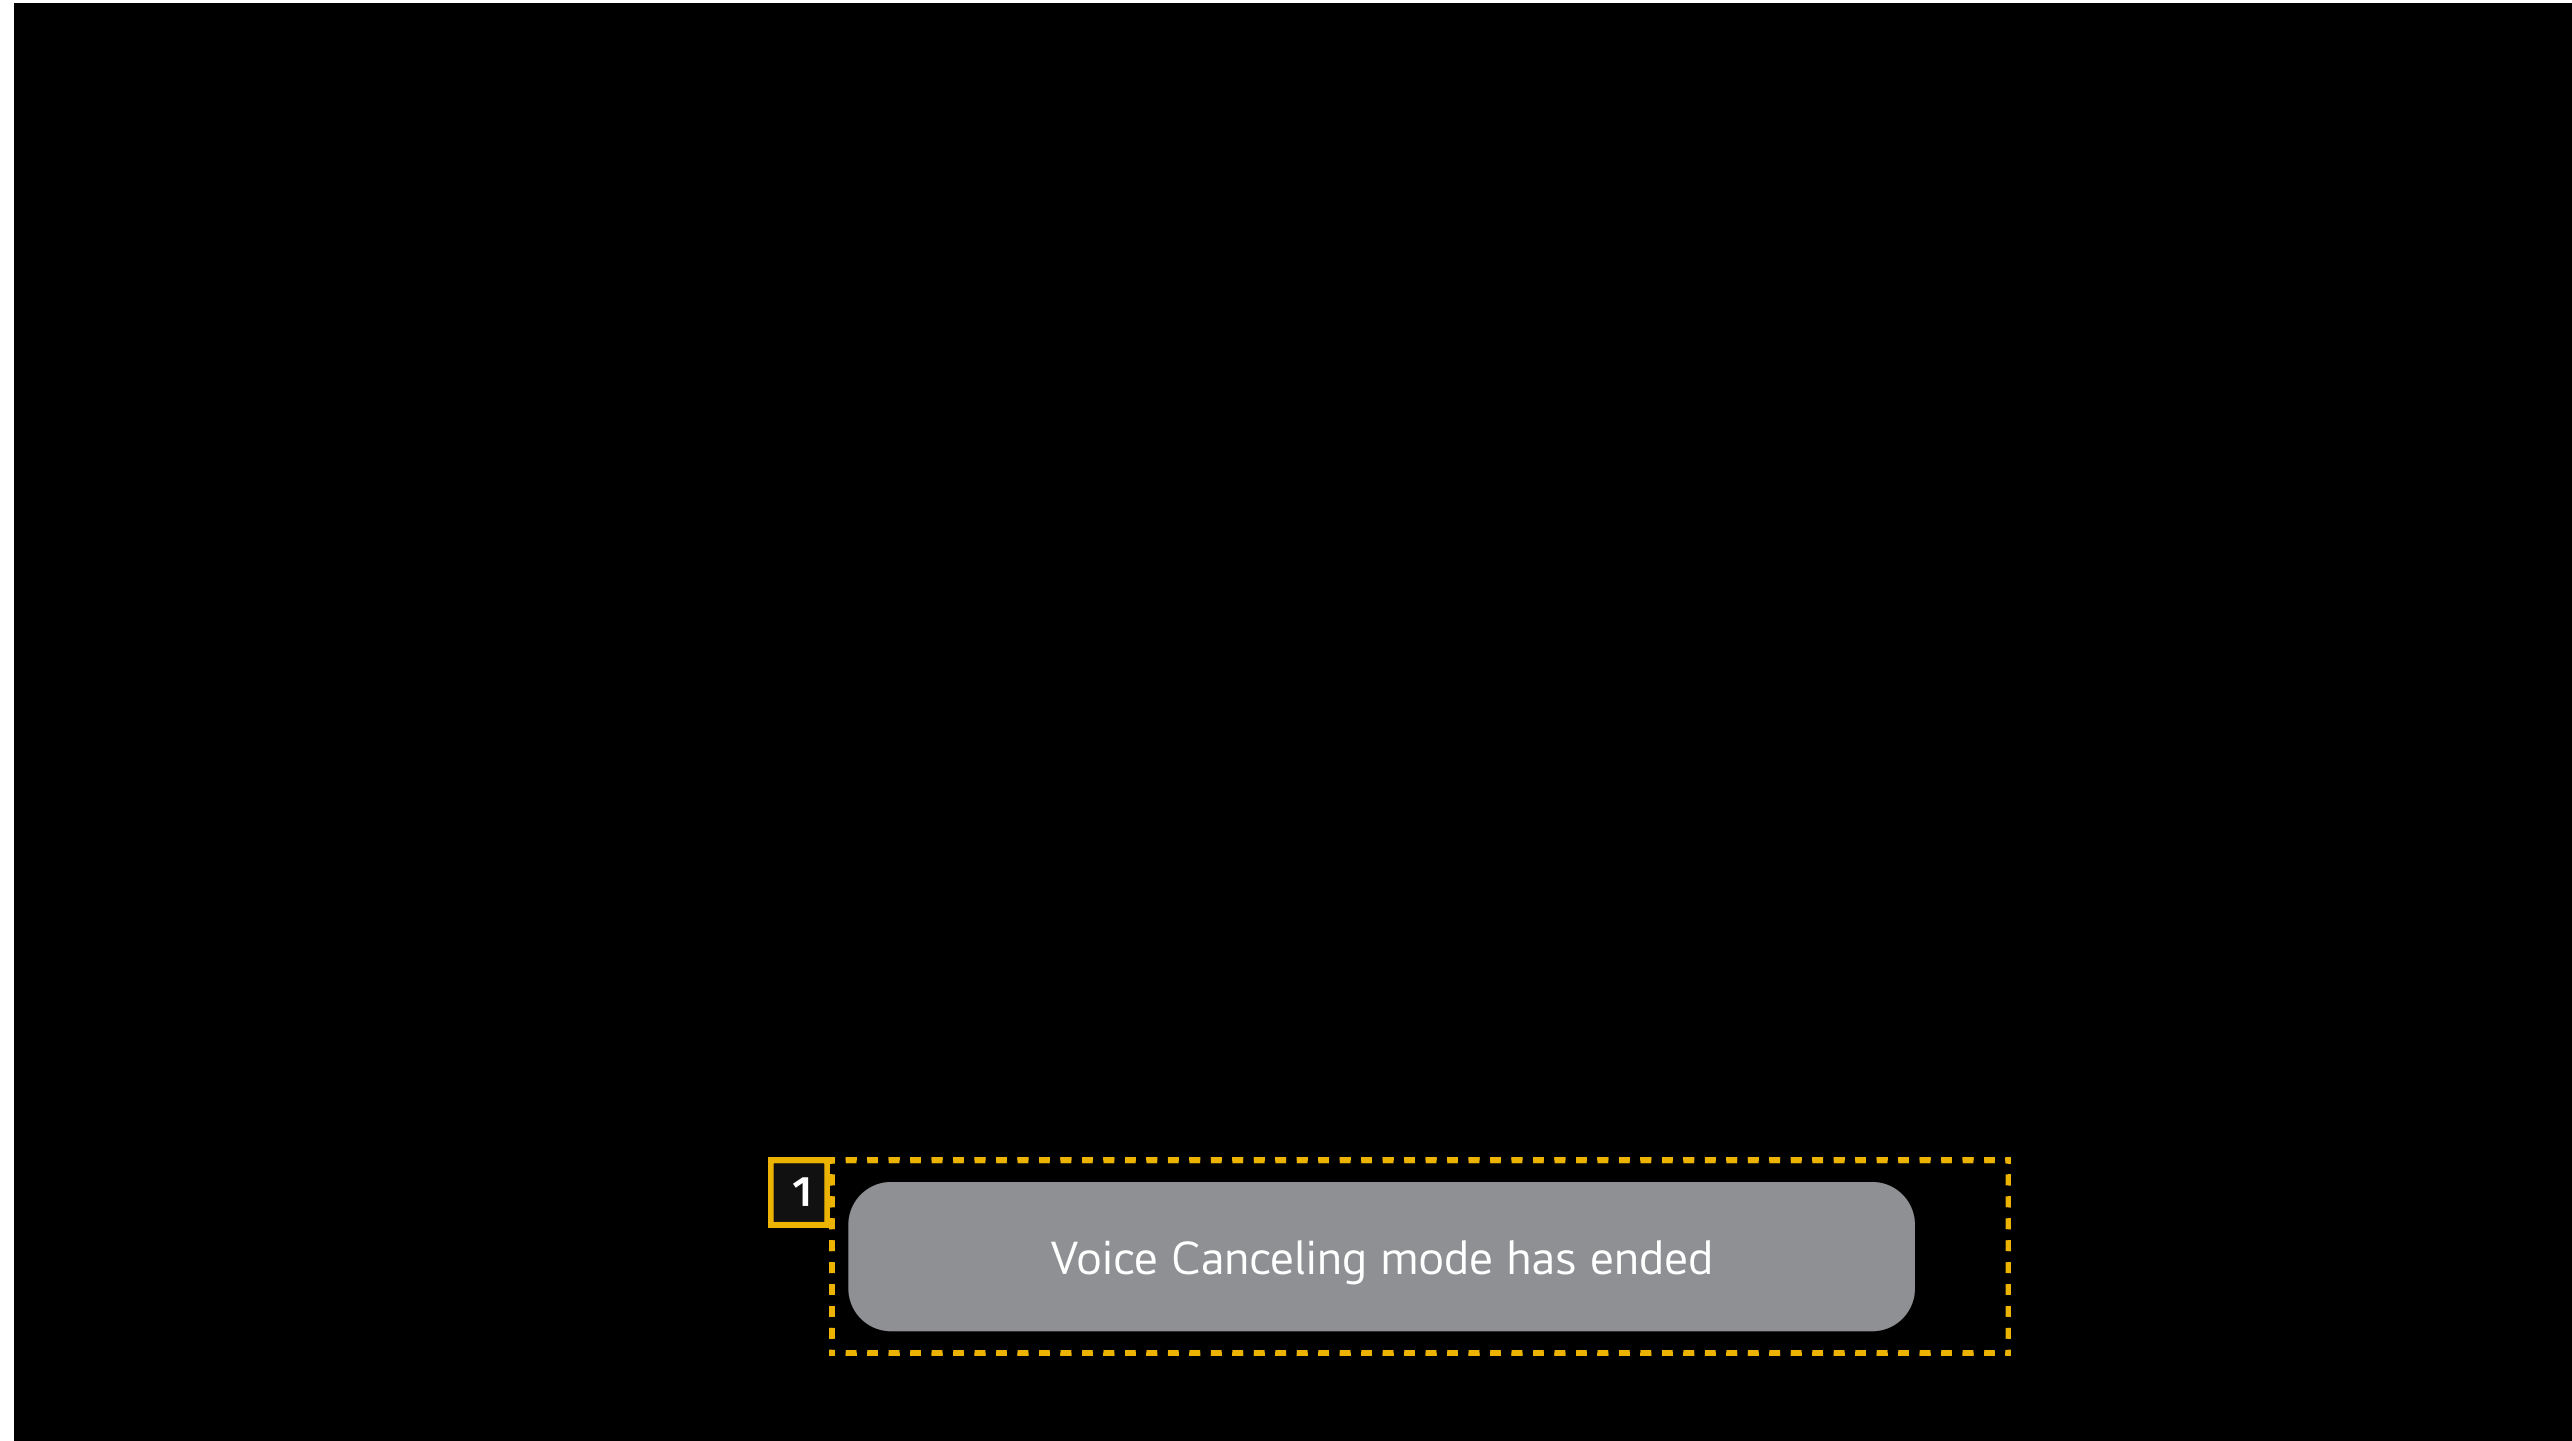

Title		Description
1	Popup Toast	- The voice canceling mode automatically turns off when switching inputs/channels/apps, and a toast popup will provide guidance.

Self Checklist

Classification	UX Goal	Confirmation Items	Confirmation Standards	Confirmation
Common UX	Consistency	Default focus was defined according to principle.	• Top leftmost clickable UI elements within the area corresponding to the main task • In the case of a list with setting values, focus is on the currently set item - the item associated with the information displayed on the entire screen.	O
Common UX	Consistency	It was written according to the subheader notation principles.	• Combination of words: current state, mode, number of currently selected items or setting values • Sentence: Description of current state or function, guide to user behavior • Display on one line or less • Stage and category name not provided	O
Common UX	Consistency	Icons/menus were used according to Hide/Disable standards.	• Hide : When a function is only provided in a specific country/model, when the cause of unavailability cannot be estimated, or when disabling it intensifies the user’s sense of betrayal • Disable : When it is temporarily unusable due to loading, when the maximum value within the provided range is reached, when there is a dependency on the preceding action, or when it is unusable only under certain conditions. • Display + Error Popup: Provides cause and solution for errors that can be resolved by the user	O
Common UX	Consistency	Spinner was used according to the display principles.	• Spinner for simple loading/search is unified to use only icons without text. • Marks the center of the area that actually requires loading	O
Common UX	Principle	In the following case, Modal popup was used.	• Pop-up displayed according to standards/regulations • A pop-up that the user must confirm and then select (ex. when predicting abnormal TV operation) • Pop-ups that cannot be easily recalled	O
Common UX	Principle	Icons and buttons in the Toast popup are not displayed		O
Common UX	Principle	Radio Item/Check Box Item/Radio Only/Check Box Only were used separately.	• Radio Item: Singular Selection • Check Box Item: Multiple selection • Form check box: When independent selection or item focus is not possible	O
Common UX	Principle	In cases where an existing component cannot be used, it is designed considering the layout and interaction rules of the currently registered component, and the usage operation can be completed.		O
Common UX	Principle	The subordinate buttons in edit mode were used according to principle.	• 'CANCEL' button provided for one-time editing and exiting edit mode	O
Scenario Design Considerations	Consistency	It was written considering consistency between scenarios related to the feature.		O
Scenario Template	Document Notation	On the About Feature page, required items were entered according to the guide for each feature.		O
Scenario Template	Document Notation	New phrase tags and Tagging rules have been unified.		O
Scenario Template	Document Notation	Local tags were added and Tagging rules were unified		O