



TASK 05-50-07-200-801-A

EFFECTIVITY: ALL

1. Maximum Flap / Slat Extended Speed - Inspection/Check

A. General

- (1) This section gives the necessary actions that you must take after the aircraft has flown at a speed higher than V_{FE} for a given flap / slat position.

NOTE: There are distinct values of V_{FE} according to the deflection angle of the flap / slat surface.

- (2) The exceedance of the V_{FE} , for any flap / slat deflections, will trigger the OS Aural Warning.
- (3) It is necessary to have a maintenance action when the crew reports the trigger of the OS aural warning or when flight data analysis shows that V_{FE} , for a given flap / slat position, has been exceeded with the flaps / slats extended.

- (4) Based on the operational limits listed in the AFM, one threshold value (T_V) is set to classify the severity of the event. The severity of the event will classify it into one of the situations below:

- (a) Below or equal to the Threshold Value (T_V): This threshold value defines a speed limit for which the Phase-I and Phase-II inspections are not necessary, if:

- There are no discrepancies detected during the initial evaluation ([SUBTASK 710-004-A](#));
- The event or the sum of the events took no more than 10 s.

- (b) Above the Threshold Value (T_V): This region defines a situation clearly out of the speed envelope, but the operator can still restore the aircraft airworthiness without Embraer involvement, if no discrepancies are found during the applicable inspections.
- (5) The purpose of this section is to give the operator all information to analyze the flight data, determine the required inspections and restore the aircraft airworthiness. Embraer must be involved only if, during any phased inspection, a discrepancy related to the event of V_{FE} exceedance is found. In this situation, the operator must send to Embraer the data and a report of the discrepancies found. An Embraer disposition is necessary to return the aircraft to service.

- (6) The flight data source can be either DVDR 1, DVDR 2 or QAR. Any of them is sufficient to define if maximum flap/slat extended speed condition occurred.

NOTE: DVDR 1 is installed in the FWD avionics compartment and DVDR 2 is installed in the aft avionics compartment.

- (7) When the aircraft is equipped with the QAR, you can use this equipment as an alternative to DVDR 2.

NOTE: The QAR must operate in continuous mode to be used as alternative to DVDR 2.

- (8) The operator can do the analysis of the flight operation data, but if the alternative is sending the data for an EMBRAER analysis, it is recommended that you send the QAR file.

**190
195****AIRCRAFT
MAINTENANCE MANUAL**

(9) These maintenance technicians are necessary to do this task:

- 2 - Airframe (Structure)
- 1 - Electrical/Avionics Systems

B. References

<i>REFERENCE</i>	<i>DESIGNATION</i>
AMM TASK 06-41-00-800-801-A/100	Fuselage Access Doors and Panels
AMM TASK 06-44-00-800-801-A/100	Wing Access Doors and Panels
AMM TASK 20-00-00-910-801-A/200	Aircraft Maintenance Safety Procedures - Standard Procedures
AMM TASK 27-50-00-710-801-A/500	Flap Control System - Operational Test
AMM TASK 27-80-00-710-801-A/500	Slat Control System - Operational Test
AMM TASK 57-49-02-000-802-A/400	Slat Track Cover - Removal
AMM TASK 57-49-02-400-802-A/400	Slat Track Cover - Installation
AMM TASK 57-51-00-200-801-A/600	Flap Rod Assy - Inspection
AMM TASK 57-58-21-000-801-A/400	Inboard-Flap Track Fairing 1 - Removal
AMM TASK 57-58-21-400-801-A/400	Inboard-Flap Track Fairing 1 - Installation
AMM TASK 57-58-23-000-801-A/400	Inboard-Flap Track Fairing 2 - Removal
AMM TASK 57-58-23-400-801-A/400	Inboard-Flap Track Fairing 2 - Installation
AMM TASK 57-58-25-000-801-A/400	Outboard-Flap Track Fairings 3 and 4 - Removal
AMM TASK 57-58-25-400-801-A/400	Outboard-Flap Track Fairings 3 and 4 - Installation

C. Zones and Accesses

<i>ZONES ACCESS</i>	<i>LOCATION</i>	<i>REFERENCE</i>
198ER	Wing-to-Fuselage Fairing RH Aft Panel	AMM TASK 06-41-00-800-801-A/100
198GR	Wing-to-Fuselage Fairing RH Aft Panel	AMM TASK 06-41-00-800-801-A/100
199DL	Wing-to-Fuselage Fairing LH Aft Panel	AMM TASK 06-41-00-800-801-A/100
199FL	Wing-to-Fuselage Fairing LH Aft Panel	AMM TASK 06-41-00-800-801-A/100
512AZ	Slat 2 - LH Wing	AMM TASK 06-44-00-800-801-A/100
514AZ	Slat 4 - LH Wing	AMM TASK 06-44-00-800-801-A/100
514BZ	Slat 4 - LH Wing	AMM TASK 06-44-00-800-801-A/100
515AB	Inboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
515BB	Inboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516AB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516BB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516CB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516DB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516EB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516FB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100



(Continued)

<i>ZONES ACCESS</i>	<i>LOCATION</i>	<i>REFERENCE</i>
516GB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
561AB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561BB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561CB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561ET	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561HT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561KT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561LT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561MT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562CT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562DT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562ET	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562FT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562GT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562HT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562JT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562KT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571GT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571HT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571JT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571KT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571LT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571MT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571NT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571PT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
612AZ	Slat 2 - RH Wing	AMM TASK 06-44-00-800-801-A/100
614AZ	Slat 4 - RH Wing	AMM TASK 06-44-00-800-801-A/100
614BZ	Slat 4 - RH Wing	AMM TASK 06-44-00-800-801-A/100
615AB	Inboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
615BB	Inboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616AB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616BB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616CB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616DB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616EB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616FB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616GB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



(Continued)

<i>ZONES ACCESS</i>	<i>LOCATION</i>	<i>REFERENCE</i>
661AB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661BB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661CB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661ET	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661HT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661KT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661LT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661MT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662CT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662DT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662ET	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662FT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662GT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662HT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662JT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662KT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671GT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671HT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671JT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671KT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671LT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671MT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671NT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671PT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100

D. Tools and Equipment

<i>REFERENCE</i>	<i>DESIGNATION</i>
ITEM GSE 029	TOOL - SLAT CONTROL LEVER LOCKING
Olympus IPLEX NX	Videoscope Equipment including Flexible fiberscope diameter 6 mm (0.236 in), length 3.5 meters (137.8 in), Four-Way motorized angulation 180°, Joystick-controlled articulation, high resolution LCD Monitor, 50W light source
Commercially available	Circuit Breaker Ring and Tag (Inoperative - Do Not Operate)
Commercially available	Flashlight
Commercially available	Mirror - Inspection
Commercially Available	Workstand - flaps
Commercially available	Workstand - slats

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

**E. Circuit Breaker List**

TYPE	DESIGNATION	LOCATION	BUS	LOCATION TIP	MCDU PAGE
CB	FLAP ACE 1	LHCBP	DC ESS BUS 1	FLIGHT CONTROLS -	
CB	FLAP ACE 2	RHCBP	DC ESS BUS 3	FLIGHT CONTROLS -	
CB	SLAT ACE 1	LHCBP	DC BUS 1	FLIGHT CONTROLS -	
CB	SLAT ACE 2	RHCBP	DC ESS BUS 2	FLIGHT CONTROLS -	

F. Flap/Slat-Extended Speed Exceedance - Event Assessment**SUBTASK 840-002-A**

- (1) The necessary actions following an exceedance of speed when the flaps / slats were extended are given in the flowchart shown in [Figure 601](#).
- (2) When the crew reports the OS aural warning, the aircraft can return to service without Phase-I and Phase-II inspections, only if all the conditions that follow are met:
 - There are no discrepancies detected during the initial evaluation ([SUBTASK 710-004-A](#));
 - The IAS value has not exceeded the threshold value (T_v) (refer to [Table 601](#) and/or to [Figure 602, Sheet 1](#) or refer to [Table 603](#) and/or to [Figure 602, Sheet 2](#));
 - The event or the sum of the events took no more than 10 s.

- (3) If the crew cannot assure that all the conditions above have been respected, it is necessary to do the flight data download and the data must be analyzed.

(4) EFFECTIVITY: ON AIRCRAFT WITH HONEYWELL DVDR

If it is not possible to do the flight data analysis immediately, do the Phase-I inspection. If no discrepancy is detected, a deferrable period of 10 FC is permitted.

NOTE: The flight data download must be performed in a maximum of 20 FH. If not, the data can be missed due to the recording time of the unit.

- (5) **EFFECTIVITY:** 190:00378-00429 00434-00434 00449-00449 00458-00458 00471-00491 00498-00498 00510-00686 00693-00697 00699-99999 OR 190:00163-00242 00282-00282 00329-00329 00450-00450 00460-00460 00493-00495

If it is not possible to do the flight data analysis immediately, do the Phase-I inspection. If no discrepancy is detected, a deferrable period of 10 FC is permitted.

NOTE: The flight data download must be performed in a maximum of 120 FH. If not, the data can be missed due to the recording time of the unit.



- (6) **EFFECTIVITY:** 190:00271-00271 00330-00330 00688-00692 00698-00698

If it is not possible to do the flight data analysis immediately, do the Phase-I inspection. If no discrepancy is detected, a deferrable period of 10 FC is permitted.

NOTE: The flight data download must be performed in a maximum of 120 FH. If not, the data can be missed due to the recording time of the unit.

- (7) Within the deferrable period, decide whether or not you want to do the flight data analysis. If you decide to do the analysis, you must compare the data with the threshold value (T_v) to get the necessary actions. If you decide not to do the analysis, do the Phase-II inspection.
- (8) When the detection source for a flap / slat extended speed exceedance is flight data analysis, not a crew report, you must do the required inspections as per [Figure 601, Sheet 1](#) flow chart.

NOTE: If it is not possible to do the Phase-II inspection immediately, a deferrable period of 10 FC is granted from the moment of the flap extended speed exceedance detection through the flight data analysis, provided that the Phase-I inspection is performed immediately and no damage is found during the inspection.

- (9) For the event assessment, the parameters below must be selected from the flight data source:
- Time (GMT)
 - Flap Position (FlapPos)
 - Slat Position (SlatPos)
 - Indicated Airspeed (Airspeed-CoP and Airspeed-Pil)

NOTE: The data should be selected from the flight data source at a rate of 0.5 sps (samples per second) for Flap and 1 sps (samples per second) for Slat.

NOTE: The parameters of Indicated Airspeed (Airspeed-CoP and Airspeed-Pil) to QAR are CAS_COPI and CAS respectively.

G. Flap / Slat Extended Speed Exceedance - Pilot Report

SUBTASK 840-004-A

- (1) Identify the slat/flap control lever position and the maximum operating speed. Compare the slat/flap control lever position and its respective maximum operating speed with the maximum operating speed limits. Refer to [Figure 602, Sheet 2](#) or to table below.

Table 601 - FLAP / SLAT CONTROL LEVER POSITION AND EQUIVALENT VFE

SFCL (Slat/Flap Control Lever)	V _{FE} (KIAS)	T _v (KIAS)
1	230	240
2	215	225
3	200	210
4	180	190
5	180	190



Table 601 - FLAP / SLAT CONTROL LEVER POSITION AND EQUIVALENT
VFE (Continued)

SFCL (Slat/Flap Control Lever)	V _{FE} (KIAS)	T _V (KIAS)
Full Down	165	175

- (2) Classify the event severity (above or below T_V) for each control lever position (flap or slat).
- (3) Refer to [Table 602](#) for the necessary actions, based on the event severity.

Table 602 - FLAP / SLAT EXTENDED SPEED EXCEEDANCE SEVERITY AND RE-
QUIRED ACTIONS

SAMPLE VALUE	REQUIRED ACTIONS
Below or equal to T _V	Return the aircraft to service, if: - No discrepancy is found during initial evaluation SUBTASK 710-004-A; - The event or the sum of the events took no more than 10 s; NOTE: If one of these conditions was not respected, consider it as an event above T _V .
Above T _V	- Do the Phase-II inspection.^[1] - If no discrepancy is found during Phase-II inspection, return the aircraft to service. - If any discrepancy is found during the Phase-II inspection, send the data and inspection results to Embraer. Work together with Embraer for the necessary actions.

[1] If it is not possible to do the flight data analysis immediately, a deferrable period of 10 FC is granted provided that no damage is found during the Phase-I inspection.

H. Flap / Slat Extended Speed Exceedance - Flight Data Source Analysis

SUBTASK 840-003-A

- (1) In the downloaded DVDR data, identify the flight period when the event occurred. Refer to [Figure 603](#). To do this, compare the Flap / Slat Position with its respective maximum operating speed limits. Refer to [Figure 602, Sheet 1](#) or to table below.

Table 603 - FLAP / SLAT POSITION AND EQUIVALENT VFE

FLAP POSITION (Flap-Pos) (°)	SLAT POSITION (Slat-Pos) (°)	V _{FE} (KIAS)	T _V (KIAS)
>0 and <= 7.0	>0 and <= 15.0	230	240
>7.0 and <= 10.0	>0 and <= 15.0	215	225
>10.0 and <= 20.0	>0 and <= 15.0	200	210
>10.0 and <= 20.0	>15.0 and <= 25.0	180	190
>10.0 and <= 20.0	>15.0 and <= 25.0	180	190
>20.0 and <= 37.0	>15.0 and <= 25.0	165	175



- (2) Mark all the samples for which the speed is higher than the operational speed for the equivalent flap / slat position and, subtracting the time of the first sample with overspeed record from the last, obtain the overspeed duration. Refer to [Figure 603](#).
- (3) Identify all the samples that register a surface (flap or slat) in a position different from "zero", close to the samples that registered the overspeed for the equivalent Flap / Slat Position. Classify the event severity (above or below T_V) for each surface (flap or slat) position.
- (4) During flap / slat transit, consider the next higher flap / slat position until surfaces complete the transition.
- (5) Refer to [Table 604](#) for the necessary actions, based on the event severity.

Table 604 - FLAP / SLAT EXTENDED SPEED EXCEEDANCE SEVERITY AND REQUIRED ACTIONS

SAMPLE VALUE	REQUIRED ACTIONS
Below or equal to T_V	Return the aircraft to service, if: • No discrepancy is found during initial evaluation SUBTASK 710-004-A; • The event or the sum of the events took no more than 10 s; NOTE: If one of these conditions was not respected, consider it as an event above T_V.
Above T_V	1. Do the Phase-II inspection^[1]. 2. If no discrepancy is found during Phase-II inspection, return the aircraft to service. 3. If any discrepancy is found during the Phase-II inspection, send the data and inspection results to Embraer. Work together with Embraer for the necessary actions.

[1] If the DVDR analysis shows that the flaps were in "zero" position, perform only the slats inspection.

I. Job Set-Up

SUBTASK 860-001-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

- (1) Do the procedure to make the aircraft safe for maintenance (AMM TASK 20-00-00-910-801-A/200).

J. Initial Evaluation

SUBTASK 710-004-A

- (1) On the control pedestal, set the FSL to (FULL) open position, wait the flaps/slats move to the (FULL) open position.
- (2) On the control pedestal, set the FSL to (0) close position, wait the flaps/slats move to (0) close position.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



(3) Make sure that none of the two messages below are active in the EICAS:

- FLAP FAIL (275 001 00)
- SLAT FAIL (278 001 00)

K. Phase-I Inspection

SUBTASK 860-004-A

- (1) Set flaps and slats to the fully extended position.
- (2) Install the locking tool GSE 029 on the SFCL.
- (3) Open these circuit breakers and put a circuit breaker ring and tag (inoperative - do not operate) on each one of them:
 - FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)

SUBTASK 210-004-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (4) For the flaps, do as follows:
 - (a) Put the workstand (flaps) in the work area.
 - (b) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings.
 - Actuator fittings and gimbals (Figure 604)
 - Track supports (Figure 605)
 - Main and aft carriages (Figure 606)
 - Rails (Figure 608)
 - Upper and lower skins (Figure 609)
 - Main and aft carriage attachments (Figure 613)
 - Aft flap roller fitting (Figure 614)



- (c) Do an inspection of the flap rod mechanism (AMM TASK 57-51-00-200-801-A/600).

NOTE: If flap rods are bent but no other related parts are damaged, only flap rod replacement is necessary. In this case, if you don't have any other discrepancy during phase I inspection, phase II inspection is not necessary and no need to send the flight data and inspection results to Embraer.

SUBTASK 210-005-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (5) For the slats, do as follows:
- (a) Put the workstand (slats) in the work area.
 - (b) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings.
 - Exposed parts of the slat tracks, rack teeth and pinions ([Figure 615](#))
 - Top and back skins ([Figure 616](#))
 - Exposed parts of the track links and bolts ([Figure 617](#))
 - Exposed parts of the slat harness tube and WAI backwall temperature sensor ([Figure 618](#))
 - Exposed parts of the WAI telescopic tube ([Figure 619](#))

SUBTASK 860-005-A

- (6) Remove all tools, equipment and unwanted material from the work area.
- (7) Remove the circuit breaker ring and tag (inoperative - do not operate) from each one of these circuit breakers, and close them:
- FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)
- (8) Remove the locking tool GSE 029 from the SFCL.
- (9) Set flaps and slats to the fully retracted position.

SUBTASK 710-002-A



(10) Do an operational test of the flaps (AMM TASK 27-50-00-710-801-A/500).

(11) Do an operational test of the slat (AMM TASK 27-80-00-710-801-A/500).

L. Phase-II Inspection

SUBTASK 860-006-A

- (1) Set flaps and slats to the fully extended position.
- (2) Install the locking tool GSE 029 on the SFCL.
- (3) Open these circuit breakers and put a circuit breaker ring and tag (inoperative - do not operate) on each one of them:
 - FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)

SUBTASK 210-007-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (4) For the flaps, do as follows:

NOTE: If the flight data analysis shows that the flaps were in "zero" position during the overspeed event, it is only necessary to inspect the slats.

- (a) Remove these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100:
 - 561AB, 561BB, 561CB, 561ET and 561HT;
 - 661AB, 661BB, 661CB, 661ET and 661HT;
 - 571GT and 671GT;
 - 561KT, 561LT and 561MT;
 - 661KT, 661LT and 661MT;
 - 562KT, 562JT, 662KT and 662JT;
 - 571HT, 571JT, 571KT, 571LT, 571MT, 571NT and 571PT;
 - 671HT, 671JT, 671KT, 671LT, 671MT, 671NT and 671PT;
 - 562CT, 562DT, 562ET, 562FT, 562GT and 562HT;
 - 662CT, 662DT, 662ET, 662FT, 662GT and 662HT.



- (b) Remove these wing-to-fuselage access panels. Refer to AMM TASK 06-41-00-800-801-A/100:
- 199DL and 199FL;
 - 198ER and 198GR.
- (c) Remove the inboard flap root fairings. Refer to AMM TASK 57-58-21-000-801-A/400.
- (d) Remove the inboard flap track fairings. Refer to AMM TASK 57-58-23-000-801-A/400.
- (e) Remove the outboard flap track fairings. Refer to AMM TASK 57-58-25-000-801-A/400.
- (f) Put the workstand (flaps) in the work area.
- (g) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings:
- Actuator fittings and gimbals (Figure 604)
 - Track supports (Figure 605)
 - Main and aft carriages (Figure 606)
 - Flap roller studs (Figure 607)
 - Rails (Figure 608)
 - Upper and lower skins (Figure 609)
 - Track support fittings (Figure 610)
 - Inboard flap torque tube and fittings (Figure 611)
 - Main and aft carriage attachments (Figure 613)
 - Aft flap roller fitting (Figure 614)
- (h) Do an inspection of the flap rod mechanism (AMM TASK 57-51-00-200-801-A/600).

NOTE: If flap rods are bent but no other related parts are damaged, only flap rod replacement is necessary. In this case, if you don't have any other discrepancy during phase II inspection, no need to send the flight data and inspection results to Embraer.

SUBTASK 290-003-A



WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (5) Use a videoscope IPLEX NX to do a borescopic inspection of the inboard and outboard flap internal structures (Figure 612). Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items.

SUBTASK 210-009-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (6) For the slats, do as follows:
- (a) Remove these slat access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
 - 512AZ, 514AZ and 514BZ;
 - 612AZ, 614AZ and 614BZ;
 - 515AB, 515BB, 516AB, 516BB, 516CB, 516DB, 516EB, 516FB and 516GB;
 - 615AB, 615BB, 616AB, 616BB, 616CB, 616DB, 616EB, 616FB and 616GB;
 - (b) Remove the slat covers (AMM TASK 57-49-02-000-802-A/400).
 - (c) Put the workstand (slats) in the work area.
 - (d) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings:
 - Tracks, rack teeth and pinions (Figure 615)
 - Top and back skins (Figure 616)
 - Track links and bolts (Figure 617)
 - Slat harness tube and WAI backwall temperature sensor (Figure 618)
 - WAI telescopic tube (Figure 619)
 - Roller bolts and studs (Figure 620)
 - Torque tube and slat actuator (Figure 621)
 - Track ribs at fixed leading edge (Figure 623)

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



- Skew sensor and gear (Figure 624)

SUBTASK 290-005-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (7) Use a videoscope IPLEX NX to do a borescopic inspection of the slat internal structures (Figure 622). Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items.

SUBTASK 400-003-A

- (8) After Flap and Slat inspection, install the removed parts and panels as follows:
- (a) For Flaps, install these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- 561AB, 561BB, 561CB, 561ET and 561HT;
 - 661AB, 661BB, 661CB, 661ET and 661HT;
 - 571GT and 671GT;
 - 561KT, 561LT and 561MT;
 - 661KT, 661LT and 661MT;
 - 562KT, 562JT, 662KT and 662JT;
 - 571HT, 571JT, 571KT, 571LT, 571MT, 571NT and 571PT;
 - 671HT, 671JT, 671KT, 671LT, 671MT, 671NT and 671PT;
 - 562CT, 562DT, 562ET, 562FT, 562GT and 562HT;
 - 662CT, 662DT, 662ET, 662FT, 662GT and 662HT.
- (b) Install these wing-to-fuselage access panels. Refer to AMM TASK 06-41-00-800-801-A/100.
- 199DL and 199FL;
 - 198ER and 198GR.
- (c) Install the inboard-flap root fairings. Refer to AMM TASK 57-58-21-400-801-A/400.
- (d) Install the inboard-flap track fairing. Refer to AMM TASK 57-58-23-400-801-A/400
- (e) Install the outboard-flap track fairings. Refer to AMM TASK 57-58-25-400-801-A/400.



- (9) For Slats, install these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- (a) Install these slat access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- 512AZ, 514AZ and 514BZ;
 - 612AZ, 614AZ and 614BZ;
 - 515AB, 515BB, 516AB, 516BB, 516CB, 516DB, 516EB, 516FB and 516GB;
 - 615AB, 615BB, 616AB, 616BB, 616CB, 616DB, 616EB, 616FB and 616GB;
- (b) Install the slat covers (AMM TASK 57-49-02-400-802-A/400).

SUBTASK 410-002-A

- (10) Remove all tools, equipment, and unwanted material from the work area.
- (11) Remove the circuit breaker ring and tag (inoperative - do not operate) from each one of these circuit breakers, and close them:
- FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)
- (12) Remove the locking tool GSE 029 from the SFCL.
- (13) Set flaps and slats to the fully retracted position.


SUBTASK 710-003-A

- (14) Do an operational test of the flaps (AMM TASK 27-50-00-710-801-A/500).
- (15) Do an operational test of the slat (AMM TASK 27-80-00-710-801-A/500).

M. Job Close-Up

SUBTASK 860-002-A

- (1) Put the aircraft back to its initial condition (AMM TASK 20-00-00-910-801-A/200).

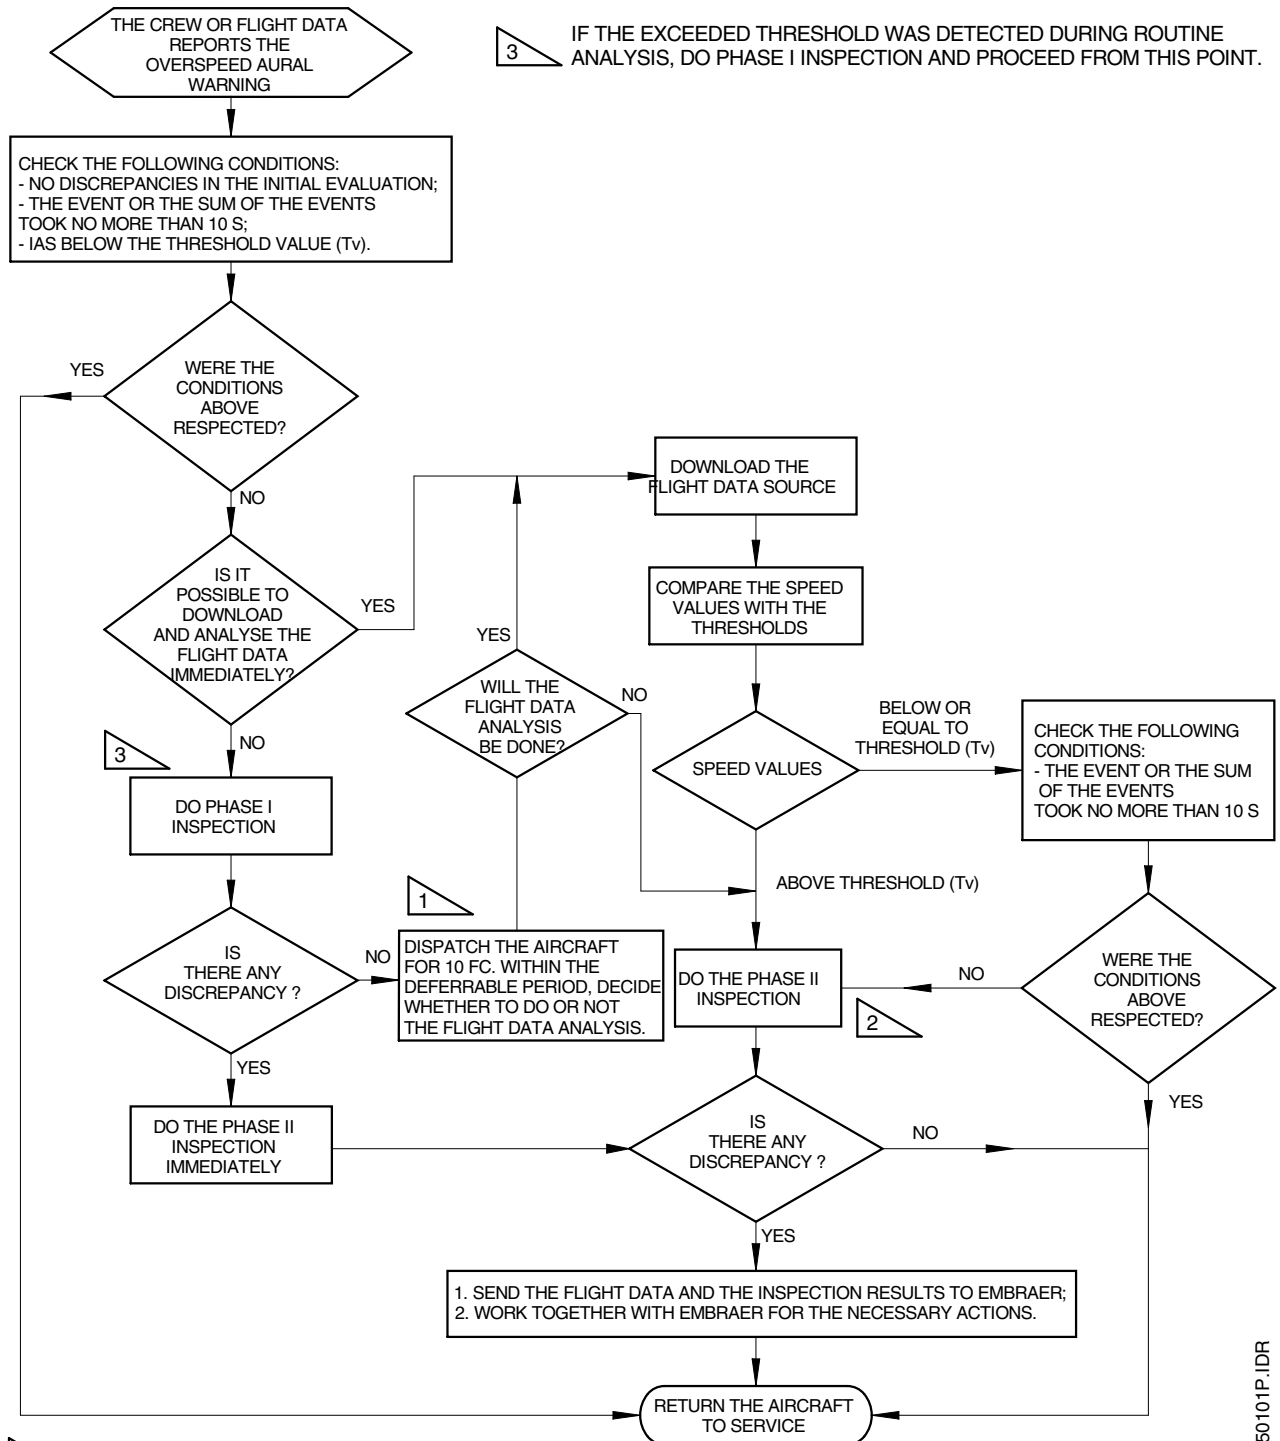**EFFECTIVITY: ON AIRCRAFT WITH HONEYWELL DVDR****Detection and Inspection - Flowchart****Figure 601 - Sheet 1**

1 THE FLIGHT DATA DOWNLOAD WITHIN A MAXIMUM OF 20FH DEFERRABLE PERIOD. IF NOT, THE DATA CAN BE MISSED DUE TO THE RECORDING TIME OF THE UNIT.

2 IF THE AIRCRAFT HAS HAD A 10 FC DEFERRABLE, DO THE PHASE-II INSPECTION WITHIN THIS PERIOD.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050101P.IDR



EFFECTIVITY: 190:00378-00429 00434-00434 00449-00449 00458-00458 00471-00491 00498-00498 00510-00686 00693-00697 00699-99999 OR 190:00163-00242 00282-00282 00329-00329 00450-00450 00460-00460 00493-00495


Detection and Inspection - Flowchart

Figure 601 - Sheet 2

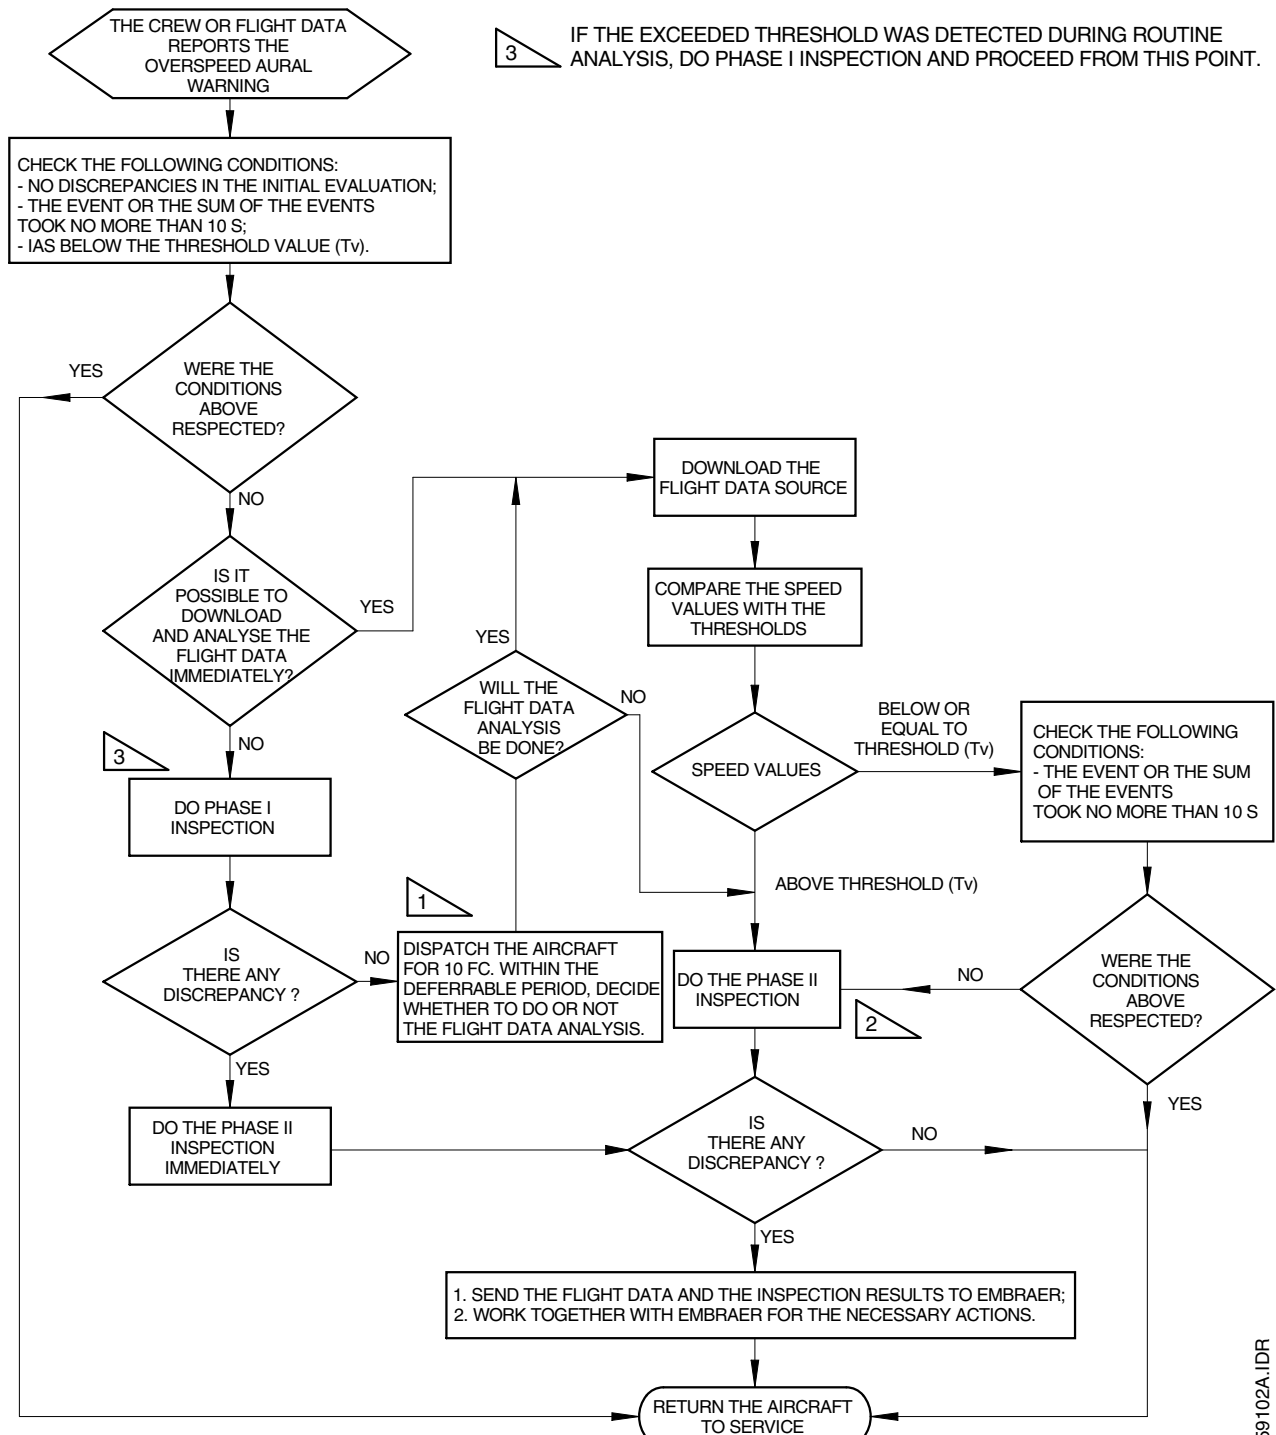

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP059102A.IDR

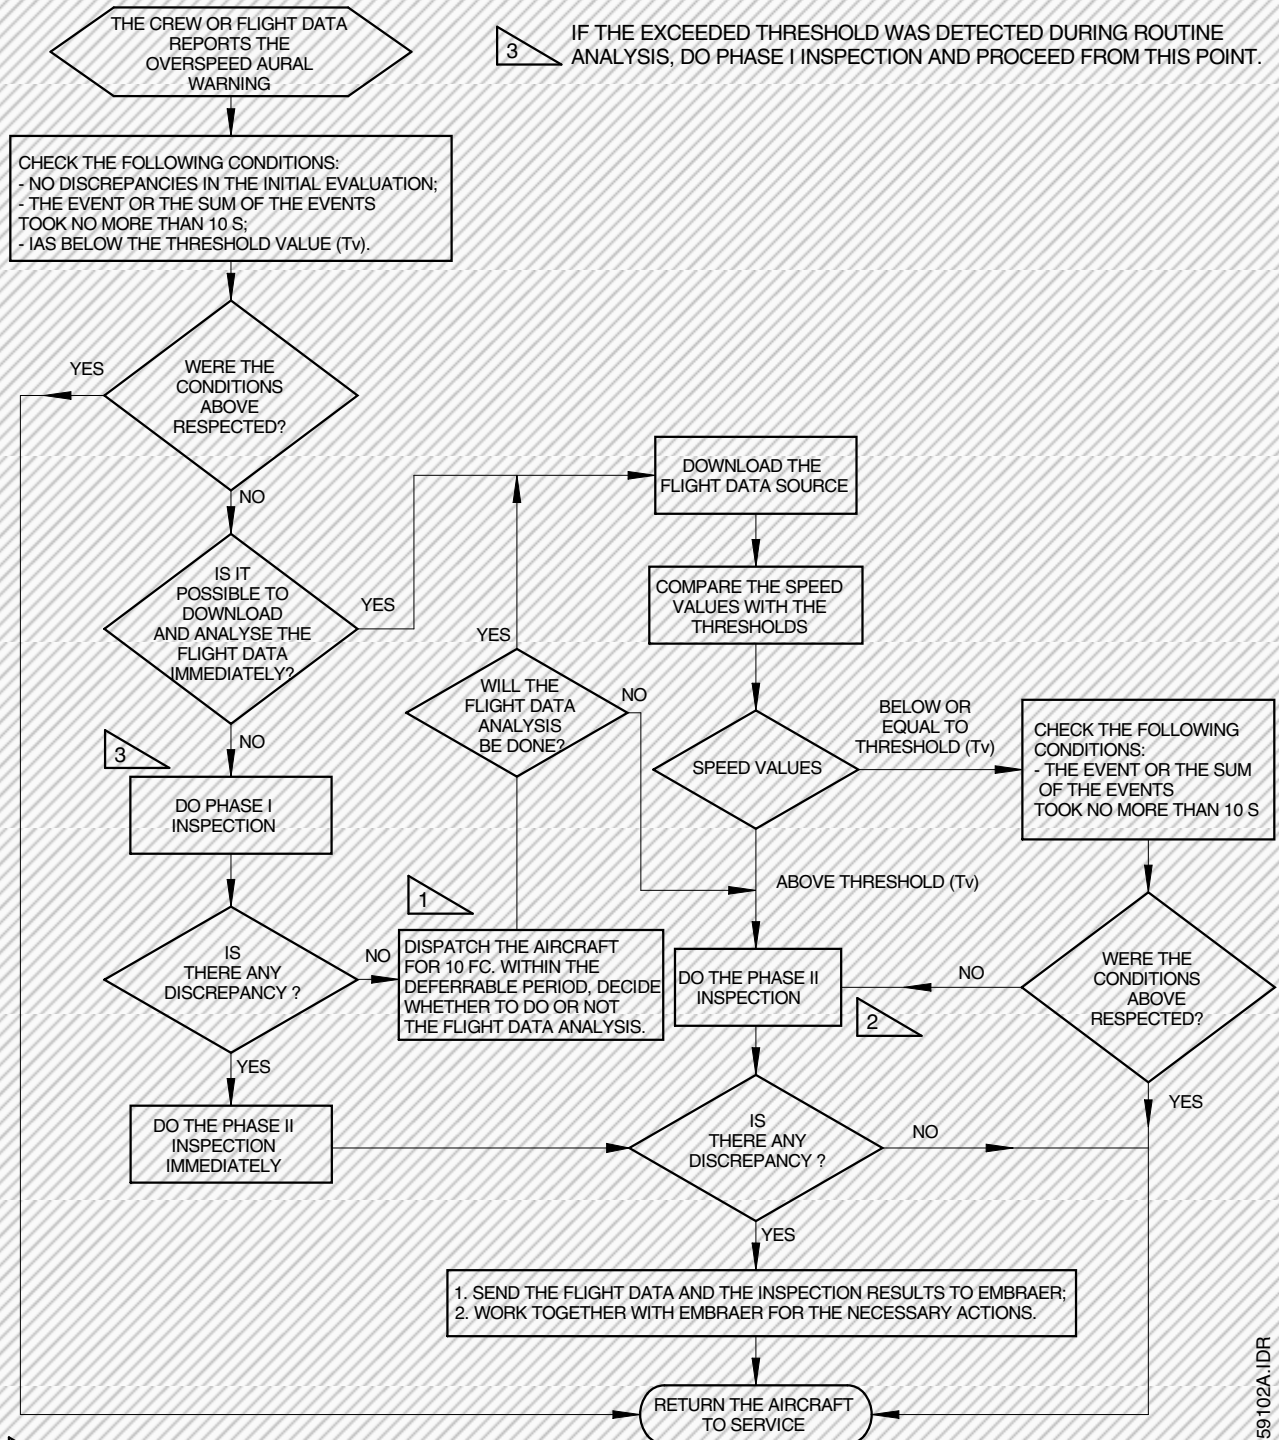**EFFECTIVITY: 190:00271-00271 00330-00330 00688-00692 00698-00698****Detection and Inspection - Flowchart****Figure 601 - Sheet 3**HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP059102A1DR




EFFECTIVITY: ALL

Maximum Flap / Slat Extended Speed and Thresholds

Figure 602 - Sheet 1

MAXIMUM FLAP/SLAT EXTENDED SPEED AND THRESHOLDS

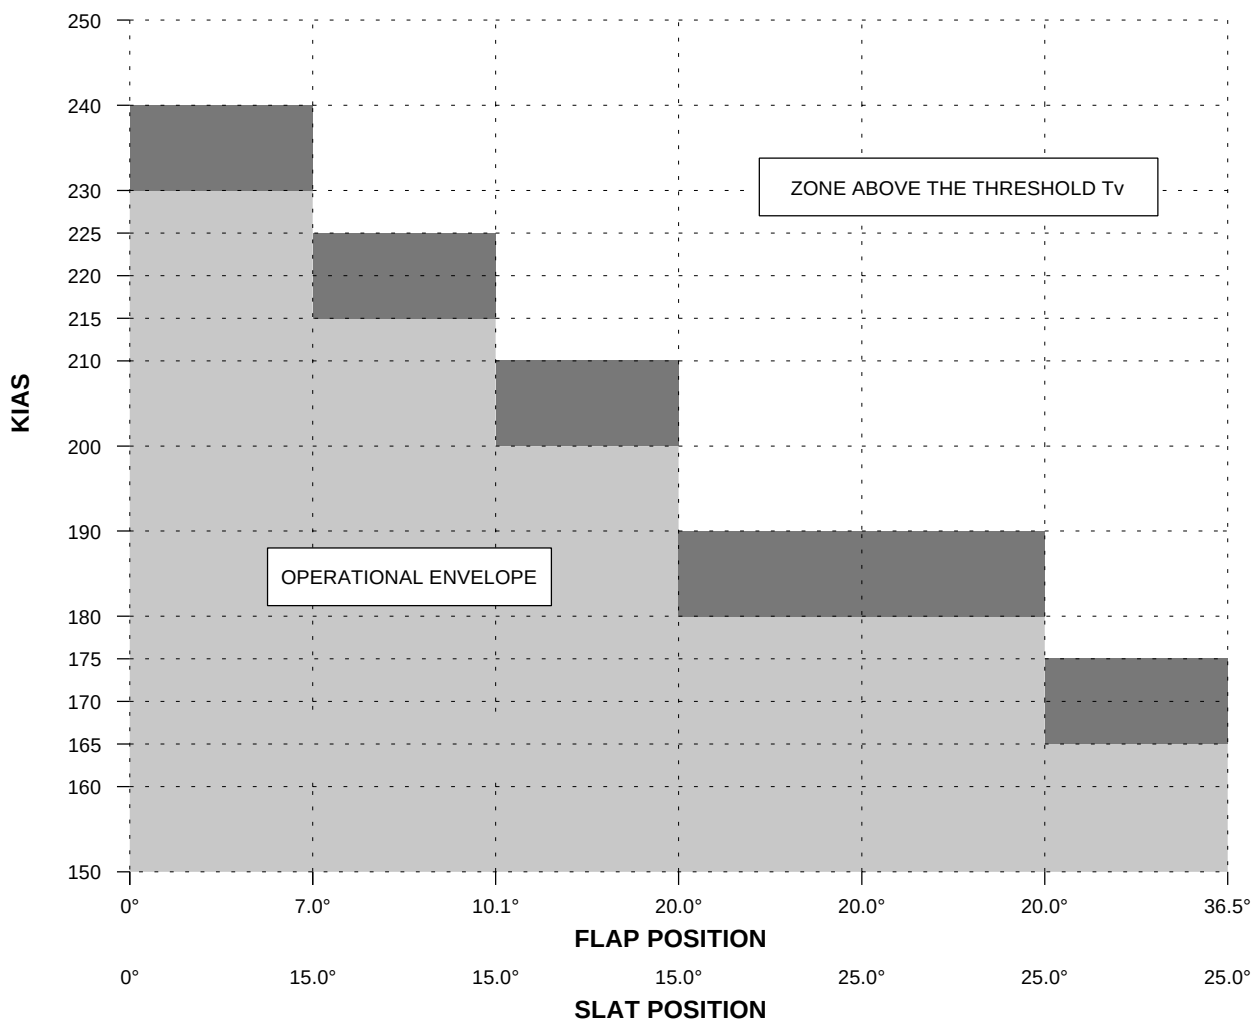

- ☐ ZONE ABOVE THE THRESHOLD (Tv)
- ☐ ZONE WITHIN THE OPERATIONAL ENVELOPE
- ☐ ZONE ABOVE THE OPERATIONAL ENVELOPE AND BELOW THE THRESHOLD (Tv)

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050103D.DGN





EFFECTIVITY: ALL

Maximum Flap / Slat Extended Speed and Thresholds

Figure 602 - Sheet 2

MAXIMUM FLAP/SLAT EXTENDED SPEED AND THRESHOLDS

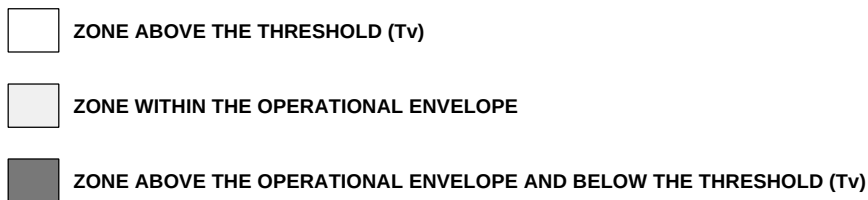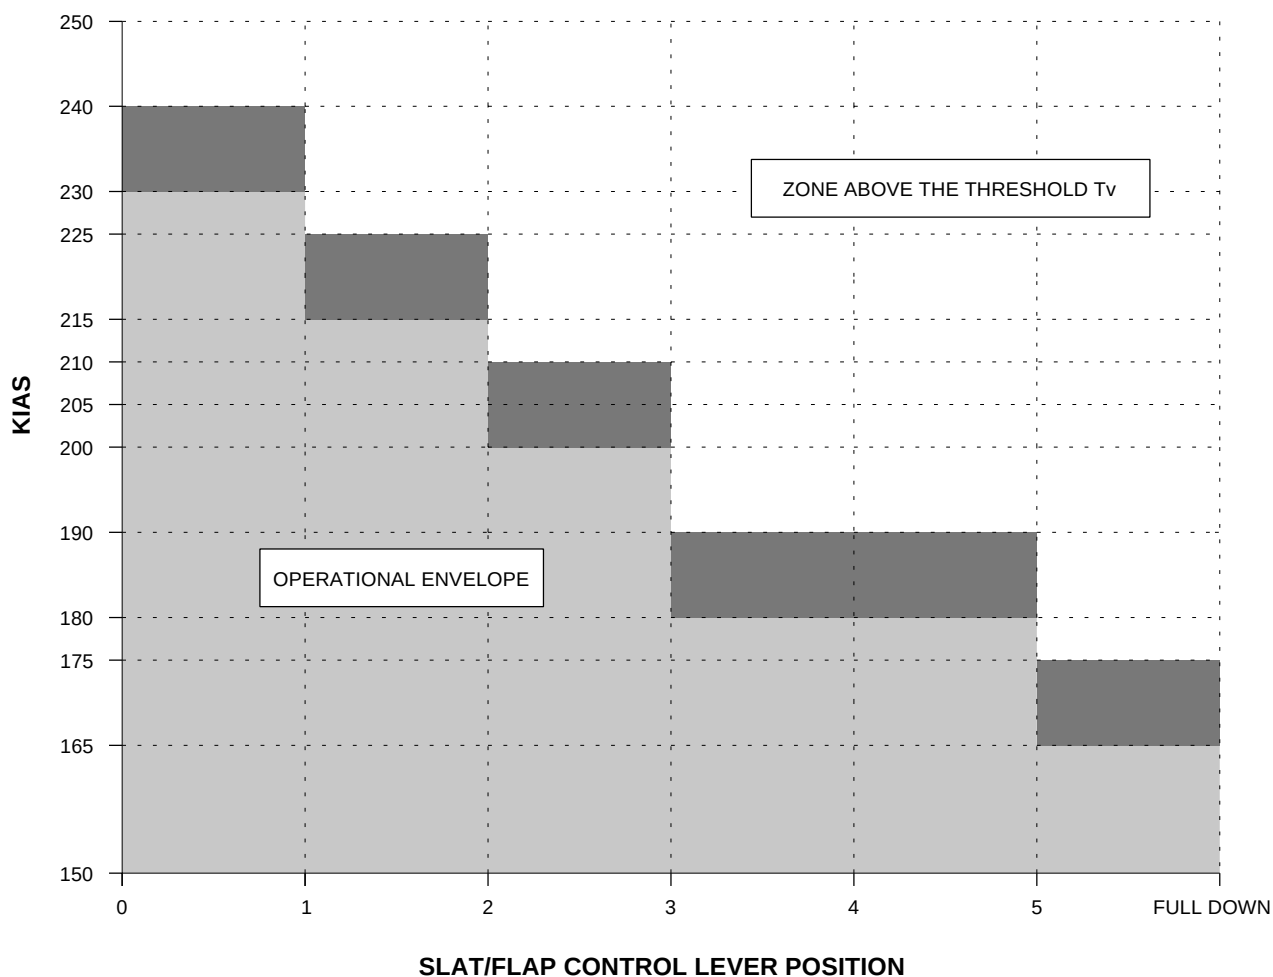

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336

EM170MPP050422A.DGN



EFFECTIVITY: ALL

Flight Data Source Analysis

Figure 603

Sample	SlatPos	FlapPos	Month	Day	GMT	Airspeed-Cop	Airspeed-Pil
145	0.00				12:40:22	236.5	237.0
146	0.00	0.000	4	16	12:40:23	235.0	236.8
147	0.00				12:40:24	233.5	235.5
148	0.00	0.000			12:40:25	232.3	235.1
149	0.00				12:40:26	231.0	234.6
150	0.00	0.000	4	16	12:40:27	229.5	233.5
151	0.00				12:40:28	228.0	234.1
152	0.00	0.000			12:40:29	226.3	235.3
153	0.00				12:40:30	224.5	236.8
154	0.00	0.000	4	16	12:40:31	223.3	237.3
155	0.00				12:40:32	222.5	236.1
156	0.00	0.000			12:40:33	221.8	236.9
157	0.00				12:40:34	221.3	238.0
158	0.00	0.000	4	16	12:40:35	221.0	240.2
159	0.00				12:40:36	219.8	239.2
160	0.00	0.000			12:40:37	220.0	238.5
161	0.00				12:40:38	219.3	237.4
162	0.62	0.000	4	16	12:40:39	218.8	236.3
163	2.02				12:40:40	218.0	235.4
164	3.52	0.000			12:40:41	217.5	233.5
165	5.01				12:40:42	216.8	230.2
166	6.50	0.000	4	16	12:40:43	215.5	228.1
167	8.09				12:40:44	214.5	226.4
168	9.58	0.000			12:40:45	213.3	224.3
169	11.07				12:40:46	212.3	222.5
170	12.57	0.000	4	16	12:40:47	211.0	220.7
171	14.15				12:40:48	209.3	218.3
172	14.94	0.000			12:40:49	208.0	216.2
173	14.94				12:40:50	207.3	214.4
174	14.94	0.000	4	16	12:40:51	206.3	212.3
175	14.94				12:40:52	205.3	210.1
176	14.94	0.967			12:40:53	204.0	208.7
177	14.94				12:40:54	203.3	206.3
178	14.94	2.285	4	16	12:40:55	202.3	203.3
179	14.94				12:40:56	201.0	201.5
180	14.94	3.604			12:40:57	199.8	200.3
181	14.94				12:40:58	198.5	199.0
182	14.94	4.922	4	16	12:40:59	197.0	197.5
183	14.94				12:41:00	195.8	196.3
184	14.94	6.240			12:41:01	194.3	195.0
185	14.94				12:41:02	193.3	193.8
186	14.94	6.943	4	16	12:41:03	192.0	192.5
187	14.94				12:41:04	190.5	191.3
188	14.94	6.943			12:41:05	189.5	190.3
189	14.94				12:41:06	189.0	189.5
190	14.94	6.943	4	16	12:41:07	188.8	190.0
191	14.94				12:41:08	189.3	190.3
192	14.94	6.943			12:41:09	189.5	190.8
193	14.94				12:41:10	190.0	191.0
194	14.94	6.943	4	16	12:41:11	190.0	191.0

NOTE:

DURING FLAP/SLAT TRANSIT, CONSIDER THE NEXT HIGHER FLAP/SLAT POSITION UNTIL SURFACES COMPLETE THE TRANSITION.
EXAMPLE: A) WHEN SLAT IS GOING FROM 0° TO 15°, CONSIDER SLAT POSITION AT 15°.

B) WHEN SLAT IS GOING FROM 25° TO 15°, CONSIDER FLAP POSITION AT 25°.

1 IDENTIFY THE SAMPLES THAT RECORD THE FLAP/SLAT POSITION CHANGE.

2 USING THE OPERATIONAL SPEEDS FOR EACH FLAP/SLAT POSITION, IDENTIFY THE OVERSPEED REGION.

3 IDENTIFY THE SAMPLES THAT RECORD THE SLAT TRANSIT.

4 IDENTIFY THE SAMPLES THAT RECORD THE FLAP TRANSIT.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050172B.DGN



EFFECTIVITY: ALL

Flaps - Actuator Fittings and Gimbals

Figure 604 - Sheet 1

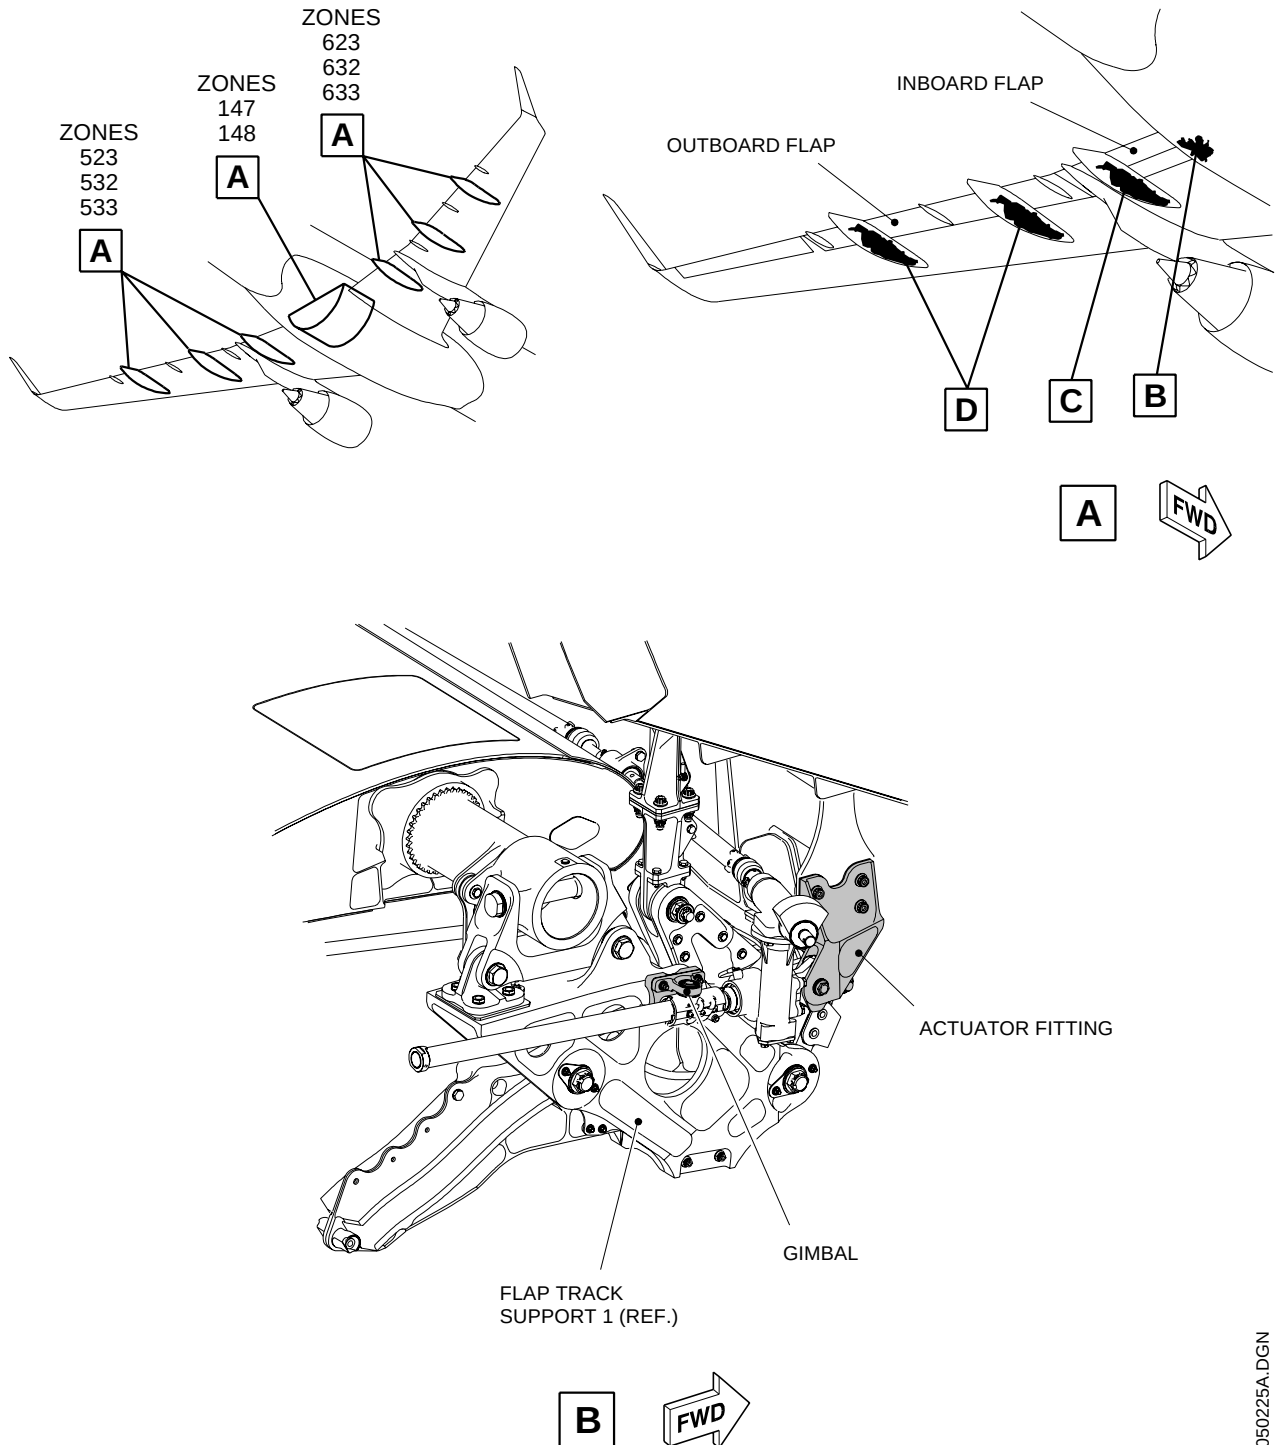

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MP0050225A.DGN



EFFECTIVITY: ALL

Flaps - Actuator Fittings and Gimbals

Figure 604 - Sheet 2

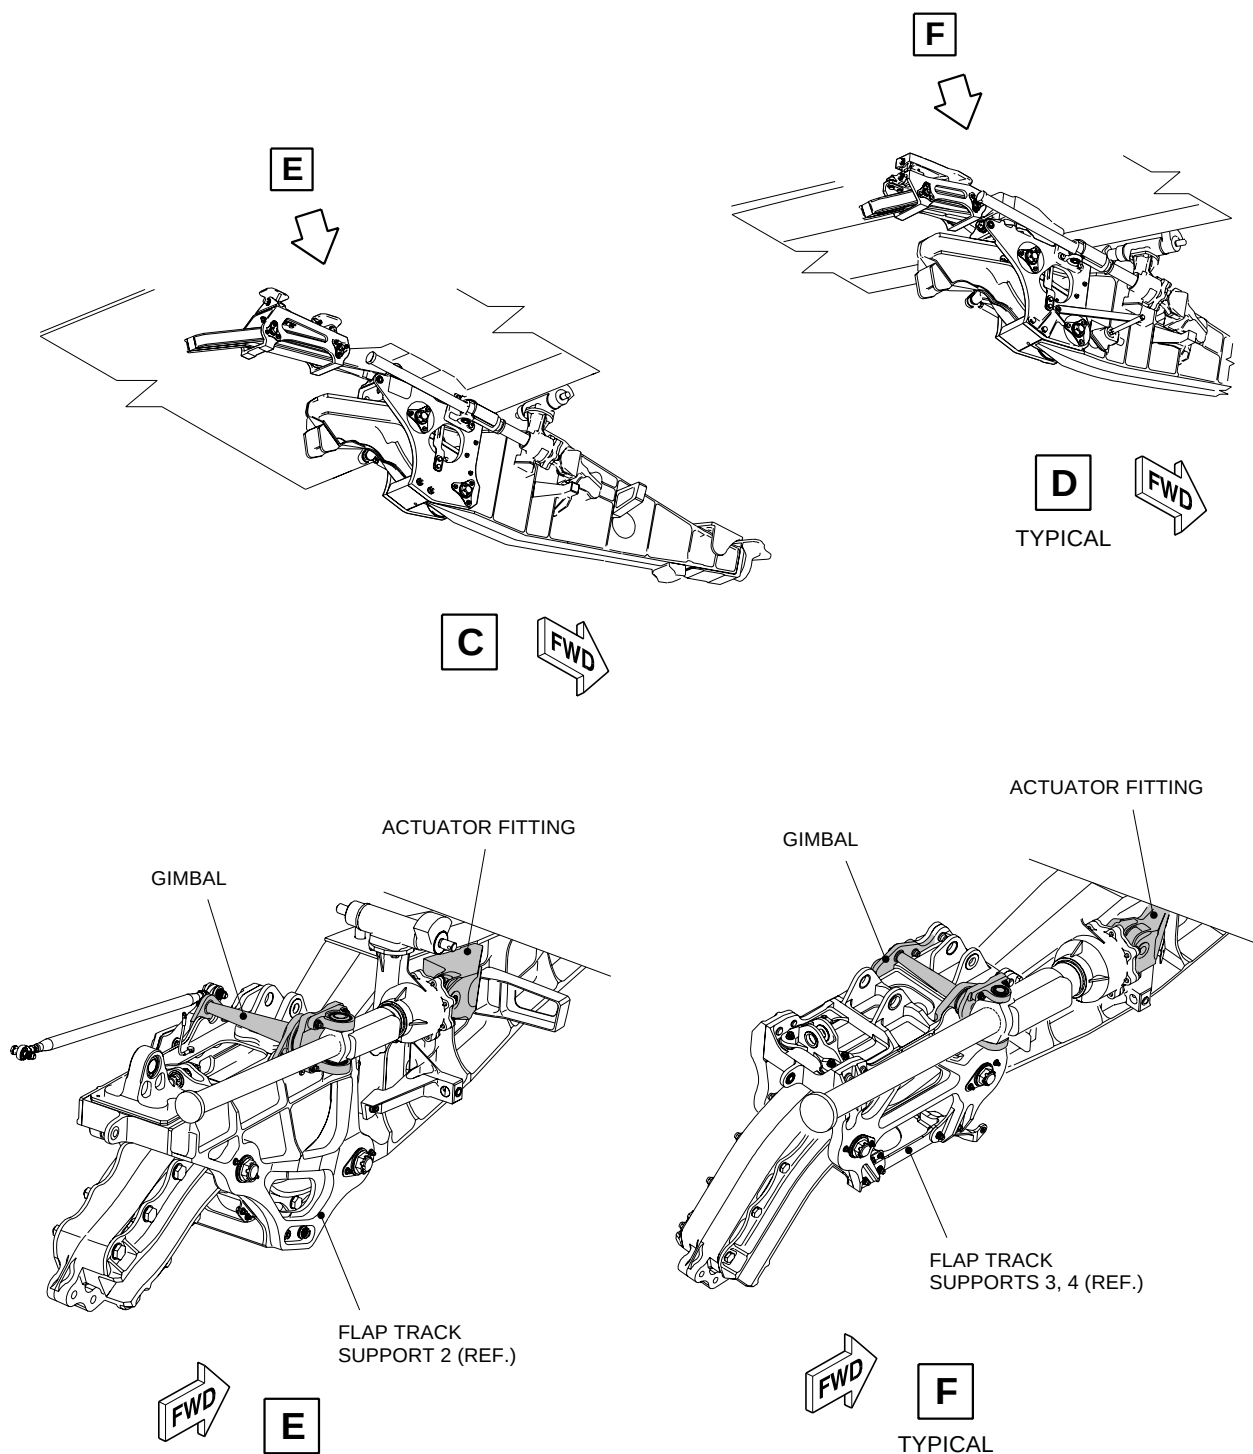

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050226A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Flaps - Track supports

Figure 605

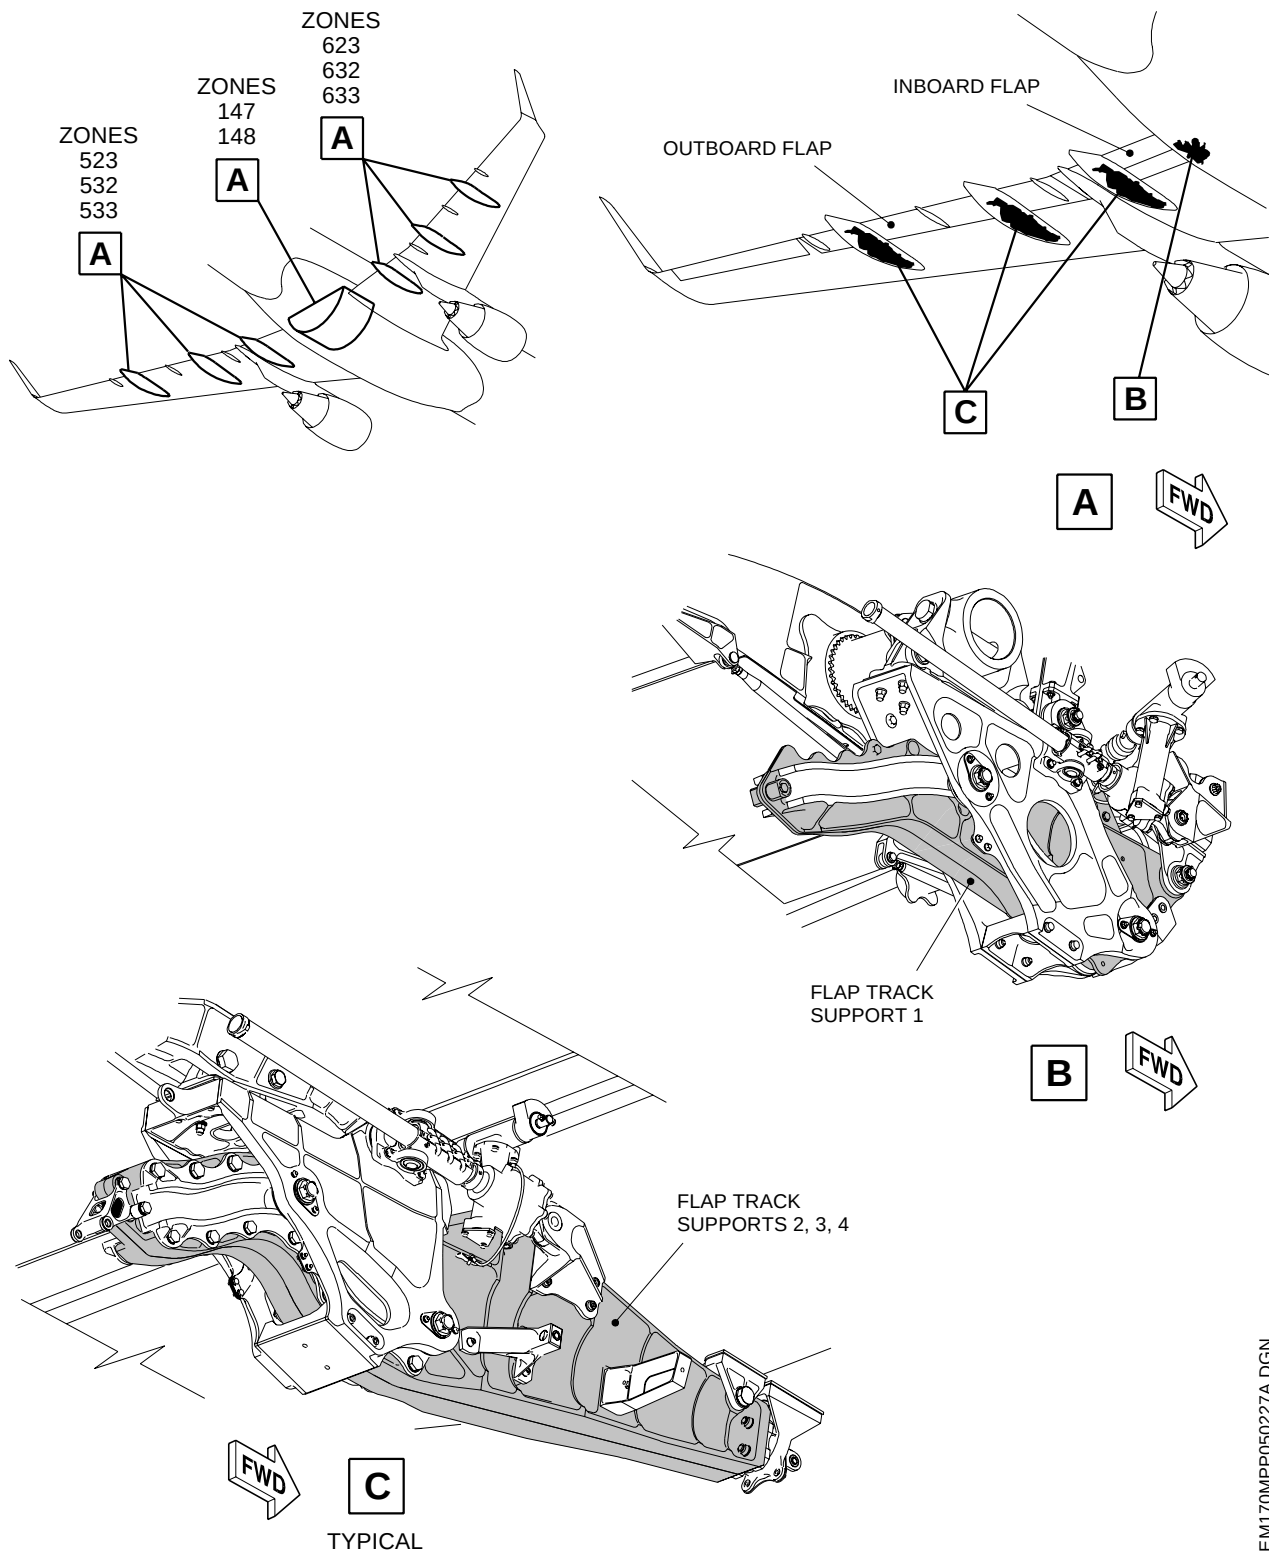

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050227A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Flaps - Main and Aft Carriages

Figure 606 - Sheet 1

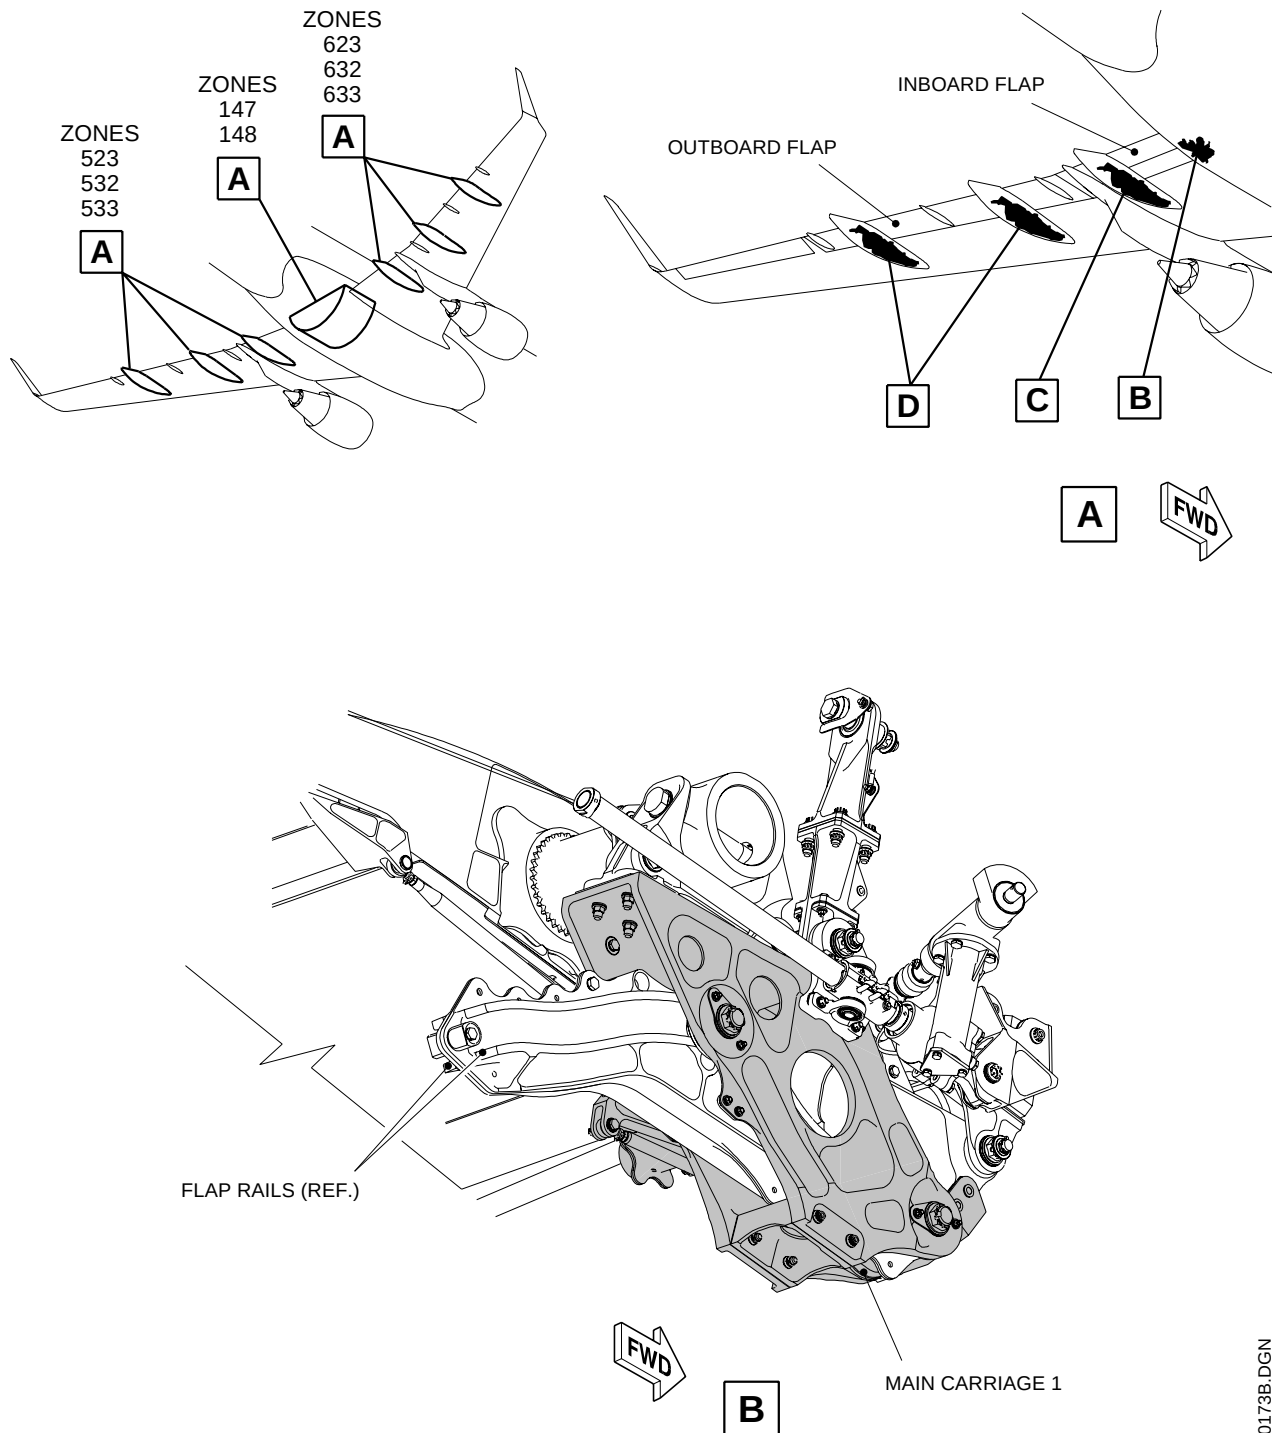

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336



EM170MPP050173B.DGN



EFFECTIVITY: ALL

Flaps - Main and Aft Carriages

Figure 606 - Sheet 2

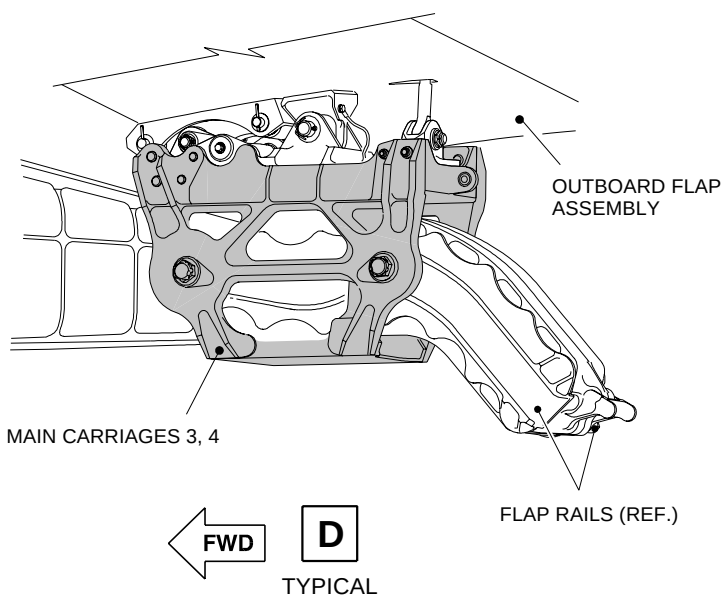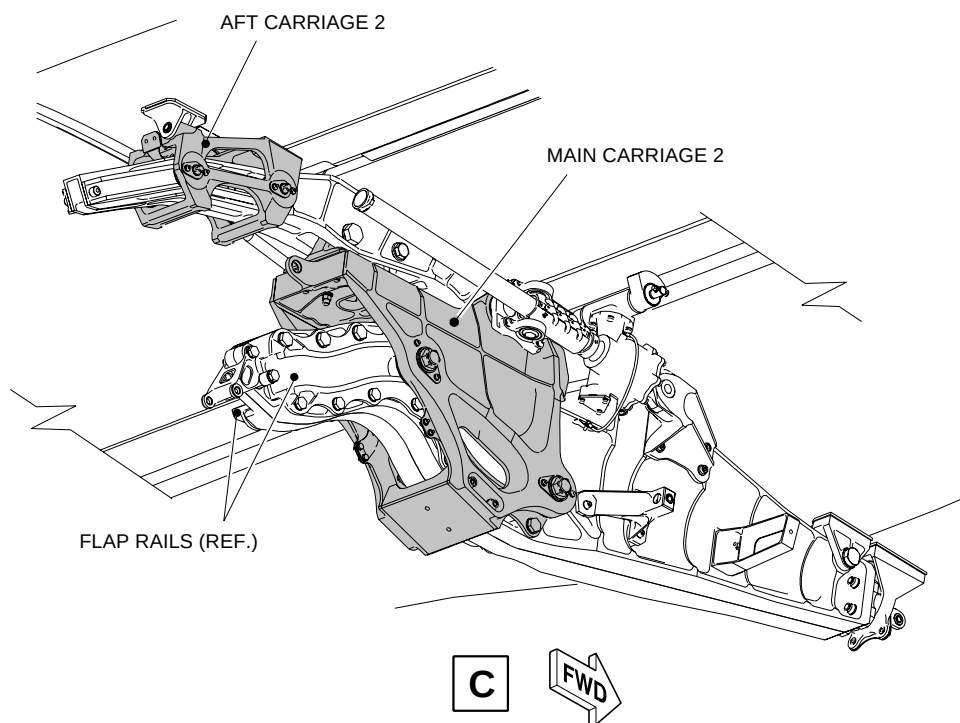


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050223A.DGN



EFFECTIVITY: ALL
Flaps - Roller Studs
Figure 607 - Sheet 1




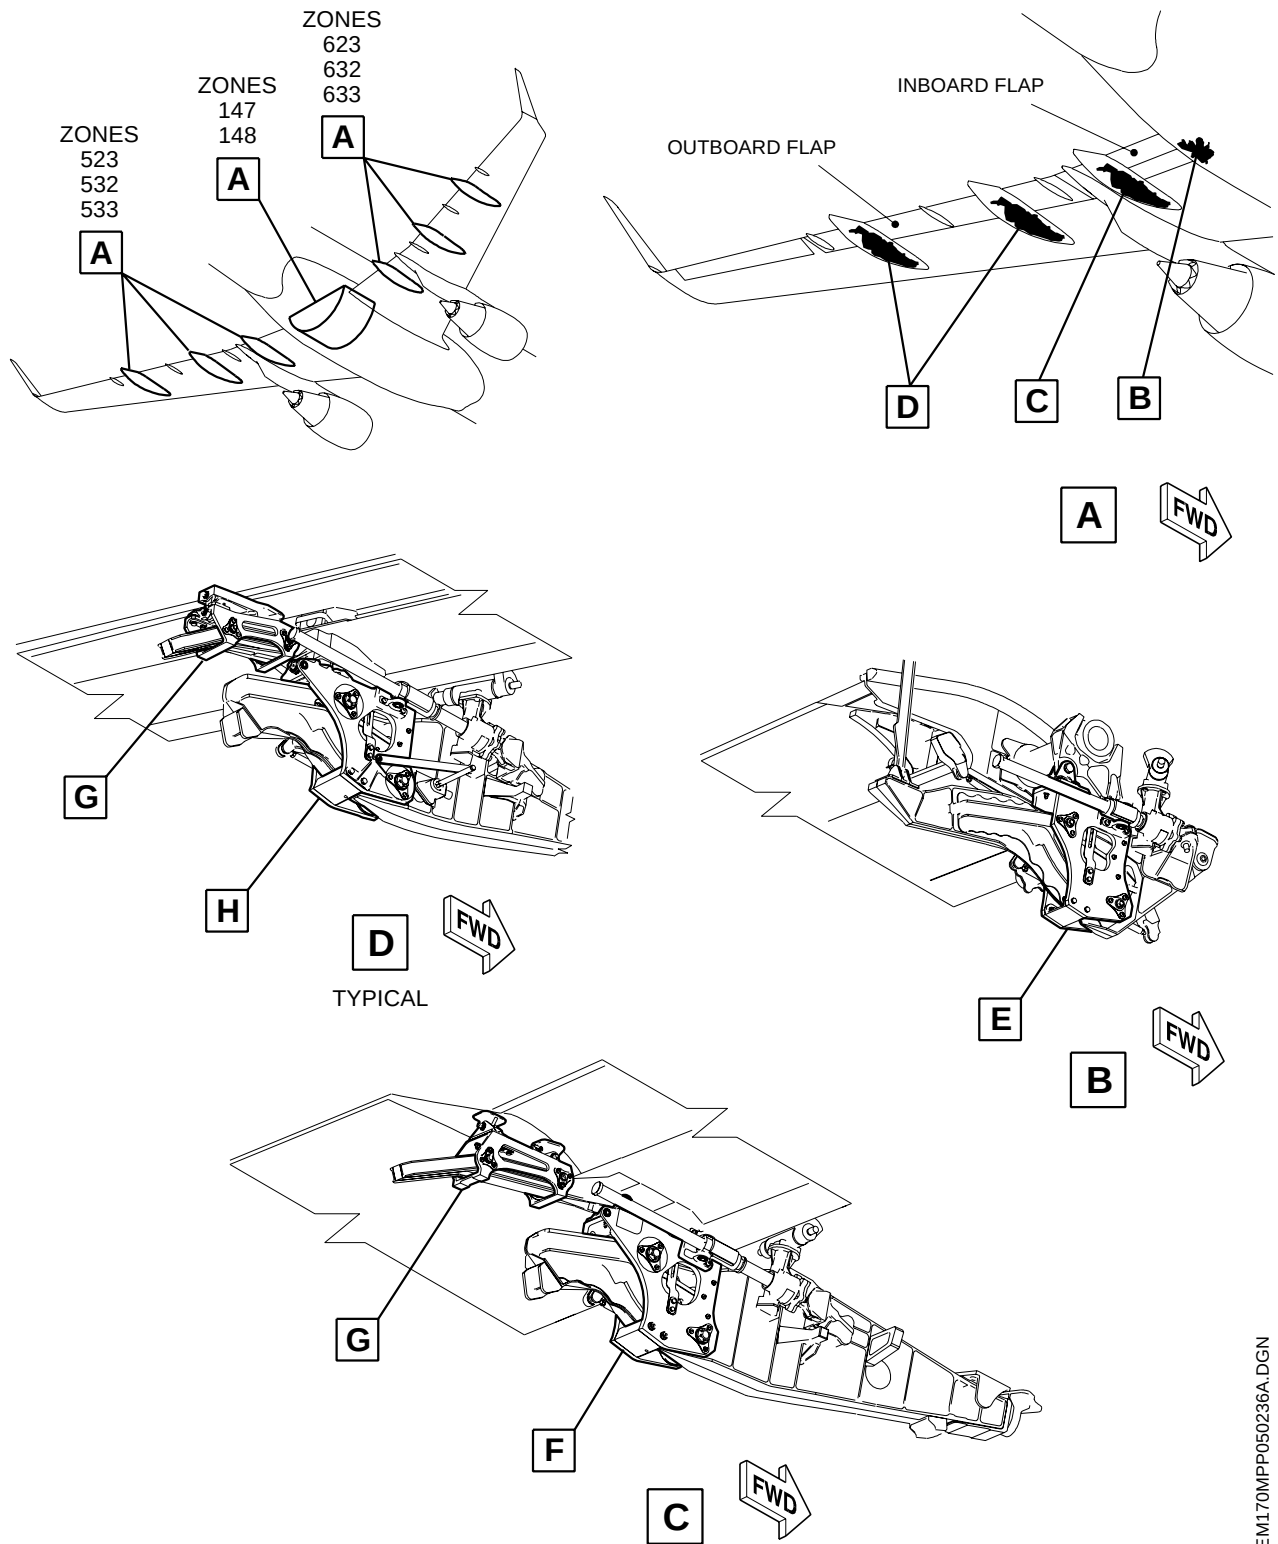


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050236A.DGN



EFFECTIVITY: ALL
Flaps - Roller Studs
Figure 607 - Sheet 2

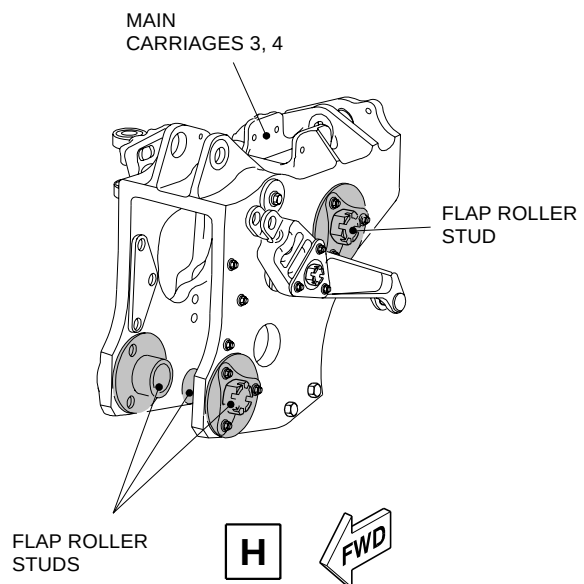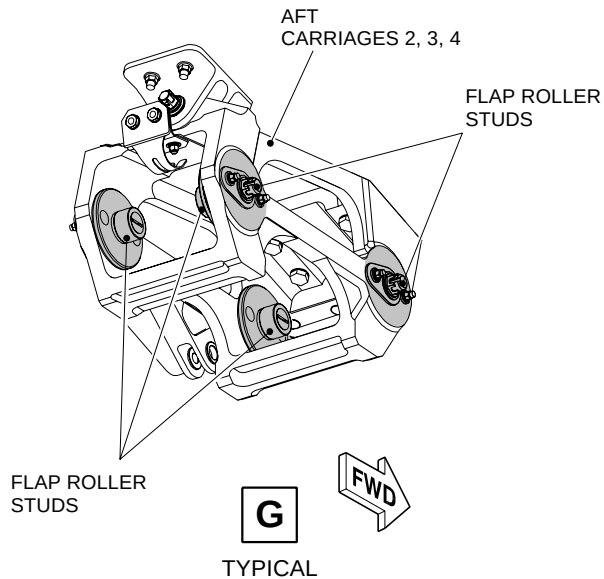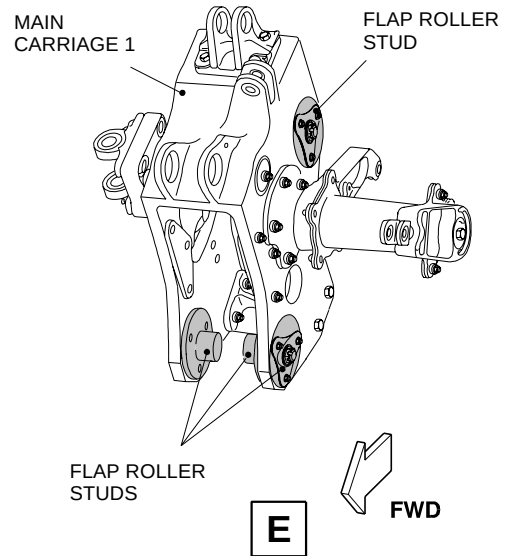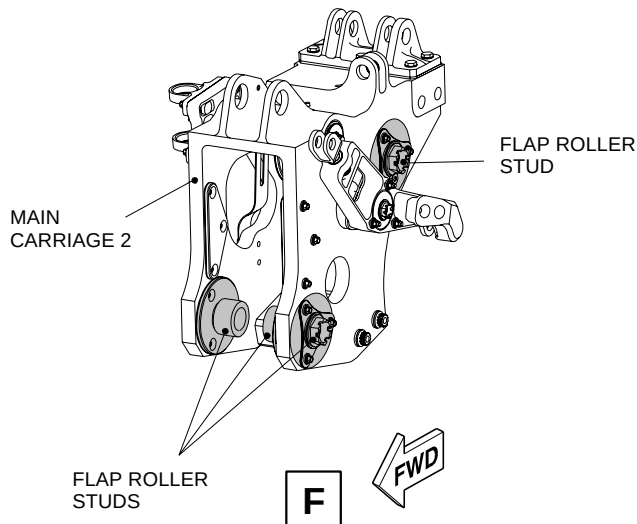

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050237A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Flaps - Rails

Figure 608 - Sheet 1


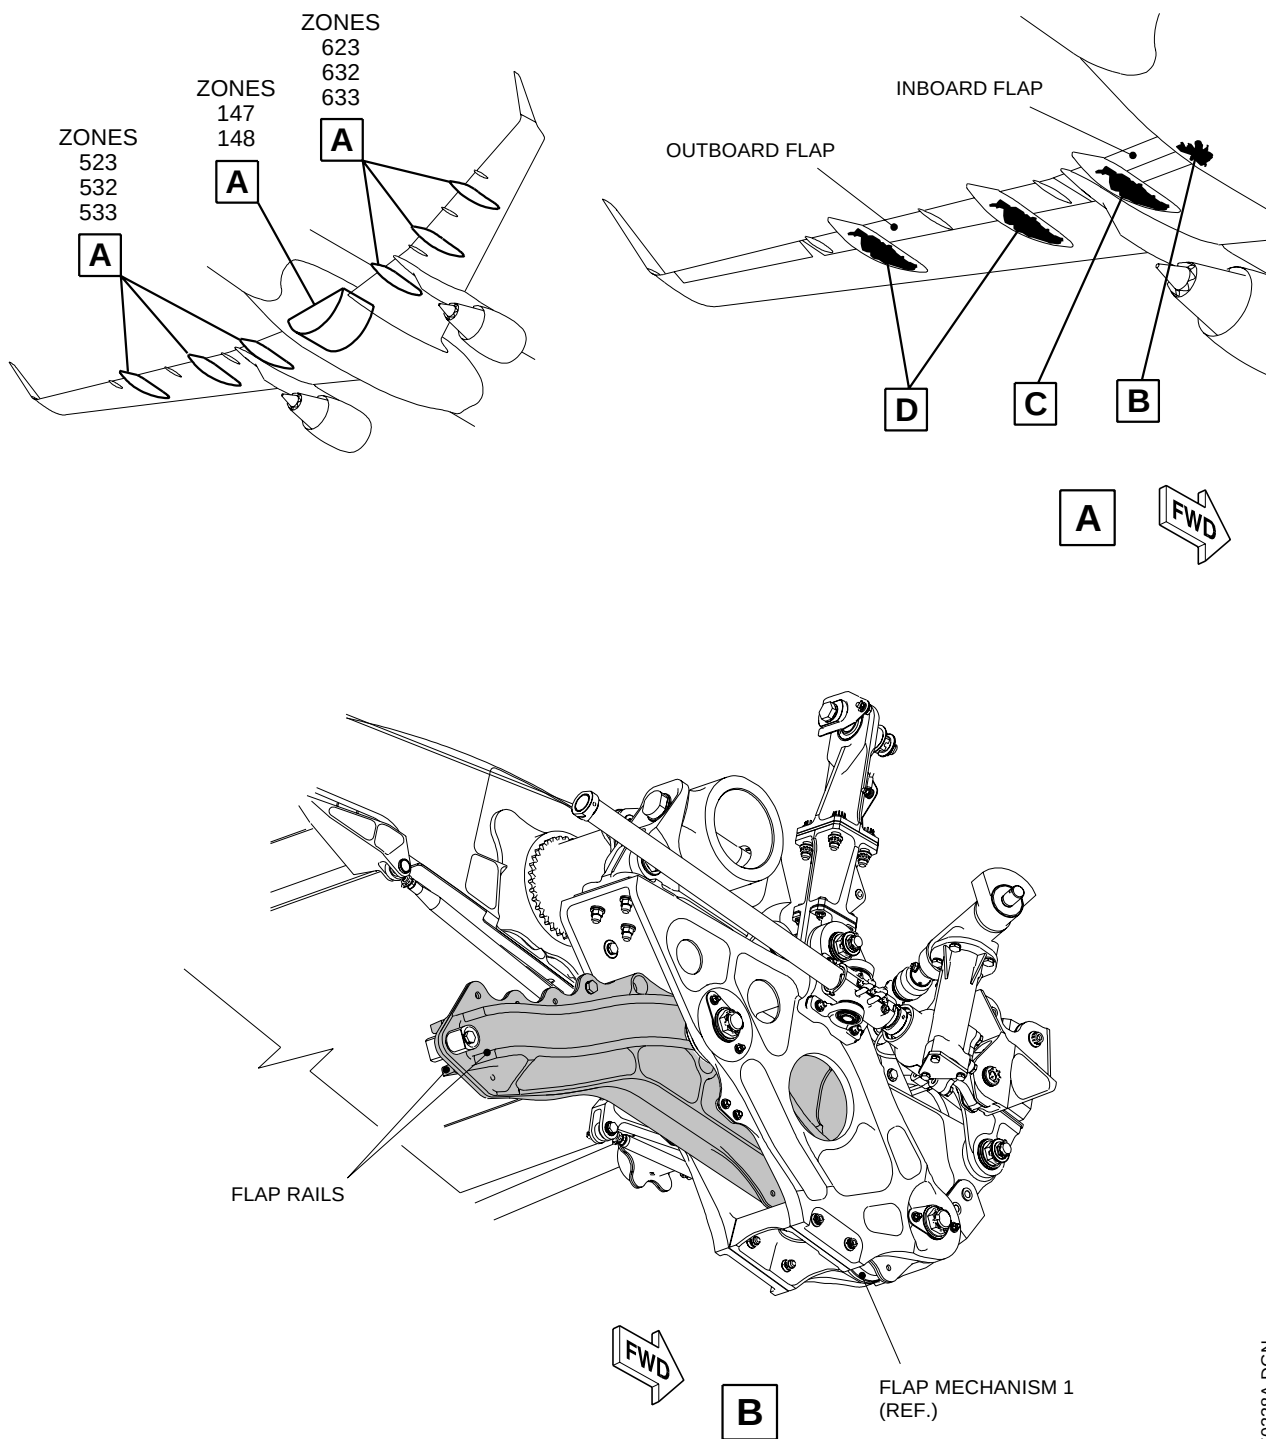


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050238A.DGN



EFFECTIVITY: ALL
Flaps - Rails
Figure 608 - Sheet 2

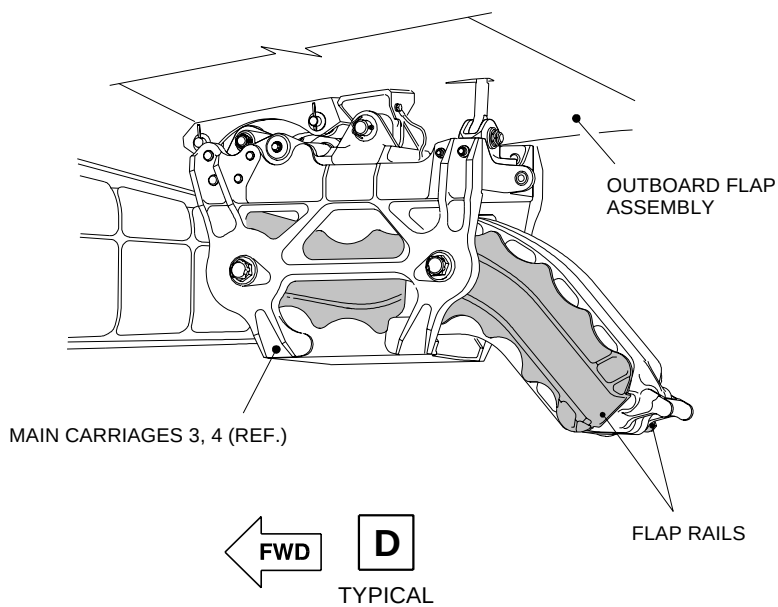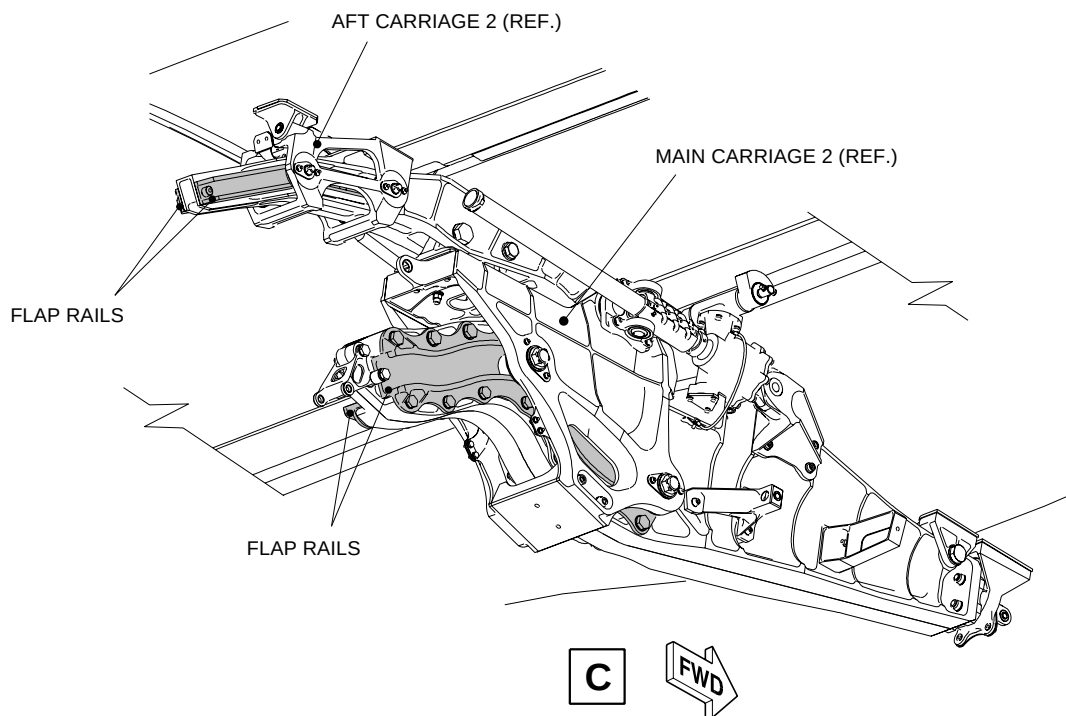

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050239A.DGN



EFFECTIVITY: ALL

Flaps - Skins

Figure 609 - Sheet 1

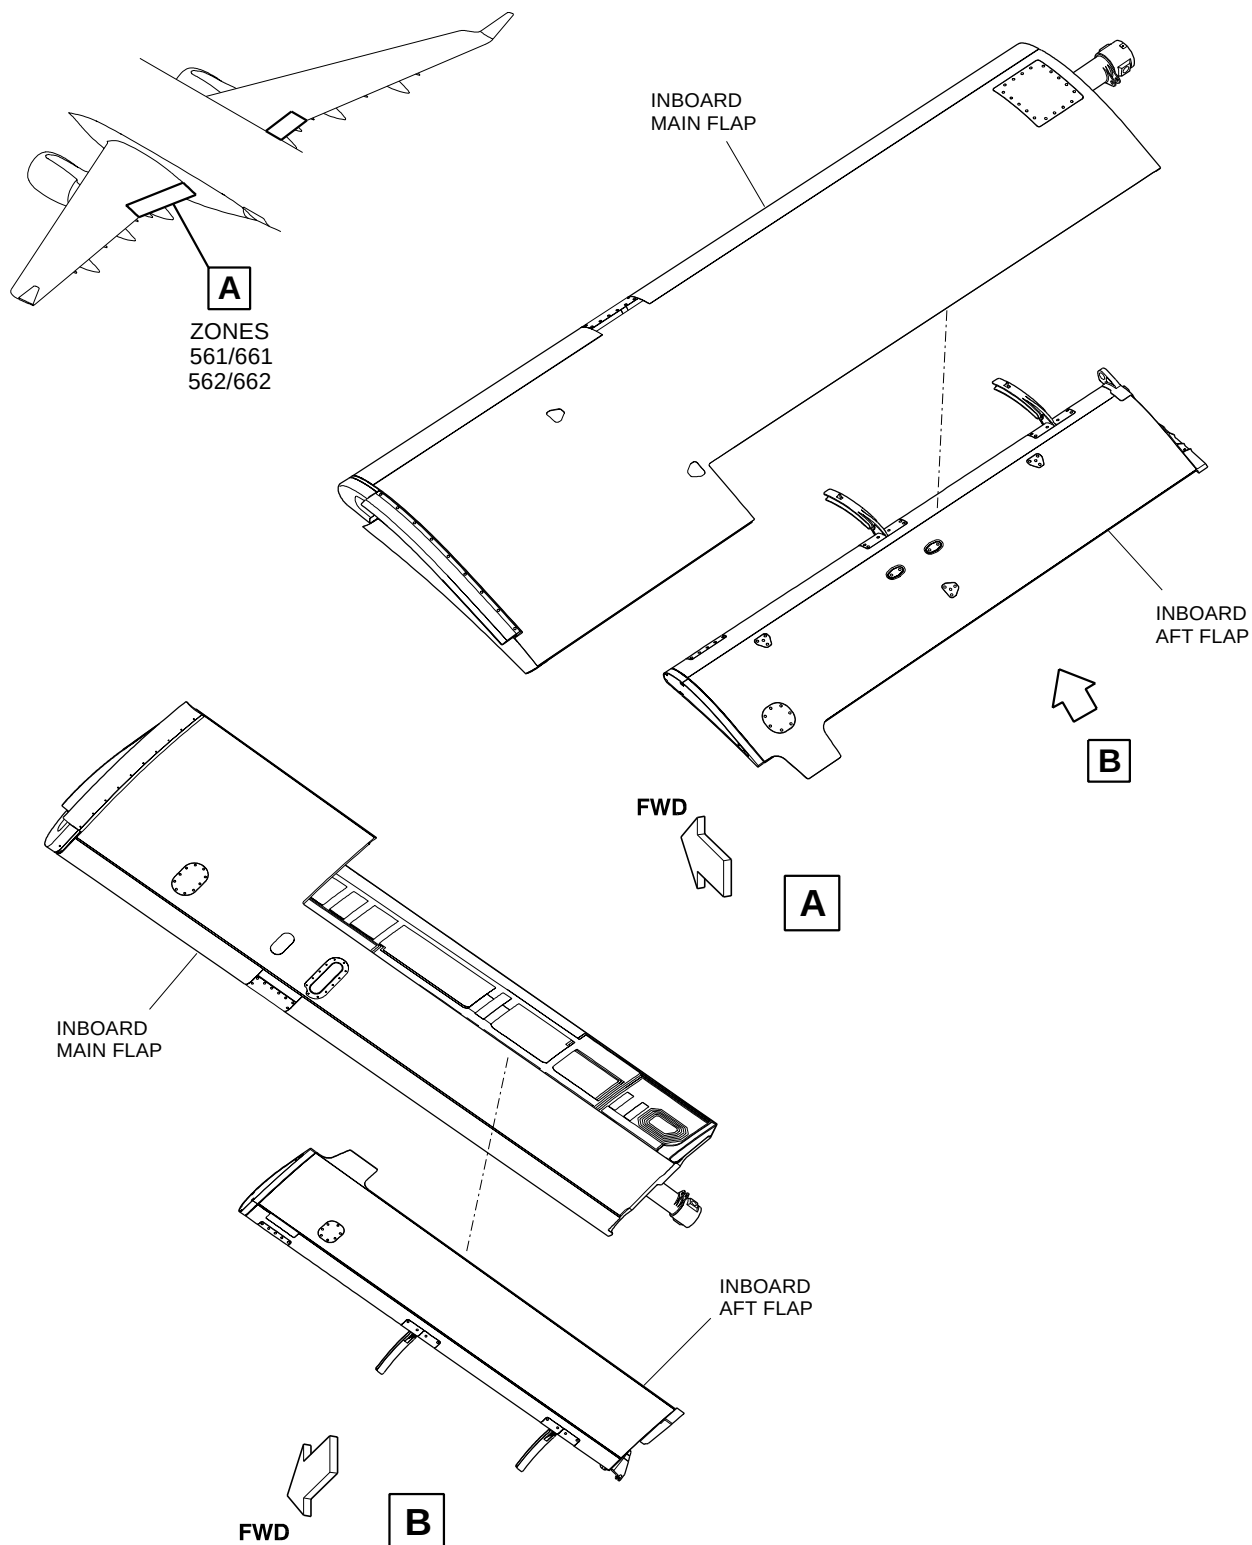

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336


EM170MPP050241A.DGN



EFFECTIVITY: ALL

Flaps - Skins

Figure 609 - Sheet 2

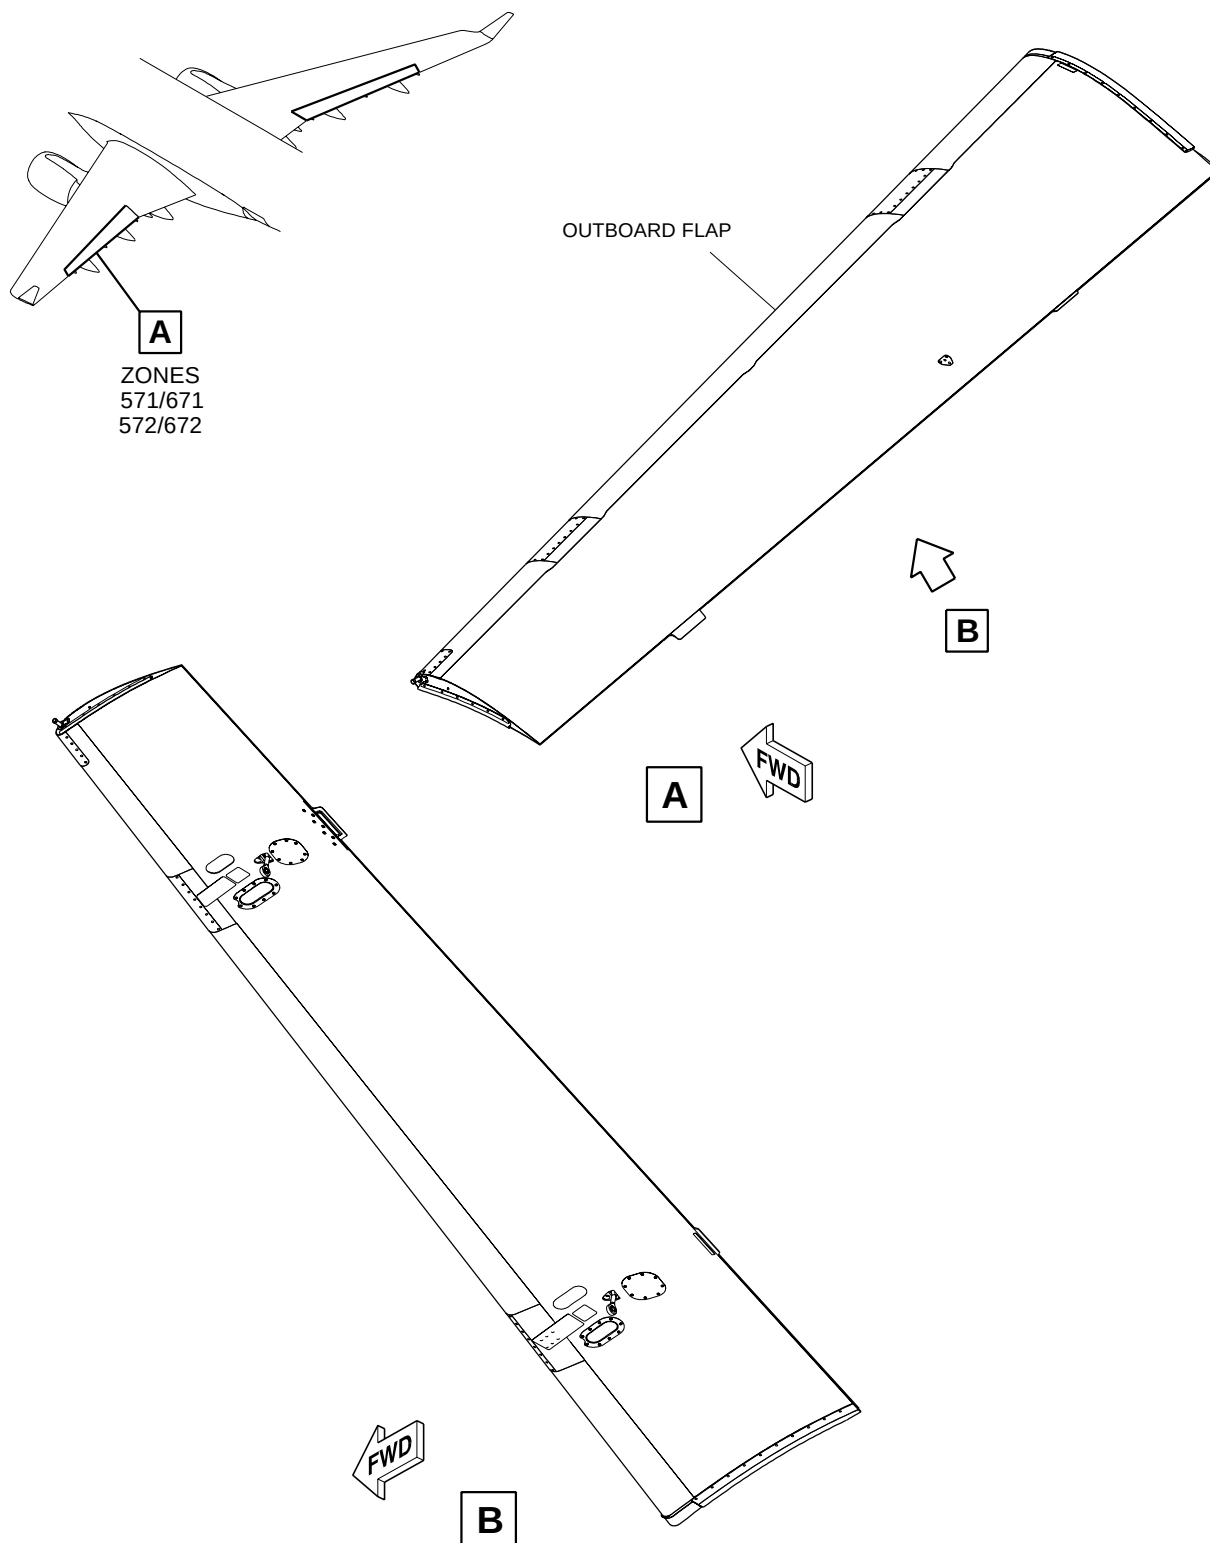

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050242A.DGN



EFFECTIVITY: ALL

Flaps - Track Support Fittings

Figure 610 - Sheet 1

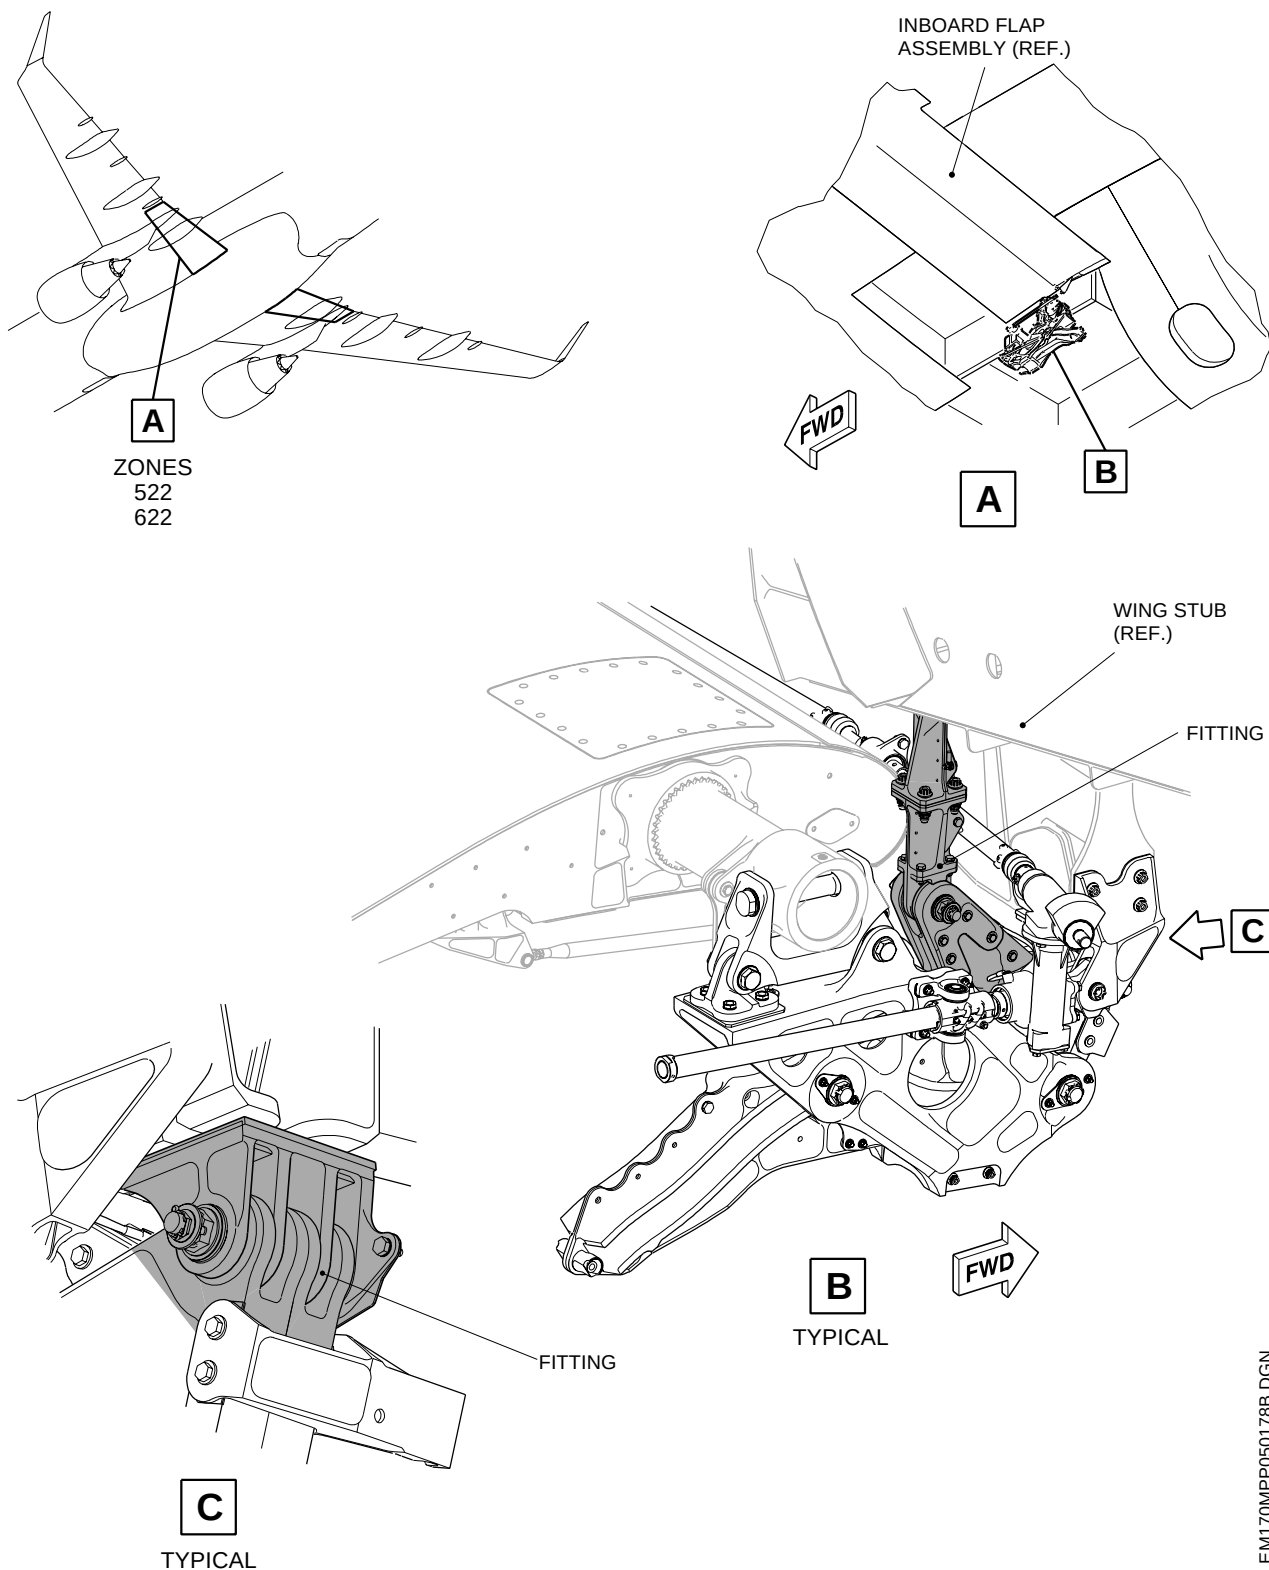

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050178B.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Flaps - Track Support Fittings

Figure 610 - Sheet 2

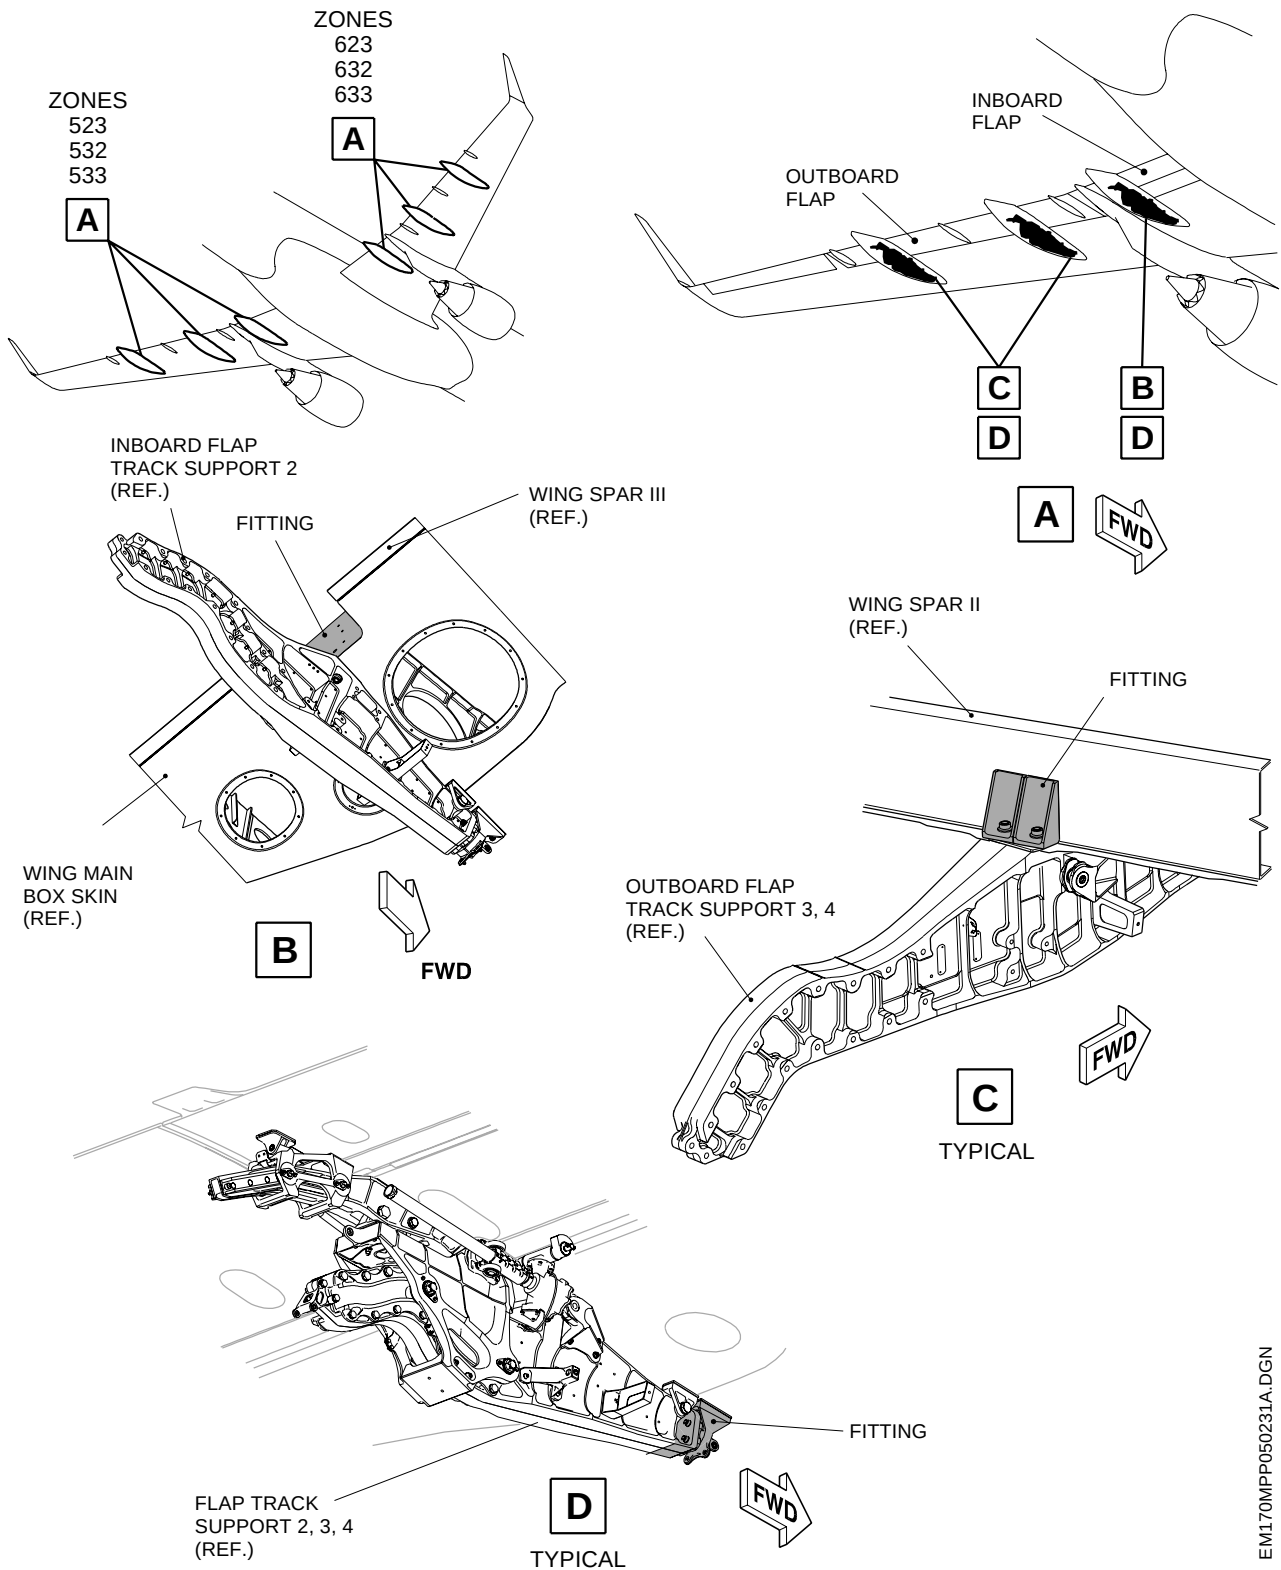

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050231A.DGN



EFFECTIVITY: ALL

Flaps - Torque Tube and Fittings

Figure 611

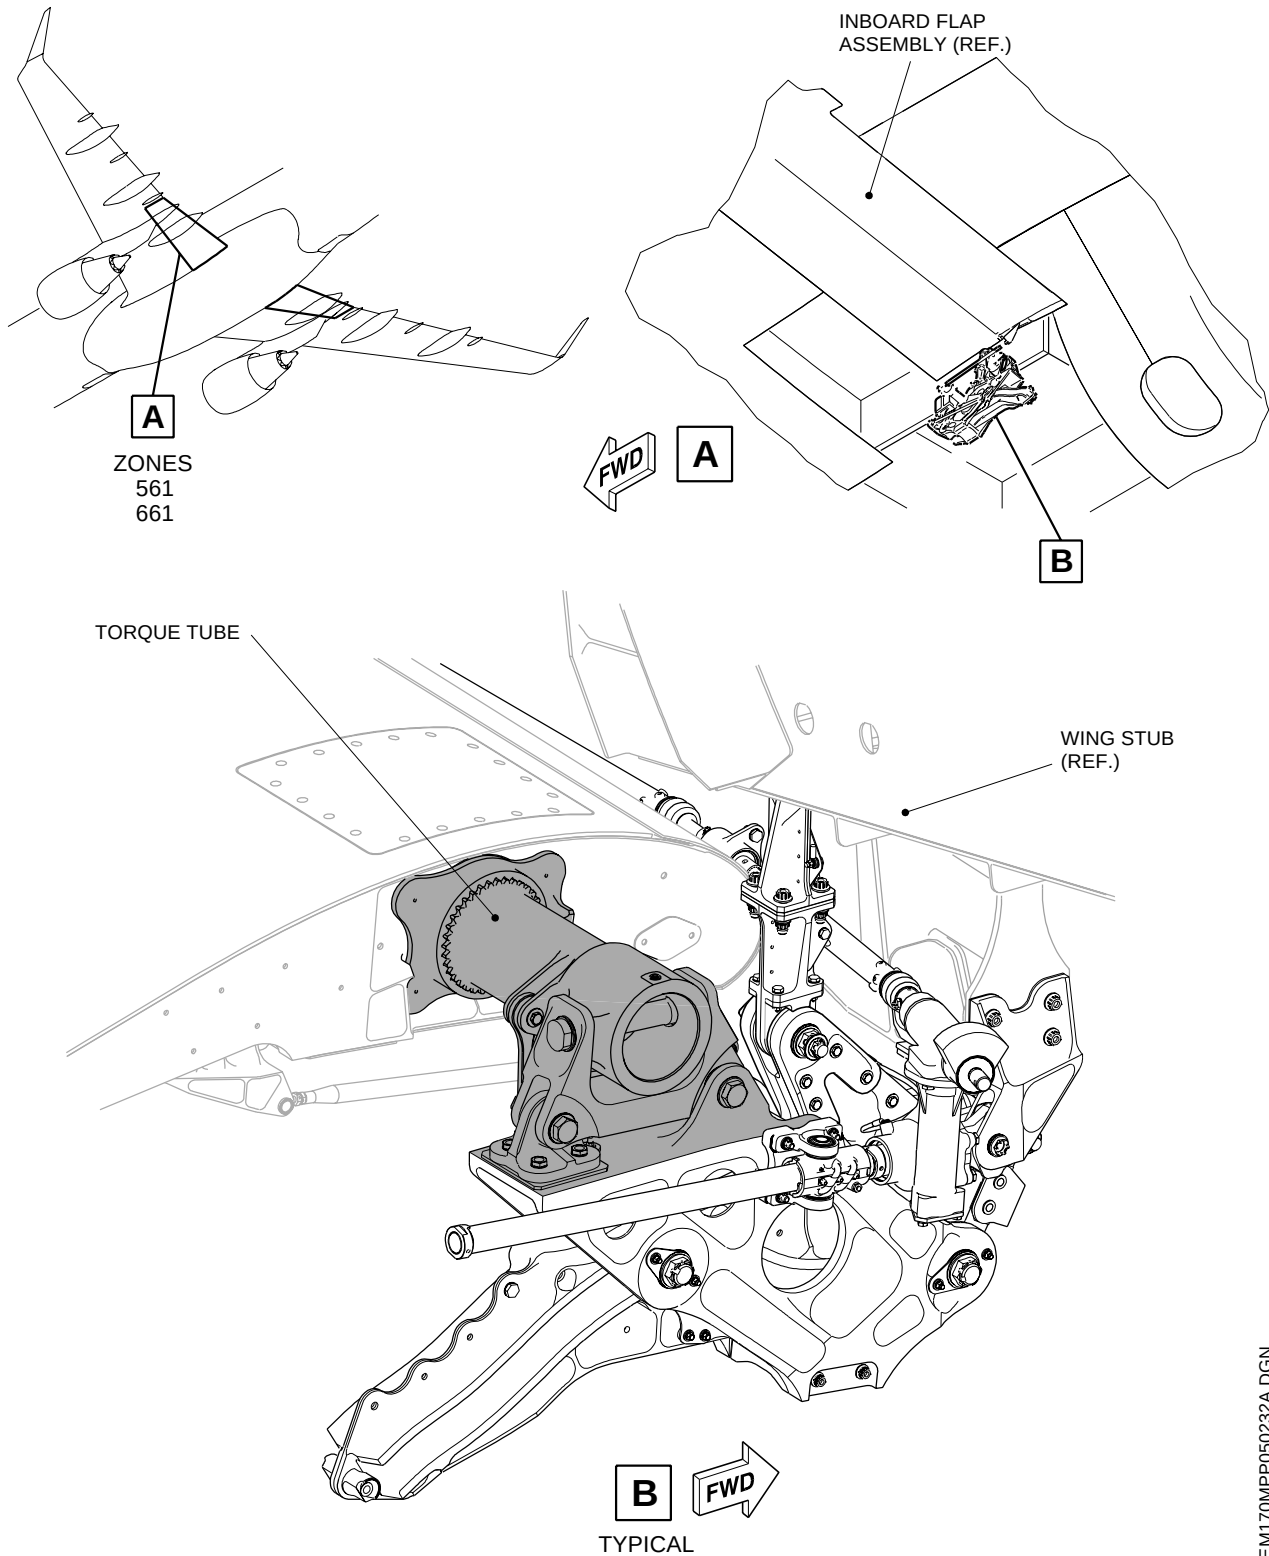

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050232A.DGN



EFFECTIVITY: ALL

Flaps - Internal Structures

Figure 612

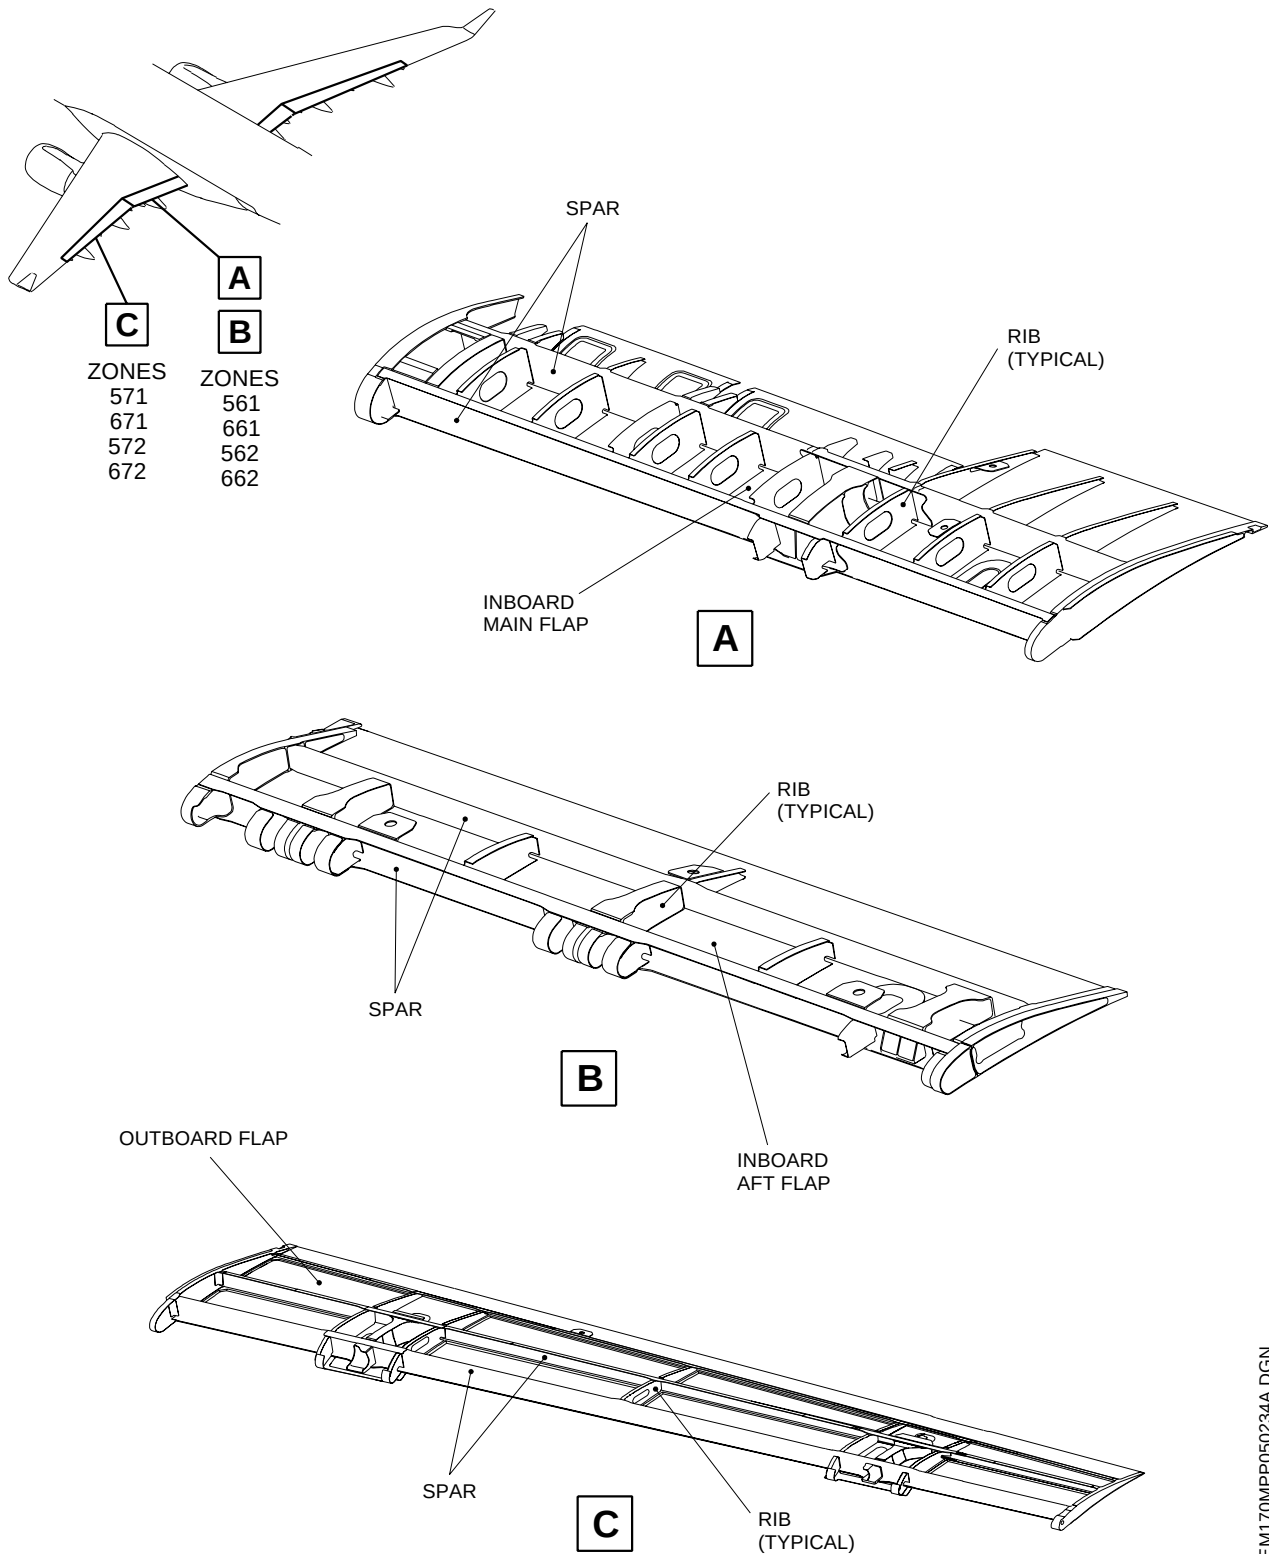

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050234A.DGN



EFFECTIVITY: ALL

Flaps - Main and Aft Carriage Attachments

Figure 613

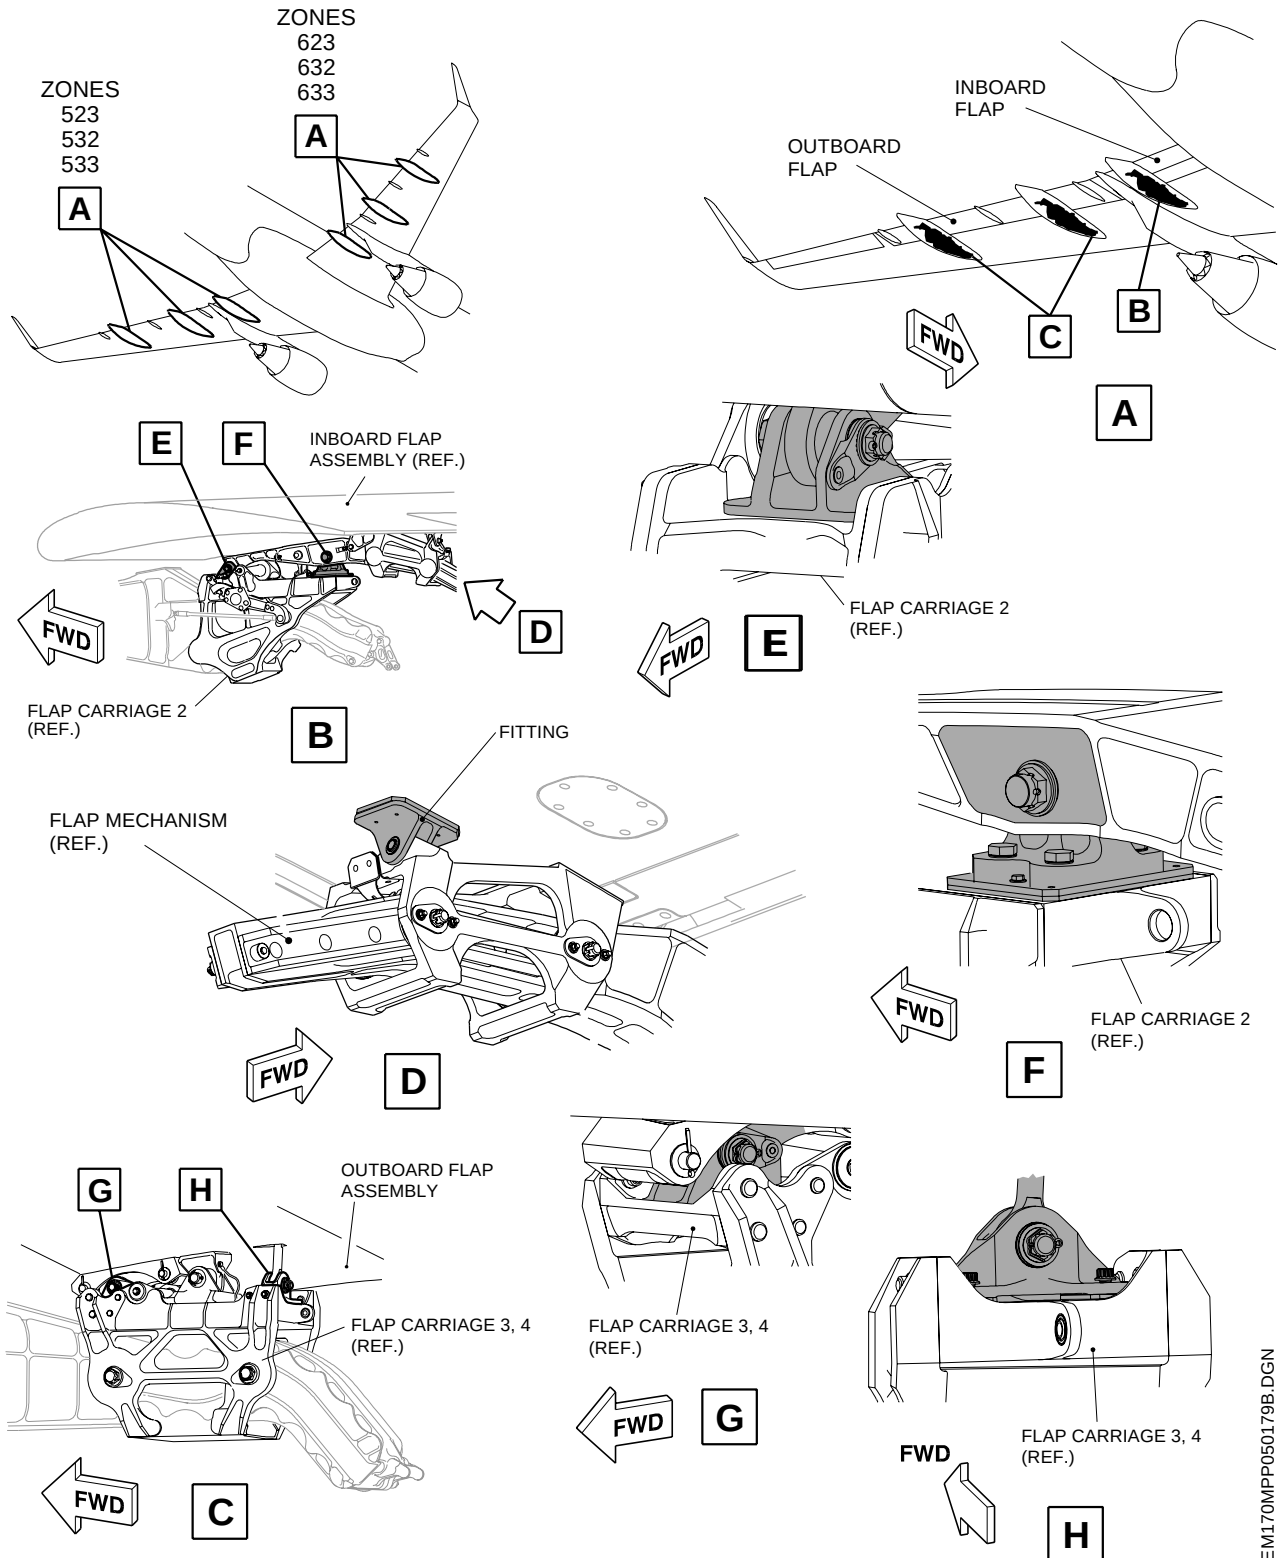

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336


EM170MPP050179B.DGN



EFFECTIVITY: ALL

Flaps - Aft Flap Roller Fitting

Figure 614

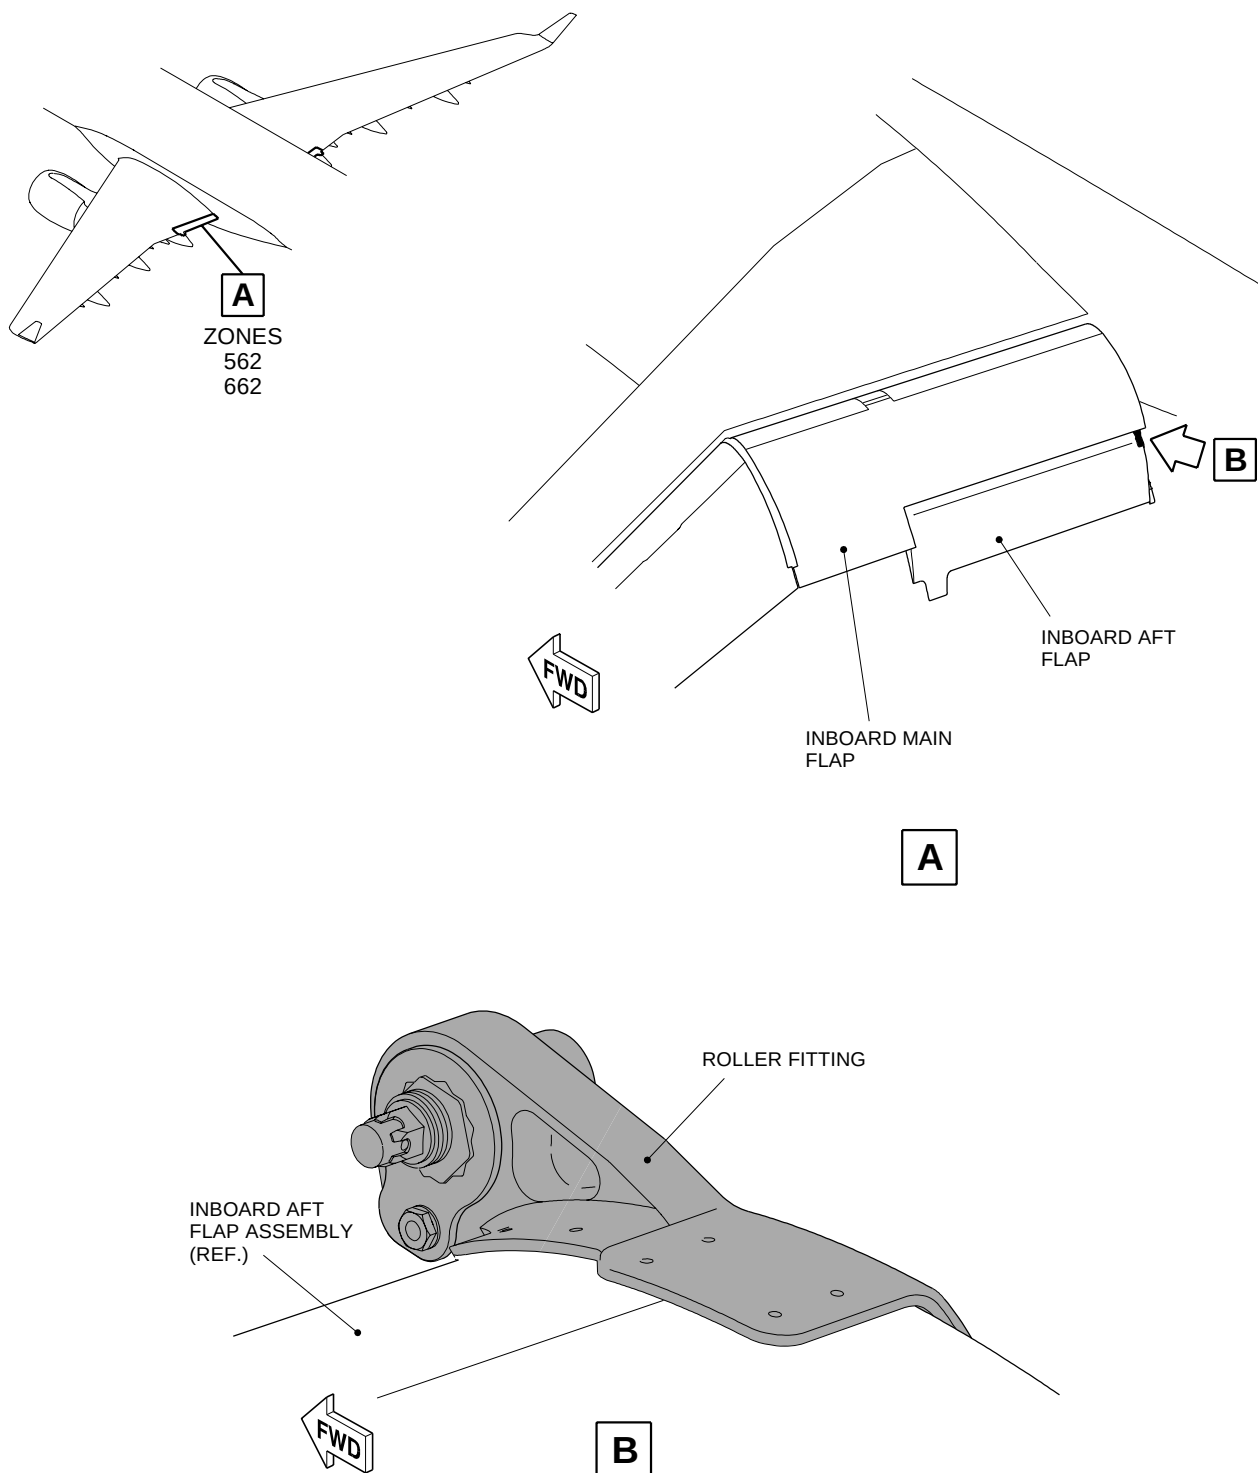

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050235A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Slats - Tracks, Rack Teeth and Pinions

Figure 615

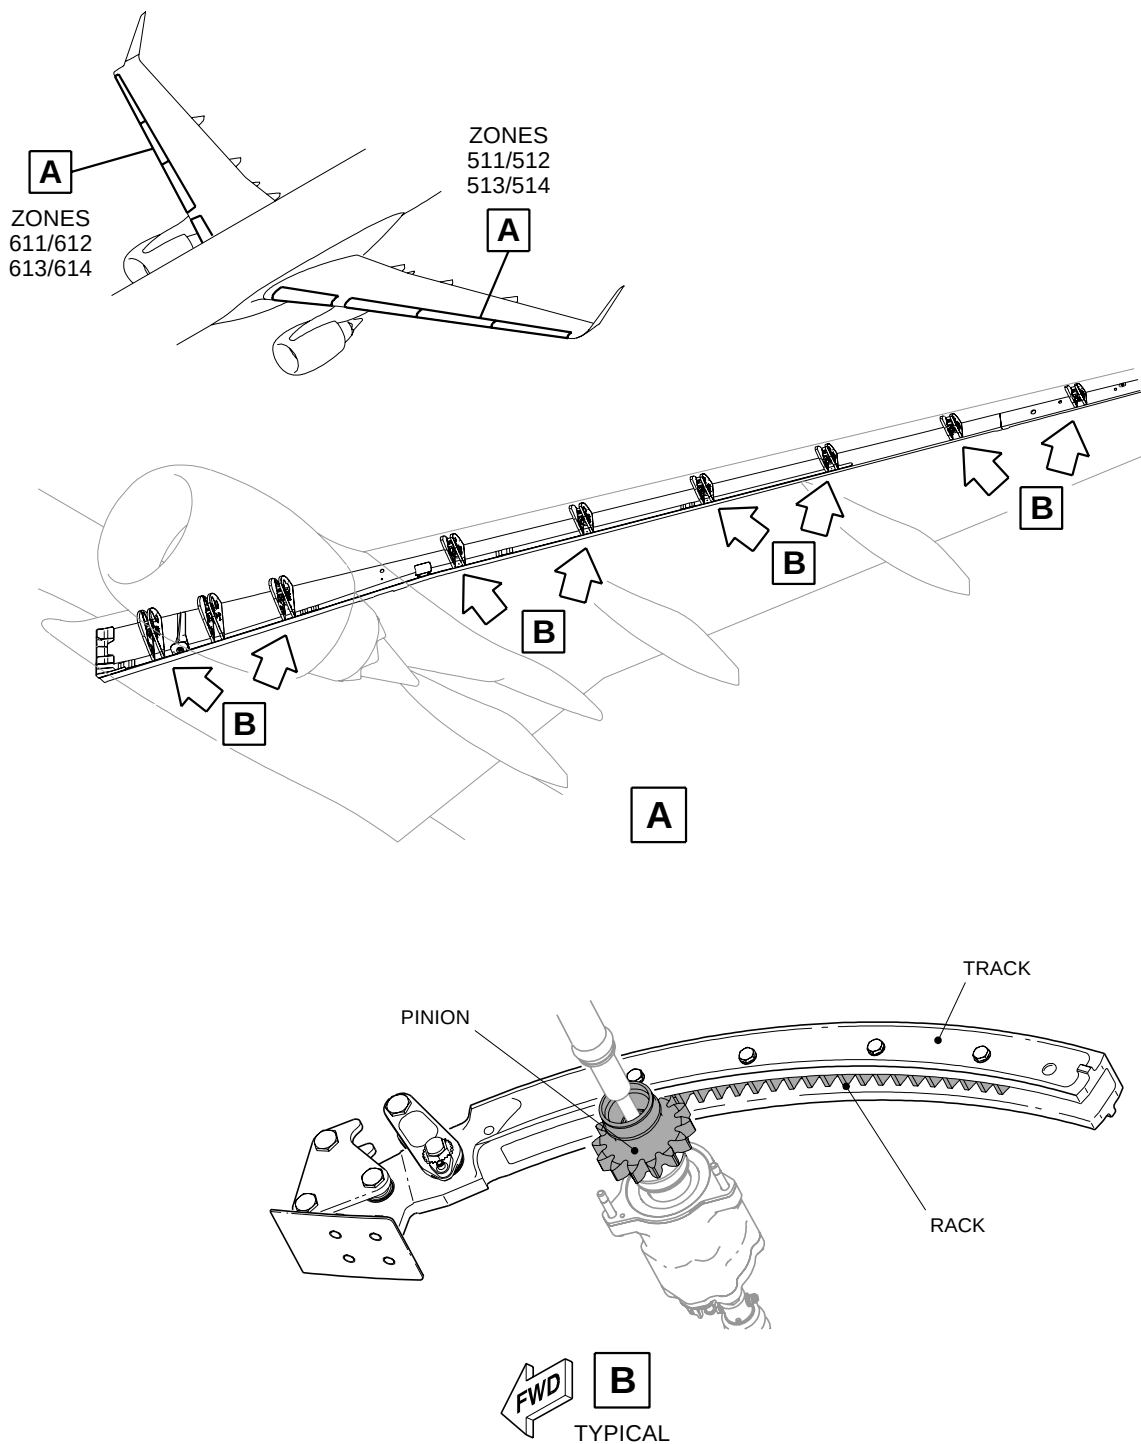


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



EFFECTIVITY: ALL

Slats - Top and Back Skins

Figure 616

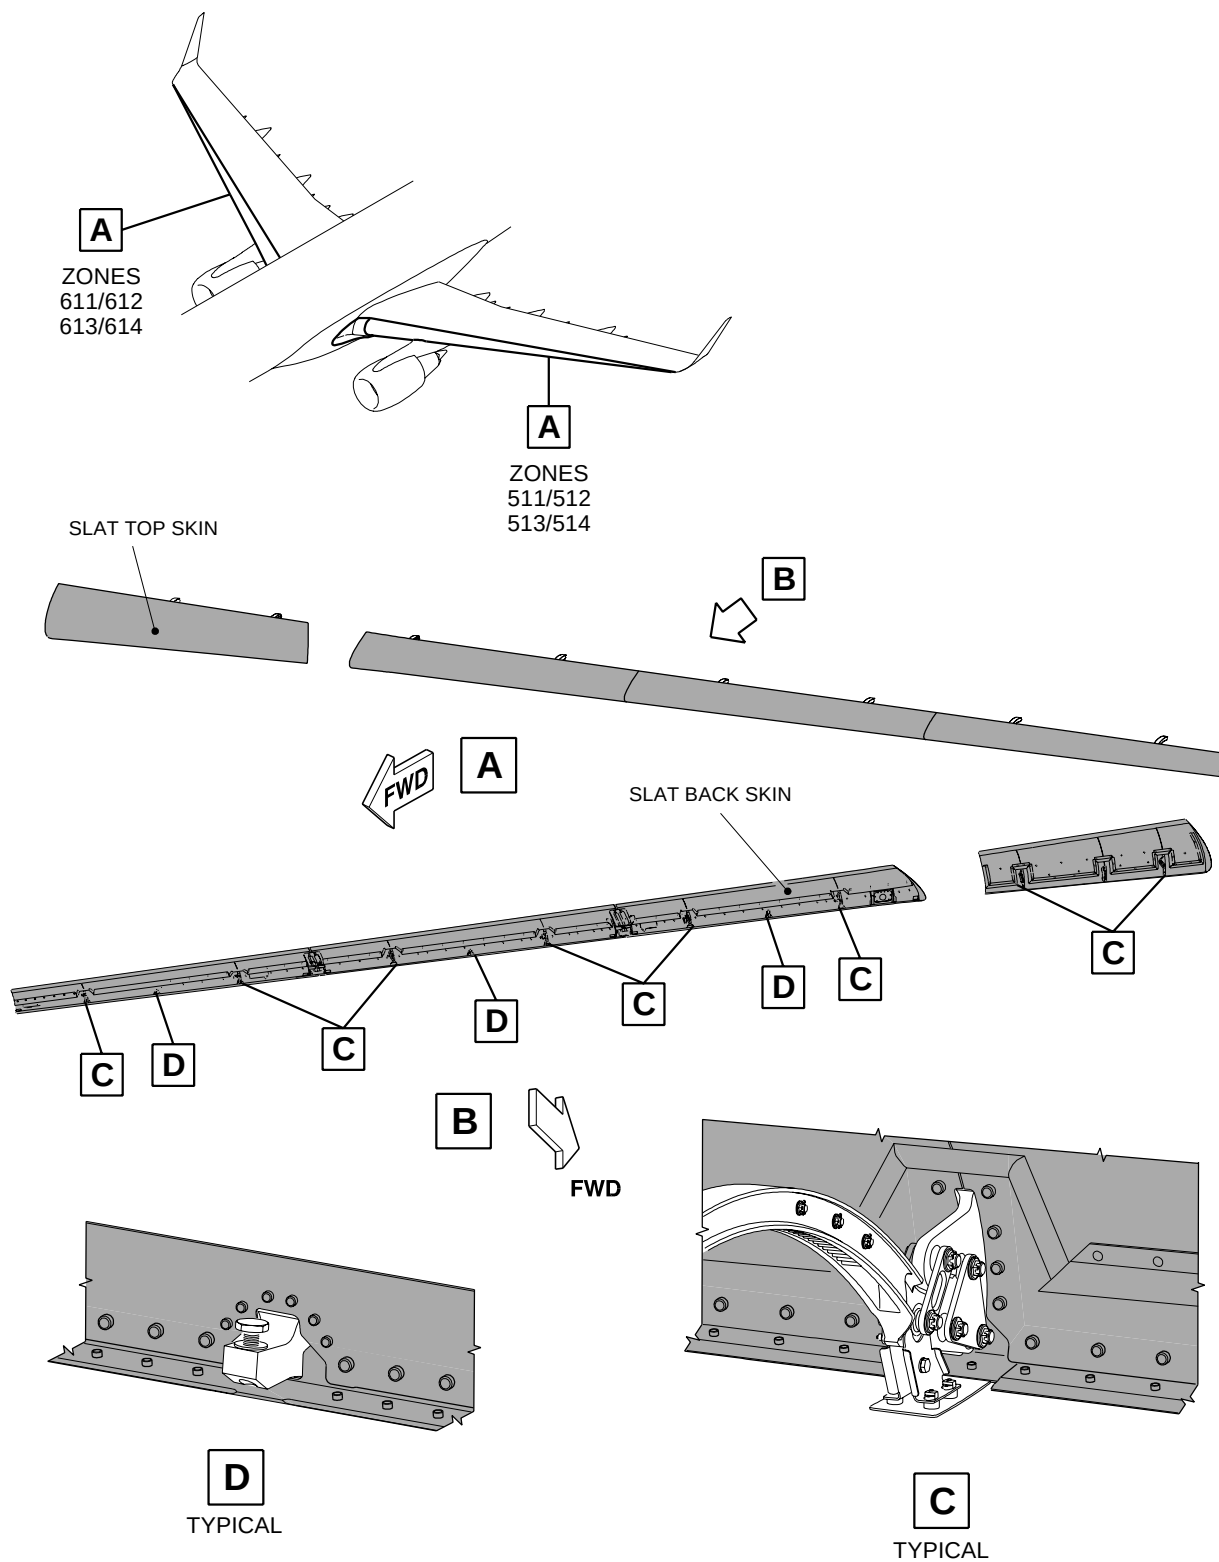

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050159B.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Slats - Tracks Links and Bolts External Inspection

Figure 617

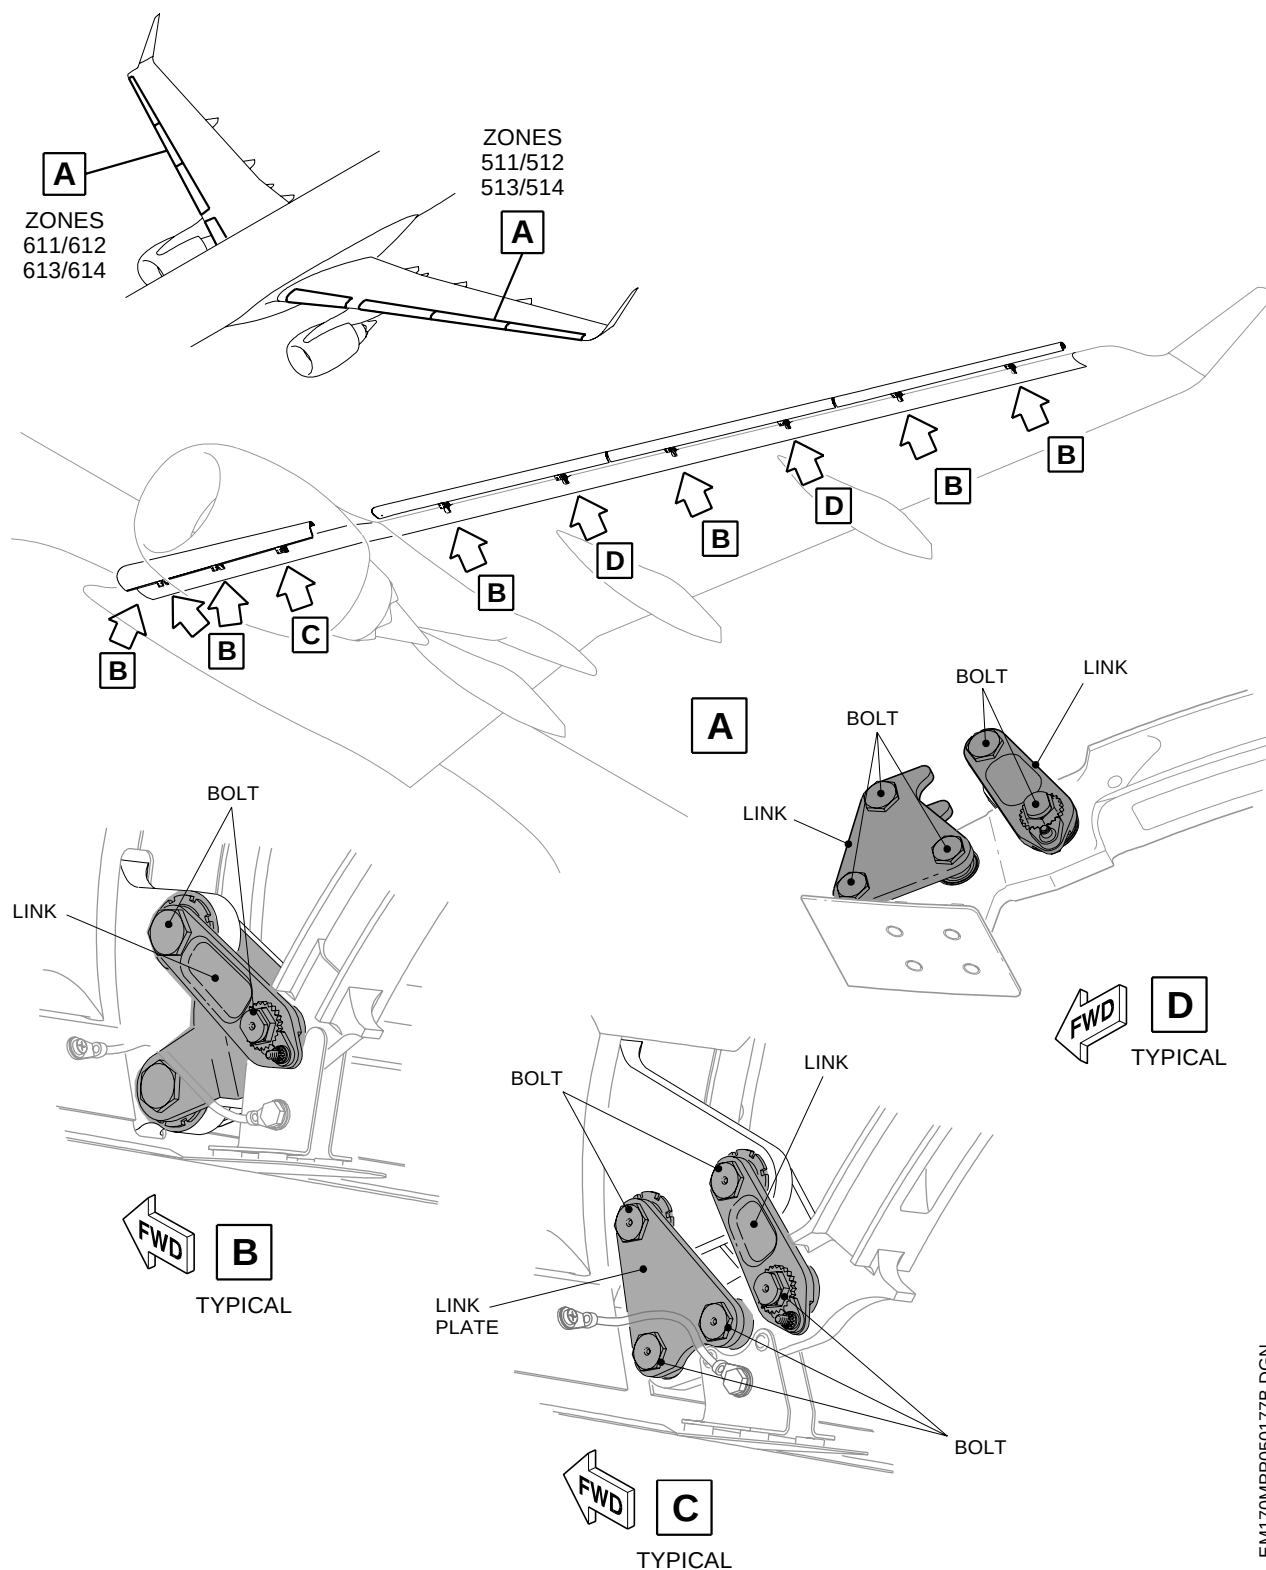

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050177B.DGN



EFFECTIVITY: ALL

Slats - Harness Tube and WAI Backwall Temperature Sensor

Figure 618

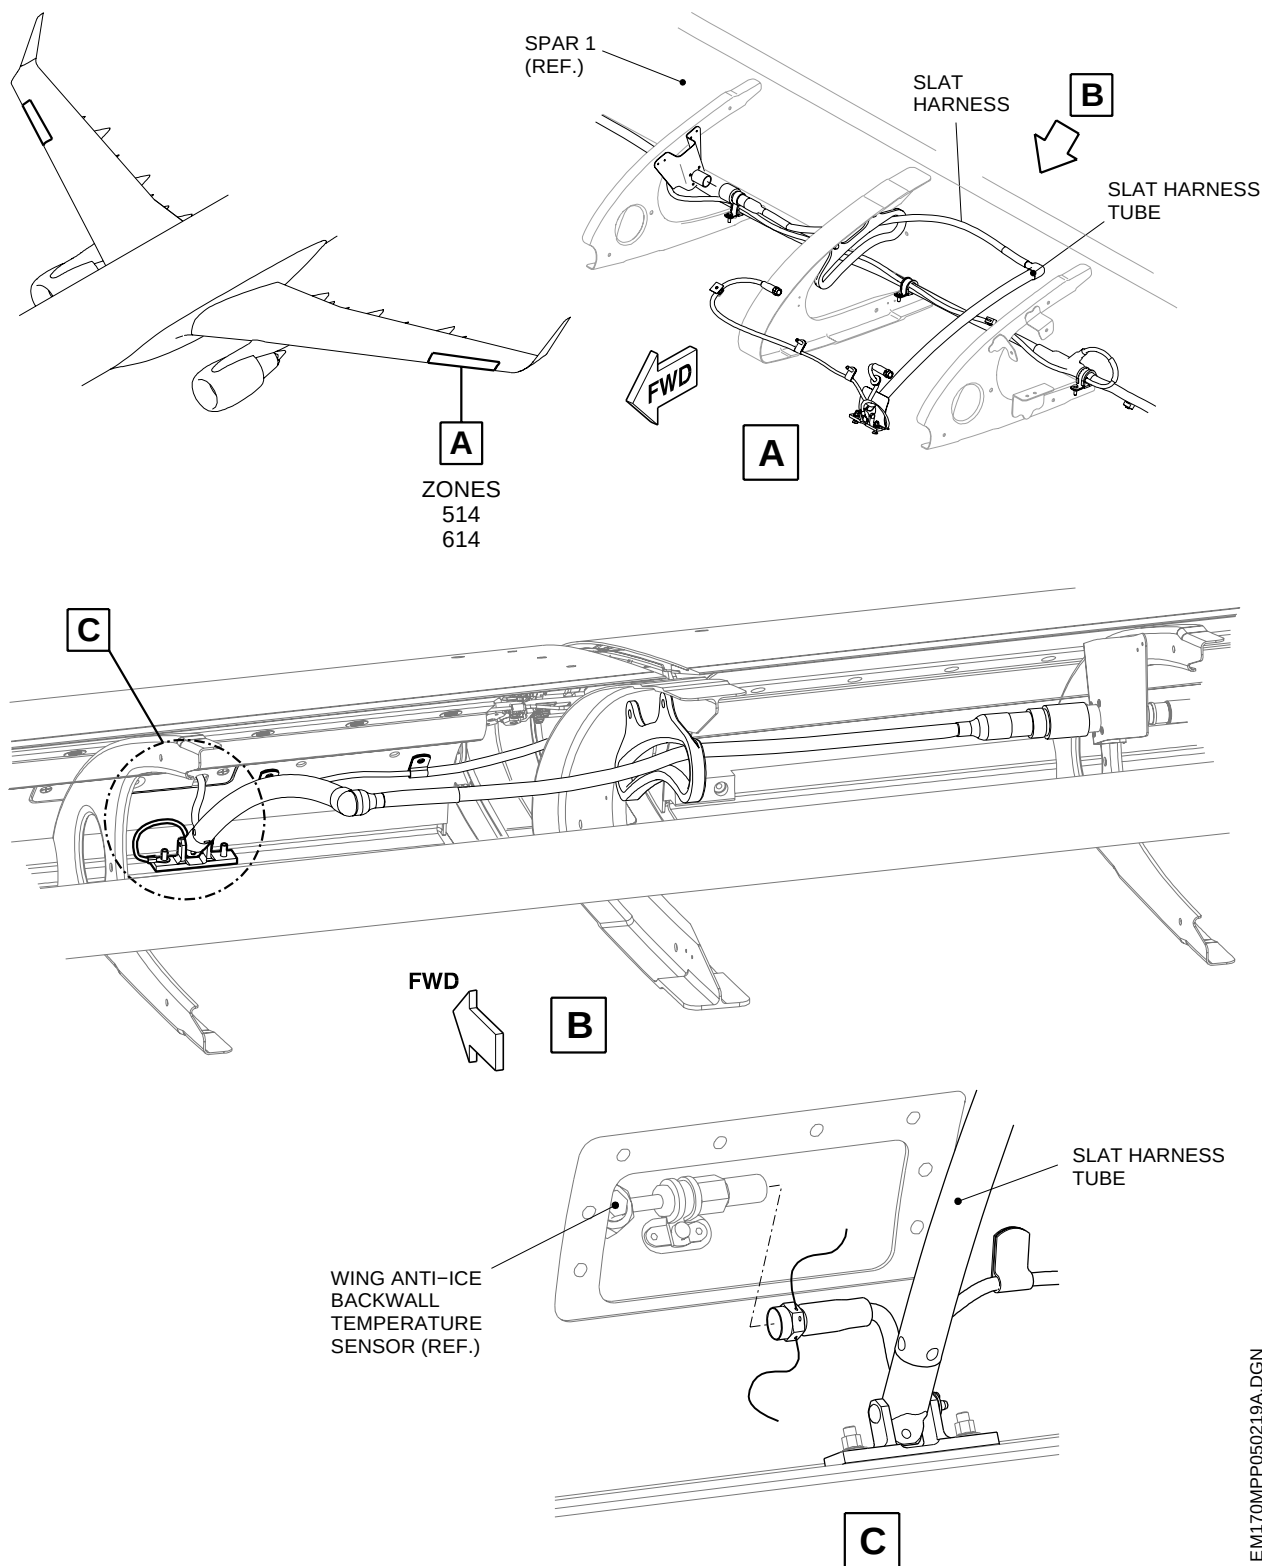

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050219A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Slats - WAI Telescopic Tube

Figure 619

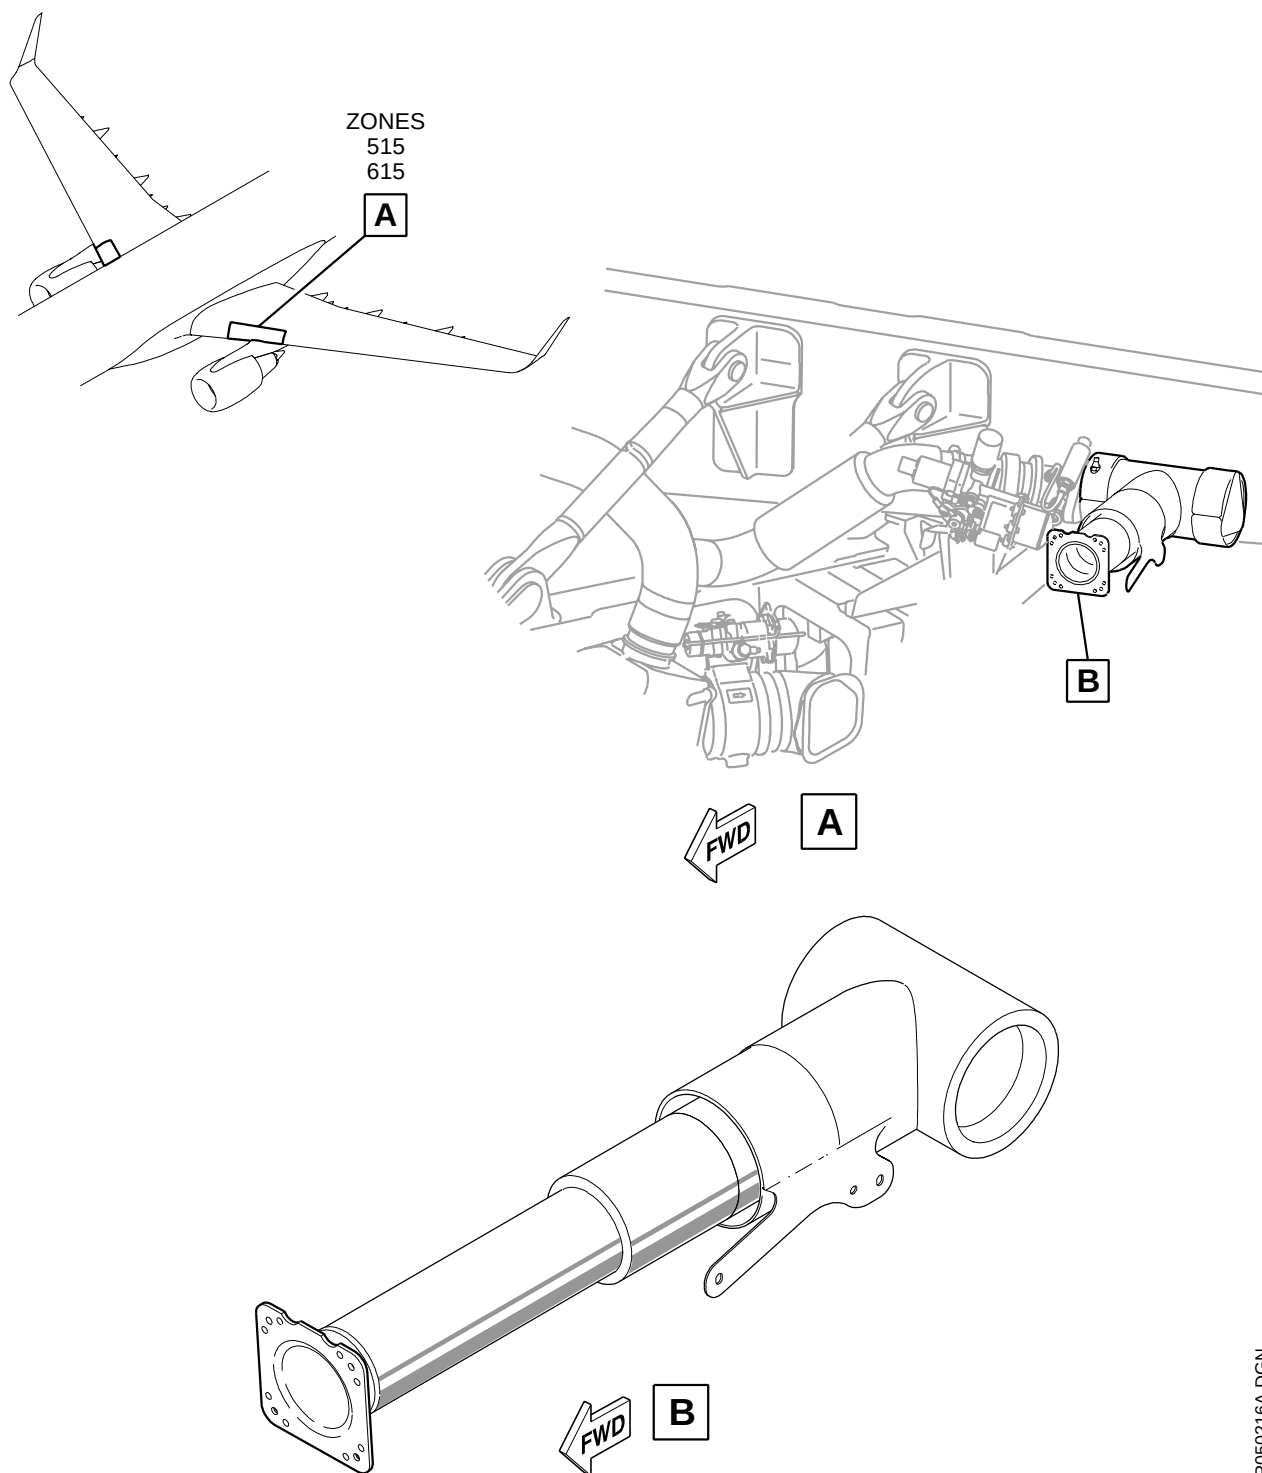

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050216A.DGN


Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL

Slats - Roller Bolts and Studs

Figure 620

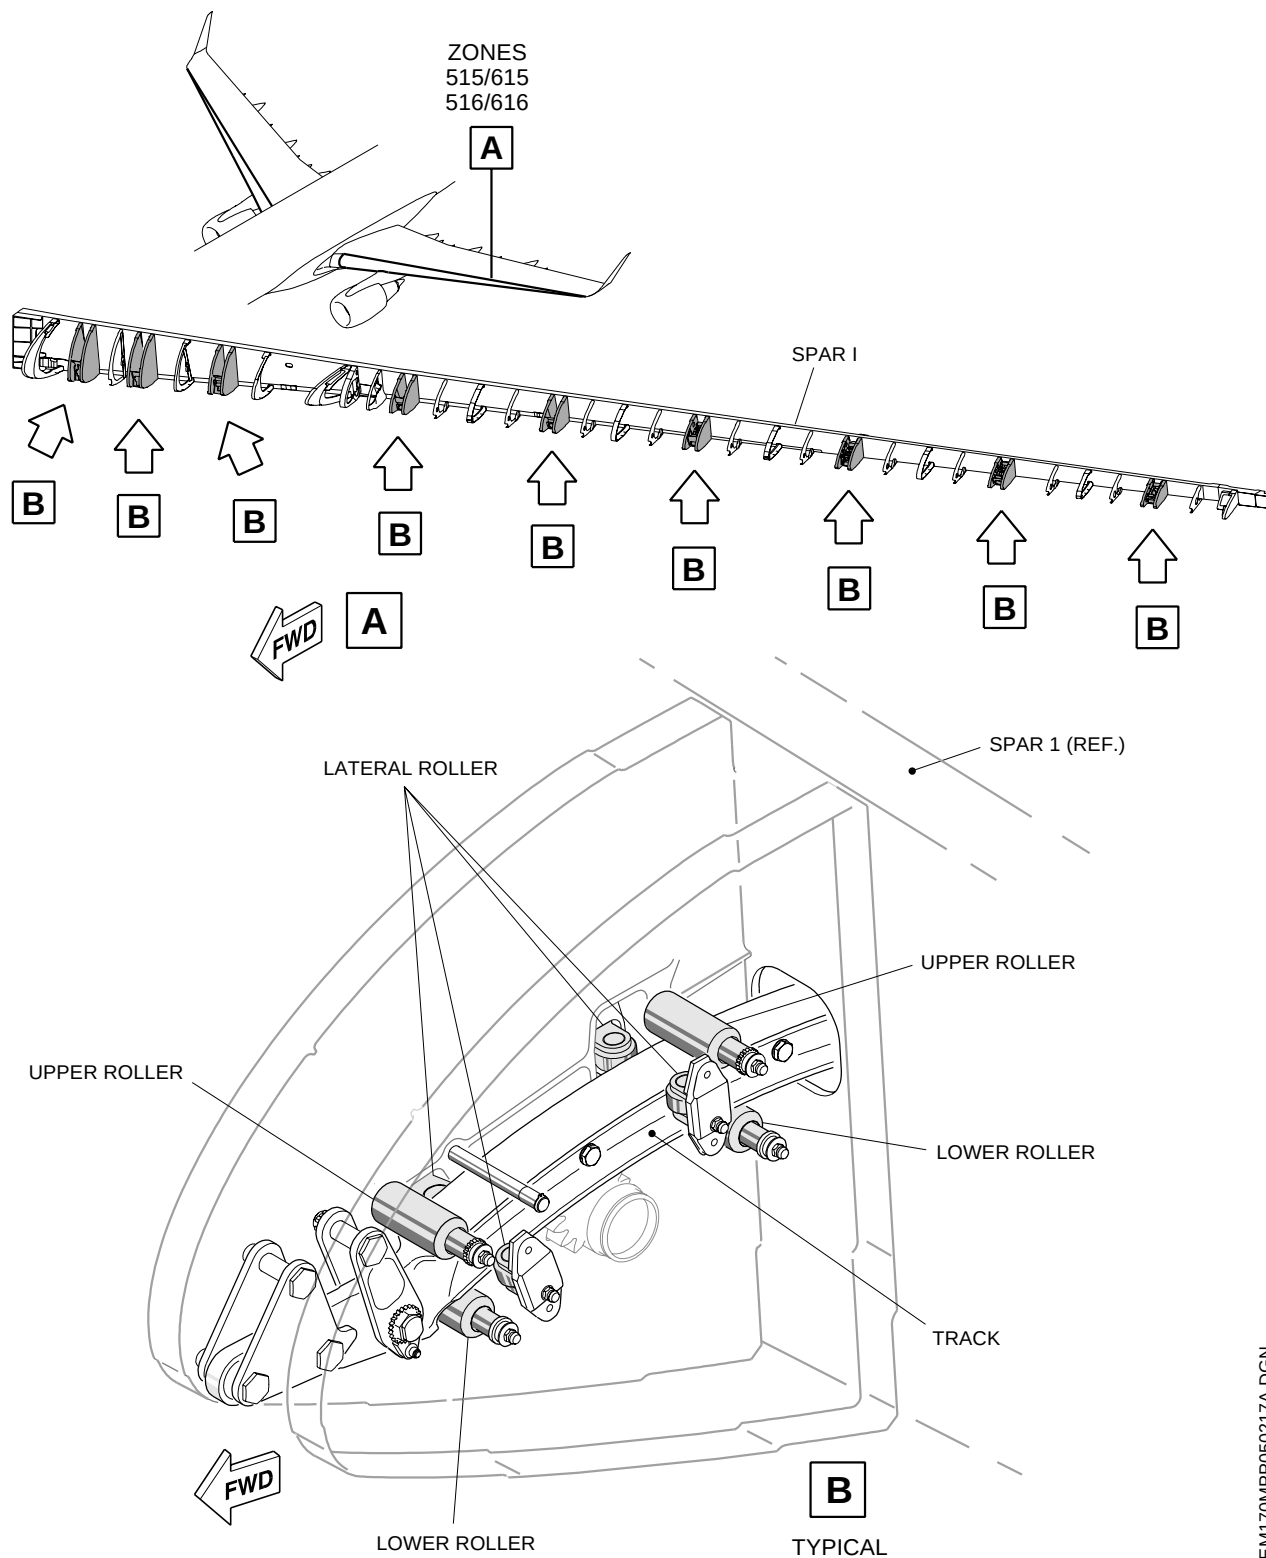

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336


EM170MPP050217A.DGN



EFFECTIVITY: ALL

Slats - Actuator and Torque Tube

Figure 621

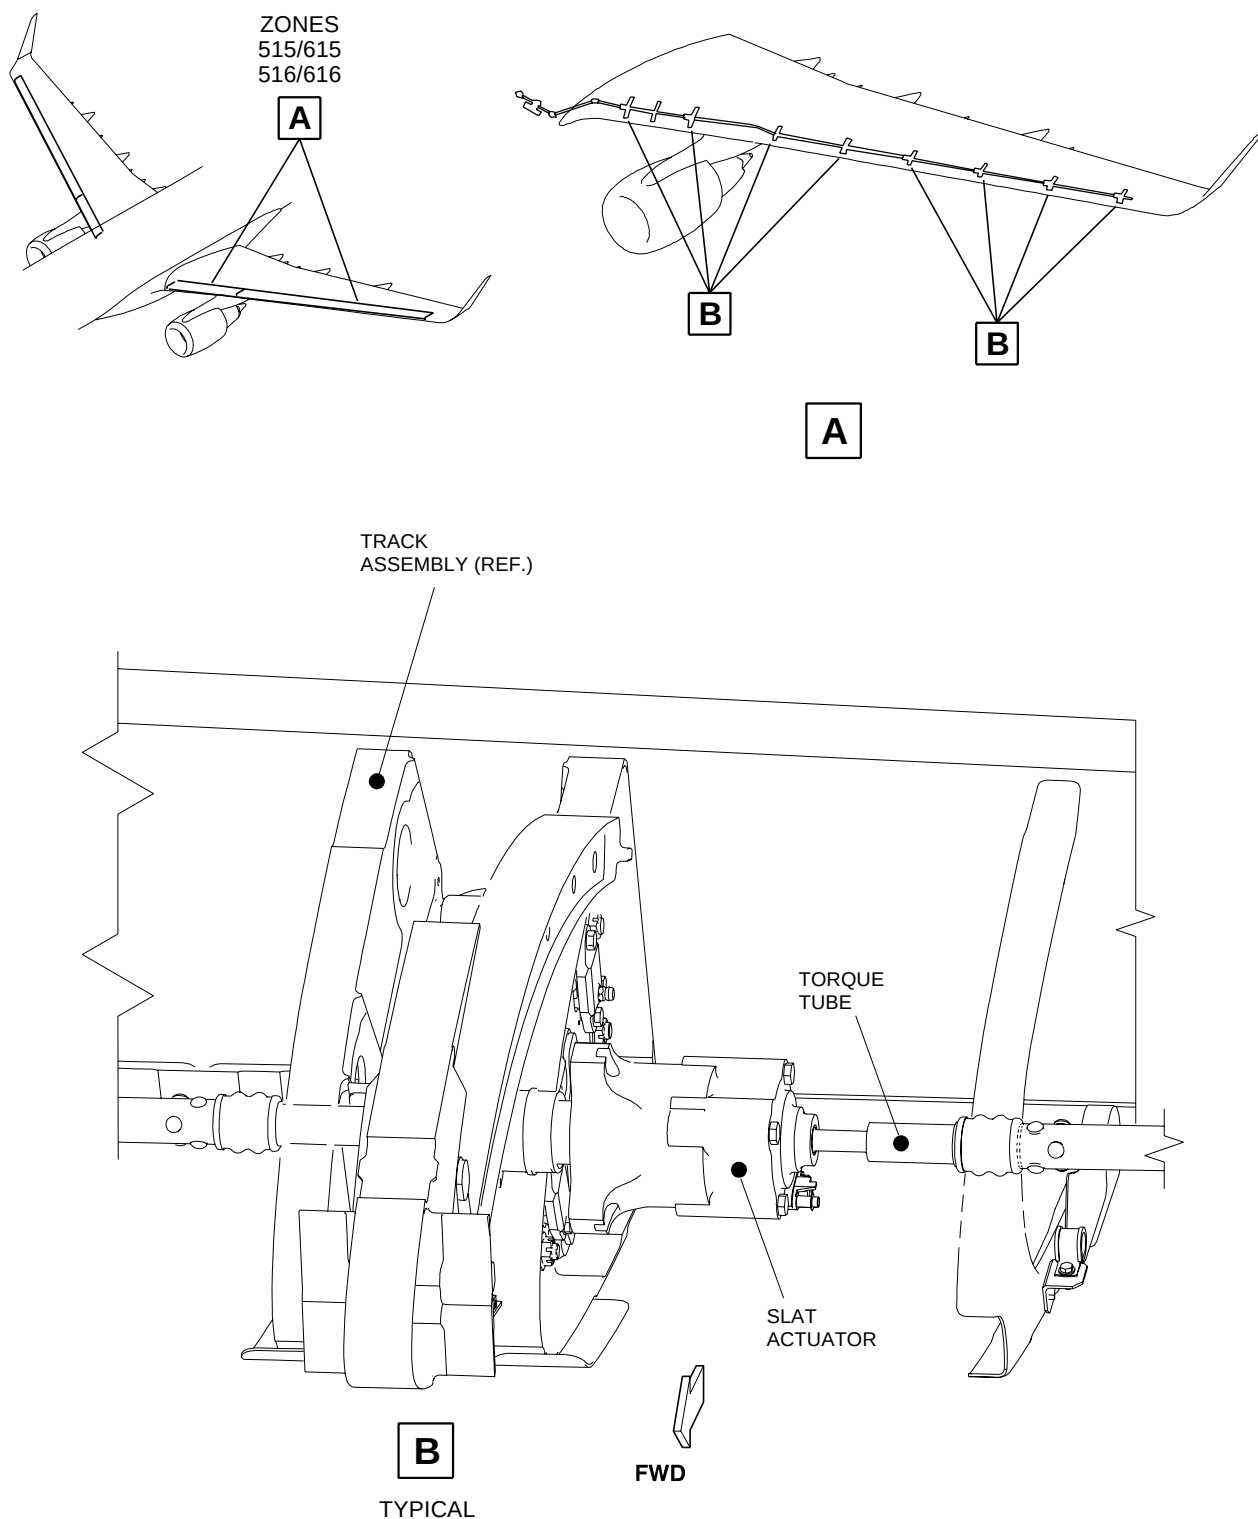

Filtered Serial N° contained in this publication: 282, 336

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MP0050215A.DGN



EFFECTIVITY: ALL

Slats - Internal Structures

Figure 622 - Sheet 1

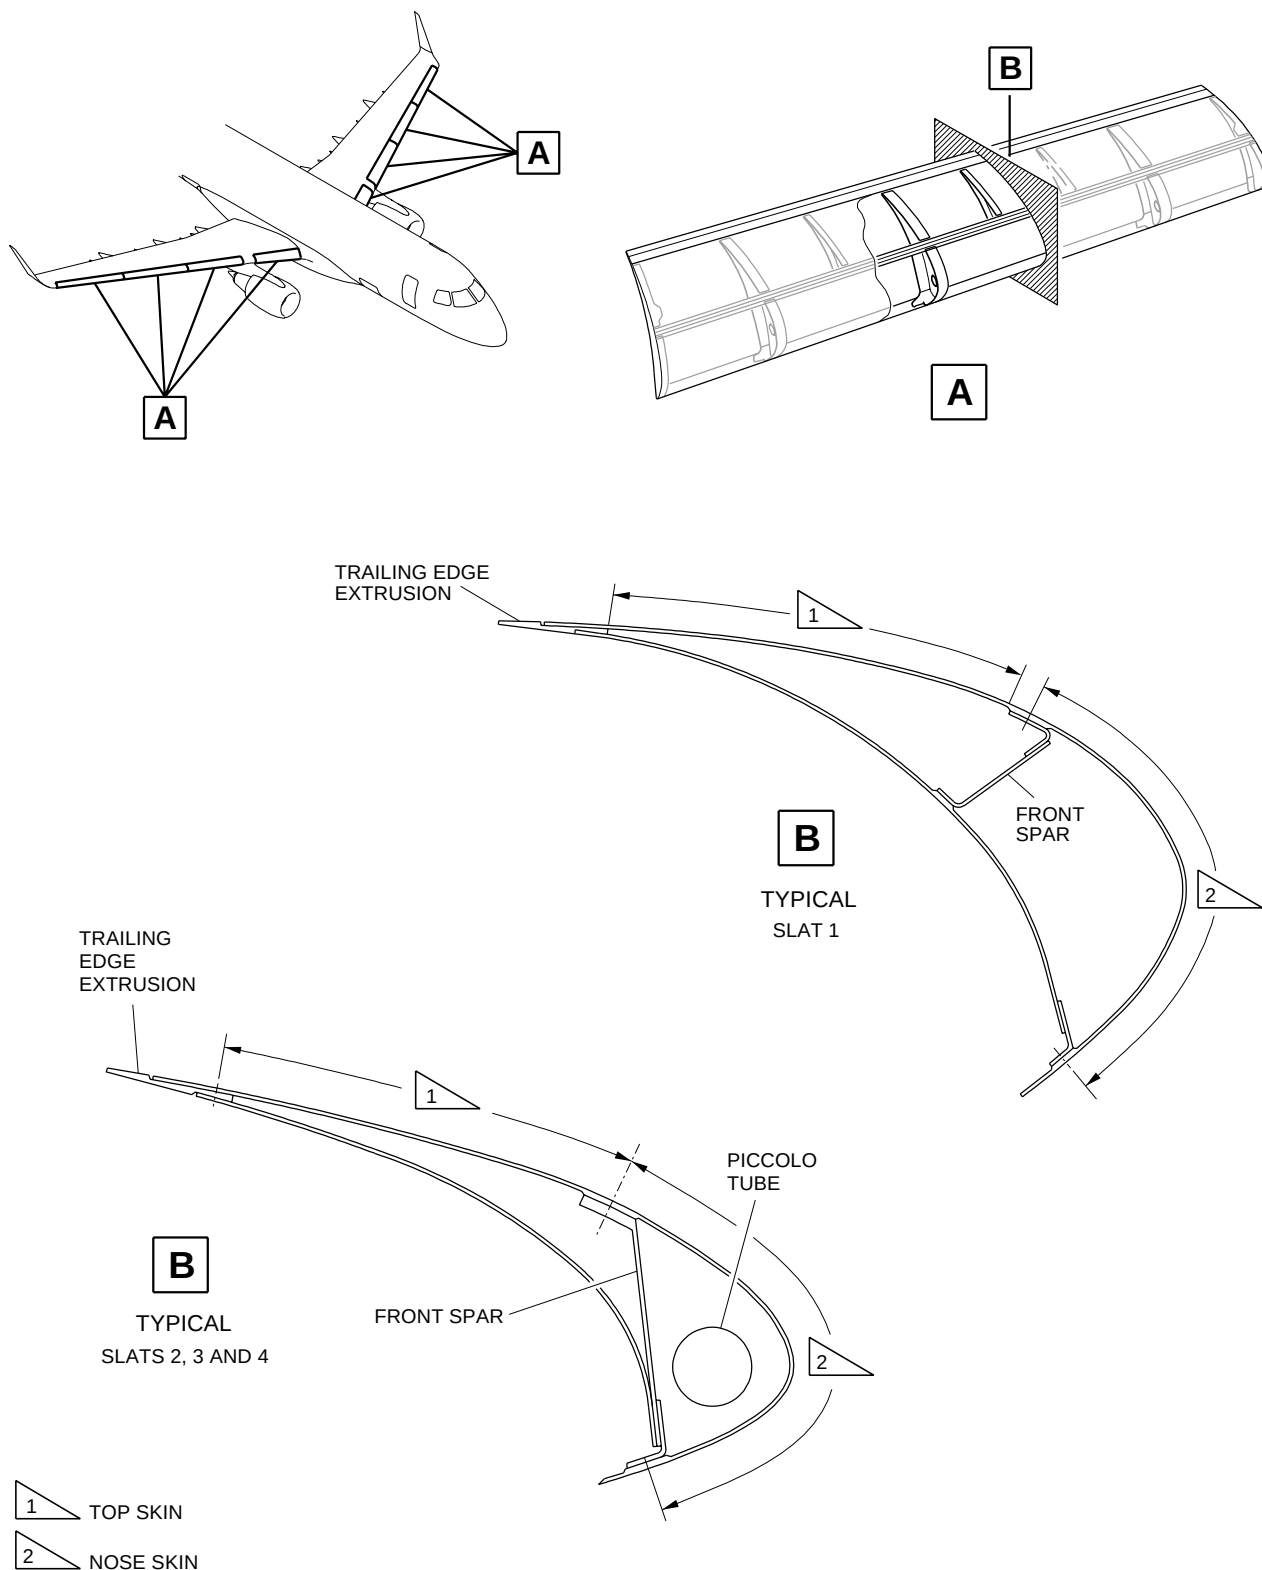

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050213A.DGN



EFFECTIVITY: ALL

Slats - Internal Structures

Figure 622 - Sheet 2

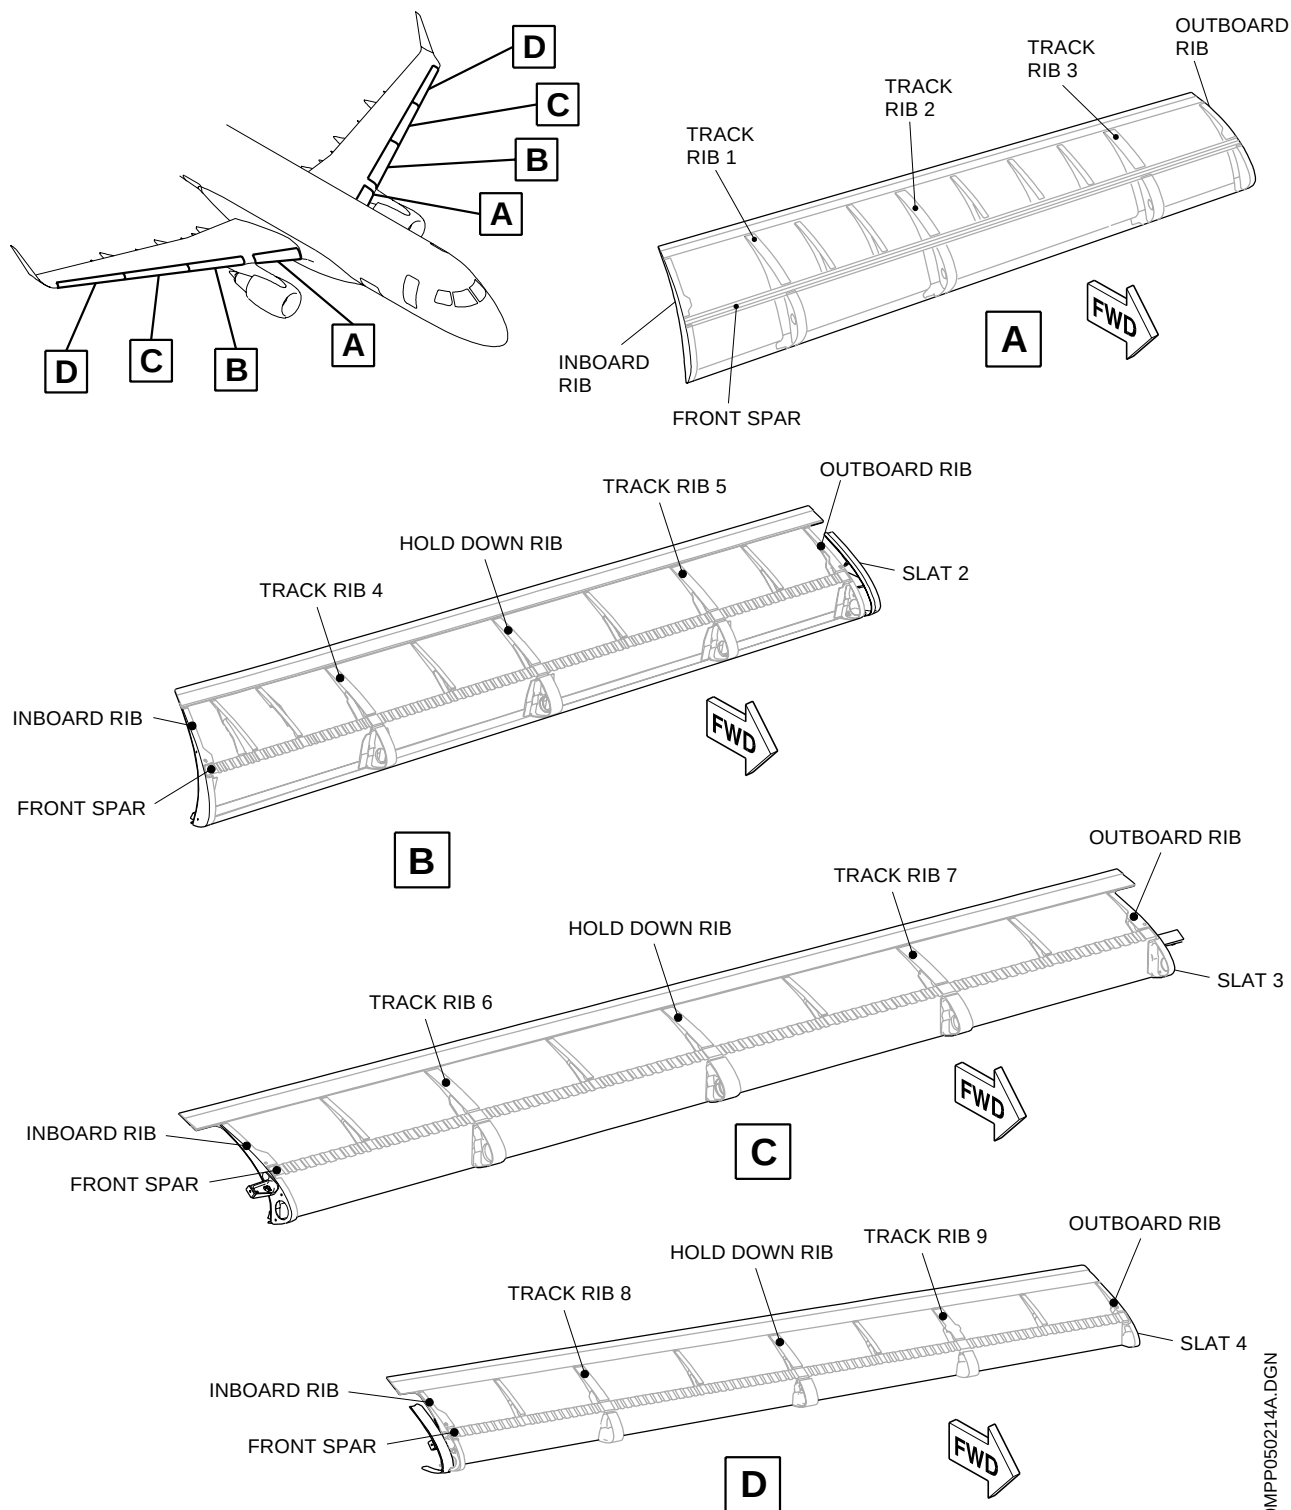


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050214A.DGN

Filtered Serial N° contained in this publication: 282, 336

EFFECTIVITY: ALL
Slats - Track Ribs at Fixed Leading Edge
Figure 623

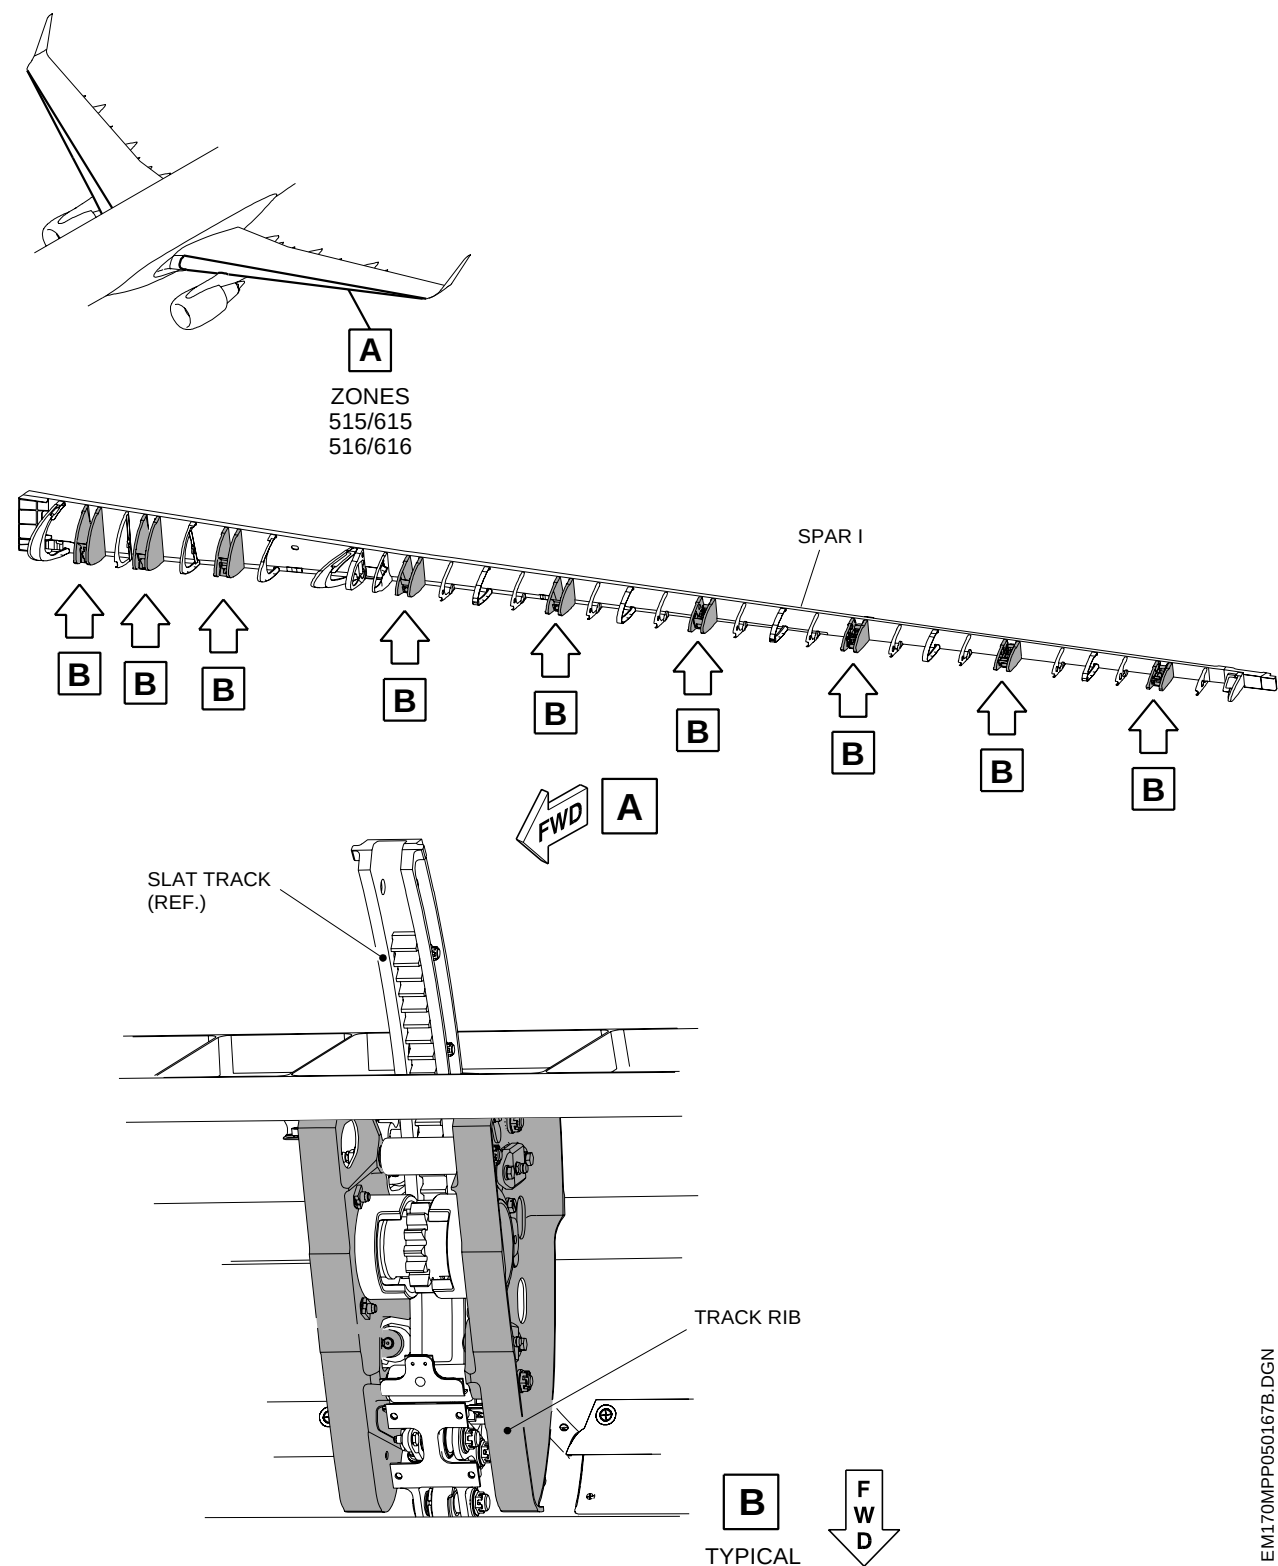


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 282, 336



EFFECTIVITY: ALL
Slats - Skew Sensor
Figure 624

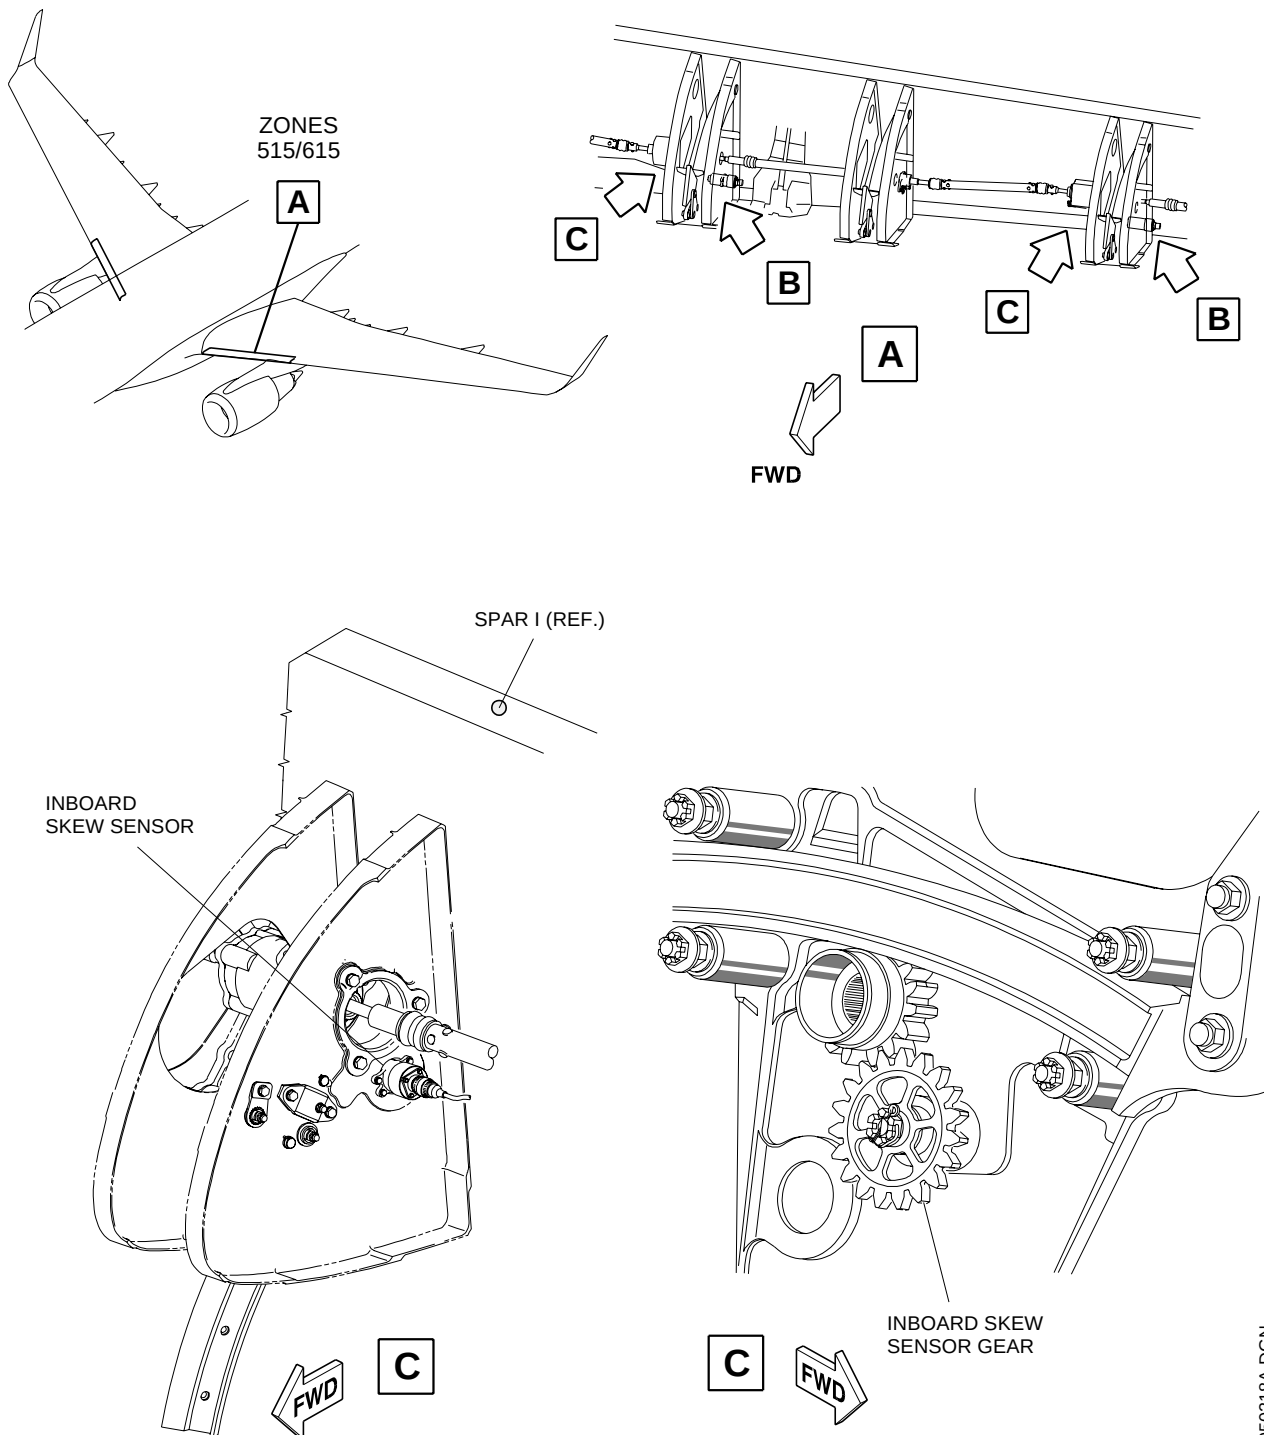

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050218A.DGN

Filtered Serial N° contained in this publication: 282, 336