



TASK 05-50-07-200-801-A

EFFECTIVITY: ALL

1. Maximum Flap / Slat Extended Speed - Inspection/Check

A. General

- (1) This section gives the necessary actions that you must take after the aircraft has flown at a speed higher than V_{FE} for a given flap / slat position.

NOTE: There are distinct values of V_{FE} according to the deflection angle of the flap / slat surface.

- (2) The exceedance of the V_{FE} , for any flap / slat deflections, will trigger the OS Aural Warning.
- (3) It is necessary to have a maintenance action when the crew reports the trigger of the OS aural warning or when flight data analysis shows that V_{FE} , for a given flap / slat position, has been exceeded with the flaps / slats extended.
- (4) Based on the operational limits listed in the AFM, one threshold value (T_V) is set to classify the severity of the event. The severity of the event will classify it into one of the situations below:
- (a) Below or equal to the Threshold Value (T_V): This threshold value defines a speed limit for which the Phase-I and Phase-II inspections are not necessary, if:
- There are no discrepancies detected during the initial evaluation ([SUBTASK 710-004-A](#));
 - The event or the sum of the events took no more than 10 s.
- (b) Above the Threshold Value (T_V): This region defines a situation clearly out of the speed envelope, but the operator can still restore the aircraft airworthiness without Embraer involvement, if no discrepancies are found during the applicable inspections.
- (5) The purpose of this section is to give the operator all information to analyze the flight data, determine the required inspections and restore the aircraft airworthiness. Embraer must be involved only if, during any phased inspection, a discrepancy related to the event of V_{FE} exceedance is found. In this situation, the operator must send to Embraer the data and a report of the discrepancies found. An Embraer disposition is necessary to return the aircraft to service.
- (6) The flight data source can be either DVDR 1, DVDR 2 or QAR. Any of them is sufficient to define if maximum flap/slat extended speed condition occurred.
- NOTE: DVDR 1 is installed in the FWD avionics compartment and DVDR 2 is installed in the aft avionics compartment.
- (7) When the aircraft is equipped with the QAR, you can use this equipment as an alternative to DVDR 2.
- NOTE: The QAR must operate in continuous mode to be used as alternative to DVDR 2.
- (8) The operator can do the analysis of the flight operation data, but if the alternative is sending the data for an EMBRAER analysis, it is recommended that you send the QAR file.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



(9) These maintenance technicians are necessary to do this task:

- 2 - Airframe (Structure)
- 1 - Electrical/Avionics Systems

B. References

REFERENCE	DESIGNATION
AMM TASK 06-41-00-800-801-A/100	Fuselage Access Doors and Panels
AMM TASK 06-44-00-800-801-A/100	Wing Access Doors and Panels
AMM TASK 20-00-00-910-801-A/200	Aircraft Maintenance Safety Procedures - Standard Procedures
AMM TASK 27-50-00-710-801-A/500	Flap Control System - Operational Test
AMM TASK 27-80-00-710-801-A/500	Slat Control System - Operational Test
AMM TASK 57-49-02-000-802-A/400	Slat Track Cover - Removal
AMM TASK 57-49-02-400-802-A/400	Slat Track Cover - Installation
AMM TASK 57-51-00-200-801-A/600	Flap Rod Assy - Inspection
AMM TASK 57-58-21-000-801-A/400	Inboard-Flap Track Fairing 1 - Removal
AMM TASK 57-58-21-400-801-A/400	Inboard-Flap Track Fairing 1 - Installation
AMM TASK 57-58-23-000-801-A/400	Inboard-Flap Track Fairing 2 - Removal
AMM TASK 57-58-23-400-801-A/400	Inboard-Flap Track Fairing 2 - Installation
AMM TASK 57-58-25-000-801-A/400	Outboard-Flap Track Fairings 3 and 4 - Removal
AMM TASK 57-58-25-400-801-A/400	Outboard-Flap Track Fairings 3 and 4 - Installation

C. Zones and Accesses

ZONES ACCESS	LOCATION	REFERENCE
195ER	Wing-to-Fuselage Fairing Aft Panel	AMM TASK 06-41-00-800-801-A/100
195FL	Wing-to-Fuselage Fairing Aft Panel	AMM TASK 06-41-00-800-801-A/100
195GR	Wing-to-Fuselage Fairing Aft Panel	AMM TASK 06-41-00-800-801-A/100
195HL	Wing-to-Fuselage Fairing Aft Panel	AMM TASK 06-41-00-800-801-A/100
512AZ	Slat 2 - LH Wing	AMM TASK 06-44-00-800-801-A/100
514AZ	Slat 4 - LH Wing	AMM TASK 06-44-00-800-801-A/100
514BZ	Slat 4 - LH Wing	AMM TASK 06-44-00-800-801-A/100
515AB	Inboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
515BB	Inboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516AB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516BB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516CB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516DB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516EB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
516FB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100



(Continued)

<i>ZONES ACCESS</i>	<i>LOCATION</i>	<i>REFERENCE</i>
516GB	Outboard Wing Leading Edge - LH Wing	AMM TASK 06-44-00-800-801-A/100
561AB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561BB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561CB	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561ET	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561FT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
561GT	Inboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
562BT	Inboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571DT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571ET	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
571FT	Outboard Main Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
572DT	Outboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
572ET	Outboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
572FT	Outboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
572GT	Outboard Aft Flap - LH Wing	AMM TASK 06-44-00-800-801-A/100
612AZ	Slat 2 - RH Wing	AMM TASK 06-44-00-800-801-A/100
614AZ	Slat 4 - RH Wing	AMM TASK 06-44-00-800-801-A/100
614BZ	Slat 4 - RH Wing	AMM TASK 06-44-00-800-801-A/100
615AB	Inboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
615BB	Inboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616AB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616BB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616CB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616DB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616EB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616FB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
616GB	Outboard Wing Leading Edge - RH Wing	AMM TASK 06-44-00-800-801-A/100
661AB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661BB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661CB	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661ET	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661FT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
661GT	Inboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
662BT	Inboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671DT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671ET	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
671FT	Outboard Main Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100

Filtered Serial N° contained in this publication: 344, 351



(Continued)

ZONES ACCESS	LOCATION	REFERENCE
672DT	Outboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
672ET	Outboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
672FT	Outboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100
672GT	Outboard Aft Flap - RH Wing	AMM TASK 06-44-00-800-801-A/100

D. Tools and Equipment

REFERENCE	DESIGNATION
ITEM GSE 029	TOOL - SLAT CONTROL LEVER LOCKING
Olympus IPLEX NX	Videoscope Equipment including Flexible fiberscope diameter 6 mm (0.236 in), length 3.5 meters (137.8 in), Four-Way motorized angulation 180°, Joystick-controlled articulation, high resolution LCD Monitor, 50W light source
Commercially available	Circuit Breaker Ring and Tag (Inoperative - Do Not Operate)
Commercially available	Flashlight
Commercially available	Mirror - Inspection
Commercially Available	Workstand - flaps
Commercially available	Workstand - slats

E. Circuit Breaker List

TYPE	DESIGNATION	LOCATION	BUS	LOCATION TIP	MCDU PAGE
CB	FLAP ACE 1	LHCBP	DC ESS BUS 1	FLIGHT CONTROLS -	
CB	FLAP ACE 2	RHCBP	DC ESS BUS 3	FLIGHT CONTROLS -	
CB	SLAT ACE 1	LHCBP	DC BUS 1	FLIGHT CONTROLS -	
CB	SLAT ACE 2	RHCBP	DC ESS BUS 2	FLIGHT CONTROLS -	

F. Flap/Slat-Extended Speed Exceedance - Event Assessment**SUBTASK 840-002-A**

- (1) The necessary actions following an exceedance of speed when the flaps / slats were extended are given in the flowchart shown in [Figure 601](#).
- (2) When the crew reports the OS aural warning, the aircraft can return to service without Phase-I and Phase-II inspections, only if all the conditions that follow are met:
 - There are no discrepancies detected during the initial evaluation ([SUBTASK 710-004-A](#));
 - The IAS value has not exceeded the threshold value (T_v) (refer to [Table 601](#) and/or to [Figure 602, Sheet 2](#) or refer to [Table 603](#) and/or to [Figure 602, Sheet 1](#));



- The event or the sum of the events took no more than 10 s.

(3) If the crew cannot assure that all the conditions above have been respected, it is necessary to do the flight data download and the data must be analyzed.

(4) *EFFECTIVITY: ON AIRCRAFT WITH HONEYWELL DVDR*

If it is not possible to do the flight data analysis immediately, do the Phase-I inspection. If no discrepancy is detected, a deferrable period of 10 FC is permitted.

NOTE: The flight data download must be performed in a maximum of 20 FH. If not, the data can be missed due to the recording time of the unit.

(5) *EFFECTIVITY: 170:00344-00344*

If it is not possible to do the flight data analysis immediately, do the Phase-I inspection. If no discrepancy is detected, a deferrable period of 10 FC is permitted.

NOTE: The flight data download must be performed in a maximum of 120 FH. If not, the data can be missed due to the recording time of the unit.

(6) Within the deferrable period, decide whether or not you want to do the flight data analysis. If you decide to do the analysis, you must compare the data with the threshold value (T_v) to get the necessary actions. If you decide not to do the analysis, do the Phase-II inspection.

(7) When the detection source for a flap / slat extended speed exceedance is flight data analysis, not a crew report, you must do the required inspections as per [Figure 601, Sheet 1](#) flow chart.

NOTE: If it is not possible to do the Phase-II inspection immediately, a deferrable period of 10 FC is granted from the moment of the flap extended speed exceedance detection through the flight data analysis, provided that the Phase-I inspection is performed immediately and no damage is found during the inspection.

(8) For the event assessment, the parameters below must be selected from the flight data source:

- Time (GMT)
- Flap Position (FlapPos)
- Slat Position (SlatPos)
- Indicated Airspeed (Airspeed-CoP and Airspeed-Pil)

NOTE: The data should be selected from the flight data source at a rate of 0.5 sps (samples per second) for Flap and 1 sps (samples per second) for Slat.

NOTE: The parameters of Indicated Airspeed (Airspeed-CoP and Airspeed-Pil) to QAR are CAS_COPI and CAS respectively.

G. Flap / Slat Extended Speed Exceedance - Pilot Report

SUBTASK 840-004-A



- (1) Identify the slat/flap control lever position and the maximum operating speed. Compare the slat/flap control lever position and its respective maximum operating speed with the maximum operating speed limits. Refer to [Figure 602, Sheet 2](#) or to table below.

Table 601 - FLAP / SLAT CONTROL LEVER POSITION AND EQUIVALENT VFE

SFCL (Slat/Flap Control Lever) Position	V _{FE} (KIAS)	T _V (KIAS)
1	230	240
2	215	225
3	200	205
4	180	190
5	180	190
Full Down	165	175

- (2) Classify the event severity (above or below T_V) for each control lever position (flap or slat).
- (3) Refer to [Table 602](#) for the necessary actions, based on the event severity.

Table 602 - FLAP / SLAT EXTENDED SPEED EXCEEDANCE SEVERITY AND REQUIRED ACTIONS

SAMPLE VALUE	REQUIRED ACTIONS
Below or equal to T _V	Return the aircraft to service, if: - No discrepancy is found during initial evaluation SUBTASK 710-004-A; - The event or the sum of the events took no more than 10 s; <u>NOTE:</u> If one of these conditions was not respected, consider it as an event above T_V.
Above T _V	- Do the Phase-II inspection.^[1] - If no discrepancy is found during Phase-II inspection, return the aircraft to service. - If any discrepancy is found during the Phase-II inspection, send the data and inspection results to Embraer. Work together with Embraer for the necessary actions.

- [1] If it is not possible to do the flight data analysis immediately, a deferrable period of 10 FC is granted provided that no damage is found during the Phase-I inspection.

H. Flap / Slat Extended Speed Exceedance - Flight Data Source Analysis

SUBTASK 840-003-A

- (1) In the flight data downloaded, identify the flight period when the event occurred. Refer to [Figure 603](#). To do this, compare the Flap / Slat Position with its respective maximum operating speed limits. Refer to [Figure 602, Sheet 1](#) or to table below.



Table 603 - FLAP / SLAT POSITION AND EQUIVALENT VFE

FLAP POSITION (Flap-Pos) (°)	SLAT POSITION (Slat-Pos) (°)	V _{FE} (KIAS)	T _V (KIAS)
>0 and ≤ 5.0	>0 and ≤ 15.0	230	240
>5.0 and ≤ 10.0	>0 and ≤ 15.0	215	225
>10.0 and ≤ 20.0	>0 and ≤ 15.0	200	205
>10.0 and ≤ 20.0	>15.0 and ≤ 25.0	180	190
>20.0 and ≤ 35.0	>15.0 and ≤ 25.0	165	175

- (2) Mark all the samples for which the speed is higher than the operational speed for the equivalent flap / slat position and, subtracting the time of the first sample with overspeed record from the last, obtain the overspeed duration. Refer to [Figure 603](#).
- (3) Identify all the samples that register a surface (flap or slat) in a position different from "zero", close to the samples that registered the overspeed for the equivalent Flap / Slat Position. Classify the event severity (above or below T_V) for each surface (flap or slat) position.
- (4) During flap / slat transit, consider the next higher flap / slat position until surfaces complete the transition.
- (5) Refer to [Table 604](#) for the necessary actions, based on the event severity.

Table 604 - FLAP / SLAT EXTENDED SPEED EXCEEDANCE SEVERITY AND REQUIRED ACTIONS

SAMPLE VALUE	REQUIRED ACTIONS
Below or equal to T _V	Return the aircraft to service, if: - No discrepancy is found during initial evaluation SUBTASK 710-004-A; - The event or the sum of the events took no more than 10 s; NOTE: If one of these conditions was not respected, consider it as an event above T_V.
Above T _V	- Do the Phase-II inspection^[1]. - If no discrepancy is found during Phase-II inspection, return the aircraft to service. - If any discrepancy is found during the Phase-II inspection, send the data and inspection results to Embraer. Work together with Embraer for the necessary actions.

[1] If the DVDR analysis shows that the flaps were in "zero" position, perform only the slats inspection.

I. Job Set-Up

SUBTASK 860-001-A

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

- (1) Do the procedure to make the aircraft safe for maintenance (AMM TASK 20-00-00-910-801-A/200).

J. Initial Evaluation

SUBTASK 710-004-A

- (1) On the control pedestal, set the FSL to (FULL) open position, wait the flaps/slats move to the (FULL) open position.
- (2) On the control pedestal, set the FSL to (0) close position, wait the flaps/slats move to (0) close position.
- (3) Make sure that none of the two messages below are active in the EICAS:
 - FLAP FAIL (275 001 00)
 - SLAT FAIL (278 001 00)

K. Phase-I Inspection

SUBTASK 860-004-A

- (1) Set flaps and slats to the fully extended position.
- (2) Install the locking tool GSE 029 on the SFCL.
- (3) Open these circuit breakers and put a circuit breaker ring and tag (inoperative - do not operate) on each one of them:
 - FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)

SUBTASK 210-004-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (4) For the flaps, do as follows:
 - (a) Put the workstand (flaps) in the work area.
 - (b) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings.



- Actuator fittings and gimbals (Figure 604)
 - Track supports (Figure 605)
 - Main and aft carriages (Figure 606)
 - Rails (Figure 608)
 - Upper and lower skins (Figure 609)
 - Main and aft carriage attachments (Figure 613)
 - Aft flap roller fitting (Figure 614)
- (c) Do an inspection of the flap rod mechanism (AMM TASK 57-51-00-200-801-A/600).

NOTE: If flap rods are bent but no other related parts are damaged, only flap rod replacement is necessary. In this case, if you don't have any other discrepancy during phase I inspection, phase II inspection is not necessary and no need to send the flight data and inspection results to Embraer.

SUBTASK 210-005-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (5) For the slats, do as follows:
- (a) Put the workstand (slats) in the work area.
 - (b) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings.
 - Exposed parts of the slat tracks, rack teeth and pinions (Figure 615)
 - Top and back skins (Figure 616)
 - Exposed parts of the track links and bolts (Figure 617)
 - Exposed parts of the slat harness tube and WAI backwall temperature sensor (Figure 618)
 - Exposed parts of the WAI telescopic tube (Figure 619)

SUBTASK 860-005-A

- (6) Remove all tools, equipment and unwanted material from the work area.
- (7) Remove the circuit breaker ring and tag (inoperative - do not operate) from each one of these circuit breakers, and close them:



- FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
- FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
- SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
- SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)

(8) Remove the locking tool GSE 029 from the SFCL.

(9) Set flaps and slats to the fully retracted position.

SUBTASK 710-002-A

(10) Do an operational test of the flaps (AMM TASK 27-50-00-710-801-A/500).

(11) Do an operational test of the slat (AMM TASK 27-80-00-710-801-A/500).

L. Phase-II Inspection

SUBTASK 860-008-A

- (1) Remove the inboard flap track fairings. Refer to AMM TASK 57-58-23-000-801-A/400.
- (2) Set flaps and slats to the fully extended position.
- (3) Install the locking tool GSE 029 on the SFCL.
- (4) Open these circuit breakers and put a circuit breaker ring and tag (inoperative - do not operate) on each one of them:
 - FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)

SUBTASK 210-006-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

(5) For the flaps, do as follows:

NOTE: If the flight data analysis shows that the flaps were in "zero" position during the overspeed event, it is only necessary to inspect the slats.

- (a) Remove these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
 - 561AB, 561BB, 561CB, 561ET, 561FT and 561GT;
 - 661AB, 661BB, 661CB, 661ET, 661FT and 661GT;



- 562BT and 662BT;
 - 571DT, 571ET and 571FT;
 - 671DT, 671ET and 671FT;
 - 572DT, 572ET, 572FT and 572GT;
 - 672DT, 672ET, 672FT and 672GT.
- (b) Remove these wing-to-fuselage access panels. Refer to AMM TASK 06-41-00-800-801-A/100.
- 195ER and 195GR;
 - 195FL and 195HL.
- (c) Remove the inboard flap root fairings. Refer to AMM TASK 57-58-21-000-801-A/400.
- (d) Remove the outboard flap track fairings. Refer to AMM TASK 57-58-25-000-801-A/400.
- (e) Put the workstand (flaps) in the work area.
- (f) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings:
- Actuator fittings and gimbals (Figure 604)
 - Track supports (Figure 605)
 - Main and aft carriages (Figure 606)
 - Flap roller studs (Figure 607)
 - Rails (Figure 608)
 - Upper and lower skins (Figure 609)
 - Track support fittings (Figure 610)
 - Inboard flap torque tube and fittings (Figure 611)
 - Main and aft carriage attachments (Figure 613)
 - Aft flap roller fitting (Figure 614)

- (g) Do an inspection of the flap rod mechanism (AMM TASK 57-51-00-200-801-A/600).

NOTE: If flap rods are bent but no other related parts are damaged, only flap rod replacement is necessary. In this case, if you don't have any other discrepancy during phase II inspection, no need to send the flight data and inspection results to Embraer.

SUBTASK 290-002-A



WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (6) Use a videoscope IPLEX NX to do a borescopic inspection of the inboard and outboard flap internal structures (Figure 612). Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items.

SUBTASK 210-010-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (7) For the slats, do as follows:
- (a) Remove these slat access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
 - 512AZ, 514AZ and 514BZ;
 - 612AZ, 614AZ and 614BZ;
 - 515AB, 515BB, 516AB, 516BB, 516CB, 516DB, 516EB, 516FB and 516GB;
 - 615AB, 615BB, 616AB, 616BB, 616CB, 616DB, 616EB, 616FB and 616GB;
 - (b) Remove the slat covers (AMM TASK 57-49-02-000-802-A/400).
 - (c) Put the workstand (slats) in the work area.
 - (d) Use a flashlight and a mirror, if necessary, to inspect the components listed below. Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items, or damaged sealants around fittings:
 - Tracks, rack teeth and pinions (Figure 615)
 - Top and back skins (Figure 616)
 - Track links and bolts (Figure 617)
 - Slat harness tube and WAI backwall temperature sensor (Figure 618)
 - WAI telescopic tube (Figure 619)
 - Roller bolts and studs (Figure 620)
 - Torque tube and slat actuator (Figure 621)
 - Track ribs at fixed leading edge (Figure 623)



- Skew sensor and gear (Figure 624)

SUBTASK 290-004-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

WARNING: MAKE SURE THAT THE FLIGHT-CONTROL SAFETY LOCKS AND THE WARNING NOTICES ARE IN POSITION. THIS IS TO PREVENT AN ACCIDENTAL COMMAND OF THE FLIGHT CONTROL SURFACES AND INJURY TO PERSONS.

- (8) Use a videoscope IPLEX NX to do a borescopic inspection of the slat internal structures (Figure 622). Make sure they show no signs of bend or distortion, cracks or twist, wrinkles or surface deformation, loose or missing items.

SUBTASK 400-002-A

- (9) After Flap and Slat inspection do the removed parts and panels installation, as follows:
- (a) For Flaps, install these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- 561AB, 561BB, 561CB, 561ET, 561FT and 561GT;
 - 661AB, 661BB, 661CB, 661ET, 661FT and 661GT;
 - 562BT and 662BT;
 - 571DT, 571ET and 571FT;
 - 671DT, 671ET and 671FT;
 - 572DT, 572ET, 572FT and 572GT;
 - 672DT, 672ET, 672FT and 672GT.
- (b) Install these wing-to-fuselage access panels. Refer to AMM TASK 06-41-00-800-801-A/100.
- 195ER and 195GR;
 - 195FL and 195HL.
- (c) Install the inboard flap root fairings. Refer to AMM TASK 57-58-21-400-801-A/400.
- (d) Install the outboard flap track fairings. Refer to AMM TASK 57-58-25-400-801-A/400.
- (10) For Slats, install these wing access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- (a) Install these slat access panels. Refer to AMM TASK 06-44-00-800-801-A/100.
- 512AZ, 514AZ and 514BZ;
 - 612AZ, 614AZ and 614BZ;



- 515AB, 515BB, 516AB, 516BB, 516CB, 516DB, 516EB, 516FB and 516GB;
- 615AB, 615BB, 616AB, 616BB, 616CB, 616DB, 616EB, 616FB and 616GB;

(b) Install the slat covers (AMM TASK 57-49-02-400-802-A/400).

SUBTASK 860-007-A

- (11) Remove all tools, equipment, and unwanted material from the work area.
- (12) Remove the circuit breaker ring and tag (inoperative - do not operate) from each one of these circuit breakers, and close them:
 - FLAP ACE 1-LHCBP (DC ESS BUS 1 FLIGHT CONTROLS)
 - FLAP ACE 2-RHCBP (DC ESS BUS 3 FLIGHT CONTROLS)
 - SLAT ACE 1-LHCBP (DC BUS 1 FLIGHT CONTROLS)
 - SLAT ACE 2-RHCBP (DC ESS BUS 2 FLIGHT CONTROLS)
- (13) Remove the locking tool GSE 029 from the SFCL.
- (14) Set flaps and slats to the fully retracted position.
- (15) Install the inboard flap track fairings. Refer to AMM TASK 57-58-23-400-801-A/400.


SUBTASK 710-003-A

- (16) Do an operational test of the flaps (AMM TASK 27-50-00-710-801-A/500).
- (17) Do an operational test of the slat (AMM TASK 27-80-00-710-801-A/500).

M. Job Close-Up

SUBTASK 860-002-A

- (1) Put the aircraft back to its initial condition (AMM TASK 20-00-00-910-801-A/200).

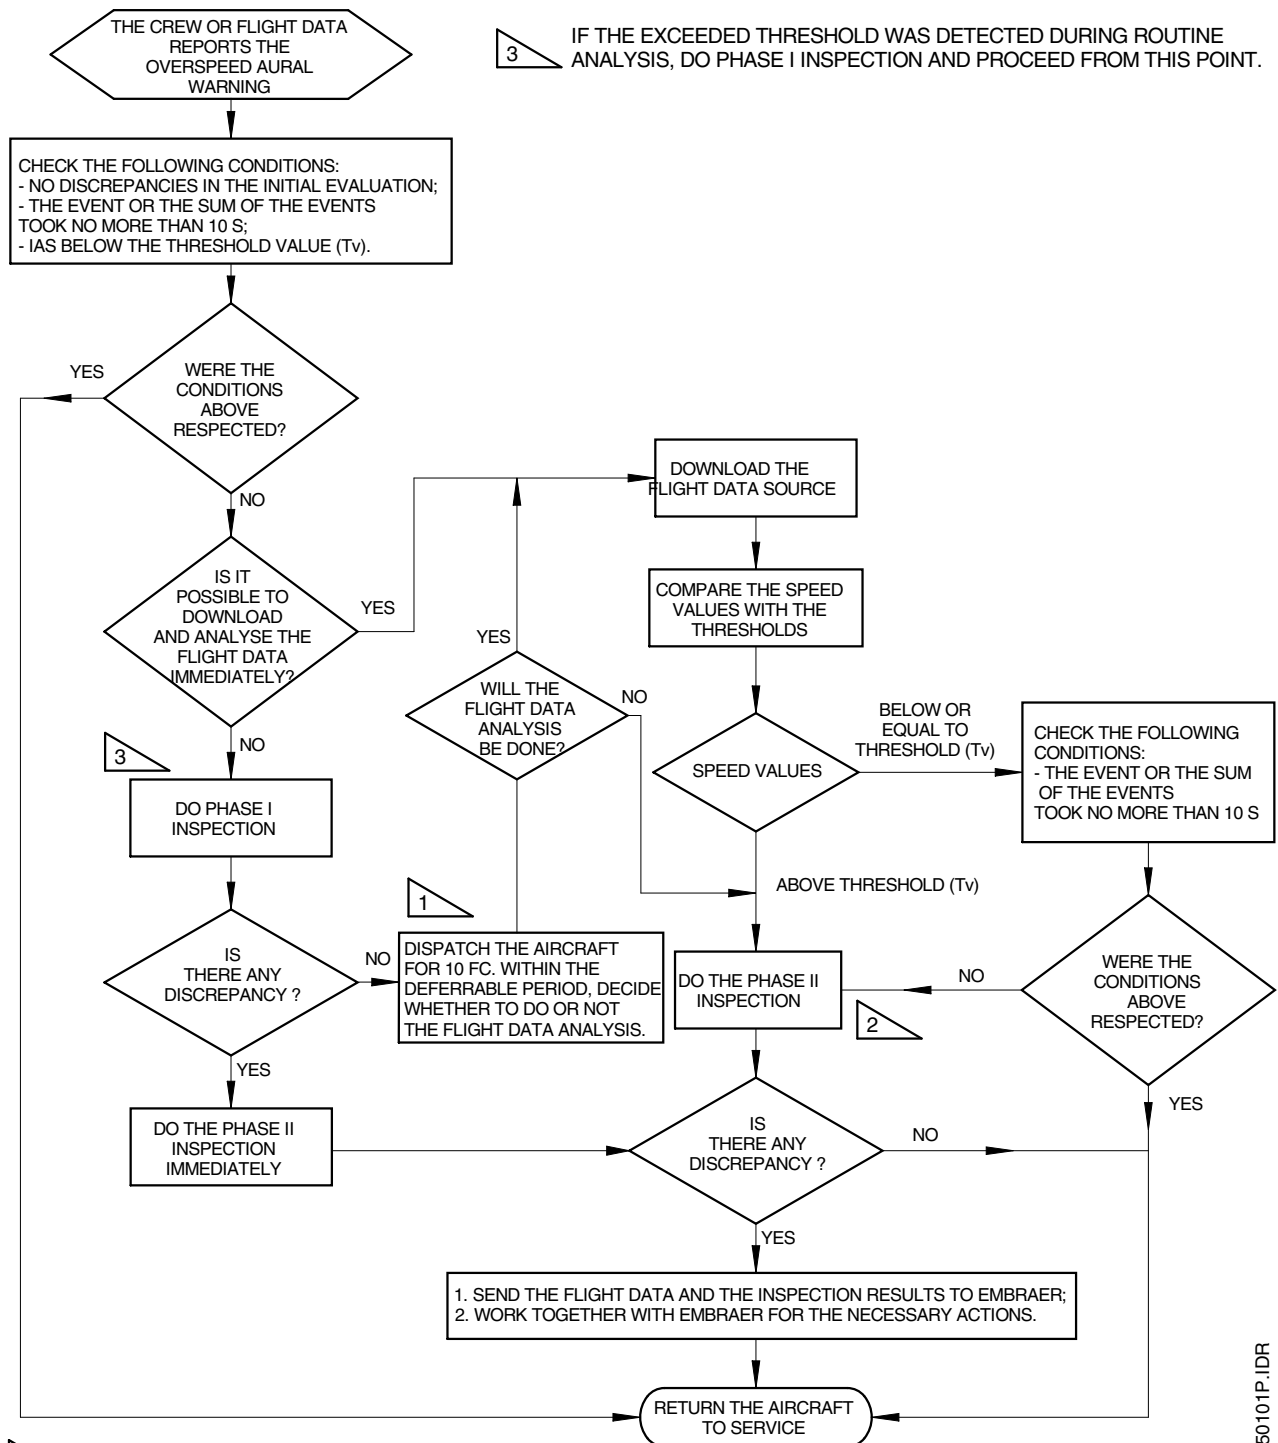**EFFECTIVITY: ON AIRCRAFT WITH HONEYWELL DVDR****Detection and Inspection - Flowchart****Figure 601 - Sheet 1**

1 THE FLIGHT DATA DOWNLOAD WITHIN A MAXIMUM OF 20FH DEFERRABLE PERIOD. IF NOT, THE DATA CAN BE MISSED DUE TO THE RECORDING TIME OF THE UNIT.

2 IF THE AIRCRAFT HAS HAD A 10 FC DEFERRABLE, DO THE PHASE-II INSPECTION WITHIN THIS PERIOD.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050101P.IDR



EFFECTIVITY: 170:00344-00344

Detection and Inspection - Flowchart

Figure 601 - Sheet 2

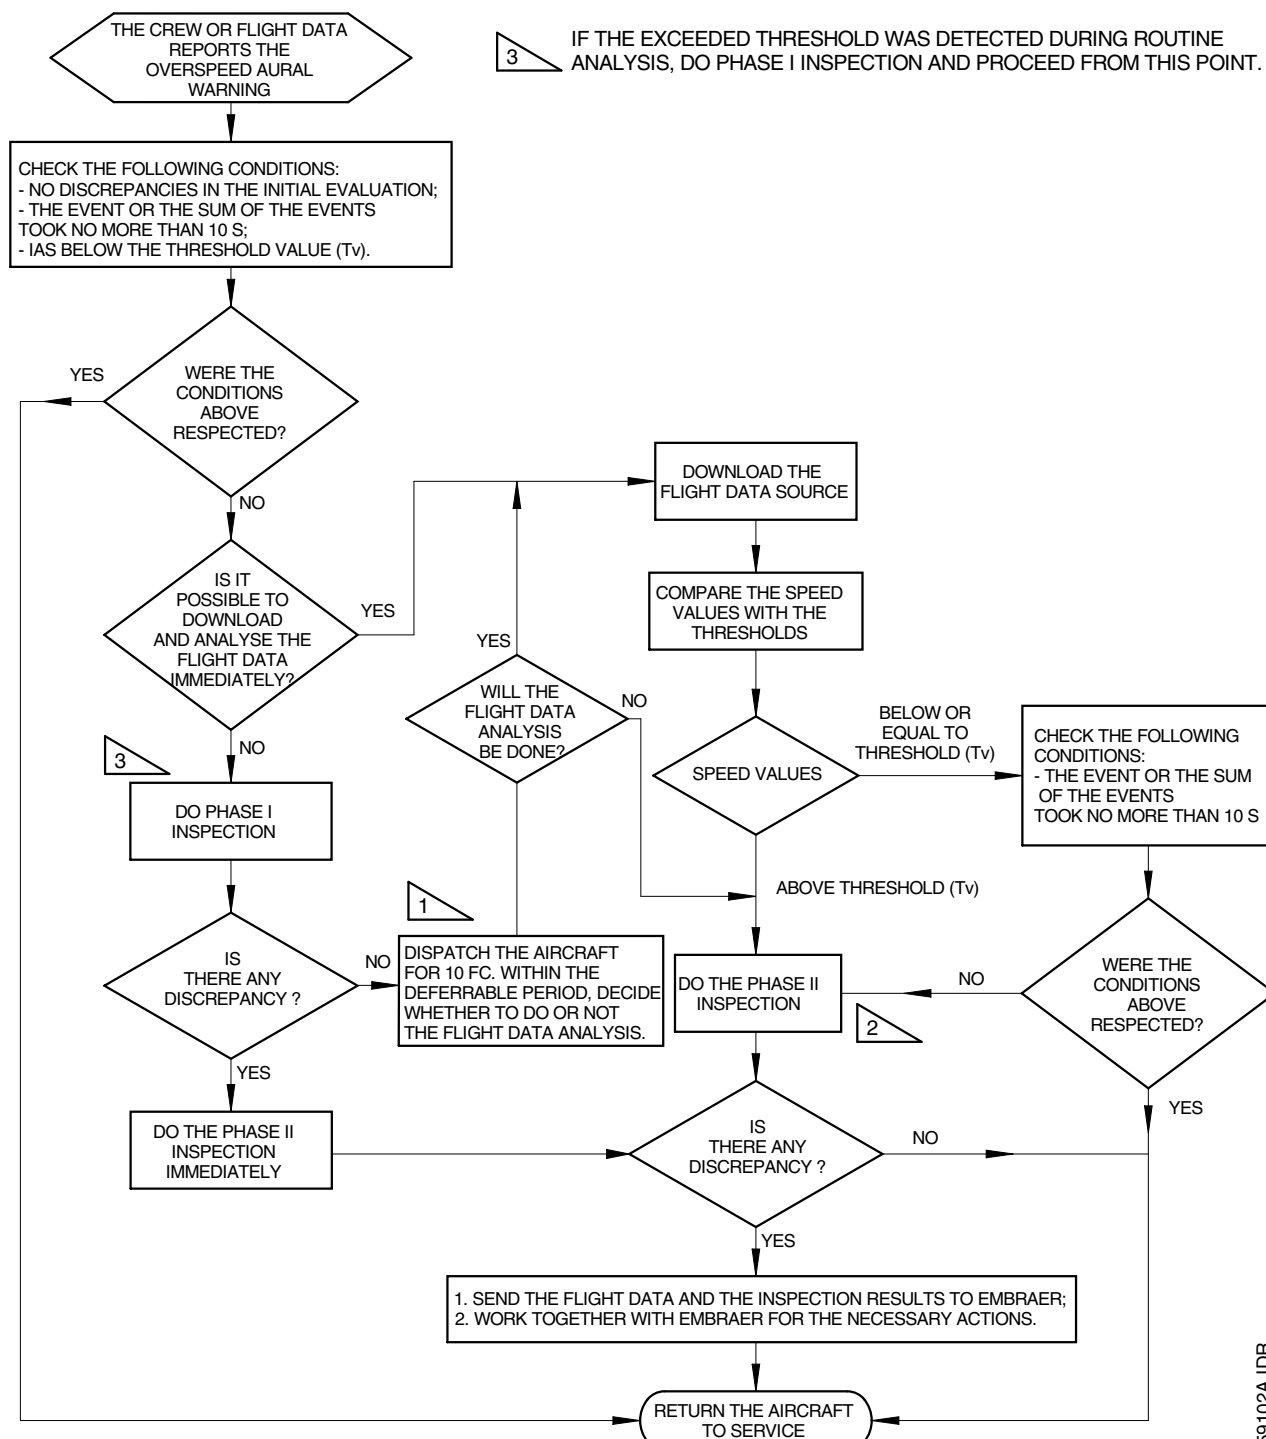HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP059102A.IDR

Filtered Serial N° contained in this publication: 344, 351





EFFECTIVITY: ALL

Maximum Flap / Slat Extended Speed and Thresholds

Figure 602 - Sheet 1

MAXIMUM FLAP/SLAT EXTENDED SPEED AND THRESHOLD

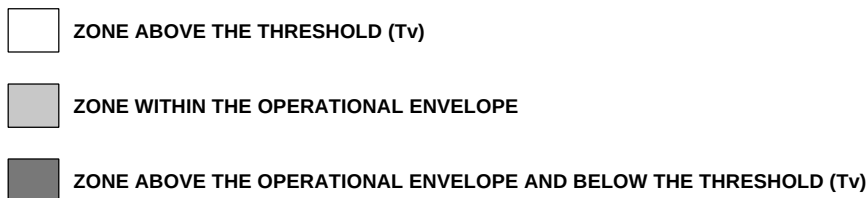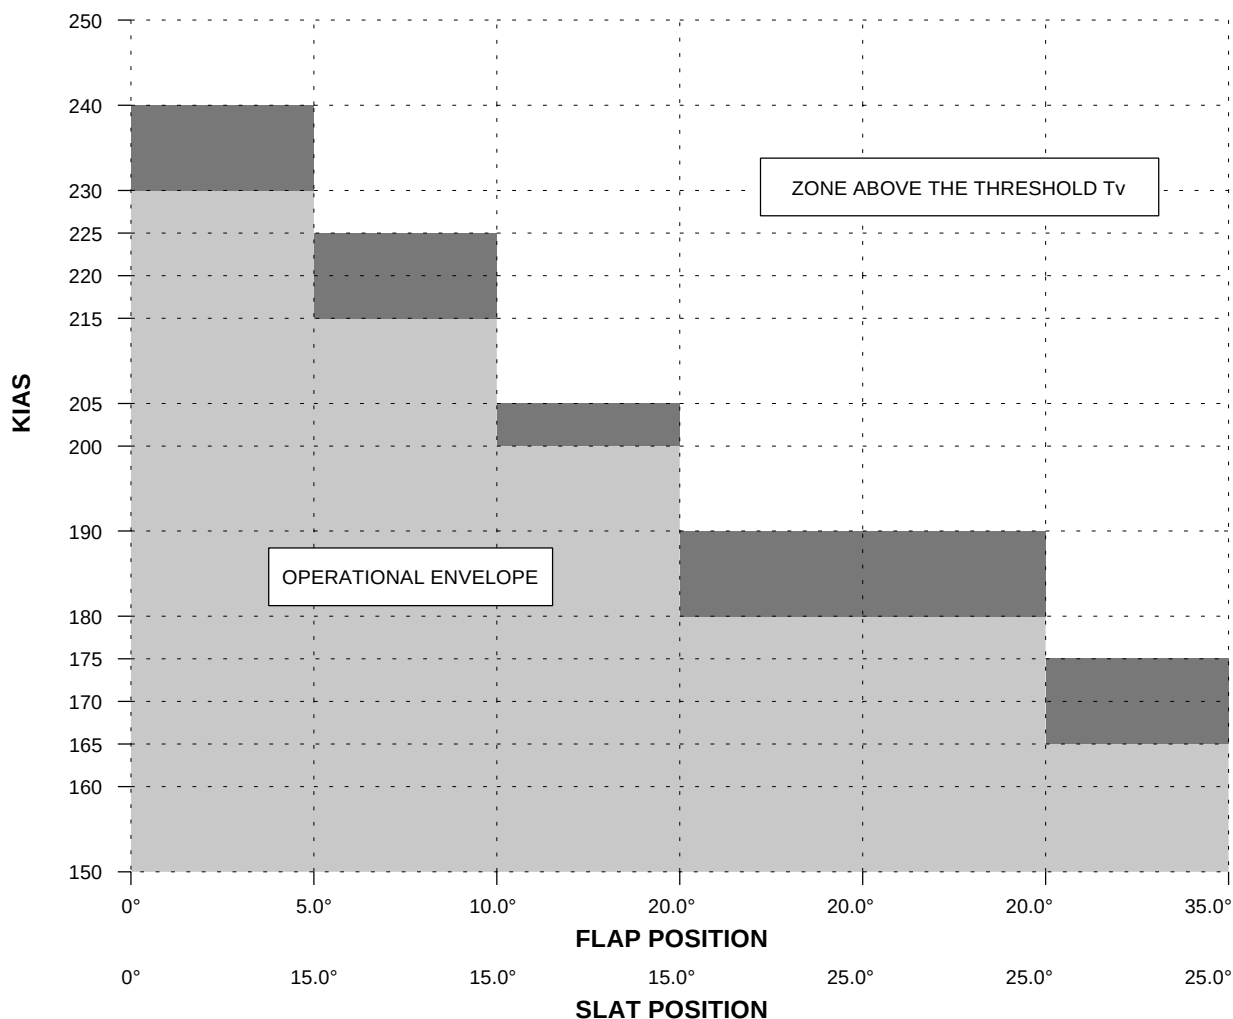

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050151C.DGN




EFFECTIVITY: ALL

Maximum Flap / Slat Extended Speed and Thresholds

Figure 602 - Sheet 2

MAXIMUM FLAP/SLAT EXTENDED SPEED AND THRESHOLDS

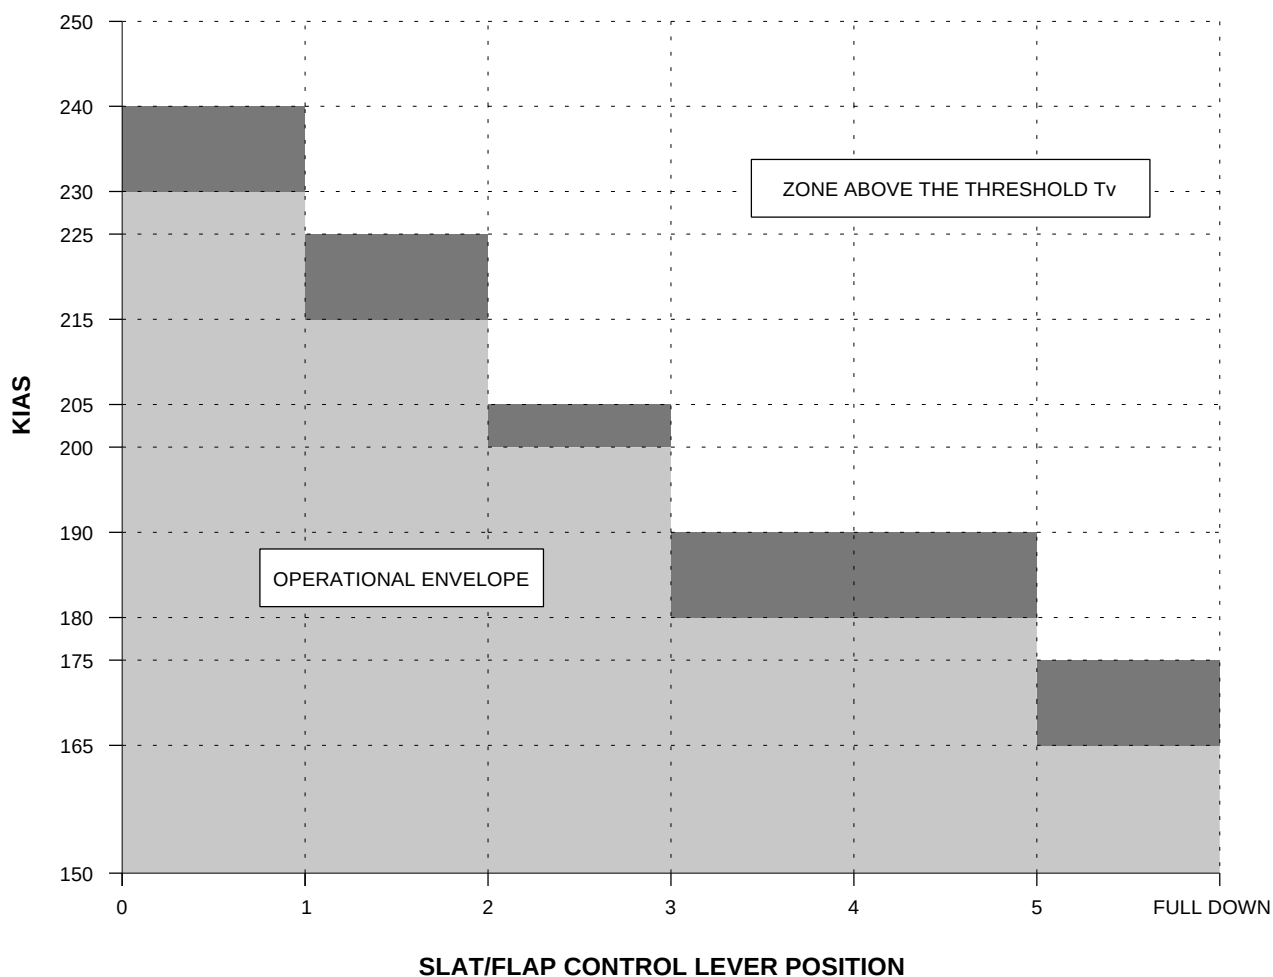

-  **ZONE ABOVE THE THRESHOLD (Tv)**
-  **ZONE WITHIN THE OPERATIONAL ENVELOPE**
-  **ZONE ABOVE THE OPERATIONAL ENVELOPE AND BELOW THE THRESHOLD (Tv)**

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351

EM170MPP050423A.DGN



EFFECTIVITY: ALL

Flight Data Source Analysis

Figure 603

Sample	SlatPos	FlapPos	Month	Day	GMT	Airspeed-Cop	Airspeed-Pil
145	0.00				12:40:22	236.5	237.0
146	0.00	0.000	4	16	12:40:23	235.0	236.8
147	0.00				12:40:24	233.5	235.5
148	0.00	0.000			12:40:25	232.3	235.1
149	0.00				12:40:26	231.0	234.6
150	0.00	0.000	4	16	12:40:27	229.5	233.5
151	0.00				12:40:28	228.0	234.1
152	0.00	0.000			12:40:29	226.3	235.3
153	0.00				12:40:30	224.5	236.8
154	0.00	0.000	4	16	12:40:31	223.3	237.3
155	0.00				12:40:32	222.5	236.1
156	0.00	0.000			12:40:33	221.8	236.9
157	0.00				12:40:34	221.3	238.0
158	0.00	0.000	4	16	12:40:35	221.0	240.2
159	0.00				12:40:36	219.8	239.2
160	0.00	0.000			12:40:37	220.0	238.5
161	0.00				12:40:38	219.3	237.4
162	0.62	0.000	4	16	12:40:39	218.8	236.3
163	2.02				12:40:40	218.0	235.4
164	3.52	0.000			12:40:41	217.5	233.5
165	5.01				12:40:42	216.8	230.2
166	6.50	0.000	4	16	12:40:43	215.5	228.1
167	8.09				12:40:44	214.5	226.4
168	9.58	0.000			12:40:45	213.3	224.3
169	11.07				12:40:46	212.3	222.5
170	12.57	0.000	4	16	12:40:47	211.0	220.7
171	14.15				12:40:48	209.3	218.3
172	14.94	0.000			12:40:49	208.0	216.2
173	14.94				12:40:50	207.3	214.4
174	14.94	0.000	4	16	12:40:51	206.3	212.3
175	14.94				12:40:52	205.3	210.1
176	14.94	0.967			12:40:53	204.0	208.7
177	14.94				12:40:54	203.3	206.3
178	14.94	2.285	4	16	12:40:55	202.3	203.3
179	14.94				12:40:56	201.0	201.5
180	14.94	3.604			12:40:57	199.8	200.3
181	14.94				12:40:58	198.5	199.0
182	14.94	4.922	4	16	12:40:59	197.0	197.5
183	14.94				12:41:00	195.8	196.3
184	14.94	6.240			12:41:01	194.3	195.0
185	14.94				12:41:02	193.3	193.8
186	14.94	6.943	4	16	12:41:03	192.0	192.5
187	14.94				12:41:04	190.5	191.3
188	14.94	6.943			12:41:05	189.5	190.3
189	14.94				12:41:06	189.0	189.5
190	14.94	6.943	4	16	12:41:07	188.8	190.0
191	14.94				12:41:08	189.3	190.3
192	14.94	6.943			12:41:09	189.5	190.8
193	14.94				12:41:10	190.0	191.0
194	14.94	6.943	4	16	12:41:11	190.0	191.0

NOTE:

DURING FLAP/SLAT TRANSIT, CONSIDER THE NEXT HIGHER FLAP/SLAT POSITION UNTIL SURFACES COMPLETE THE TRANSITION.
EXAMPLE: A) WHEN SLAT IS GOING FROM 0° TO 15°, CONSIDER SLAT POSITION AT 15°.

B) WHEN SLAT IS GOING FROM 25° TO 15°, CONSIDER FLAP POSITION AT 25°.

1 IDENTIFY THE SAMPLES THAT RECORD THE FLAP/SLAT POSITION CHANGE.

2 USING THE OPERATIONAL SPEEDS FOR EACH FLAP/SLAT POSITION, IDENTIFY THE OVERSPEED REGION.

3 IDENTIFY THE SAMPLES THAT RECORD THE SLAT TRANSIT.

4 IDENTIFY THE SAMPLES THAT RECORD THE FLAP TRANSIT.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MPP050172B.DGN



EFFECTIVITY: ALL

Flaps - Actuator Fittings and Gimbals

Figure 604

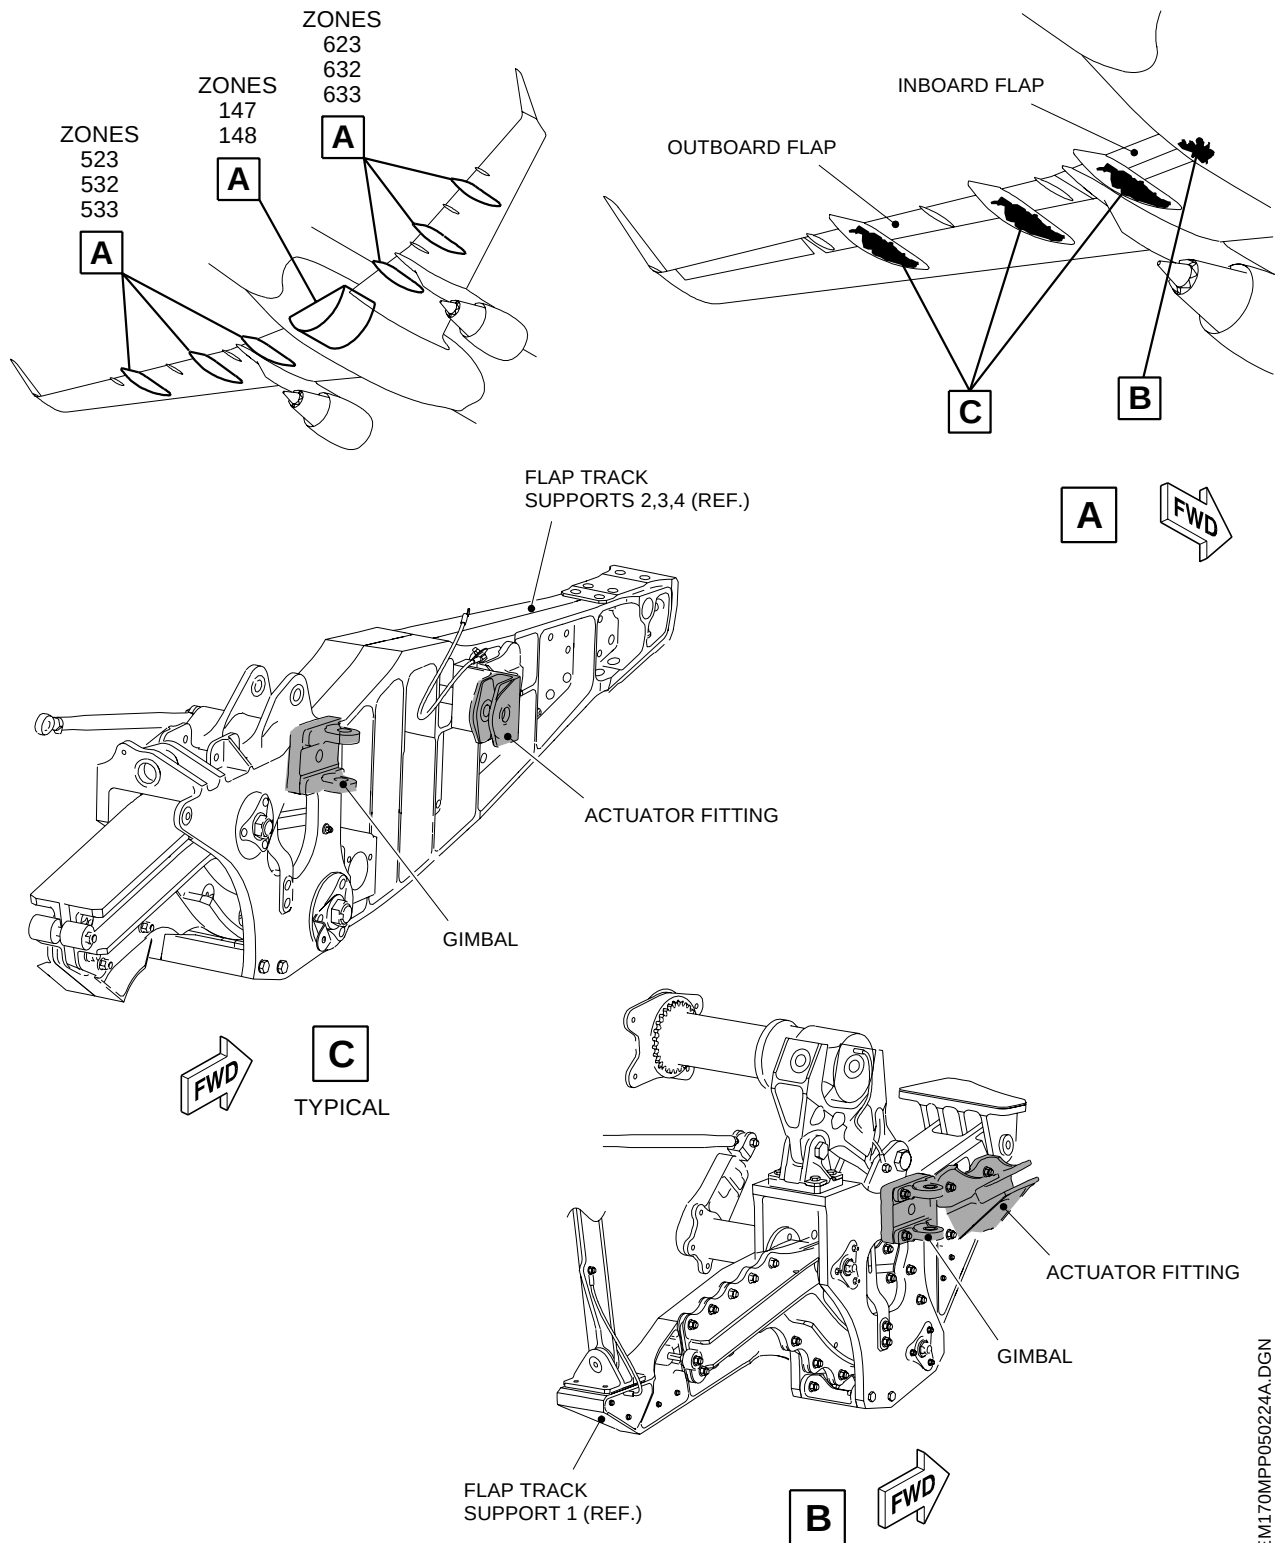


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050224A.DGN



EFFECTIVITY: ALL
Flaps - Track supports
Figure 605

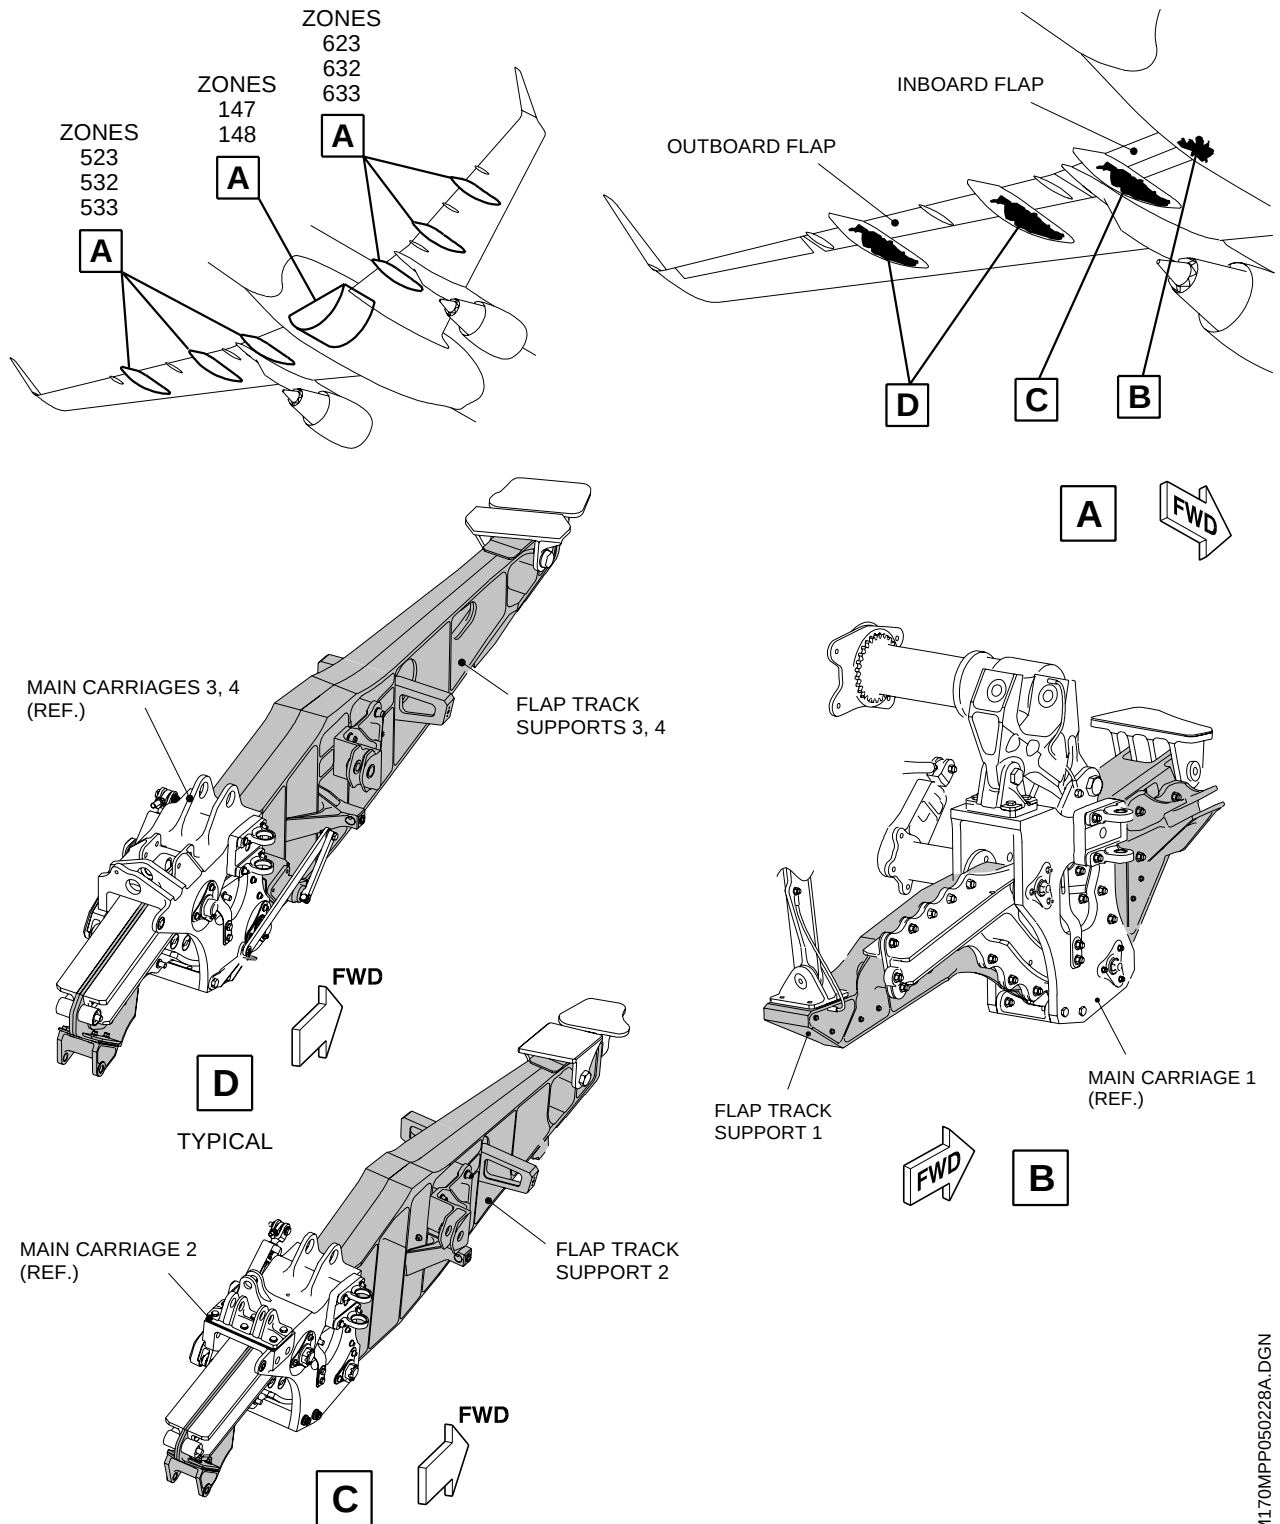

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MPP050228A.DGN



EFFECTIVITY: ALL

Flaps - Main and Aft Carriages

Figure 606 - Sheet 1

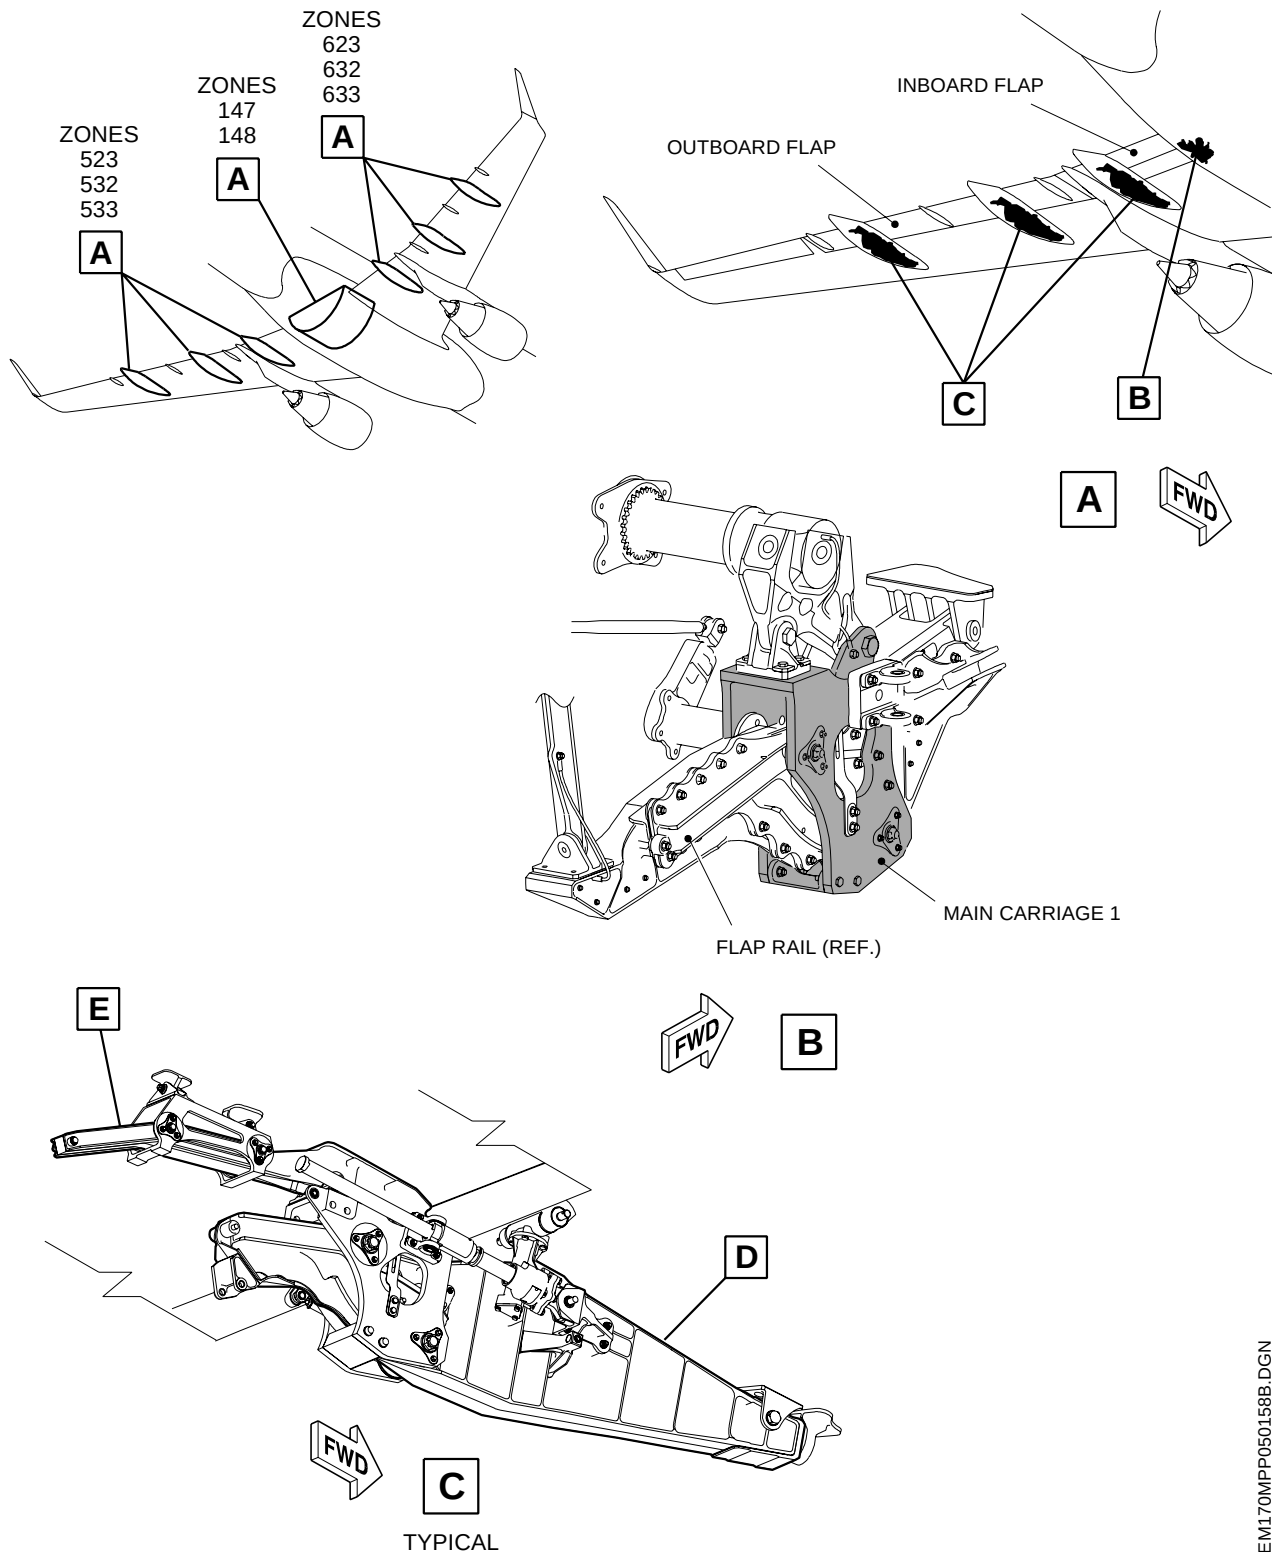

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



EM170MP0050158B.DGN



EFFECTIVITY: ALL

Flaps - Main and Aft Carriages

Figure 606 - Sheet 2

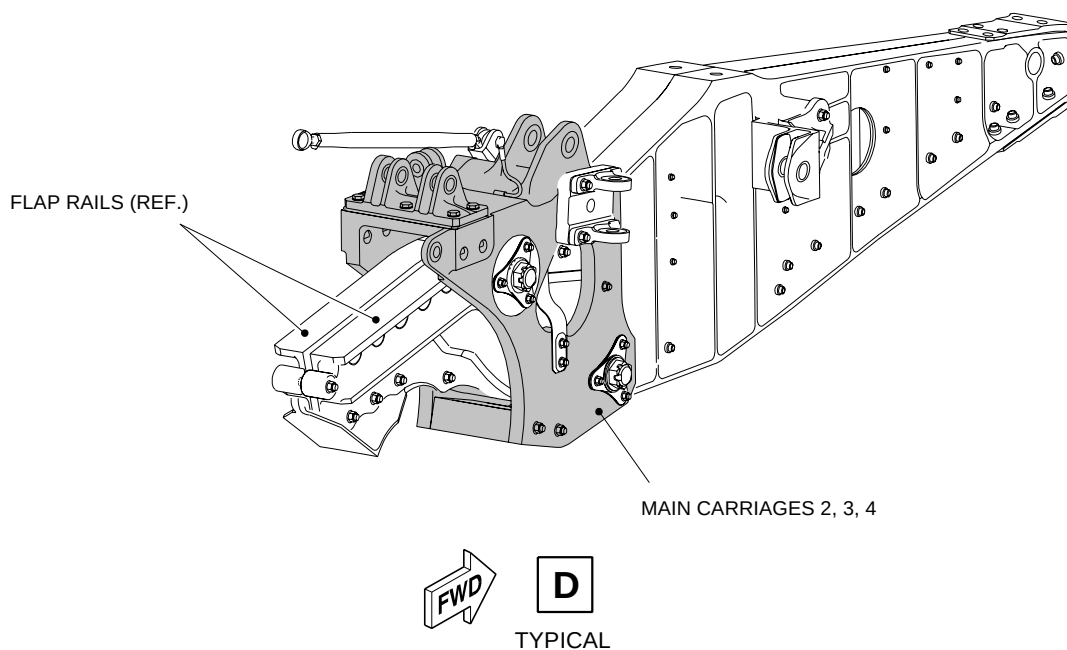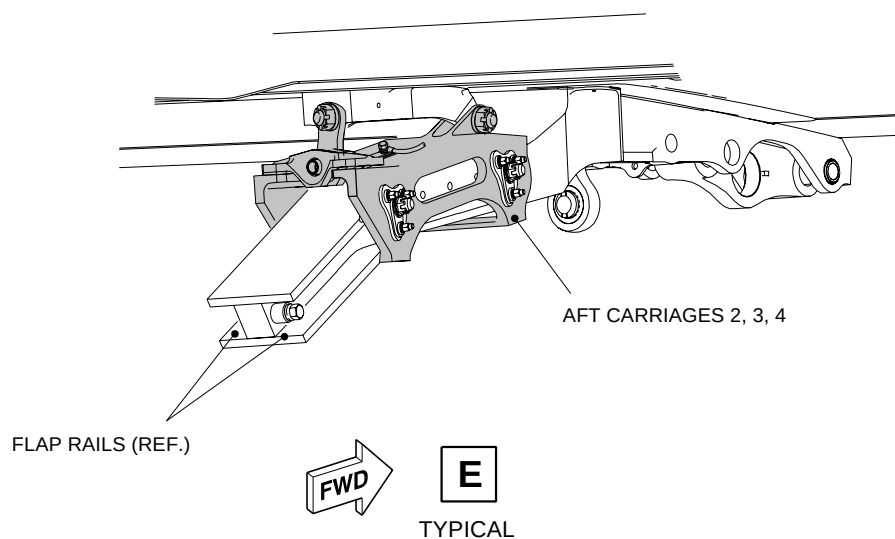


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP050222A.DGN



EFFECTIVITY: ALL
Flaps - Roller Studs
Figure 607 - Sheet 1




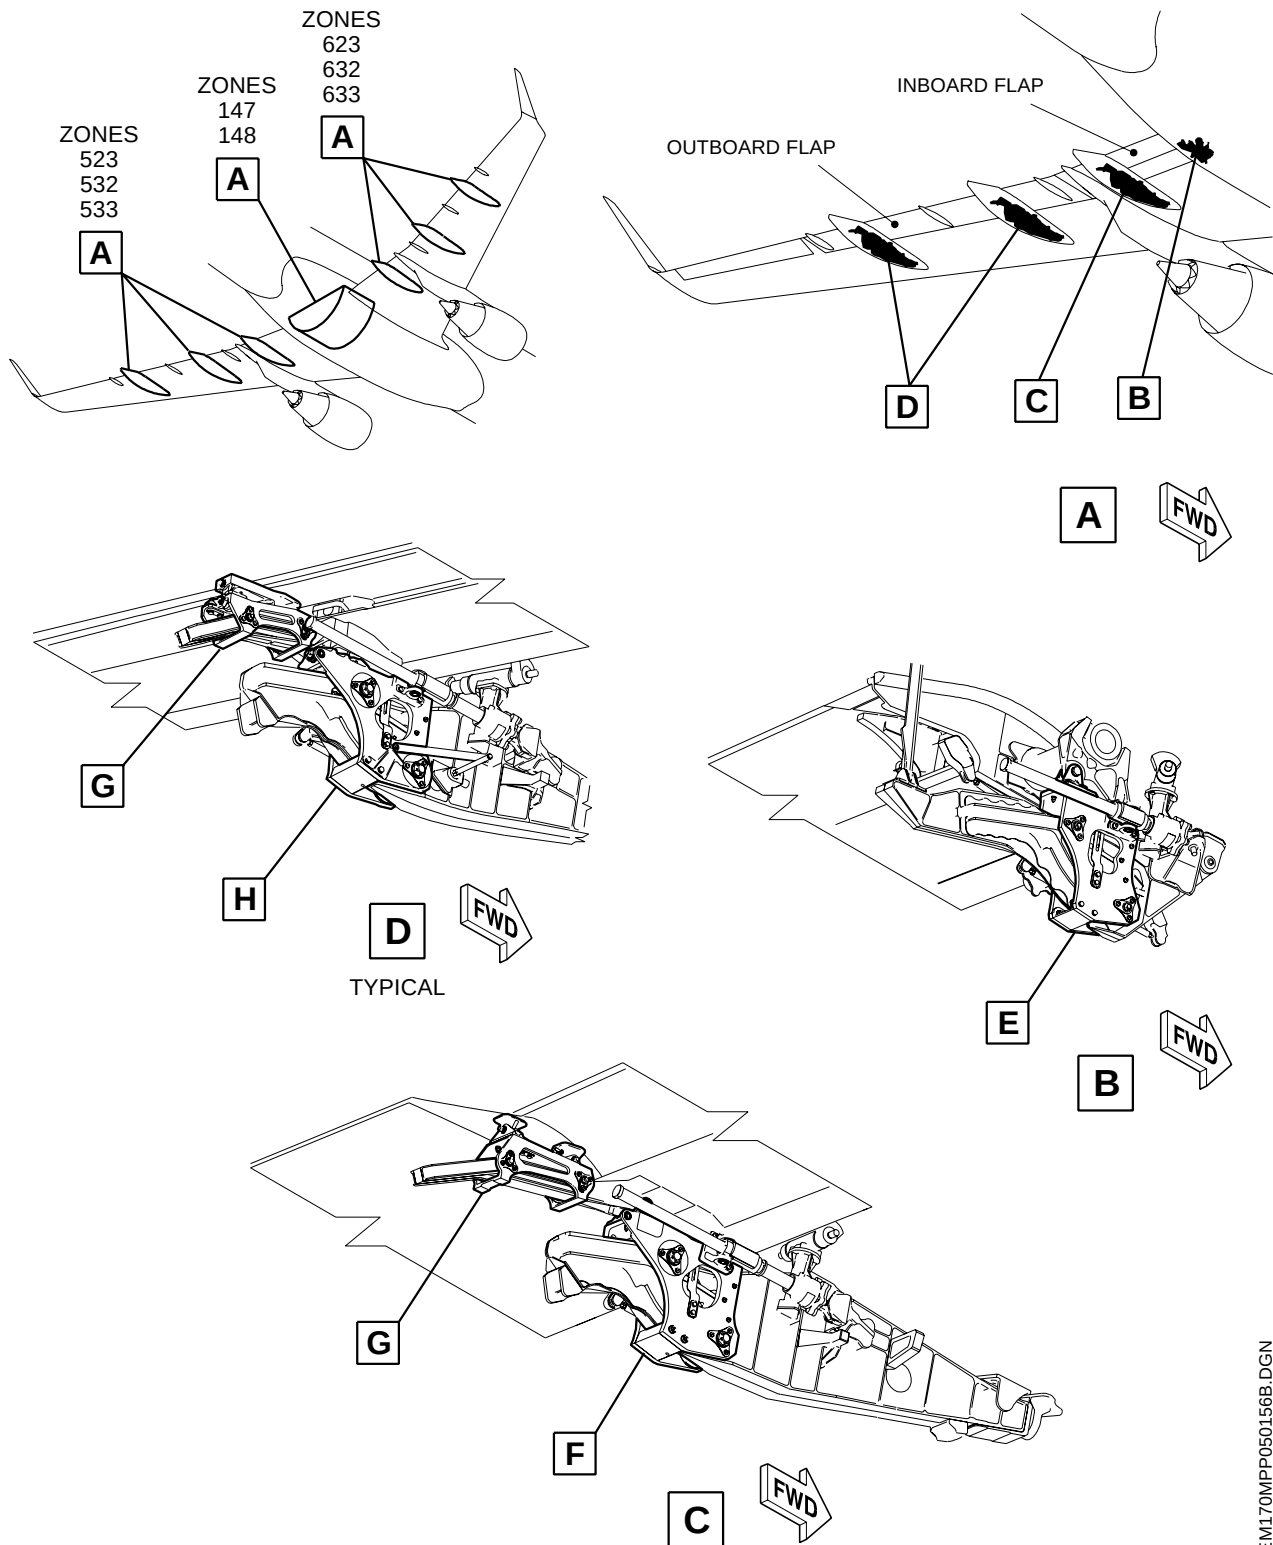


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050156B.DGN



EFFECTIVITY: ALL
Flaps - Roller Studs
Figure 607 - Sheet 2

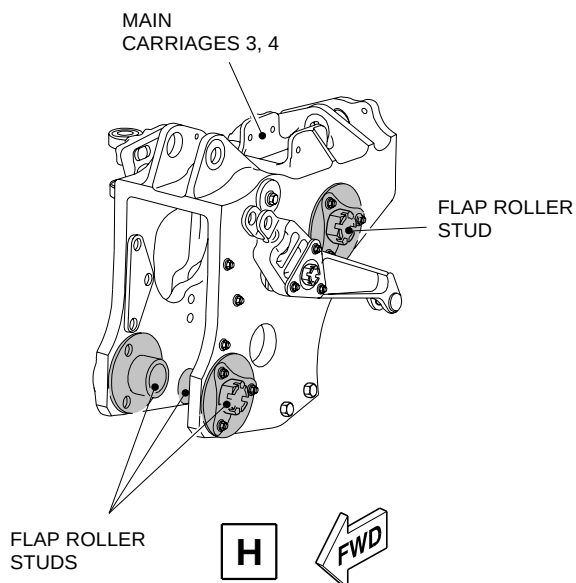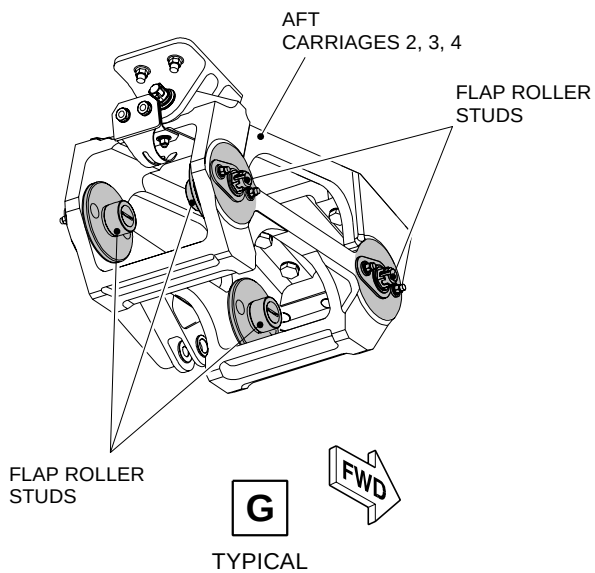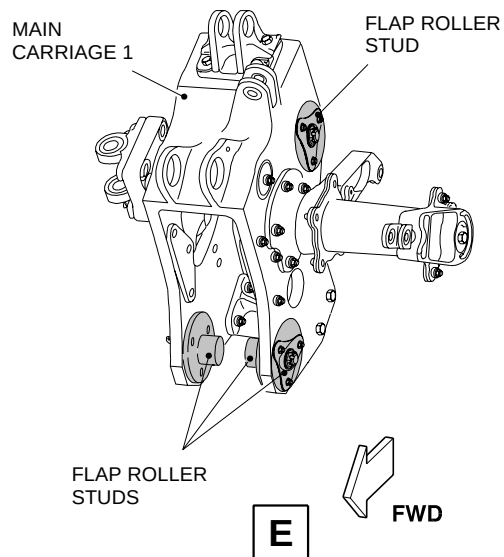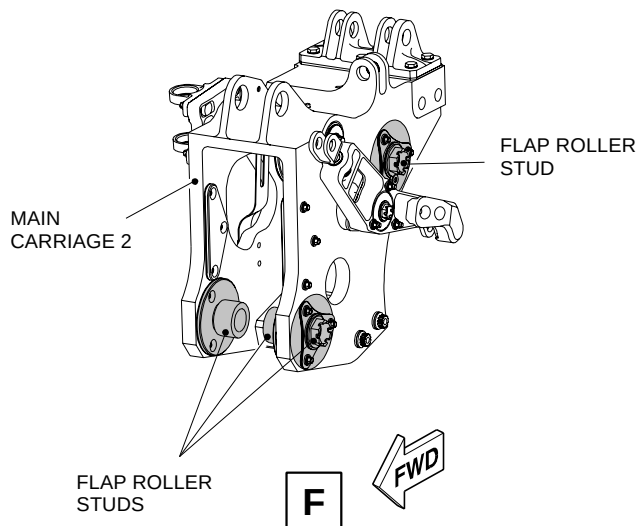

Filtered Serial N° contained in this publication: 344, 351

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MP050220A.DGN



EFFECTIVITY: ALL

Flaps - Rails

Figure 608 - Sheet 1


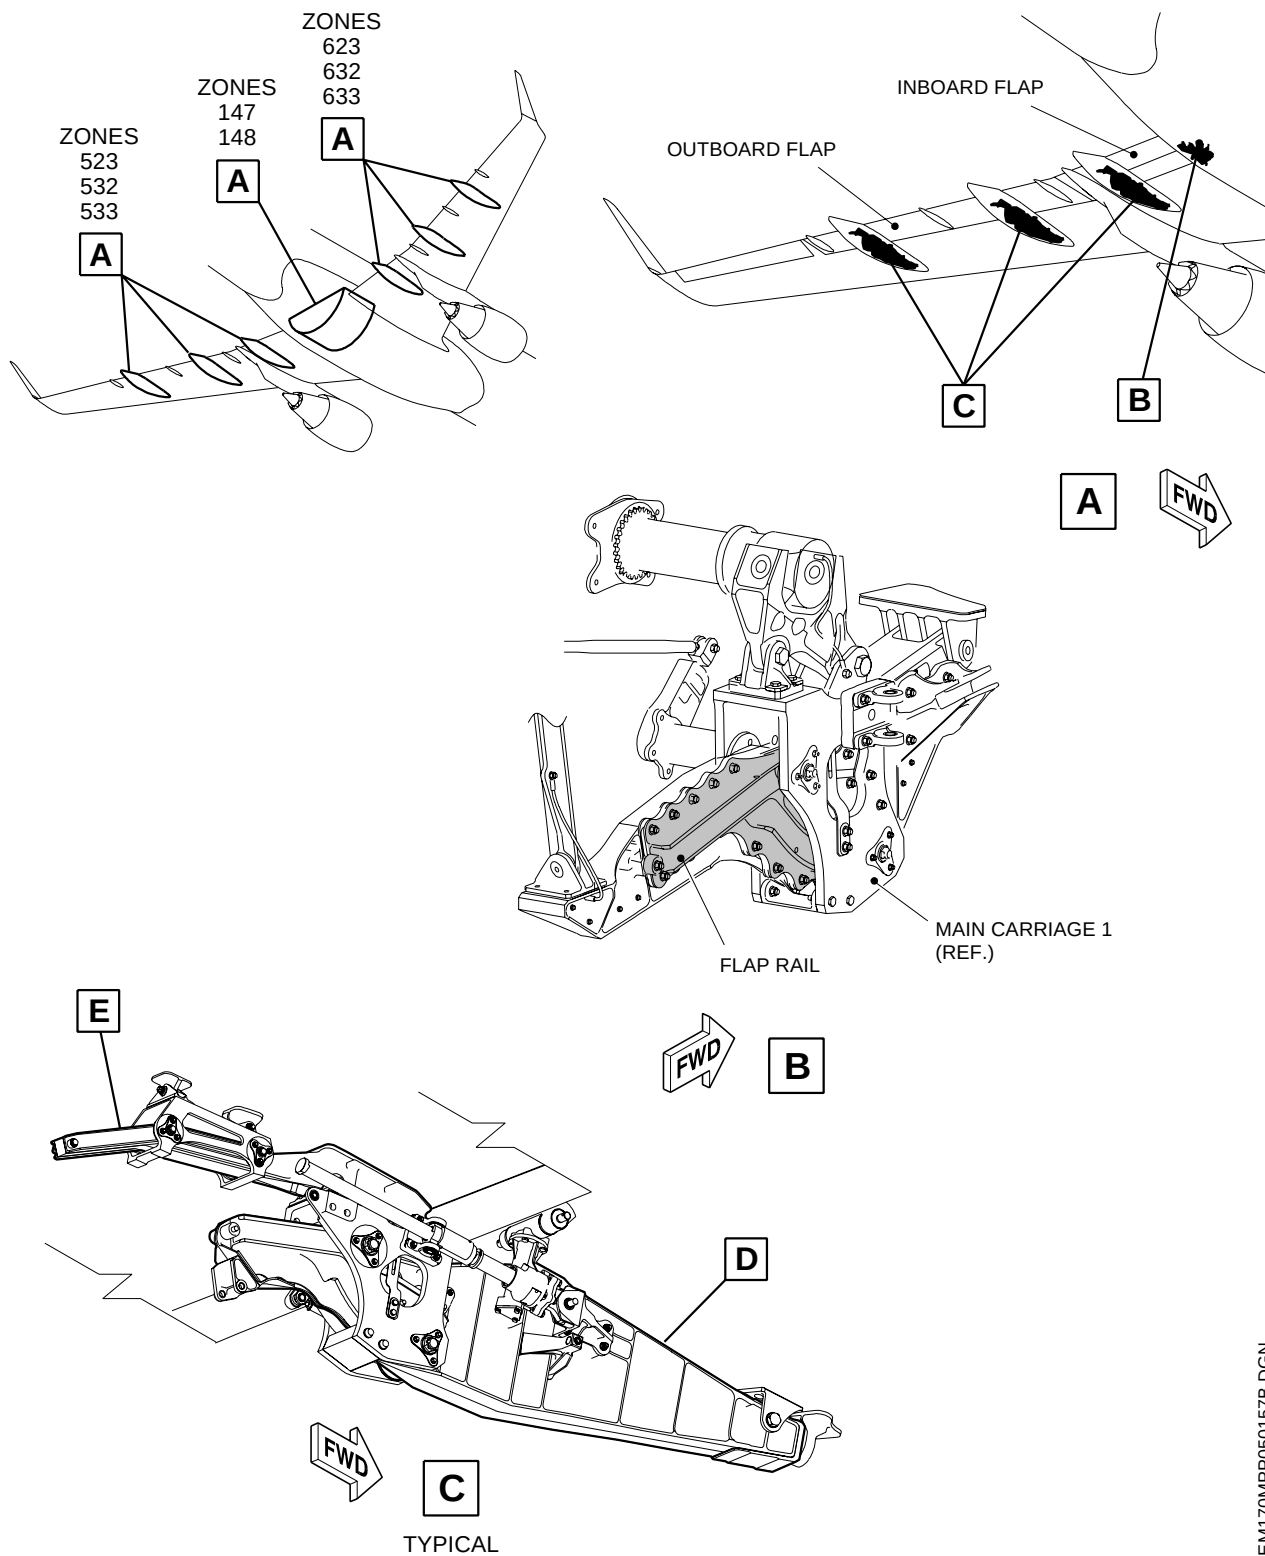


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050157B.DGN



EFFECTIVITY: ALL
Flaps - Rails
Figure 608 - Sheet 2

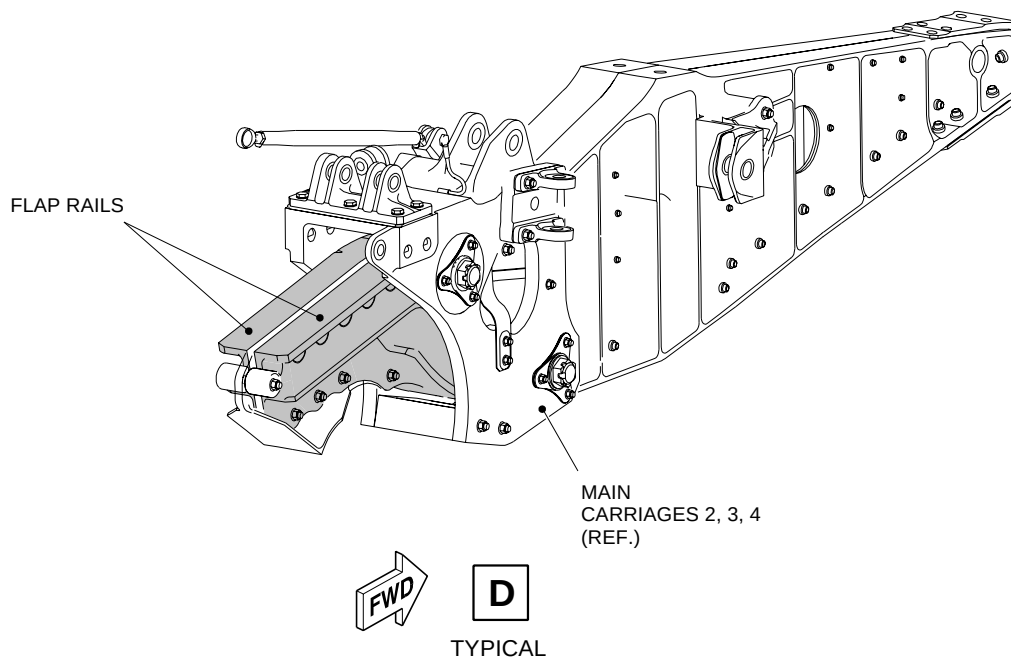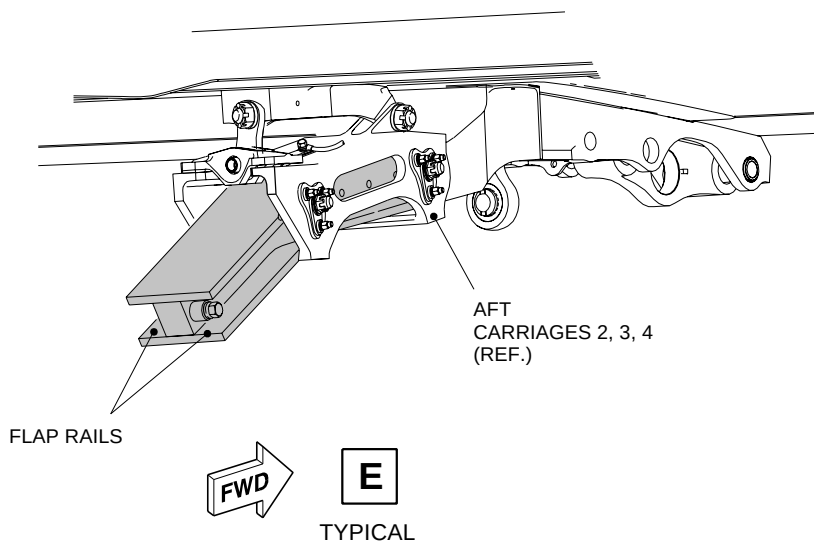

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050221A.DGN



EFFECTIVITY: ALL

Flaps - Skins

Figure 609 - Sheet 1

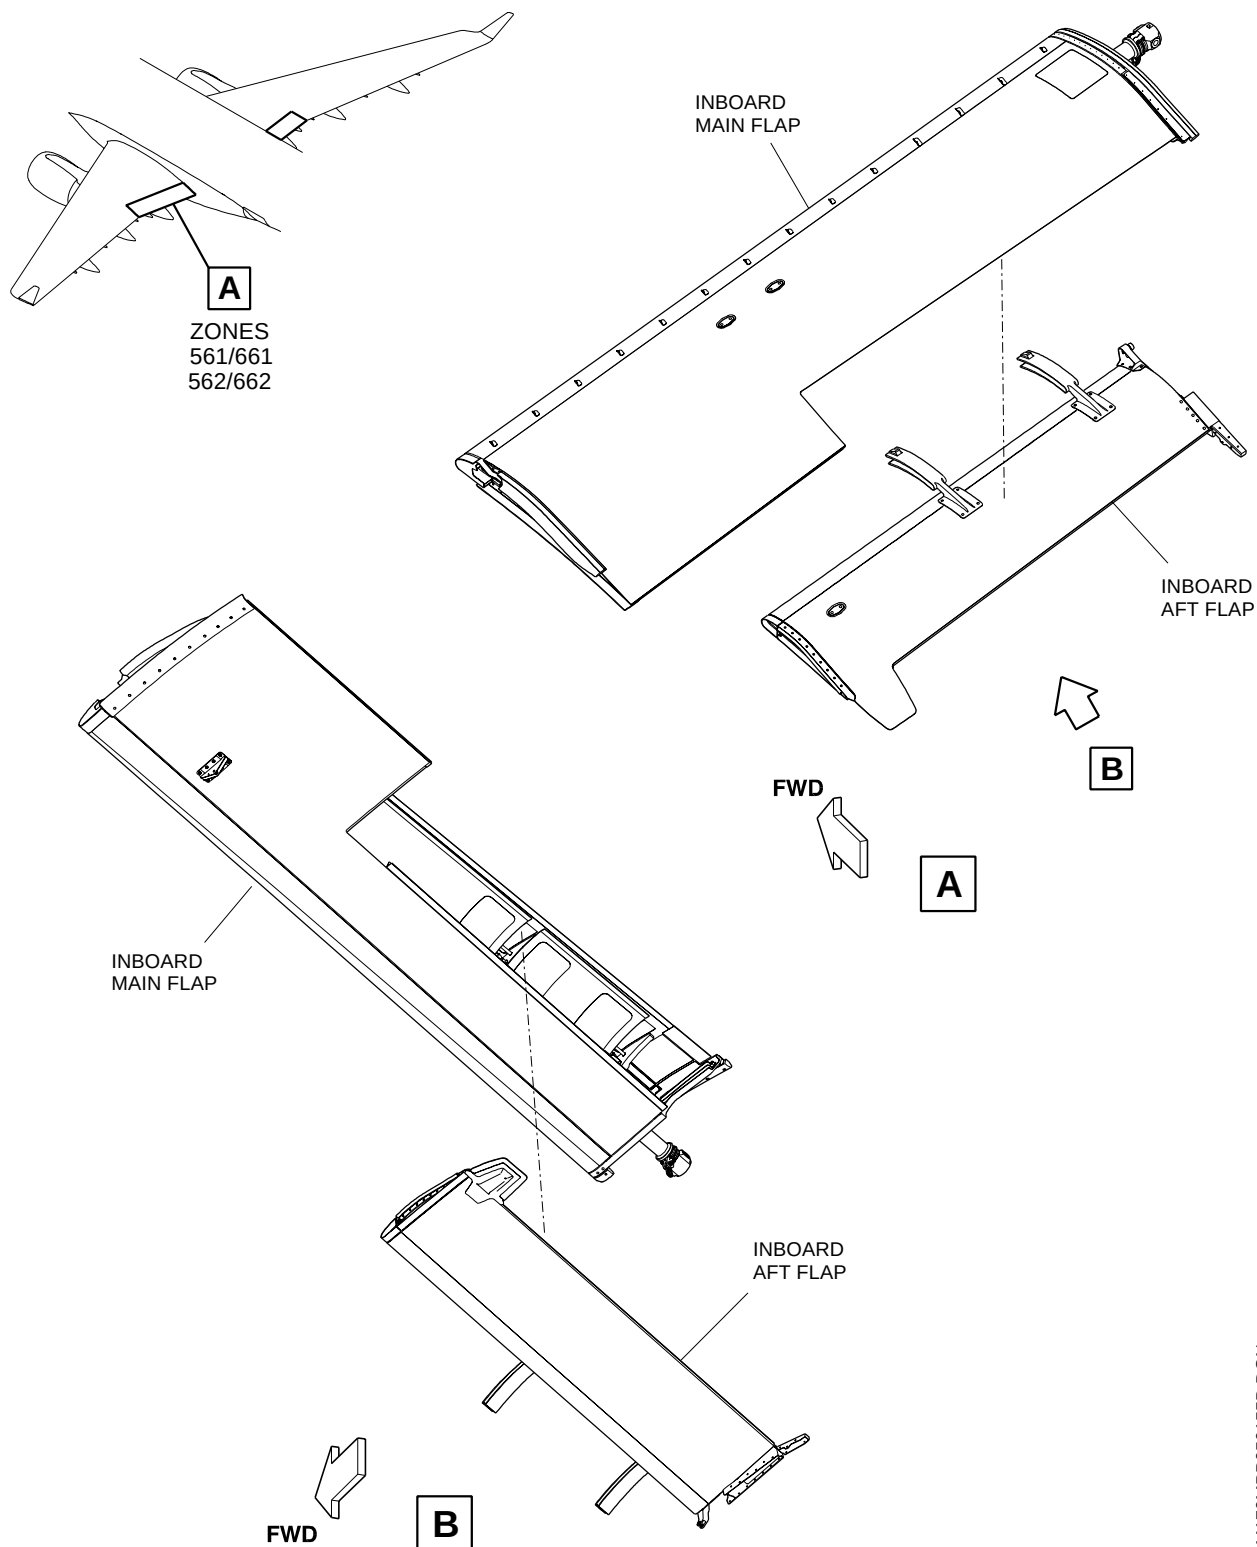


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL
Flaps - Skins
Figure 609 - Sheet 2

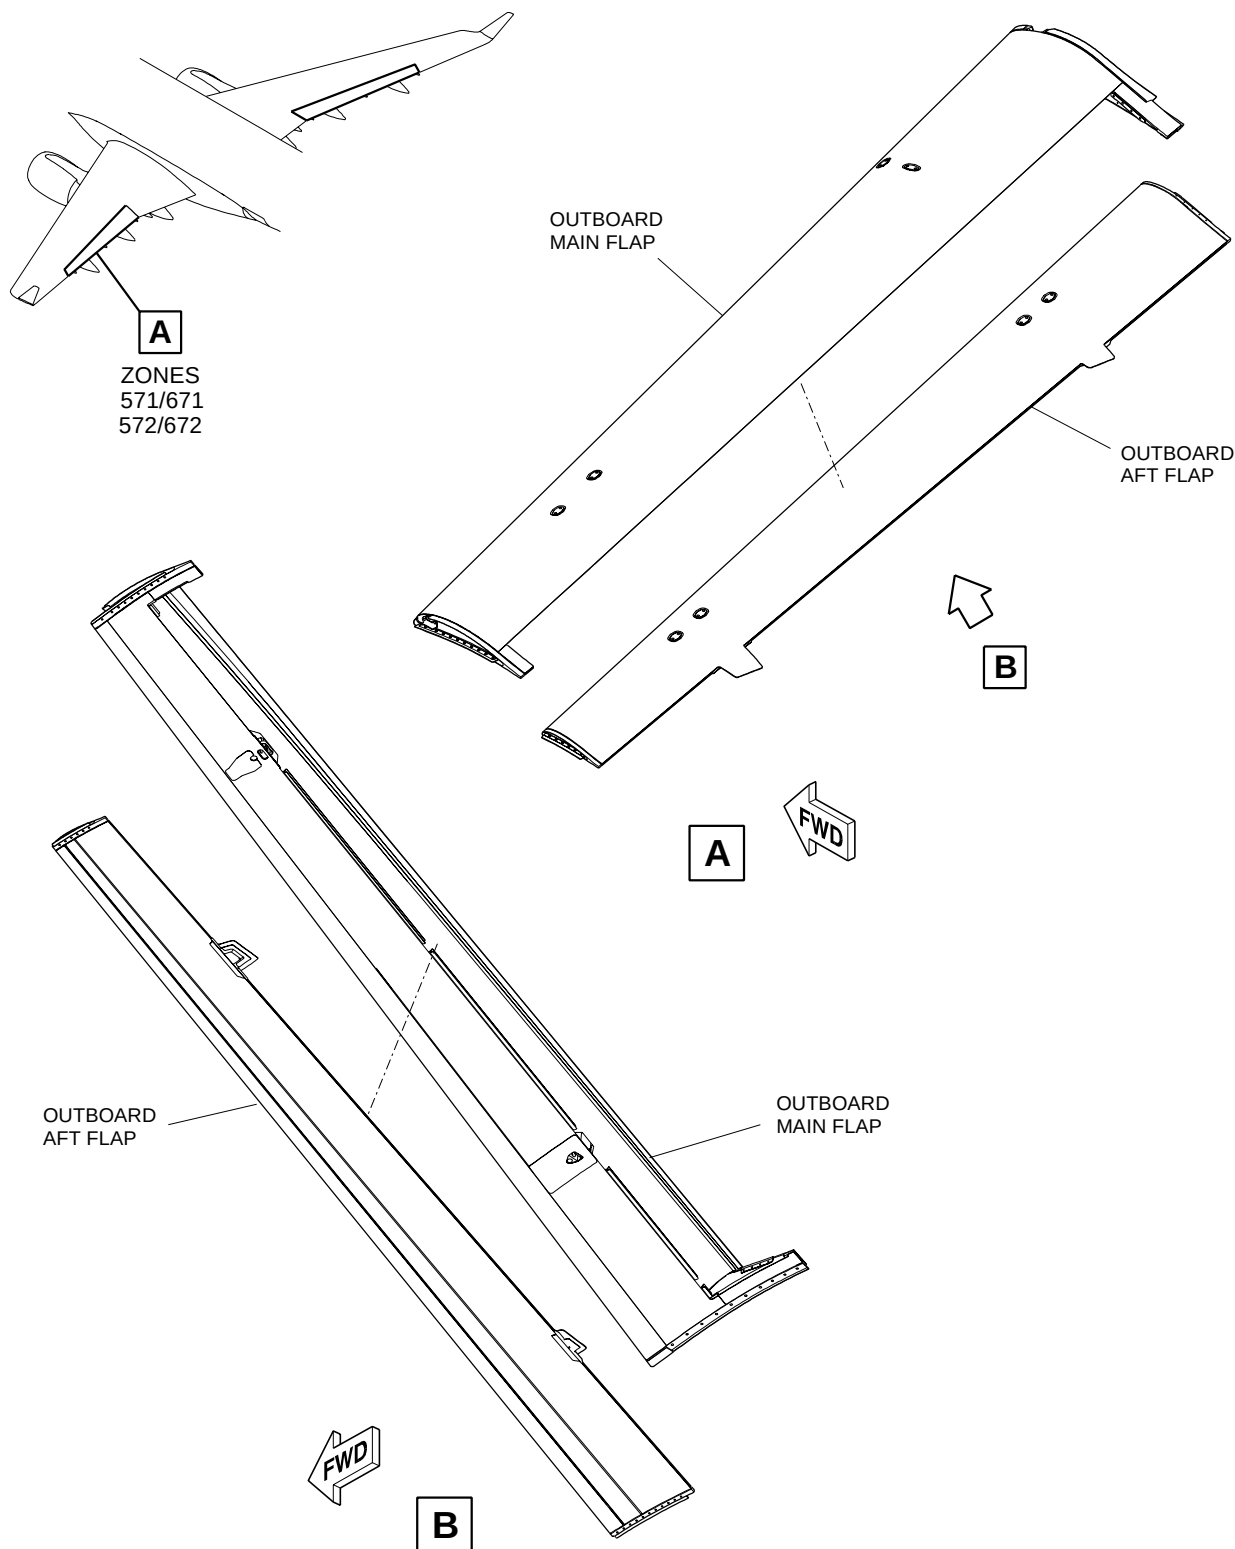

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MPP050240A.DGN



EFFECTIVITY: ALL

Flaps - Track Support Fittings

Figure 610 - Sheet 1

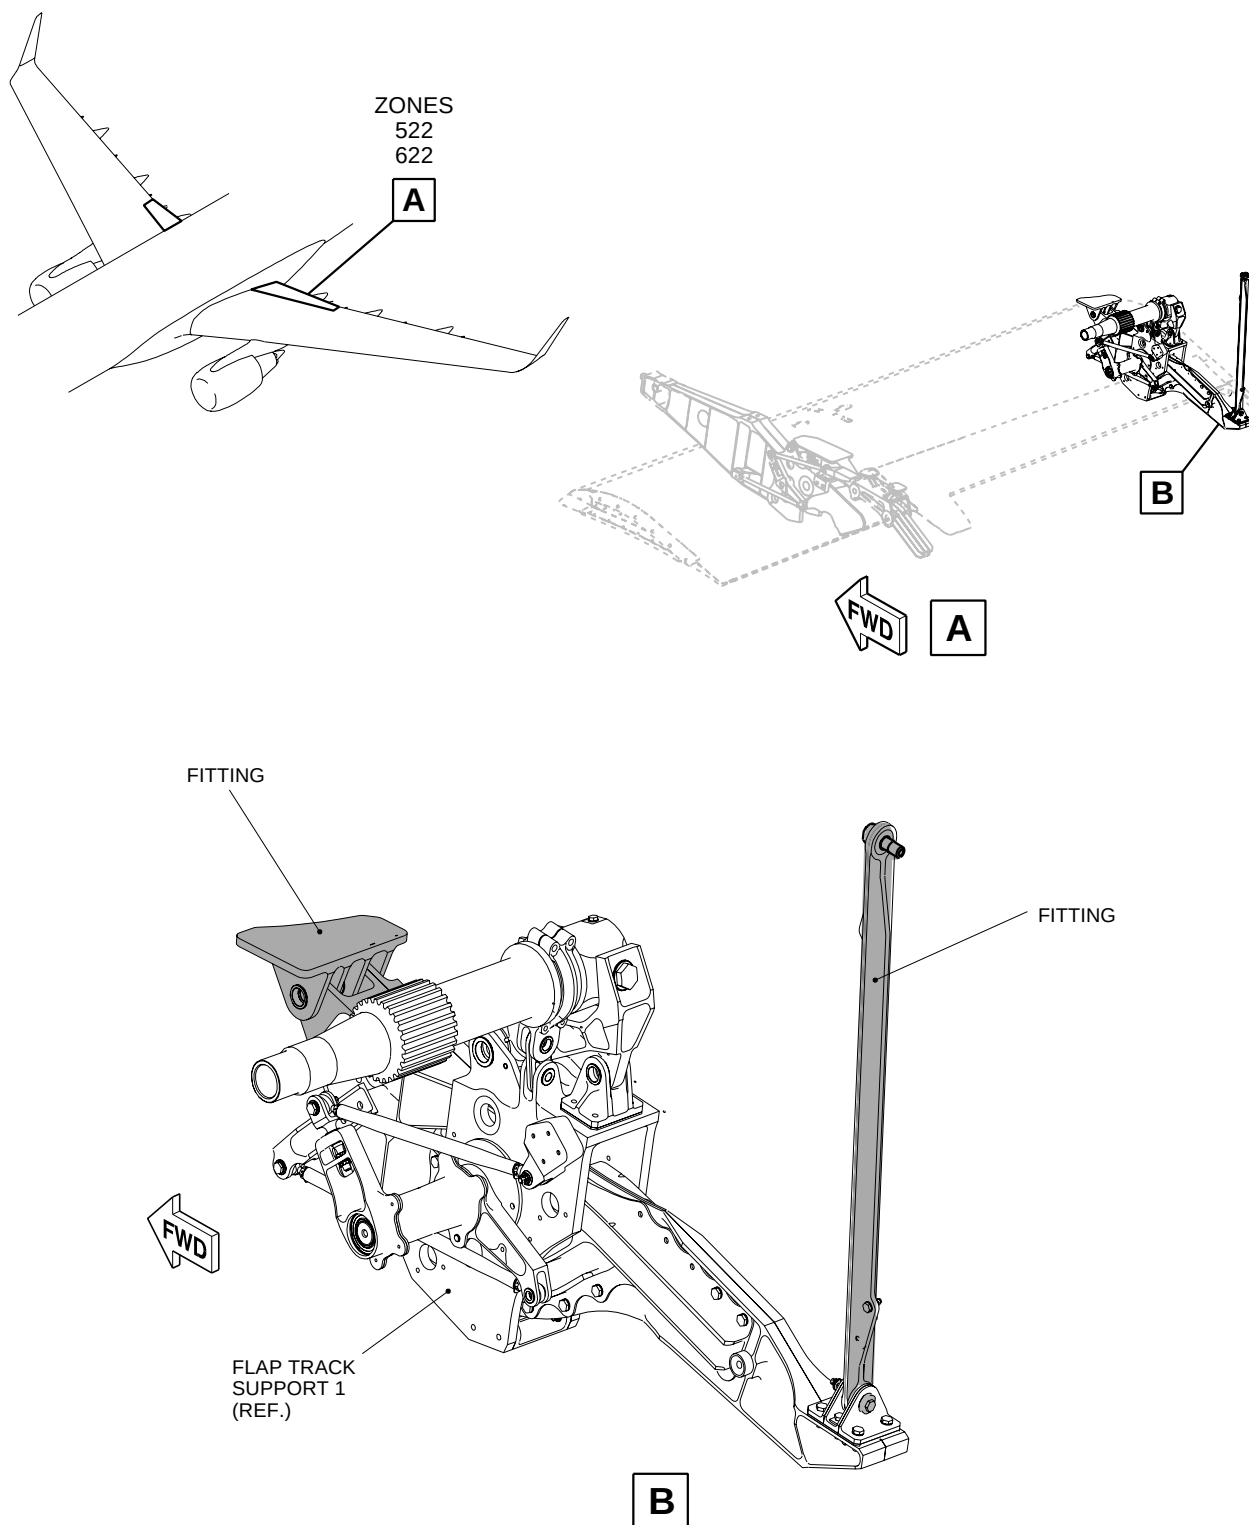

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MP0050161B.DGN



EFFECTIVITY: ALL

Flaps - Track Support Fittings

Figure 610 - Sheet 2

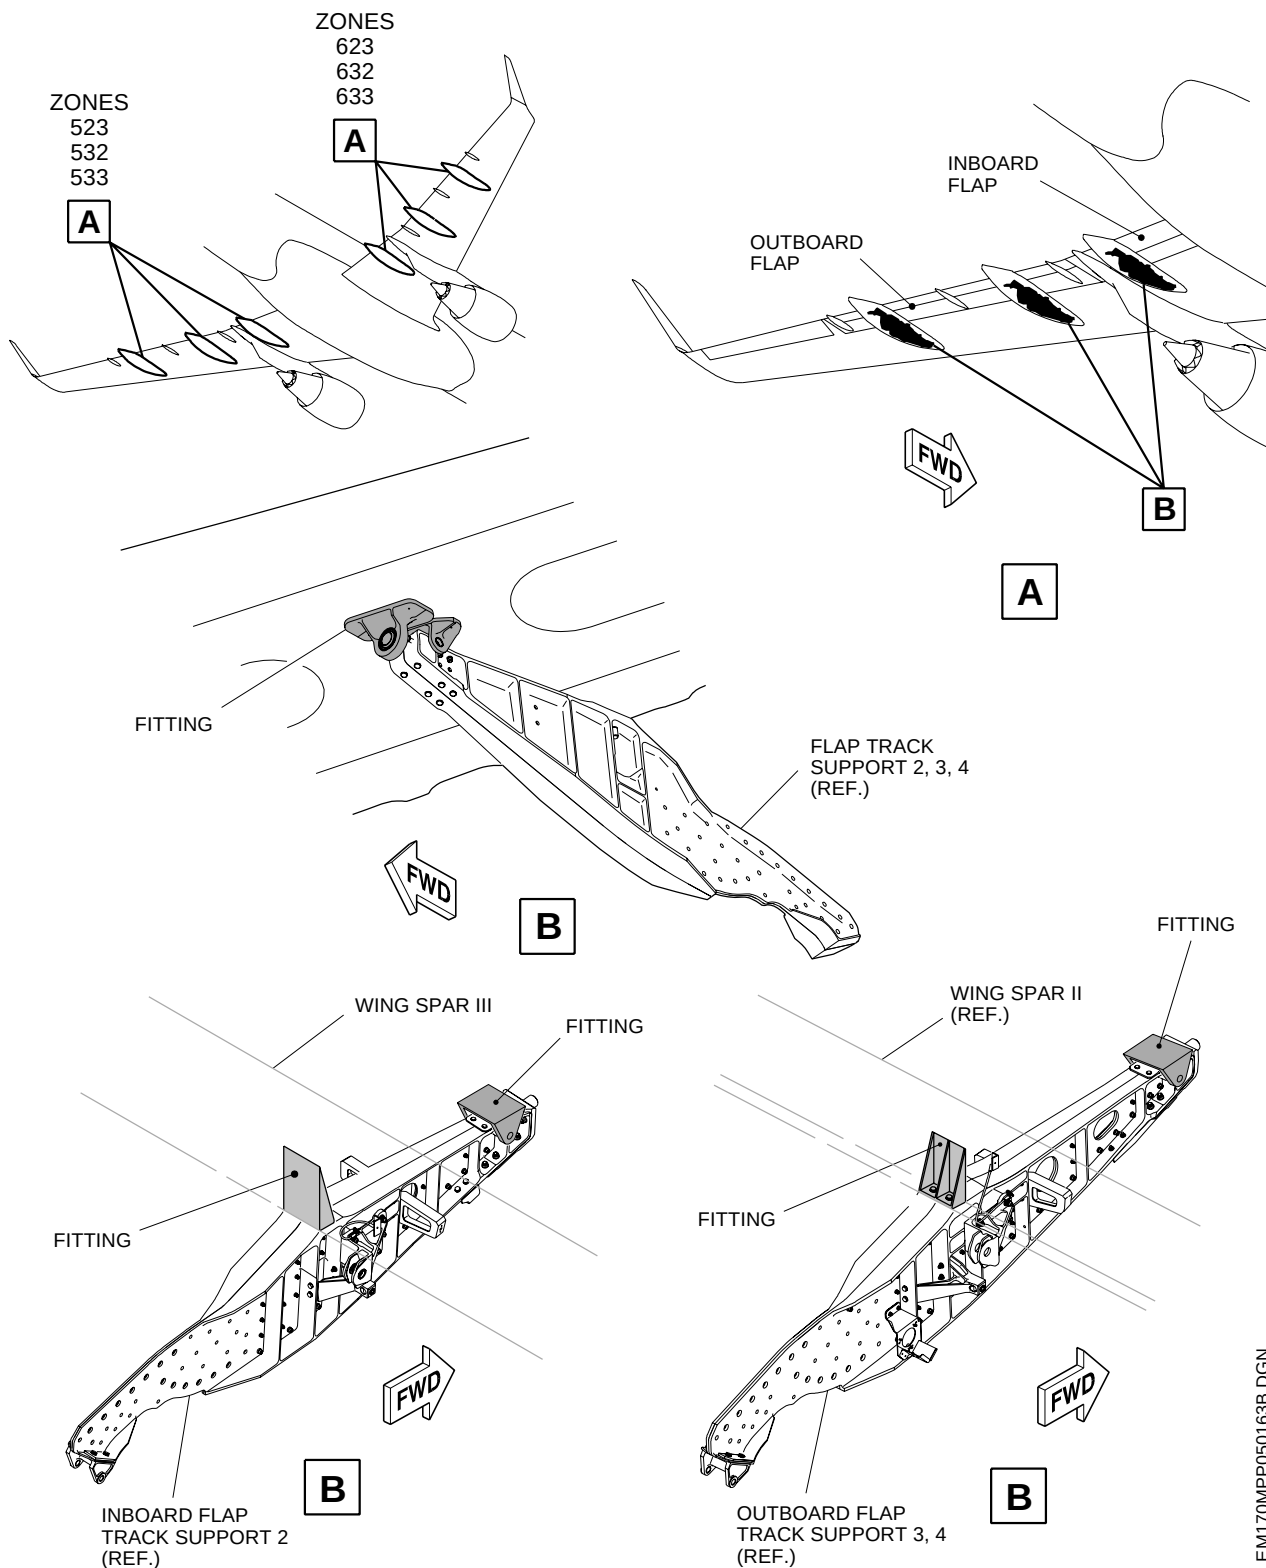

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MP0050163B.DGN



EFFECTIVITY: ALL

Flaps - Torque Tube and Fittings

Figure 611

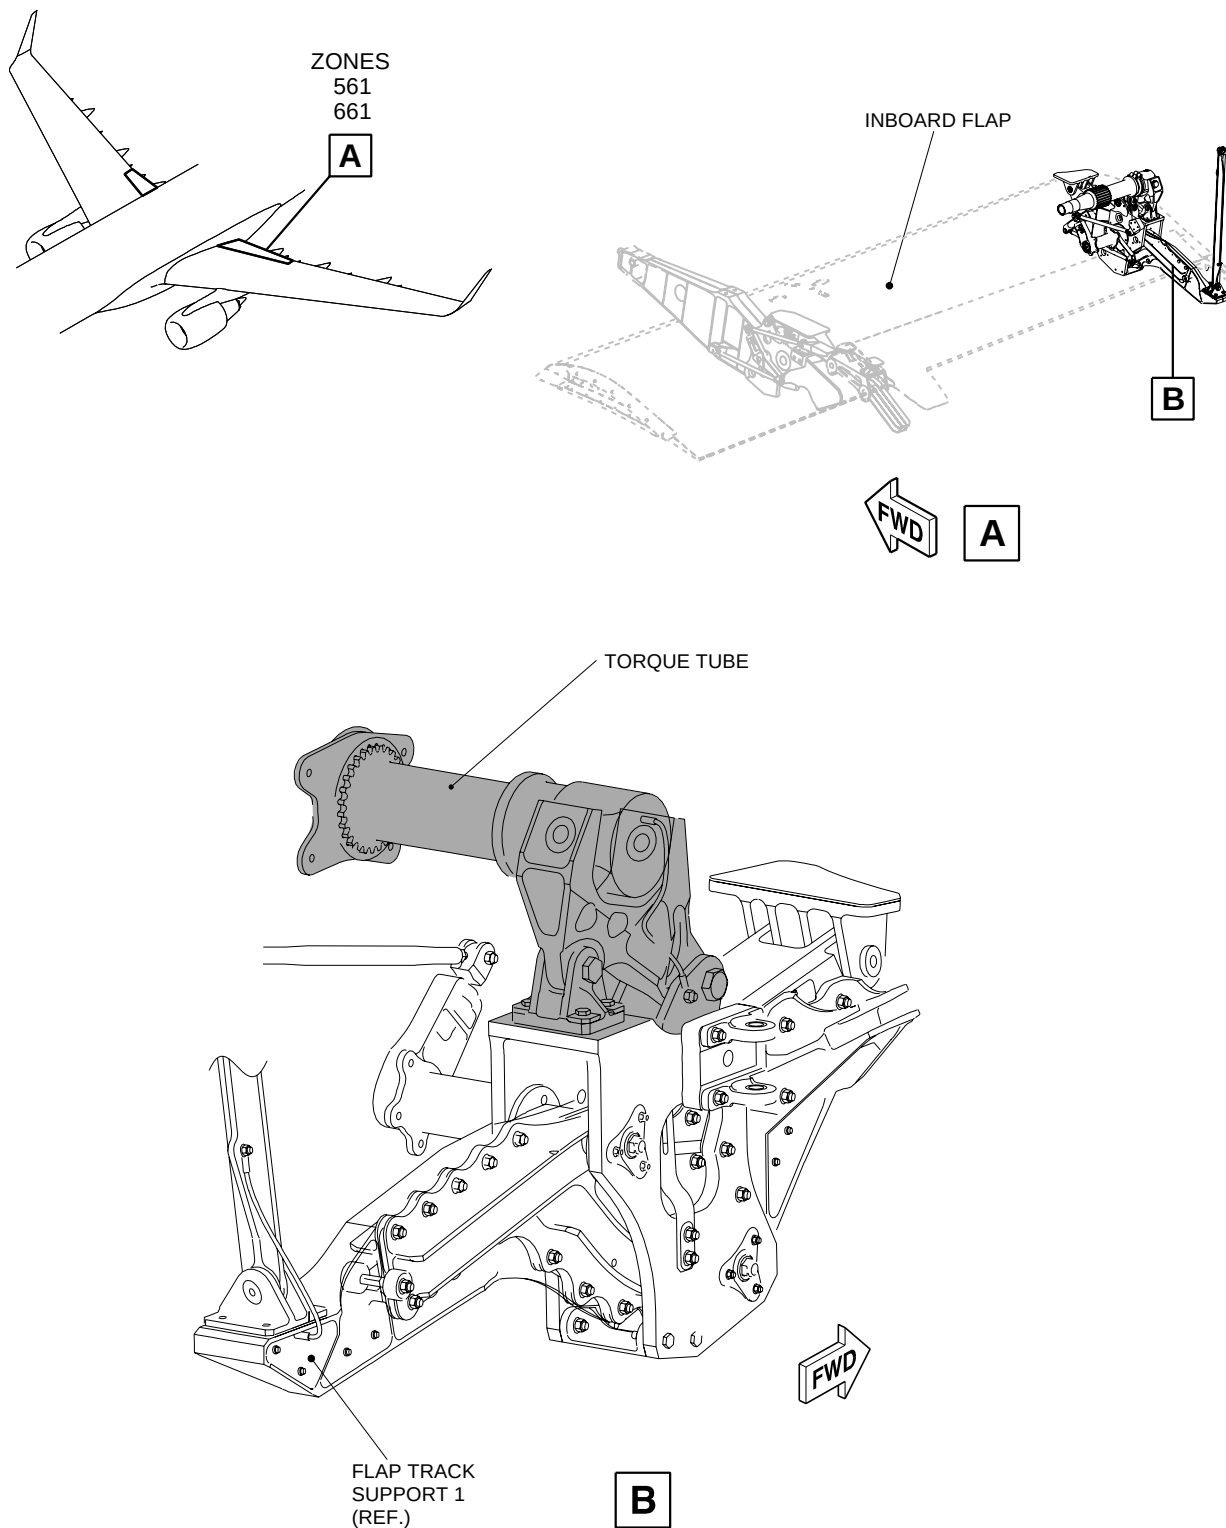

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MPP050233A.DGN



EFFECTIVITY: ALL

Flaps - Internal Structures

Figure 612

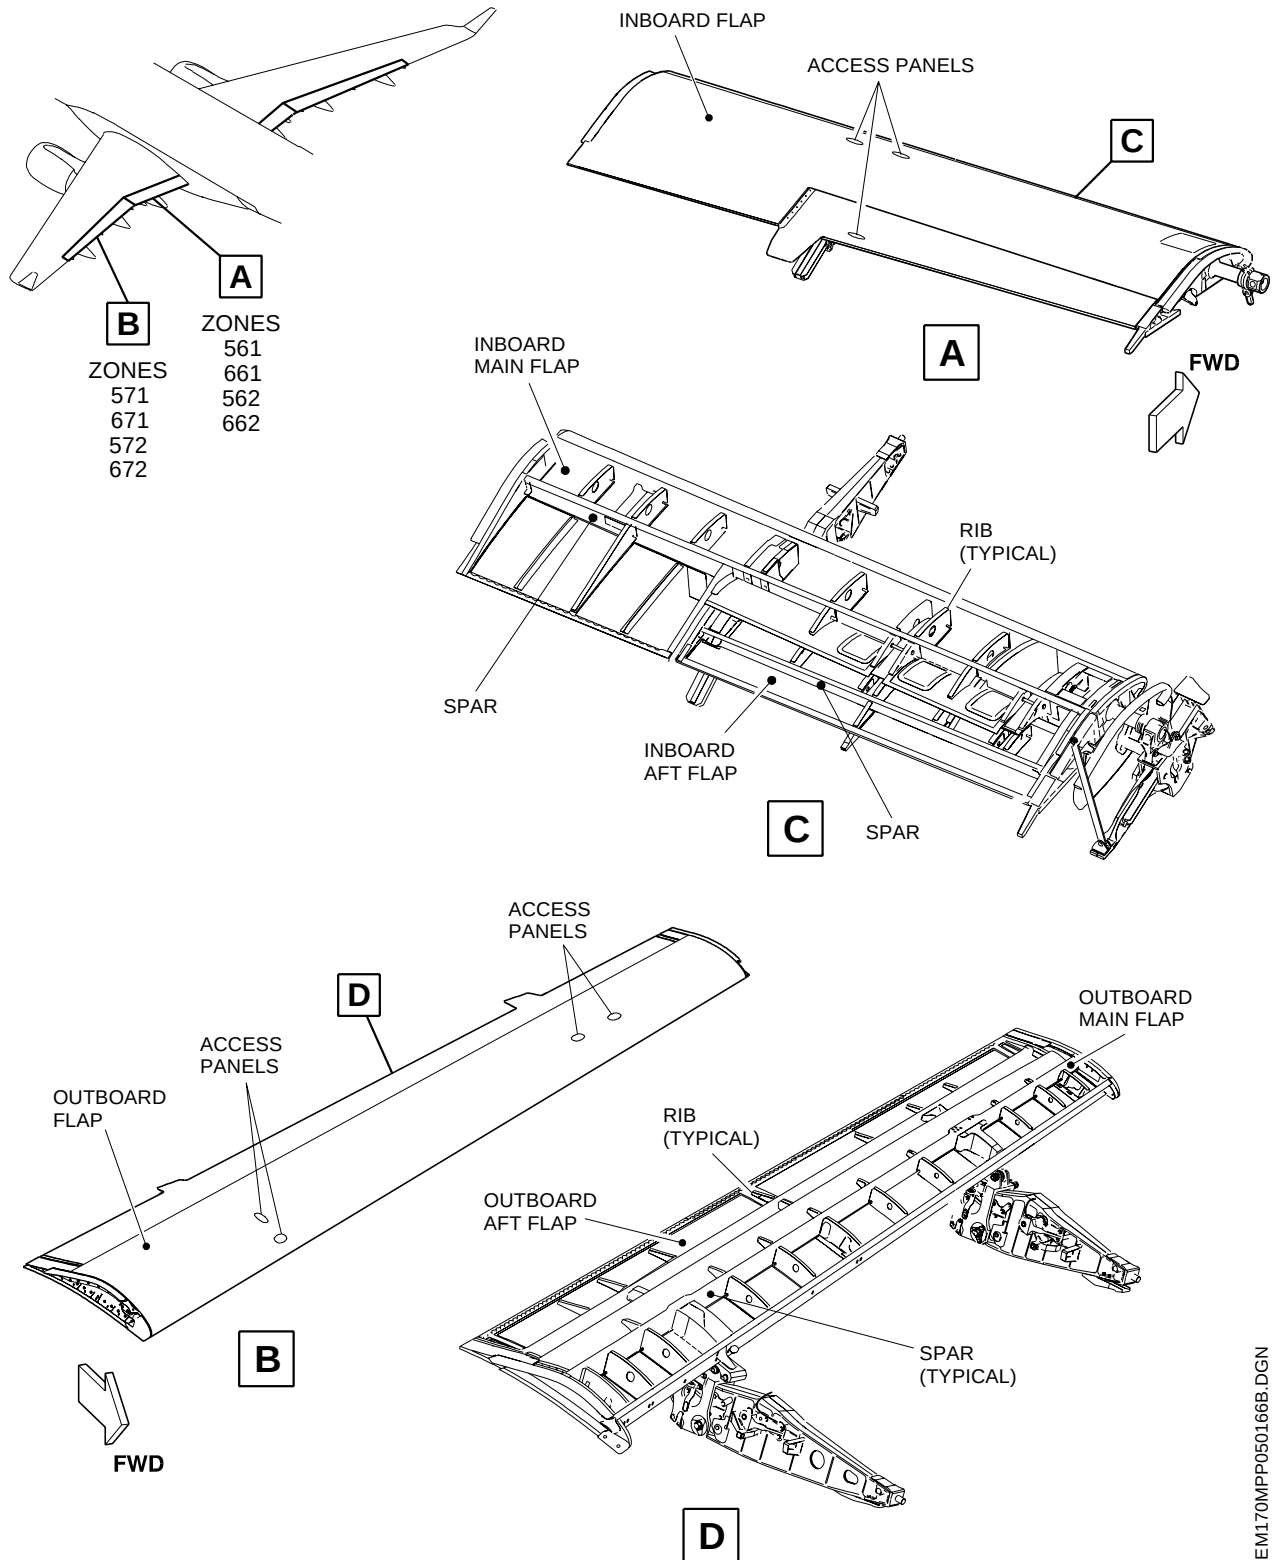

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050166B.DGN



EFFECTIVITY: ALL

Flaps - Main and Aft Carriage Attachments

Figure 613

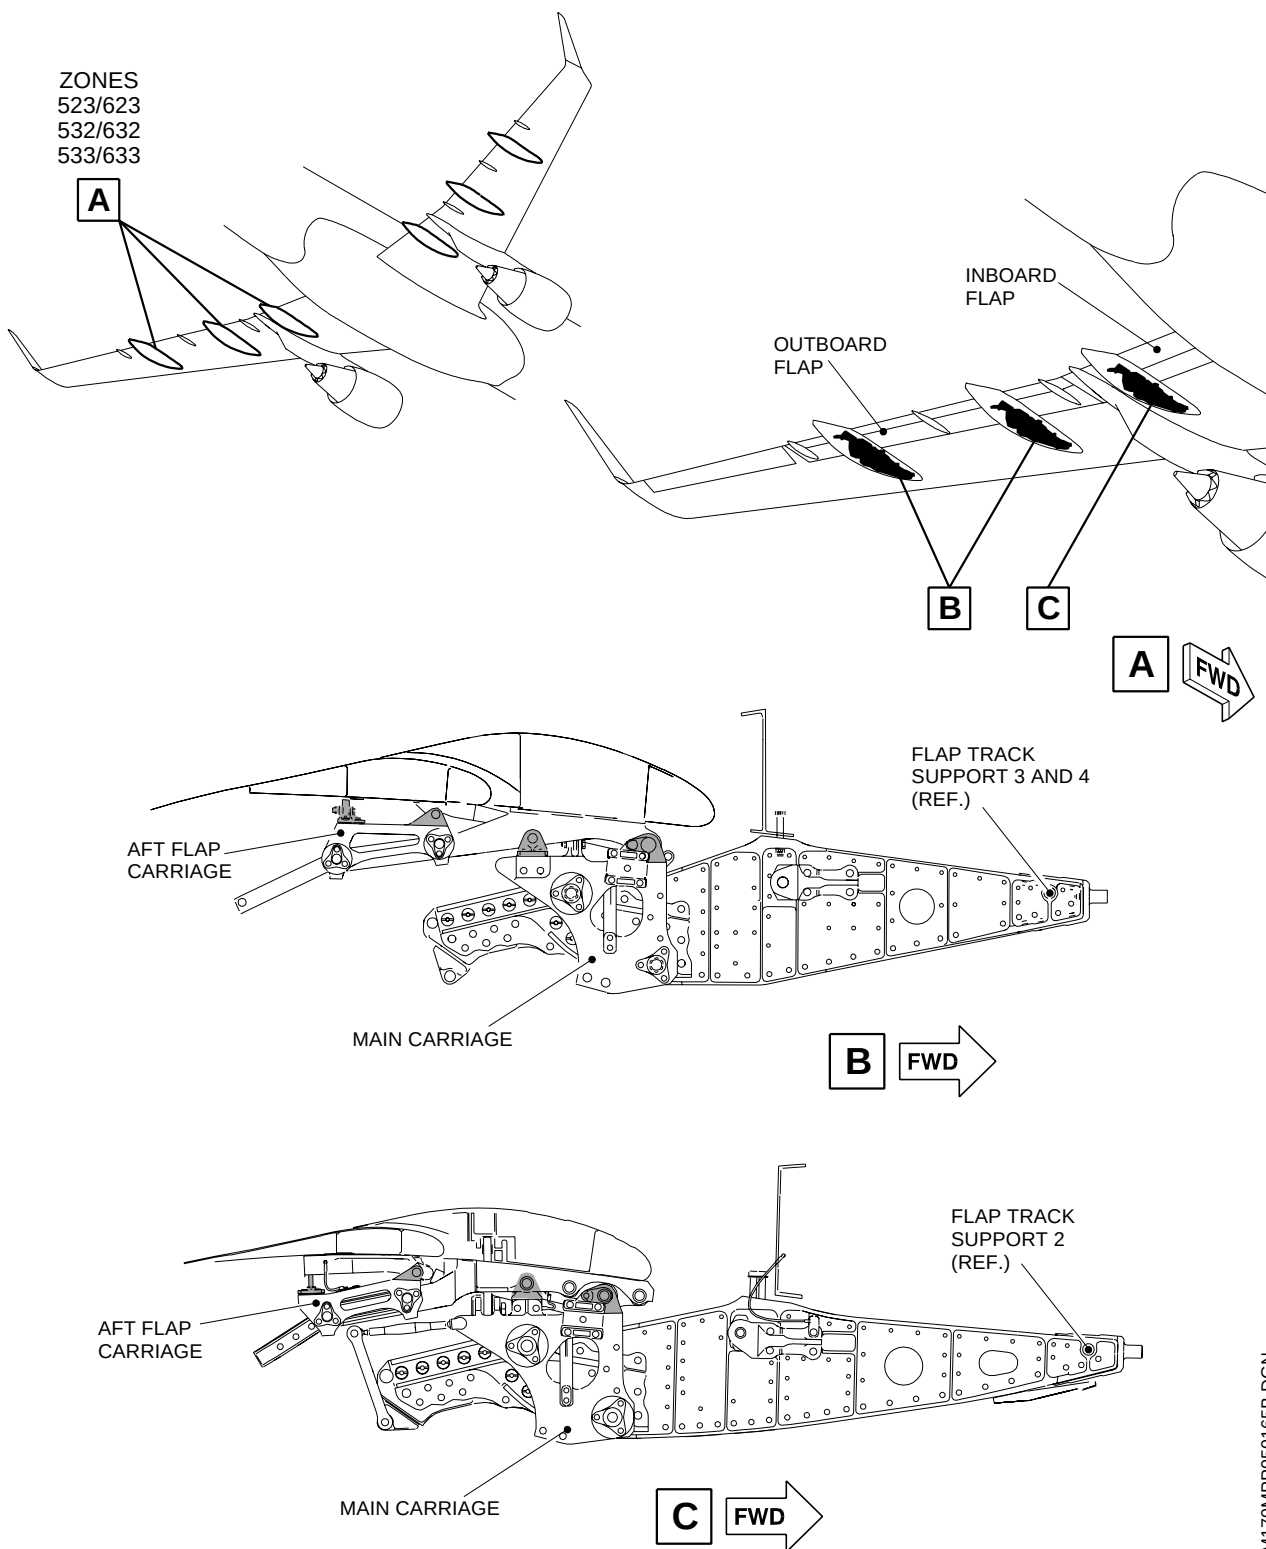

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050165B.DGN


Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL

Flaps - Aft Flap Roller Fitting

Figure 614

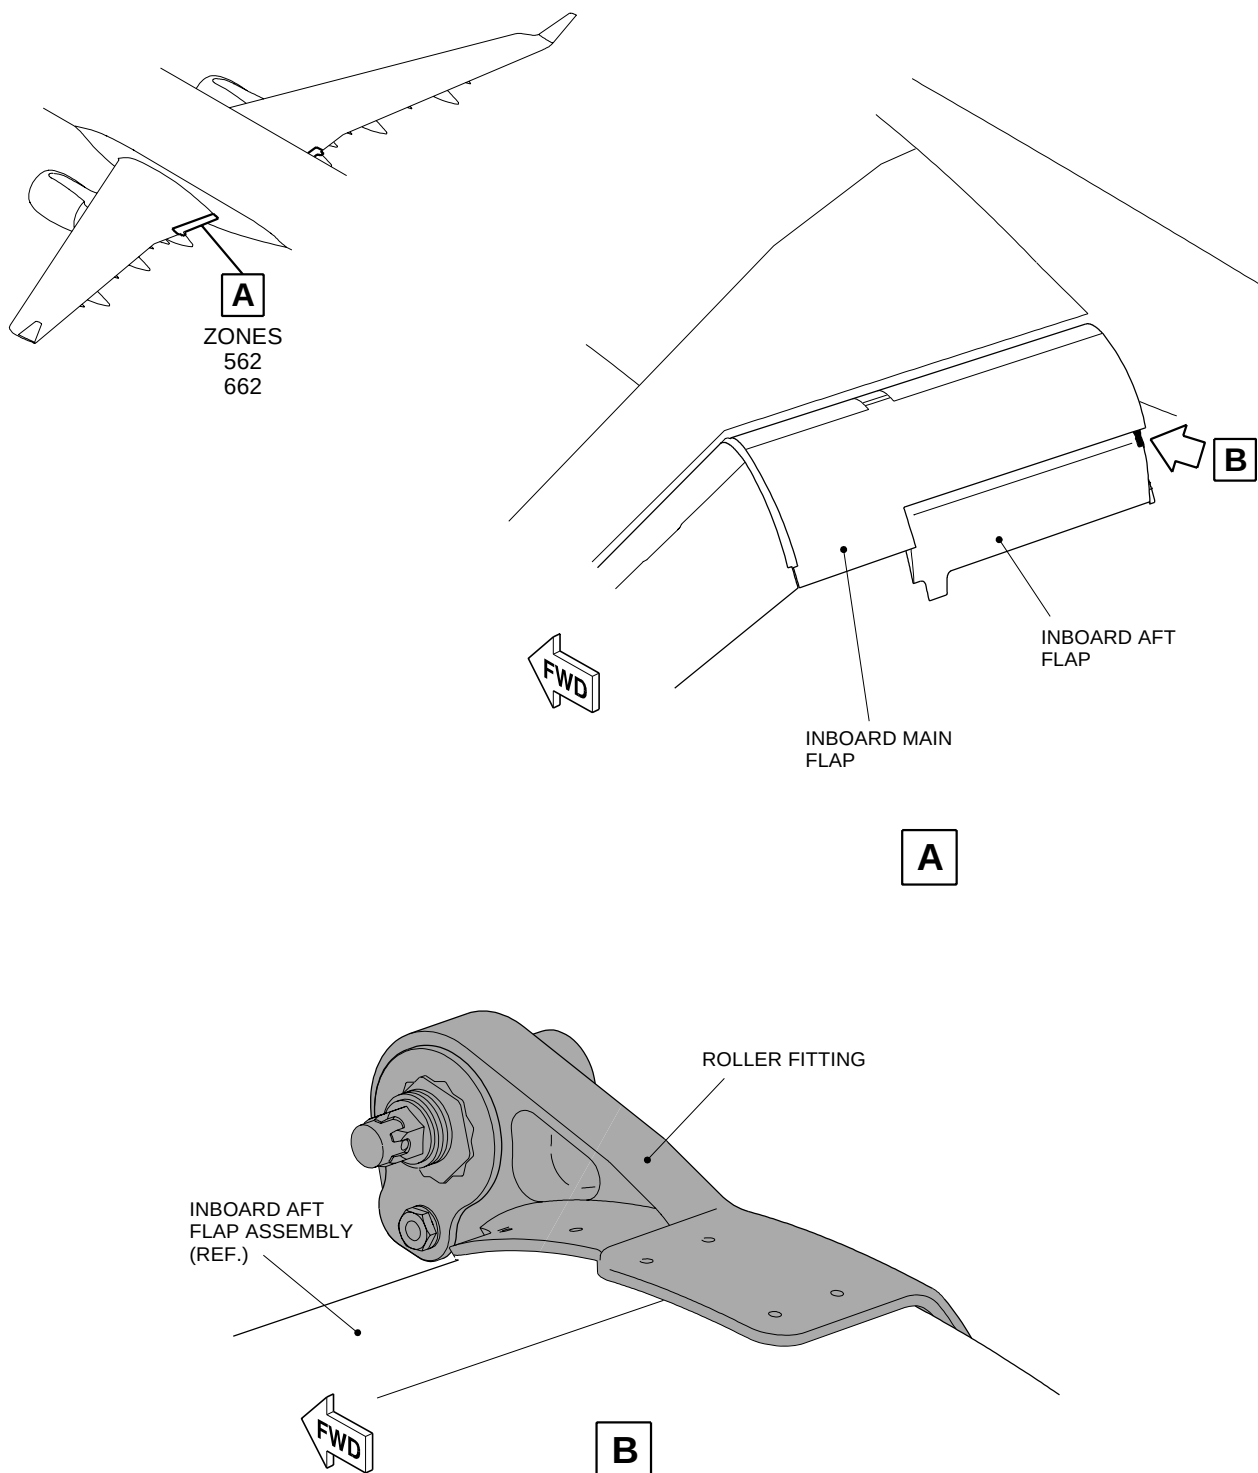

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050235A.DGN


Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL

Slats - Tracks, Rack Teeth and Pinions

Figure 615

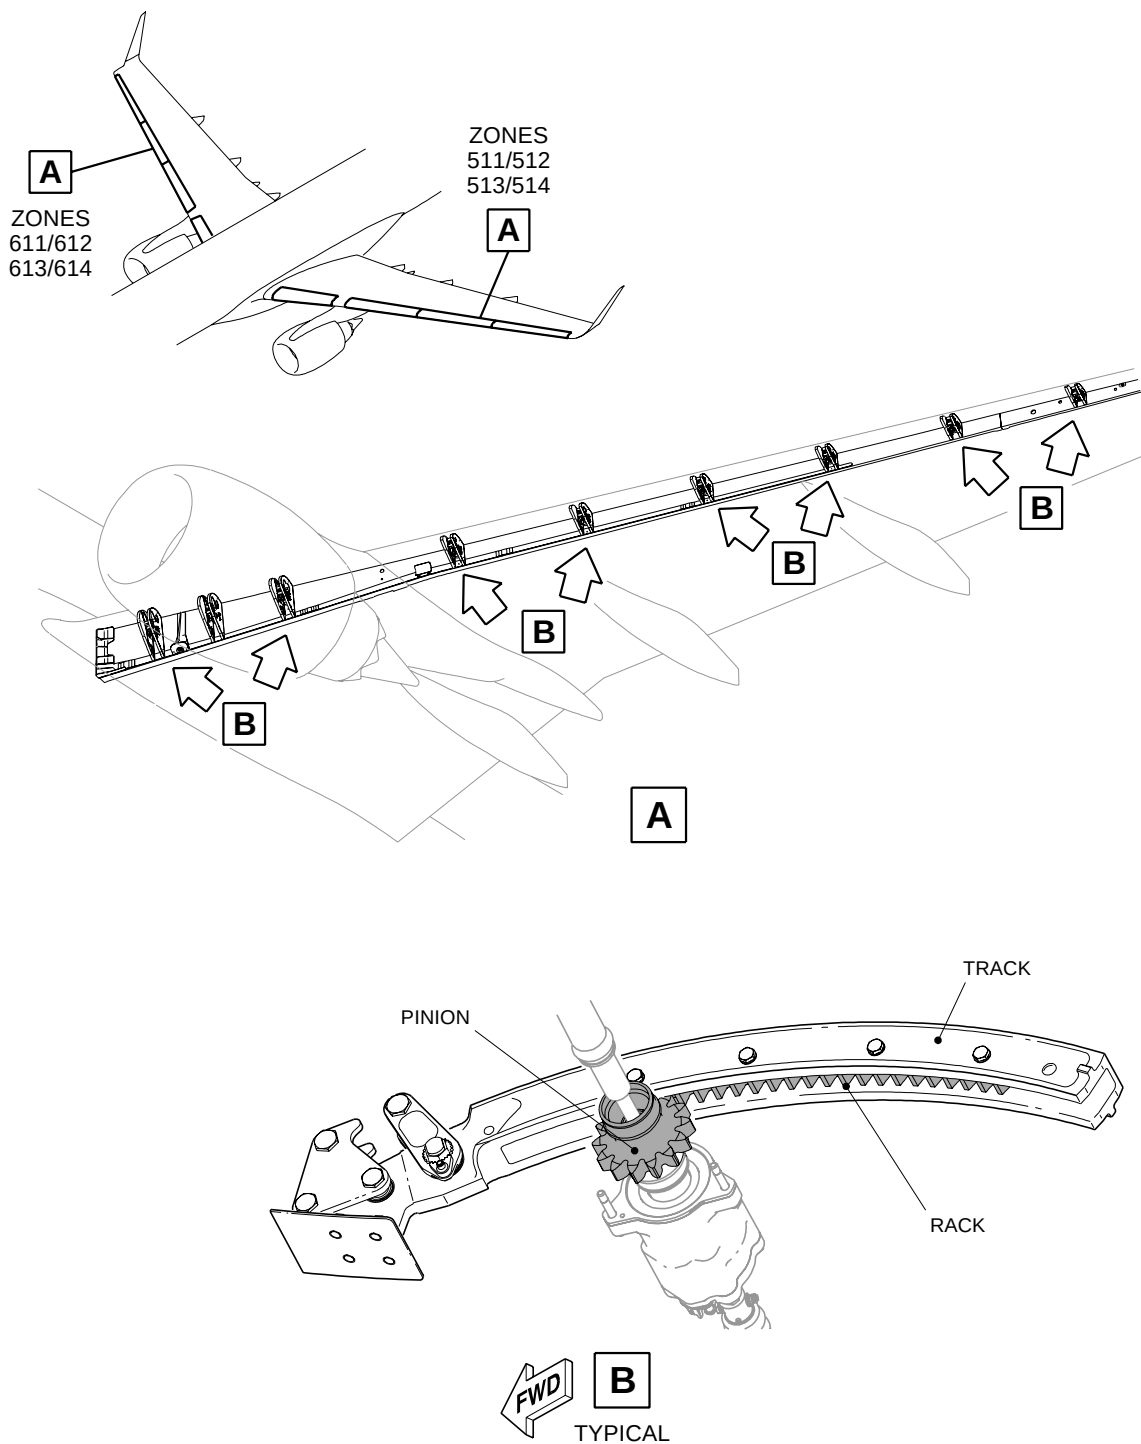


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.



EFFECTIVITY: ALL

Slats - Tracks Links and Bolts External Inspection

Figure 617

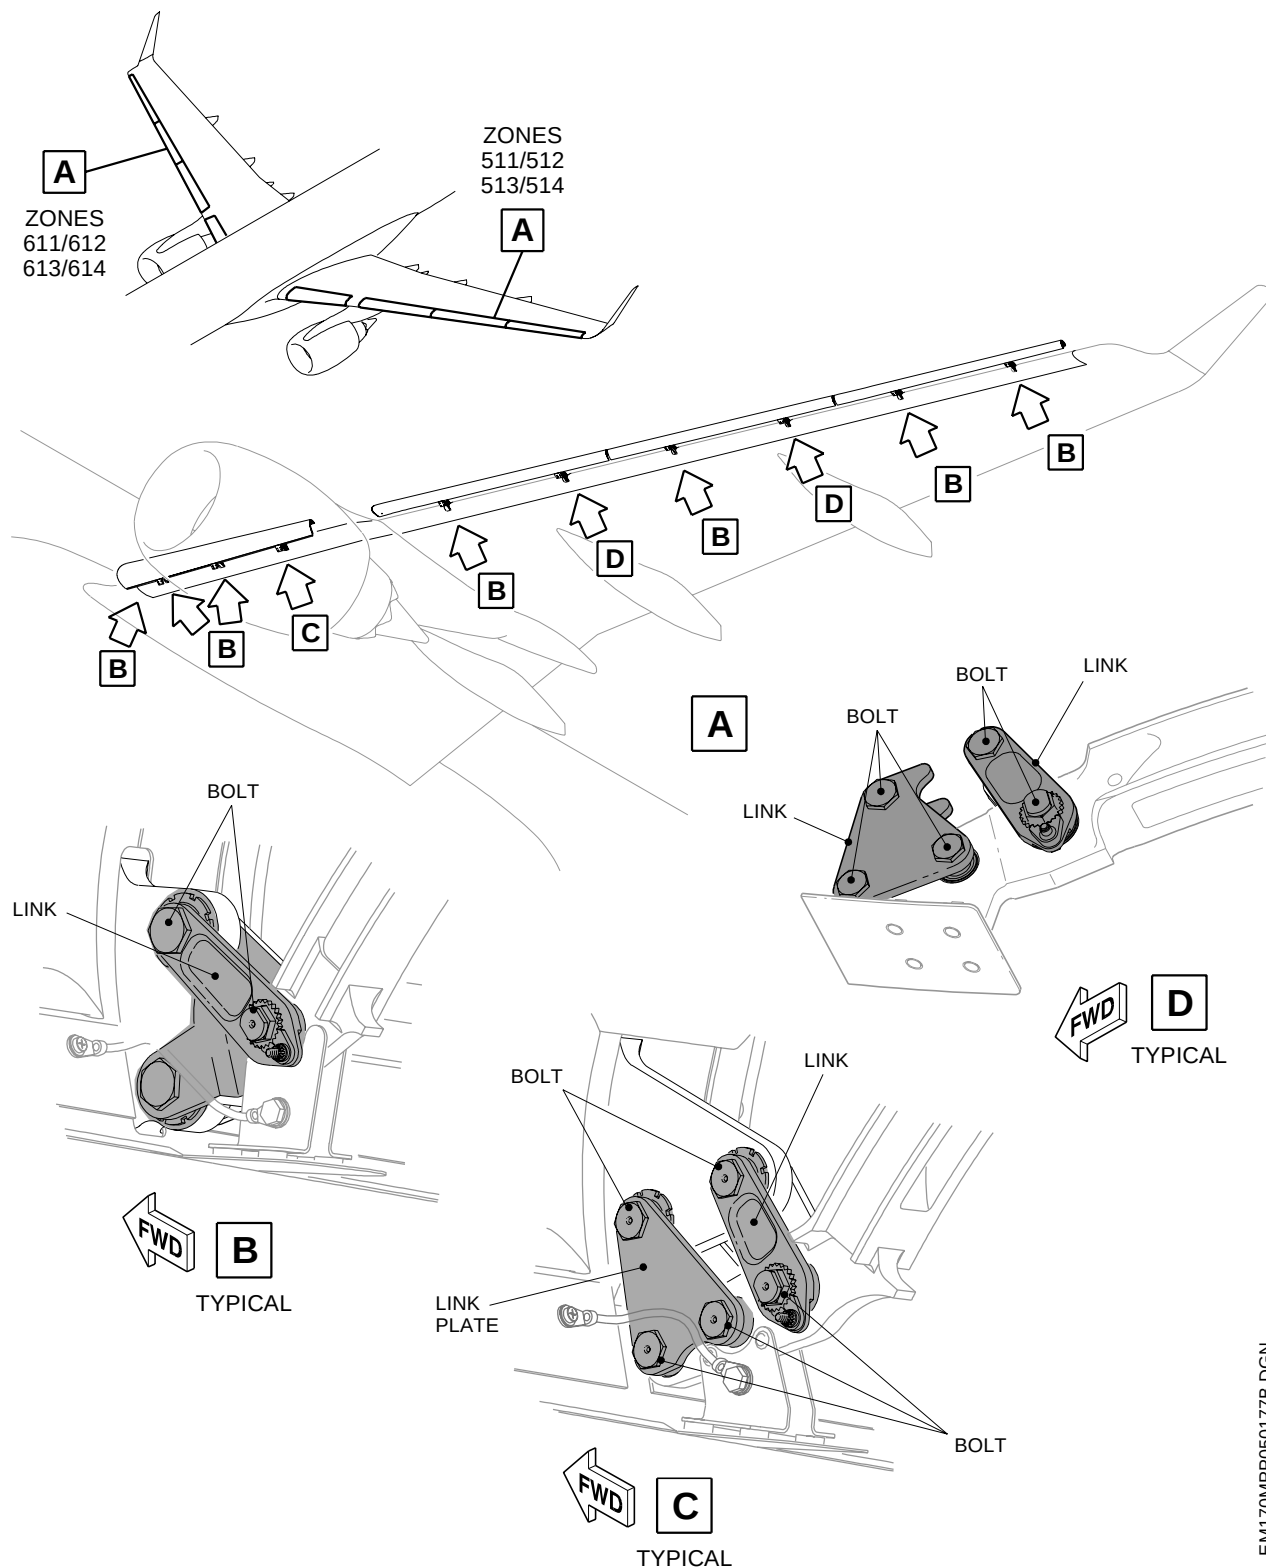

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MP0050177B.DGN



EFFECTIVITY: ALL

Slats - Harness Tube and WAI Backwall Temperature Sensor

Figure 618

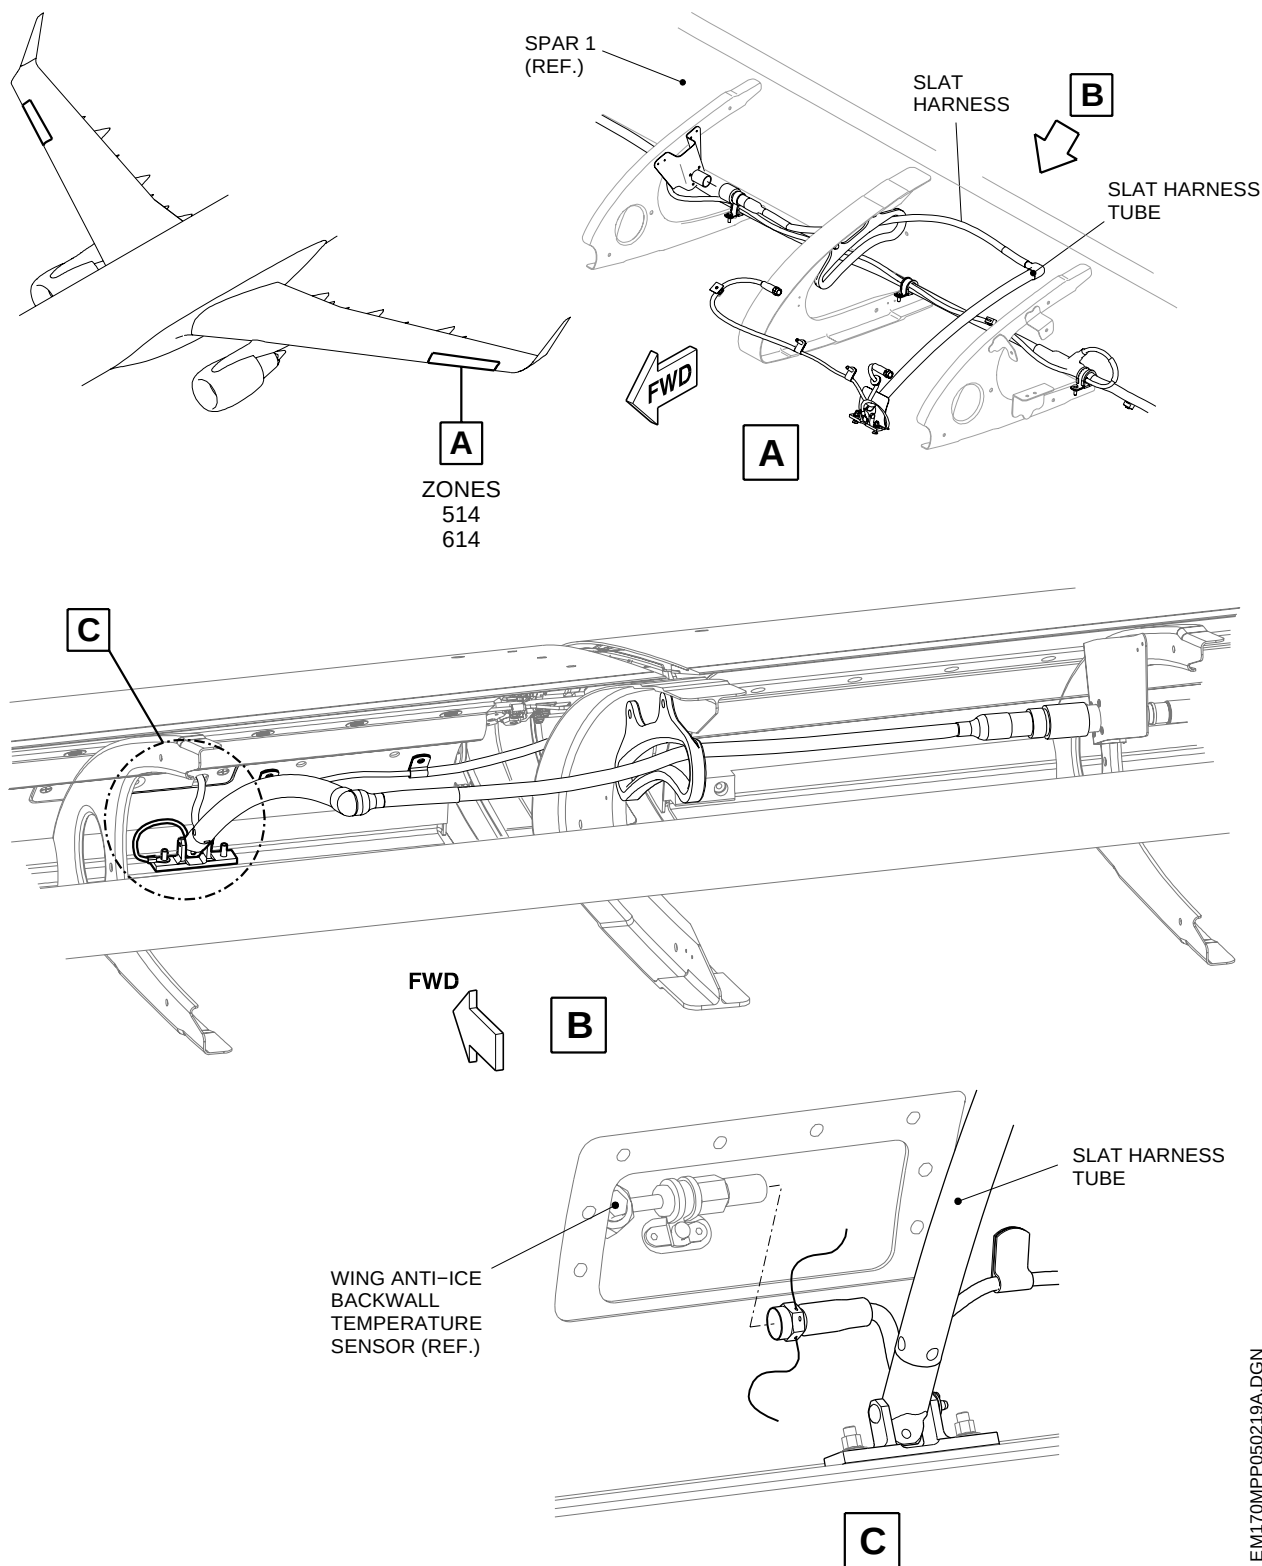

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050219A.DGN


Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL

Slats - WAI Telescopic Tube

Figure 619

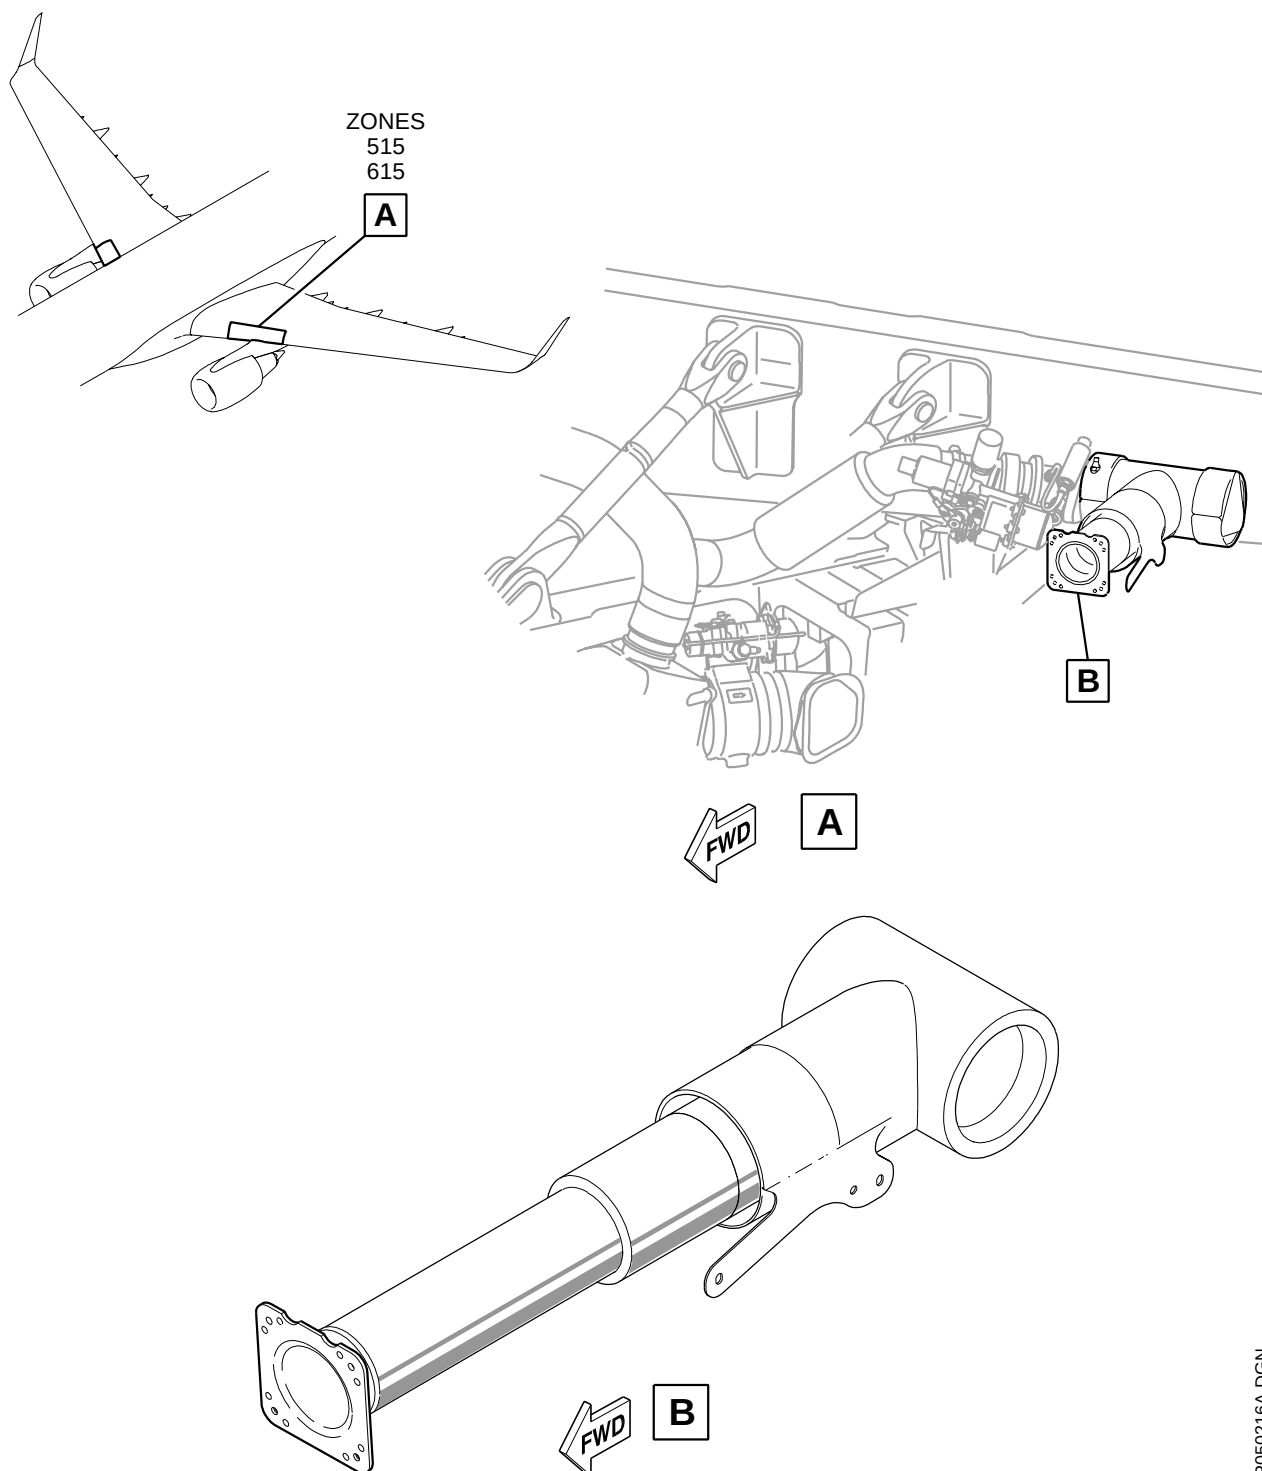

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050216A.DGN


Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL

Slats - Roller Bolts and Studs

Figure 620

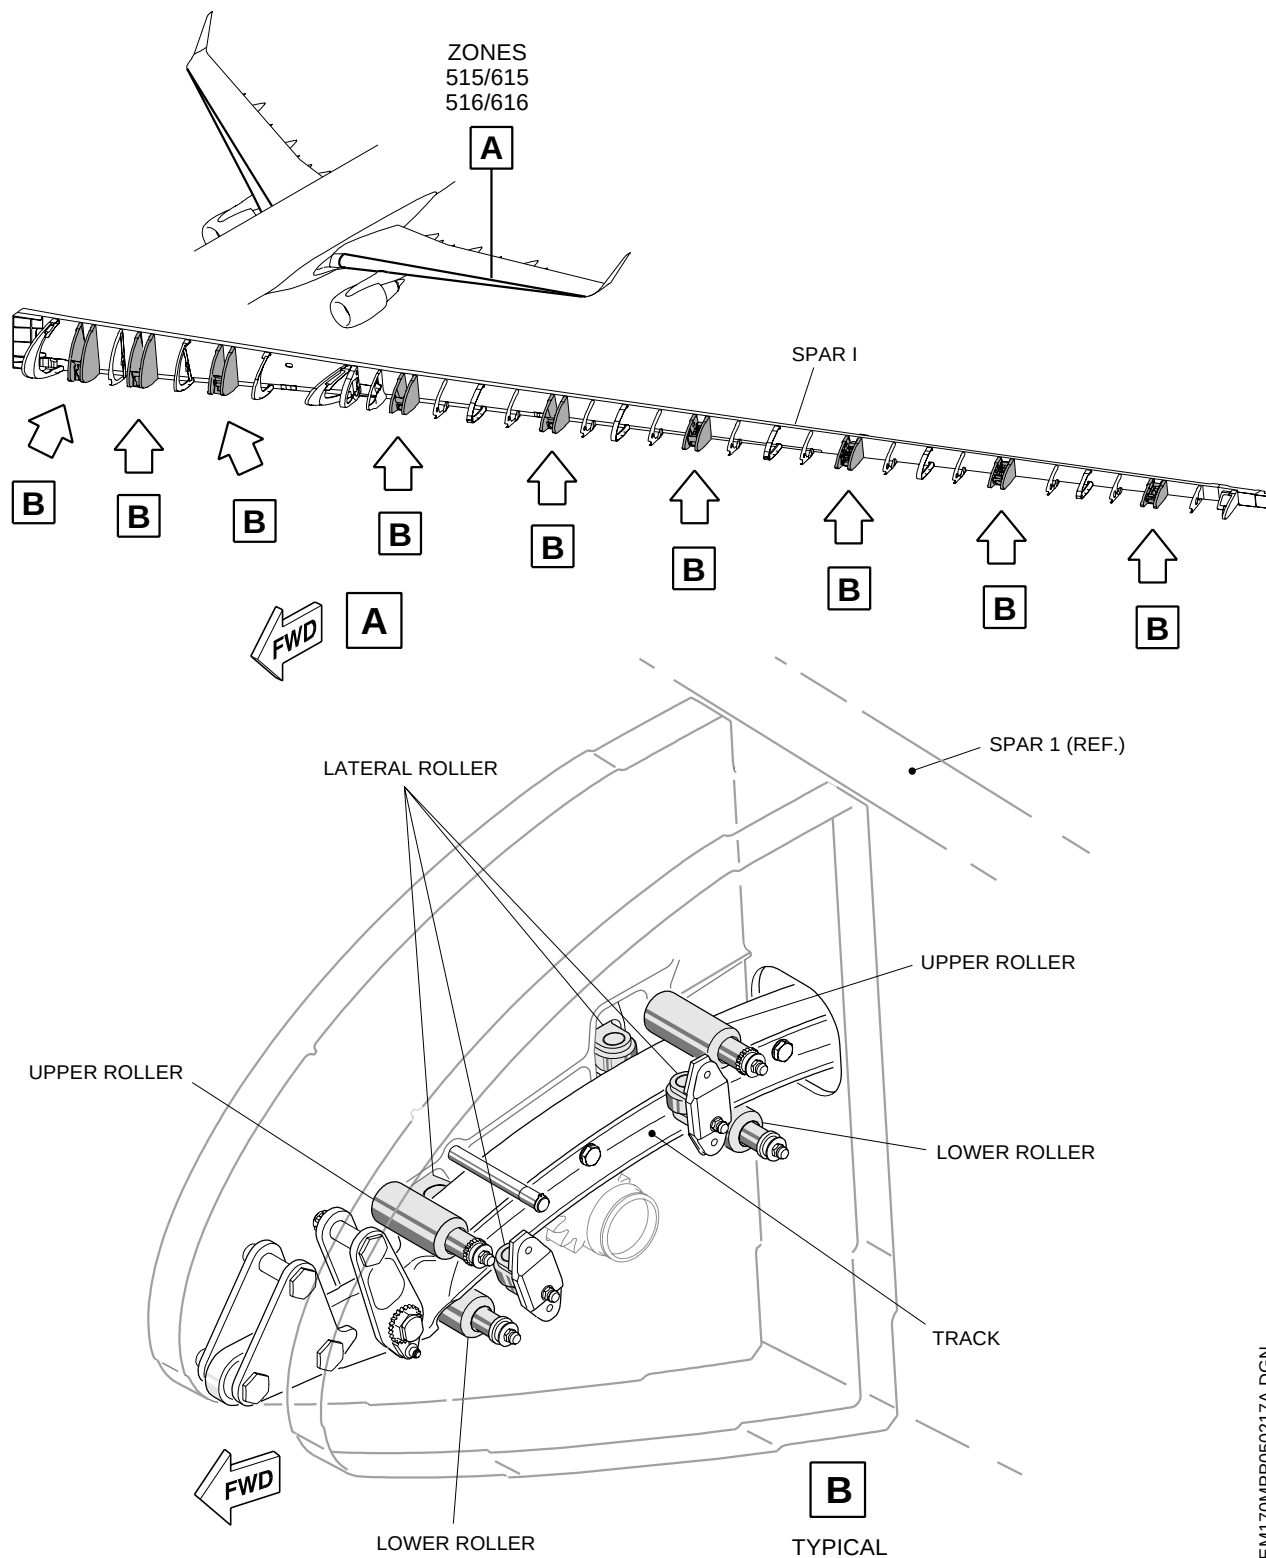

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351


EM170MP0050217A.DGN



EFFECTIVITY: ALL

Slats - Actuator and Torque Tube

Figure 621

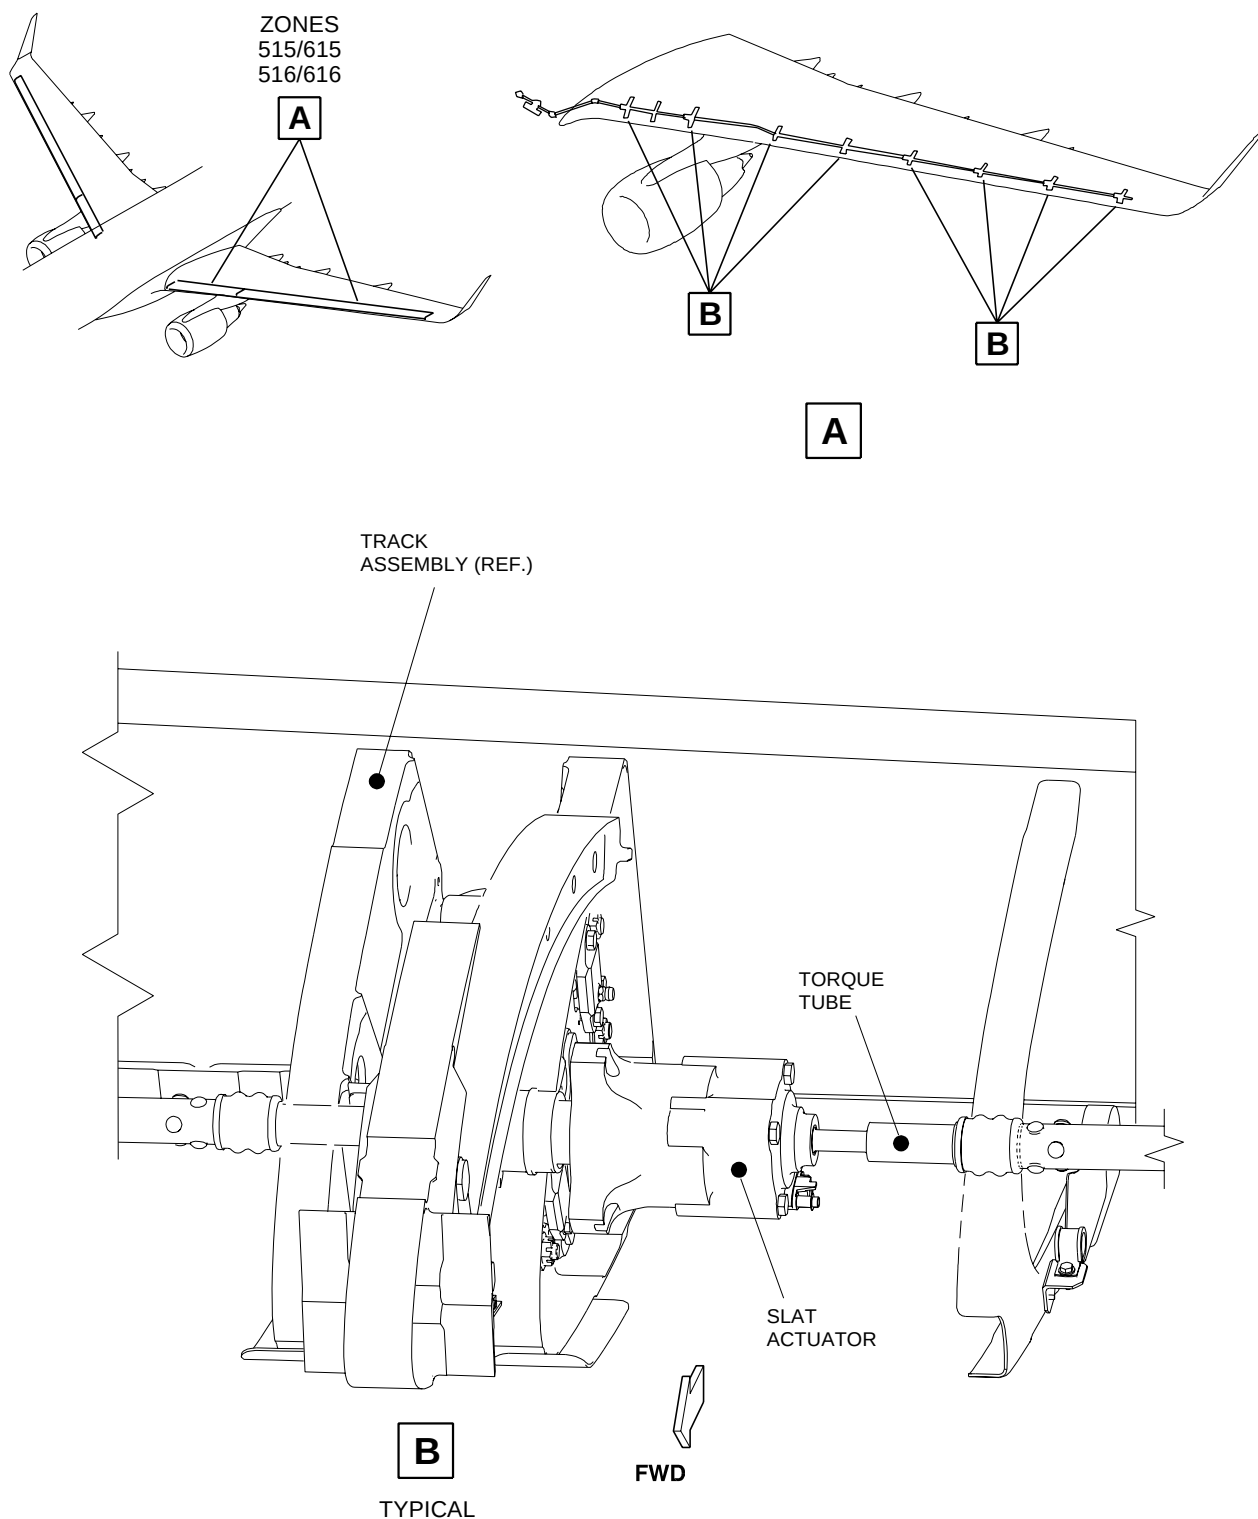




EFFECTIVITY: ALL

Slats - Internal Structures

Figure 622 - Sheet 1

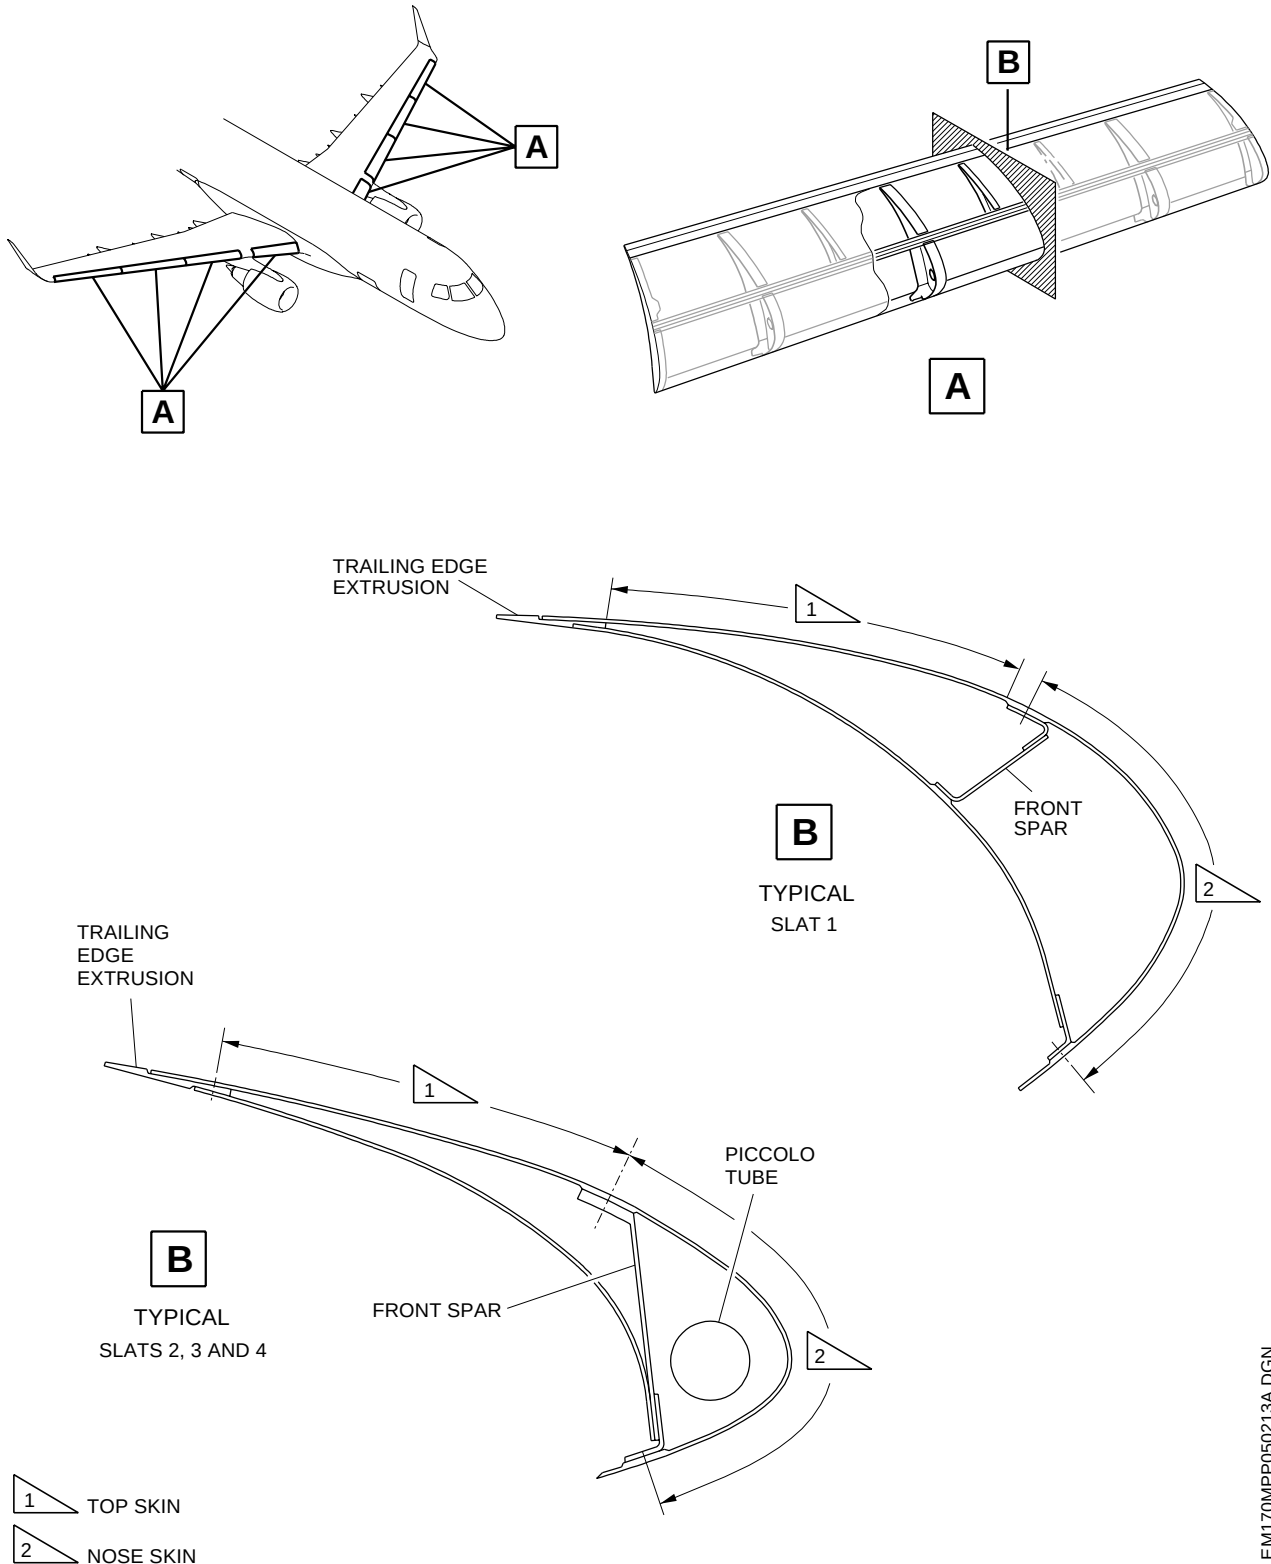

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.


EM170MPP050213A.DGN



EFFECTIVITY: ALL

Slats - Internal Structures

Figure 622 - Sheet 2

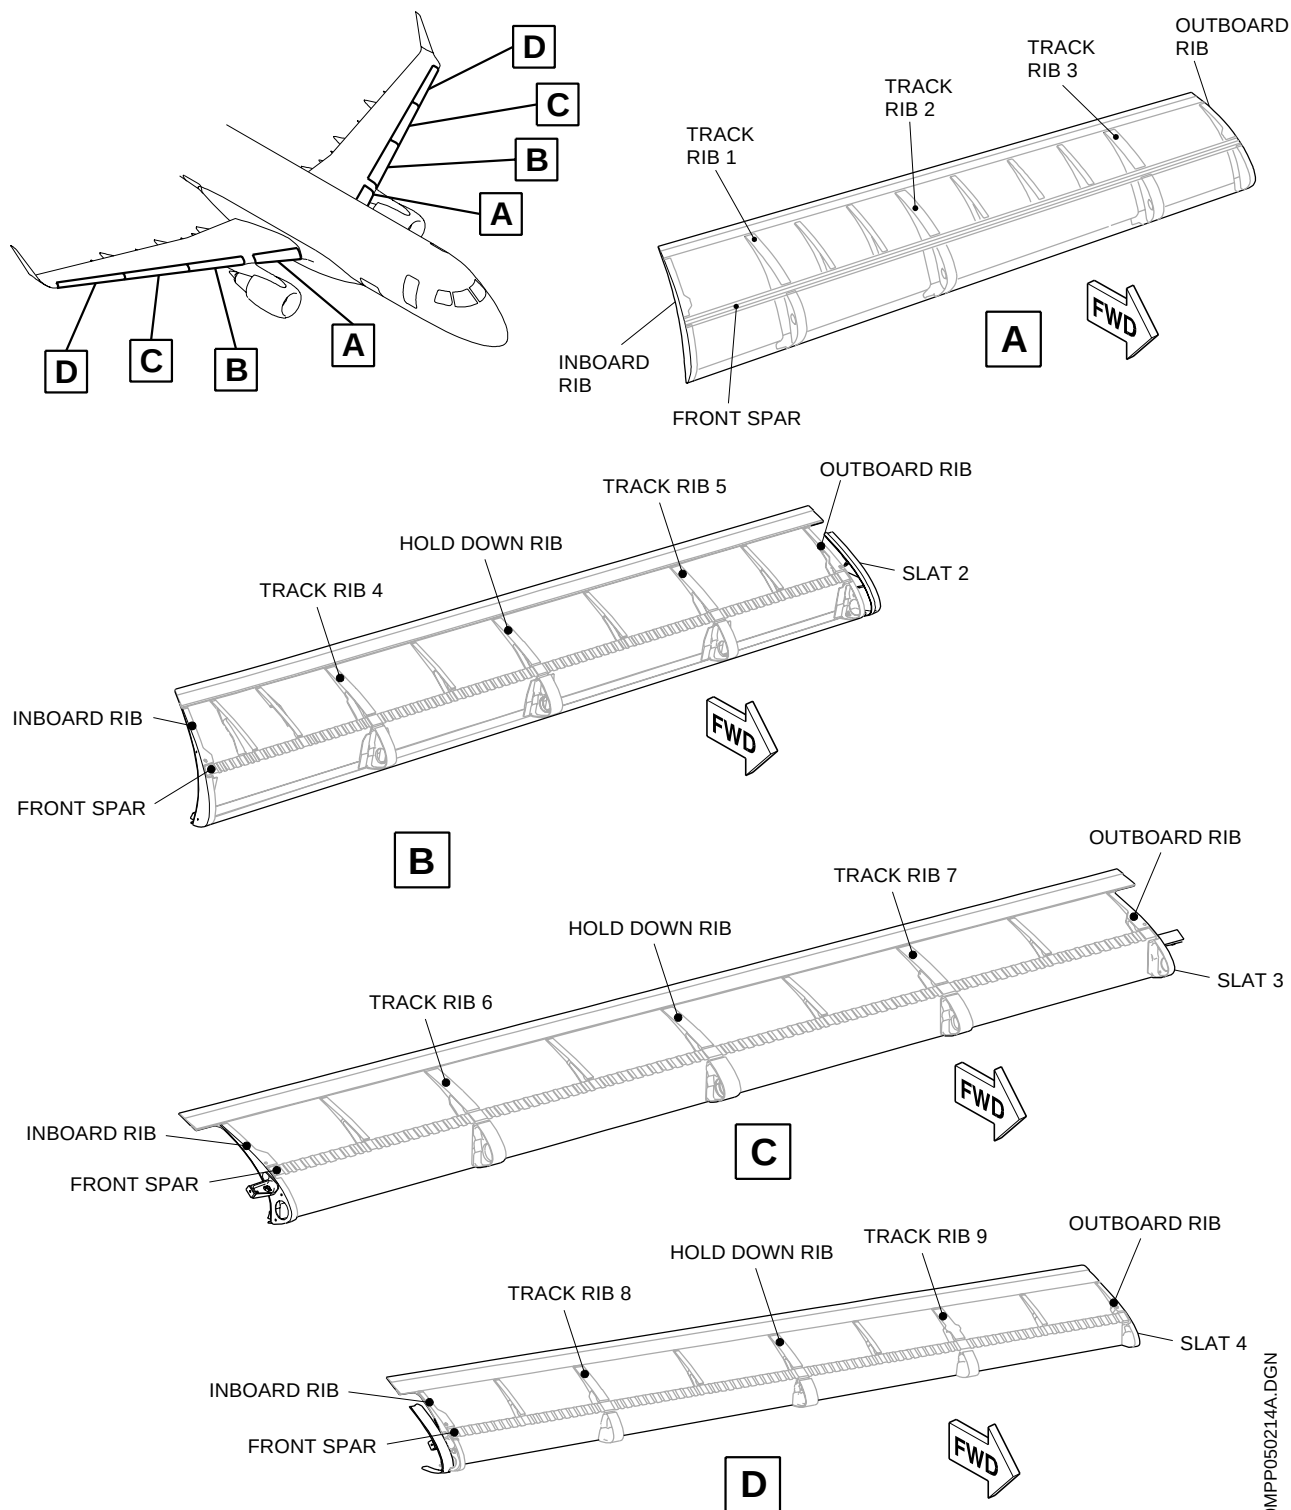

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MPP050214A.DGN


Filtered Serial N° contained in this publication: 344, 351



EFFECTIVITY: ALL

Slats - Track Ribs at Fixed Leading Edge

Figure 623

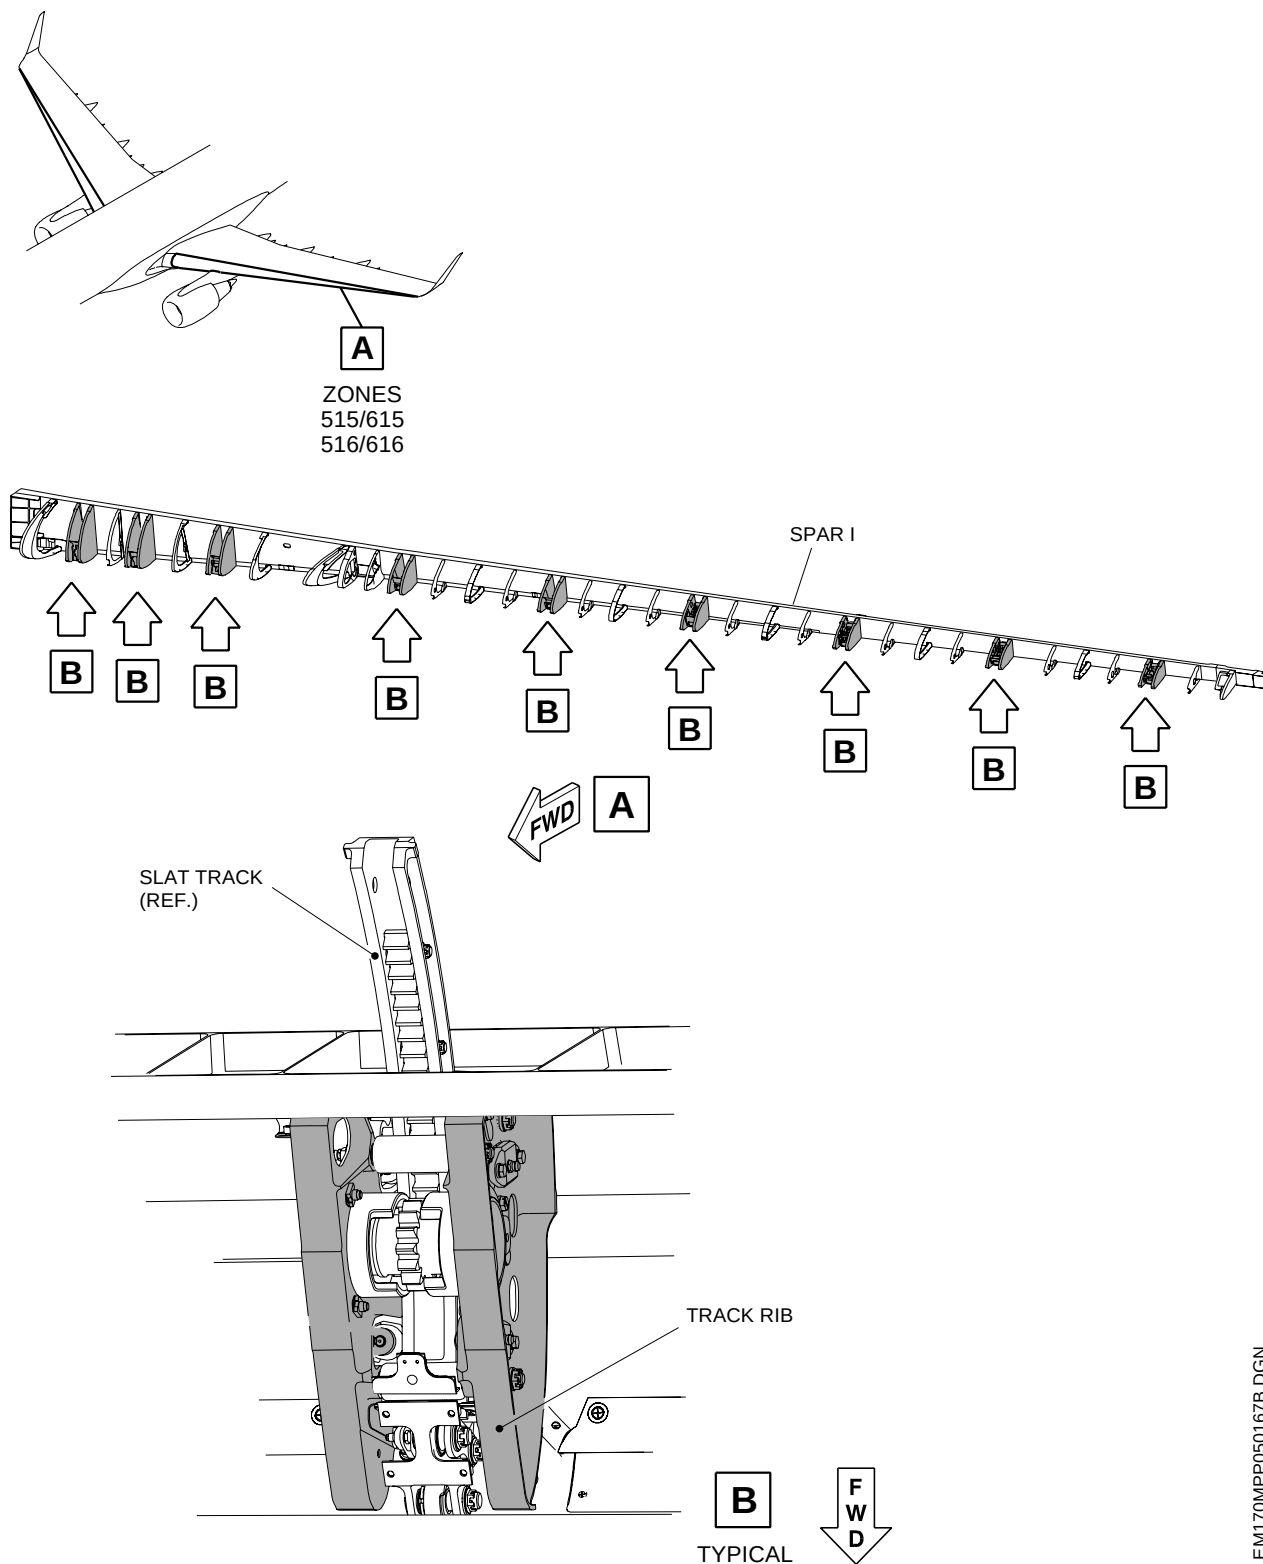


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 344, 351

EM170MP0050167B.DGN



EFFECTIVITY: ALL
Slats - Skew Sensor
Figure 624

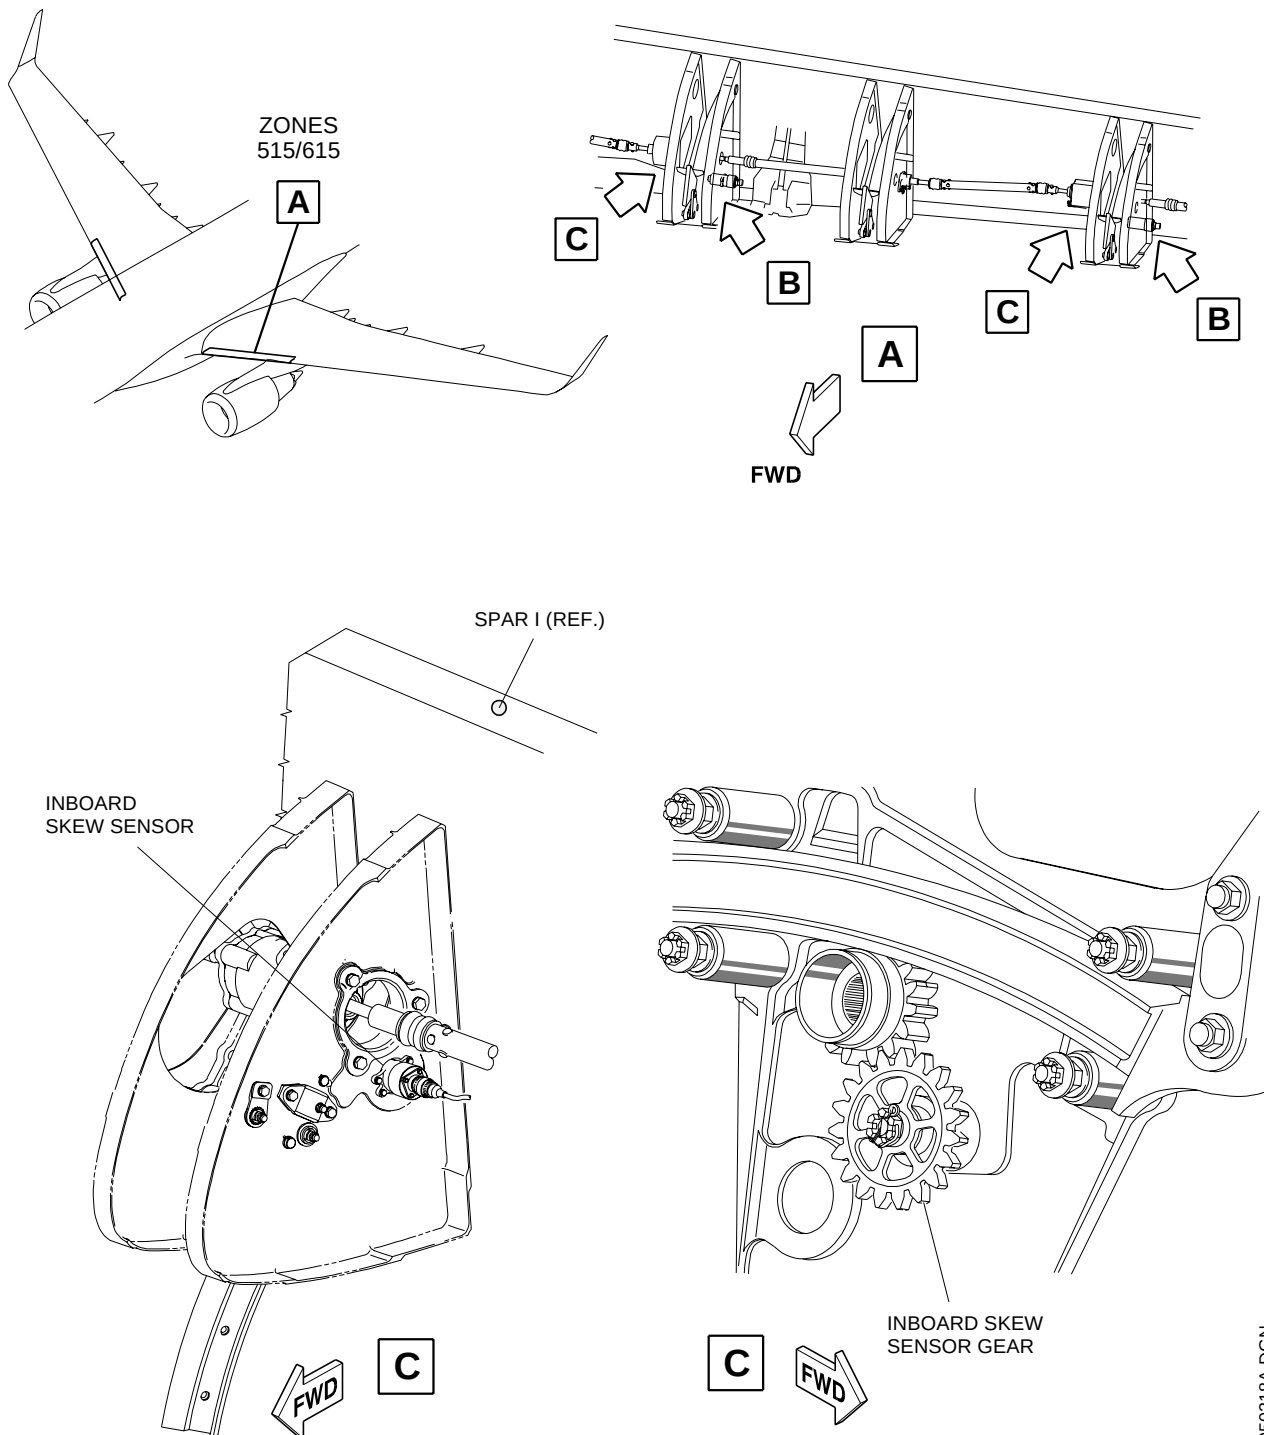

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170MP0050218A.DGN

Filtered Serial N° contained in this publication: 344, 351