

TASK 05-50-10-200-801-A

EFFECTIVITY: ALL

1. Severe or Extreme Turbulence, or Buffeting Condition - Inspection/Check

A. General

- (1) This task gives the procedure to do the necessary actions after a severe or extreme turbulence/maneuver or buffeting condition.
- (2) There are four levels of turbulence:
 - (a) Light: Small, erratic changes in altitude and/or attitude. Passengers and crew can feel a small strain against the seat belts. Loose objects can be slightly displaced. Food can be served and there is little or no difficulty to walk.
 - (b) Moderate: Changes in altitude and/or attitude occur, but the aircraft stays in positive control at all times. It usually causes variations in the indicated airspeed. Passengers and crew feel a strain against seat belts. Loose objects are dislodged. Food cannot be served and there is difficulty to walk.
 - (c) Severe: Large, abrupt changes in altitude and/or attitude. It usually causes large variations in the indicated airspeed. Aircraft can be momentarily out of control. Passengers and crew are violently forced against the seat belts. Loose objects are tossed about. It is not possible to serve food or walk.
 - (d) Extreme: The aircraft is violently tossed about and it is practically impossible to control it. This can cause structural damage.
- (3) Buffeting is a vibration of the aircraft structure due to the aerodynamic excitations caused by separated flows. Buffeting is considered excessive when it is determined that it:
 - (a) Interferes with flight instrument readability;
 - (b) May cause pilot fatigue or annoyance that interferes with operation of the airplane or management of the airplane systems.
- (4) Severe or extreme maneuvers are those that involve rapid and large control inputs, especially in combination with large changes in pitch, roll, or yaw or maneuvers that involve angle of attack near the stall.
- (5) You must do this task when the crew reports severe or extreme turbulence/maneuver or buffeting condition or when flight data analysis shows excess to the thresholds herein defined.
- (6) If there is an overspeed report, together with the turbulence, extreme maneuver or buffeting condition, you must do the related tasks (AMM TASK 05-50-06-200-801-A/600 or AMM TASK 05-50-07-200-801-A/600, as given in the aircraft condition by the time of severe turbulence/maneuver encounter).
- (7) The analysis of the flight operation data can be done by the operator, but if the choice is sending the data for EMBRAER analysis, it is preferable to send the quick access recorder system file.
- (8) Look for these conditions when you examine the components during inspection tasks:

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

- Cracks
- Pulled apart structures
- Loose paint (paint flakes)
- Discoloration
- Distortion (twisted parts)
- Wrinkles or buckles in the structure
- Bent components
- Fastener holes larger than usual
- Loose fasteners
- Pulled-out or missing fasteners
- Delamination
- Fiber breakouts
- Black powder residue around and trailing from fasteners in composites (indication of loose fasteners)
- Misalignment
- Interference
- Nicks or gouges
- Scratches
- Other signs of damage.

(9) These maintenance technicians are necessary to do this task:

- 1 - Mechanical Systems
- 1 - Airframe (Structure)

B. References

<i>REFERENCE</i>	<i>DESIGNATION</i>
AMM SDS 52-43-00/1	FORWARD ELECTRONICS COMPARTMENT ACCESS-HATCH
AMM TASK 05-50-06-200-801-A/600	Maximum Operating Speed Envelope Exceedance - Inspection/Check
AMM TASK 05-50-07-200-801-A/600	Maximum Flap/Slat Extended Speed Exceedance - Inspection/Check
AMM TASK 20-00-00-910-801-A/200	Aircraft Safety Procedures Before Maintenance - Standard Procedures
AMM TASK 20-00-00-910-802-A/200	Aircraft Safety Procedures After Maintenance - Standard Procedures
AMM TASK 27-10-00-710-801-A/500	Aileron Control System - Operational Test

(Continued)

REFERENCE	DESIGNATION
AMM TASK 27-20-00-710-801-A/500	Rudder Control System - Operational Test
AMM TASK 27-30-00-710-801-A/500	Elevator Control System - Operational Test
AMM TASK 27-40-00-710-801-A/500	Horizontal Stabilizer System - Operational Test
AMM TASK 27-50-00-710-801-A/500	Flap Control System - Operational Test
AMM TASK 27-60-00-710-801-A/500	Spoiler System - Operational Test
AMM TASK 27-80-00-710-801-A/500	Slat Control System - Operational Test
AMM TASK 31-31-00-970-806-A/200	DVDR System - Download Procedure with RDI Application
AMM TASK 51-50-00-820-801-A/200	Aircraft Alignment Check
AMM TASK 52-46-00-000-801-A/400	Middle Electronics-Compartment Access Door - Removal
AMM TASK 52-46-00-400-801-A/400	Middle Electronics-Compartment Access Door - Installation
AMM TASK 55-03-29-000-801-A/400	Vertical Stabilizer Access Panels - Removal
AMM TASK 55-03-29-400-801-A/400	Vertical Stabilizer Access Panels - Installation
PW1900G PPMM PW1000G-A-72-00-00-09C-0B5A-A	Do An Inspection of the Engine After High Turbulence or Lateral Loads; Heavy or Overweight Landings

C. Zones and Accesses

ZONES ACCESS	LOCATION	REFERENCE
123BL	LH FWD Fuselage Bottom - Front Area	AMM TASK 06-41-00-800-801-A/100
147AL	LH Center Fuselage II Bottom - Main-Landing-Gear Wheelwell Side (from Frame 52 to CFIII junction and below Stringer 17L)	AMM TASK 06-41-00-800-801-A/100
191AL	Wing-to-Fuselage Fairing FWD Panel I	AMM TASK 06-41-00-800-801-A/100
191AR	Wing-to-Fuselage Fairing FWD Panel I	AMM TASK 06-41-00-800-801-A/100
192BL	Wing-to-Fuselage Fairing LH Center Panel	AMM TASK 06-41-00-800-801-A/100
194BR	Wing-to-Fuselage Fairing RH Center Panel	AMM TASK 06-41-00-800-801-A/100
197AL	Wing-to-Fuselage Fairing LH Aft Panel	AMM TASK 06-41-00-800-801-A/100
314BR	RH Aft Fuselage Bottom	AMM TASK 06-41-00-800-801-A/100
322AL	Vertical Stabilizer	AMM TASK 06-42-00-800-801-A/100
322AR	Vertical Stabilizer	AMM TASK 06-42-00-800-801-A/100
322BL	Vertical Stabilizer	AMM TASK 06-42-00-800-801-A/100
322FR	Vertical Stabilizer	AMM TASK 06-42-00-800-801-A/100

D. Severe Turbulence, Extreme Maneuver and Buffeting Condition Inspection

SUBTASK 210-010-A

- (1) Refer to the flowchart given in [Figure 601](#) for the necessary actions after the crew reports severe or extreme turbulence/maneuver encounter, or buffeting condition.

- (2) The aircraft structure response to turbulence or extreme maneuver is different for different aircraft regions, according to its stiffness and mass distribution. This response leads to situations where a measured acceleration requires an inspection on one aircraft region and not on others.

(3) *EFFECTIVITY: EMBRAER 190-E2 ACFT*

There are six zones defined and are as follows:

- (a) Zone F1 - Comprises the fuselage section aft of the FR 85 (X=27600), the vertical and horizontal stabilizer, rudder, elevator and the lateral skin between stations X=8430 and X=22180.3 and stringers 06 and 22, LH and RH. Refer to [Figure 602, Sheet 1](#) and [Figure 602, Sheet 2](#).
- (b) Zone W1 - Comprises the wing region outboard of the rib 13, slats 3 and 4, outboard flap, aileron and winglet. Refer to [Figure 602, Sheet 2](#).
- (c) Zone F2 - Comprises the fuselage section between the station X=6070 (junction of the Forward Fuselage and Center Fuselage I) and FR 69 (X=22956). Refer to [Figure 602, Sheet 1](#) and [Figure 602, Sheet 2](#).
- (d) Zone W2 - Comprises the wing region between the rib 7 and rib 13, engine and pylon, inboard flap and slat 2. Refer to [Figure 602, Sheet 2](#).
- (e) Zone F3 - Comprises the fuselage from the radome to the station X=6070 (junction of the Forward Fuselage and Center Fuselage I) and from the FR 69 (X=22956) to FR 85 (X=27600). Refer to [Figure 602, Sheet 1](#) and [Figure 602, Sheet 2](#).
- (f) Zone W3 - Comprises the wing from the rib 7 to the wing root, including the slat 1. Refer to [Figure 602, Sheet 2](#).

(4) *EFFECTIVITY: EMBRAER 195-E2 ACFT*

There are six zones defined and are as follows:

- (a) Zone F1 - Comprises the fuselage section aft of the FR 85 (X=32870), the vertical and horizontal stabilizer, rudder, elevator and the lateral skin between stations X=8430 and X=25634.3 and stringers 06 and 22, LH and RH. Refer to [Figure 603](#)
- (b) Zone W1 - Comprises the wing region outboard of the rib 13, slats 3 and 4, outboard flap, aileron and winglet. Refer to [Figure 603, Sheet 2](#)
- (c) Zone F2 - Comprises the fuselage section between the station X=6070 (junction of the Forward Fuselage and Center Fuselage I) and FR 73 (X=28155.3). Refer to [Figure 603](#)
- (d) Zone W2 - Comprises the wing region between the rib 7 and rib 13, engine and pylon, inboard flap and slat 2. Refer to [Figure 603, Sheet 2](#).
- (e) Zone F3 - Comprises the fuselage from the radome to the station X=6070 (junction of the Forward Fuselage and Center Fuselage I) and from the FR 73 (X=28155.3) to FR 85 (X=32870). Refer to [Figure 603](#).
- (f) Zone W3 - Comprises the wing from the rib 7 to the wing root, including the slat 1. Refer to [Figure 603, Sheet 2](#).

- (5) Different thresholds are set for each region, to determine when they need an inspection.
- (6) Zones W1 and F1, for which the acceleration threshold is the lowest one, have always inspections in the phase I inspection and these zones are not required to have an inspection in the phase II if the flight data analysis shows that the thresholds for other aircraft Zones were reached.
- (7) When the crew reports a severe or extreme turbulence/maneuver encounter, or buffeting condition, you must do the phase I inspection before the next flight.
- (8) If no discrepancy is found during the phase I inspection, you can dispatch the aircraft for a 10 FC deferrable period.
- (9) If you find any discrepancy related to the turbulence or extreme maneuver incident, you must do the phase II inspection for all the aircraft Zones, before the next flight.
- (10) During the deferrable period, download and analyze flight data to determine if more inspections are required and which aircraft Zones need to have an inspection.

NOTE: If the flight data is not available, the phase II inspection is mandatory for all the aircraft Zones.

- (11) The phase III inspection is only applicable when, during the previous inspection phases, structural damage caused by the turbulence or extreme maneuver incident is found. Embraer will give you a disposition to fix the discrepancies detected and determine if the phase III inspection is required or not.
- (12) When the crew reports buffeting, the procedure here shown, to use flight data source to determine which regions must have an inspection is not applicable and the inspection phase to be done is the phase I inspection.
- (13) If during the phase I inspection, following a buffeting condition report, any discrepancy related to the incident is found, the phase II inspection for all the aircraft regions must be done before the next flight.

E. Flight Data Analysis

SUBTASK 210-011-A

- (1) Do a download of the DVDRs (AMM TASK 31-31-00-970-806-A/200).
- (2) In the downloaded data, identify the flight in which the crew reported severe or extreme turbulence or maneuver and extract these parameters:
 - (a) Flight number (FltNumber)
 - (b) Date (Day)
 - (c) Time (GMT)
 - (d) Normal acceleration (NormAccel)
 - (e) Air/Ground parameter (Air/Gnd)

NOTE: The data must be selected from the flight data source at a rate of 8 sps (samples per second).

- (3) For the selected flight, identify the take off by marking the first sample to which the indication Air/Ground records "Air". Refer to [Figure 604](#).
- (4) Identify the landing by marking the last indication of "Air", before it turns to "Ground". Refer to [Figure 604](#).
- (5) Discard 10 SEC of data after the first "Air" recorded on the takeoff and 10 SEC before the last "Air" recorded on landing.
- (6) For the selected data range, identify the highest positive and negative recorded value for the parameter Normal Acceleration. Refer to [Figure 604](#).

NOTE: To prevent loss of data, the flight data must be analyzed at the greatest sample rate available: 8 sample per second for Normal Acceleration.

- (7) With the highest values for the Normal Acceleration parameter, refer to the tables below, and to [Figure 602](#), to determine which aircraft Zones must have phase II inspection:

Table 601

HIGHEST POSITIVE VALUE FOR Nz	ZONES TO INSPECT (Figure 602)
Below 1.9	No additional inspections required
Above 1.9	F2, W2, F3, and W3

Table 602

HIGHEST NEGATIVE VALUE FOR Nz	ZONES TO INSPECT (Figure 602)
Above -0.1	No additional inspections required
Between -0.1 and -0.6	F2 and W2
Below -0.6	F2, W2, F3, and W3

- (8) If no additional inspections are required, the aircraft can return to service. Otherwise, you must do the required inspections during the 10 FC deferrable period.

F. Job Set-Up

SUBTASK 840-003-A

WARNING: MAKE SURE THAT THE AIRCRAFT IS IN A SAFE CONDITION BEFORE YOU DO THE MAINTENANCE PROCEDURES. THIS IS TO PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

- (1) Do the procedure to make the aircraft safe for maintenance (AMM TASK 20-00-00-910-801-A/200).

SUBTASK 010-003-A

- (2) Job Set-Up for the phase I inspection:
 - (a) Set the flaps to the fully extended position.
 - (b) Open the access door 314BR.
 - (c) Remove the vertical stabilizer left panels 322AL and 322BL, or the right panels 322AR and 322FR (AMM TASK 55-03-29-000-801-A/400).

- (3) Job Set-Up for the phase II inspection:
 - (a) Set the flaps to the fully extended position.
 - (b) Open the access panels 191AL, 191AR, 192BL, and 194BR.
 - (c) Open the access hatch 123BL (AMM SDS 52-43-00/1) to get access to the forward electronic compartment.
 - (d) Get access to the middle electronic compartment as follows:
 - 1 Open the access door 197AL.
 - 2 Open and remove the access door 147AL (AMM TASK 52-46-00-000-801-A/400).

G. Phase I Inspection

SUBTASK 210-012-A

- (1) *EFFECTIVITY: EMBRAER 190-E2 ACFT*

Examine the fuselage skin from the FR 85 (X=27600) to the APU exhaust silencer.

NOTE: If damage is found or suspected, do an internal inspection on the region.

- (2) *EFFECTIVITY: EMBRAER 195-E2 ACFT*

Examine the fuselage skin from the FR 85 (X=32870) to the APU exhaust silencer.

NOTE: If damage is found or suspected, do an internal inspection on the region.

- (3) *EFFECTIVITY: EMBRAER 190-E2 ACFT*

Examine the lateral fuselage skin between the stations X=8430 and X=22180.3 and stringers 06 and 22, in the two sides of the fuselage, for signs of skin buckling and for missing rivets.

NOTE: For this inspection, it is not necessary to remove the wing-to-fuselage fairing and it is not necessary to do an inspection on the skin regions covered by it.

- (4) *EFFECTIVITY: EMBRAER 195-E2 ACFT*

Examine the lateral fuselage skin between the stations X=8430 and X=25364.3 and stringers 06 and 22, in the two sides of the fuselage, for signs of skin buckling and for missing rivets.

NOTE: For this inspection, it is not necessary to remove the wing-to-fuselage fairing and it is not necessary to do an inspection on the skin regions covered by it.

- (5) Through the 314BR and 322AL and 322BL, or 322AR and 322FR, do the inspection on the bolts that attach the vertical stabilizer to the rear fuselage. Refer to [Figure 605](#)
- (6) Examine the vacuum waste system tank and its attachment in CF III. Refer to [Figure 606](#).
- (7) Examine the aft electronic rack in CF III for loose components. Refer to [Figure 606](#).
- (8) Examine the horizontal-stabilizer mechanism in the regions of [Figure 607](#).

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

- (9) Examine the potable water tank and its attachment. Refer to [Figure 608](#).
- (10) Examine the RH aft G5 galley and its attachment to the fuselage. Refer to [Figure 609](#).
- (11) Examine the tail cone and its attachment to the fuselage.
- (12) Examine the horizontal stabilizer and elevator skin.
- (13) Examine the horizontal-stabilizer upper and lower skin splices.
- (14) Examine the APU and APU mounts.
- (15) Examine the vertical stabilizer and rudder skin.
- (16) Examine the wing upper and lower skin, from the wingtip, including the winglet, to the Rib 13 (YA=-6540). Give special attention to skin joints.
- (17) Examine the outboard flap surfaces and mechanism.
- (18) Examine the outboard flap rods for signs of bend.
- (19) Examine the aileron upper and lower skin.
- (20) Examine the surfaces and mechanisms of the slats 3 and 4.
- (21) Examine the inlet-cowl internal skin for signs of chafing against the fan blades.

H. Phase-II Inspection - Zone F2

SUBTASK 210-013-A

(1) **EFFECTIVITY: EMBRAER 190-E2 ACFT**

Examine the fuselage skin, between the station X=6070 (junction of the Forward Fuselage with the Center Fuselage I) and FR 69 (X=22956).

(2) **EFFECTIVITY: EMBRAER 195-E2 ACFT**

Examine the fuselage skin, between the station X=6070 (junction of the Forward Fuselage with the Center Fuselage I) and FR 73 (X=28155.3).

(3) **EFFECTIVITY: EMBRAER 190-E2 ACFT**

Give special attention to the region between the FR 56 (X=17991.3) and FR 59 (X=19246.3), upper and lower regions, for skin buckling.

(4) **EFFECTIVITY: EMBRAER 195-E2 ACFT**

Give special attention to the region between the FR 56 (X=20917.3) and FR 59 (X=22172.3), upper and lower regions, for skin buckling.

(5) Through the panels 191AL, 191AR, 192BL, and 194BR do the inspection on the region inside the wing-to- fuselage fairing for loose components and bent supports. Also, examine the visible extension of the ECS packs and ducts and its fixation to the fuselage.

(6) Examine the area adjacent to the fuselage bulkheads in the attachment of the wing spars I, II, and III.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

- (7) Examine the wing-to-fuselage fairing for missing screws.

I. Phase-II Inspection - Zone W2

SUBTASK 210-014-A

- (1) Examine the pylon.
- (2) Examine the engine nacelle for signs of chaffing of the fan blades with the inner barrel.
- (3) Examine the surfaces and mechanisms of the slat 2.
- (4) Examine the wing upper and lower skin, from the Rib 13 to Rib 7 and give special attention to skin joints.
- (5) Examine the inboard flap surfaces and mechanisms.
- (6) Examine the inboard flap rods for signs of bending.
- (7) Engine:
 - Examine the engine mounts. Refer to [Figure 610](#)
 - Do the engine inspection (PW1900G PPMM PW1000G-A-72-00-00-09C-0B5A-A).

J. Phase-II Inspection - Zone F3

SUBTASK 210-015-A

- (1) **EFFECTIVITY: EMBRAER 190-E2 ACFT**
Examine the fuselage skin, from the radome to the station X=6070 (junction of the Forward Fuselage with the Center Fuselage I) and between the FR 69 (X=22956) and FR 85 (X=27600).
- (2) **EFFECTIVITY: EMBRAER 195-E2 ACFT**
Examine the fuselage skin, from the radome to the station X=6070 (junction of the Forward Fuselage with the Center Fuselage I) and between the FR 73 (X=281553) and FR 85 (X=32870).
- (3) Examine the forward electronic compartment and middle electronic compartment for loose components. Refer to [Figure 611](#).
- (4) Examine the RH forward G2 galley and its attachment to the fuselage. Refer to [Figure 612](#).
- (5) Examine the RH forward G1 galley and its attachment to the fuselage. Refer to [Figure 613](#).

K. Phase-II Inspection - Zone W3

SUBTASK 210-016-A

- (1) Examine the wing upper and lower skin, from Rib 7 to the wing root area.
- (2) Examine the region around the root area in the spars I, II, and III location lower and upper skin for buckles.

- (3) Examine the surface and mechanism of the slat 1.
- (4) Examine the region near the MLG uplock mechanism and its fixation.
- (5) Examine the attachments of the wing stub skin-to-wing main box (internal side of the wing-to- fuselage fairing) through the access panels 191AL and 191AR.

NOTE: It is not necessary to remove the wing-to-fuselage fairing.

L. Phase-III Inspection

SUBTASK 210-017-A

WARNING: MAKE SURE THAT THERE ARE NO PERSONS OR EQUIPMENT IN THE LANDING GEAR COMPARTMENT. THIS IS TO PREVENT INJURIES TO PERSONS AND/OR DAMAGE TO THE EQUIPMENT.

- (1) This inspection phase is only applicable when it is proved that the turbulence or extreme maneuver incident caused structural damage to the aircraft and EMBRAER disposition asks for this inspection phase.
- (2) Do the aircraft alignment check (AMM TASK 51-50-00-820-801-A/200).
- (3) Do an operational test of the flap control system (AMM TASK 27-50-00-710-801-A/500).
- (4) Do an operational test of the slat control system (AMM TASK 27-80-00-710-801-A/500).
- (5) Do an operational test of the aileron control system (AMM TASK 27-10-00-710-801-A/500).
- (6) Do an operational test of the spoiler system (AMM TASK 27-60-00-710-801-A/500).
- (7) Do an operational test of the rudder control system (AMM TASK 27-20-00-710-801-A/500).
- (8) Do an operational test of the horizontal stabilizer system (AMM TASK 27-40-00-710-801-A/500).
- (9) Do an operational test of the elevator control system (AMM TASK 27-30-00-710-801-A/500).

M. Job Close-Up


SUBTASK 940-004-A

- (1) Remove from the work area all tools, equipment, and materials that you used.

SUBTASK 410-003-A

- (2) Job Close-Up for the phase I inspection:
 - (a) Close the access door 314BR.
 - (b) Install the vertical stabilizer left panels 322AL and 322BL or the right panels 322AR and 322FR (AMM TASK 55-03-29-400-801-A/400).
- (3) Job Close-Up for the phase II inspection:

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

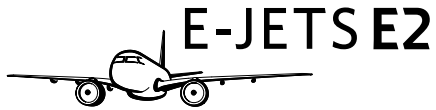

- (a) Close the access panels 191AL, 191AR, 192BL, and 194BR.
- (b) Close the access hatch 123BL (AMM SDS 52-43-00/1).
- (c) Close the access to the middle electronic compartment as follows:
 - 1 Install and close the access door 147AL (AMM TASK 52-46-00-400-801-A/400).
 - 2 Close the access door 197AL.


SUBTASK 940-005-A

- (4) Do the procedure to restore the aircraft after the maintenance procedures (AMM TASK 20-00-00-910-802-A/200).

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EFFECTIVITY: ALL

Severe or Extreme Turbulence/Maneuver or Buffeting Condition Inspection - Flowchart
Figure 601


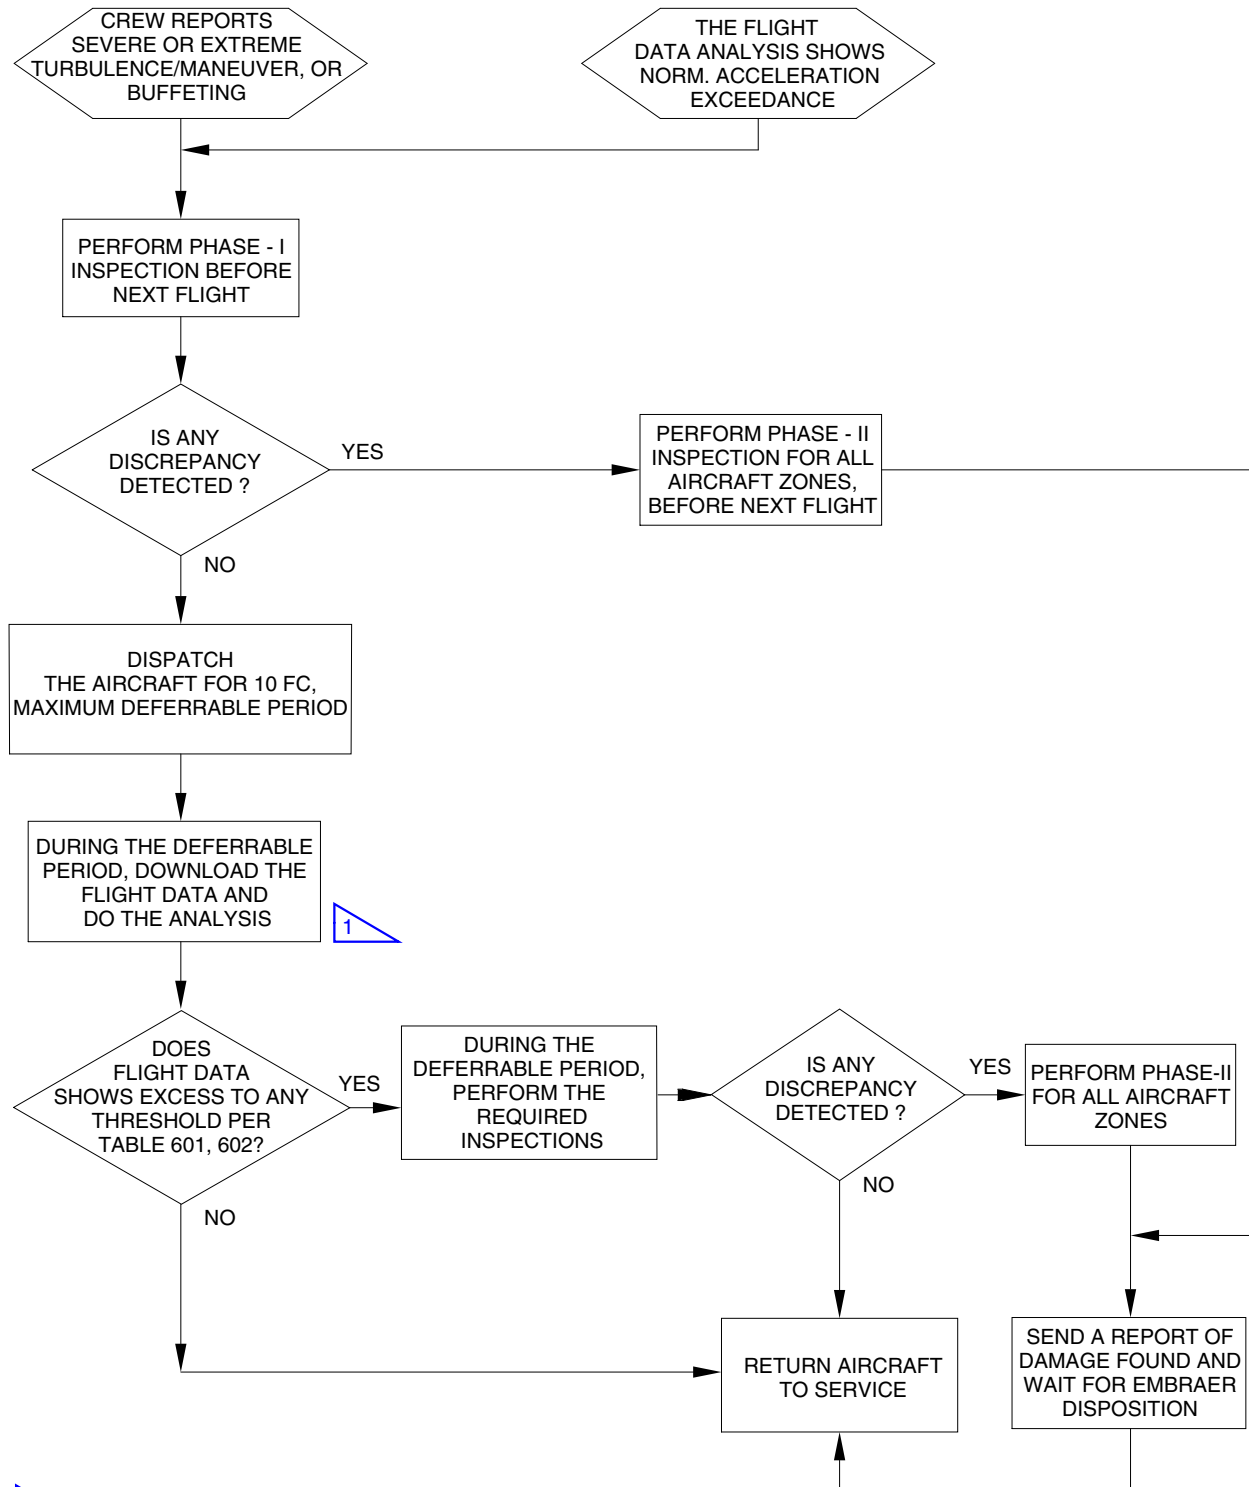


1 THE FLIGHT DATA DOWNLOAD MUST BE PERFORMED IN A MAXIMUM OF 20 FH. IF NOT, THE DATA CAN BE MISSED DUE TO THE RECORDING TIME OF THE UNIT.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00090D.IDR

EFFECTIVITY: EMBRAER 190-E2 ACFT
Turbulence/Extreme Maneuver Threshold Areas
Figure 602 - Sheet 1

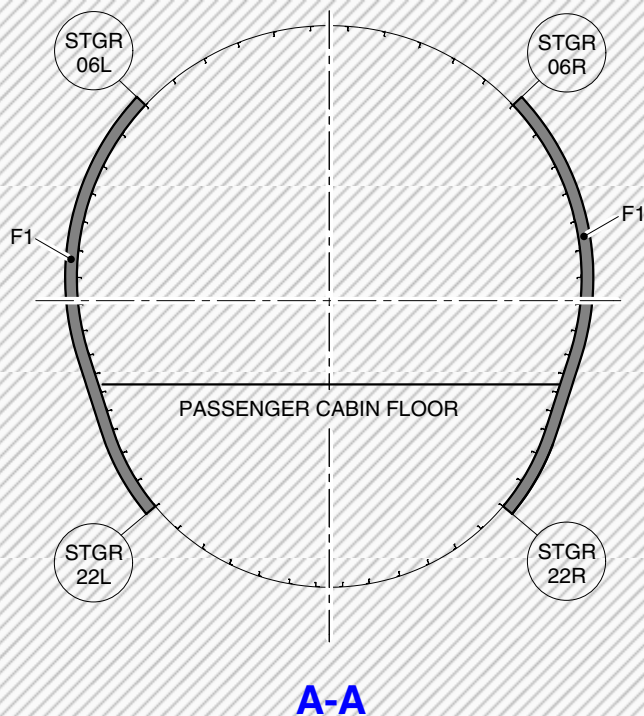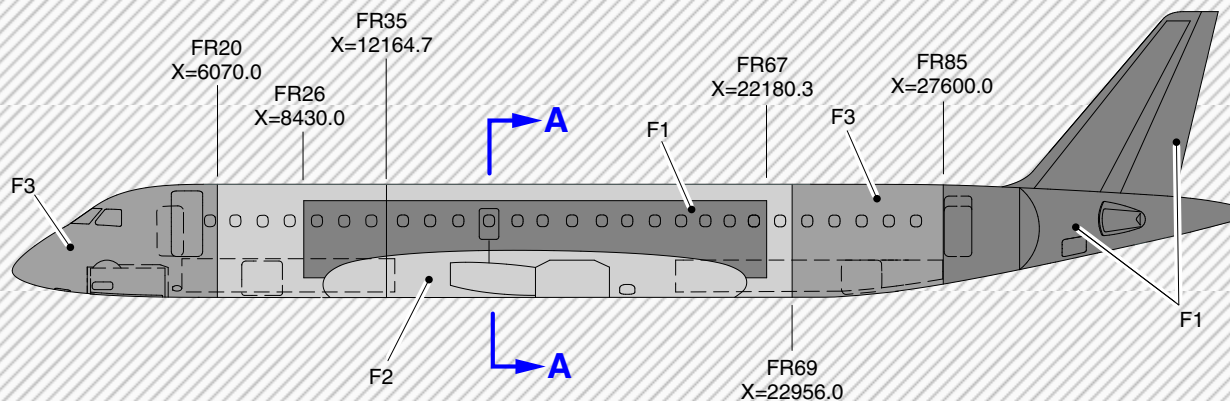

LEGEND:

G THRESHOLDS		
AREA	POSITIVE	NEGATIVE
F1, W1	< 1.9	> -0.7
F2, W2	1.9 TO 2.0	-0.7 TO -0.9
F3, W3	> 2.0	< -0.9



EFFECTIVITY: EMBRAER 190-E2 ACFT

Turbulence/Extreme Maneuver Threshold Areas

Figure 602 - Sheet 2





	G THRESHOLDS	
AREA	POSITIVE	NEGATIVE
F1, W1	< 1.9	> -0.7
F2, W2	1.9 TO 2.0	-0.7 TO -0.9
F3, W3	> 2.0	< -0.9

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00092A.IDR

EFFECTIVITY: EMBRAER 195-E2 ACFT
Turbulence/Extreme Maneuver Threshold Areas
Figure 603 - Sheet 1

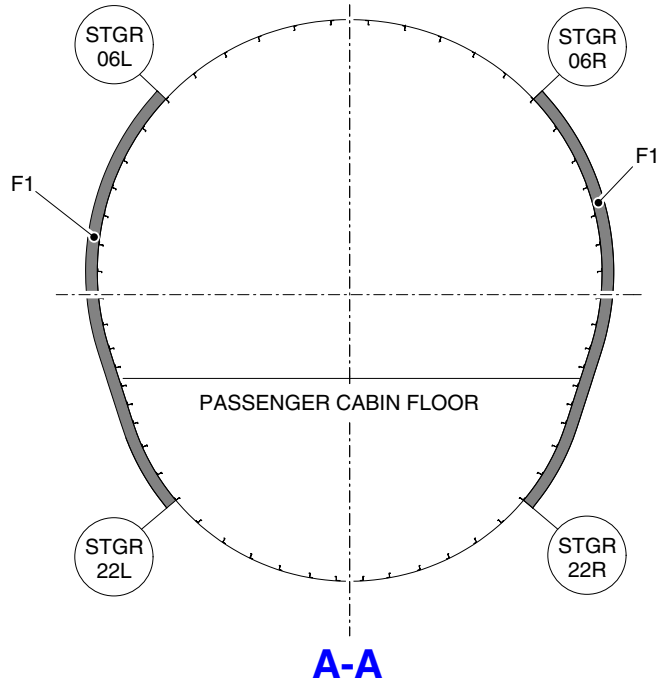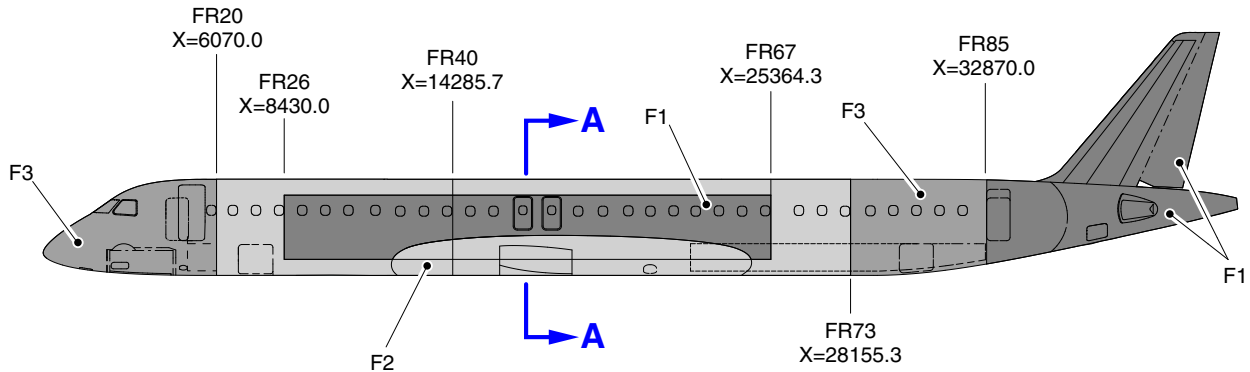


LEGEND:

G THRESHOLDS		
AREA	POSITIVE	NEGATIVE
F1, W1	< 1.9	> -0.1
F2, W2	-	-0.1 TO -0.6
F3, W3	> 1.9	< -0.6

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

PV170E2MPP-05-00247A.IDR

EFFECTIVITY: EMBRAER 195-E2 ACFT
Turbulence/Extreme Maneuver Threshold Areas
Figure 603 - Sheet 2

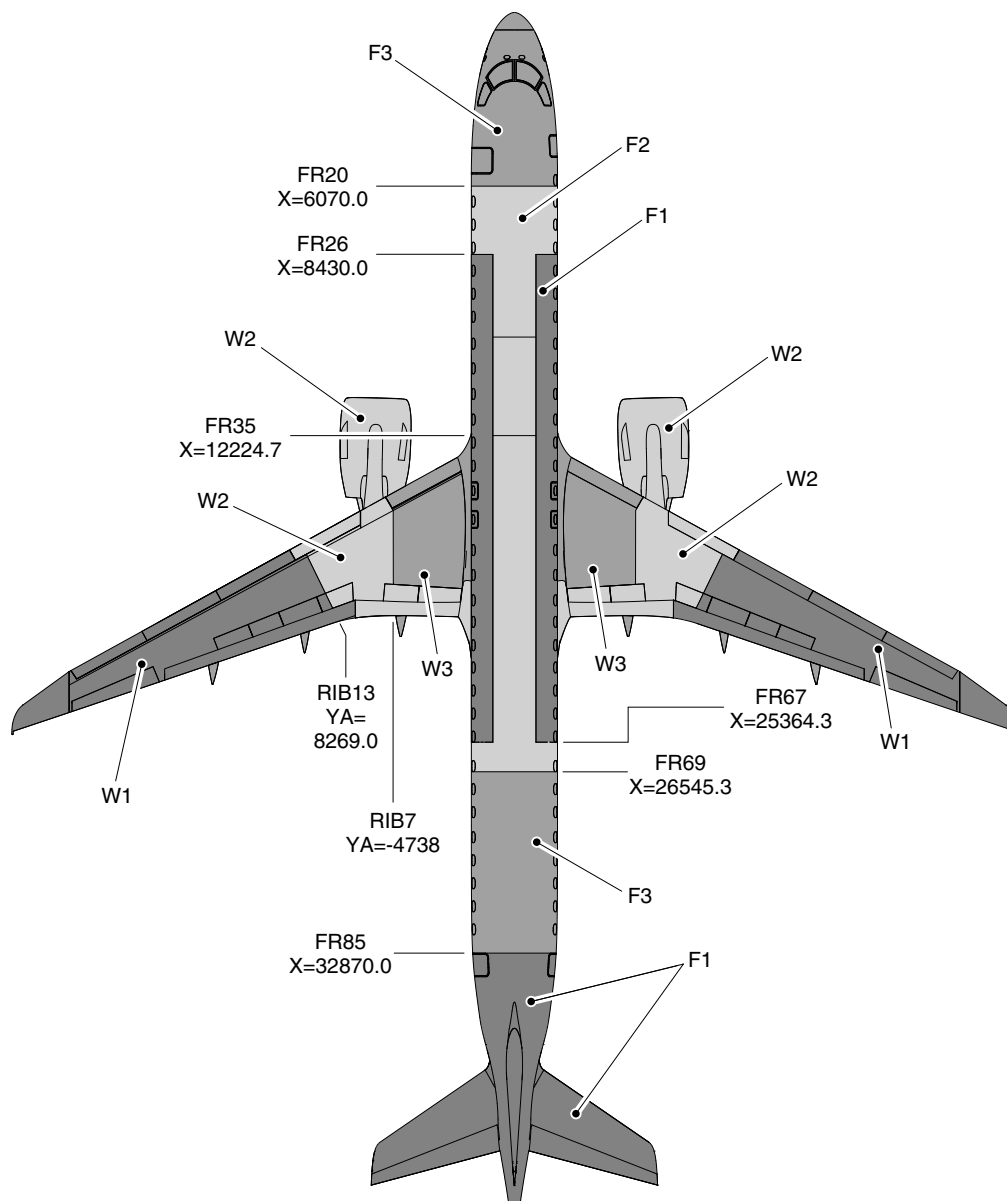

LEGEND:

G THRESHOLDS		
AREA	POSITIVE	NEGATIVE
F1, W1	< 1.9	> -0.1
F2, W2	-	-0.1 TO -0.6
F3, W3	> 1.9	< -0.6

EFFECTIVITY: ALL

Flight Data Source Analysis For Turbulence or Extreme Maneuver

Figure 604

Sample	FitNumber	Month	Day	GMT	NormAccel	Air/Gnd
4064	4350	5	29	20:04:02	0,938	GROUND
4065				20:04:03	0,966	GROUND
4066				20:04:04	1,027	GROUND
4067				20:04:05	1,133	AIR
4068	4350	5	29	20:04:06	1,043	AIR
4069				20:04:07	1,063	AIR
4070				20:04:08	1,047	AIR
4071				20:04:09	1,129	AIR
4072	4350	5	29	20:04:10	1,195	AIR
4073				20:04:11	1,184	AIR
4074				20:04:12	1,098	AIR
4075				20:04:13	1,145	AIR
4076	4350	5	29	20:04:14	1,121	AIR
4077				20:04:15	0,992	AIR
4078				20:04:16	0,996	AIR
4079				20:04:17	1,027	AIR
5433	4350	5	29	20:26:51	1,020	AIR
5434				20:26:52	1,001	AIR
5435				20:26:53	0,853	AIR
5436				20:26:54	0,332	AIR
5437	4350	5	29	20:26:55	0,344	AIR
5438				20:26:56	-0,035	AIR
5439				20:26:57	0,055	AIR
5440				20:26:58	0,832	AIR
5441	4350	5	29	20:26:59	1,115	AIR
5442				20:27:00	1,254	AIR
5443				20:27:01	1,564	AIR
5444				20:27:02	1,715	AIR
5445	4350	5	29	20:27:03	1,230	AIR
5446				20:27:04	1,112	AIR
5447				20:27:05	1,056	AIR
5448				20:27:06	1,008	AIR
5449	4350	5	29	20:27:07	1,356	AIR
5450				20:27:08	1,016	AIR
6783	4350	5	29	20:49:21	1,145	AIR
6784				20:49:22	0,992	AIR
6785				20:49:23	1,035	AIR
6786				20:49:24	1,004	AIR
6787	4350	5	29	20:49:25	1,129	AIR
6788				20:49:26	1,078	AIR
6789				20:49:27	1,066	AIR
6790				20:49:28	1,008	AIR
6791	4350	5	29	20:49:29	1,090	AIR
6792				20:49:30	1,031	AIR
6793				20:49:31	0,992	AIR
6794				20:49:32	1,016	AIR
6795	4350	5	29	20:49:33	0,961	AIR
6796				20:49:34	1,211	GROUND
6797				20:49:35	0,949	GROUND
6798				20:49:36	1,000	GROUND


NOTE:

FLIGHT DATA SHOWN AT A RATE OF ONE SAMPLE PER SECOND, FOR CLARITY. USE THE HIGHEST AVAILABLE DATA RATE (8 SAMPLES PER SECOND).

- 1 IDENTIFY THE FLIGHT NUMBER TO WHICH SEVERE OR EXTREME TURBULENCE OR MANEUVER HAS BEEN REPORTED.
- 2 IDENTIFY THE TAKE OFF.
- 3 IDENTIFY THE LANDING.
- 4 DISCARD 10 SEC OF DATA AFTER TAKE OFF.
- 5 DISCARD 10 SEC OF DATA BEFORE THE LANDING.
- 6 FOR THE REMAINING DATA, IDENTIFY THE HIGHEST AND THE LOWEST RECORDED VALUE FOR THE NORMAL ACCELERATION.

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE. BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EFFECTIVITY: ALL
Phase-I - Inspection
Figure 605

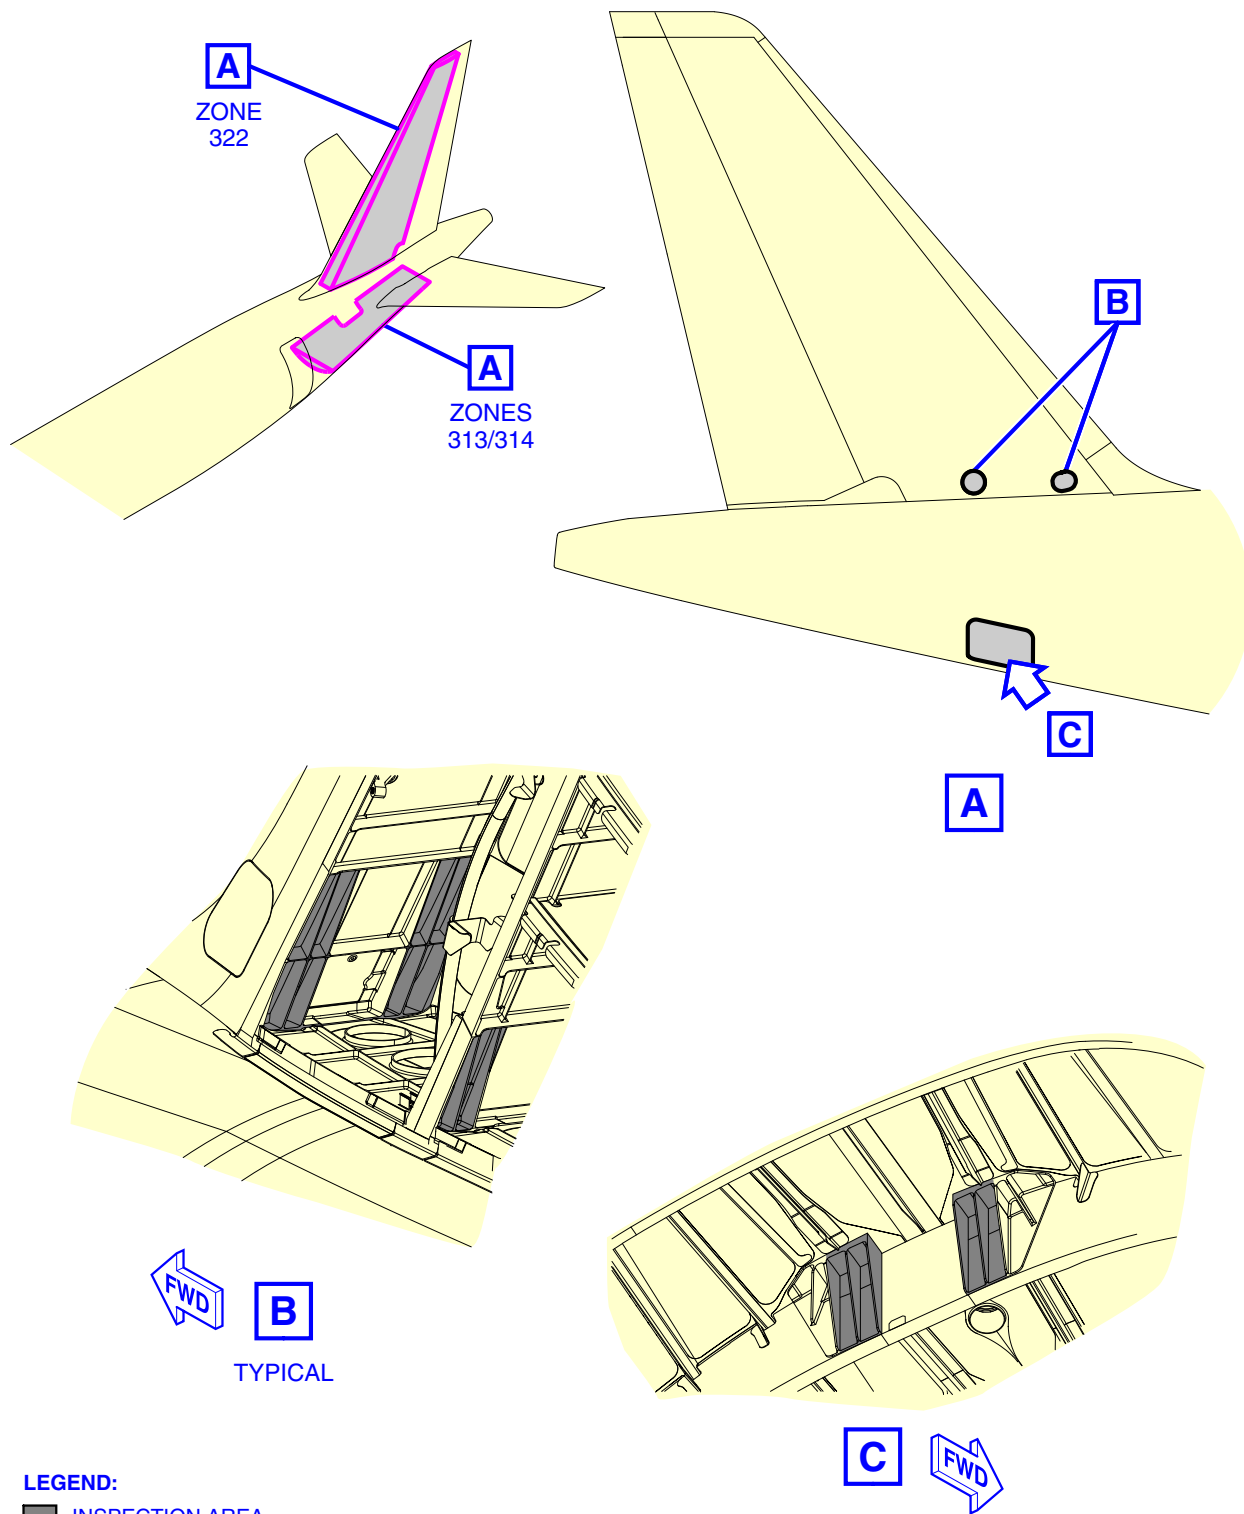


HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00094A.IDR

Filtered Serial N° contained in this publication: 20186


EFFECTIVITY: ALL
Phase-I - Inspection
Figure 606

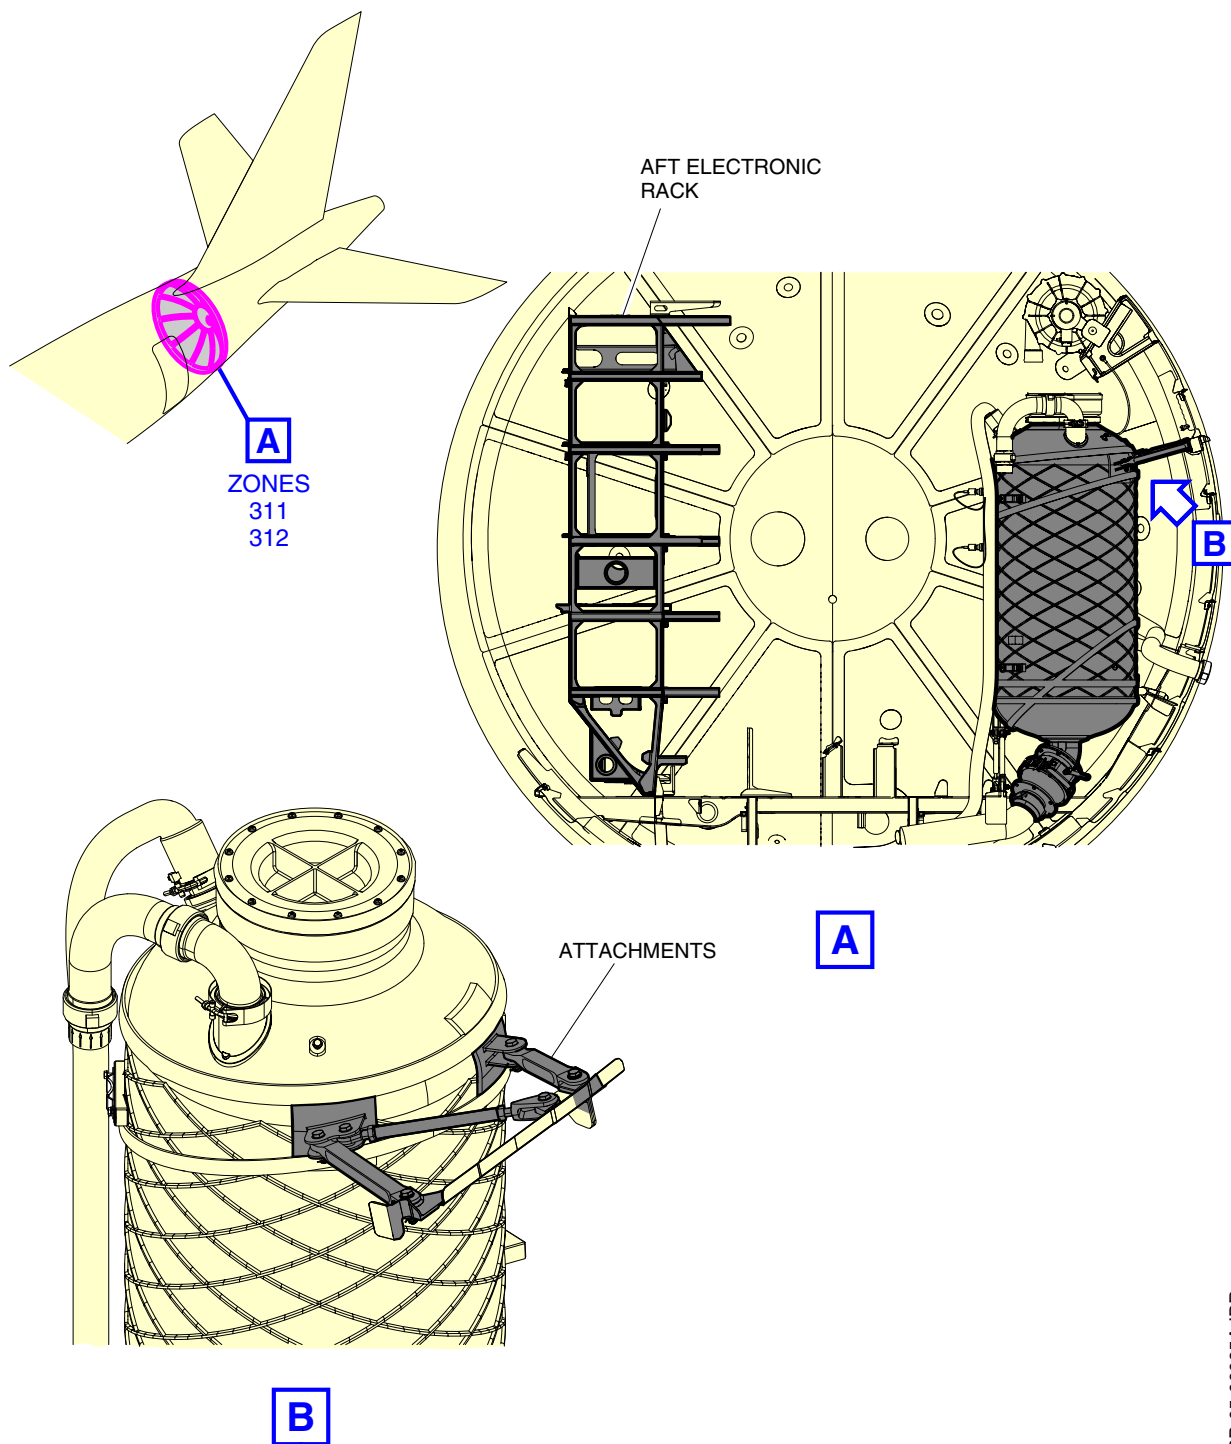

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00095A.IDR

EFFECTIVITY: ALL
Phase-I - Inspection
Figure 607

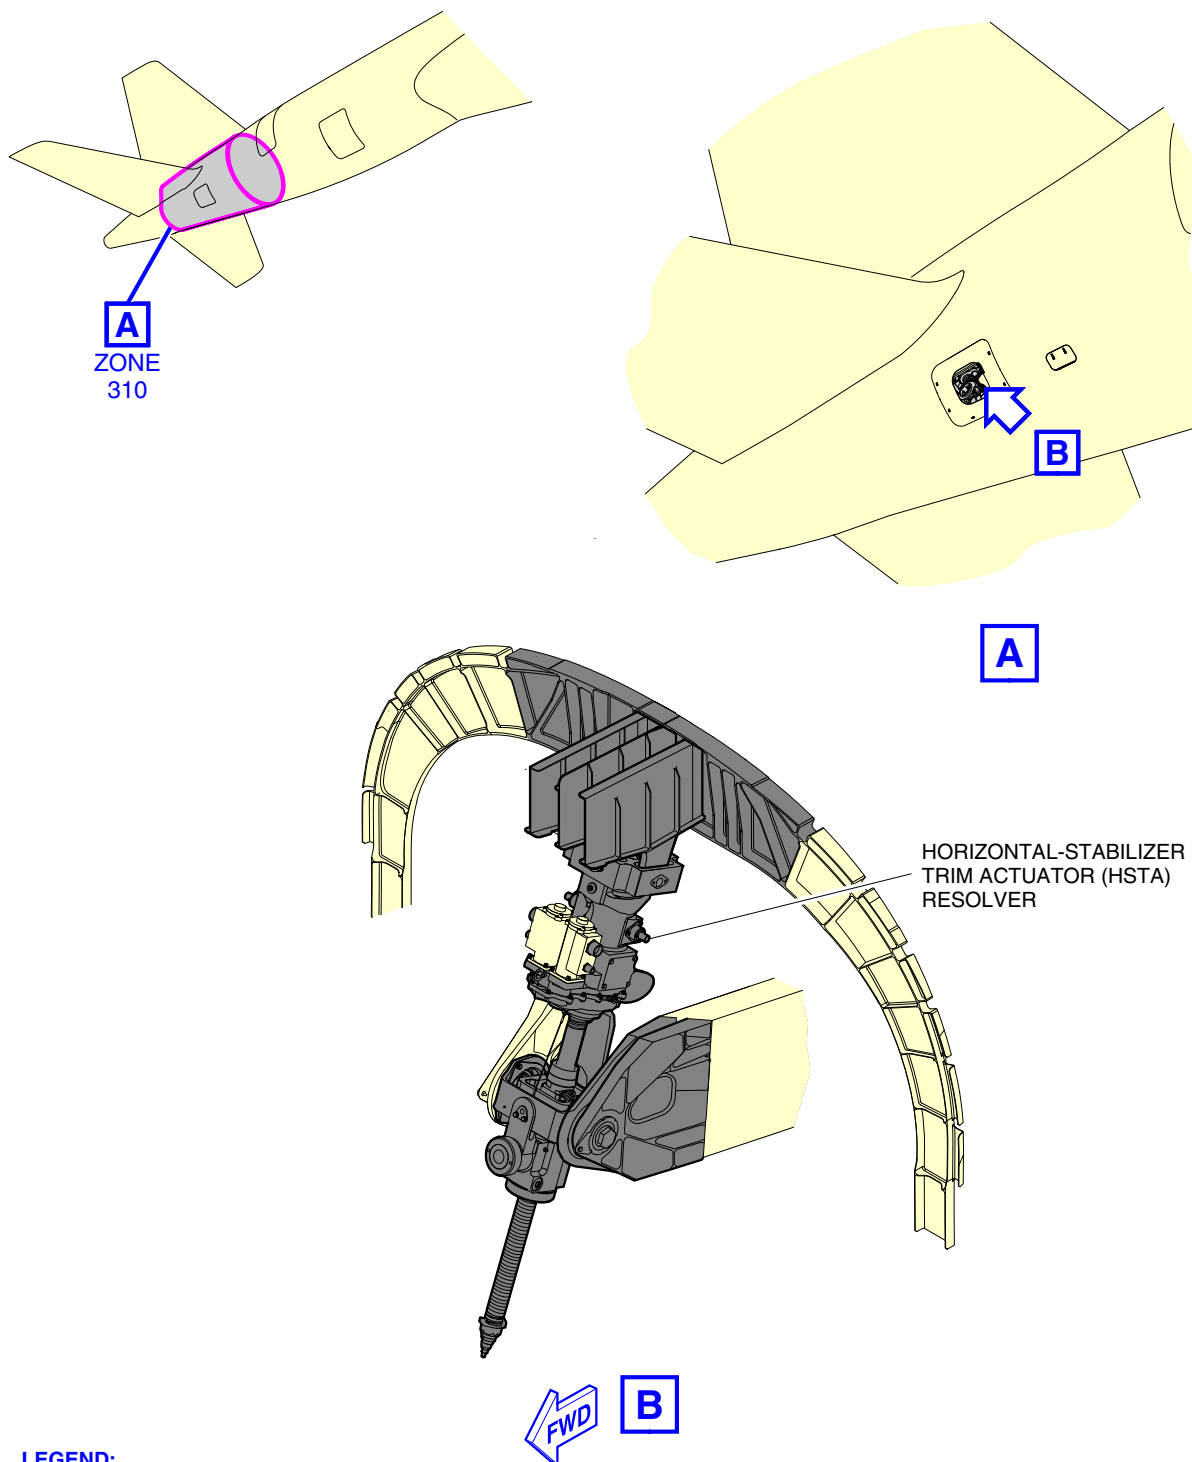


LEGEND:
■ INSPECTION AREA

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00106A.IDR

EFFECTIVITY: ALL
Phase-I - Inspection
Figure 608

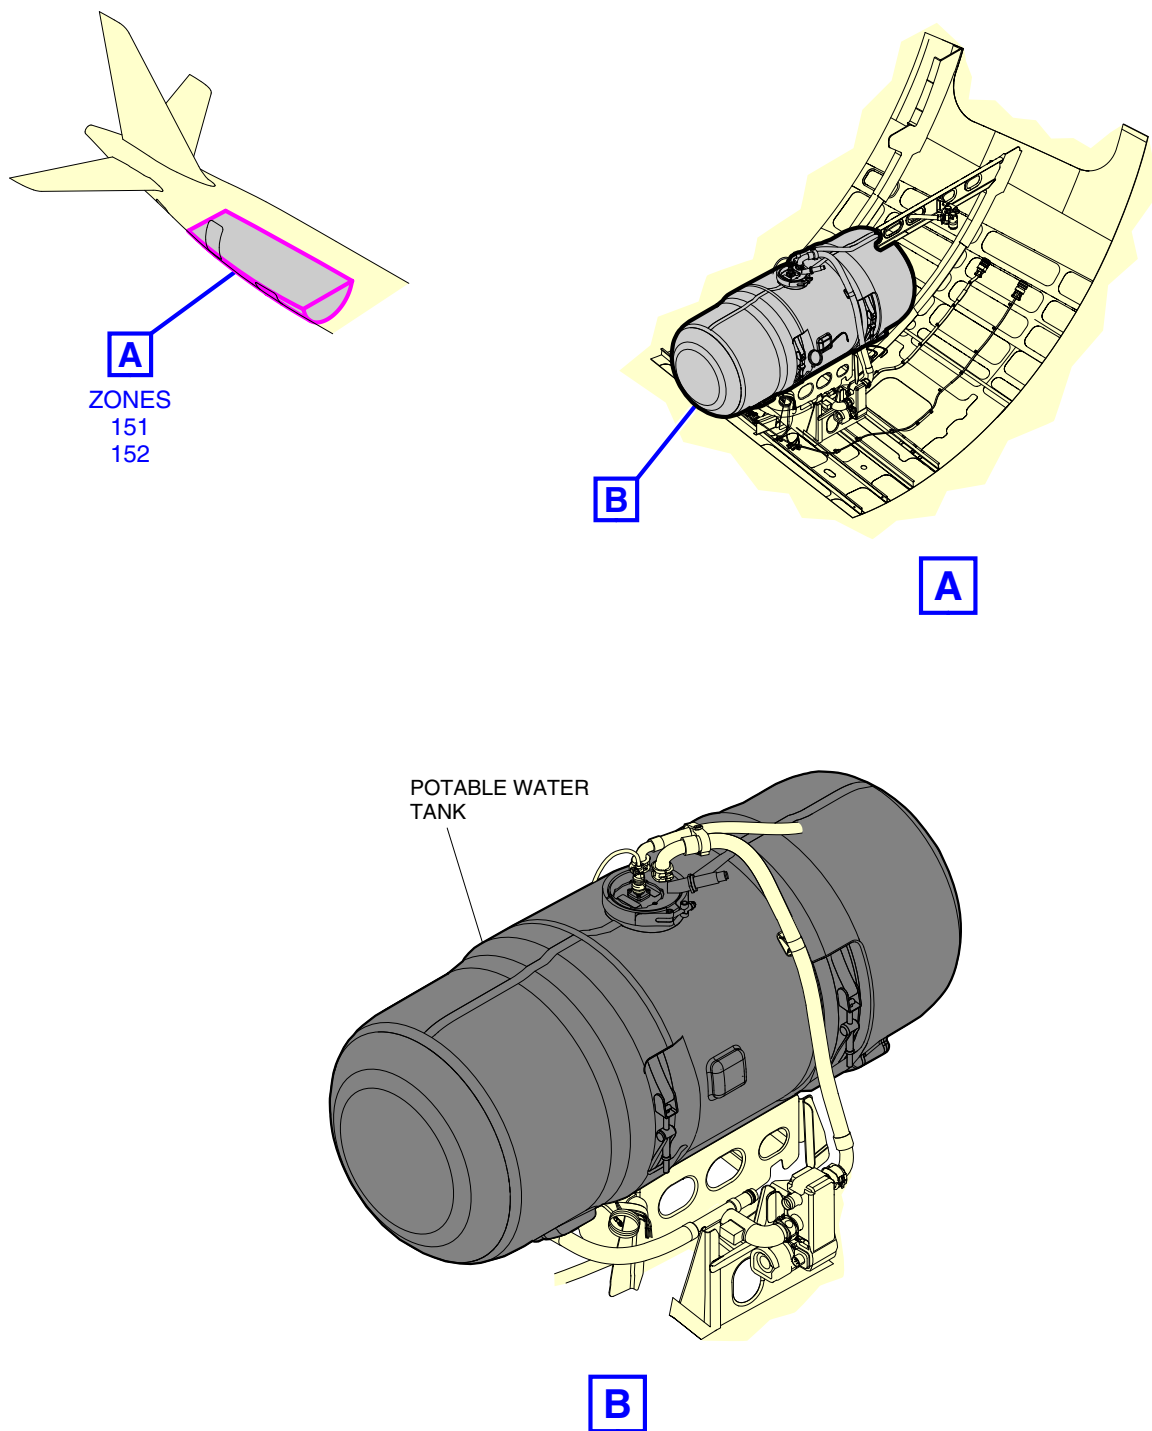


LEGEND:
■ INSPECTION AREA

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00107A.IDR


EFFECTIVITY: ALL
Phase-I - Inspection
Figure 609

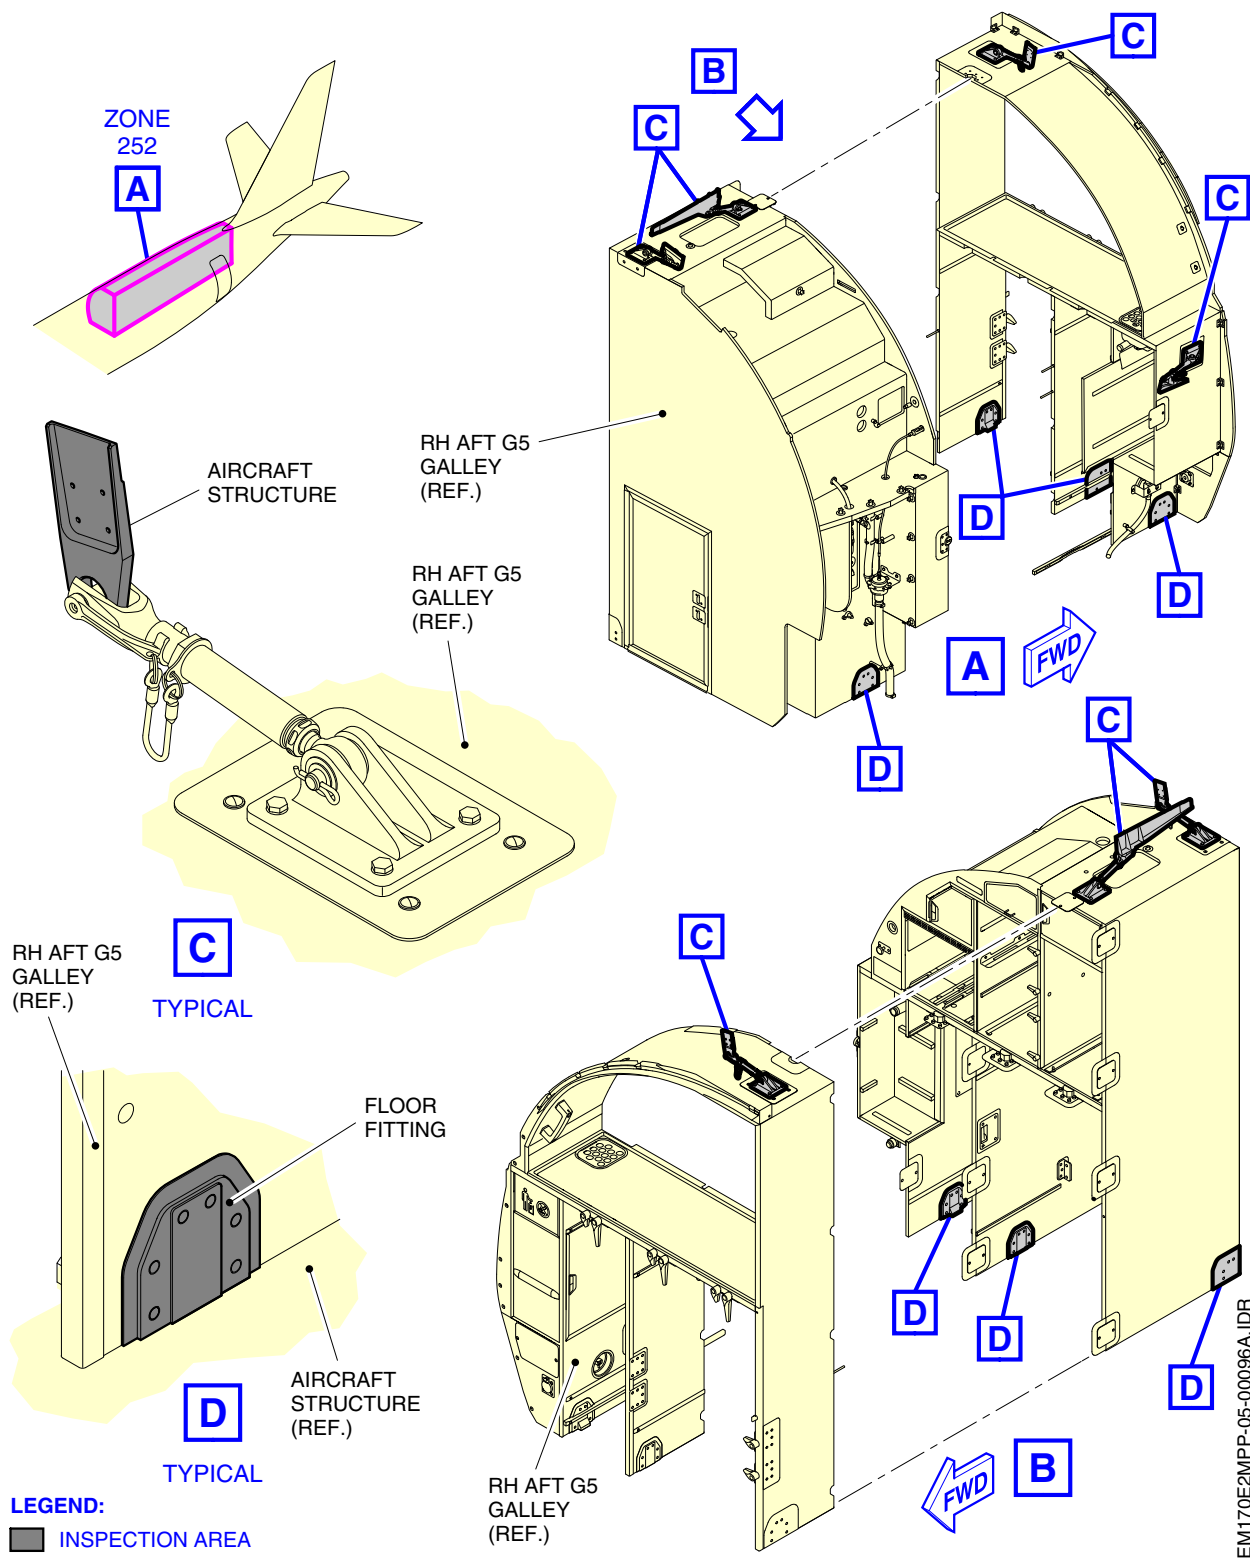

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 20186


EFFECTIVITY: ALL
Zone W2 - Inspection
Figure 610

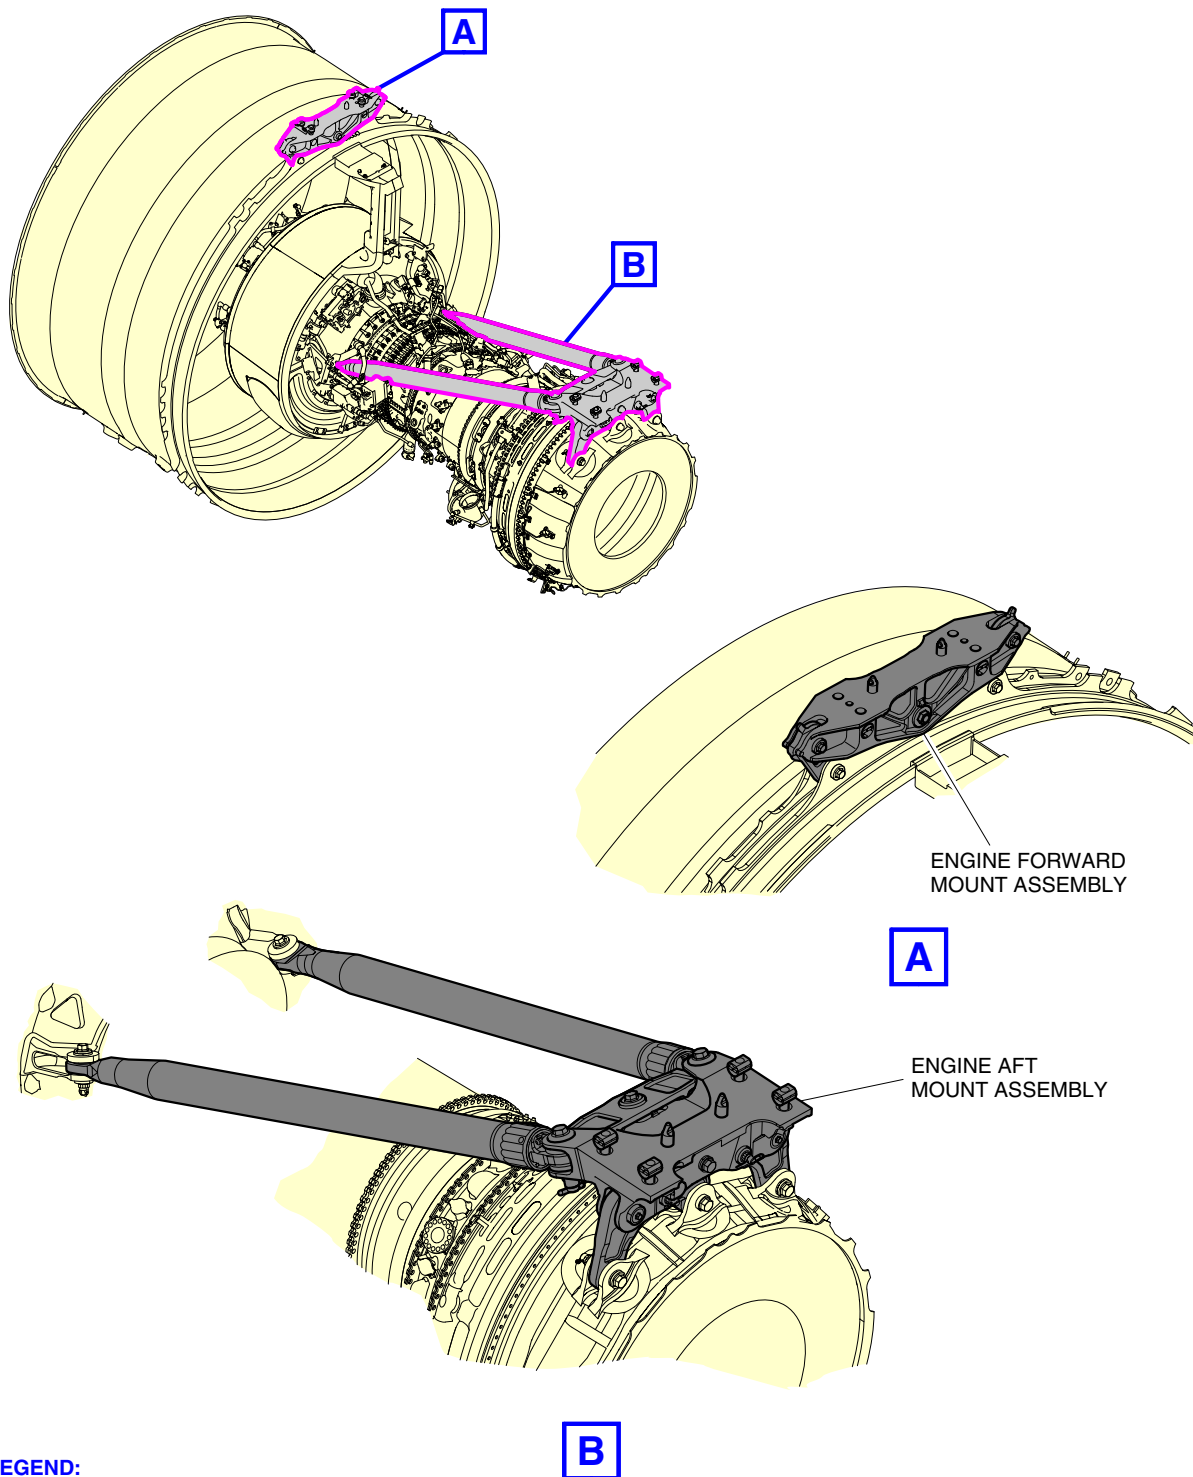

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00097A.IDR


EFFECTIVITY: ALL
Zone F3 - Inspection
Figure 611

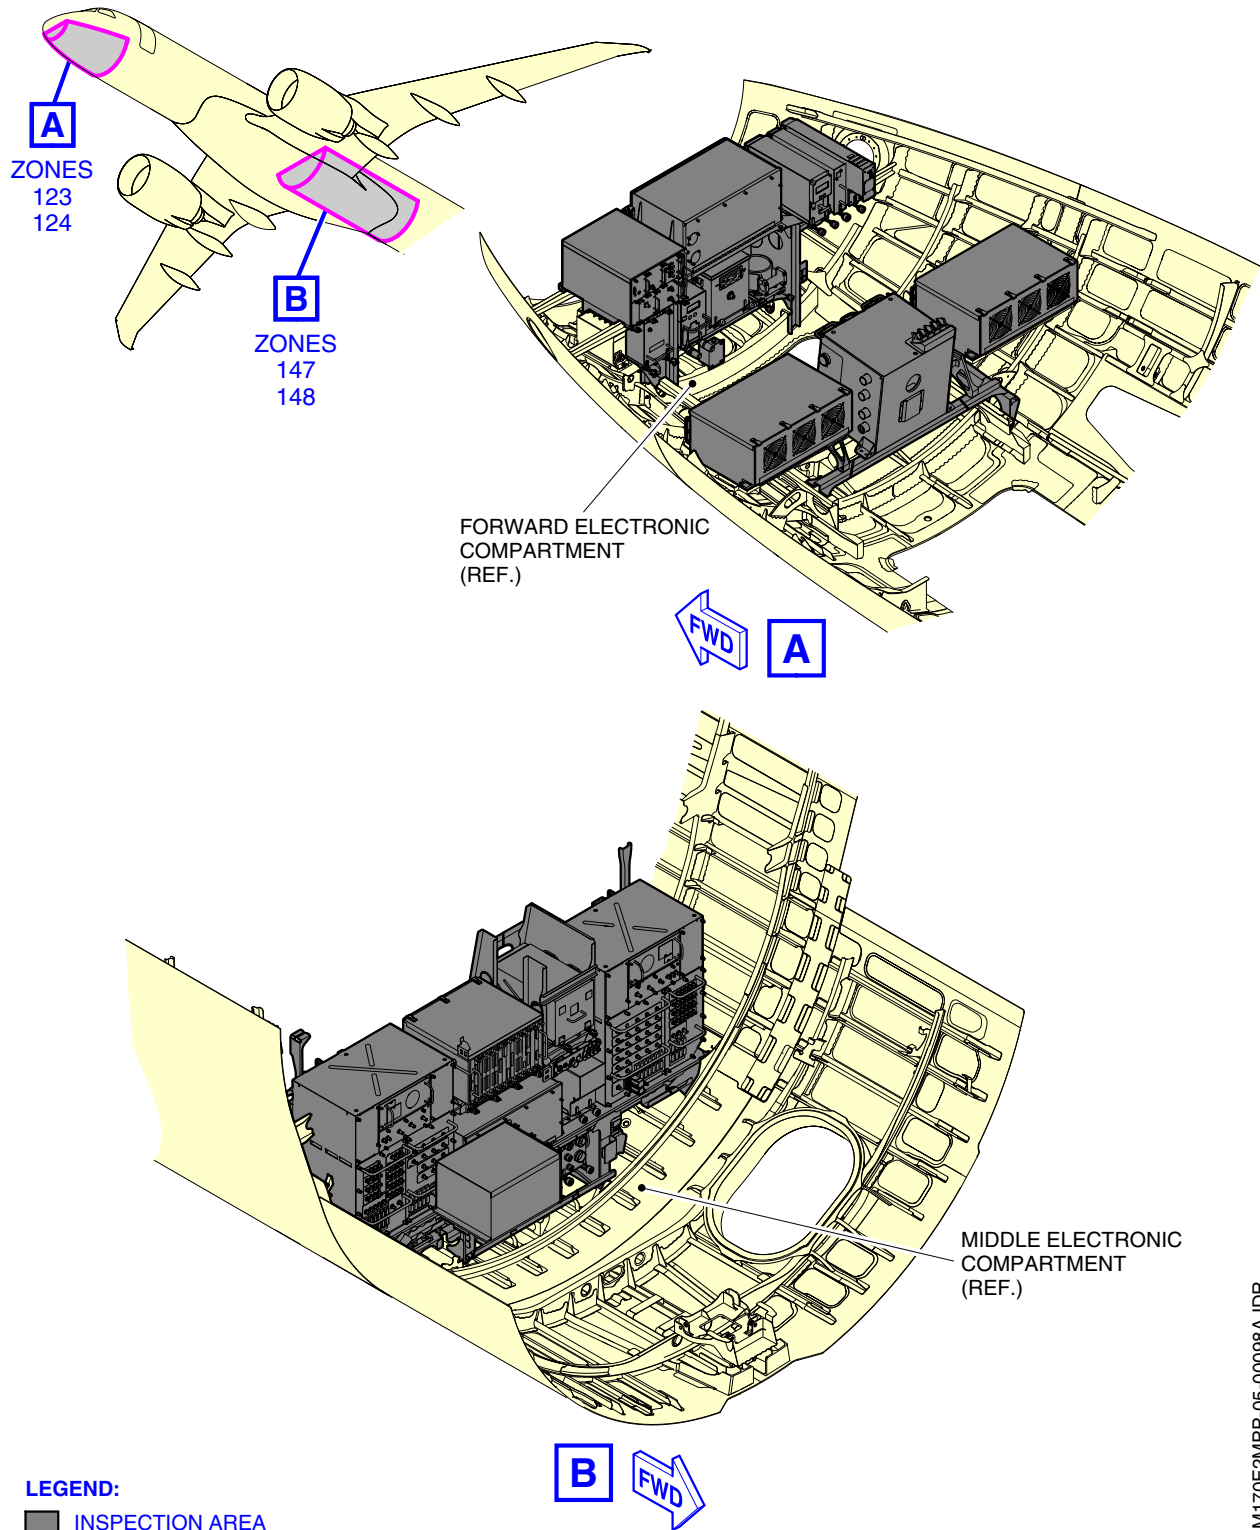

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00098A.IDR


EFFECTIVITY: ALL
Zone F3 - Inspection
Figure 612

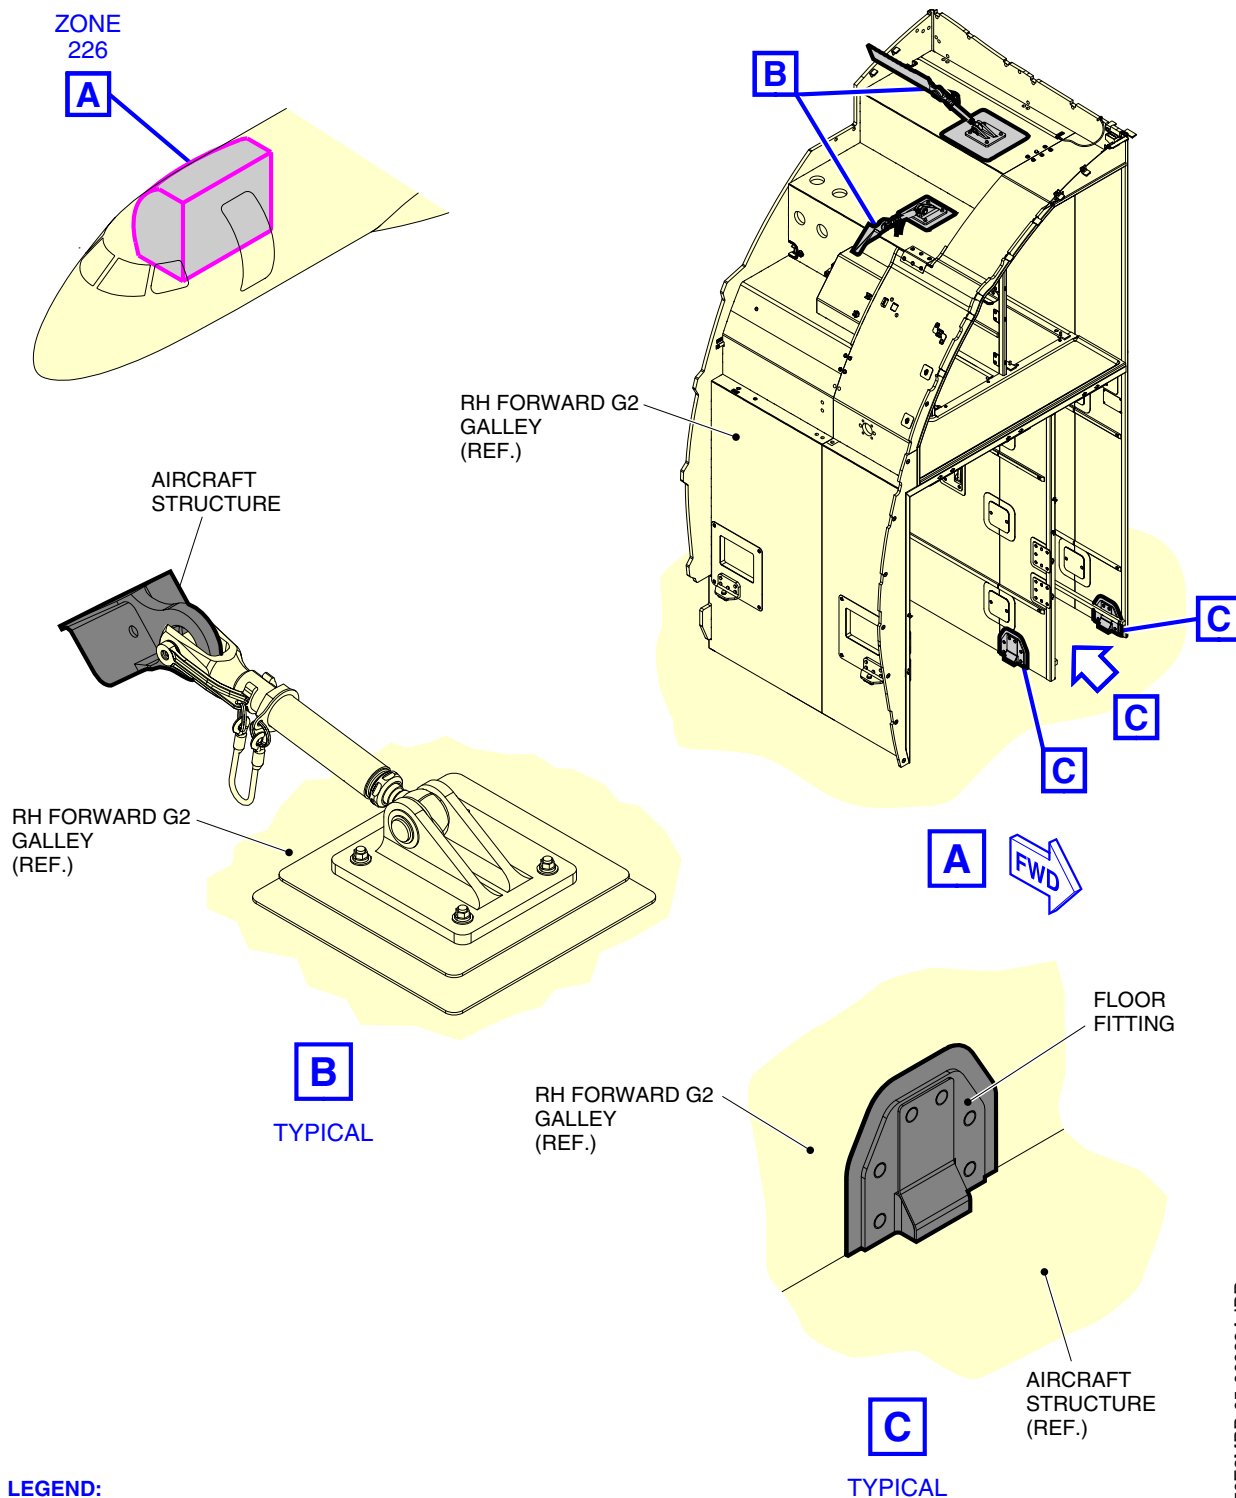

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

EM170E2MPP-05-00099A.IDR

EFFECTIVITY: ALL
Zone F3 - Inspection
Figure 613

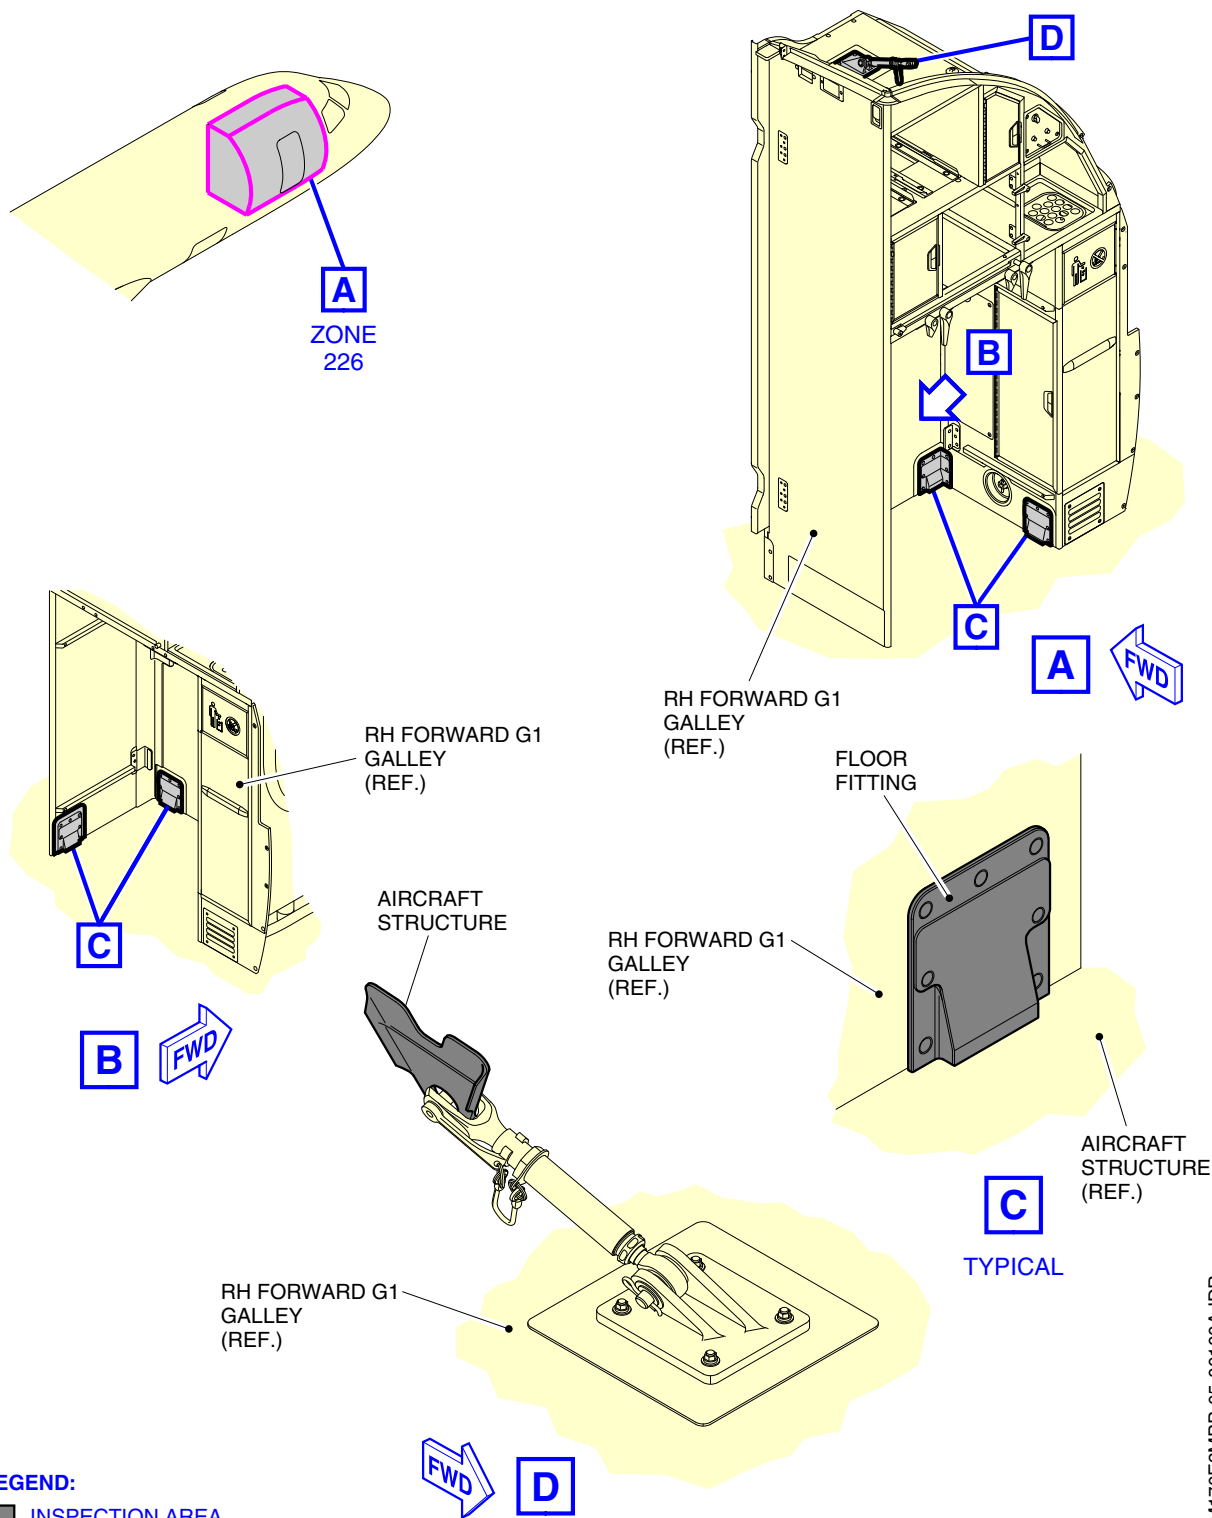

HARD COPY IS UNCONTROLLED. ONCE PRINTED, THIS PAGE MUST NOT BE RETAINED FOR FUTURE REFERENCE.
BEFORE USING, MAKE SURE THIS HARD COPY IS THE LATEST ISSUE.

Filtered Serial N° contained in this publication: 20186

EM170E2MPP-05-00100A.IDR