DUST1 Carrier Board

Top

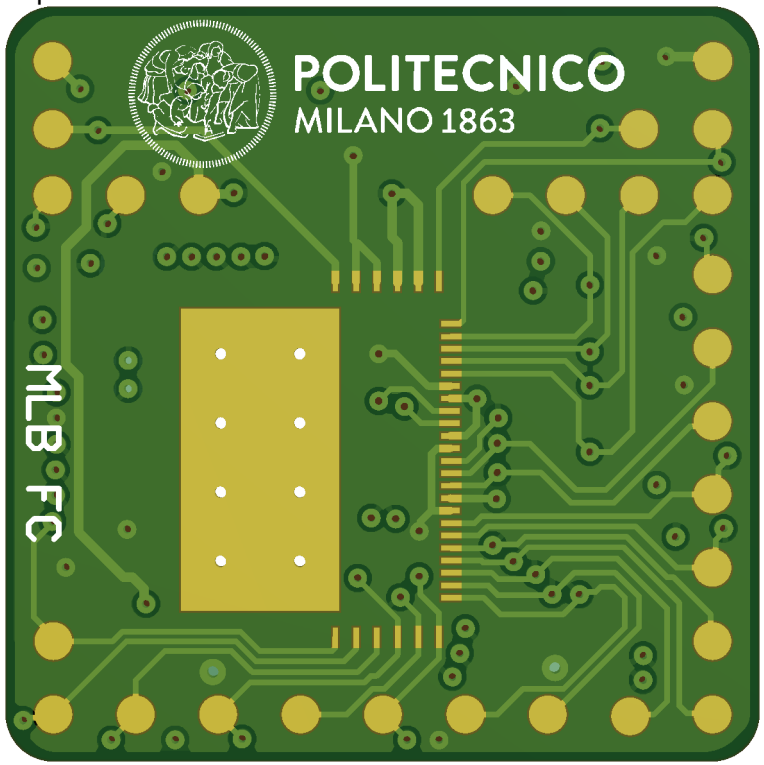

Bottom

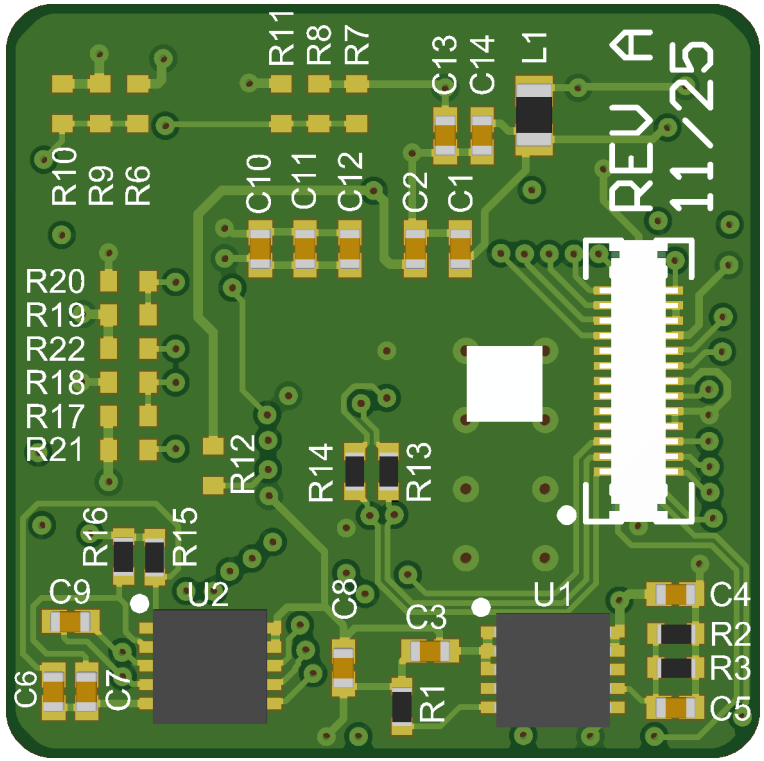

Assembly

View from Bottom side (Scale 7.5:1)

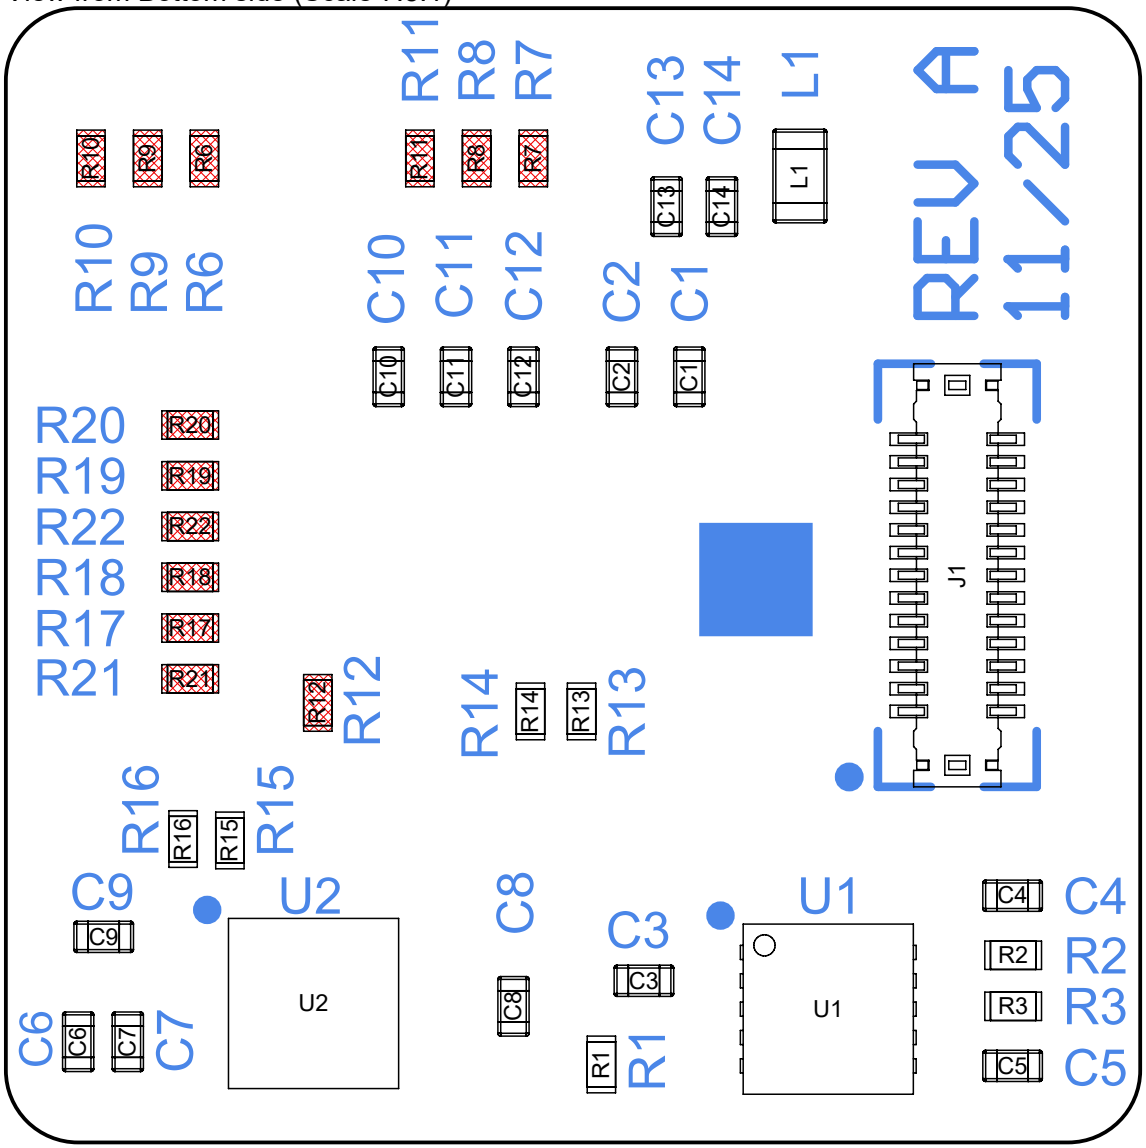

The following resistances must NOT be placed:

R6, R7, R8, R9, R10, R11, R12, R17, R18, R19, R20, R21, R22

Layers

Top Layer (Signal) (Scale 4:1)

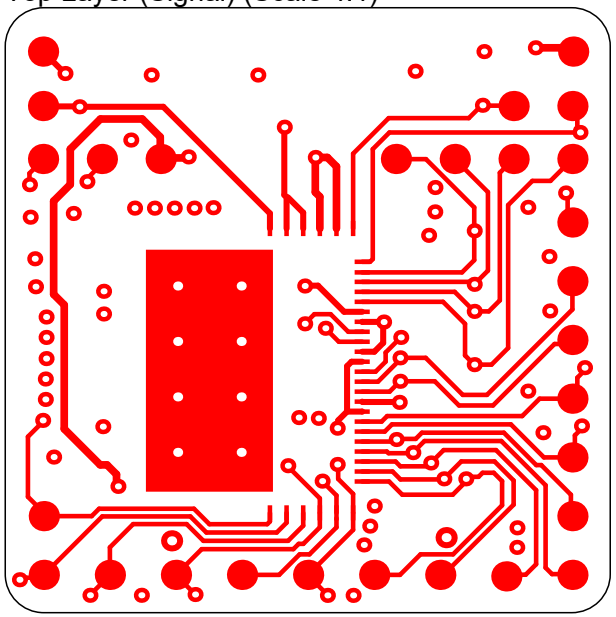

Layer 1 (GND) (Scale 4:1)

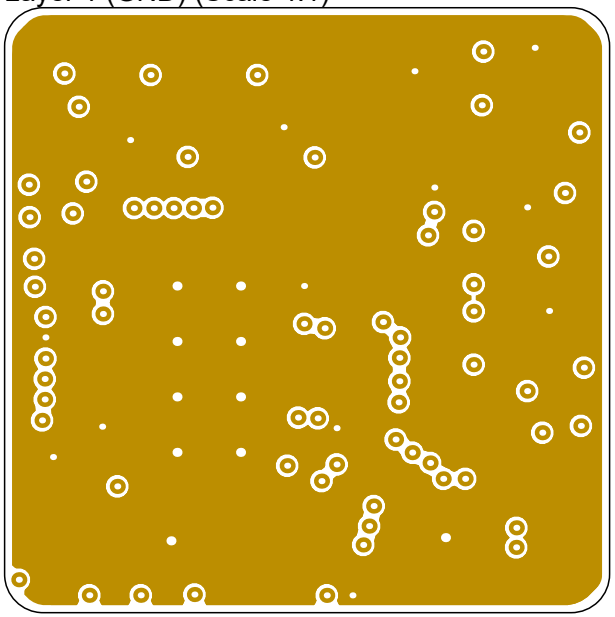

Layer 2 (Signal) (Scale 4:1)

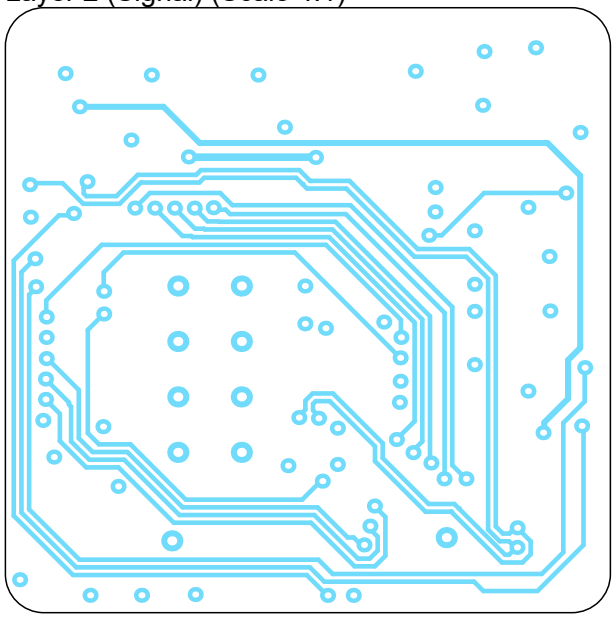

Layer 3 (PWR) (Scale 4:1)

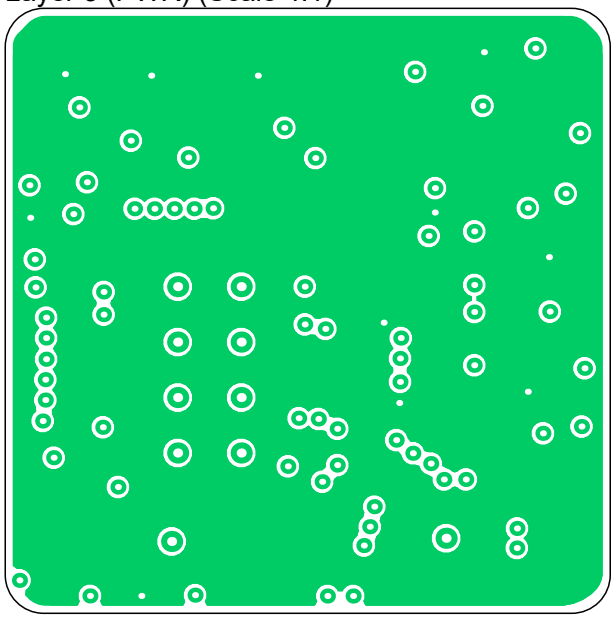

Layer 4 (GND) (Scale 4:1)

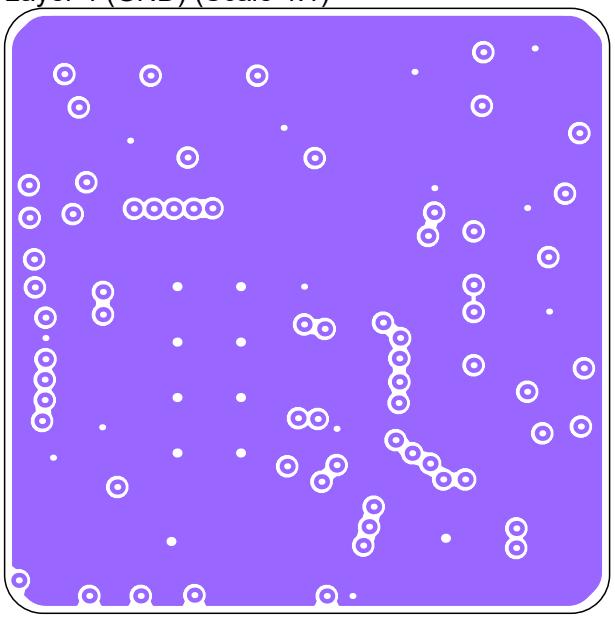
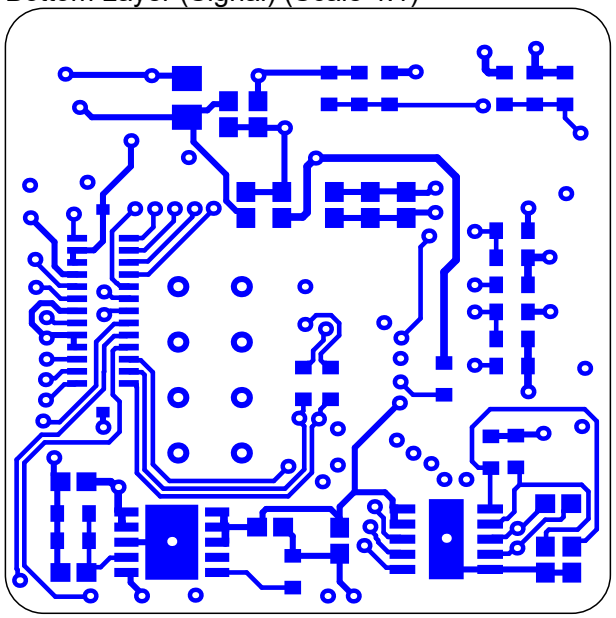
Bottom Layer (Signal) (Scale 4:1)