

FAN COILS ACCESSORY ELECTRIC HEATERS

WIRING DIAGRAMS

FIG.	FIELD-INSTALLED HEATER MODEL	FA4C	FY4A	FC4D	FX4C	FH4C	FK4D FV4B	FE4A FE5A
1	KFCEH0401N03	018-024	018-024	018-024	018-024	001		
1	KFCEH0501N05	018-060	018-060	018-060	018-060	001, 002	001-006	001-006
1	KFCEH2401C05	018-060	018-060	018-060	018-060	001, 002	001-006	001-006
1	KFCEH0801N08	018-060	018-060	018-060	018-060	001-004	001-006	
1	KFCEH2501C08	018-060	018-060	018-060	018-060	001, 002	001-006	
2	KFCEH2901N09*	036-060	036-060	036-060	036-060	002-004	001-006	001-006
1	KFCEH0901N10	018-060	018-060	018-060	018-060	001-004	001-006	001-006
1	KFCEH2601C10	018-060	018-060	018-060	018-060	001-004	001-006	001-006
3	KFCEH3001F15	024-060	024-060	024-060	024-060	001-004	001-006	001-006
3	KFCEH3101C15*	024-060	024-060	024-060	024-060	001-004	001-006	001-006
4	KFCEH3201F20*	030-060	030-060	030-060	030-060	002-004	001-006	001-006
4	KFCEH3301C20*	030-060	030-060	030-060	030-060	002-004	001-006	001-006
5	KFCEH1601315	036-060	036-060	036-060	036-060	002-004		001-006
6	KFCEH2001318	042-060	042-060	042-060	042-060	003, 004	003-006	
7, 8	KFCEH3401F24*	048, 060	048, 060	048, 060	048, 060	003, 004	005, 006	005, 006
7, 8	KFCEH3501F30*	048, 060	048, 060	048, 060	048, 060	003, 004	005, 006	005, 006

*Intelligent Heat Staging Capable

FIG.	FACTORY INSTALLED HEATER MODEL	FA4C, FY4A
9	MKFCEH0501N05	018, 024
9	MKFCEH0801N08	018, 030
9	MKFCEH0901N10	024-060
10	MKFCEH1501F15	036-060

FIG.	HEATER MODEL	FF1E
13	KFDEH0801D05	018-036
13	KFDEH0901D75	018-036
13	KFDEH1001D11	018-036
13	MKFDEH0801D05	018-036
13	MKFDEH0901D75	018-036
13	MKFDEH1001D11	018-036

FIG.	FACTORY INSTALLED HEATER MODEL	FC4D	FX4C
11	MKFCEH0501N05	018, 024	018, 024
11	MKFCEH0801N08	030, 036	030
11	MKFCEH0901N10	036-060	036-060
12	MKFCEH1501F15	042-060	042-060

FAN COIL WITH COOLING ONLY CONTROL		
Fig.	Model	
14	FE4A / FE5A	001-006
15	FV4B / FK4D	001-006
16	FC4D / FX4C	018-060
17	FA4C / FY4A	018-060

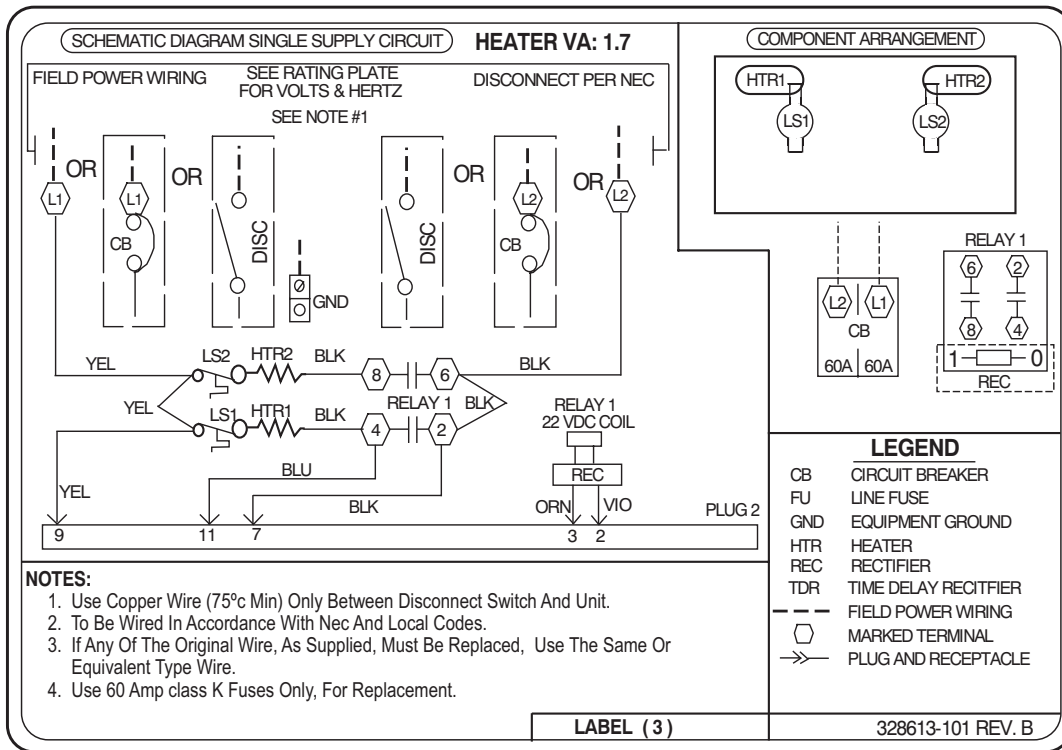


Fig. 1 – 328613-101

A07001

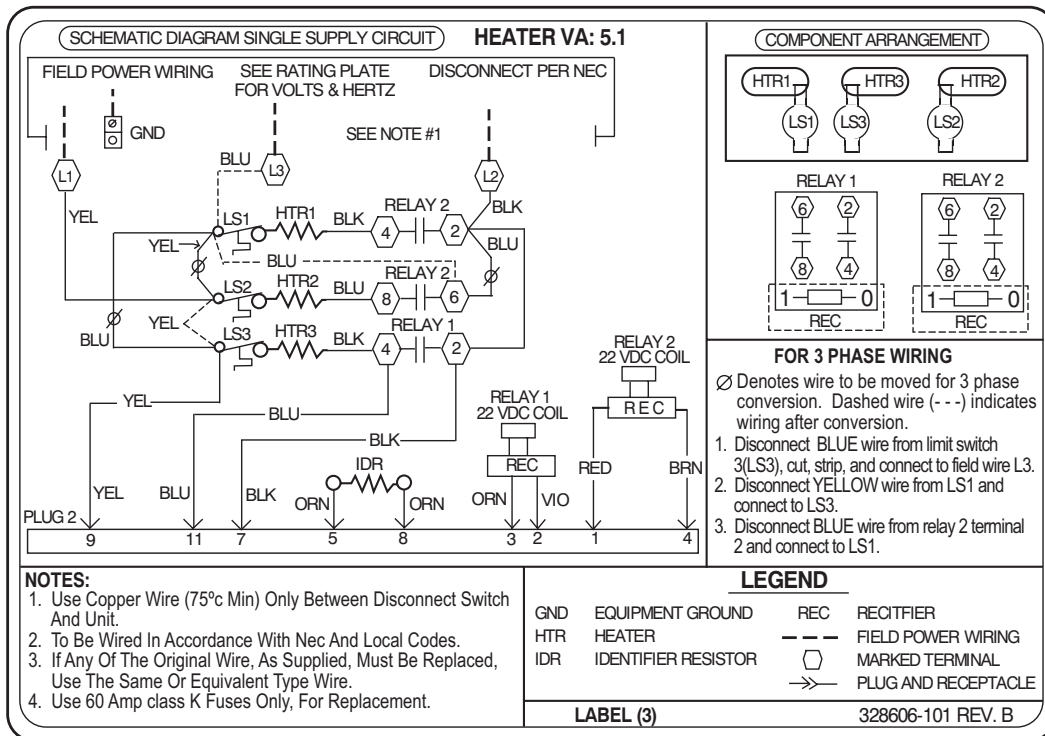


Fig. 2 – 328606-101

A07002

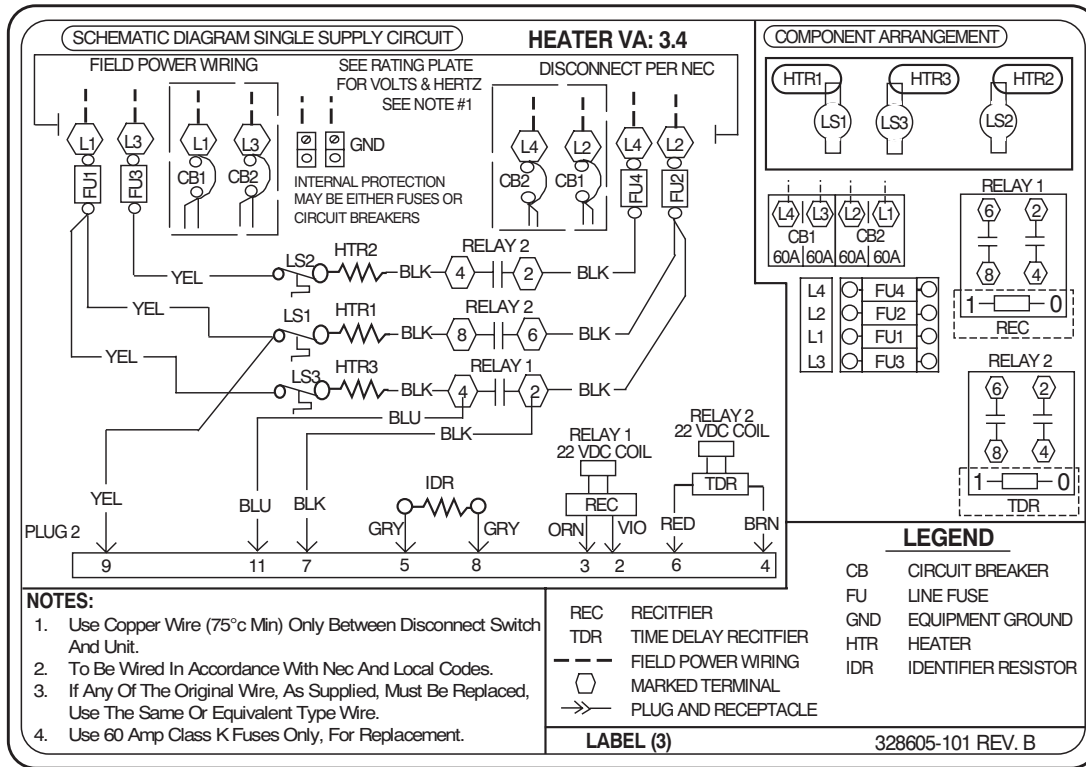


Fig. 3 – 328605-101

A07003

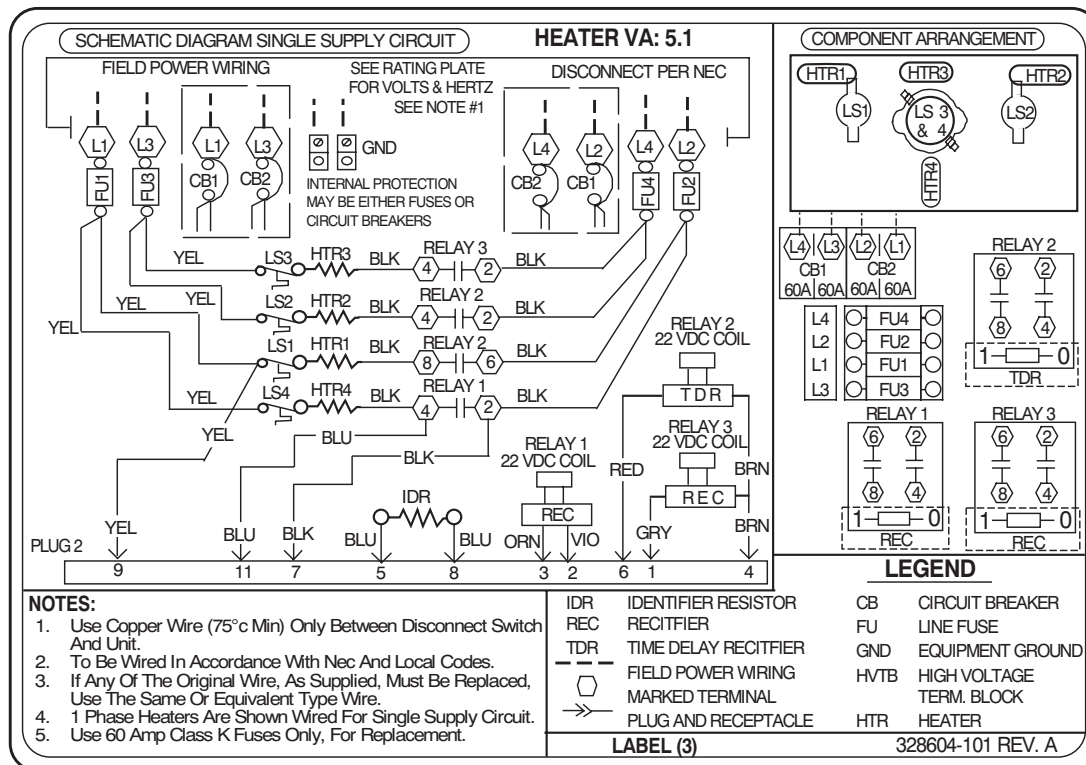


Fig. 4 – 328604-101

A07004

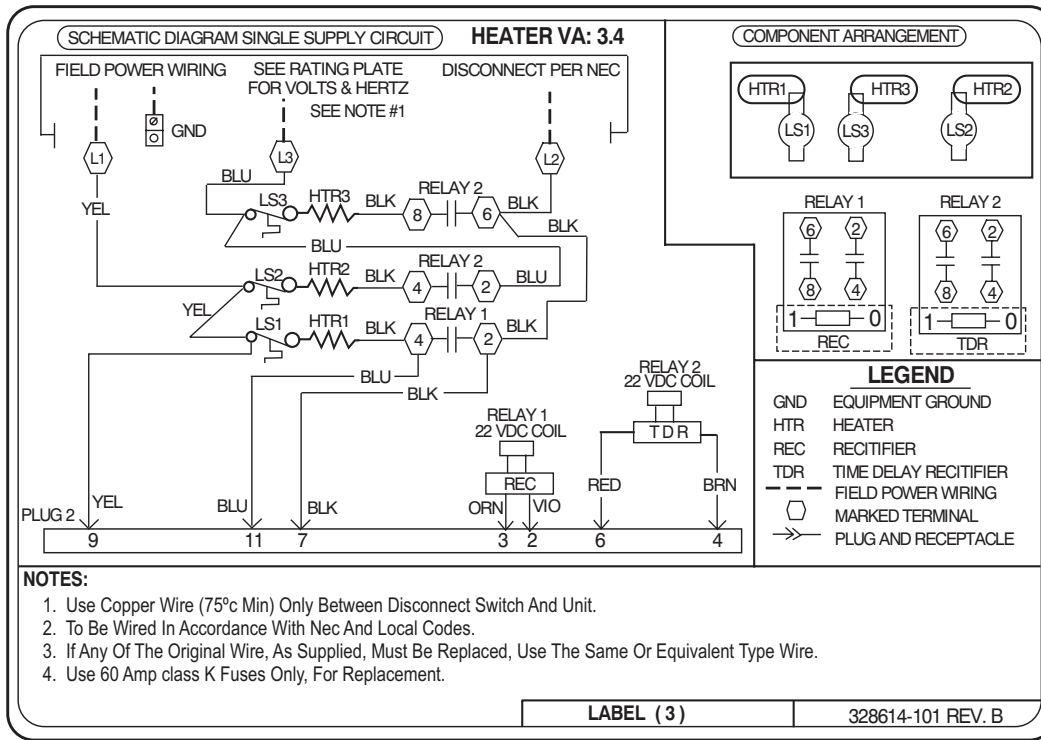


Fig. 5 – 328614-101

A07005

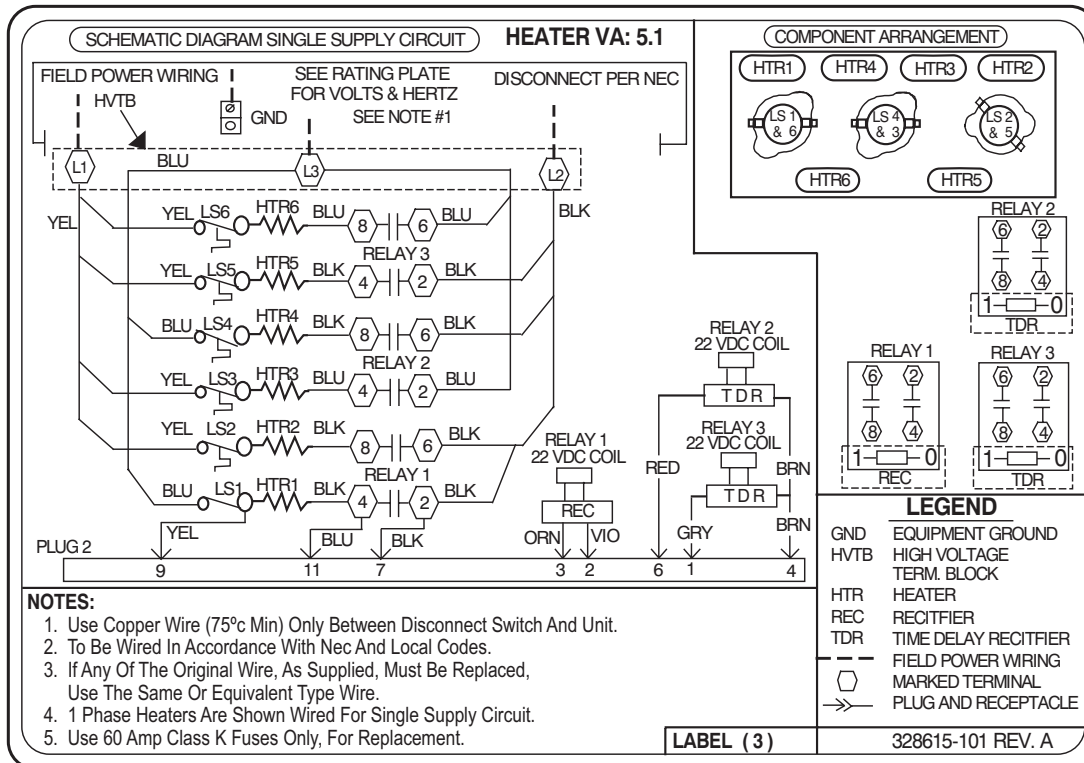


Fig. 6 – 328615-101

A07006

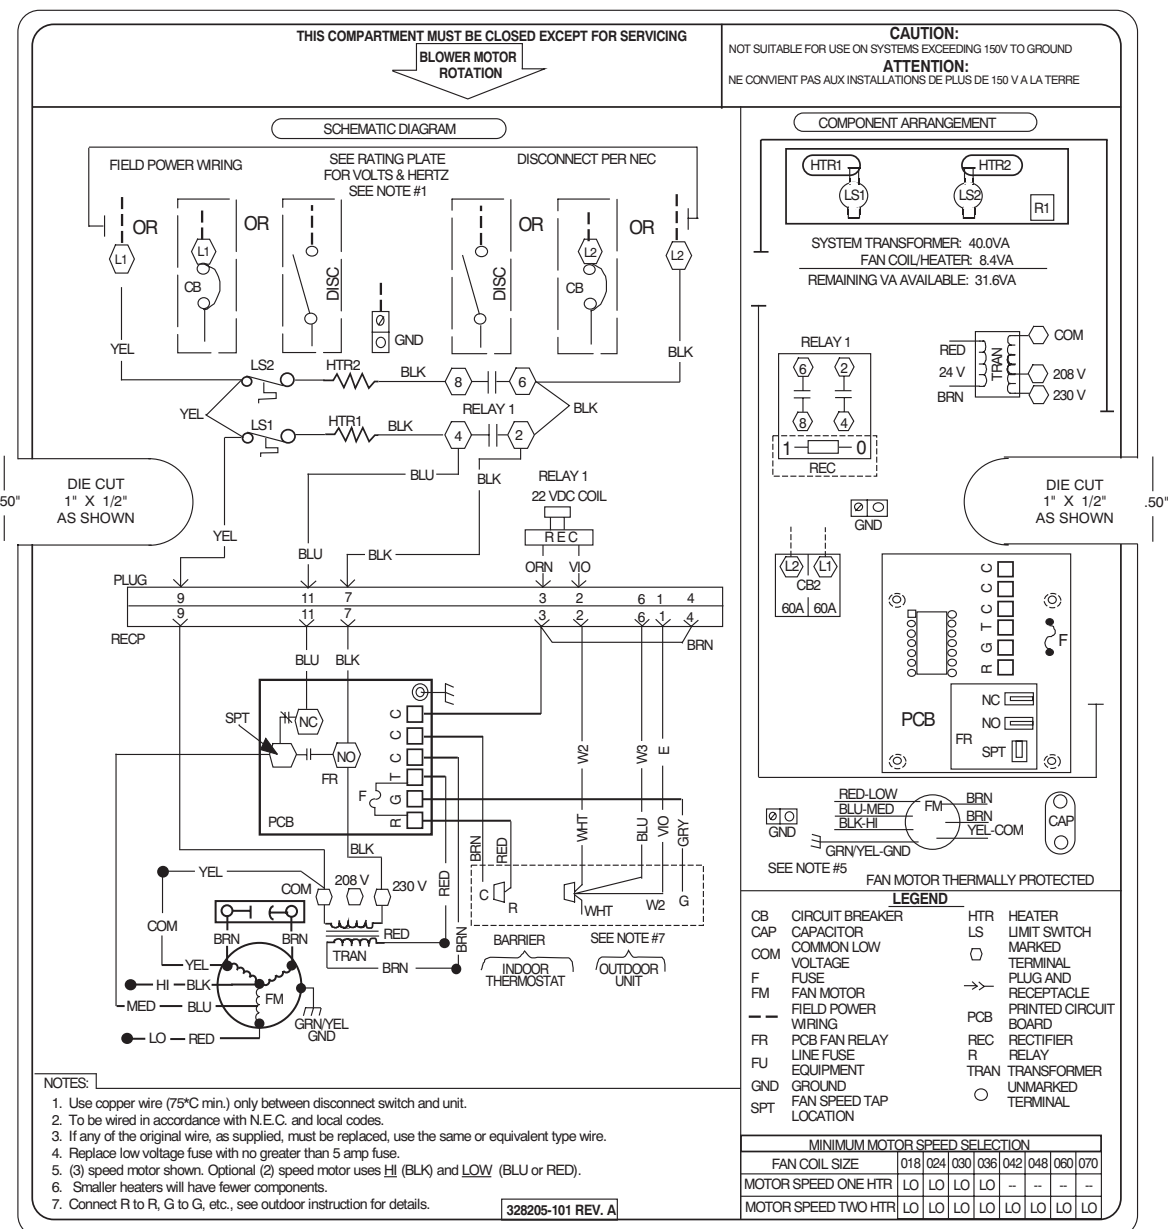


Fig. 9 – 328205-101

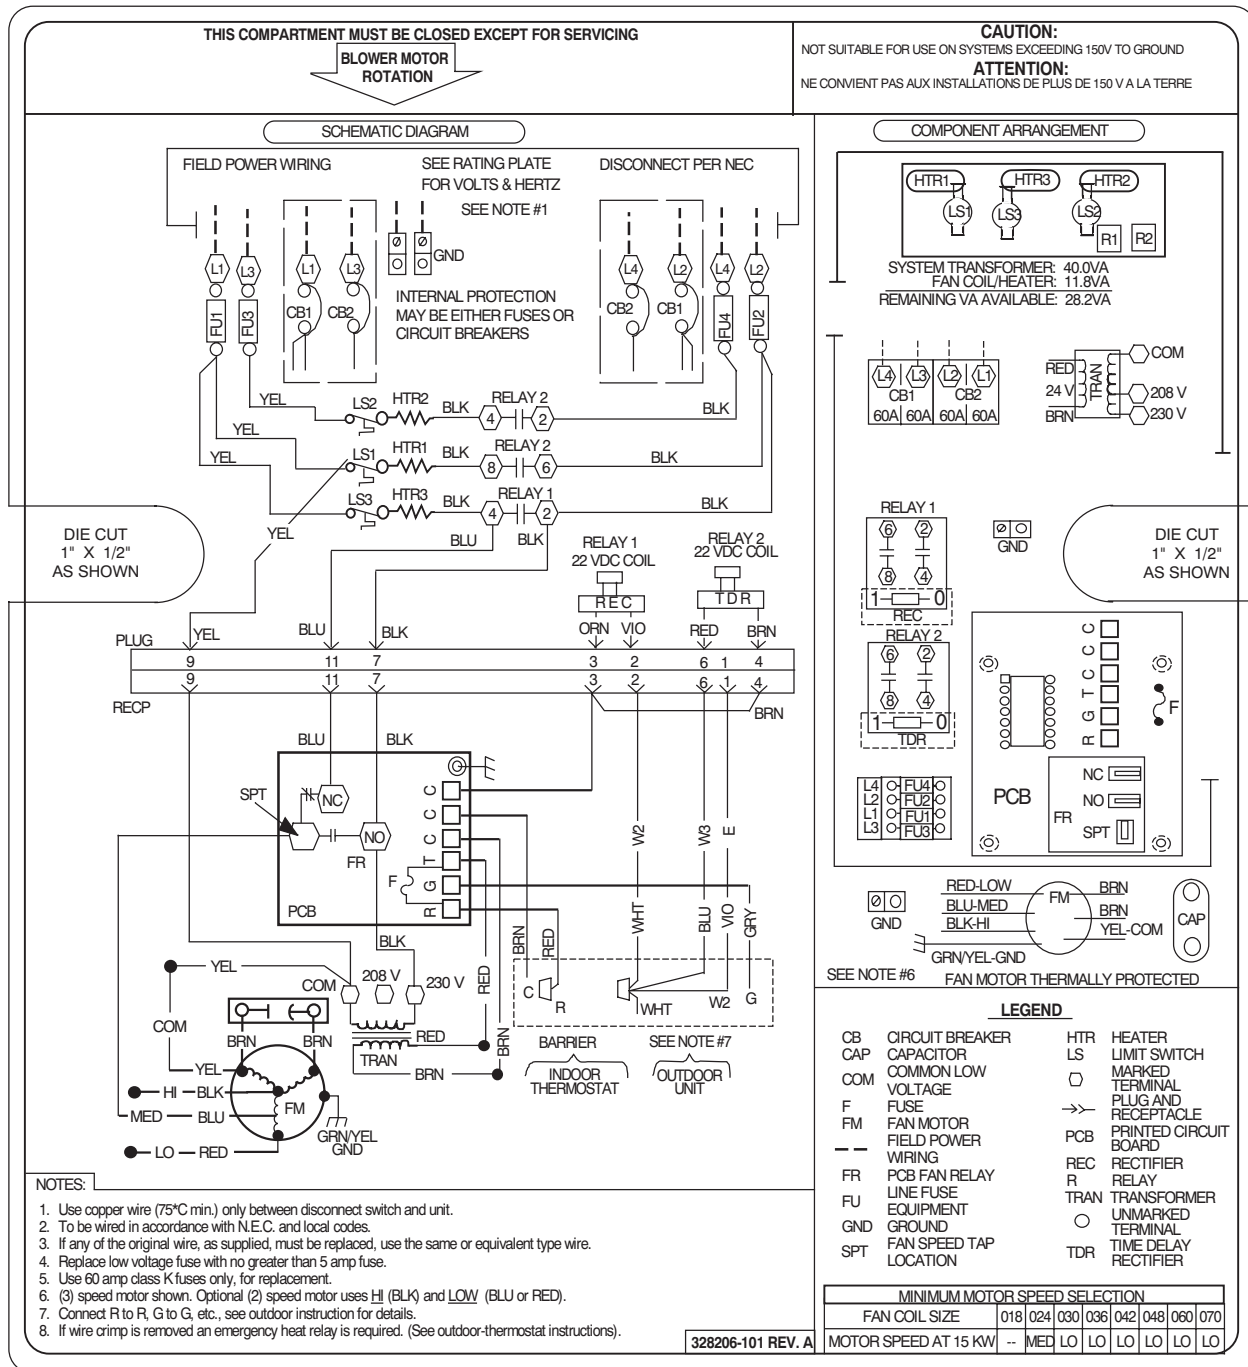


Fig. 10 – 328206-101


A07009

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR
ROTATION

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150 V A LA TERRE






SCHEMATIC DIAGRAM

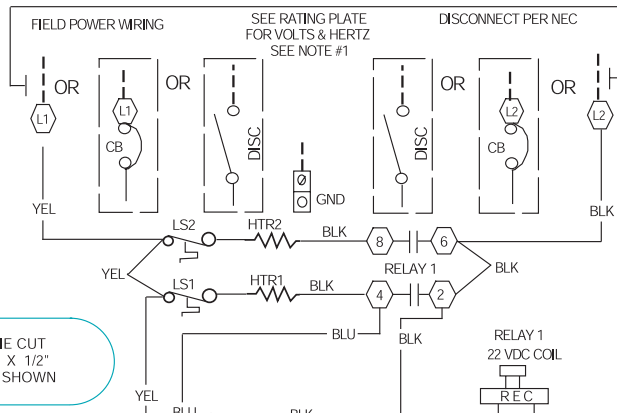

COMPONENT ARRANGEMENT



SYSTEM TRANSFORMER: 40.0VA
FAN COIL/HEATER: 8.4VA
REMAINING VA AVAILABLE: 31.6VA

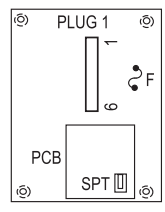


LEGEND

CB	CIRCUIT BREAKER	HTR	HEATER
COM	COMMON LOW VOLTAGE	LS	LIMIT SWITCH
F	FUSE	□	MARKED TERMINAL
FM	FAN MOTOR	→	PLUG AND RECEPTACLE
---	FIELD POWER WIRING	PCB	PRINTED CIRCUIT BOARD
FU	LINE FUSE	REC	RECTIFIER
GND	EQUIPMENT GROUND	R	RELAY
SPT	FAN SPEED TAP LOCATION	TRAN	TRANSFORMER
		○	UNMARKED TERMINAL

SPEED TAP SELECTION

- 1 LOW
- 2 MEDIUM
- 3 HIGH
- 4 NOT USED
- 5 NOT USED

SEE NOTE #5

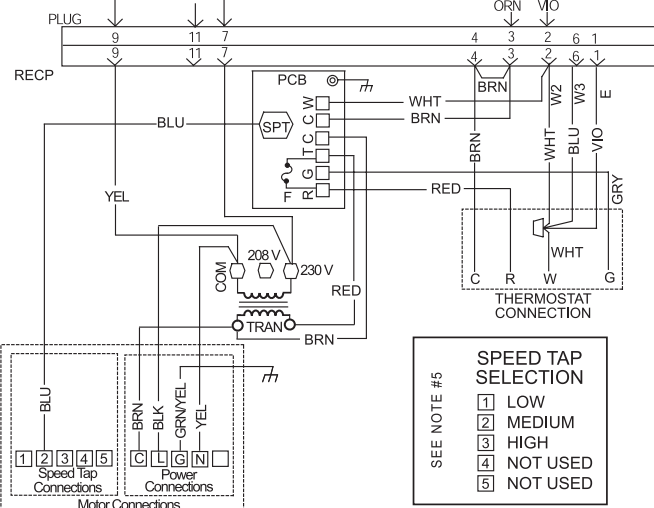

Motor Connections

- NOTES:**
1. Use copper wire (75°C min.) only between disconnect switch and unit.
 2. To be wired in accordance with N.E.C. and local codes.
 3. If any of the original wire, as supplied, must be replaced, use the same or equivalent type wire.
 4. Replace low voltage fuse with no greater than 5 amp fuse.
 5. To change speed tap, move blue wire to desired terminal.
 6. Smaller heaters will have fewer components.
 7. Connect R to R, G to G, etc., see outdoor instruction for details.

332334-101 REV. A

Fig. 11 – 332334-101

A07010

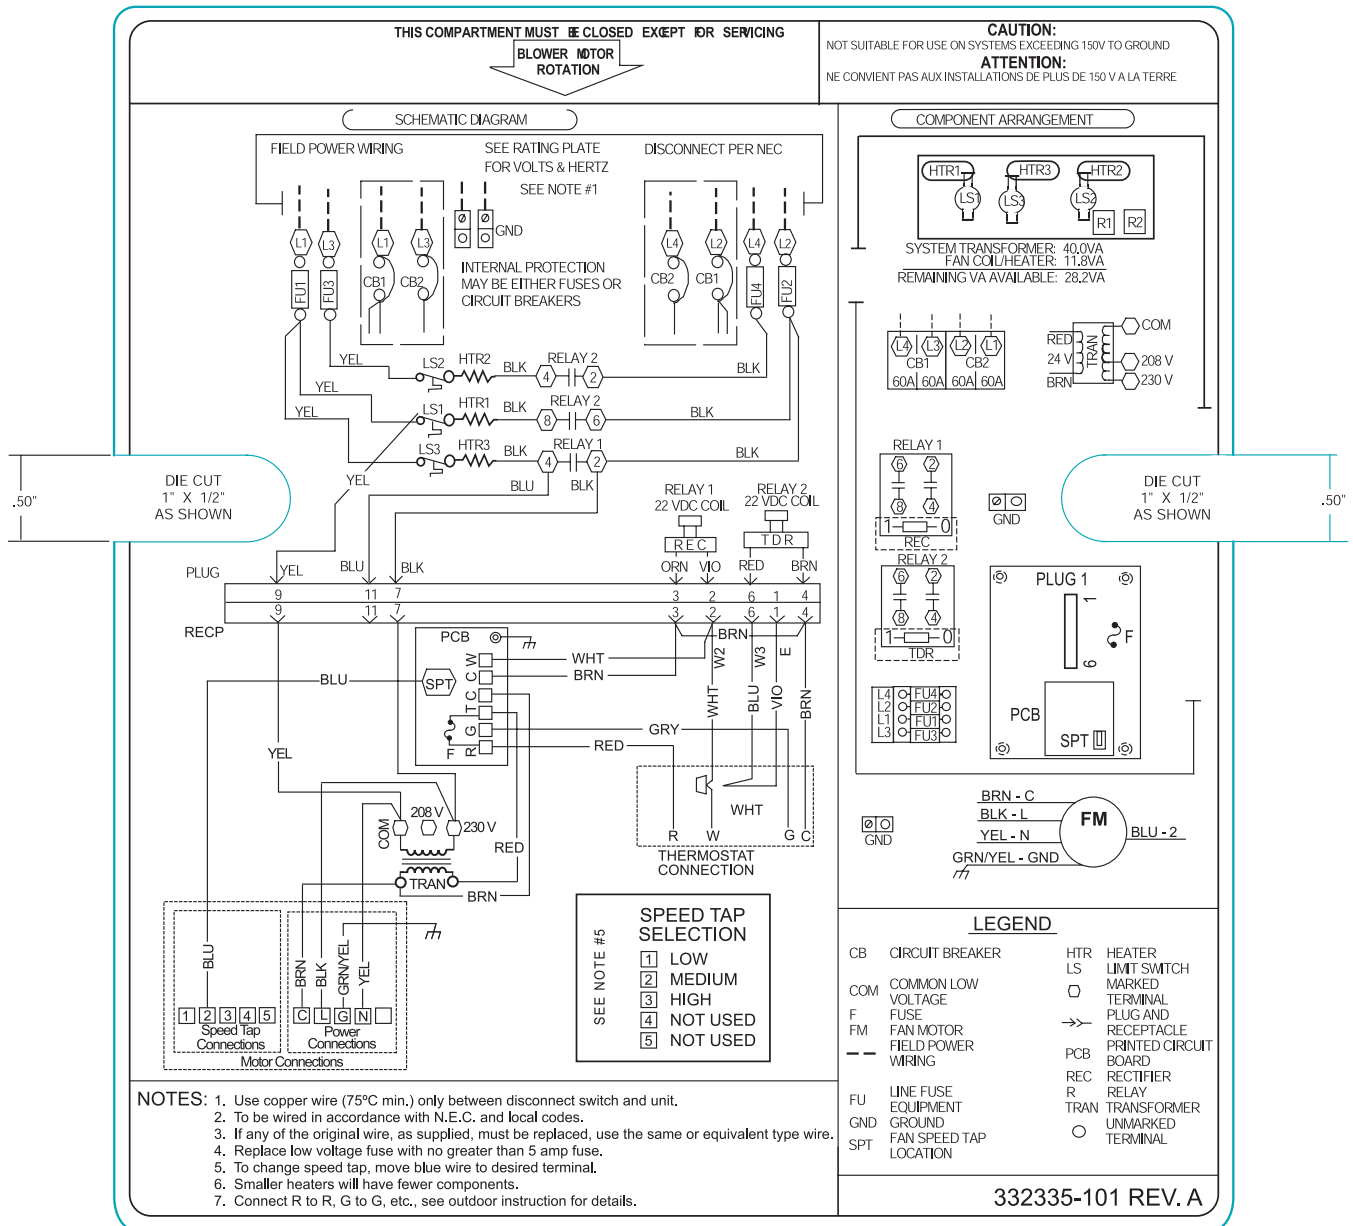


Fig. 12 – 332335-101


A07011



**THIS COMPARTMENT MUST BE
CLOSED EXCEPT FOR SERVICING**

**BLOWER MOTOR
ROTATION**

COOLING ONLY SCHEMATIC DIAGRAM

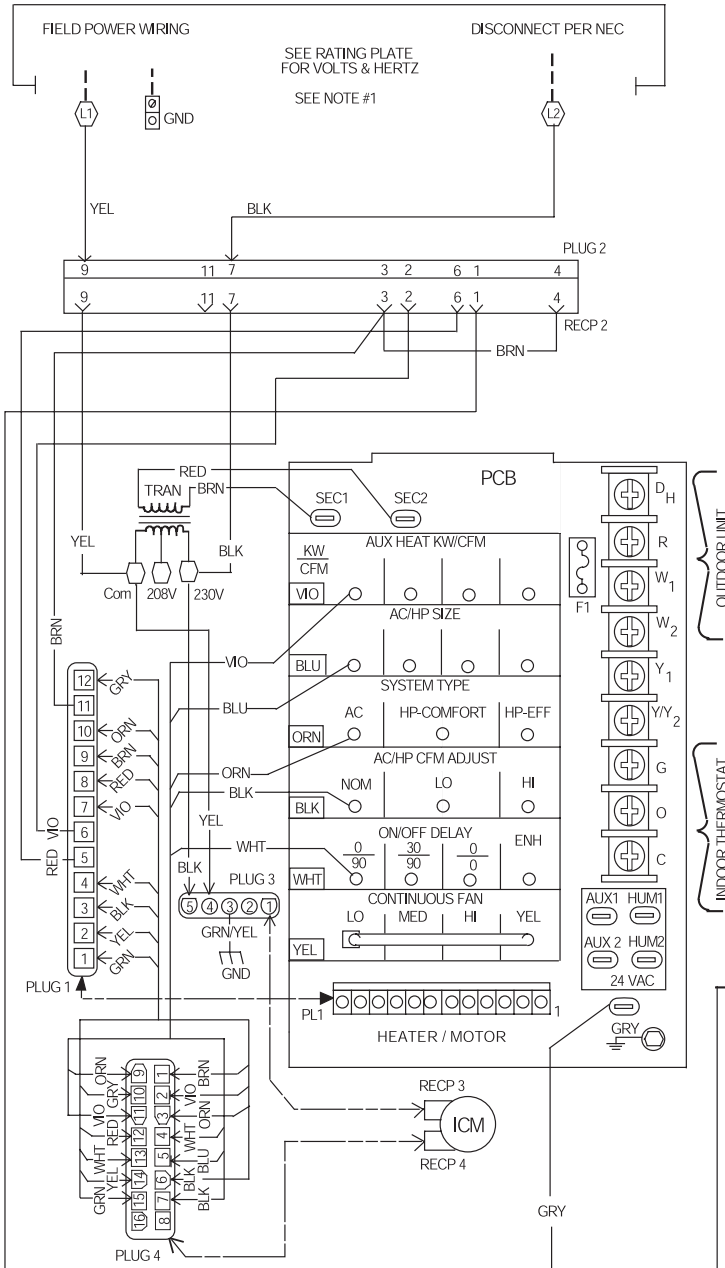


326014-101 REV. D

LEGEND

---	FIELD POWER WIRING
⬢	MARKED TERMINAL
⎓	PLUG AND RECEPTACLE
COM	COMMON
F1	LOW VOLTAGE FUSE
GND	EQUIPMENT GROUND
ICM	FAN MOTOR
PCB	PRINTED CIRCUIT BOARD
RECP	RECEPTACLE
TRAN	TRANSFORMER

COMPONENT ARRANGEMENT

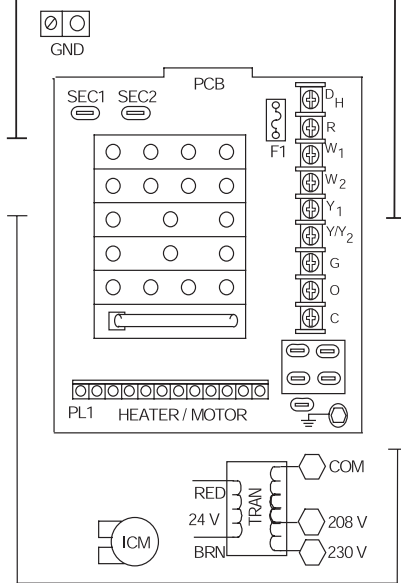


NOTES:

1. USE COPPER WIRE (75°C MIN) ONLY BETWEEN DISCONNECT SWITCH AND UNIT.
2. TO BE WIRED IN ACCORDANCE WITH N.E.C. AND LOCAL CODES.
3. TRANSFORMER PRIMARY LEADS, BLUE 208V, RED 230V.
4. IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED, MUST BE REPLACED, USE THE SAME OR EQUIVALENT TYPE WIRE.
5. REPLACE LOW VOLTAGE FUSE WITH NO GREATER THAN 5 AMP FUSE.
7. USE 60 AMP CLASS K FUSES ONLY, FOR REPLACEMENT.
8. CONNECT R TO R, G TO G, ETC., SEE OUTDOOR INSTRUCTION FOR DETAILS.

A07029

Fig. 15 – 326014-101

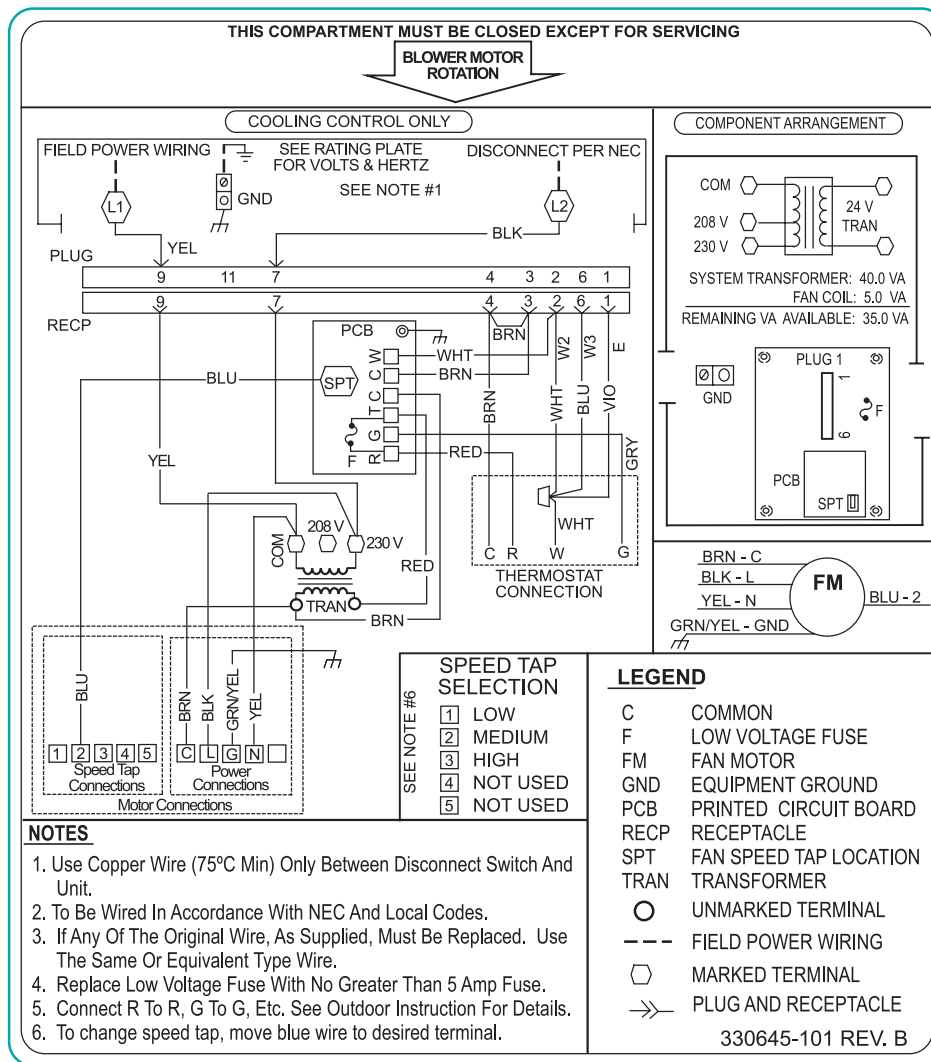

WD - FA4C - 01

Fig. 16 – 330645-101

A07028

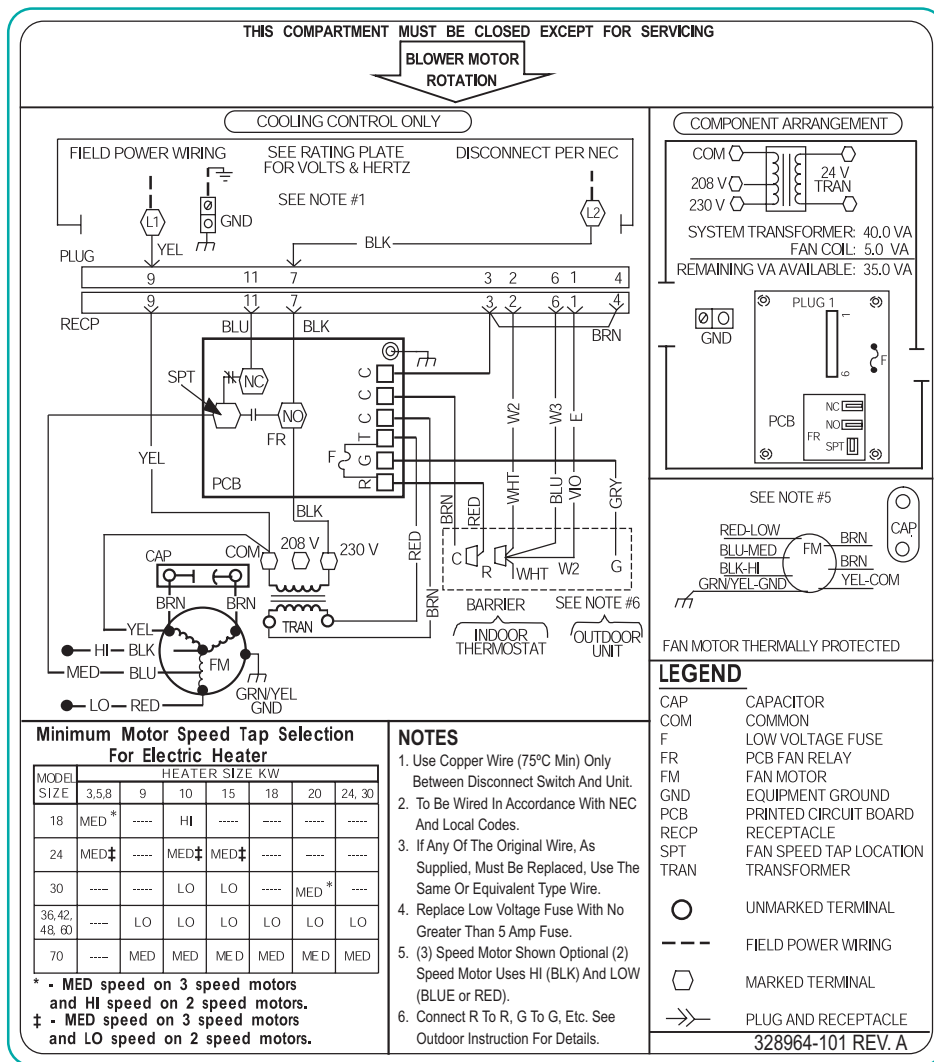


Fig. 17 – 328964-101

A07027