

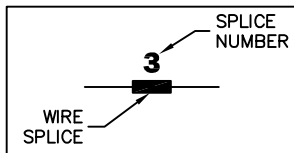




BA_	- BRUSH ASSEMBLY
BATT	- BATTERY
CB	- CIRCUIT BREAKER
CM	- CONNECTIVITY MODULE
CRKS	- CRANKSHAFT POSITION SENSOR
CT_	- CURRENT TRANSFORMER
ECM	- ENGINE CONTROL MODULE CONNECTOR
EGND	- ENGINE GROUND
EHT	- ENGINE HEAD TEMPERATURE SENSOR
EMC	- ELECTRONIC MIXER CONTROL VALVE
ETC	- ELECTRONIC THROTTLE CONTROL VALVE
ETMC	- ENGINE THROTTLE/MIXER CONNECTOR
FPS	- FUEL PRESSURE SENSOR
GND	- GROUND
IC_	- IGNITION COIL
MPR	- MASTER POWER RELAY
MPS	- MIXER POSITION SENSOR
NEU	- NEUTRAL
OLS	- OIL LEVEL SENSOR
OPS	- OIL PRESSURE SWITCH
OS	- OXYGEN SENSOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTACTOR RELAY
SM	- STARTER MOTOR
SOV_	- FUEL SHUT OFF VALVE
STB	- STATOR TERMINAL BLOCK
STR	- STATOR CONNECTOR
TB_	- TERMINAL BLOCK
TTMAP	- THROTTLE TEMP. MANIFOLD AIR PRES.
VR	- VOLTAGE REGULATOR

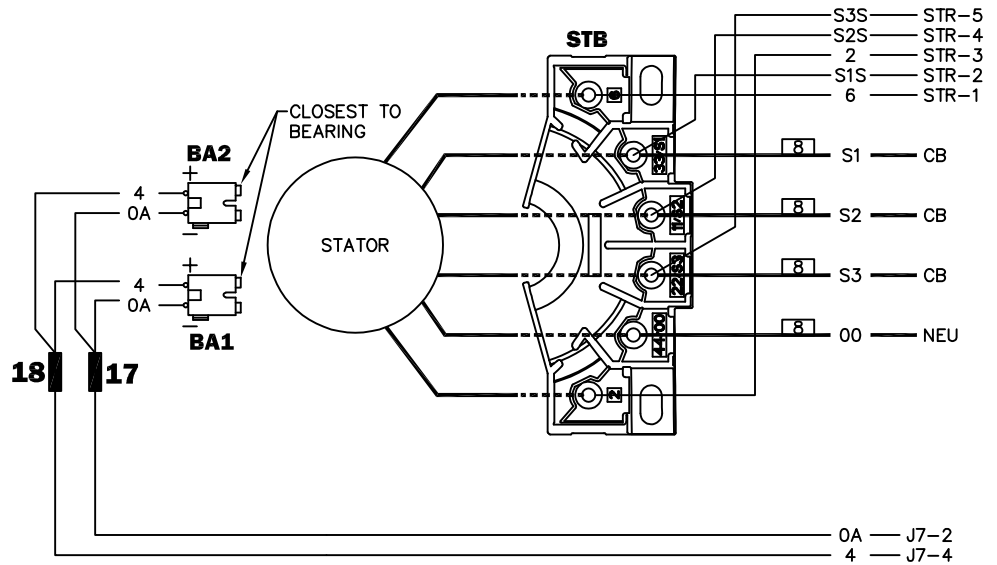


NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.



NOTE: DASHED WIRES INDICATE
A HIDDEN WIRE UNDERNEATH
THE RESPECTIVE COMPONENT


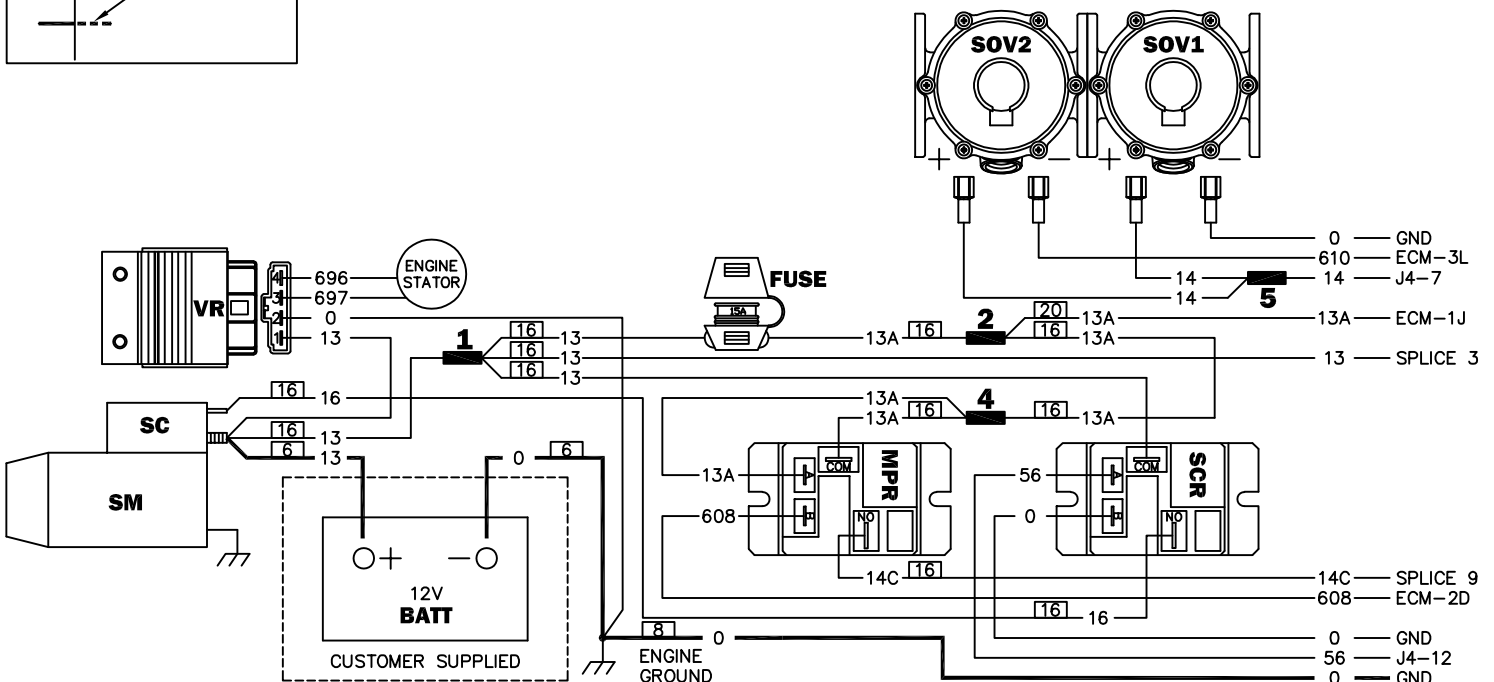



COMPONENTS LOCATED IN CONTROL PANEL

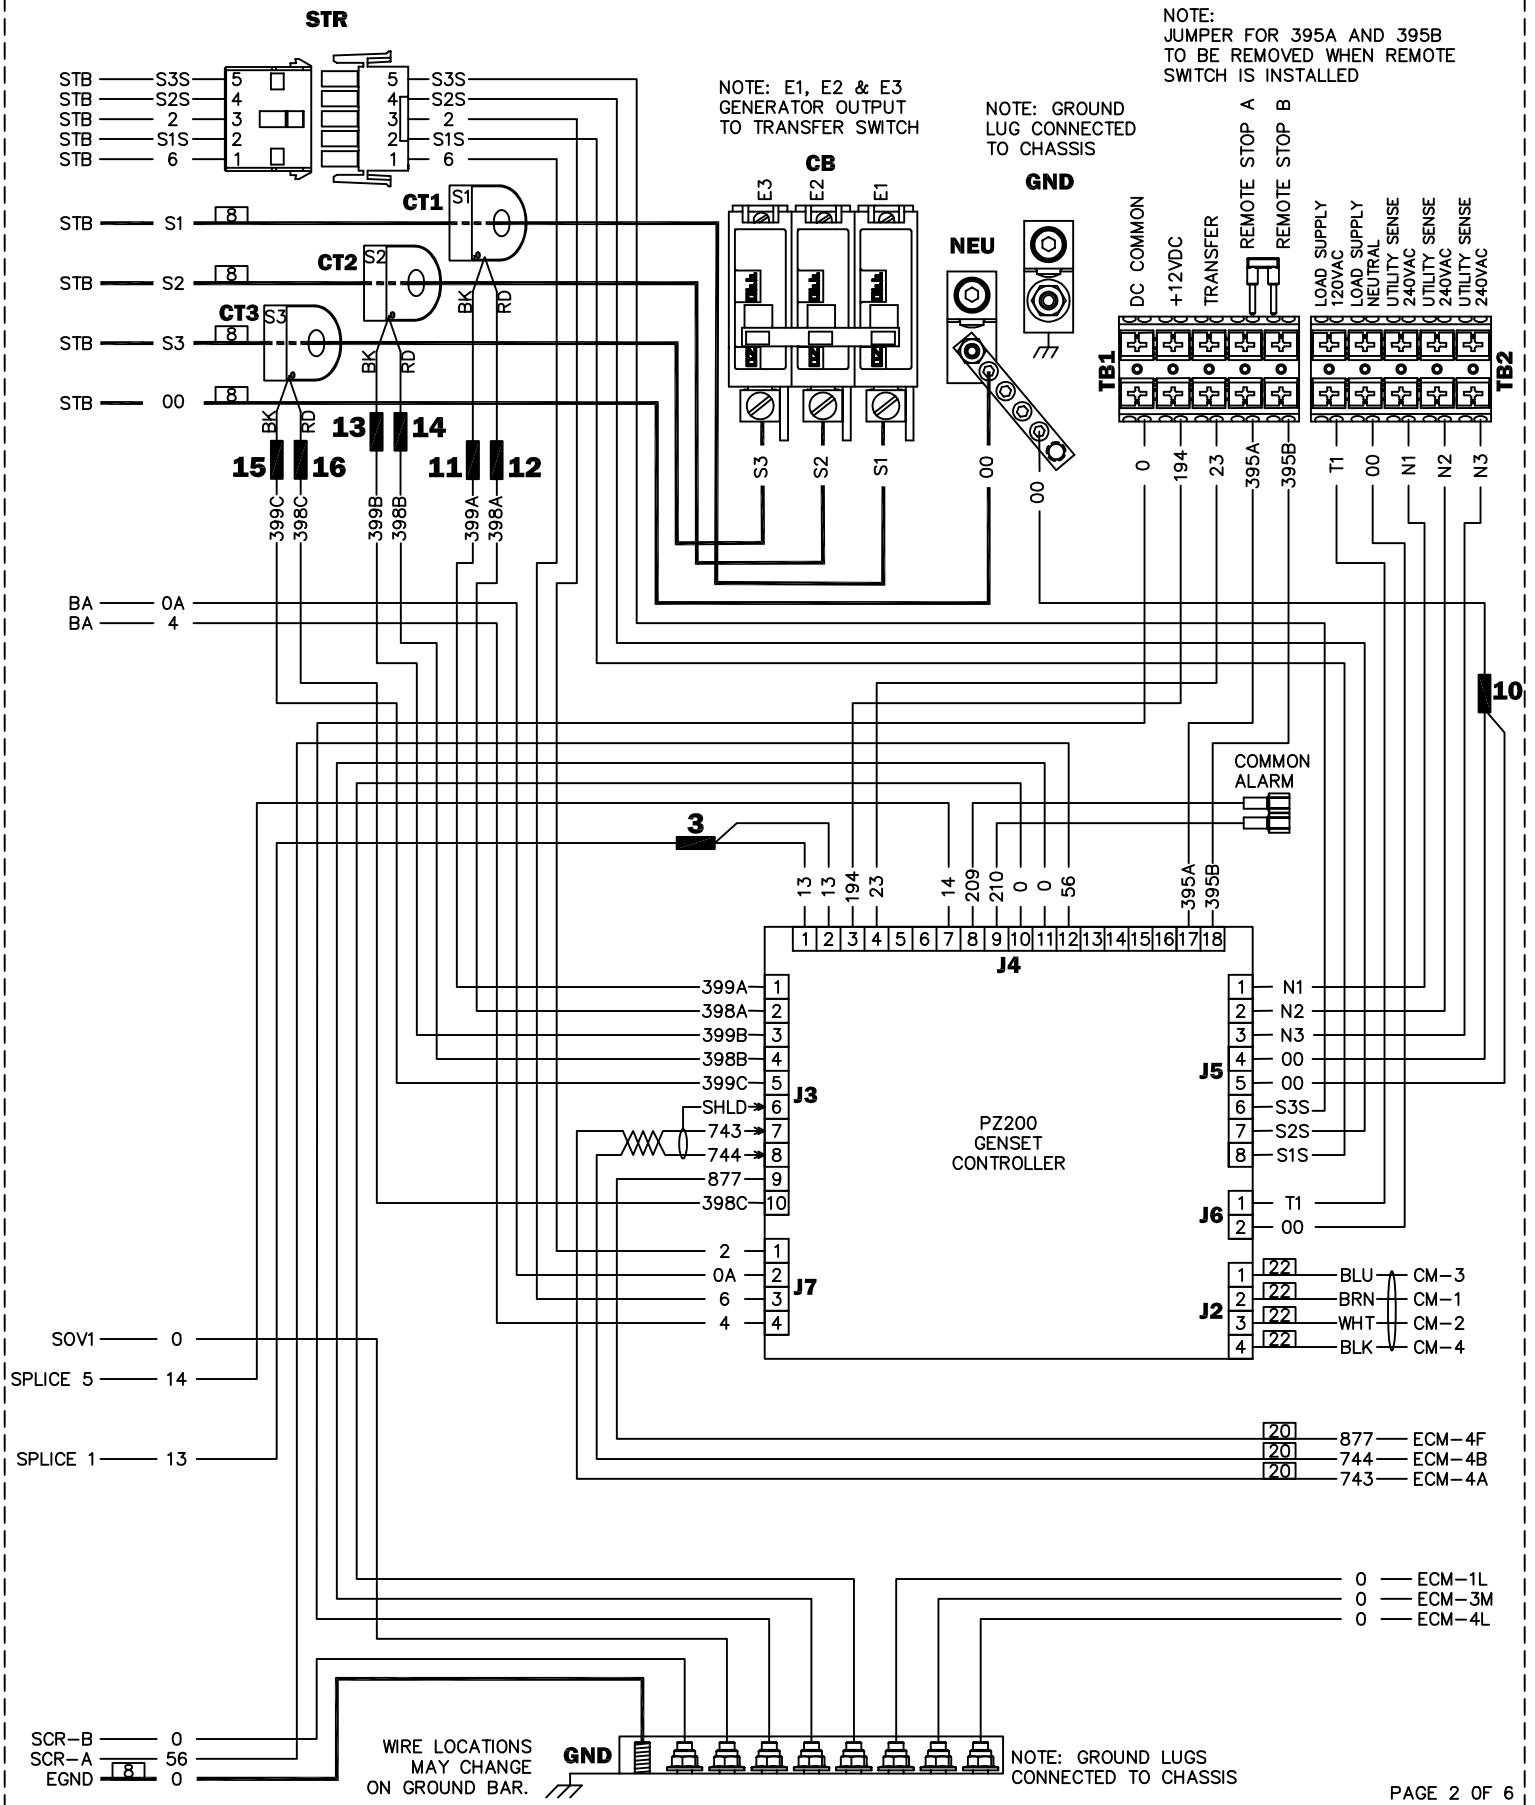

COMPONENTS LOCATED IN CONTROL PANEL

ENGINE CONTROL MODULE

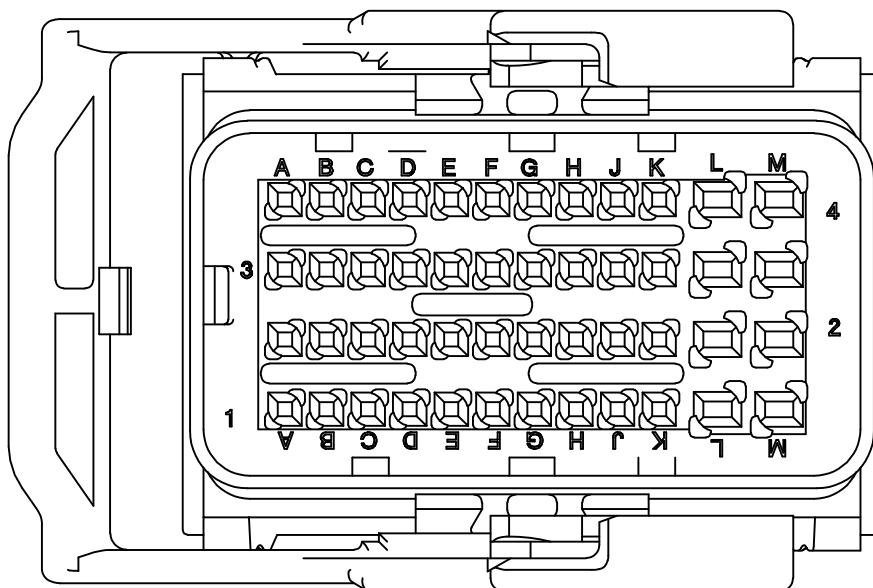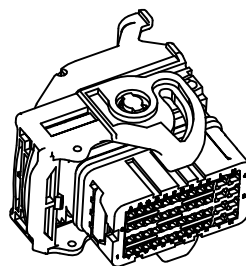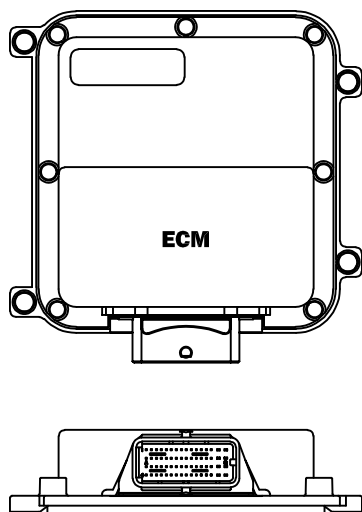


CONNECTOR END VIEW

PIN LIST		
ECM		
PIN	WIRE	TO
1A	605A	ETMC-13
1B	605B	ETMC-14
1C	79A	CRKS-A
1D	79B	CRKS-B
1E	770A	ETMC-9
1F	771A	ETMC-11
1G	770B	ETMC-10
1H	771B	ETMC-12
1J	13A	SPLICE 2
1K	14C	SPLICE 6
1L	0	GND
1M	452	IC2-C

PIN LIST		
ECM		
PIN	WIRE	TO
2A	605C	ETMC-15
2B	606	ETMC-7
2C	766A	ETMC-6
2D	608	MPR-B
2E	-	-
2F	607	OS-B
2G	754	ETMC-3
2H	-	-
2J	899	OLS-C
2K	714	EHT-1
2L	-	-
2M	-	-

PIN LIST		
ECM		
PIN	WIRE	TO
3A	605D	ETMC-16
3B	766B	ETMC-4
3C	797	ETMC-1
3D	-	-
3E	-	-
3F	-	-
3G	-	-
3H	-	-
3J	-	-
3K	820A	SPLICE 7
3L	610	SOV2
3M	0	GND

PIN LIST		
ECM		
PIN	WIRE	TO
4A	743	J3-7
4B	744	J3-8
4C	566	OPS
4D	-	-
4E	-	-
4F	877	J3-9
4G	-	-
4H	-	-
4J	804	OS-C
4K	820G	SPLICE 8
4L	0	GND
4M	451	IC1-C

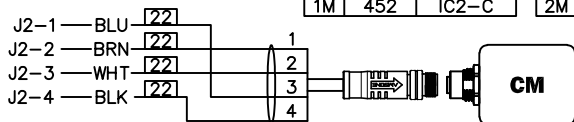

COMPONENTS LOCATED IN ENGINE COMPARTMENT

