

SYSTXCCITC01-C, SYSTXCCWIC01-C Infinity® System Control



Installation Quick Start Guide

Please review full installation instructions before installing this product.

Safety Considerations

This instruction covers installation of the Infinity System Control only. Physical installation instructions for the indoor and outdoor equipment, and accessories are provided with each unit.

Mounting Infinity System Control

Mount the backplate on the wall. Connect wires to connector in backplate. See Fig. 1, Fig. 2, and Fig. 3 for typical examples of the Infinity System Control to the indoor and outdoor equipment connections. Position the bottom of the control in the backplate. Snap the top of the unit firmly to the backplate.

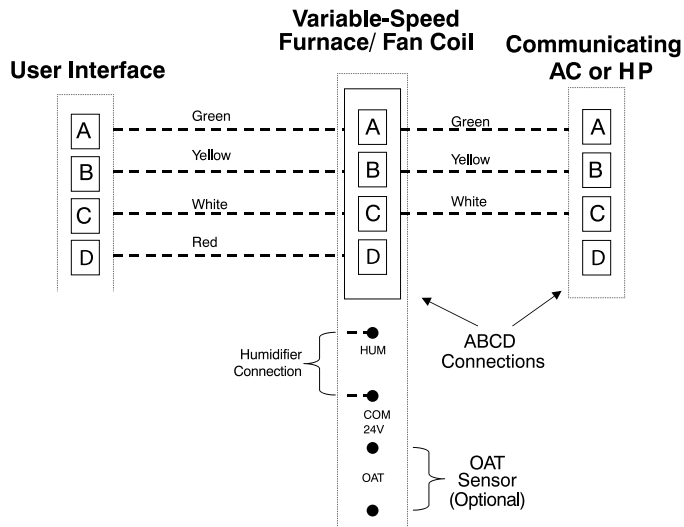


Fig. 1 – Four-Wire Connection Diagram

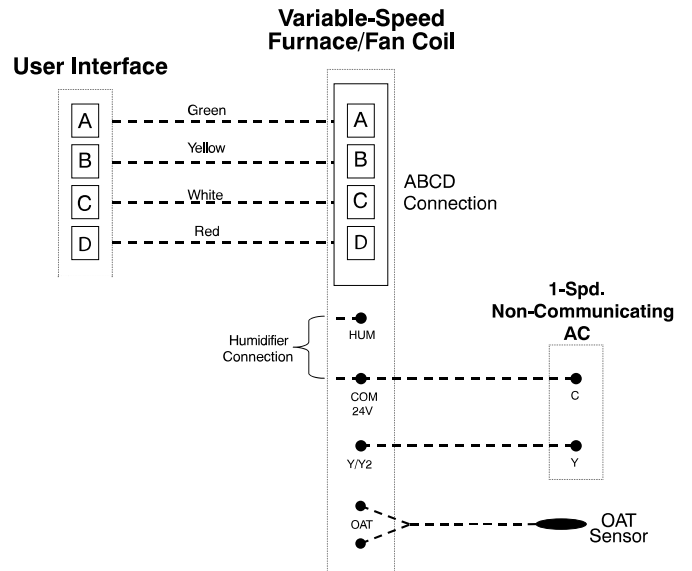


Fig. 2 – Connection Diagram for Furnace or FE Fan Coil w/1-Stage AC

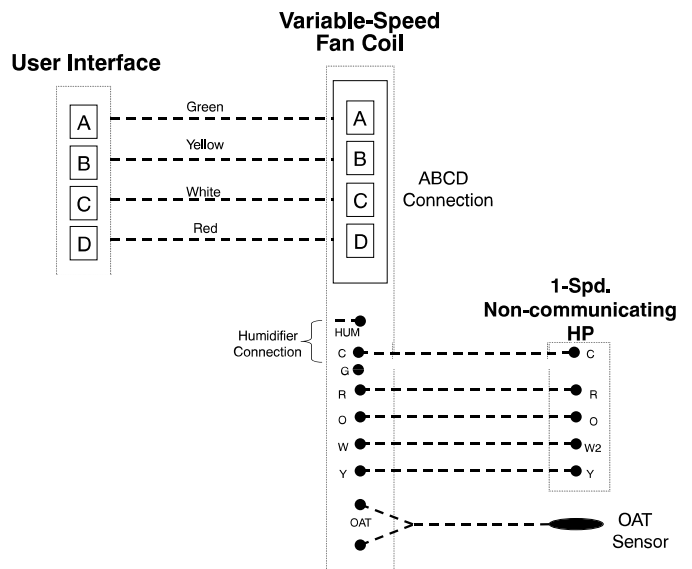


Fig. 3 – Connection Diagram for FE Fan Coil with Non-Communicating 1-Stage HP

Power Up Sequence

This section addresses initial power up (or commissioning) of a new Infinity System Control. The User Interface will communicate and identify all Infinity components in the system.

Fig. 4 shows an example of screens for the power up sequence. Exact screens will be dependent on actual system installations. The first screen addresses the indoor equipment. Follow the prompts on the subsequent screens until presented with the summary screen.

NOTE: Refer to full installation instructions if equipment cannot be found.

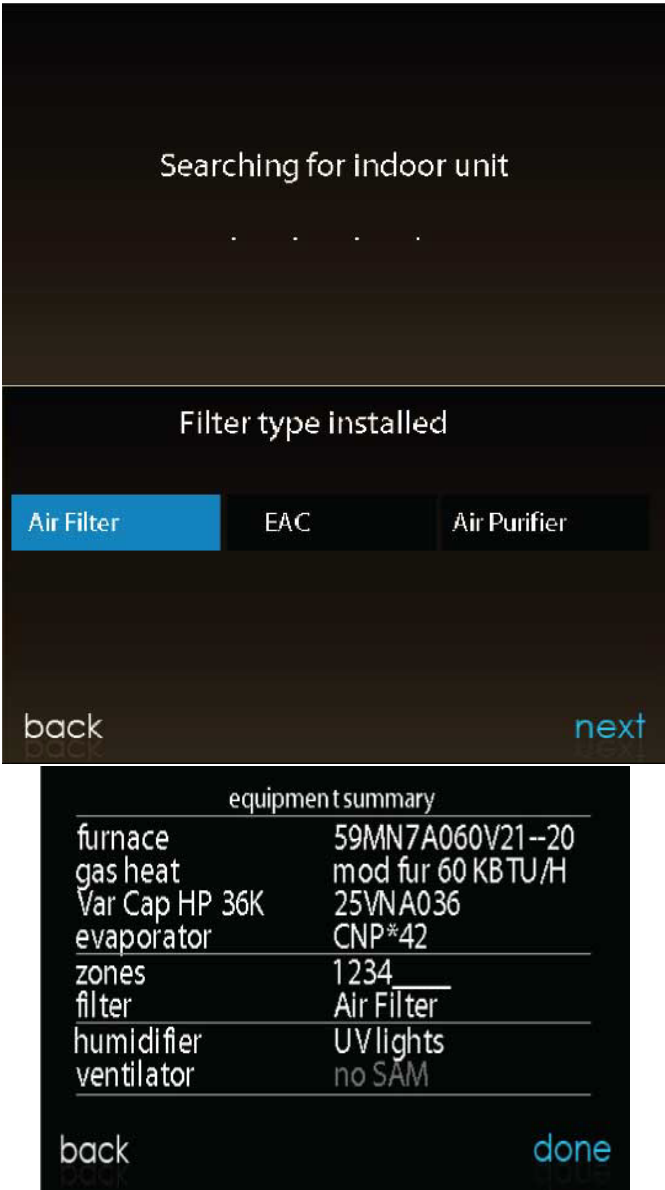


Fig. 4 – Power Up Sequence A13271

Training

My Learning Center is your central location for professional residential HVAC training resources that help strengthen careers and businesses. We believe in providing high quality learning experiences both online and in the classroom. Access My Learning Center with your HVACpartners credentials at www.mlctraining.com. Please contact us a mylearning@carrier.com with questions.