



Si001554EC

R-410A

REMOVAL PROCEDURE



S E R V I C E M A N U A L

9000/12000 Btu/h Class



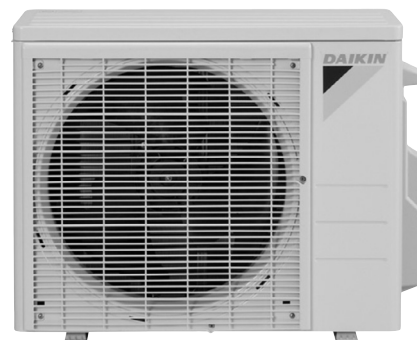
Outdoor Unit



Inverter



Pair Type



Service Manual

Removal Procedure

Outdoor Unit

●Cooling Only

RK09NMVJU

RK12NMVJU

RKN09NMVJU

RKN12NMVJU

●Heat Pump

RX09NMVJU

RX12NMVJU

RX09QMVJU

RX12QMVJU

RX09RMVJU

RX12RMVJU

RX09RMVJU9

RX12RMVJU9

RXN09NMVJU

RXN12NMVJU

RXL09QMVJU

Table of Contents

1. Outer Panels	2
2. Outdoor Fan / Fan Motor.....	3
3. Electrical Box / PCB	5
4. Thermistor ASSY	10
5. Sound Blankets	14
6. Reactor / Electronic Expansion Valve Coil / Partition Plate	15
7. Four Way Valve.....	17
8. Compressor.....	19

**Note:**

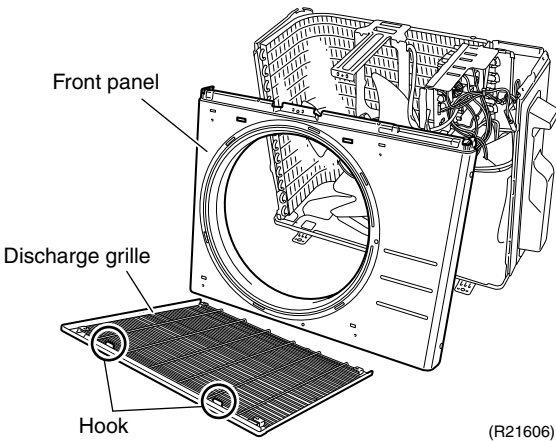
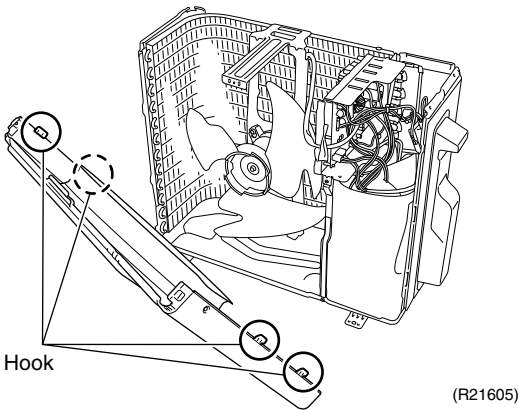
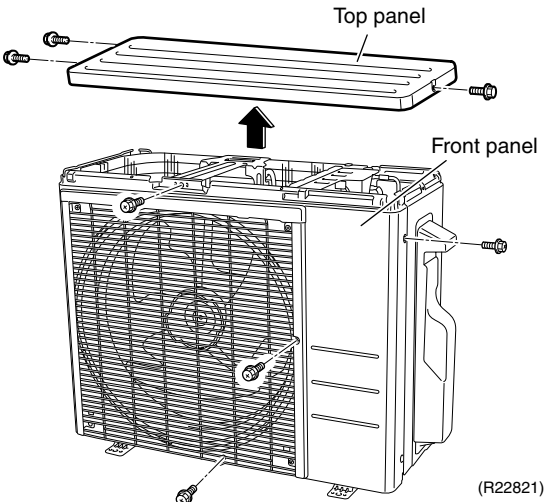
- ♦ The illustrations may be slightly different depending on the model.
- ♦ The illustrations are for heat pump models as representative.

1. Outer Panels



Warning ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

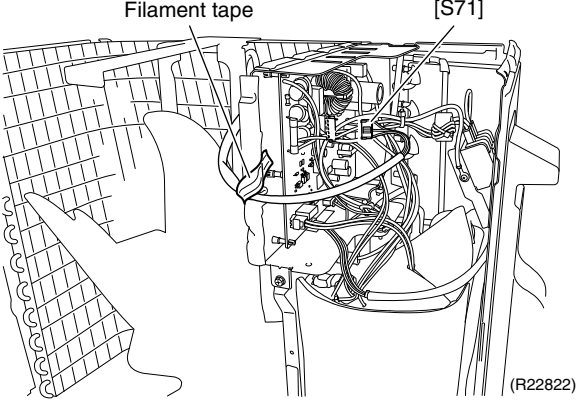
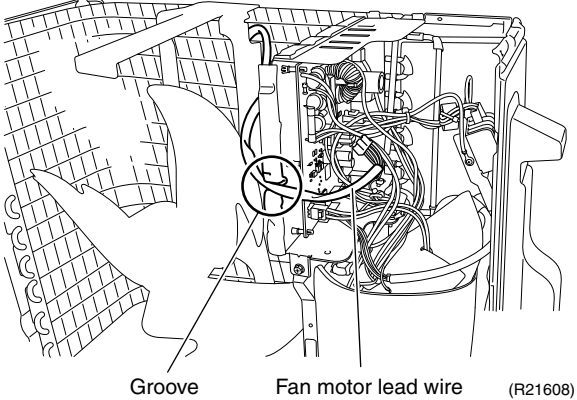
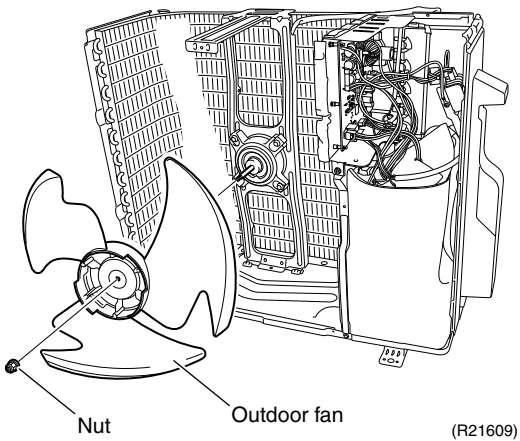
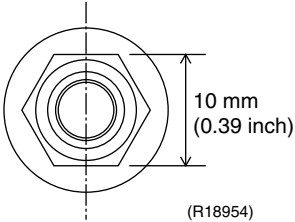
Step	Procedure	Points
1	Remove the 3 screws and remove the top panel.	
2	Remove the 4 screws of the front panel.	
3	Unfasten the 2 left side hooks, and then the 2 right side hooks.	
4	Remove the front panel.	
5	Unfasten the 2 hooks on the top and remove the discharge grille.	

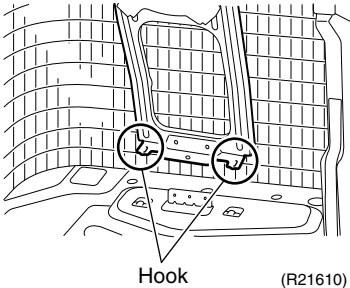
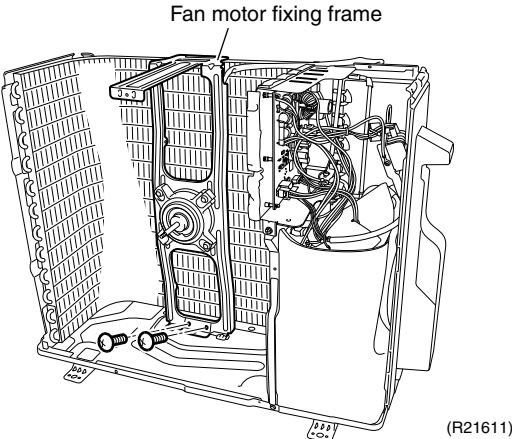
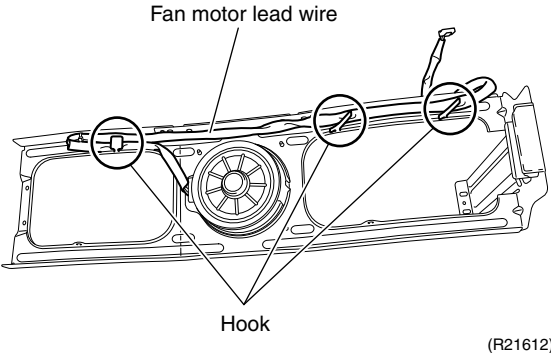
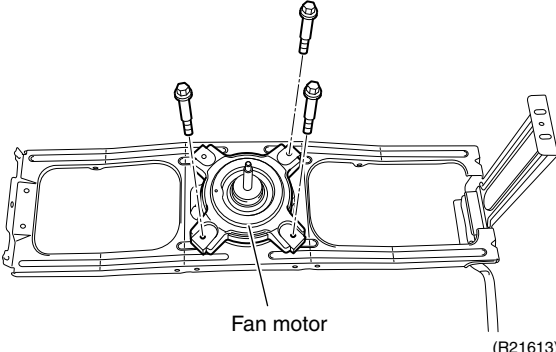
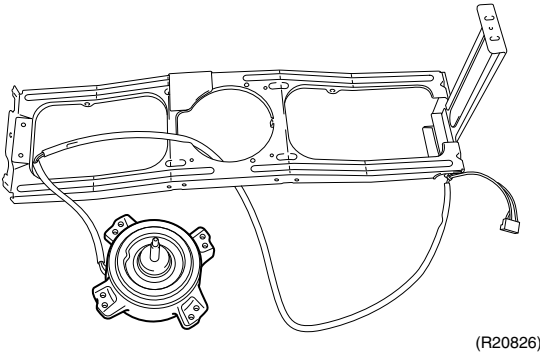


2. Outdoor Fan / Fan Motor



Warning ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Disconnect the connector [S71] and remove the filament tape. 	[S71]: fan motor
2	Release the fan motor lead wire from the groove. 	
3	Remove the nut of the outdoor fan.	■ Nut size: M6
4	Remove the outdoor fan. 	 10 mm (0.39 inch) (R18954) ■ Align the ▼ mark of the outdoor fan with the D-cut section of the motor shaft when reassembling.

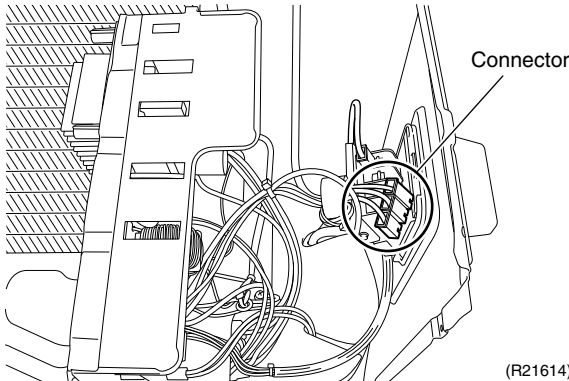
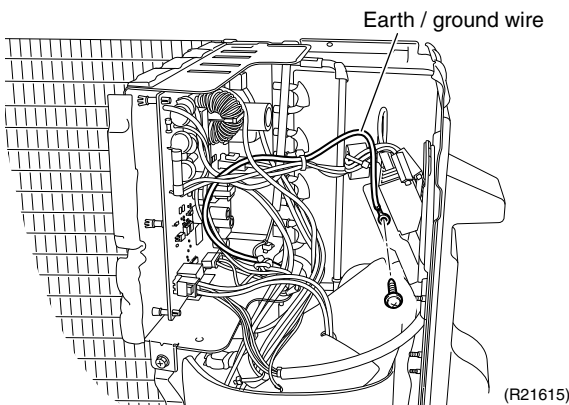
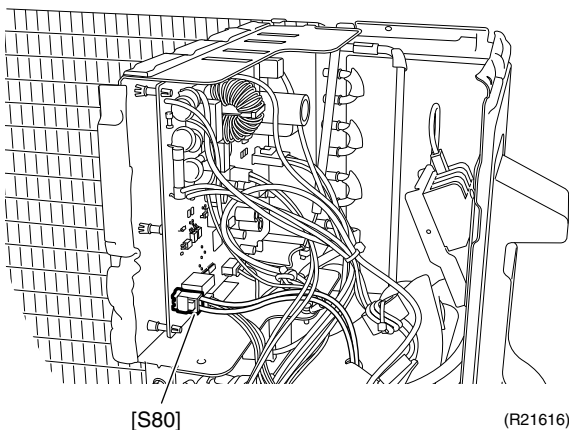
Step	Procedure	Points
5	Remove the 2 screws and remove the fan motor fixing frame.	■ When reassembling, fit the 2 lower hooks into the bottom frame.  Hook (R21610)
6	Open the 3 hooks and release the fan motor lead wire.	
7	Remove the 3 screws from the fan motor.	
8	Remove the fan motor.	
	 Fan motor fixing frame (R21611)	
	 Fan motor lead wire (R21612) Hook	
	 Fan motor (R21613)	
	 (R20826)	

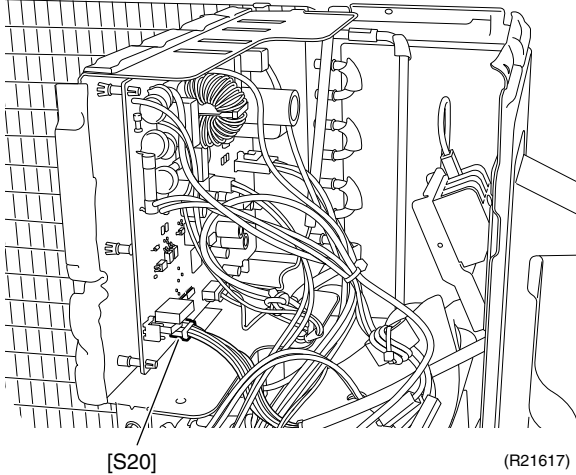
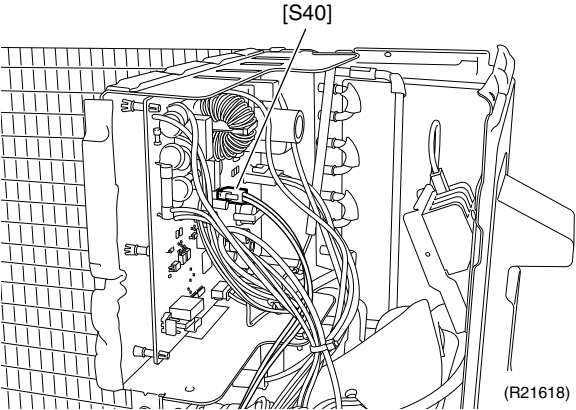
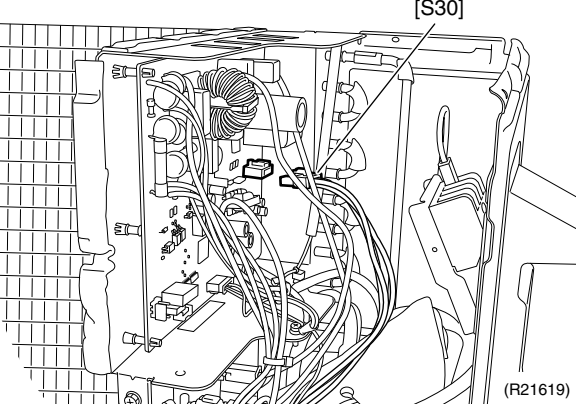
3. Electrical Box / PCB

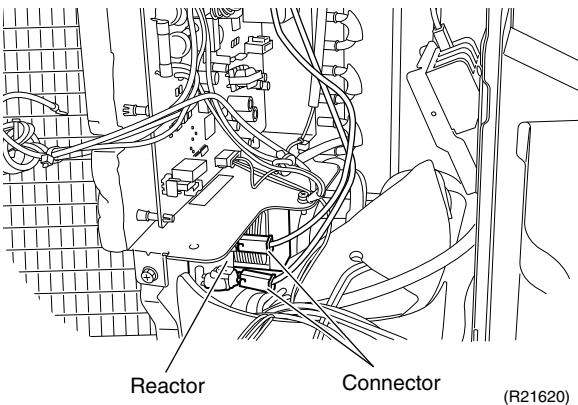
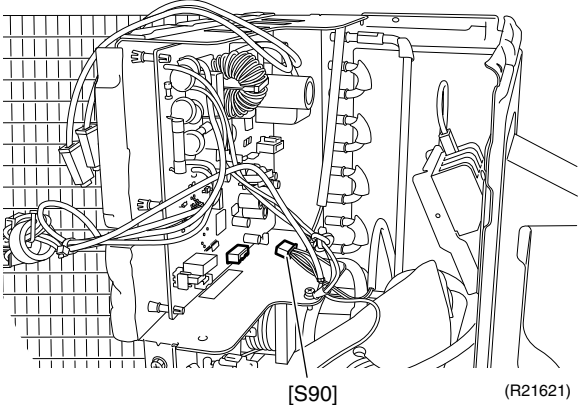
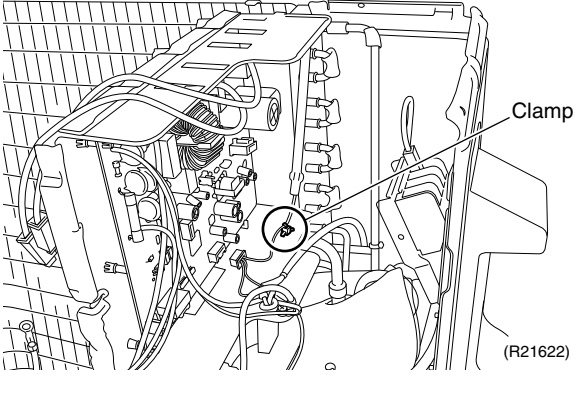


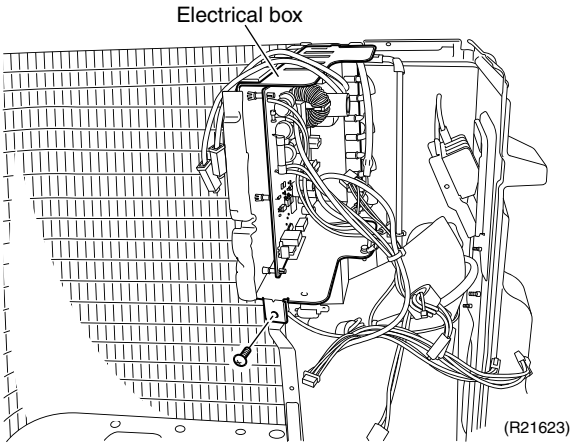
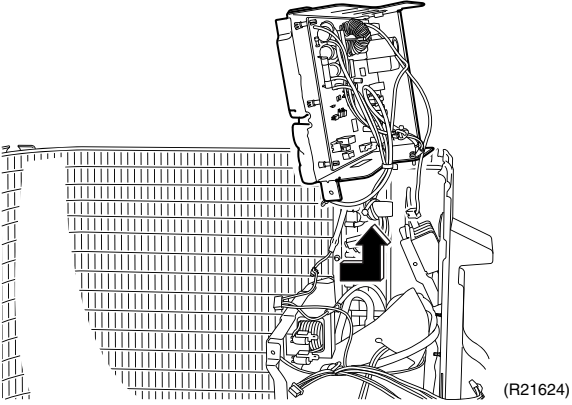
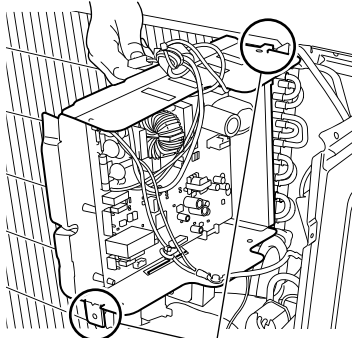
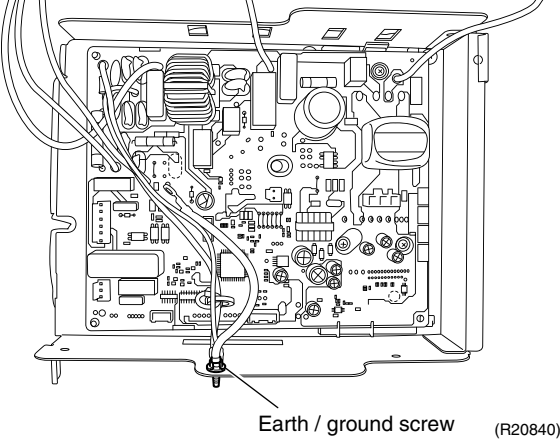
Warning

- ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

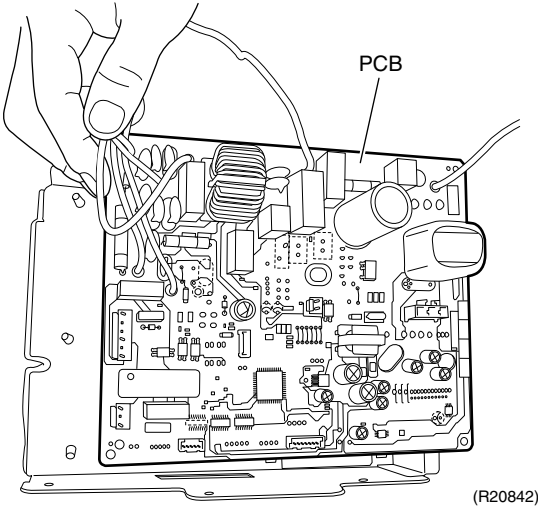
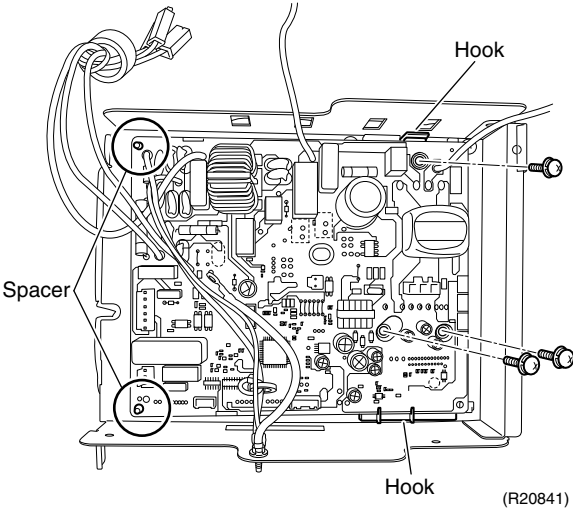
Step	Procedure		Points
1. Remove the electrical box.			1: black, front 2: white, front 3: red, front
1	Disconnect the 3 connectors from the terminal board.	 (R21614)	
2	Remove the screw and detach the earth / ground wire.	 (R21615)	
3	Disconnect the connector [S80].	 [S80] (R21616)	[S80]: four way valve coil ■ Cooling only models have no harness for [S80].

Step	Procedure		Points
4	Disconnect the connector [S20].	 [S20] (R21617)	[S20]: electronic expansion valve coil
5	Disconnect the connector [S40].	 [S40] (R21618)	[S40]: overload protector
6	Disconnect the connector [S30].	 [S30] (R21619)	[S30]: compressor motor

Step	Procedure		Points
7	Disconnect the 2 connectors from the reactor.		■ When reassembling, you can reconnect the 2 connectors for the reactor in either way regardless of the color. [S90]: thermistors
8	Disconnect the connector [S90].		
9	Pull out the clamp from the bottom.		

Step	Procedure	Points
10	Remove the screw of the electrical box.	   ■ There are 2 hooks at the bottom and the top back of the electrical box. Hook (R20839)
11	Slide the electrical box to the right and lift up to remove it.	
2. Remove the PCB.		 Earth / ground screw (R20840)
1	Remove earth / ground screw.	

Step	Procedure	Points
2	Remove the 3 screws of the PCB.	
3	Unfasten the 2 spacers and the 2 hooks from the PCB.	
4	Remove the PCB.	

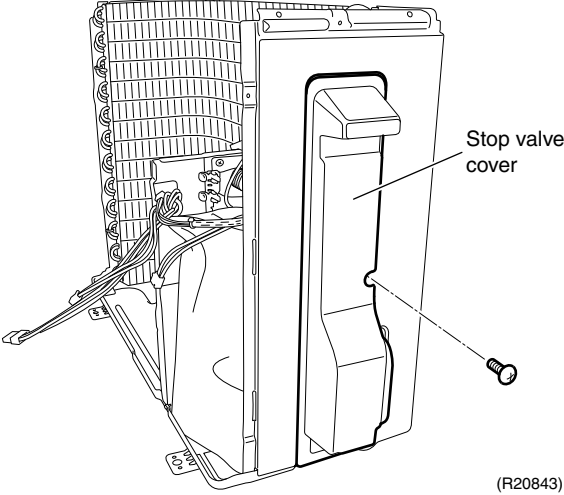
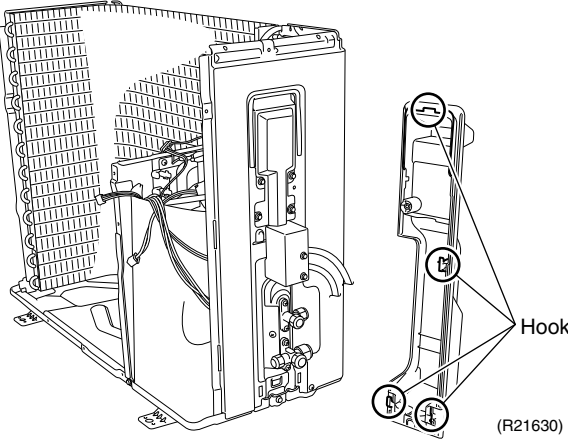
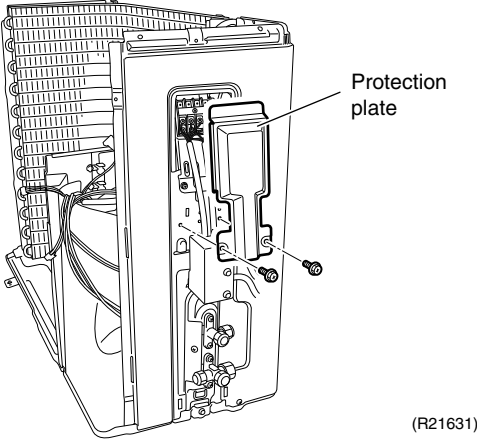
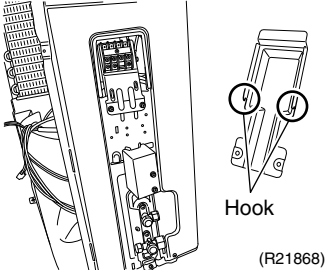


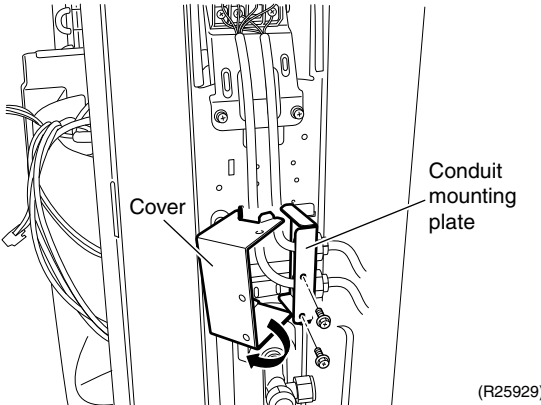
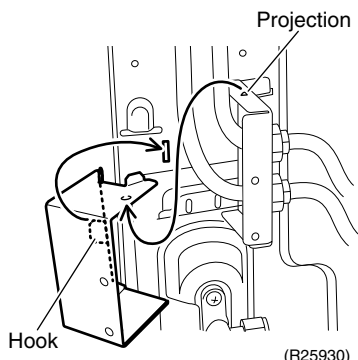
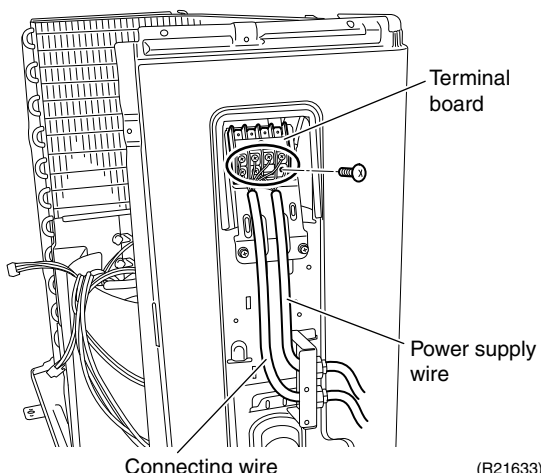
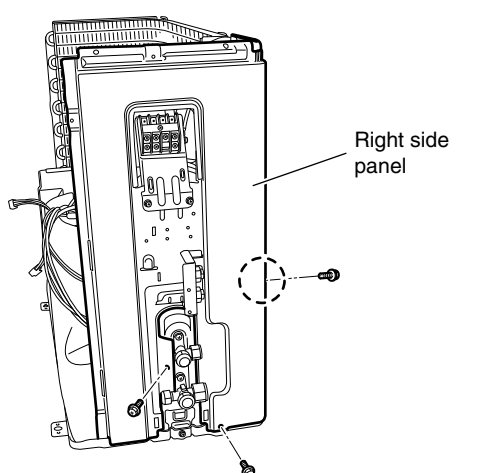
4. Thermistor ASSY



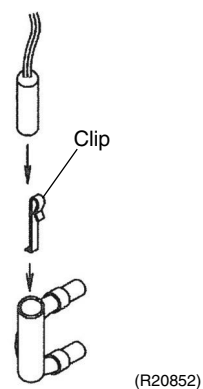
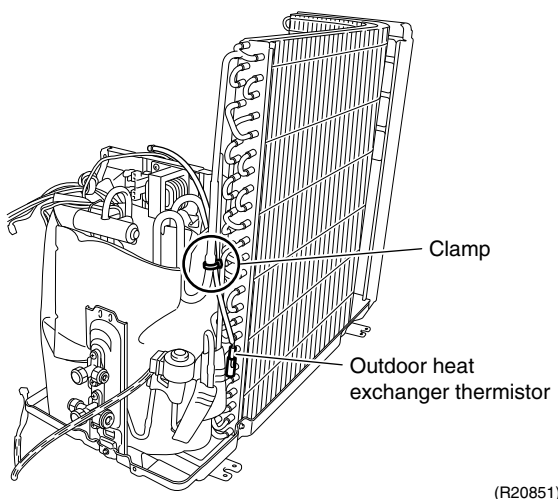
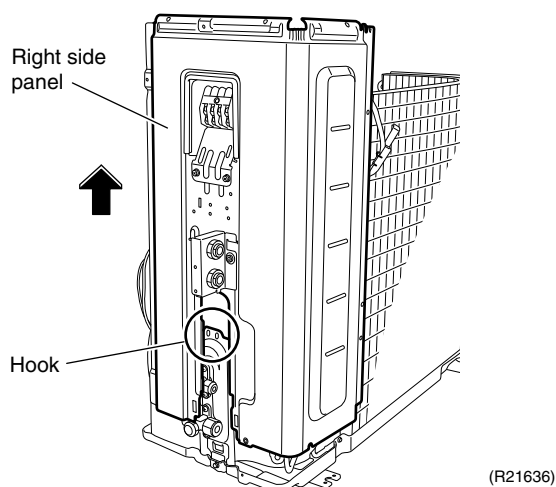
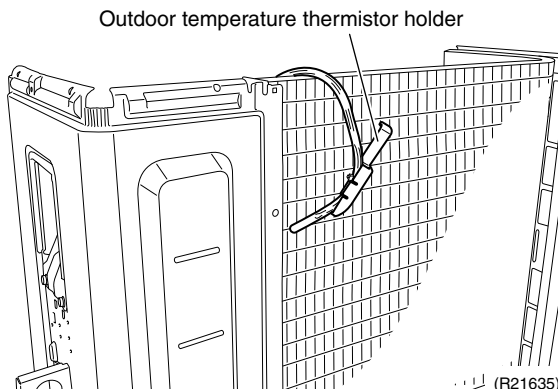
Warning

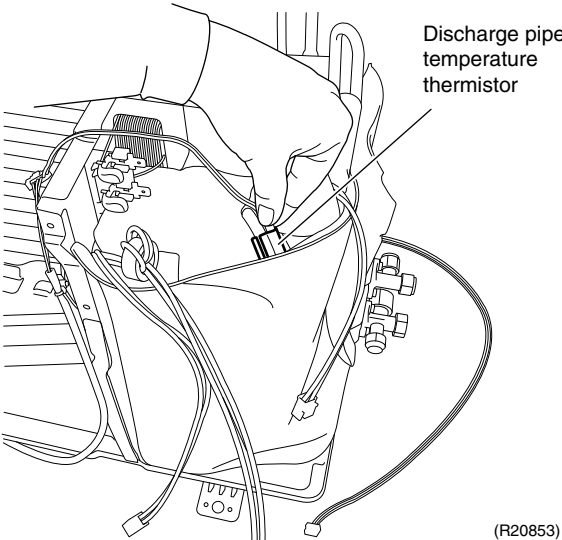
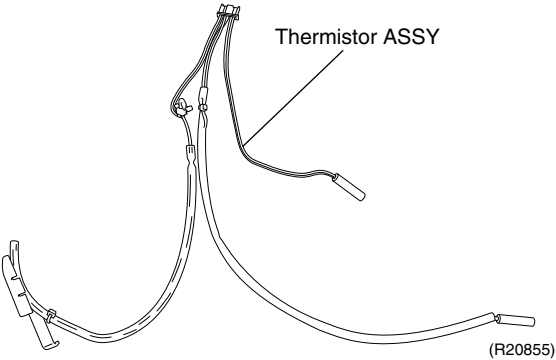
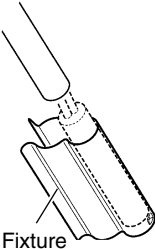
♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the screw. 	
2	Slide the stop valve cover downward and remove it. 	■ When reassembling, make sure to fit the 4 hooks.
3	Remove the 2 screws and lift up the protection plate to remove it. 	■ When reassembling, make sure to fit the 2 hooks. 

Step	Procedure	Points
4	Remove the 2 screws and open the conduit mounting plate cover to the left, then remove it.  (R25929)	■ When reassembling, make sure that the hook and the projection are securely fastened.  (R25930)
5	Remove the 7 screws on the terminal board and disconnect the connecting wire and the power supply wire.  (R21633)	
6	Remove the 3 screws of the right side panel.  (R21634)	

Step	Procedure	Points
7	Pull out the outdoor temperature thermistor holder.	
8	Slide up the right side panel to unfasten the hook.	
9	Remove the right side panel.	
10	Cut the clamp.	■ Be careful not to lose the clip for the thermistor.
11	Pull out the outdoor heat exchanger thermistor.	■ The location of the clamp is different depending on the model.



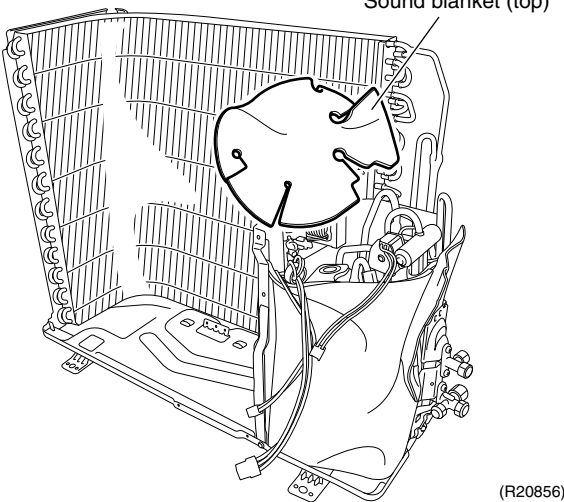
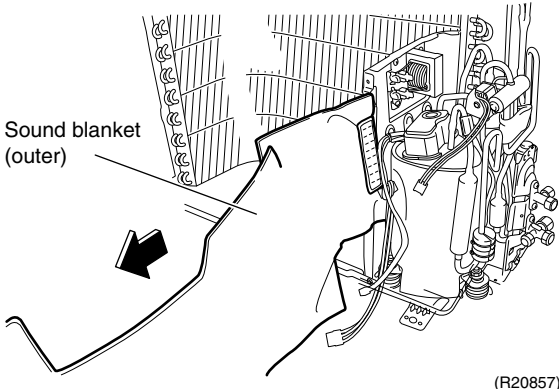
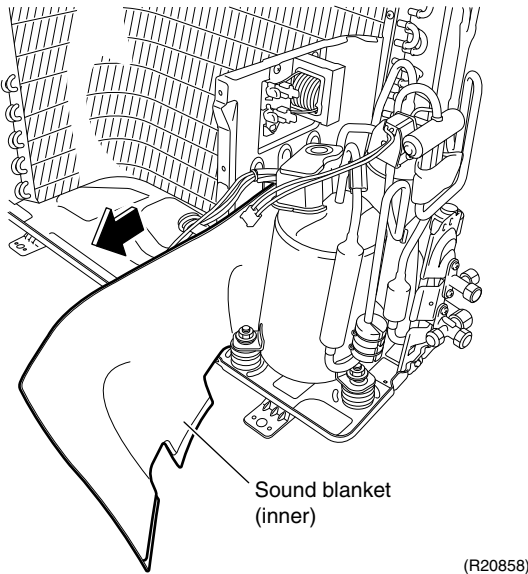
Step	Procedure		Points
12	Pull out the discharge pipe temperature thermistor and remove the thermistor ASSY.	 (R20853)  (R20855)	■ Be careful not to lose the fixture for the thermistor.  (R20854)

5. Sound Blankets



Warning

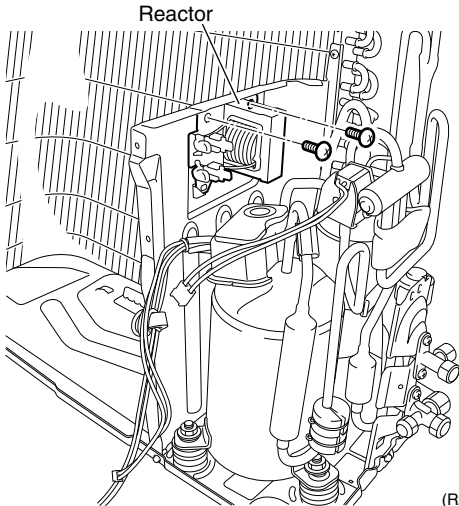
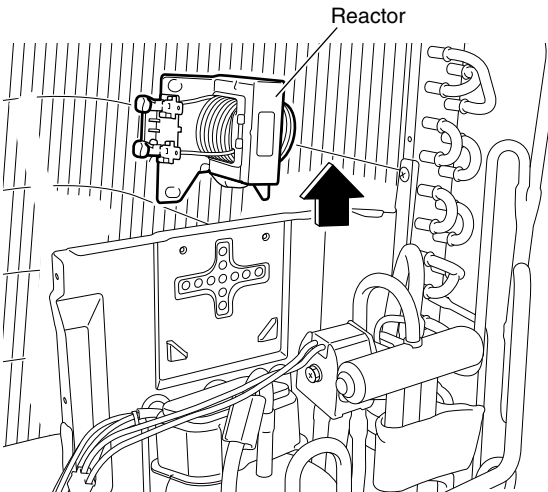
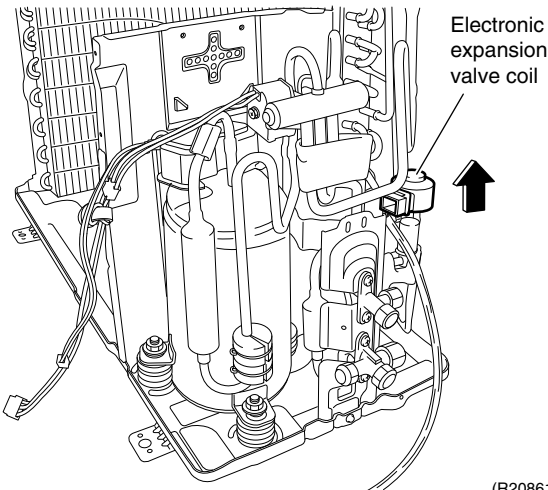
- ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

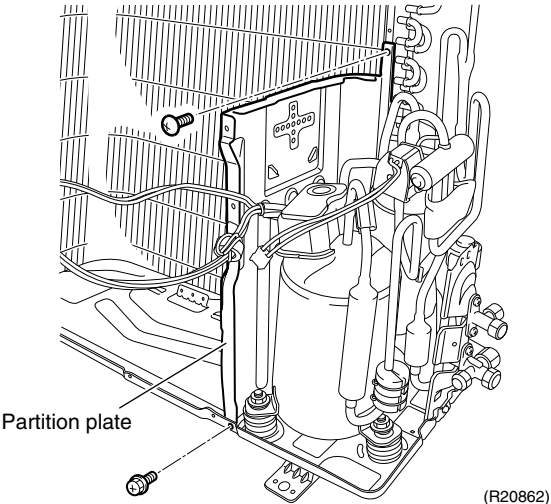
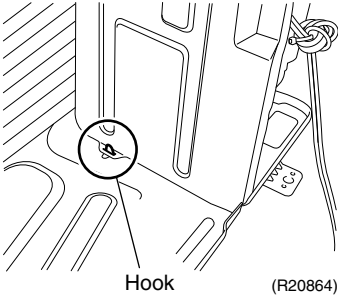
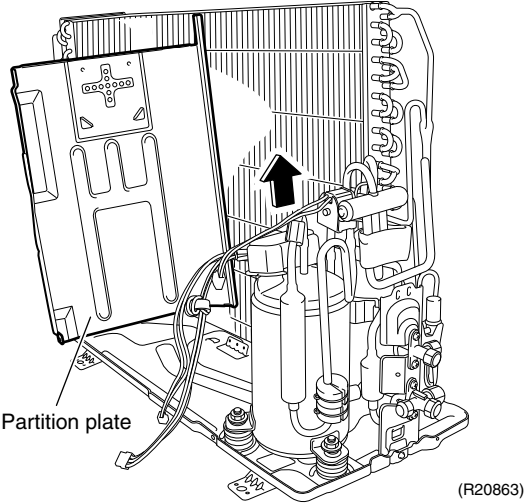
Step	Procedure	Points
1	Remove the sound blanket (top).  (R20856)	■ The design of sound blanket varies depending on the model. ■ Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.
2	Detach the fastener and pull out the sound blanket (outer).  (R20857)	
3	Pull out the sound blanket (inner).  (R20858)	

6. Reactor / Electronic Expansion Valve Coil / Partition Plate

**Warning**

♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 2 screws of the reactor.	 (R20859)
2	Slide the reactor upward and remove it.	 (R20860)
3	Pull out the electronic expansion valve coil.	 (R20861)

Step	Procedure		Points
4	Remove the 2 screws of the partition plate.	 (R20862)	■ When reassembling, fit the hook on the bottom frame.  (R20864)
5	Lift up the partition plate and remove it.	 (R20863)	

7. Four Way Valve



Warning

- ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.
- ♦ Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.
- ♦ If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)



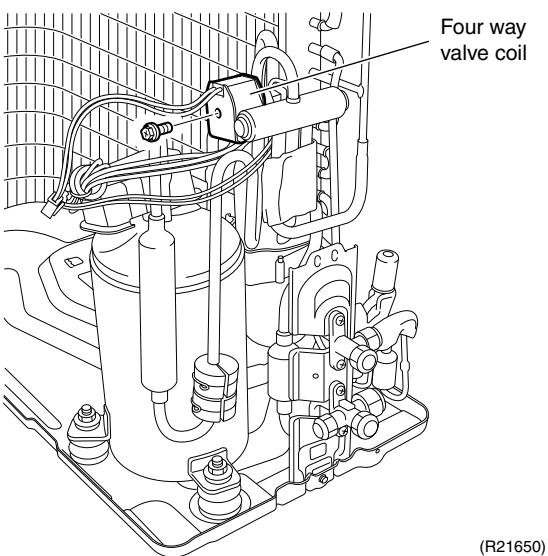
Caution

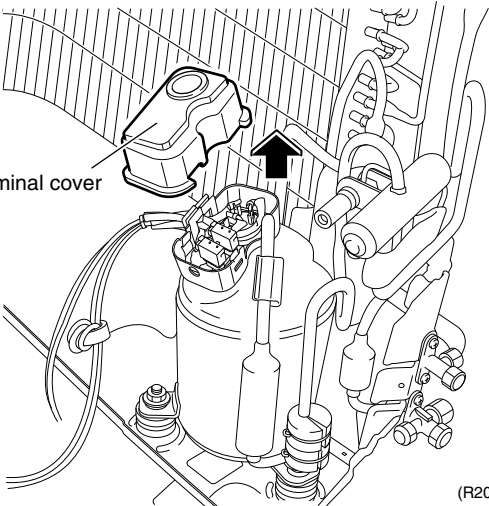
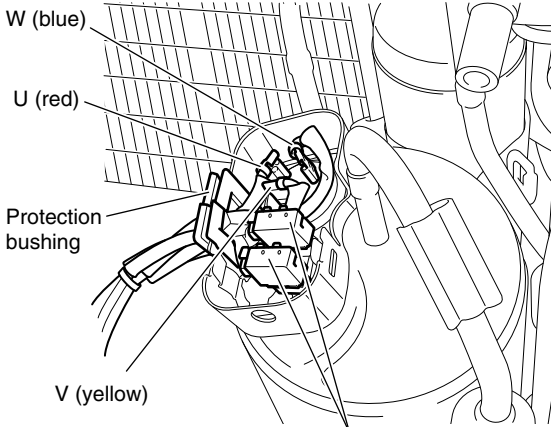
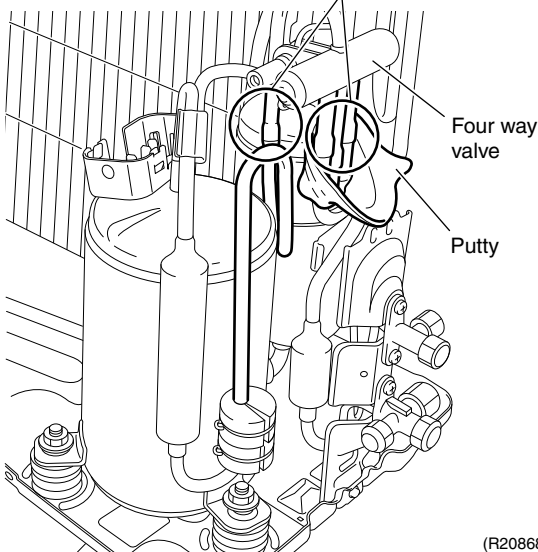
- ♦ From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.
- ♦ Cautions for restoration
 1. Restore the piping by non-oxidation brazing.
 2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C (248°F).) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.



Note

- ♦ Before working, make sure that the refrigerant gas is empty in the circuit.
- ♦ Be sure to apply nitrogen replacement when heating up the brazed part.
- ♦ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.
- ♦ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.
- ♦ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.
- ♦ Be careful so as not to burn the compressor terminals, the name plate, the outdoor heat exchanger fin.
- ♦ In case of difficulty with gas brazing machine
 1. Disconnect the brazed part where is easy to disconnect and restore.
 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.

Step	Procedure	Points
1	Remove the screw and remove the four way valve coil.  (R21650)	■ Cooling only models have no four way valve coil.

Step		Procedure	Points
2	Remove the terminal cover.	 Terminal cover (R20866)	
3	Remove the protection bushing.	 W (blue) U (red) Protection bushing V (yellow) Overload protector (R22758)	
4	Disconnect the compressor lead wires and the overload protector.		
5	Remove the putty.	 Brazed part Four way valve Putty (R20868)	
6	Heat up and disconnect the brazed parts of the four way valve.		
7	Remove the four way valve.		

8. Compressor



Warning

- ♦ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.
- ♦ Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.
- ♦ If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)
- ♦ Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.



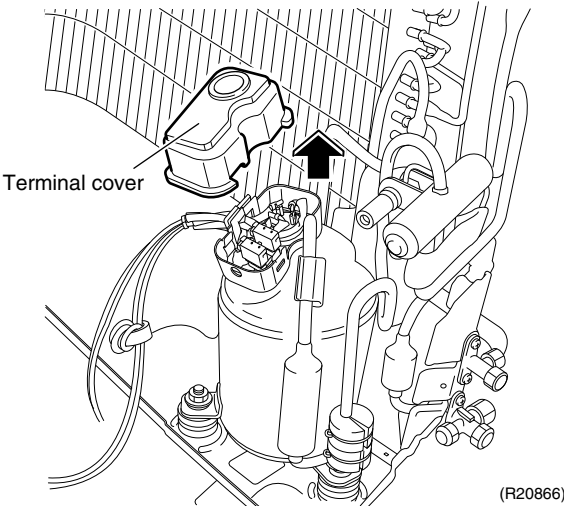
Caution

- ♦ From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.
- ♦ Restore the piping by non-oxidation brazing.

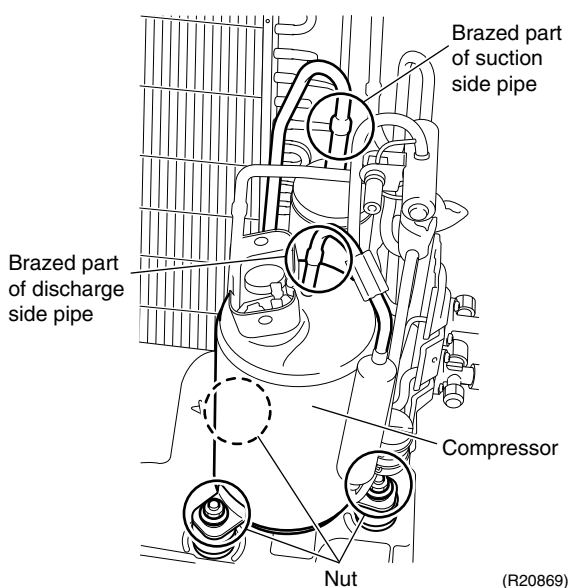
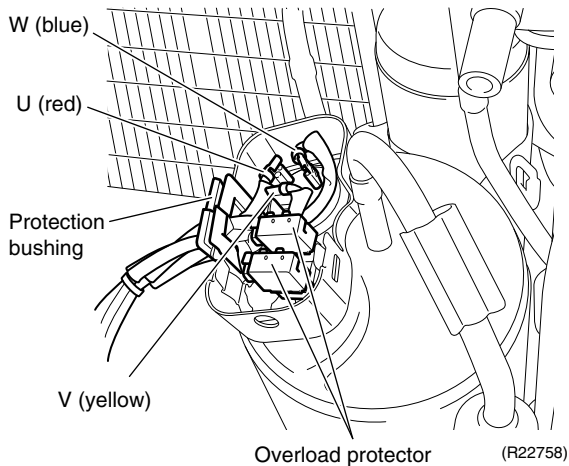


Note

- ♦ Before working, make sure that the refrigerant gas is empty in the circuit.
- ♦ Be sure to apply nitrogen replacement when heating up the brazed part.
- ♦ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.
- ♦ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.
- ♦ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.
- ♦ Be careful so as not to burn the compressor terminals, the name plate, the outdoor heat exchanger fin.
- ♦ In case of difficulty with gas brazing machine
 1. Disconnect the brazed part where is easy to disconnect and restore.
 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.

Step	Procedure	Points
1	Remove the terminal cover. 	

Step	Procedure	Points
2	Remove the protection bushing.	
3	Disconnect the compressor lead wires and the overload protector.	
4	Heat up the brazed part of the discharge side pipe and disconnect it.	
5	Heat up the brazed part of the suction side pipe and disconnect it.	
6	Remove the 3 nuts of the compressor.	
7	Lift up the compressor and remove it.	



Revision History

Month / Year	Version	Revised contents
06 / 2015	Si001554E	First edition
01 / 2016	Si001554EA	Model addition: RXL09QMVJU
08 / 2018	Si001554EB	Model addition: RX09/12QMVJU, RX09/12RMVJU
07 / 2019	Si001554EC	Model addition: RX09/12RMVJU9

Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorized importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorized parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any inquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

<https://www.daikin.com/products/ac/>

© All rights reserved