

TOUCH SCREEN COMMUNICATING CONTROL

JOHNSON CONTROLS UNITARY PRODUCTS

Model Number: S1TTSCC01

- High Definition Colors
- Touch Screen
- 4 Wire Connections
- Auto Configuration
- Advanced Trouble Shooting



Subject to change without notice. Published in U.S.A.
Copyright © 2010 by Johnson Controls, Inc. All rights reserved.

542939-URG-A-1010
Supersedes: Nothing

Johnson Controls Unitary Products, 5005 York Drive, Norman, OK 73069

Setting Your Mode and Temperature

Your Touch Screen Communicating Control commands your HVAC equipment to maintain your home temperature and puts you in the driver seat.

To enable conditioning, press the Heat/Cool


Mode Icon.



Press the icon again to disable.

When both of the icons are enabled the thermostat will command the equipment to run both heating or cooling (auto mode) depending on set points (this is only available in the programmable View/Modes).

Changing the temperature that the Touch Screen Communicating Control conditions to, is as easy as pressing the Up/Down buttons (these arrows will not appear until a mode, heat or cool, has been selected) on the home screen.

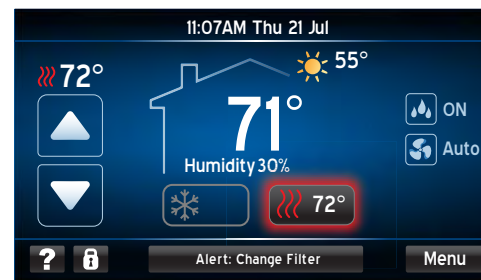

*There may be additional steps required when running a programmable view/mode.

Customizing Your Touch Screen Control

Customize your Touch Screen Communicating Control by using the View/Mode tool to select both the Home and Sleep screen setting.

- On the home screen press the Menu button.

Menu

- Press the Settings icon.



- Press the View/Mode icon.




* See details of each view/mode below.

Customize Details shown on Home screen


Each View/Mode shows the Humidity and Fan icon. You can further customize the Home screen by removing these icons.

- Press the Fan or Humidity icon on the home screen (this is a short cut to Fan/Humidity settings).
- On the Fan/Humidity Adjust screens there is a check box.
- Press to uncheck and the icon will be removed from the home screen.

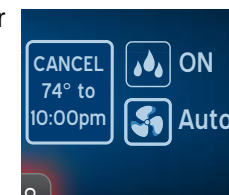


Non-Programmable View/Mode

Non-programmable mode simplifies the functionality of the Touch Screen Communicating Control, by removing schedule capabilities.

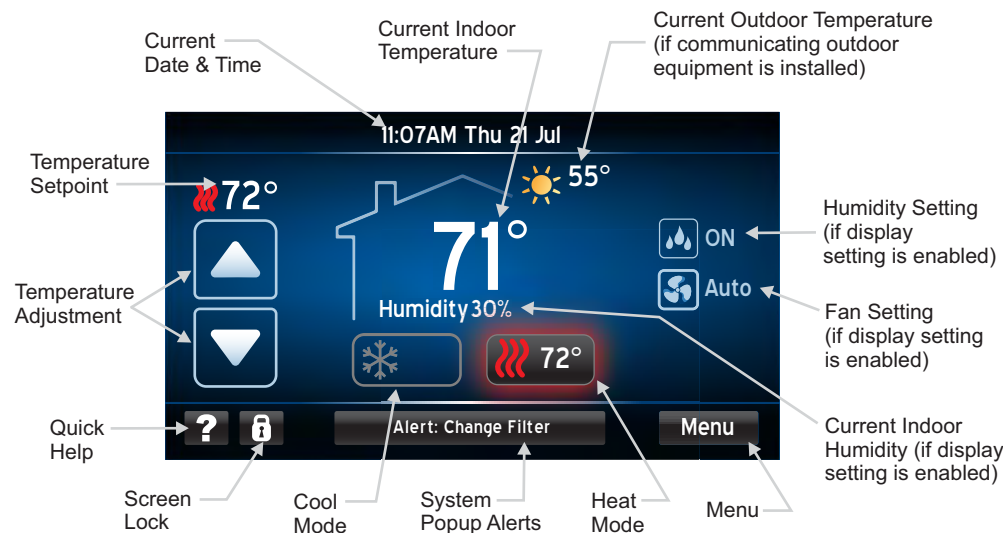


Programmable View/Mode

Programmable View/Mode activates the schedule functionality of the Touch Screen Communicating Control, while maintaining most of the aesthetics of the Non-Programmable View/Mode.

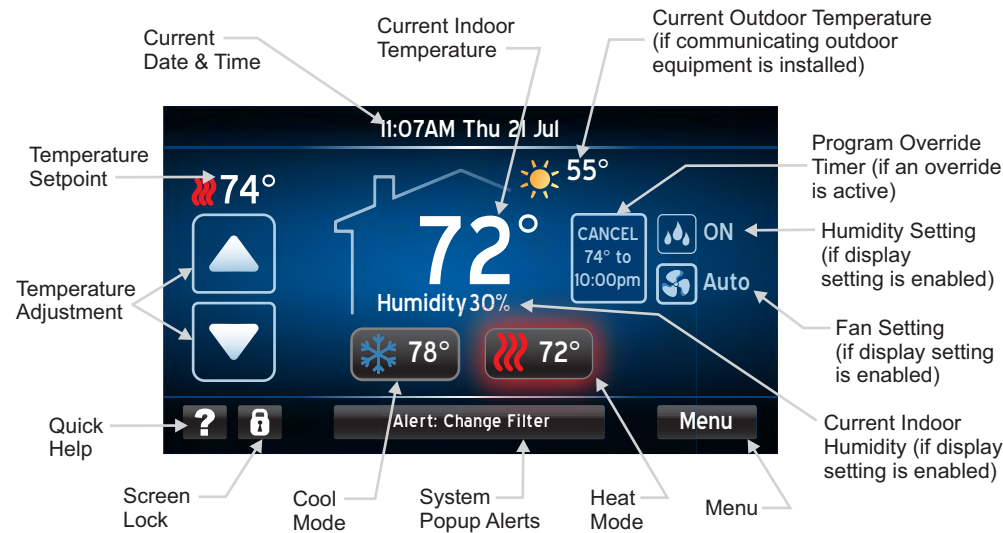

Advanced Programmable View/Mode

Advanced Programmable View/Mode is a more technical Home screen display. It allows short cuts to view schedule and adds more options for schedule override.

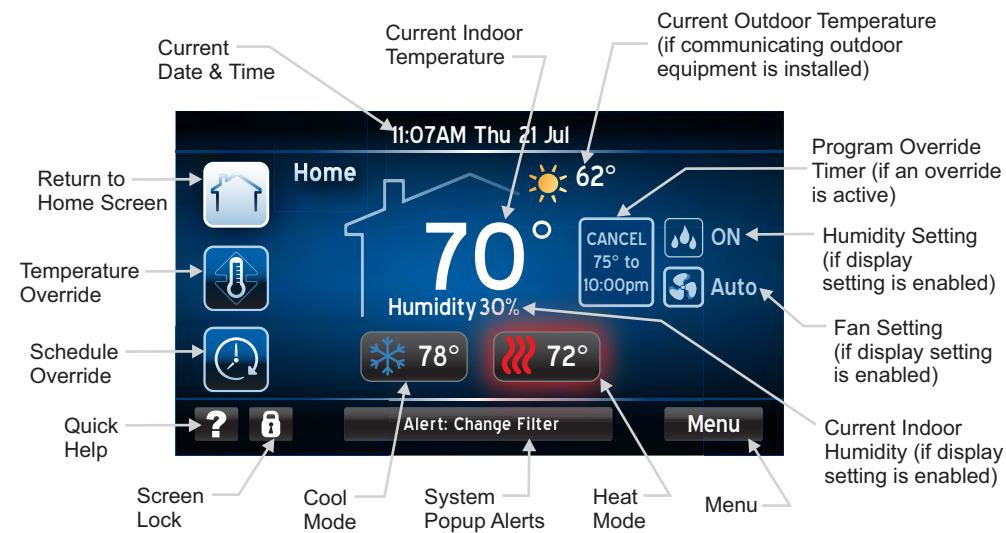

Status (System Map) Screen

The Status screen allows access to system wide information. The information displayed is a quick reference of current system operation.

- On the home screen press the Menu button.
- Press the Status Icon.

*For even more information about the installed equipment press the icon of any of the installed devices.

GREEN: The device represented by the icon is performing as expected without any concerns.

YELLOW: The device represented by the icon requires some attention but not urgently.

RED: The device represented by the icon needs immediate attention.

GRAY: The device represented by the icon color is not installed and is offered to maximize your comfort and indoor air quality.







Enabling Your Security

To prevent tampering with your Touch Screen Communicating Control, the screen can be fully locked. To activate the screen security setting:

- Press Screen Lock button on the Home screen.
- Press ON icon to activate screen lock settings.
- Press OK.
- You will be prompted to enter your new PIN number.
- Press OK.

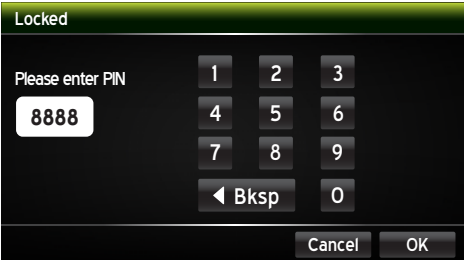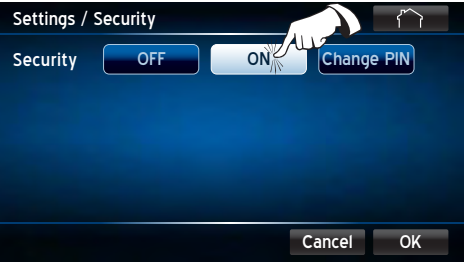

Customizing Your Comfort



The Touch Screen Communicating Control allows for precise setting of both the humidity and the fan settings. These settings can be changed by using the shortcut shown on the Home screen.

Press the Fan or Humidity icon on the home screen (this is a short cut to Fan/Humidity Adjust screen).

- Fan has up to three modes:
- Auto:** Fan only runs with a call for conditioning.
 - Manual:** User can adjust fan speed and time for fan to run when no conditioning is required.
 - Schedule:** Fan runs per scheduled settings.



- Humidity has up to three modes:
- Auto:** The humidity is set according to the outdoor temperature.
 - Manual:** User adjust % RH desired in the home.
 - Schedule:** Humidity is controlled per scheduled settings.

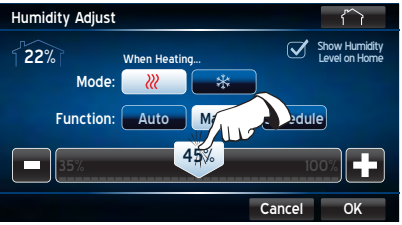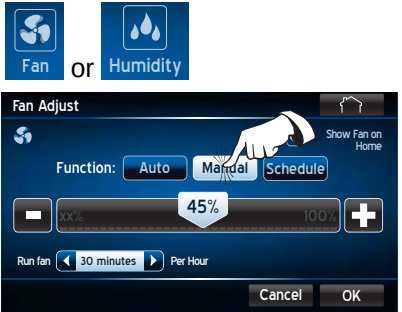


Programming Your Personal Touch

Your Touch Screen Communicating Control has a wide variety of features and settings to be used. Access these features using the Menu button located on your Home screen.

Main Menu is used to view/edit important functionality of your system. These settings apply more to your installed HVAC equipment, then to the touch screen control itself.

*In heat pump systems Emergency Heat can be activated from this screen. This will disengage the heat pump and utilize the backup heat source when a heating demand is present.

The Settings screen is used to customize the Touch Screen Communicating Control. You can adjust brightness level, sound, temperature display, etc. So that your touch screen is customized to your preferences.

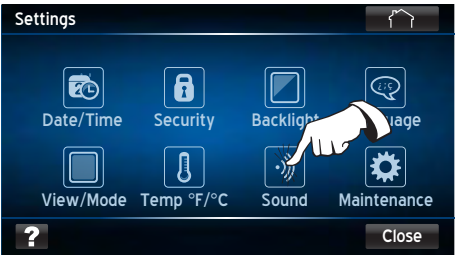


Customize Schedule for the Whole Year

When in a programmable View Mode the thermostat will always follow a schedule (Defaulting to Energy Saver). You can create personalized schedules and assign them to a yearly calendar by season or by month.

- To assign your schedules:
- Press Schedule icon (located in the thermostat main menu).
- Press the Assign to Calendar button.

- Press the Up/Down arrows to highlight the schedule to assign.
- Press the area of the calendar and the desired months or seasons will be highlighted with the assigned schedule color.

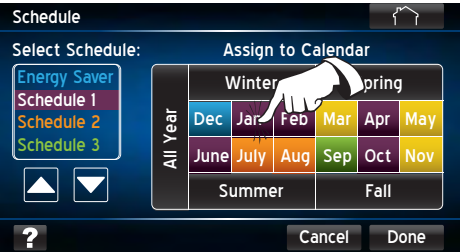

Overriding Temperature Settings

When in a programmable View/Mode, the Touch Screen Communicating Control conditions the space per programmed set points. Follow these steps if temperatures need to be temporarily/indefinitely overridden:

Advanced Programmable View/Mode:

- From the Home screen press the Temperature Override button.
- Change the temperature by sliding the "home plate" or by pressing the Plus/Minus buttons until desired set point is reached.
- Press the Pick Duration box.
- Here you select duration to "hold" the override temperature.

Programmable View/Mode:

- From the Home screen press the Up/Down arrows to select desired set point.
- Press the Pick Duration box.
- Here you select duration to "hold" the override temperature.

