

HK42FZ114, HK42FZ116, HK38EA060
Control Board
InteliSense™ Equipment Relearning

Installation Instructions

NOTE: Read the entire instruction manual before starting the installation.

1. Safety Considerations	1
2. Relearning the Indoor Unit Equipment	2
2.1. ecobee3 lite	3
2.2. ecobee Premium	14

1. Safety Considerations

Read and follow manufacturer instructions carefully. Follow all local electrical codes during installation. All wiring must conform to local and national electrical codes. Improper wiring or installation may damage the thermostat and equipment.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the equipment and in the instruction manual, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies a hazard which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage.

NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

This document defines the instructions needed to initiate the relearning process on the ecobee for Carrier/Bryant smart thermostats with IntelliSense™ technology whenever one of the following equipment control boards is replaced.

Table 1 – Equipment Boards

Board P/N	Description
HK42FZ114	Control Board - 1-STG IntelliSense Furnace
HK42FZ116	Control Board - 2-STG IntelliSense Furnace
HK38EA060	Control Board - IntelliSense Fan Coil

NOTE: Please confirm that all the connectors to the control board are fully seated and that all sensors are properly connected.

2. Relearning the Indoor Unit Equipment

To initiate the relearning process, follow the steps below.

NOTE: The screens provided are for a 2-stage furnace control board, but the steps apply to all boards listed in [Table 1](#).

2.1. ecobee3 lite

(SKUs EB-STATE3LTICR-01, EB-STATE3LTICB-01, EB-STATELTIBR-01, EB-STATE3LTIBB-01)

1. From the Home Screen, press the hamburger menu, to transition to the Main Menu System screen.

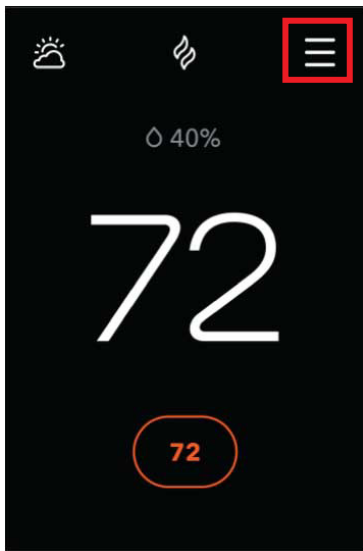


Fig. 1 – Home Screen

A230178

2. From the Main Menu System screen, press the settings button which will launch the Main Menu General screen.

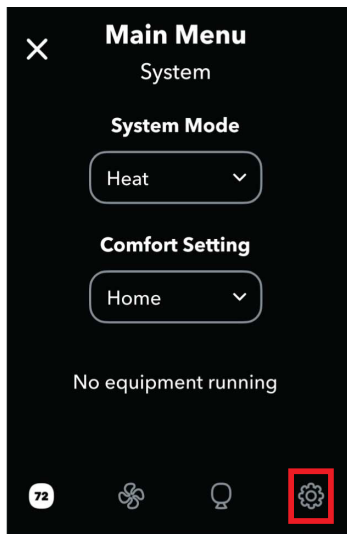


Fig. 2 – Main Menu System Screen

A230179

3. From the Main Menu General screen, select the Settings option to launch the Settings screen.

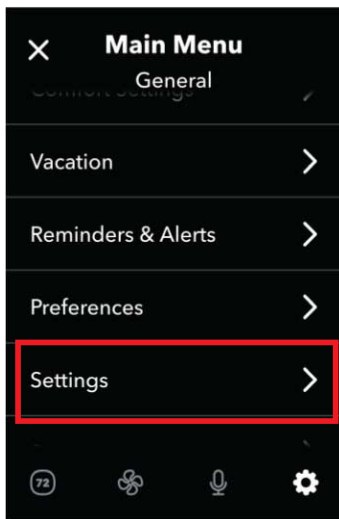


Fig. 3 – Main Menu General Screen

A230180

4. From the Settings screen, press the Installation Settings option.

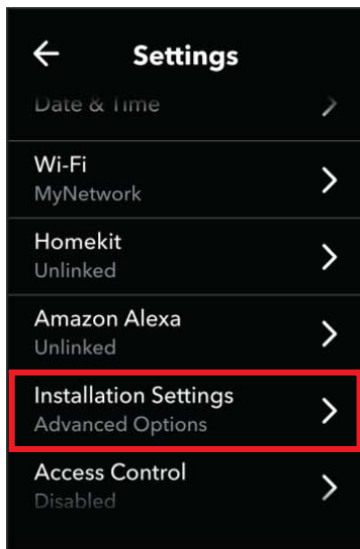


Fig. 4 – Settings Screen

A230181

5. From this Installation Settings screen, press the Equipment option.

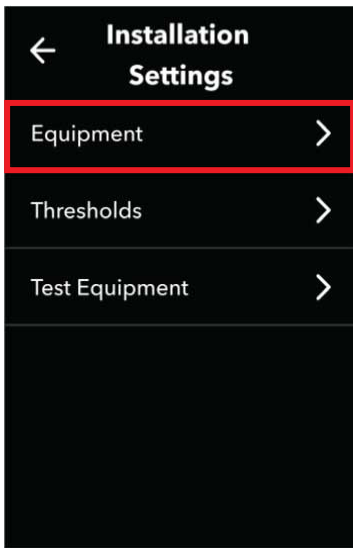


Fig. 5 – Installation Settings Screen

A230182

6. From the Equipment screen, press the Reconfigure Equipment option and follow the steps to define the equipment configuration. After completing these steps, return to the Home Screen.



Fig. 6 – Equipment Screen

A230183

7. To confirm the relearn process was successful, from the home screen, press the hamburger menu, to transition to the Main Menu System screen.

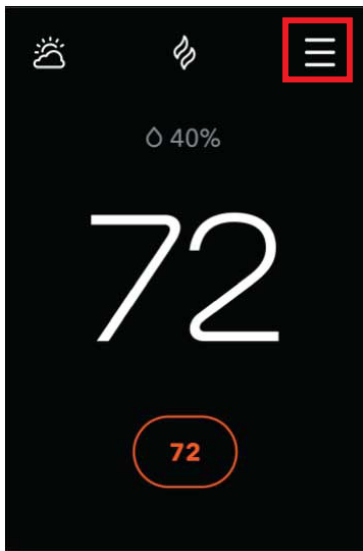


Fig. 7 – Home Screen

A230178

8. From the Main Menu System screen, press the settings button which will launch the Main Menu General screen.

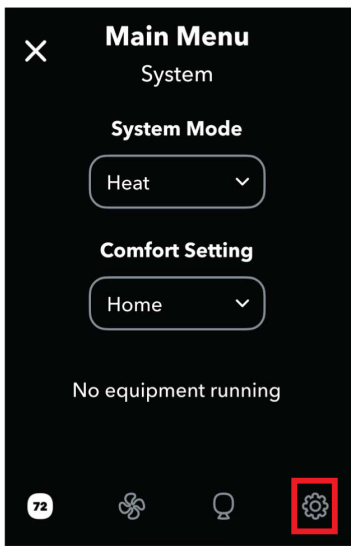


Fig. 8 – Main Menu System Screen

A230179

9. From the Main Menu General Screen, select the System option.

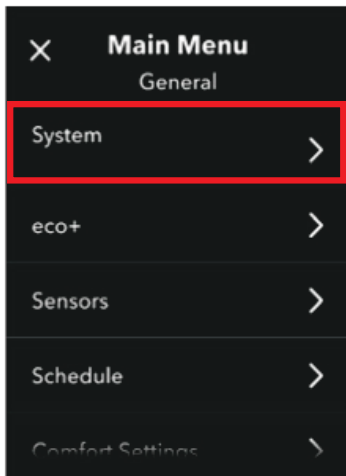


Fig. 9 – Main Menu General Screen

A230186

10. From the System screen, select the Equipment option.

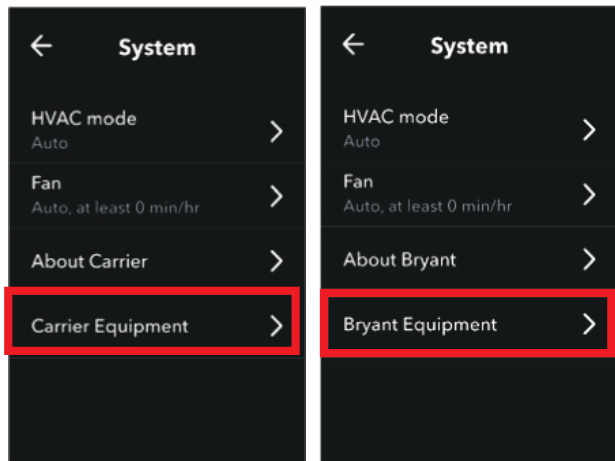


Fig. 10 – System Screen

A230187

11. The learned equipment will be displayed on the screen. Completing these steps will ensure equipment data is reported to the IntelliSense cloud.

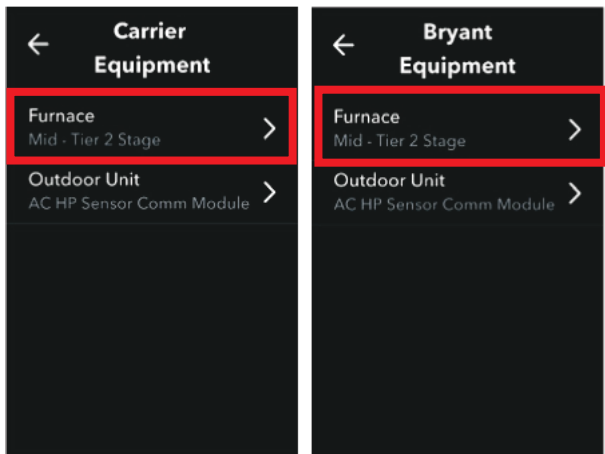


Fig. 11 – Equipment Screen

A230188

2.2. ecobee Premium

(SKUs EB-STATE6ICR-01, EB-STATE6IBR-01)

1. From the home screen, press the hamburger menu, to transition to the Main Menu System screen.

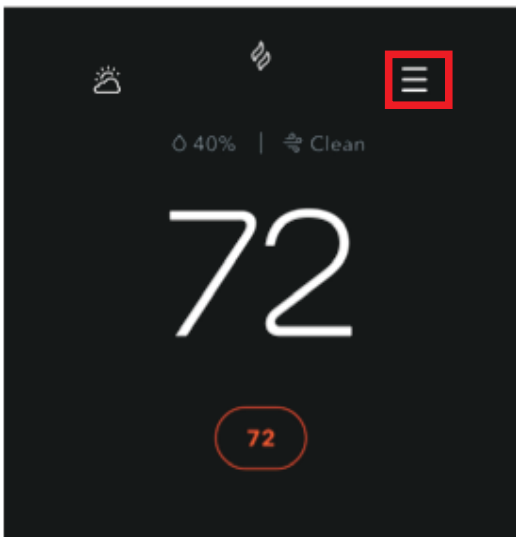


Fig. 12 – Home Screen

A230205

2. From the Main Menu System screen, press the settings button which will launch the Main Menu General screen.

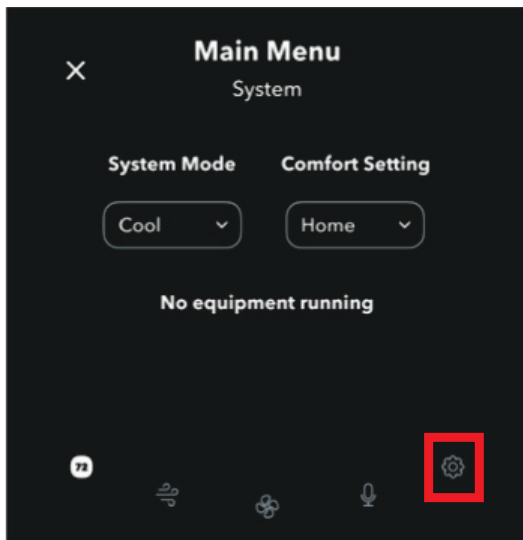


Fig. 13 – Main Menu System Screen

A230189

3. From the Main Menu General screen, select the settings option to launch the Settings screen.

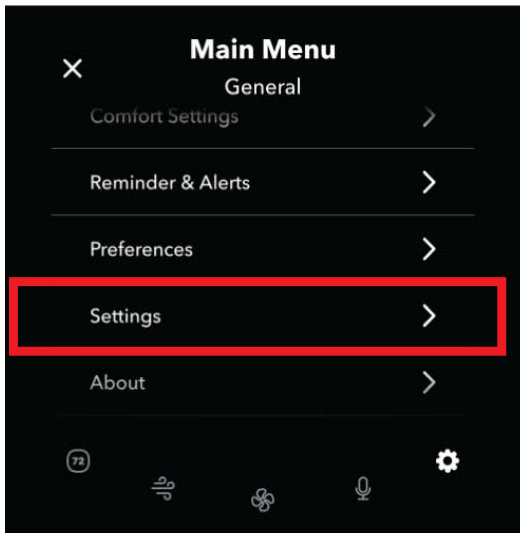


Fig. 14 – Main Menu General Screen

A230190

4. From the Settings screen, select the Installation Settings option.

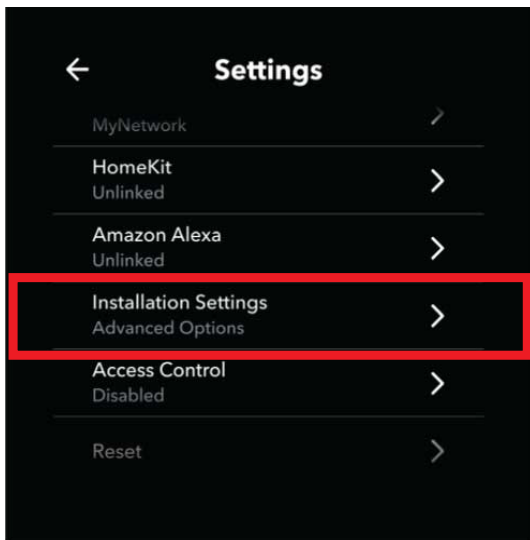


Fig. 15 – Settings Screen

A230191

5. From this Installation Settings screen, select the Equipment option.

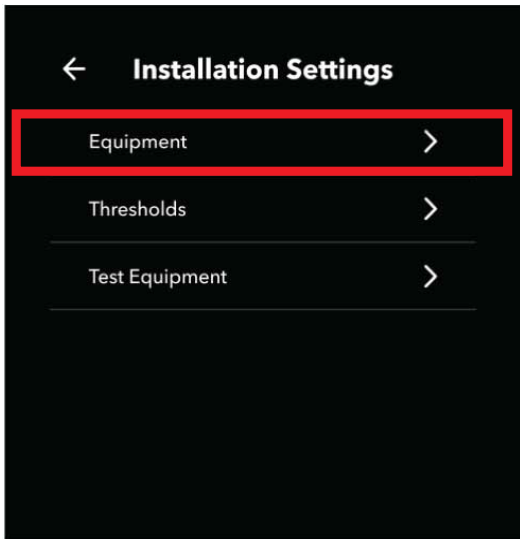


Fig. 16 – Installation Settings Screen

A230192

6. From the Equipment screen, select the Reconfigure Equipment option and follow the steps to define the equipment configuration. After completing these steps, return to the Home Screen.

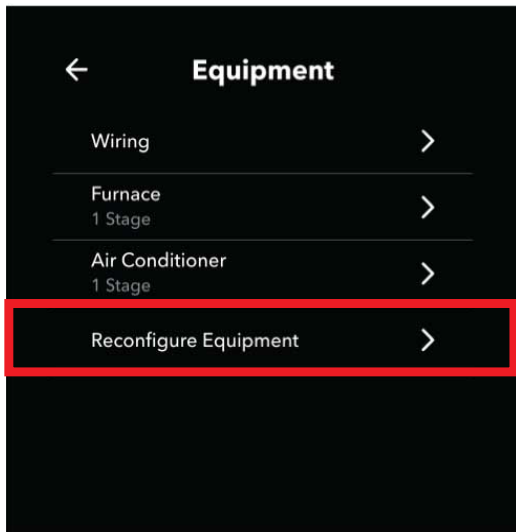


Fig. 17 – Equipment Screen

A230193

7. To confirm the relearn process was successful, from the home screen, press the hamburger menu, to transition to the Main Menu System screen.

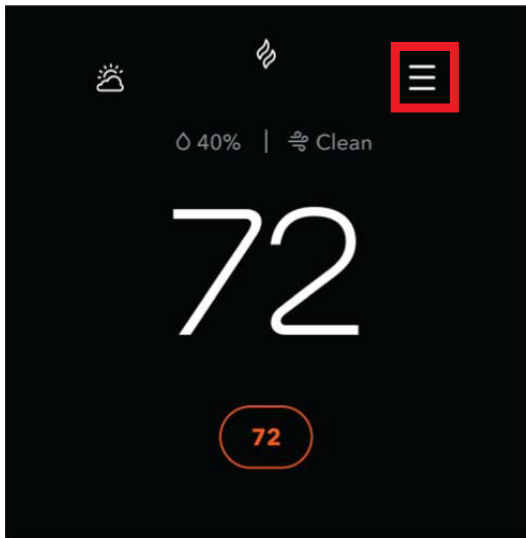


Fig. 18 – Home Screen

A230194

8. From the Main Menu System screen, press the settings button which will launch the Main Menu General screen.

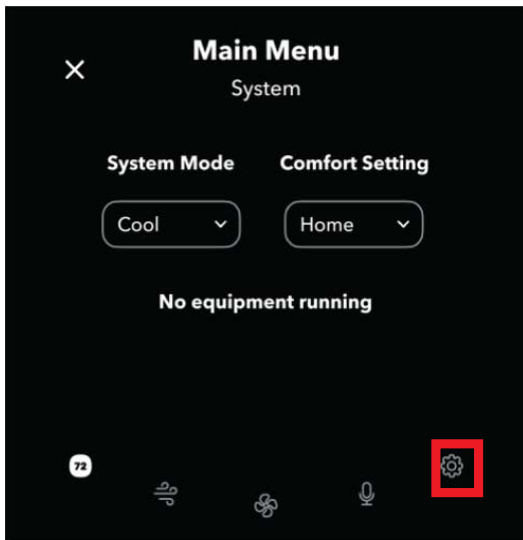


Fig. 19 – Main Menu System Screen

A230195

9. From the Main Menu General screen, select the System option.

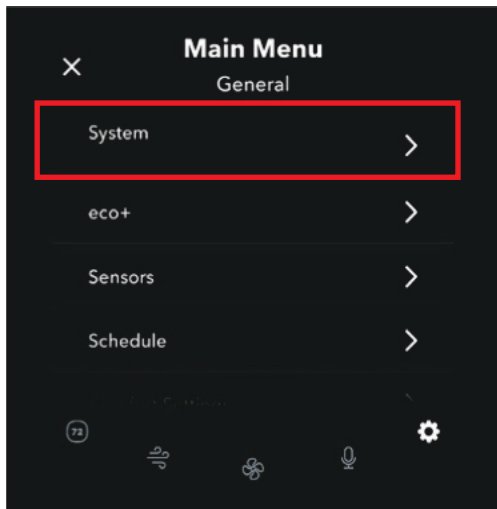


Fig. 20 – Main Menu General Screen

A230196

10. From the System screen, select the Equipment option.

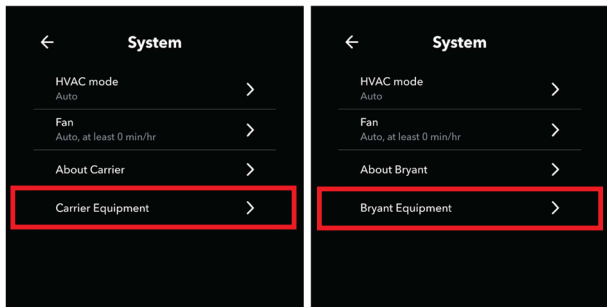


Fig. 21 – System Screen

A230197

11. The learned equipment will be displayed on the screen. Completing these steps will ensure equipment data is reported to the IntelliSense cloud.

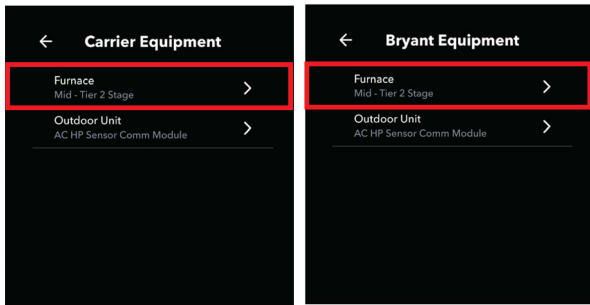


Fig. 22 – Equipment Screen

A230198

© 2023 Carrier. All rights reserved.

A Carrier Company

Catalog No: IM-HK-01

Edition Date: 03/23 Replaces: New

Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.