

Installation Instructions

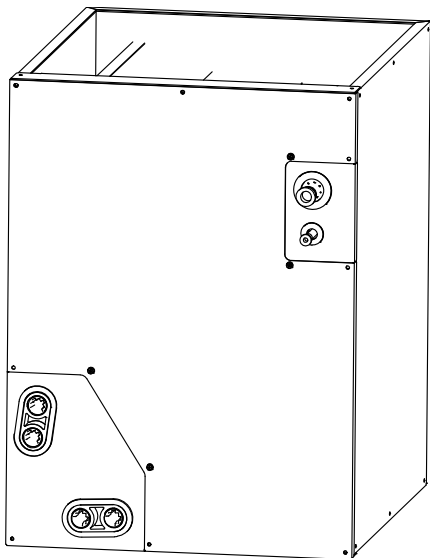


Fig. 1 — Evaporator A Coil (40MULAQ24XAX and 40MULAQ36XBX)

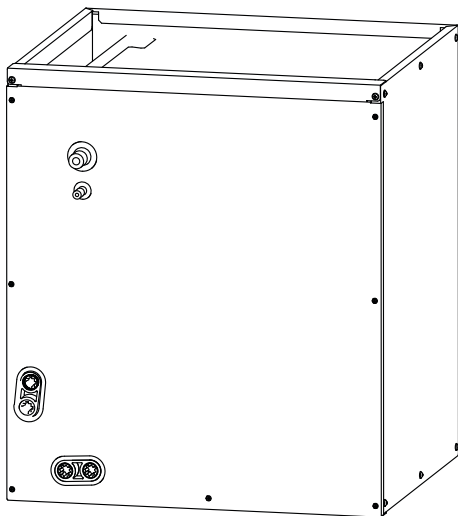


Fig. 2 — Evaporator A Coil (40MULAQ24XBX, 40MULAQ36XCX, 40MULAQ48XCX, 40MULAQ60XDX)

TABLE OF CONTENTS

	PAGE
SAFETY CONSIDERATIONS.....	2
INTRODUCTION	5
DIMENSIONS.....	6
REFRIGERANT COIL SPECIFICATIONS.....	9
INSTALLATION	10
EVAPORATOR FLANGE FABRICATION.....	11
SENSOR INSTALLATION	15
OPERATION MODE SETTING	17
AIR FLOW SPECIFICATIONS	17
CARE AND MAINTENANCE.....	17

NOTE: Read the entire instruction manual before starting the installation.

NOTE: Images are for illustration purposes only. Actual models may differ slightly.

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury or property damage.

Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in the literature and attached to the unit. Consult local building codes and the current editions of the National Electrical Code (NEC) NFPA 70.

In Canada, refer to the current editions of the Canadian Electrical Code CSA C22.1. Recognize safety information.

This is the safety-alert symbol .

When you see this symbol on the unit and in instruction manuals, be alert to the potential for personal injury.



WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



WARNING

If an abnormal situation occurs (like a burning smell), immediately turn off the unit and disconnect the power. Call your dealer for instructions to avoid electric shock, fire or injury.

Do not insert fingers, rods or other objects into the air inlet or outlet. This may cause injury, since the fan may be rotating at high speeds.

Do not use flammable sprays such as hair spray, lacquer or paint near the unit. This may cause fire or combustion.

Do not operate the air conditioner in places near or around combustible gases. Emitted gas may collect around the unit and cause explosion.

Do not expose your body directly to cool air for a prolonged period of time.

Do not allow children to play with the air conditioner. Children must be supervised around the unit at all times.

If the air conditioner is used together with burners or other heating devices, thoroughly ventilate the room to avoid oxygen deficiency.

In certain functional environments, such as kitchens, server rooms, etc., the use of specially designed air-conditioning units is highly recommended.

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.



WARNING

CLEANING AND MAINTENANCE

Turn off the device and disconnect the power before cleaning. Failure to do so can cause electrical shock.

Do not clean the air conditioner with excessive amounts of water.

Do not clean the air conditioner with combustible cleaning agents. Combustible cleaning agents can cause fire or deformation.



CAUTION

NON USE PERIODS

Turn off the air conditioner and disconnect the power if you are not going to use it for a long time.

Turn off and unplug the unit during storms.

Ensure that water condensation can drain unhindered from the unit.

Do not operate the air conditioner with wet hands. This may cause electric shock.

Do not use device for any other purpose than its intended use.

Do not climb onto or place objects on top of the outdoor unit.

Do not allow the air conditioner to operate for long periods of time with doors or windows open, or if the humidity is very high.

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.



WARNING

ELECTRICAL WARNINGS

Only use the specified power cord. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Keep the power plug clean. Remove any dust or grime that accumulates on or around the plug. Dirty plugs can cause re or electric shock.

Do not pull power cord to unplug the unit. Hold the plug firmly and pull it from the outlet. Pulling directly on the cord can damage it, which can lead to fire or electric shock.

Do not modify the length of the power supply cord or use an extension cord to power the unit.

Do not share the electrical outlet with other appliances. Improper or insufficient power supply can cause re or electrical shock.

The product must be properly grounded at the time of installation, or electrical shock may occur.

For all electrical work, follow all local and national wiring standards, regulations, and the Installation Manual. Connect cables tightly, and clamp them securely to prevent external forces from damaging the terminal. Improper electrical connections can overheat and cause fire, and may also cause shock. All electrical connections must be made according to the Electrical Connection Diagram located on the panels of the indoor and outdoor units.

All wiring must be properly arranged to ensure that the control board cover can close properly. If the control board cover is not closed properly, it can lead to corrosion and cause the connection points on the terminal to heat up, catch fire, or cause electrical shock.

If connecting power to fixed wiring, an all-pole disconnection device which has at least 3mm clearances in all poles, and have a leakage current that may exceed 10mA, the residual current device (RCD) having a rated residual operating current not exceeding 30mA, and disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.



WARNING

PRODUCT INSTALLATION WARNINGS

Installation must be performed by an authorized dealer or specialist.

Defective installation can cause water leak, electrical shock, or fire.

Installation must be performed according to the installation instructions.

Improper installation can cause water leakage, electrical shock, or fire.

(In North America, installation must be performed in accordance with the requirement of NEC and CEC by authorized personnel only.)

Contact an authorized service technician for repair or maintenance of this unit. This appliance shall be installed in accordance with national wiring regulations.

Only use the included accessories, parts, and specified parts for installation. Using non-standard parts can cause water leakage, electrical shock, re, and can cause the unit to fail.

Install the unit in a rm location that can support the unit's weight. If the chosen location cannot support the unit's weight, or the installation is not done properly, the unit may drop and cause serious injury and damage.

Install drainage piping according to the instructions in this manual.

Improper drainage may cause water damage to your home and property.

For units that have an auxiliary electric heater, do not install the unit within 3 feet (1 meter) of any combustible materials.

Do not install the unit in a location that may be exposed to combustible gas leaks. If combustible gas accumulates around the unit, it may cause fire.

Do not turn on the power until all work has been completed.

When moving or relocating the air conditioner, consult experienced service technicians for disconnection and re-installation of the unit.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have re extinguisher available.


Excessive Weight Hazard - Use two or more people when moving and installing the unit. Failure to do so can result in back or other type of injury. Take precautions to ensure Aluminum tubes do not come in direct contact or allow for condensate run o with a dissimilar metal. Dissimilar metals can cause galvanic corrosion and possible premature failure.

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing and gloves when handling parts.

Table 1 — Model Numbers

KBTUH	VOLTAGE	MODEL #
24	208/230-1-60	40MULAQ24XAX
	208/230-1-60	40MULAQ24XBX
36	208/230-1-60	40MULAQ36XBX
	208/230-1-60	40MULAQ36XCX
48	208/230-1-60	40MULAQ48XCX
60	208/230-1-60	40MULAQ60XDX

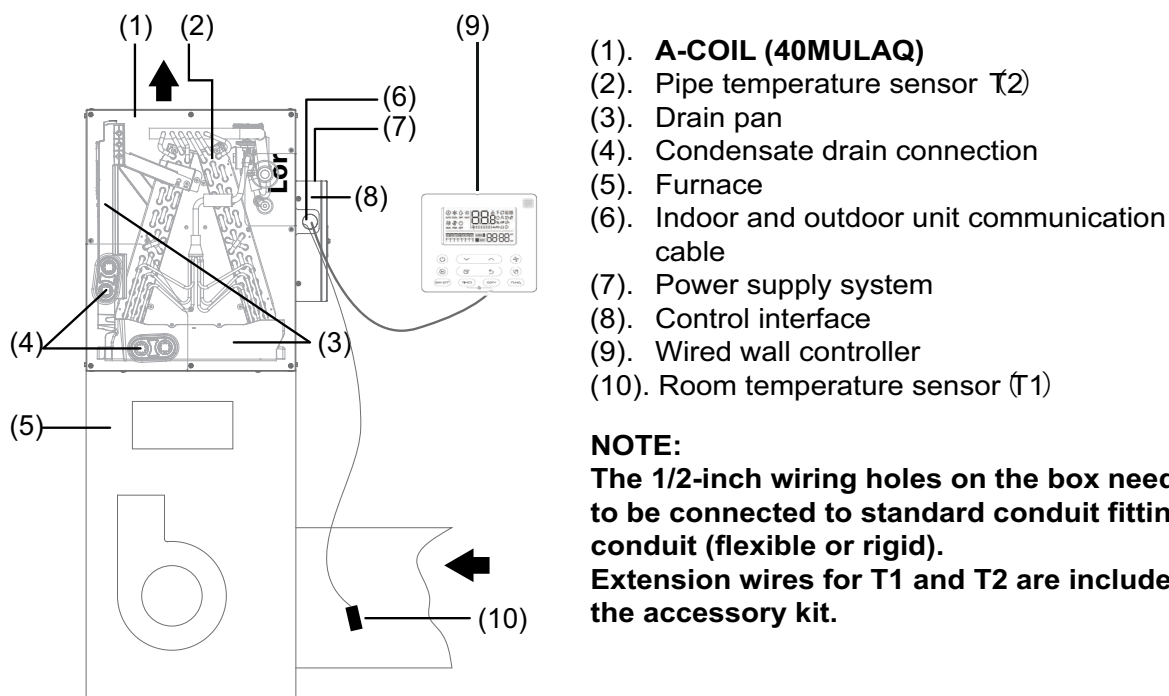**Fig. 3 — Parts**

INTRODUCTION

Use this instruction manual to install indoor coil on **multi-purpose** furnaces. The coil is enclosed in a casing.

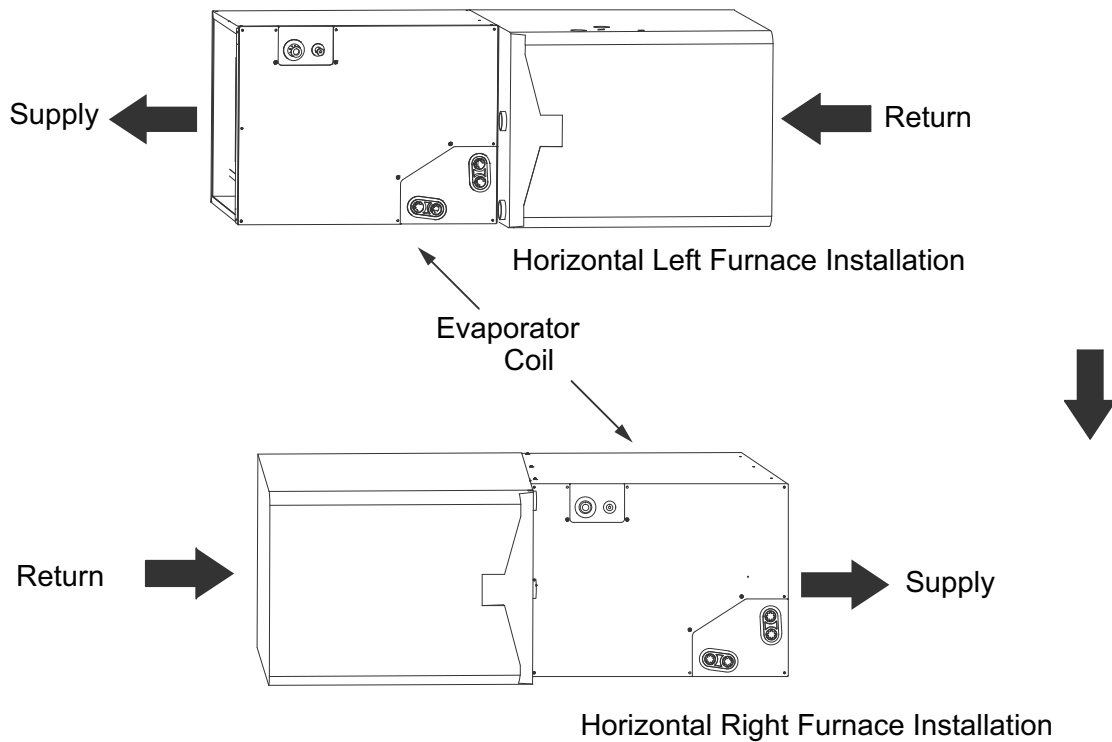


Fig. 4 — Left and Right Installation

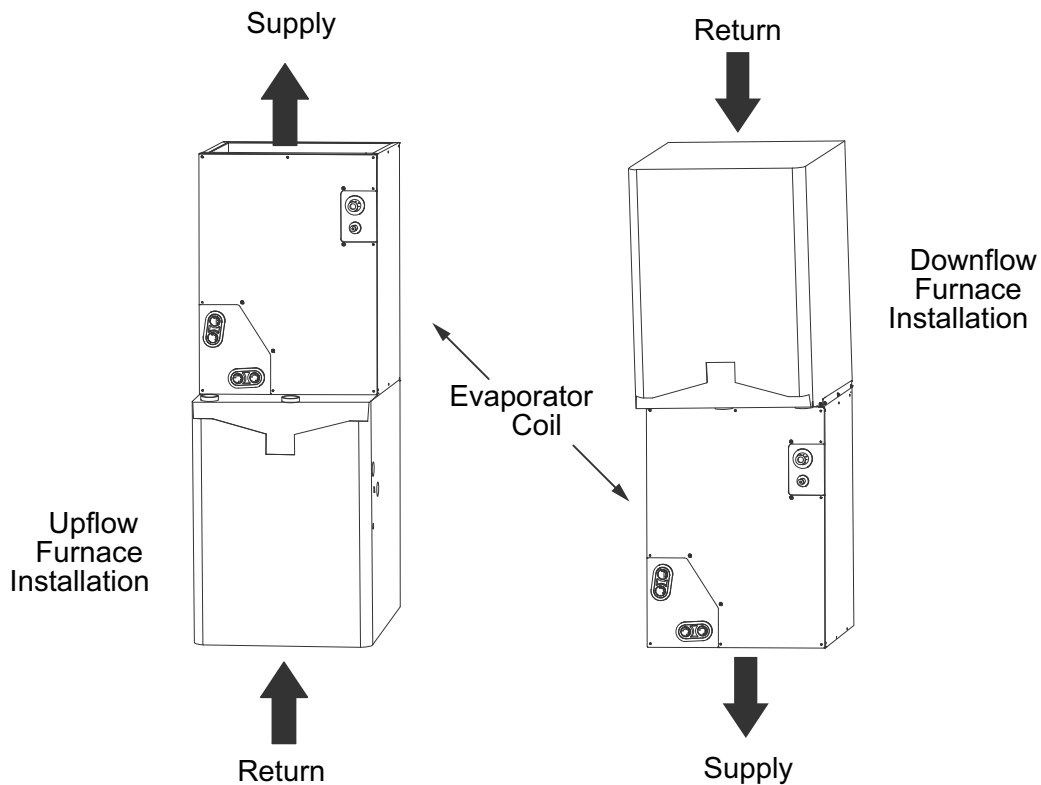


Fig. 5 — Typical Coil Installation on Furnace

DIMENSIONS

Table 2 — Dimensions and Weights

MODEL #		40MULAQ24XAX	40MULAQ24XBX	40MULAQ36XBX	40MULAQ36XCX	40MULAQ48XCX	40MULAQ60XDX
DIMENSIONS							
Height (A)	In/ (mm)	17.99 (457)	17.99 (457)	23.58 (599)	23.98 (609)	23.98 (609)	27.99 (711)
Width (B)	In/ (mm)	14.49 (368)	17.52 (445)	17.52 (445)	20.98 (533)	20.98 (533)	24.49 (622)
Depth (E)	In/ (mm)	21.02 (534)	20.98 (533)	20.98 (533)	20.98 (533)	20.98 (533)	20.98 (533)
PACKING							
Height	In/ (mm)	20.55 (522)	20.28 (515)	25.39 (645)	26.38 (670)	26.38 (670)	30.31 (770)
Width	In/ (mm)	17.6 (447)	20.47 (520)	20.47 (520)	24.02 (610)	24.02 (610)	27.76 (705)
Depth	In/ (mm)	26.06 (662)	26.18 (665)	26.18 (665)	26.18 (665)	26.18 (665)	26.18 (665)
Thickness	In/ (mm)	0.276 (7)	0.276 (7)	0.276 (7)	0.276 (7)	0.276 (7)	0.276 (7)
Drawing No.		ZXW-645*430*505S-NS	ZXW-505*650*490S-NS	ZXW-505*650*630S-NS	ZXW-595*650*645S-NS	ZXW-595*650*645S-NS	ZXW-690*650*745S-NS
Material	-	Double Corrugated					
Weight - Gross	lbs. (kg)	46.52 (21.1)	52.03 (23.6)	69.00 (31.3)	77.16 (35)	77.16 (35)	98.33 (44.6)
Weight -Net	lbs. (kg)	41.67 (18.9)	42.77 (19.4)	60.19 (27.3)	66.58 (30.2)	66.58 (30.2)	86.64 (39.3)

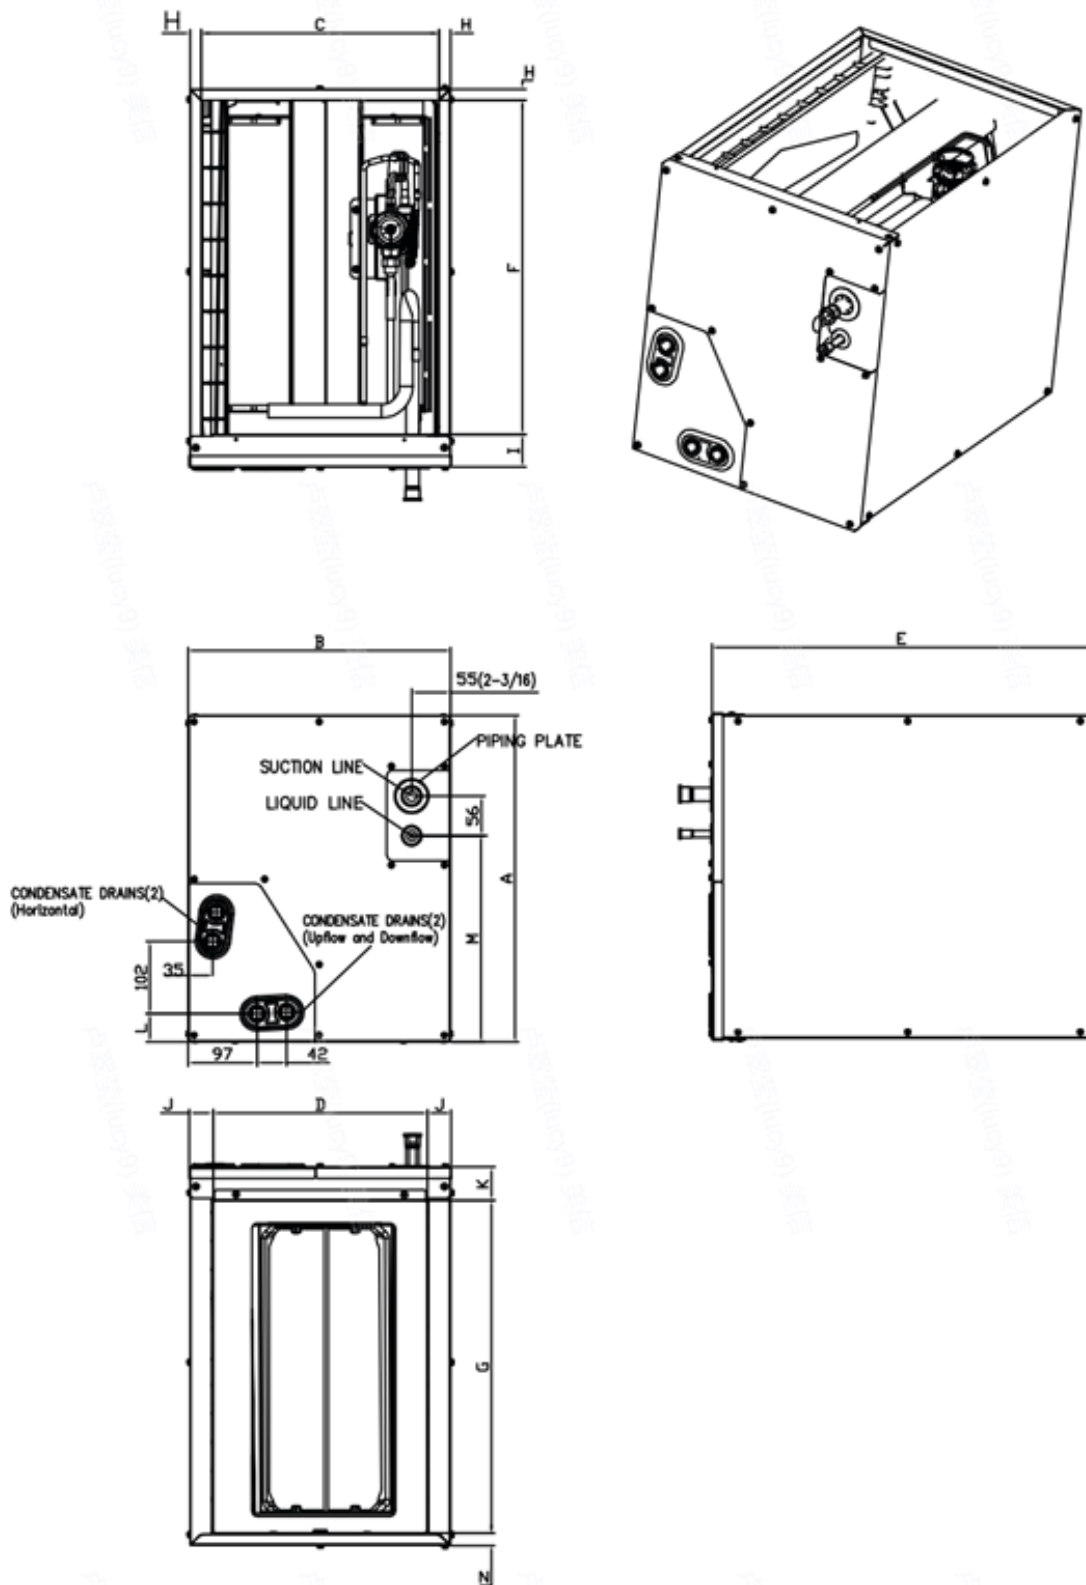


Fig. 6 — 40MULAQ24XAX, 40MULAQ36XBX

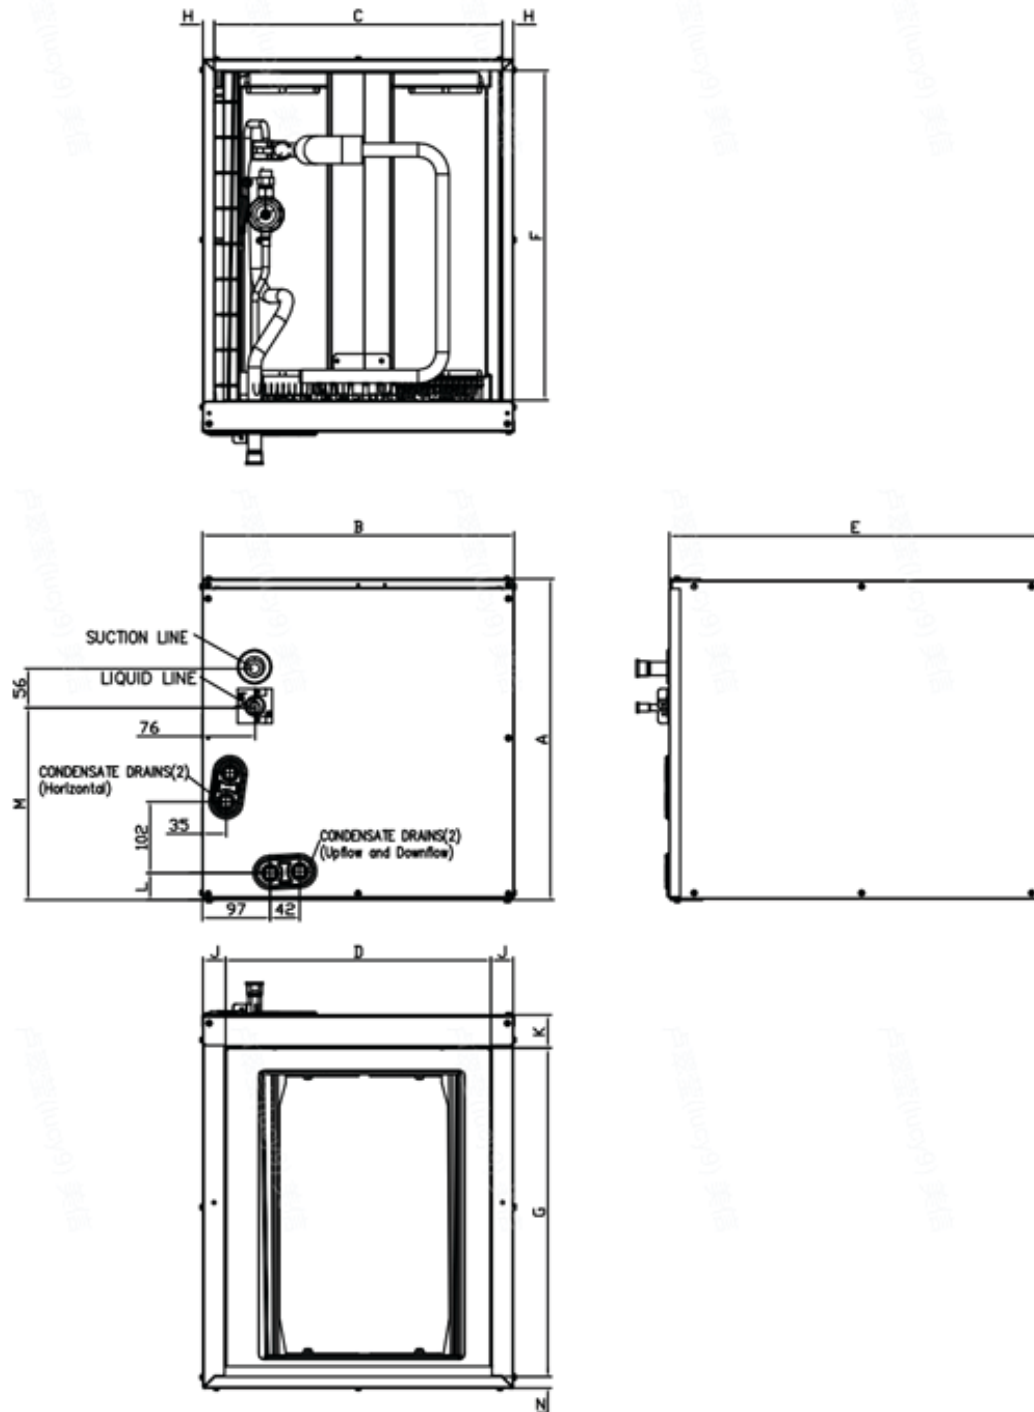


Fig. 7 — 40MULAQ24XBX, 40MULAQ36XCX, 40MULAQ48XCX, 40MULAQ60XDX

REFRIGERANT COIL SPECIFICATIONS

Table 3 — Refrigerant Coil Specifications

MODEL NUMBER		40MULAQ24XAX	40MULAQ24XBX	40MULAQ36XBX	40MULAQ36XCX	40MULAQ48XCX	40MULAQ60XDX
Number of rows	Rows	3	3	4	4	4	5
Tube outside diameter.	inch	0.276	0.276	0.276	0.276	0.276	0.276
	mm	7	7	7	7	7	7
Nominal Tube Wall	inch	0.039	0.039	0.039	0.039	0.039	0.039
	mm	1	1	1	1	1	1
Tube Enhancement	(Yes/No)	Yes					
Tube Material		Aluminum					
Tube pitch (a)x row pitch (b)	inch	0.83x0.53	0.83x0.53	0.83x0.53	0.83x0.53	0.83x0.53	0.83x0.53
	mm	21x13.37	21x13.37	21x13.37	21x13.37	21x13.37	21x13.37
Fin Spacing	FPI	20	20	20	16	16	20
	mm	1.3	1.3	1.3	1.6	1.6	1.3
Fin type		Louvered					
Fin Material		Hydrophilic aluminum					
Coil length x width x height	inch	16.34*13.23*1.58*2	16.34*13.23*1.58	16.34*18.19*2.11*2	16.34*18.19*2.11*2	16.34*18.19*2.11*2	16.34*21.50*2.64*2
	mm	415*336*40.11*2	415*336*40.11*2	415*462*53.48*2	415*426*53.48*2	415*426*53.48*2	415*546*66.85*2
Face area	ft ²	3.01	3.01	4.14	3.82	3.82	4.89
Number of circuits	#	6	6	10	10	10	14
Metering Device		TXV	TXV	TXV	TXV	TXV	TXV
High Burst Pressure	Psi (MPa)	550(3.79)	550(3.79)	550(3.79)	550(3.79)	550(3.79)	550(3.79)
Low Burst Pressure	Psi (MPa)	340(2.34)	340(2.34)	340(2.34)	340(2.34)	340(2.34)	340(2.34)
Design (high/low) Burst Pressure	Psi	550/340	550/340	550/340	550/340	550/340	550/340
Gas Pipe (size – connection type)	In (mm)	3/4"(19)	3/4"(19)	3/4"(19)	3/4"(19)	3/4"(19)	7/8"(22)
Liquid Pipe (size – connection type)	In (mm)	3/8"(9.52)	3/8"(9.52)	3/8"(9.52)	3/8"(9.52)	3/8"(9.52)	3/8"(9.52)

INSTALLATION

Upflow Coil Installation

The cased coil is designed to fit furnaces of the same width.

1. Set the coil in place on the upflow furnace discharge air opening.
2. Ensure the coil is level for proper condensate drainage. Do not tip coil toward condensate drain. Coil casing does not need not be fastened or screwed to furnace.
3. When installing a wider coil on a narrow furnace, create a field fabricated adapter.

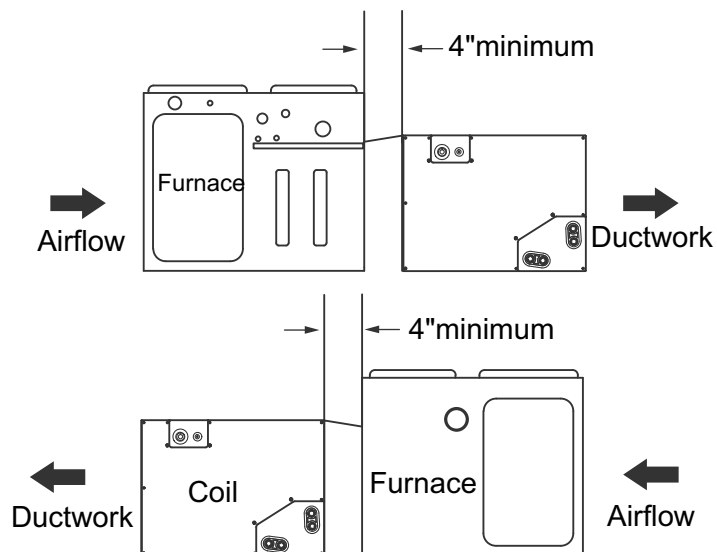


Fig. 8 — Horizontal Right and Left Installation

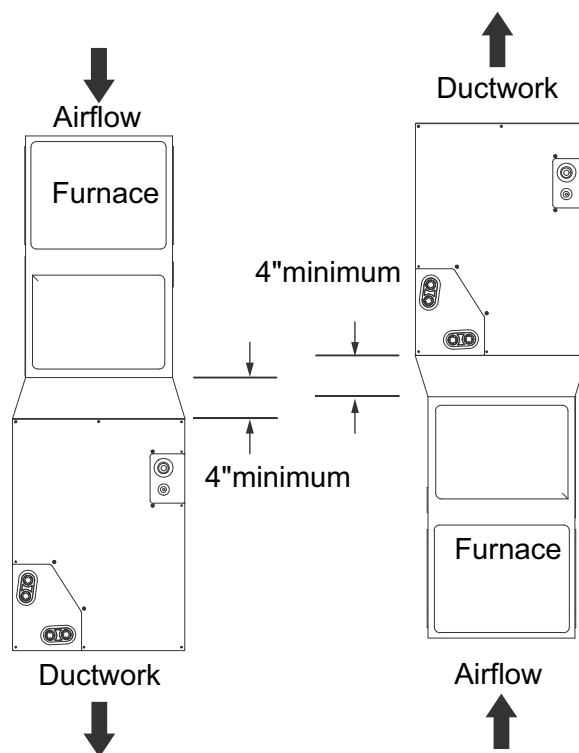


Fig. 9 — Vertical Upflow and Downflow Installation

EVAPORATOR FLANGE FABRICATION

1. Using 26 gauge sheet metal and sheet metal snips, cut flange sections 1" high for the sides and back.
2. For the front, cut a 2" high section with a 1" break to attach to the top of the front section of the cabinet.
3. Use the inner cabinet dimensions in Table 4 to cut the flange section lengths.
4. Attach flange pieces to the inside of the coil cabinet with sheet metal screws. Allow for at least 1/2" of each flange section to be installed above the coil to allow for the supply plenum to be connected.

Table 4 — Inner Cabinet Dimensions

INNER CABINET DIMENSIONS						
	18K/24K		30K/36K/48K		60K	
	in.	mm	in.	mm	in.	mm
Supply Air Opening Width	16-3/16	411	19-3/4	502	23-1/4	591
Supply Air Opening Depth	18-5/8	473	18-5/8	473	18-5/8	473

Adapter(s) Installation When Coil Hangs Over the Furnace

NOTE: On upflow installations where the indoor coil is placed in an unconditioned space, a 6" wide piece of insulation should be applied and wrapped around the outside of coil casing and supply duct contact point.

NOTE: Consult the furnace installation instructions for any special requirements when installing the coil to the furnace.

Downflow Coil Installation

IMPORTANT: Installing "A" coils rotated 90 degrees from the front of the furnace in downflow applications can cause water blow off or coil freeze up. This is due to the concentration of air on one coil slab or lack of air on the opposite coil slab. If the airflow is high due to ductwork or other causes, and there is a chance for water blow off it is recommended that a 4-in. minimum field supplied adapter be placed between the coil and the furnace to allow the air to distribute evenly to both coil slabs.

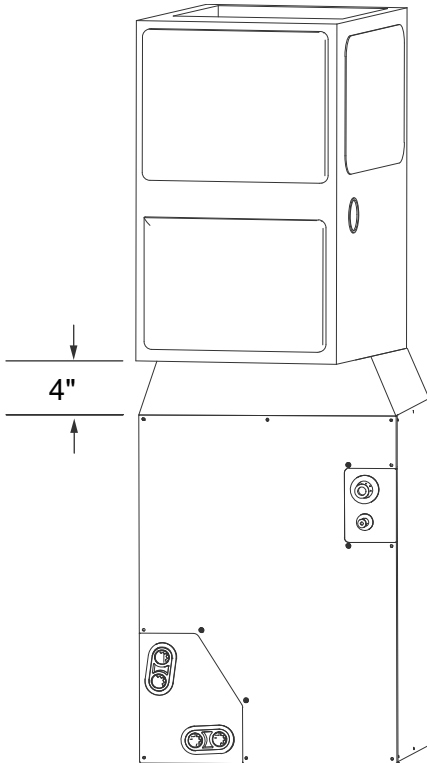


Fig. 10 — Downflow Installation with Coil Rotated 90 Degrees

5. Set cased coil on supply duct opening.
6. Place field fabricated 4-in. minimum adapter on coil casing. Adapter should be tapered to fit coil/furnace combination when one of them is larger than the other.
7. Set furnace on adapter.

NOTE: In downflow installation with a 4-way multipurpose furnace, break off perforated duct flanges into the furnace (see the furnace installation instructions for details).

Horizontal Coil Installation

The unit can be installed on a work platform, secured to roof truss in the attic, suspended from hangers on the floor joists in crawl space, or installed on blocks. It is designed to allow airflow in either direction, to mate with horizontal-left or horizontal-right furnace installations. Ensure the coil cabinet is level side to side and front to back. It is allowable to add up to 1/2-in. additional slope over length and depth of coil cabinet in the direction of drain pan connection.

Horizontal Right Installation

1. Use a field fabricated attachment plates to the secure coil to the furnace.
2. Use self-tapping screws to mount attachment plates to coil casing.
3. Connect furnace snugly against coil casing.
4. Use self-tapping screws to attach furnace.
5. Seal joint between coil casing and furnace to create an air tight seal using locally approved materials.
6. Use cork tape to create air seal between the undersides of the pan extension and front of the vertical drain pan as shown below.
7. Install included condensate pan extension and two corner screws.
8. If coil is wider than furnace, use 4-in minimum transition and self tapping screws to attach furnace.

Horizontal Left Installation

1. Unbend the 4 tabs at the right side of the casing.
2. Connect the furnace snugly against the coil casing.
3. Use self-tapping screws to attach the furnace.
4. Seal the joint between coil casing and furnace to create air tight seal using locally approved materials.
5. If the coil is wider than the furnace, use a 4-in. minimum transition and self tapping screws to attach the furnace.

Refrigerant Line Connections



WARNING

Failure to follow this warning could result in personal injury. Wear eye protection. Coil is factory charged with 15 psi nitrogen. The coil is under pressure and the TXV screen is in place behind the liquid line plug. **DO NOT** remove liquid line plug first, always remove the suction line plug first to de-pressurize the coil.

NOTE: Factory nitrogen charge may escape past rubber plugs during storage. This does not indicate a leaking coil nor warrant return of the coil. Size and install refrigerant lines according to information provided with outdoor unit. Coil connection tube sizes are shown in Table3. Route refrigerant lines to the coil in a manner that will not obstruct service access to the unit or removal of the filter. Do not use damaged, dirty, or contaminated tubing because it may plug refrigerant low-control device. **ALWAYS** evacuate the coil and field-supplied tubing before opening outdoor unit service valves.

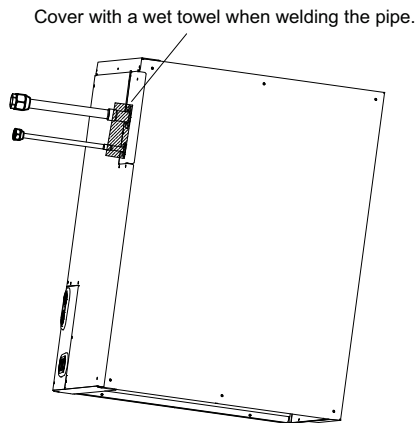


Fig. 11 — Weld the Pipe

Connect Refrigerant, Liquid, and Suction Lines

For matched systems, use line sizes recommended in the outdoor unit's Installation Instructions.



CAUTION

Failure to follow this caution may result in property damage. Take precautions to ensure the Aluminum tubes do not come in direct contact or allow for condensate run to with a dissimilar metal. Dissimilar metals can cause galvanic corrosion and possible premature failure.

NOTE: For the coils (models 40MULAQ24XAX, 40MULAQ36XBX, 40MULAQ24XBX, 40MULAQ36XCX, 40MULAQ48XCX, 40MULAQ60XDX) that do not have a serviceable service door. If the cabinet door is removed for that coil prior to brazing, it cannot be installed after brazing is complete. Make sure that the cabinet door is installed prior to brazing for the above stated coils model numbers.

The coil can be connected to outdoor units using field-supplied tubing of refrigerant grade **ALWAYS** evacuate the tubing and reclaim the refrigerant when making connections or flaring the tubing. Leak check connections before insulating entire suction line.

1. Remove the cabinet access door.
2. Remove the rubber plugs, the suction plug then the liquid plug, from the coil stubs using a pulling and twisting motion. Hold coil stubs steady to avoid bending or distorting.
3. Remove the tubing plate with rubber grommets and slide plate with grommets onto the refrigerant lines (field line-set), away from the braze joints.
4. Filter Drier (Heat Pump Drier **ONLY**)
 - a. Cut a minimum 4" length of 3/8 tubing and assemble:
 - 3/8" adapter
 - short tubing
 - filter drier
 - lineset
 - b. Wrap filter drier with damp cloth.
 - c. Flow nitrogen.
 - d. Braze assembled components from Step 1 above.

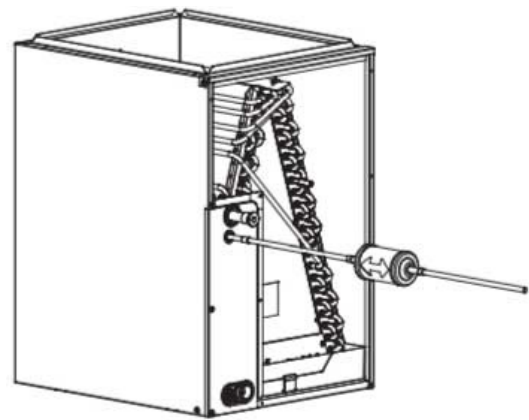


Fig. 12 — Filter Drier Components

The filter drier **must be** replaced whenever the refrigeration system is exposed to the atmosphere. **Only** use factory specified liquid-line filter driers with rated working pressures less than 600 psig.

NOTE: **DO NOT** install a suction-line filter drier in liquid line.

5. Fit the refrigerant lines into the coil stubs. Wrap a heat sinking material such as a wet cloth behind braze joints.
6. Wrap TXV and nearby tubing with a heat-sinking material such as a wet cloth.
7. Use 1/2 psig Nitrogen purge in the suction and out the liquid line.
8. Braze using a Sil-Fos or Phos-copper alloy. **Do not** use a soft solder.
9. After brazing, allow the joints to cool. Carefully remove the TXV bulb insulation and verify that the TXV bulb is securely fastened with a hose clamp. Tighten the screw a half-turn past hand tight with TXV bulb placed in the indentation with full contact with the vapor line tube. Re-wrap the TXV bulb with insulation.
10. Leak check the connections before insulating the entire suction line.
11. Slide the tubing plate with rubber grommets over joints. Position the tubing at the center of each grommet to ensure an air seal around the tube. Reinstall the cabinet door.



CAUTION

Failure to follow this caution may result in product damage. To avoid valve damage to the refrigerant control device while brazing, valves must be wrapped with a heat-sinking material such as a wet cloth.

Refrigerant Metering Device

These coils have a factory installed hard shut-off TXV designed only for use with R-410A refrigerant. Use only with outdoor units designed for R-410A.

NOTE: All TXV'S have preset superheat settings and are field non-adjustable.


CAUTION

Failure to follow this caution may result in product damage.

DO NOT BURY MORE THAN 36 IN. OF REFRIGERANT TUBING IN GROUND. If any section of tubing is buried, there must be a 6 in. vertical rise to the valve connections on the outdoor unit. If more than the recommended length is buried, refrigerant may migrate to cooler buried section during extended periods of unit shutdown, causing refrigerant slugging and possible compressor damage at start-up.

Condensate Drain Line Connection


CAUTION

Failure to follow this caution may result in property damage. When installing over a finished ceiling and/ or living area, install a field-fabricated secondary condensate pan under the entire unit.

The coil is designed to dispose of accumulated water through built-in condensate drain fittings. It is recommended that PVC fittings be used on the condensate pan. Do not over-tighten. Finger tighten plus 1-1/2 turns. Be sure to install plastic plug in the unused condensate drain fitting. Two 3/4 inch female threaded pipe connections are provided in each coil condensate pan.

A trap is not necessary on the condensate line if on the supply air side of furnace. Consult the local codes for additional restrictions or precautions. If local codes require a trap, then the following guidelines are suggested to assure proper drainage. Install a trap in condensate line of coil as close to the coil as possible. Make trap at least 3 inches (76 mm) deep and no higher than the bottom of unit condensate drain opening.

Pitch condensate line 1 inch (25.4 mm) for every 10 ft. of length to an open drain or sump. Ensure that the outlet of each trap is below its connection to condensate pan to prevent condensate from overflowing the drain pan. Prime all traps, test for leaks, and insulate traps and lines if located above a living area.

SENSOR INSTALLATION

To Install the T1 Sensor:

1. Use a 1/4" drill bit (or Unibit) to drill an opening in the return plenum. The distance of the T1 location should be within the 16' of the T1 extension wire provided.
2. Connect the T1 extension to the T1 sensor and install the sensor into the return plenum. Seal the opening as needed to avoid air leakage.

To Install the T2 sensor:

1. Locate the marking on the coil cabinet for marking. If there is no marking, the location for drilling will be the upper left or upper right side of cabinet depending on install orientation (see Fig. 13).
2. Use a 1/4" drill bit (or Unibit) to drill an opening on the appropriate side for installing T2 sensor. Use caution when drilling to not damage the coil.
3. Install the sensor through the opening and seal opening as needed to avoid air leakage.
4. Refer to Fig. 14 to match the T2 sensor location with the appropriate coil with sensor clip provided to install the T2 sensor.

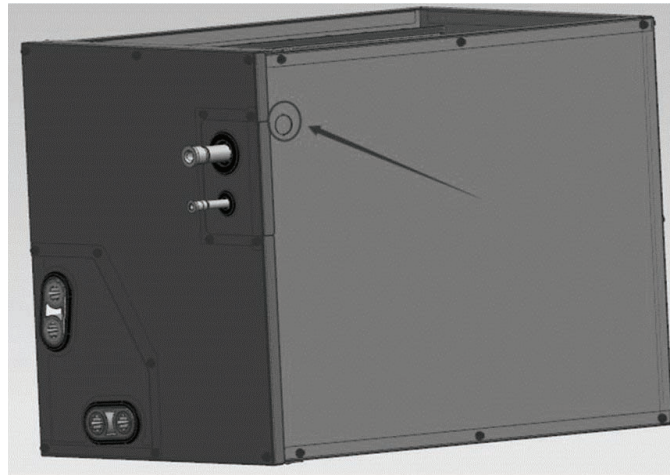


Fig. 13 — T2 Drill Point Location

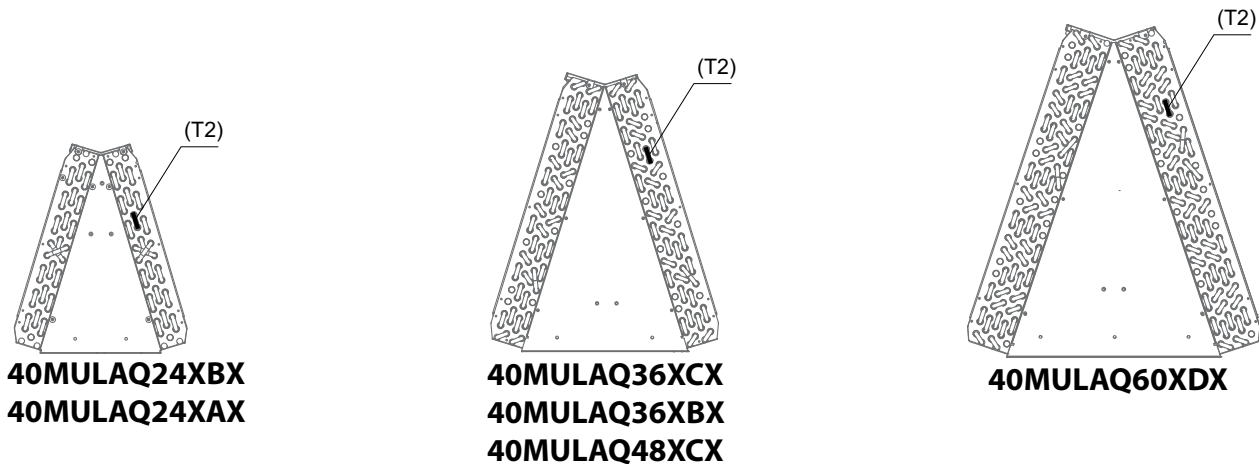


Fig. 14 — Position of Pipe Temperature Sensor (T2) On Evaporator Coil



WARNING

Failure to follow this warning could result in personal injury or death. Provide trap with an air gap in the drain line when connecting to waste (sewer) line.

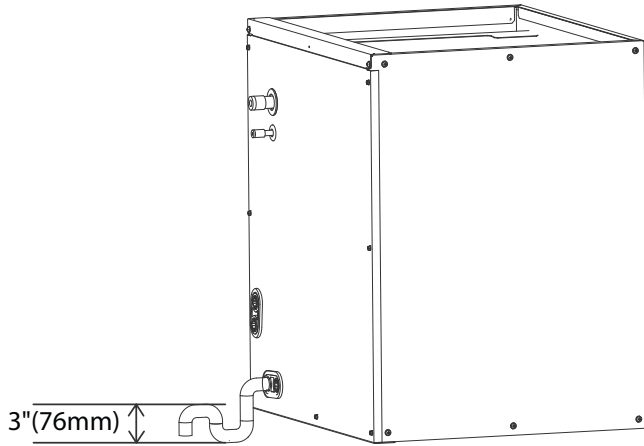


Fig. 15 — Trap

NOTE: If unit is located in or above a living space, where damage may result from condensate overflow, a field-supplied, external condensate pan should be installed underneath the entire unit, and a secondary condensate line (with an appropriate trap) should be run from the unit into the pan. Any condensate in this external condensate pan should be drained to a noticeable place. As an alternative to using an external condensate pan, some localities may allow the running of a separate 3/4 inch (19 mm) condensate line (with appropriate trap) per local code to a place where the condensate will be noticeable. The owner of the structure must be informed that when condensate flows from the secondary drain or external condensate pan, the unit requires servicing or water damage will occur. To further protect against water damage. Install a float switch to shut the unit off if the water in the secondary pan gets too high.

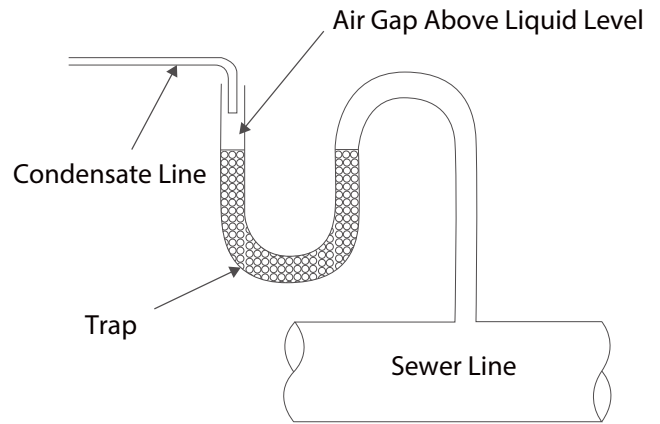


Fig. 16 — Air Gap

Waste Line Connection

If the condensate line is to be connected to a waste (sewer) line, an open trap must be installed ahead of the waste line to prevent the escape of sewer gases.

OPERATION MODE SETTING

Refer to the KSACN1101AAA Installation Manual S3 table on page 11 for setting the S3 dial on the interface for compressor drop out temperature for dual fuel. For wired controller dual fuel operation, set the heat mode to “HEAT + AUX” to operate the heat for dual fuel.

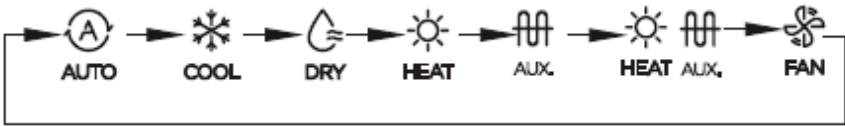


Fig. 17 — Operation Mode Setting

- 1. Press the Mode button (M) to change the mode of operation
- 2. Each press will change the mode of operation: Auto/Cool/Dry/Heat (heat pump only)/AUX (furnace only)/Heat/ AUX (Dual Fuel)/Fan
- 3. In order to use dual fuel operation press the Mode button until the HEAT+AUX mode is displayed.

AIR FLOW SPECIFICATIONS

Table 5 — Airflow Specifications

MODEL NUMBER	40MULAQ24XAX	40MULAQ24XBX	40MULAQ36XBX	40MULAQ36XCX	40MULAQ48XCX	40MULAQ60XDX
Indoor CFM	705.9	705.9	882.4	882.4	1,029.4	1,117.7

CARE AND MAINTENANCE

To continue high performance and minimize possible equipment failure, it is essential that periodic maintenance be performed on this equipment. Consult your local dealer as to the proper frequency of maintenance, however it should be performed at least annually.

The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools. If you do not possess these, contact your dealer for maintenance. The only consumer service recommended or required is filter replacement or cleaning on a monthly basis.

**CAUTION**

Failure to follow this caution may result in environmental damage.
Remove and recycle all components or materials (i.e., oil, refrigerant.)
before unit final disposal.

