

ACCESSORY KIT INSTALLATION MANUAL

COMMUNICATING ZONE THERMOSTAT KIT - (S1-ZCC01*)

FOR USE WITH Hx™3 ZONE MODULE: S1-ZMC401*

GENERAL INFORMATION

The Hx™3 Zone Thermostat is used to communicate the corresponding zone's temperature, humidity, setpoints and system mode to the Hx™3 Zone Module (S1-ZMC401*).

Kit Contents

The following list details the parts included in this kit. Examine the kit to ensure that all parts are included.

Quantity	Description
1	Zone Thermostat
2	Mounting Screws
2	Mounting Anchors
1	Wall Plate
1	Installation Instructions

SAFETY CONSIDERATIONS



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury.

Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER indicates an **imminently** hazardous situation, which, if not avoided, **will result in death or serious injury**.

WARNING indicates a **potentially** hazardous situation, which, if not avoided, **could result in death or serious injury**.

CAUTION indicates a potentially hazardous situation, which, if not avoided **may result in minor or moderate injury**. It is also used to alert against unsafe practices and hazards involving only property damage.

LAYOUT

The graphic below (Figure 1) shows the Zone Thermostat board from a top view.

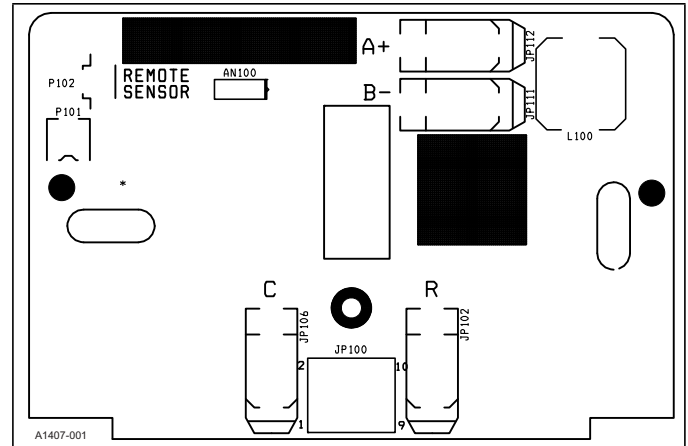


FIGURE 1: Zone Thermostat Board Layout

LOCATION

Install the Zone Thermostat at or around 5 ft. (1.5m) above the floor in an area with good circulation of room temperature. See Figure 2.

Do not install the Zone Thermostat where it can be affected by:

- Drafts or dead spots behind doors and in corners
- Hot or cold air from ducts
- Radiant heat from sun or appliances
- Concealed pipes and chimneys
- Unconditioned areas such as an outside wall

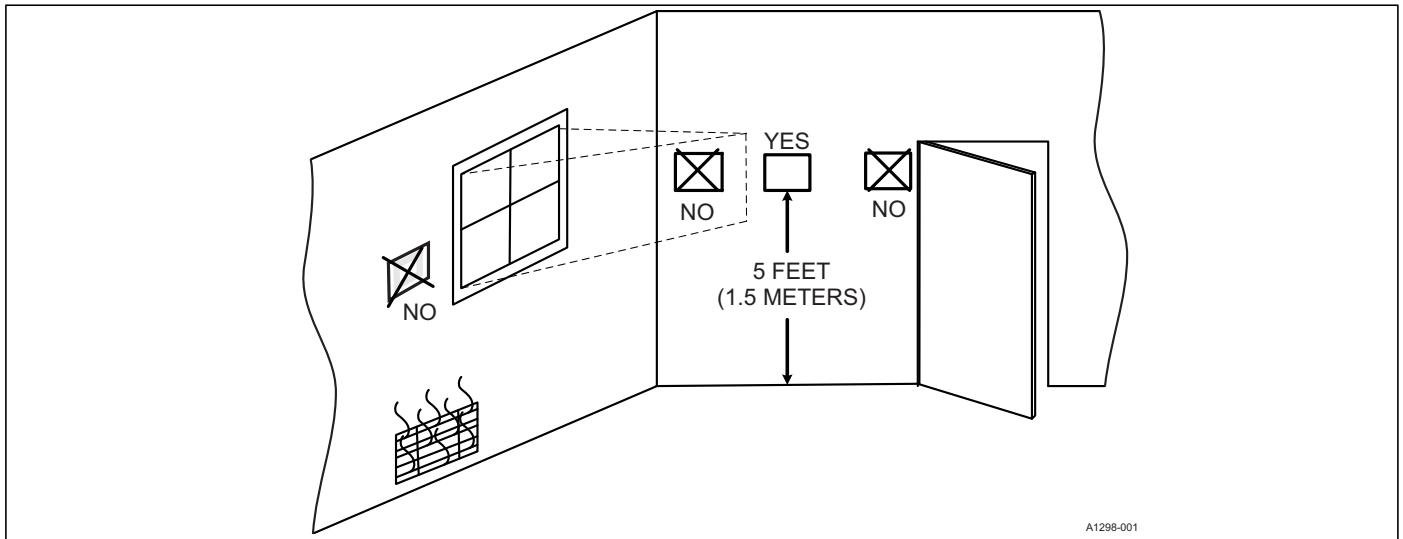


FIGURE 2: Zone thermostat Location

MOUNTING THE ZONE THERMOSTAT

⚠ WARNING

Voltage Hazard: Live wires can cause electrical shock or equipment damage. Disconnect power before beginning installation.

1. If an existing thermostat/control/sensor is being replaced:
 - a. Remove existing control from wall.
 - b. Disconnect wires from existing control.
 - c. Properly discard or recycle the old control.

NOTICE

Mercury is a hazardous substance, if existing thermostat or control contains any mercury, it **MUST** be disposed of properly. The Zone Thermostat does not contain mercury.

2. Mark on the wall where the Zone Thermostat will be mounted (standard height is 5 feet from the floor).

NOTICE

If an existing thermostat or sensor was in place, it may be ideal to use the same location for the Zone Thermostat.

3. Create a small hole in the wall for the communicating wires.

4. Using the mounting back plate as a template, mark the screw holes on the surface where the Zone Thermostat will mount. Use a level to insure proper installation.
5. Remove mounting back plate and drill holes (3/16" in diameter) in the marked area to accommodate the anchors (provided in the kit).
6. Place anchors in the pre-drilled holes. Be sure that the anchors are fully inserted.
7. Pull low voltage wires through the mounting back plate, screw the mounting back plate to the wall using the screws provided in the kit.
8. Connect low voltage wires (A, R, C, B) to the zone thermostat.
9. Align the Zone Thermostat faceplate with the backplate and snap together.

The Zone Thermostat is now installed and ready to be configured as a part of the Hx™3 Zone Module.

NOTICE

The date and time on the Zone Thermostat are set and updated by the Hx™3 Touch Screen Thermostat (Main Control).

REMOVING ZONE THERMOSTAT

If there is a need to remove the faceplate, release the latches on the bottom edge of the faceplate and pull away.