

☐


I'm not robot


reCAPTCHA

I am not robot!


Goodman gmvc95 service manual

CUS©Copyright ©2009-2010 Goodman Manufacturing Company, L.P.RT6612021 Rev. 3August 2010This manual is to be used by qualified, professionally trained HVAC technicians only. Goodman doesnot assume any responsibility for property damage or personal injury due to improper serviceprocedures performed by an unqualified person.ACVC9/AMVC95GCVC9/GMVC9590%-95% Gas Furnace Units•Refer to Service Manual RS6200004 for installation, operation, and troubleshooting information. •All safety information must be followed as provided in the Service Manual. •Refer to the appropriate Parts Catalog for part number information. •Models listed on page 3.TECHNICAL MANUTECHNICAL MANUTECHNICAL MANUTECHNICAL MANUTECHNICAL MANUALALALALALITM GMVC95: up to GCVC95: up to GCVC9: up to Standard Features • Dual-diameter tubular heat exchanger • Two-stage gas valve operates with two-stage or single- stage thermostats • ComfortNet™ Communications System compatible • Efficient and quiet variable-speed ECM circulator motor gently ramps up or down according to heating or cooling demand • 120V Silicon Nitride igniter designed for long igniter life • Furnace control board with self-diagnostics, color-coded low-voltage terminals, and provisions for electronic air cleaner and 120-volt or 24-volt humidifiers • Low constant fan allows homeowner to activate very low speed to efficiently circulate air throughout the home. This setting costs as little as a 100-watt light bulb to operate. • Dual-certified for sealed combustion direct vent (2-pipe) or non-direct vent (1-pipe) applications • Quiet two-speed induced draft blower • All models comply with California NOx emissions standards Cabinet Features • Fully insulated, heavy-gauge steel cabinet with durable baked-enamel finish • Foil-faced insulation lines the heat exchanger • Easy-to-install top venting is standard; alternate flue/vent connections on some models • Designed for multi-position installation - GMVC95: upflow, horizontal left or right; GCVC95/9: downflow, horizontal left or right • Airtight solid bottom for side return applications and easy-cut tabs for effortless removal in bottom air inlet applications • Convenient left or right connection for gas/electric service • Coil and furnace fit flush for most installations • Complete warranty details available from your local dealer or at www.goodmamfg.com. To receive the Lifetime Heat Exchanger Limited Warranty (good for as long as you own your home), 10-Year Unit Replacement Limited Warranty and 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration is not required in California or Québec. SS-GMVC95 95% AFuE 95% AFuE 93% AFuE www.goodmamfg.com gmVC95 & gCVC95/9 C omfort m -p ulti V ariable H i : eatiNg Nput Contents Nomenclature

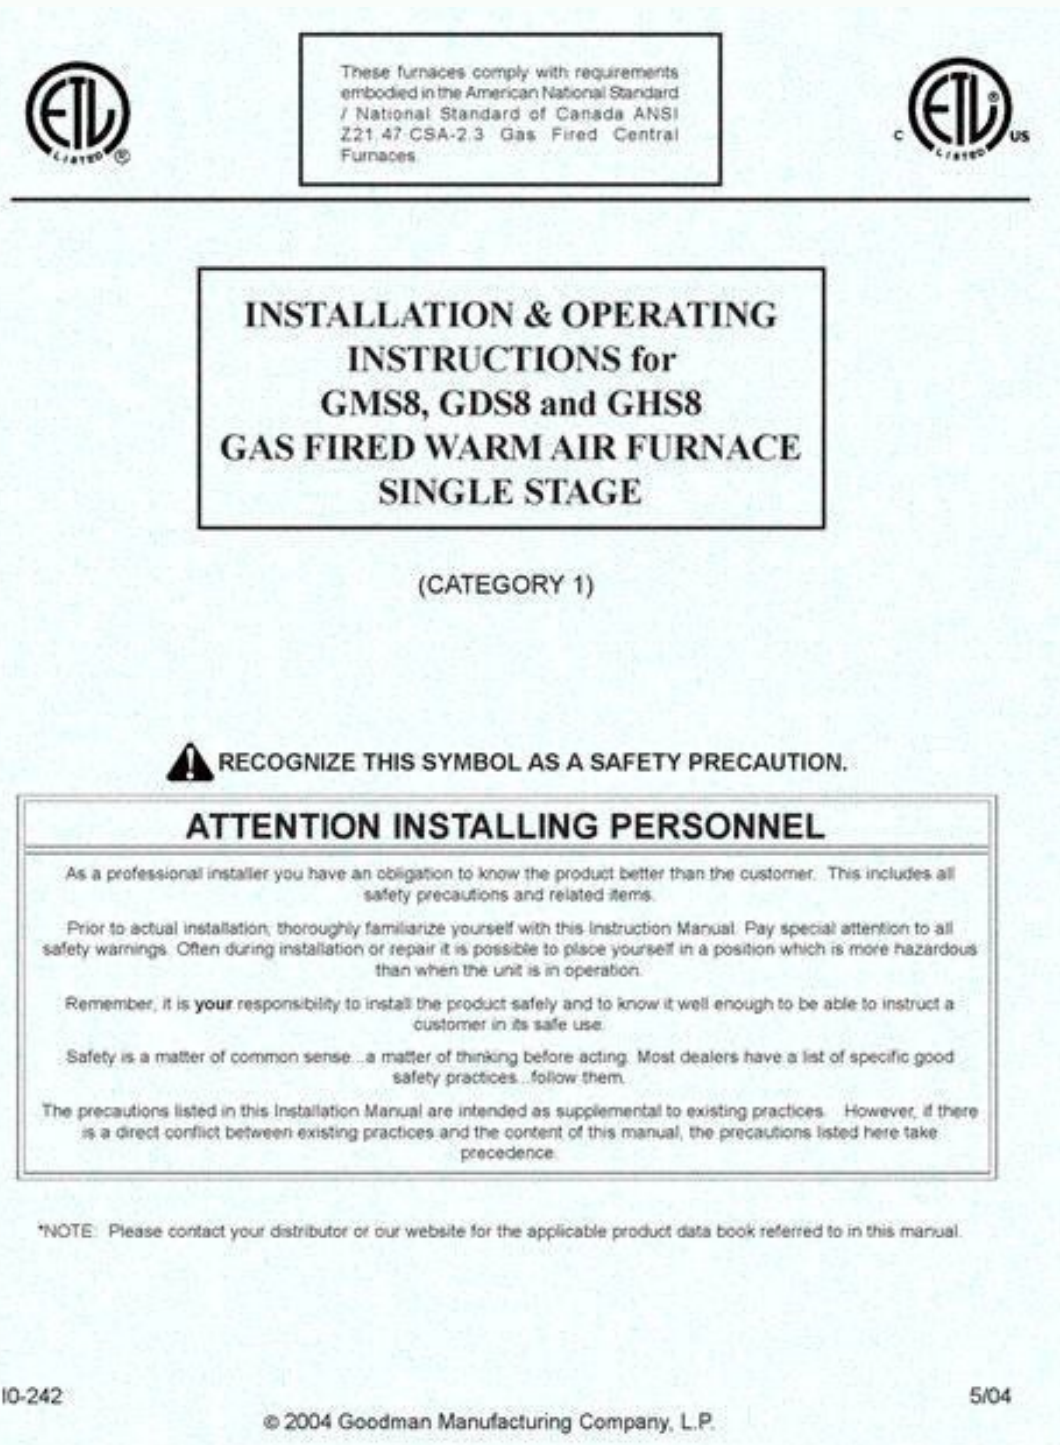

6 Wiring Diagrams 10 Thermostats 12 Accessories 12 N -C™ et ompatible , t -s ositioN wo tage -s g f peed as urNaCe 46,000-115,000 btu/ H 9/10 Supersedes 8/10 Page 1 TECHNICAL MANU TECHNICAL MANU AL TECHNICAL MANU TECHNICAL MANU ACVC9/AMVC95 GCVC9/GMVC95 90%-95% Gas Furnace Units • Refer to Service Manual RS6200004 for installation, operation, and troubleshooting information. • All safety information must be followed as provided in the Service Manual. •... PRODUCT IDENTIFICATION The model and manufacturing number are used for positive identification of component parts used in manufacturing. Please use these numbers when requesting service or parts information. PRODUCT ADDITIONAL AFUE TYPE: 9: 90% FEATURES: MINOR G: Goodman® REVISION 95: 95% N: Natural Gas A: Amana®...

REPAIR PARTS

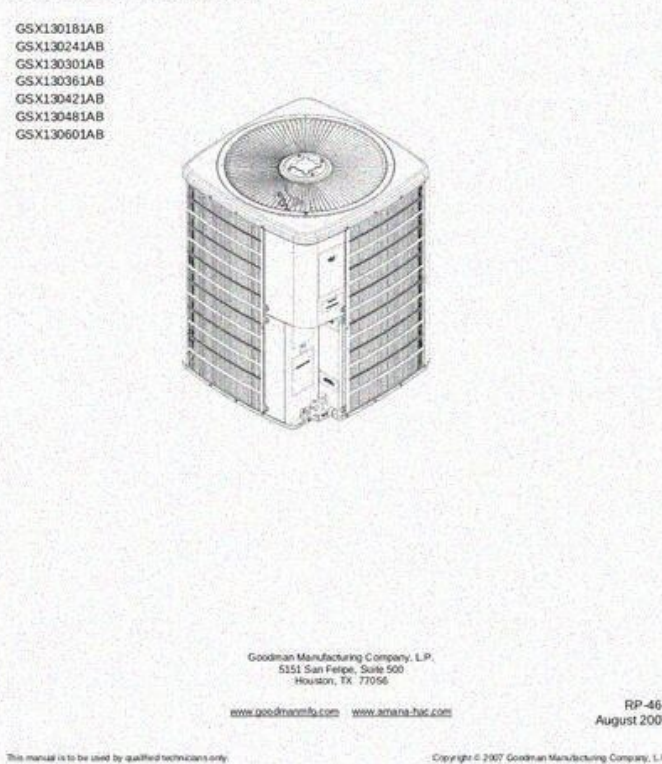

Online registration is not required in California or Québec. SS-GMVC95 95% AFuE 95% AFuE 93% AFuE www.goodmamfg.com gmVC95 & gCVC95/9 C omfort m -p ulti V ariable H i : eatiNg Nput Contents Nomenclature 2 Dimensions 4 Airflow Data 6 Wiring Diagrams 10 Thermostats 12 Accessories 12 N -C™ et ompatible , t -s ositioN wo tage -s g f peed as urNaCe 46,000-115,000 btu/ H 9/10 Supersedes 8/10 Page 1 TECHNICAL MANU TECHNICAL MANU AL TECHNICAL MANU TECHNICAL MANU ACVC9/AMVC95 GCVC9/GMVC95 90%-95% Gas Furnace Units • Refer to Service Manual RS6200004 for installation, operation, and troubleshooting information. • All safety information must be followed as provided in the Service Manual. •... PRODUCT IDENTIFICATION The model and manufacturing number are used for positive identification of component parts used in manufacturing. Please use these numbers when requesting service or parts information. PRODUCT ADDITIONAL AFUE TYPE: 9: 90% FEATURES: MINOR G: Goodman® REVISION 95: 95% N: Natural Gas A: Amana®... Page 3 PRODUCT IDENTIFICATION The model and manufacturing number are used for positive identification of component parts used in manufacturing. yicozoza Please use these numbers when requesting service or parts information. GMVC950453BXAA AMVC950453BXAA GMVC950704CXAA AMVC950704CXAA GMVC950905DXAA AMVC950905DXAA GMVC951155DXAA AMVC951155DXAA GCVC90704CXAA ACVC90704CXAA GCVC90905DXAA ACVC90905DXAA GCVC91155DXAA The United States Environmental Protection Agency ("EPA") has issued various regulations re... PRODUCT DESIGN Vent pipe must be either 2" or 3" in diameter, depending General Operation upon furnace input, number of elbows, length of run and Models covered by this manual come with a new 4-wire com- installation (1 or 2 pipes). The optional Combustion Air municating PCB. Page 5 PRODUCT DESIGN High Altitude Derate of time before stepping up to high stage to satisfy the When this furnace is installed at high altitude, the appropri- thermostat's call for heat. The delay period prior to stepping at High Altitude orifice kit must be installed. This is re- up can be set at either a fixed 5 minute time delay or a load quired due to the natural reduction in the density of both the based variable time between 1 and 12 minutes (AUTO mode). COMPONENT IDENTIFICATION Upflow/Horizontal Counterflow /Horizontal 1 Two-Stage Gas Valve 18 Coil Front Cover Pressure Tap 2 Gas Line Entrance (Alternate) 19 Coil Front Cover Drain Port 3 Pressure Switch(es) 20 Drain Line Penetrations 4 Gas Manifold 21 Drain Trap 5 Combustion Air Intake Connection 22 Blower Door Interlock Switch 6 Hot Surface Igniter 23 Inductor (Not All Models) Page 7 PRODUCT DIMENSIONS GMVC95/AMVC95 X*... Page 8 PRODUCT DIMENSIONS GCVC9/ACVC9 X*... Page 9 PRODUCT DESIGN PRESSURE SW ITCH TRIP POINTS AND USAGE CHART NEGATIVE PRESSURE NEGATIVE PRESSURE NEGATIVE PRESSURE ID BLOW ER ID BLOW ER COIL COVER COIL COVER W ITH FLUE W ITH FLUE W ITH FLUE W ITH FLUE NOT FIRING FIRING NOT FIRING... Page 10 PRODUCT DESIGN P R I M A R Y L I M I T P a r t N u m b e r 2 0 1 6 2 9 0 3 2 0 1 6 2 9 0 4 2 0 1 6 2 9 0 5 2 0 1 6 2 9 0 7 2 0 1 6 2 9 0 8 1 6 0... Page 11 PRODUCT DESIGN Coil Matches: A large array of Amana® brand coils are available for use with the GCVC9, ACVC9, GMVC95 and AMVC95 furnaces, in either counterflow or horizontal applications & with GMVC95 and AMVC95 furnaces, in either upflow or horizontal applica- tions. Page 12 PRODUCT DESIGN Thermostats: ComfortNet™ CTK01A* Thermostat Kit Filters: Filters are required with this furnace and must be provided by the installer. The filters used must comply with UL900 or CAN/ULCS111 standards. Installing this furnace without filters will void the unit warranty Upflow Filters Return air filters may be installed at the furnace side and/or bottom return openings. Page 13 PRODUCT DESIGN Counterflow Filters Return air filters may be installed at the at the counterflow top return. A field supplied center filter support must be provided by the installer in order to use the top return. The furnace will accommodate the following counterflow top return filter sizes depending on cabinet size: Counterflow Top Return Filter Size... Page 14 FURNACE SPECIFICATIONS GMVC95 MOD E L G M VC950453BX * G M V C950704CX* G M V C950905DX * G M V C951155DX* B tuh Input (US) High Fire 46,000 69,000 92,000 115,000 Output (US) High Fire 44,300 66,900 88,800 111,100 B tuh Input (US) Low Fire 32,000 48,000 64,000... Page 15 FURNACE SPECIFICATIONS AMVC95 MOD E L A M VC950453BX * A M V C950704CX* A M V C950905DX * A M V C951155DX* B tuh Input (US) High Fire 46,000 69,000 92,000 115,000 Output (US) High Fire 44,300 66,900 88,800 111,100 B tuh Input (US) Low Fire 32,000 48,000 64,000... suzisuxameyupo Page 16 FURNACE SPECIFICATIONS GCVC9 MODEL GCVC90704CX* GCVC90905DX* GCVC91155DX* Btuh Input (US) High Fire 69,000 92,000 115,000 Output (US) High Fire 65,300 86,500 109,000 Btuh Input (US) Low Fire 48,000 64,000 80,000 Output (US) Low Fire 45,000 60,100 77,400 A.F.U.E. 93.0% 92.0% Rated External Static ("... Page 17 FURNACE SPECIFICATIONS ACVC9 M O D E L A C V C 9 0 7 0 4 C X * A C V C 9 0 9 0 5 D X * 5 D X * B tu h In p u t (U S) H ig h F ire 6 9 , 0 0 0 9 2 , 0 0 0 O u tp u t (U S) H ig h F ire... lahirketu BLOWER PERFORMANCE SPECIFICATIONS GMVC95/AMVC95 Heating Speed Charts GMVC950453BX* GMVC950704CX* AMVC950453BX* AMVC950704CX* (Ris e Range: 30 - 60°F) Ris e Range: 30 - 60°F) Low Stage High Stage Low Stage High Stage Heating Heating Adjus t Ris e Adjus t Ris e Speed Speed at .1"... Page 19 BLOWER PERFORMANCE SPECIFICATIONS GMVC95/AMVC95 High (Single) Stage Cooling Speed Charts GMVC950453BX* GMVC950704CX* GMVC950905DX* GMVC951155DX* AMVC950453BX* AMVC950704CX* AMVC950905DX* AMVC951155DX* Cooling CFM at Cooling CFM at Cooling CFM at Cooling CFM at Adjus t Adjus t Adjus t Adjus t Speed .1" - .8" Speed .1"... Page 20 BLOWER PERFORMANCE SPECIFICATIONS GMVC95/AMVC95 Continuous Fan Speed Chart Continuous Fan Furnace Maximum Model Speed GMVC950453BX* 1400 AMVC950453BX* GMVC950704CX* 1760 AMVC950704CX* GMVC950905DX* 2200 AMVC950905DX* GMVC951155DX* 2200 AMVC951155DX* Continuous fan speed is 30% of furnace maximum CFM Three continuous fan speeds are possible with the CTK01AA thermostat: 30%, 50%, and 70% of furnace maximum CFM GCVC9/ACVC9 Continuous Fan Speed Chart Continuous Fan... lomelodo

