

Edifício Cristal, Rua Calvet Magalhães
Nº245, Bloco B
2774-550 Paço de Arcos - Portugal

Uncontrolled Copy when Printed

All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of NetJets Transportes Aéreos, S.A.

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Table of Contents

ROR Record of Revisions.....	ROR-1
Intro Preamble.....	Intro-1
1 Introduction.....	Intro-1
2 Purpose and Limitations.....	Intro-2
3 Utilisation.....	Intro-3
4 Multiple Inoperative Items.....	Intro-4
5 MEL Format.....	Intro-5
6 Rectification Interval Extension.....	Intro-6
7 Periodicity of (M) and (O) Procedures.....	Intro-7
8 Maintenance Action.....	Intro-8
9 Ferry Flights.....	Intro-9
10 Notes and Definitions.....	Intro-10
11 Optional Safety and Emergency Equipment.....	Intro-14
12 MEL Revisions.....	Intro-15
13 Flights conducted in accordance with ORO.GEN.310 and ORO.AOC.125.....	Intro-16
21 Air Conditioning.....	21-1
21-00-00 Environment Control System Synoptic Display (MFD ECS page).....	21-1
21-21-01 Flow Control Shut-off Valves (FCSOV).....	21-2
21-21-01-A.....	21-2
21-21-01-B.....	21-4
21-22-00 Gasper Valves.....	21-6
21-23-05 Ground Cooling Fan (GCF).....	21-7
21-24-01 IFE Cooling Fan.....	21-8
21-31-00 Cabin Pressure Control System.....	21-9
21-31-00-1.....	21-9
21-31-00-2.....	21-13
21-31-00-3 Cabin Pressure Parameters (Altitude, Rate, Delta-P) Indication.....	21-16
21-31-00-4 Landing Field Elevation (LFE) Indication.....	21-18
21-31-02 Outflow Valve (OFV).....	21-19
21-31-03 Negative Pressure Relief Valve (NPRV).....	21-20
21-31-04 Pressure Relief Valve (PRV).....	21-21
21-31-05 Pressure Relief Valve (PRV) Static Pressure Line.....	21-22
21-52-00 Vapour Cycle System (VCS).....	21-23
21-52-04 Evaporator Fans.....	21-24
21-52-04-1 Cabin Fan.....	21-24
21-52-04-2 Cockpit Fan.....	21-25
21-53-00 Avionics Cooling.....	21-26
21-61-00 Temperature Control System - Automatic Control.....	21-27
21-61-02 Temperature Modulating Valve (TMV).....	21-28
22 Auto Flight Control System.....	22-1
22-10-00 Autopilot System.....	22-1
22-10-01 Flight Director.....	22-2
22-10-01-A.....	22-2
22-10-01-B.....	22-3
22-10-02 Yaw Damper Function.....	22-4
22-10-03 Current Speed Control (CSC).....	22-5
22-11-01 Guidance Panel (GP).....	22-6
22-11-01-1 Course Knobs (CRS).....	22-6
22-11-01-2 Flight Director (FD) Buttons.....	22-6
22-11-01-3 Autopilot (AP) Button.....	22-7
22-11-01-4.....	22-7
22-11-01-5 Couple (CPL) Button.....	22-9
22-11-01-6 Navigation (NAV) Mode Button.....	22-9

Uncontrolled Copy when Printed

22-11-01-7	Heading (HDG) Mode Button.....	22-10
22-11-01-8	Approach (APR) Mode Button.....	22-10
22-11-01-9	Bank Limiter (BANK) Button.....	22-10
22-11-01-10	Heading Selector (HDG SEL) Knob.....	22-11
22-11-01-11	Heading Synchronization (PUSH SYNC) Button.....	22-11
22-11-01-12	Flight Level (FLC) Mode Button.....	22-12
22-11-01-13	Vertical Navigation (VNV) Mode Button.....	22-12
22-11-01-14	Altitude Hold (ALT) Mode Button.....	22-12
22-11-01-15	Vertical Speed (VS) Mode Button.....	22-13
22-11-01-16	Vertical Speed (VS DN UP) Thumb Wheel.....	22-13
22-11-01-17	Airspeed To Mach (PUSH IAS MACH) Change Button.....	22-14
22-11-01-18	Altitude Selector (ALT SEL) Knob.....	22-14
22-11-01-19	Speed (SPD SEL) Knob.....	22-15
22-11-01-20	Speed Selector (FMS/MAN).....	22-16
22-11-01-21	Autothrottle (A/T) Button.....	22-17
22-11-01-22	Current Speed Control (CSC) Button.....	22-17
22-11-21	AP / FD CWS Button.....	22-18
22-11-22	Autopilot / Trim Disengage (QUICK DISCONNECT) Button.....	22-19
22-11-23	Take-off / Go-around (TOGA) Button.....	22-20
22-11-23-A.....		22-20
22-11-23-B.....		22-20
22-30-00	Autothrottle Channels.....	22-21
22-30-00-01	A/T HOLD Mode.....	22-21
22-30-01	Autothrottle Quick Disconnect (A/T DISC) Buttons.....	22-22
23	Communications.....	23-1
23-11-00	High Frequency (HF) Communication System.....	23-1
23-12-00	Very High Frequency (VHF) Communication System (Commercial air transport for airplanes equipped with G3000 Avionics System).....	23-2
23-12-00-A.....		23-2
23-12-00-B.....		23-3
23-12-00-C.....		23-3
23-15-00	Data Link Management System - Satellite Communication (SATCOM) Function.....	23-5
23-15-01	AVIATOR 200 DATA LINK System - Swift Broadband Inmarsat Satellite Communication Function (Airplanes CS-PHA thru CS-PHJ, with AVIATOR 200 SATCOM System Installed in Conjunction with Aircell UCS with WLAN).....	23-6
23-21-00	Selective Call System (SELCAL).....	23-7
23-23-00	Data Link Management System - Maintenance Data Transmittal Function.....	23-8
23-24-00	Controller-to-pilot Data Link Communication System (CPDLC).....	23-9
23-24-00-1.....		23-9
23-24-00-2	FANS 1/A - CPDLC.....	23-10
23-51-01	Audio Panel (For airplanes equipped with G1000 Avionics System).....	23-11
23-51-02	Cockpit Speakers.....	23-12
23-51-07	PTT Switches.....	23-13
23-51-07-A.....		23-13
23-51-07-B.....		23-13
23-51-09	Headset with Boom Microphones.....	23-14
23-51-11	Hand Microphone.....	23-15
24	Electrical Power.....	24-1
24-00-00	Electrical Synoptic Display (MFD Electrical Page).....	24-1
24-41-00	DC External Power System.....	24-2
24-41-00-1)	DC GPU AVAIL / IN USE PUSHBUTTON LIGHTS.....	24-3
25	Equipment / Furnishing.....	25-1
25-11-01	Pilot Seats.....	25-1

25-11-01-1	Lumbar Support.....	25-1
25-11-01-2	Armrests.....	25-1
25-11-01-3	Recline Function.....	25-3
25-11-01-4	Headrests.....	25-4
25-11-01-5	Vertical Seat Adjustment.....	25-5
25-12-09	Cockpit Sunvisor.....	25-6
25-12-10	Cockpit Sunshades.....	25-7
25-20-00	Passenger Convenience Items.....	25-8
25-20-01	Aircell Universal Cabin System (UCS) with WLAN (Airplanes CS-PHA thru CS-PHJ, with AVIATOR 200 SATCOM System Installed in Conjunction with Aircell UCS with WLAN).....	25-9
25-21-01	Passenger Seats.....	25-10
25-21-01A.....		25-10
25-21-01B.....		25-10
25-21-01-1.....		25-11
25-21-01-2	Passenger Seat Armrests without Recline Control Mechanism.....	25-12
25-21-01-3.....		25-13
25-44-02	Exterior Lavatory Door Ashtray.....	25-14
25-44-02-A	Exterior Lavatory Door Ashtray.....	25-14
25-44-02-B	Exterior Lavatory Door Ashtray.....	25-14
25-61-00	Emergency Locator Transmitter (ELT).....	25-15
25-62-01	First Aid Kit (FAK).....	25-16
25-62-02	Passenger Life Vests.....	25-18
25-62-02-1	Infant Life Vests.....	25-18
25-62-05	Flashlights and Holder Assemblies.....	25-20
25-62-05-1	Flashlights.....	25-20
25-62-05-2	Flashlight Holders.....	25-21
25-62-06	Protective Breathing Equipment (PBE).....	25-22
25-66-01	Life Raft.....	25-23
26	Fire Protection.....	26-1
26-15-00	Baggage Compartment Smoke Detection System.....	26-1
26-24-01	Portable Fire Extinguisher.....	26-2
27	Flight Controls.....	27-1
27-14-00	Roll Trim System.....	27-1
24-14-00-1	Roll Trim Position Indication on EIS.....	27-1
27-20-00	Rudder Pedal Adjustment.....	27-2
27-24-00	Yaw Trim Position Indication on EIS.....	27-3
27-34-01	Yoke Pitch Trim Switch.....	27-4
27-70-00	Gust Lock System.....	27-5
27-70-00-1	Rudder Gust Lock (RGL).....	27-5
28	Fuel.....	28-1
28-00-00	Fuel System Synoptic Display (MFD Fuel Page).....	28-1
28-11-05	Fuel Drain Valves.....	28-2
28-11-07	Fuel Dump Valves.....	28-3
28-11-09	Gravity Fuel Caps.....	28-4
28-23-00	Pressure Refueling System.....	28-5
28-23-01	Fuel Quantity Indication of Refueling Panel.....	28-6
28-41-00	Fuel Quantity Indicating System.....	28-7
30	Ice and Rain Protection.....	30-1
30-00-00	Ice Protection System Synoptic Display (MFD ICEPROT PAGE).....	30-1
30-12-00	Wing and Horizontal Stabilizer Anti-icing System (WHSAIS).....	30-2
30-21-00	Nacelle Anti-icing System.....	30-3
30-41-00	Windshield Rain Repellent Coating.....	30-4
30-81-02	Ice Detector.....	30-5
31	Indicating / Recording System.....	31-1

31-22-01 Yoke Chronometer Pushbutton.....	31-1
31-31-01 Cockpit Voice and Data Recorder (CVDR).....	31-2
31-31-01-A.....	31-2
31-31-01-B.....	31-2
31-32-00 Quick Access Recorder (QAR).....	31-4
31-33-01 Flight Data Recorder (FDR).....	31-5
31-41-07 Avionics Blower.....	31-6
31-61-01 Flight Display Unit (FDU).....	31-7
31-61-01-A Flight Display Units (FDU).....	31-7
31-61-01-B Flight Display Units (FDU).....	31-8
31-61-01-1 Buttons and Knobs.....	31-9
31-61-01-2 Charts and Maps Databases (ChartView and FliteCharts).....	31-9
31-61-01-3.....	31-10
31-61-01-4 Basemap.....	31-11
31-61-01-5.....	31-11
31-61-01-6.....	31-12
31-61-01-07 IFR / VFR Charts.....	31-13
31-62-02 Display Cooling Fans.....	31-14
31-61-04 GTC Cooling Fans.....	31-15
31-62-00 SYNTHETIC VISION SYSTEM (SVS).....	31-16
32 Landing Gear.....	32-1
32-45-21 Brake Assembly Wear Indicator.....	32-1
33 Lights.....	33-1
33-10-00 Cockpit and Instruments Panel Lighting Systems.....	33-1
33-10-00-A.....	33-1
33-10-00-B.....	33-2
33-21-00 Passenger Upwash Lights.....	33-3
33-21-00-A.....	33-3
33-21-00-B.....	33-3
33-23-01 Passenger Warning Signs (FASTEN SEATBELT / TURN OFF PED, NO SMOKING).....	33-4
33-23-01-A.....	33-4
33-23-01-B.....	33-4
33-23-01-C.....	33-5
33-26-02 Courtesy Airstairs Step Lights.....	33-6
33-31-00 Baggage Compartment Lights.....	33-7
33-32-00 Service Compartment Lights.....	33-8
33-42-00 Taxi Lights.....	33-9
33-44-01 Wing Inspection Lights.....	33-10
33-44-01-A.....	33-10
33-44-01-B.....	33-10
33-45-01 Red Beacon.....	33-11
33-46-01 Logo Lights.....	33-12
33-47-00 Landing Lights.....	33-13
33-47-00-A.....	33-13
33-47-00-B.....	33-13
33-48-00 Navigation Lights.....	33-14
33-50-01 Cabin Emergency Exit Lighting System.....	33-15
33-50-02 Exit Safety Mark.....	33-16
33-50-03 Exterior Emergency Lights (Over Wing).....	33-17
33-52-03 Internal Flood Led Lights.....	33-18
33-52-07 Airstairs Emergency Lights.....	33-19
33-52-09 Overwing and Underwing Emergency Lights.....	33-20
33-52-11 Floor Proximity Lights.....	33-21
33-52-13 Exit Identifier Sign.....	33-22
33-52-15 Exit Marker Sign.....	33-23

34 Navigation.....	34-1
34-11-01 Integrated Electronic Standby Instrument (IESI).....	34-1
34-11-01-1 Standby Attitude Indication.....	34-1
34-11-01-2 STD Baro Button.....	34-1
34-11-01-3 Brightness Buttons.....	34-2
34-11-01-4.....	34-2
34-15-00 ADS Slip Correction.....	34-4
34-21-00 Attitude and Heading Reference System (AHRS).....	34-5
34-23-01 Standby Magnetic Compass System.....	34-6
34-31-00 Radar Altimeter System.....	34-7
34-32-00 VHF Navigation System.....	34-8
34-32-00-1 VOR.....	34-8
34-32-00-2.....	34-8
34-32-00-3.....	34-9
34-41-00 Terrain Awareness and Warning System (TAWS).....	34-11
34-42-00 Weather Radar System.....	34-12
34-42-00-A.....	34-12
34-42-00-B.....	34-13
34-42-00-1 Predictive Windshear (PWS) Function.....	34-13
34-43-00 Traffic Collision and Avoidance System (TCAS II).....	34-14
34-46-00 SurfaceWatch.....	34-16
34-46-10 Stabilised Approach.....	34-17
34-47-00 Reactive Windshear Detection System.....	34-18
34-48-00 Runway Overrun Awareness and Alerting System (ROAAS).....	34-19
34-51-00 DME System.....	34-20
34-52-00 ATC Transponder and Automatic Altitude Reporting Systems.....	34-21
34-52-00-A.....	34-21
34-52-00-B.....	34-21
34-52-00-1.....	34-22
34-52-02 ADS-B In Transmissions.....	34-24
34-53-00 Automatic Direction Finder (ADF).....	34-25
34-56-00 Global Positioning System (GPS).....	34-26
34-57-00 Satellite Weather / Radio System.....	34-27
34-61-00 Flight Management System (FMS).....	34-28
34-61-00-1.....	34-28
34-61-00-2 Weight and Balance (W&B) Function.....	34-30
34-61-00-3 Performance Management (PERF) Function.....	34-31
34-61-00-4 Take-off and Landing Data (TOLD) Function.....	34-31
34-61-01 Flight Management System (FMS) Panel (For airplanes equipped with G1000 Avionics System).....	34-32
35 Oxygen.....	35-1
35-01-01 Cylinder Pressure Gauge.....	35-1
35-01-02 Pressure and Temperature Transducer.....	35-2
35-01-03 Overboard Discharge Indicator (Green Disc).....	35-3
35-01-03-A.....	35-3
35-01-03-B.....	35-4
35-02-02 Cylinder Fill Port.....	35-5
35-10-01 Portable Breathing Equipment (PBE).....	35-6
35-11-02 Crew Oxygen Masks.....	35-7
35-21-00 Passenger Oxygen System.....	35-8
35-21-00-0A.....	35-8
35-21-00-0B.....	35-8
35-21-00-1 Passenger Auto Deployment Function.....	35-9
35-21-01 Passenger Oxygen Masks.....	35-10
36 Pneumatic.....	36-1
36-11-00 Engine Pneumatic Bleed System.....	36-1
36-11-01 Pressure Regulating Shut-off Valve (PRSOV).....	36-2

36-11-03	AMS Controller Channel.....	36-3
36-11-04	Fan Air Valve (FAV).....	36-4
34-11-06	Cross Bleed Valve.....	36-5
38	Water and Waste.....	38-1
38-30-00	Waste Disposal System.....	38-1
44	Cabin System.....	44-1
44-13-00	Passenger Intercom System.....	44-1
	Airborne Broadband Internet System (ABIS).....	44-2
46	Information Systems.....	46-1
46-00-01	Electronic Flight Bag System (Portable EFB).....	46-1
46-00-01-1	Chart Data Base Out of date (Portable EFB).....	46-1
46-21-00	Flight Stream 510.....	46-2
52	Doors.....	52-1
52-10-00	Main Door.....	52-1
52-10-00-1	Keyed Lock.....	52-1
52-11-00	Main Door Locking and Actuating Mechanism.....	52-2
52-11-00-1		52-2
52-11-00-2	Lock Indication Visor.....	52-3
52-31-00	Forward Baggage Doors.....	52-4
52-31-00-1	Keyed Lock.....	52-4
52-32-00	AFT Baggage Doors.....	52-5
52-32-00-1	Keyed Lock.....	52-5
52-53-00	Keyed Locks.....	52-6
52-70-00	Door Warning System (CAS Indication).....	52-7
52-70-00-1	Passenger Door Warning System (CAS Indication).....	52-7
52-70-00-2	Forward Baggage Door Warning System (CAS Indication).....	52-7
52-70-00-3	Aft Baggage Door Warning System (CAS Indication).....	52-8
52-70-00-4	Emergency Door Warning System (CAS Indication).....	52-8
73	Engine Fuel and Control.....	73-1
73-21-01	Full Authority Digital Electronic Control (FADEC).....	73-1
73-21-01-1	System Faults.....	73-1
73-21-01-2	System Faults - LONG DISPATCH.....	73-1
73-33-00	Fuel Flow Indication.....	73-3
73-34-01	Fuel Filter Impending Bypass Sensor.....	73-4
74	Ignition.....	74-1
74-00-00	Ignition Channels.....	74-1
77	Engine Indicating.....	77-1
77-21-03	TT0 Inlet Total Air Temperature Sensor Heating System.....	77-1
79	Oil.....	79-1
79-00-01	Chip Detected.....	79-1
79-34-00	Oil Filter Impending Bypass Indicator.....	79-2
79-35-01	Chip Detector Sensor.....	79-3
APPX A	CAS Messages List.....	APPX A-1
INTRO	Introduction.....	APPX A-1
WCAS	Warning CAS Messages.....	APPX A-2
CCAS	Caution CAS Messages.....	APPX A-3
ACAS	Advisory CAS Messages.....	APPX A-8
SCAS	Status CAS Messages.....	APPX A-12
APPX B	Passenger Convenience Items (PCI) List.....	APPX B-1
INTRO	Introduction.....	APPX B-1

PCI LIST - CABIN.....	APPX B-2
PCI LIST - GALLEY.....	APPX B-4
PCI LIST - LAVATORY.....	APPX B-5
PCI LIST - COCKPIT.....	APPX B-6
PCI LIST - OTHER ITEMS.....	APPX B-7
APPX C Ferry Flights Items.....	APPX C-1
INTRO Introduction.....	APPX C-1
27 Ferry Flight Items.....	APPX C-2
Operational Limitations.....	APPX C-2
Normal Procedures.....	APPX C-3
Emergency and Abnormal Procedures.....	APPX C-3
Performance.....	APPX C-3
Maintenance Procedures.....	APPX C-4
32 Ferry Flight Items.....	APPX C-6
Operational Limitations.....	APPX C-6
Normal Procedures.....	APPX C-6
Emergency and Abnormal Procedures.....	APPX C-7
Performance.....	APPX C-7
Maintenance Procedures.....	APPX C-8
APPX D Special Dispatch Procedures.....	APPX D-1
INTRO Introduction.....	APPX D-1
1 Missing / Damaged Polyurethane Film.....	APPX D-2
1.1 General.....	APPX D-2
1.2 Dispatch Procedure.....	APPX D-2
2 REFUELING WITH WIDE-CUT FUEL.....	APPX D-9
2.1 General.....	APPX D-9
2.2 Dispatch Procedure.....	APPX D-9
APPX E Configuration Deviation List.....	APPX E-1
INTRO Introduction.....	APPX E-1
23 Communications.....	APPX E-3
23-61-00A 2 static dischargers on each aileron.....	APPX E-3
23-61-00B 3 static dischargers on each aileron.....	APPX E-3
33 Lights.....	APPX E-4
33-44-01 Wing Inspection Light Lens.....	APPX E-4
33-45-01 Red Beacon Light Assembly.....	APPX E-4
33-48-02 Aft Navigation Light Assembly.....	APPX E-5
33-49-01 Upper Anti-collision (strobe) Light Assembly.....	APPX E-5
53 Fuselage.....	APPX E-6
53-03-00 Forward Fuselage Jack Point Cover (122 AR).....	APPX E-6
57 Wings.....	APPX E-7
57-03-00 Wing Jack Point Covers (541 VB / 641 VB).....	APPX E-7

List of Effective Pages

Rui
Pedro
Carvalho

Digitally signed
by Rui Pedro
Carvalho
Date: 2026.06.24
13:09:40 +01'00'

Page Number	Revision Date	Revision Number	Page Number	Revision Date	Revision Number
Cover Page			INTRO-8	20 JAN 2023	15.0.0
APPR-1	08 JUN 2026	23.0.0	INTRO-9	20 JAN 2023	15.0.0
APPR-2	08 JUN 2026	23.0.0	INTRO-10	20 JAN 2023	15.0.0
Table of Contents			INTRO-11	20 JAN 2023	15.0.0
TOC-1	08 JUN 2026	23.0.0	INTRO-12	20 JAN 2023	15.0.0
TOC-2	08 JUN 2026	23.0.0	INTRO-13	20 JAN 2023	15.0.0
TOC-3	08 JUN 2026	23.0.0	INTRO-14	06 DEC 2023	18.0.0
TOC-4	08 JUN 2026	23.0.0	INTRO-15	06 FEB 2025	22.0.0
TOC-5	08 JUN 2026	23.0.0	INTRO-16	08 JUN 2026	23.0.0
TOC-6	08 JUN 2026	23.0.0	Chapter 21 - Air Conditioning		
TOC-7	08 JUN 2026	23.0.0	21-1	20 JAN 2023	15.0.0
List of Effective Pages			21-2	30 APR 2024	20.0.0
LEP-1	08 JUN 2026	23.0.0	21-3	30 APR 2024	20.0.0
LEP-2	08 JUN 2026	23.0.0	21-4	30 APR 2024	20.0.0
LEP-3	08 JUN 2026	23.0.0	21-5	30 APR 2024	20.0.0
LEP-4	08 JUN 2026	23.0.0	21-6	20 JAN 2023	15.0.0
LEP-5	08 JUN 2026	23.0.0	21-7	20 JAN 2023	15.0.0
Revision Highlights			21-8	20 JAN 2023	15.0.0
RH-1	08 JUN 2026	23.0.0	21-9	20 JAN 2023	15.0.0
Abbreviations			21-10	20 JAN 2023	15.0.0
ABBR-1	08 JUN 2026	23.0.0	21-11	20 JAN 2023	15.0.0
ABBR-2	08 JUN 2026	23.0.0	21-12	20 JAN 2023	15.0.0
Chapter ROR - Record of Revisions			21-13	20 JAN 2023	15.0.0
ROR-1	20 JAN 2023	15.0.0	21-14	20 JAN 2023	15.0.0
ROR-2	15 MAY 2023	16.0.0	21-15	20 JAN 2023	15.0.0
ROR-3	08 JUN 2026	23.0.0	21-16	20 JAN 2023	15.0.0
ROR-4	08 JUN 2026	23.0.0	21-17	20 JAN 2023	15.0.0
Chapter Intro - Preamble			21-18	20 JAN 2023	15.0.0
INTRO-1	08 JUN 2026	23.0.0	21-19	20 JAN 2023	15.0.0
INTRO-2	20 JAN 2023	15.0.0	21-20	20 JAN 2023	15.0.0
INTRO-3	20 JAN 2023	15.0.0	21-21	20 JAN 2023	15.0.0
INTRO-4	20 JAN 2023	15.0.0	21-22	20 JAN 2023	15.0.0
INTRO-5	06 FEB 2025	22.0.0	21-23	06 DEC 2023	18.0.0
INTRO-6	20 JAN 2023	15.0.0	21-24	20 JAN 2023	15.0.0
INTRO-7	20 JAN 2023	15.0.0	21-25	20 JAN 2023	15.0.0
			21-26	20 JAN 2023	15.0.0
			21-27	20 JAN 2023	15.0.0
			21-28	20 JAN 2023	15.0.0
			Chapter 22 - Auto Flight Control System		
			22-1	12 JAN 2024	19.0.0
			22-2	20 JAN 2023	15.0.0

Digitally signed
by Rui Pedro
Carvalho
Date: 2026.06.24
13:10:08 +01'00'

Page Number	Revision Date	Revision Number	Page Number	Revision Date	Revision Number
22-3	12 JAN 2024	19.0.0			
22-4	12 JAN 2024	19.0.0			
22-5	12 JAN 2024	19.0.0			
22-6	20 JAN 2023	15.0.0			
22-7	20 JAN 2023	15.0.0			
22-8	20 JAN 2023	15.0.0			
22-9	20 JAN 2023	15.0.0			
22-10	20 JAN 2023	15.0.0			
22-11	20 JAN 2023	15.0.0			
22-12	20 JAN 2023	15.0.0			
22-13	20 JAN 2023	15.0.0			
22-14	20 JAN 2023	15.0.0			
22-15	12 JAN 2024	19.0.0			
22-16	02 AUG 2023	17.0.0			
22-17	12 JAN 2024	19.0.0			
22-18	20 JAN 2023	15.0.0			
22-19	20 JAN 2023	15.0.0			
22-20	20 JAN 2023	15.0.0			
22-21	12 JAN 2024	19.0.0			
22-22	12 JAN 2024	19.0.0			
Chapter 23 - Communications			Chapter 25 - Equipment / Furnishing		
23-1	20 JAN 2023	15.0.0	25-1	20 JAN 2023	15.0.0
23-2	20 JAN 2023	15.0.0	25-2	20 JAN 2023	15.0.0
23-3	20 JAN 2023	15.0.0	25-3	20 JAN 2023	15.0.0
23-4	20 JAN 2023	15.0.0	25-4	20 JAN 2023	15.0.0
23-5	20 JAN 2023	15.0.0	25-5	20 JAN 2023	15.0.0
23-6	20 JAN 2023	15.0.0	25-6	12 JAN 2024	19.0.0
23-7	20 JAN 2023	15.0.0	25-7	12 JAN 2024	19.0.0
23-8	20 JAN 2023	15.0.0	25-8	20 JAN 2023	15.0.0
23-9	20 JAN 2023	15.0.0	25-9	20 JAN 2023	15.0.0
23-10	20 JAN 2023	15.0.0	25-10	20 JAN 2023	15.0.0
23-11	20 JAN 2023	15.0.0	25-11	20 JAN 2023	15.0.0
23-12	20 JAN 2023	15.0.0	25-12	20 JAN 2023	15.0.0
23-13	20 JAN 2023	15.0.0	25-13	20 JAN 2023	15.0.0
23-14	20 JAN 2023	15.0.0	25-14	20 JAN 2023	15.0.0
23-15	20 JAN 2023	15.0.0	25-15	20 JAN 2023	15.0.0
23-16	20 JAN 2023	15.0.0	25-16	20 JAN 2023	15.0.0
Chapter 24 - Electrical Power			25-17	20 JAN 2023	15.0.0
24-1	20 JAN 2023	15.0.0	25-18	20 JAN 2023	15.0.0
24-2	20 JAN 2023	15.0.0	25-19	20 JAN 2023	15.0.0
24-3	20 JAN 2023	15.0.0	25-20	20 JAN 2023	15.0.0
24-4	20 JAN 2023	15.0.0	25-21	20 JAN 2023	15.0.0
			25-22	20 JAN 2023	15.0.0
			25-23	20 JAN 2023	15.0.0
			25-24	20 JAN 2023	15.0.0
			Chapter 26 - Fire Protection		
			26-1	20 JAN 2023	15.0.0
			26-2	20 JAN 2023	15.0.0
			Chapter 27 - Flight Controls		
			27-1	20 JAN 2023	15.0.0
			27-2	20 JAN 2023	15.0.0
			27-3	20 JAN 2023	15.0.0
			27-4	20 JAN 2023	15.0.0
			27-5	20 JAN 2023	15.0.0
			27-6	20 JAN 2023	15.0.0
			Chapter 28 - Fuel		
			28-1	20 JAN 2023	15.0.0
			28-2	20 JAN 2023	15.0.0
			28-3	20 JAN 2023	15.0.0
			28-4	20 JAN 2023	15.0.0

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000
1001
1002
1003
1004
1005
1006
1007
1008
1009
1010
1011
1012
1013
1014
1015
1016
1017
1018
1019
1020
1021
1022
1023
1024
1025
1026
1027
1028
1029
1030
1031
1032
1033
1034
1035
1036
1037
1038
1039
1040
1041
1042
1043
1044
1045
1046
1047
1048
1049
1050
1051
1052
1053
1054
1055
1056
1057
1058
1059
1060
1061
1062
1063
1064
1065
1066
1067
1068
1069
1070
1071
1072
1073
1074
1075
1076
1077
1078
1079
1080
1081
1082
1083
1084
1085
1086
1087
1088
1089
1090
1091
1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103
1104
1105
1106
1107
1108
1109
1110
1111
1112
1113
1114
1115
1116
1117
1118
1119
1120
1121
1122
1123
1124
1125
1126
1127
1128
1129
1130
1131
1132
1133
1134
1135
1136
1137
1138
1139
1140
1141
1142
1143
1144
1145
1146
1147
1148
1149
1150
1151
1152
1153
1154
1155
1156
1157
1158
1159
1160
1161
1162
1163
1164
1165
1166
1167
1168
1169
1170
1171
1172
1173
1174
1175
1176
1177
1178
1179
1180
1181
1182
1183
1184
1185
1186
1187
1188
1189
1190
1191
1192
1193
1194
1195
1196
1197
1198
1199
1200
1201
1202
1203
1204
1205
1206
1207
1208
1209
1210
1211
1212
1213
1214
1215
1216
1217
1218
1219
1220
1221
1222
1223
1224
1225
1226
1227
1228
1229
1230
1231
1232
1233
1234
1235
1236
1237
1238
1239
1240
1241
1242
1243
1244
1245
1246
1247
1248
1249
1250
1251
1252
1253
1254
1255
1256
1257
1258
1259
1260
1261
1262
1263
1264
1265
1266
1267
1268
1269
1270
1271
1272
1273
1274
1275
1276
1277
1278
1279
1280
1281
1282
1283
1284
1285
1286
1287
1288
1289
1290
1291
1292
1293
1294
1295
1296
1297
1298
1299
1300
1301
1302
1303
1304
1305
1306
1307
1308
1309
1310
1311
1312
1313
1314
1315
1316
1317
1318
1319
1320
1321
1322
1323
1324
1325
1326
1327
1328
1329
1330
1331
1332
1333
1334
1335
1336
1337
1338
1339
1340
1341
1342
1343
1344
1345
1346
1347
1348
1349
1350
1351
1352
1353
1354
1355
1356
1357
1358
1359
1360
1361
1362
1363
1364
1365
1366
1367
1368
1369
1370
1371
1372
1373
1374
1375
1376
1377
1378
1379
1380
1381
1382
1383
1384
1385
1386
1387
1388
1389
1390
1391
1392
1393
1394
1395
1396
1397
1398
1399
1400
1401
1402
1403
1404
1405
1406
1407
1408
1409
1410
1411
1412
1413
1414
1415
1416
1417
1418
1419
1420
1421
1422
1423
1424
1425
1426
1427
1428
1429
1430
1431
1432
1433
1434
1435
1436
1437
1438
1439
1440
1441
1442
1443
1444
1445
1446
1447
1448
1449
1450
1451
1452
1453
1454
1455
1456
1457
1458
1459
1460
1461
1462
1463
1464
1465
1466
1467
1468
1469
1470
1471
1472
1473
1474
1475
1476
1477
1478
1479
1480
1481
1482
1483
1484
1485
1486
1487
1488
1489
1490
1491
1492
1493
1494
1495
1496
1497
1498
1499
1500
1501
1502
1503
1504
1505
1506
1507
1508
1509
1510
1511
1512
1513
1514
1515
1516
1517
1518
1519
1520
1521
1522
1523
1524
1525
1526
1527
1528
1529
1530
1531
1532
1533
1534
1535
1536
1537
1538
1539
1540
1541
1542
1543
1544
1545
1546
1547
1548
1549
1550
1551
1552
1553
1554
1555
1556
1557
1558
1559
1560
1561
1562
1563
1564
1565
1566
1567
1568
1569
1570
1571
1572
1573
1574
1575
1576
1577
1

Page Number	Revision Date	Revision Number	Page Number	Revision Date	Revision Number
28-5	20 JAN 2023	15.0.0	33-9	12 JAN 2024	19.0.0
28-6	20 JAN 2023	15.0.0	33-10	20 JAN 2023	15.0.0
28-7	20 JAN 2023	15.0.0	33-11	20 JAN 2023	15.0.0
28-8	20 JAN 2023	15.0.0	33-12	20 JAN 2023	15.0.0
Chapter 30 - Ice and Rain Protection			33-13	12 JAN 2024	19.0.0
30-1	20 JAN 2023	15.0.0	33-14	20 JAN 2023	15.0.0
30-2	20 JAN 2023	15.0.0	33-15	20 JAN 2023	15.0.0
30-3	20 JAN 2023	15.0.0	33-16	20 JAN 2023	15.0.0
30-4	20 JAN 2023	15.0.0	33-17	20 JAN 2023	15.0.0
30-5	20 JAN 2023	15.0.0	33-18	20 JAN 2023	15.0.0
30-6	20 JAN 2023	15.0.0	33-19	20 JAN 2023	15.0.0
Chapter 31 - Indicating / Recording System			33-20	20 JAN 2023	15.0.0
31-1	20 JAN 2023	15.0.0	33-21	20 JAN 2023	15.0.0
31-2	20 JAN 2023	15.0.0	33-22	08 JUN 2026	23.0.0
31-3	20 JAN 2023	15.0.0	33-23	08 JUN 2026	23.0.0
31-4	06 DEC 2023	18.0.0	33-24	08 JUN 2026	23.0.0
31-5	20 JAN 2023	15.0.0	Chapter 34 - Navigation		
31-6	20 JAN 2023	15.0.0	34-1	20 JAN 2023	15.0.0
31-7	02 AUG 2023	17.0.0	34-2	20 JAN 2023	15.0.0
31-8	02 AUG 2023	17.0.0	34-3	20 JAN 2023	15.0.0
31-9	20 JAN 2023	15.0.0	34-4	20 JAN 2023	15.0.0
31-10	20 JAN 2023	15.0.0	34-5	20 JAN 2023	15.0.0
31-11	20 JAN 2023	15.0.0	34-6	20 JAN 2023	15.0.0
31-12	20 JAN 2023	15.0.0	34-7	20 JAN 2023	15.0.0
31-13	20 JAN 2023	15.0.0	34-8	20 JAN 2023	15.0.0
31-14	20 JAN 2023	15.0.0	34-9	20 JAN 2023	15.0.0
31-15	20 JAN 2023	15.0.0	34-10	20 JAN 2023	15.0.0
31-16	20 JAN 2023	15.0.0	34-11	20 JAN 2023	15.0.0
Chapter 32 - Landing Gear			34-12	20 JAN 2023	15.0.0
32-1	20 JAN 2023	15.0.0	34-13	20 JAN 2023	15.0.0
32-2	20 JAN 2023	15.0.0	34-14	20 JAN 2023	15.0.0
Chapter 33 - Lights			34-15	20 JAN 2023	15.0.0
33-1	20 JAN 2023	15.0.0	34-16	20 JAN 2023	15.0.0
33-2	20 JAN 2023	15.0.0	34-17	20 JAN 2023	15.0.0
33-3	20 JAN 2023	15.0.0	34-18	20 JAN 2023	15.0.0
33-4	20 JAN 2023	15.0.0	34-19	08 JUN 2026	23.0.0
33-5	20 JAN 2023	15.0.0	34-20	20 JAN 2023	15.0.0
33-6	20 JAN 2023	15.0.0	34-21	20 JAN 2023	15.0.0
33-7	20 JAN 2023	15.0.0	34-22	20 JAN 2023	15.0.0
33-8	20 JAN 2023	15.0.0	34-23	20 JAN 2023	15.0.0
			34-24	20 JAN 2023	15.0.0
			34-25	20 JAN 2023	15.0.0
			34-26	20 JAN 2023	15.0.0
			34-27	20 JAN 2023	15.0.0

Rui
Pedro
Carvalho

Digitally signed
by Rui Pedro
Carvalho
Date: 2026.06.24
13:10:59 +0100

Page Number	Revision Date	Revision Number	Page Number	Revision Date	Revision Number
34-28	20 JAN 2023	15.0.0	52-6	20 JAN 2023	15.0.0
34-29	20 JAN 2023	15.0.0	52-7	20 JAN 2023	15.0.0
34-30	20 JAN 2023	15.0.0	52-8	20 JAN 2023	15.0.0
34-31	20 JAN 2023	15.0.0			
34-32	20 JAN 2023	15.0.0	Chapter 73 - Engine Fuel and Control		
Chapter 35 - Oxygen			73-1	20 JAN 2023	15.0.0
35-1	20 JAN 2023	15.0.0	73-2	20 JAN 2023	15.0.0
35-2	20 JAN 2023	15.0.0	73-3	20 JAN 2023	15.0.0
35-3	20 JAN 2023	15.0.0	73-4	20 JAN 2023	15.0.0
35-4	20 JAN 2023	15.0.0	Chapter 74 - Ignition		
35-5	20 JAN 2023	15.0.0	74-1	06 DEC 2023	18.0.0
35-6	20 JAN 2023	15.0.0	74-2	06 DEC 2023	18.0.0
35-7	20 JAN 2023	15.0.0	Chapter 77 - Engine Indicating		
35-8	20 JAN 2023	15.0.0	77-1	20 JAN 2023	15.0.0
35-9	20 JAN 2023	15.0.0	77-2	20 JAN 2023	15.0.0
35-10	20 JAN 2023	15.0.0			
Chapter 36 - Pneumatic			Chapter 79 - Oil		
36-1	20 JAN 2023	15.0.0	79-1	20 JAN 2023	15.0.0
36-2	20 JAN 2023	15.0.0	79-2	20 JAN 2023	15.0.0
36-3	20 JAN 2023	15.0.0	79-3	20 JAN 2023	15.0.0
36-4	20 JAN 2023	15.0.0	79-4	20 JAN 2023	15.0.0
36-5	20 JAN 2023	15.0.0	Chapter APPX A - CAS Messages List		
36-6	20 JAN 2023	15.0.0	APPX A-1	20 JAN 2023	15.0.0
Chapter 38 - Water and Waste			APPX A-2	20 JAN 2023	15.0.0
38-1	20 JAN 2023	15.0.0	APPX A-3	12 JAN 2024	19.0.0
38-2	20 JAN 2023	15.0.0	APPX A-4	20 JAN 2023	15.0.0
Chapter 44 - Cabin System			APPX A-5	12 JAN 2024	19.0.0
44-1	20 JAN 2023	15.0.0	APPX A-6	20 JAN 2023	15.0.0
44-2	20 JAN 2023	15.0.0	APPX A-7	12 JAN 2024	19.0.0
Chapter 46 - Information Systems			APPX A-8	12 JAN 2024	19.0.0
46-1	20 JAN 2023	15.0.0	APPX A-9	12 JAN 2024	19.0.0
46-2	06 DEC 2023	18.0.0	APPX A-10	22 AUG 2024	21.0.0
Chapter 52 - Doors			APPX A-11	20 JAN 2023	15.0.0
52-1	20 JAN 2023	15.0.0	APPX A-12	20 JAN 2023	15.0.0
52-2	20 JAN 2023	15.0.0	Chapter APPX B - Passenger Convenience Items (PCI) List		
52-3	20 JAN 2023	15.0.0	APPX B-1	20 JAN 2023	15.0.0
52-4	20 JAN 2023	15.0.0	APPX B-2	20 JAN 2023	15.0.0
52-5	20 JAN 2023	15.0.0	APPX B-3	20 JAN 2023	15.0.0
			APPX B-4	20 JAN 2023	15.0.0

Rui
Pedro
Carvalho

Digitally signed
by Rui Pedro
Carvalho
Date: 2026.06.24
13:11:27 +01'00'

Page Number	Revision Date	Revision Number	Page Number	Revision Date	Revision Number
APPX B-5	20 JAN 2023	15.0.0	APPX D-3	20 JAN 2023	15.0.0
APPX B-6	12 JAN 2024	19.0.0	APPX D-4	20 JAN 2023	15.0.0
APPX B-7	20 JAN 2023	15.0.0	APPX D-5	20 JAN 2023	15.0.0
APPX B-8	20 JAN 2023	15.0.0	APPX D-6	20 JAN 2023	15.0.0
Chapter APPX C - Ferry Flights Items			APPX D-7	20 JAN 2023	15.0.0
APPX C-1	06 DEC 2023	18.0.0	APPX D-8	20 JAN 2023	15.0.0
APPX C-2	06 DEC 2023	18.0.0	APPX D-9	22 AUG 2024	21.0.0
APPX C-3	20 JAN 2023	15.0.0	APPX D-10	22 AUG 2024	21.0.0
APPX C-4	20 JAN 2023	15.0.0	Chapter APPX E - Configuration Deviation List		
APPX C-5	20 JAN 2023	15.0.0	APPX E-1	20 JAN 2023	15.0.0
APPX C-6	06 DEC 2023	18.0.0	APPX E-2	20 JAN 2023	15.0.0
APPX C-7	20 JAN 2023	15.0.0	APPX E-3	20 JAN 2023	15.0.0
APPX C-8	20 JAN 2023	15.0.0	APPX E-4	20 JAN 2023	15.0.0
Chapter APPX D - Special Dispatch Procedures			APPX E-5	20 JAN 2023	15.0.0
APPX D-1	20 JAN 2023	15.0.0	APPX E-6	20 JAN 2023	15.0.0
APPX D-2	20 JAN 2023	15.0.0	APPX E-7	20 JAN 2023	15.0.0
			APPX E-8	20 JAN 2023	15.0.0

Highlights

[ROR Record of Revisions](#)

[ROR](#)

Updated Record of Revisions to reflect new revision status.

[1 Introduction](#)

[1](#)

Removed specific regulatory references. Updated Phenom 300 and 300E AFMs revision references.

Included new tail CS-PJE (S/N 50500945) in MEL applicability.

Included EASA Regulatory references for MEL development.

[13 Flights conducted in accordance with ORO.GEN.310 and ORO.AOC.125](#)

[13](#)

Included Guidance regarding flights conducted iaw ORO.GEN.310 and ORO.AOC.125 (ref.: NTA/NATUK-IO-F-2025-08).

[33-52-13 Exit Identifier Sign](#)

[33-52-13](#)

Revised NOTE to include clarification on relief intent.

[33-52-15 Exit Marker Sign](#)

[33-52-15](#)

Revised NOTE to include clarification on relief intent.

[34-48-00 Runway Overrun Awareness and Alerting System \(ROAAS\)](#)

[34-48-00](#)

Relief activated for aircraft with ROAAS system installed.

Uncontrolled Copy when Printed

Abbreviations

ABBREVIATION	DESCRIPTION
ADF	Automatic Direction Finder
AFCS	Automatic Flight Control System
AFM	Aeroplane Flight Manual
AIR OPS	Commission Regulation (EU) NO 965/2012 and Amendments Thereof Pursuant to the Regulation (EC) NO 216/2008 of the European Parliament and of the Council
AMCC	Aircraft Maintenance Control Centre
AMM	Aircraft Maintenance Manual
ANAC	Autoridade Nacional de Aviação Civil
ATL	Aircraft Technical Log
ATS	Air Traffic Service
CAME	Continuing Airworthiness Management Exposition
CAS	Crew-Alerting System
CDL	Configuration Deviation List
CP	NJE Chief Pilot
CPDLC	Controller Pilot Data Link Communications
DME	Distance-Measuring Equipment
EASA	European Union Aviation Safety Agency
EFB	Electronic Flight Bag
FCM	Flight Crew Member
FDR	Flight Data Recorder
FL	Flight Level
FMS	Flight Management System
GPS	Global Positioning System
GPU	Ground Power Unit
GTC	Garmin Touchscreen Controller
IFE	In-flight Entertainment
IFR	Instrument Flight Rules
ILS	Instrument Landing System
INOP	Inoperative
KIAS	Knots Indicated Air Speed
LH	Left Hand
LNAV	Lateral Navigation
LOC	Localiser
LPV	Localizer Performance with Vertical guidance
MEL	Minimum Equipment List
MFD	MultiFunction Display
MLS	Microwave Landing System
MMEL	Master Minimum Equipment List
NJMP	NetJets Maintenance Procedures
NTA	NetJets Transportes Aéreos, S.A.
OM-A	Operations Manual Part A
OM-B	Operations Manual Part B
OPS	Operations
PAX	Passenger

Uncontrolled Copy when Printed

ABBREVIATION	DESCRIPTION
PBN	Performance Based Navigation
PDU	Primary Display Unit
PFD	Primary Flight Display
POH	Pilot Operating Handbook
QRH	Quick Reference Handbook
RH	Right Hand
RNAV	Area Navigation
RNP	Required Navigation Performance
RVSM	Reduced Vertical Separation Minimum
TCAS	Traffic Collision Avoidance System
UTC	Universal Time Coordinated
VFR	Visual Flight Rule
VHF	Very High Frequency
VMC	Visual Meteorological Conditions

Uncontrolled Copy when Printed

Record of Revisions

Rui
Pedro
Carvalho

Digitally signed
by Rui Pedro
Carvalho
Date:
2026.06.24
13:11:57 +01'00'

Rev. No.	Revision Date	
Original	20 Jun 2014	First Issue.
1	11 Mar 2016	NTA-EMB505S-MEL was revised in order to reflect the Revision 3 of the MMEL. It also incorporates Temporary Revisions and presents improvements.
2	23 Nov 2017	NTA-EMB505S-MEL was revised to include new tail CS-PHK (S/N 50500433). It also includes updated document references and presents improvements.
3	11 May 2018	NTA-EMB505S-MEL was revised in order to reflect the Revision 4 of the MMEL and to include new tail CS-PHL (S/N 50500460). Also includes updated document references and presents improvements. A new MEL format has been adopted.
4	24 Sep 2018	NTA-EMB505S-MEL was revised in order to reflect the Revision 4 of the MMEL and to include new tail CS-PHM (S/N 50500471). It also includes updated document references and presents improvements.
5	29 Mar 2019	NTA-EMB505S-MEL was revised to include new tail CS-PHN (S/N 50500514). Also includes updated document references and presents improvements.
6	10 Oct 2019	NTA-EMB505S-MEL was revised to include new tail CS-PHO (S/N 50500533). Also includes updated document references and presents improvements.
7	20 May 2020	NTA-EMB505S-MEL was revised to: • Reflect Revision 5 of the MMEL; • Include new tail CS-PHP (S/N 50500546); • Review Maintenance Action in Preamble (as per NTA CAPA-01278 (Item 01290)); • Include PBN (RNAV / RNP) Operations Dispatch Conditions Table. Also includes updated document references and presents improvements.
8	10 Dec 2020	NTA-EMB505S-MEL was revised to include new tail CS-PHQ (S/N 50500570). Also includes updated document references and presents improvements.

Rui
Pedro
Carvalho

Digitally signed
by Rui Pedro
Carvalho
Date:
2026.06.24
13:12:23 +01'00'

9	14 Jul 2021	NTA-EMB505S-MEL was revised to: • Include new tail CS-PHR (S/N 50500615); • Reflect Revision 06 of the Minimum Equipment List Guide (MEL-3872 – EASA). Also includes updated document references and presents improvements.
10	27 Sep 2021	NTA-EMB505S-MEL was revised to include: • New tail CS-PHS (S/N 50500625); • Updated document references and presents improvements.
11	16 Mar 2022	NTA-EMB505S-MEL was revised to include: • New tail CS-PHT (S/N 50500656); • Updated document references and presents improvements.
12	12 Apr 2022	NTA-EMB505S-MEL was revised to include new tail CS-PHU (S/N 50500662). Also includes updated document references and presents improvements.
13	04 May 2022	NTA-EMB505S-MEL was revised to include new tail CS-PHV (S/N 50500664). Also includes updated document references and presents improvements.
14	29 Jun 2022	NTA-EMB505S-MEL was revised to include new tail CS-PHW (S/N 50500670). Also includes updated document references and presents improvements.
15.0.0	20 Jan 2023	NTA-EMB505S-MEL was revised to: • Reflect Revision 6 of the MMEL (MMEL-3849-EASA); • Reflect Revision 7 of the Minimum Equipment List Guide (MEL-3872 – EASA); • Include new tail CS-PHX (S/N 50500720); • Update document references and presents improvements. Also, this MEL has suffered structure change from the standard five-column format to an electronic format.
16.0.0	15 May 2023	NTA-EMB505S-MEL was revised to include new tail CS-PHY (S/N 50500725).

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

17.0.0	02 Aug 2023	NTA-EMB505-MEL was revised to: • Include new tail CS-PJA (S/N 50500753) • Update specific MEL items Applicability. • Update document references to include Phenom 300E (EMB-505) and include improvements.
18.0.0	06 Dec 2023	NTA-EMB505-MEL was revised to: • Include new tail CS-PJB (S/N 50500764) • Include improvements.
19.0.0	12 Jan 2024	NTA-EMB505-MEL was revised to: • Reflect Revision 7 of the MMEL (MMEL-3849-EASA); • Reflect Revision 8 of the Minimum Equipment List Guide (MEL-3872 – EASA); • Update document references and presents improvements.
20.0.0	30 Apr 2024	NTA-EMB505-MEL was revised to: • Include new tail CS-PJC (S/N 50500793).
21.0.0	22 Aug 2024	NTA-EMB505-MEL was revised to: • Reflect Revision 9 of the Minimum Equipment List Guide (MEL-3872 – EASA); and, • Include Wide-Cut Fuel Special Dispatch Procedure.
22.0.0	06 Feb 2025	NTA-EMB505-MEL was revised to include the new tail CS-PJD (S/N 50500842). It also includes updated document references and presents improvements.
23.0.0	08 Jun 2026	NTA-EMB505S-MEL was revised to include the new tail CS-PJE (S/N 50500945). It also includes updated document references and presents improvements.

**THIS
PAGE
INTENTIONALLY
LEFT
BLANK**

Uncontrolled Copy when Printed

Preamble

1 Introduction

This Minimum Equipment List (MEL) is based on:

- Embraer EMB-505 EASA Master Minimum Equipment List (MMEL) MMEL-3849, Revision 7, dated November 30, 2023;
- Phenom 300 Minimum Equipment List (MEL) Guide - MEL-3872, Revision 9, dated July 31, 2024;
- Embraer Phenom 300 EASA Airplane Flight Manual AFM - 2666-02, Revision 27, dated November 17, 2025 (Appendix 1 - Configuration Deviation List);
- Embraer Phenom 300E EASA Airplane Flight Manual AFM - 2666-04, Revision 27, dated November 17, 2025 (Appendix 1 - Configuration Deviation List);

This MEL is applicable to the following aircraft (tail numbers):

CS-PHA (S/N 50500203)	CS-PHB (S/N 50500209)	CS-PHC (S/N 50500214)
CS-PHD (S/N 50500225)	CS-PHE (S/N 50500252)	CS-PHF (S/N 50500260)
CS-PHG (S/N 50500264)	CS-PHH (S/N 50500270)	CS-PHI (S/N 50500332)
CS-PHJ (S/N 50500336)	CS-PHK (S/N 50500433)	CS-PHL (S/N 50500460)
CS-PHM (S/N 50500471)	CS-PHN (S/N 50500514)	CS-PHO (S/N 50500533)
CS-PHP (S/N 50500546)	CS-PHQ (S/N 50500570)	CS-PHR (S/N 50500615)
CS-PHS (S/N 50500625)	CS-PHT (S/N 50500656)	CS-PHU (S/N 50500662)
CS-PHV (S/N 50500664)	CS-PHW (S/N 50500670)	CS-PHX (S/N 50500720)
CS-PHY (S/N 50500725)	CS-PJA (S/N 50500753)	CS-PJB (S/N 50500764)
CS-PJC (S/N 50500793)	CS-PJD (S/N 50500842)	CS-PJE (S/N 50500945)

This MEL is developed considering the latest issues of the EASA AIR OPS ANNEX III PART-ORO and CS-MMEL, as approved by EASA.

European air operations regulations requires that all equipment installed on an aircraft required for type certification or by operating rules shall be operative. However, regulations also allow the use of a Minimum Equipment List (MEL) where compliance with certain equipment requirements is not necessary in the interests of safety under all operating conditions. Experience has shown that with the various levels of redundancy designed into aircraft, operation of every system or installed items may not be necessary when the remaining operative equipment can provide an acceptable level of safety.

Uncontrolled Copy when Printed

2 Purpose and Limitations

This MEL includes those items related to airworthiness, air operations, airspace requirements and other items the Agency (EASA) finds may be inoperative and yet maintain an acceptable level of safety by appropriate conditions and limitations; it does not contain obviously required items such as wings, flaps, and rudders. In order to maintain an acceptable level of safety, the MEL establishes limitations on the duration of and conditions for operation with inoperative items. Unless specifically allowed by this MEL, an inoperative item may not be removed from the aircraft.

ALL ITEMS WHICH ARE RELATED TO THE AIRWORTHINESS OF THE AIRCRAFT AND NOT INCLUDED ON THE LIST ARE **AUTOMATICALLY REQUIRED TO BE OPERATIVE.**

Equipment not required by the operation being conducted and equipment in excess of Air OPS requirements are included in the MEL with appropriate conditions and limitations. The MEL must not deviate from the Aircraft Flight Manual Limitations, Emergency Procedures, or with Airworthiness Directives.

Uncontrolled Copy when Printed

3 Utilisation

This MEL takes into consideration NetJets Transportes Aéreos, S.A. (NTA) Embraer EMB-505 particular aircraft equipment, configuration and operational conditions, routes being flown, requirements set by ANAC and NTAs Operations Manual and CAME.

This MEL will not deviate from any applicable Airworthiness Directive or any other Mandatory Requirement and will be no less restrictive than the MMEL.

The MEL is intended to permit operations with inoperative items of equipment for a period of time until rectifications can be accomplished.

Suitable conditions and limitations in the form of placards, maintenance procedures, crew operating procedures, and other restrictions as prescribed in this MEL shall be accomplished as specified to ensure that an acceptable level of safety is maintained.

Rectifications are to be accomplished at the earliest opportunity.

When an item is discovered to be inoperative, it is reported by making an entry in the Aircraft Technical Log System (refer to NJMP 1.01). Following sufficient fault identification, the item is then either rectified or deferred following the MEL or other approved means of compliance acceptable to the competent authority (ANAC) and the Agency (EASA) prior to further operation.

MEL Conditions and Limitations do not relieve the Commander from determining that the aircraft is in a condition for safe operation with items inoperative.

Prior to operation with any item inoperative acceptance by the crew is required in accordance with the Continuing Airworthiness Management Exposition procedures.

The provisions of the MEL are applicable until the aircraft commences the flight.

Any decision to continue a flight following a failure or unserviceability which becomes apparent after the commencement of a flight must be the subject of pilot judgement and good airmanship. The Commander may continue to make reference to and use of the MEL as appropriate.

The decision of the Commander of the flight to have allowable inoperative items corrected prior to flight will take precedence over the provisions contained in the MEL. The Commander may request requirements above the minimum listed, whenever in his judgment such added equipment is essential to the safety of a particular flight under the special conditions prevailing at the time.

By approval of the MEL, ANAC permits dispatch of the aircraft for revenue, positioning ferry or training flights with certain items or components inoperative provided an acceptable level of safety is maintained by use of appropriate operational or maintenance procedures, by transfer of the function to another operating component, or by reference to other instruments or components providing the required information.

Uncontrolled Copy when Printed

4 Multiple Inoperative Items

Exposure to additional failures during continued operation with inoperative items must be considered. Wherever possible, account has been taken in this MEL of multiple inoperative items. However, it is unlikely that all possible combinations of this nature have been accounted for. Therefore, before dispatching an aircraft with multiple MEL items inoperative, it must be assured that any interface or inter-relationship between inoperative items will not result in degradation in the level of safety and / or an undue increase in crew workload. It is particularly in this area of multiple discrepancies and especially discrepancies in related systems that good judgment, based on the circumstances of the case, including climatic and en-route conditions must be used.

Uncontrolled Copy when Printed

5 MEL Format

This MEL is written in electronic format, as defined in CS-MMEL GM4 MMEL.120, containing a list of all reliefs. Each relief has the following format:

- **Header:** System & Sequence Numbers' - System numbers are based on the Air Transport Association (ATA) Specification Number 100 and items are numbered sequentially.
- **Table column 1:** 'Category' - refer to [Section 10 - Notes and Definitions](#).
- **Table column 2:** 'Number Installed' - number (quantity) of items normally installed in the aircraft. This number represents the aircraft configuration considered in developing this MEL. The '-' symbol indicates non-applicability or a variable quantity.
- **Table column 3:** 'Number Required' - minimum number (quantity) of items required for operation provided the conditions specified are met. The '-' symbol indicates non-applicability or a variable quantity.
- **'Remarks / Exceptions' Header:** statement either prohibiting or permitting operation with a specific number of inoperative items, provisos (conditions and limitations) and appropriate notes. Refer to Section 10, paragraphs ['\(M\)'](#) and ['\(O\)'](#) for details regarding '(O)' and '(M)' procedures.
- **'Maintenance Procedures' Header:** Procedure to be performed, if applicable. Refer to Section 8 and Section 10.
- **'Operational Procedures' Header:** Procedure to be performed, if applicable. Refer to Section 8 and Section 10.
- **'Placard Procedure':** Procedure to be performed, if applicable. Refer to Section 8 and Section 10

Uncontrolled Copy when Printed

6 Rectification Interval Extension

It has been permitted to NTA, by the competent authority (ANAC), a one-time extension of the applicable rectification intervals B, C, or D for the same duration as that specified in this MEL, where indicted in the MMEL, as detailed in NTA approved CAME and in NJMP 1.05.

This extension policy, which allows as a maximum a one-time extension of the interval stipulated in the MMEL, has been taken into account during the development of this document.

Uncontrolled Copy when Printed

7 Periodicity of (M) and (O) Procedures

Maintenance deactivation procedures should be performed once prior to the first flight under the associated item.

Maintenance verification and replacement procedures should be performed once prior to the first flight under the associated item, unless otherwise specified on remarks ('**Remarks / Exceptions**' Section)

Other specific maintenance procedures should be performed as required to fulfil function not performed by the inoperative item.

Operational procedures should be performed or acknowledged by the flight crew members before each flight, unless otherwise specified on remarks ('**Remarks / Exceptions**' Section).

Adequate operational procedures specified on MEL remarks ('**Remarks / Exceptions**' Section) by the symbol '(O)' are described on 'Operational Procedures' ('**Operational Procedures**' Section).

Adequate maintenance procedures specified on MEL remarks ('**Remarks / Exceptions**' Section) by the symbol '(M)' are described on 'Maintenance Procedures' ('**Maintenance Procedures**' Section).

Uncontrolled Copy when Printed

8 Maintenance Action

Every effort shall be made by Maintenance to correct all technical defects as early as practicable and to have the aircraft released from a maintenance station in fully operational condition. The Commander must be informed by Maintenance as soon as practicable, should it be impossible to rectify the inoperative item prior to departure.

Whenever an aircraft is released by Maintenance for dispatch with items inoperative, the following procedures stated in NTA's CAME must be followed:

- The control(s) and / or indicator(s) related to inoperative system(s) or component(s) must be clearly placarded whenever they are accessible to the crew in flight.
- If inadvertent operation could produce a hazard, such equipment must be rendered inoperative (physically) as given in the appropriate Maintenance Procedure.
- The tie wrapping of a circuit breaker may be performed by a pilot, if required by an MEL procedure.

Uncontrolled Copy when Printed

9 Ferry Flights

Ferry flights may be dispatched with less than the equipment specified in this MEL provided all the equipment expected to be utilised in flight is operable and any relevant Sections of the Flight Manual are applied.

[Appendix C](#) provides procedures to dispatch with selected configuration deviations, for which revenue operation is not allowed by the MEL or CDL, when it is necessary to ferry the airplane back to a maintenance base for repairs.

Permission for such a flight must follow ANAC approved procedures.

Uncontrolled Copy when Printed

10 Notes and Definitions

System numbers are based on the Air Transport Association (ATA) Specification Number 2200 and items are numbered sequentially.

- **'Airplane Flight Manual'** (AFM) is the document required for type certification and approved by the responsible EASA Aircraft Certification Office. The EASA approved AFM for the specific aircraft is listed in the applicable Type Certificate Data Sheet.
 - **'Alternate procedures are established and used'**, or a similar statement, means that alternate procedures (if applicable) to the affected process were drawn up by NTA as part of the MEL approval process, so that they have been established before the MEL document has been approved. Such alternate procedures are included in the associated operations (O) procedure.
 - **'Any in excess of those required by regulations'**, or a similar statement, means that the listed item of equipment required by applicable legislation (applicable airworthiness codes, Air Operations Regulation, Single European Sky legislation, or the applicable airspace requirements) must be operative and only excess equipment may be inoperative. When the equipment is not required, it may be inoperative for the time specified by its rectification interval category.
 - **'As required by applicable regulations'** means that the listed item of equipment is subject to certain provisions (restrictive or permissive) expressed in the applicable legislation. When the equipment is not required, it may be inoperative for the time specified by its rectification interval category.
 - **'Calendar Day'** means a 24-hour period from midnight to midnight based on either UTC or local time, as selected by the operator. All calendar days are considered to run consecutively.
 - **'Combustible Material'** means the material which is capable of catching fire and burning. In particular: if an MEL item prohibits loading of combustible (or flammable or inflammable) material, no material may be loaded except the following:
 - a. Cargo handling equipment (unloaded, empty, or with ballast);
 - b. Fly away kits (excluding e.g. cans of hydraulic fluid, cleaning solvents, batteries, capacitors, chemical generators, etc.);
- NOTE

If serviceable tires are included, they should only be inflated to a minimum pressure that preserves their serviceability; and
- c. In-flight service material (return catering - only closed catering trolleys / boxes, no newspapers, no alcohol or duty free goods).
 - **'Commencement of flight'** is the point when an airplane begins to move under its own power for the purpose of preparing for take-off.
 - **'Considered Inoperative'**, as used in the dispatch conditions, means that the item must be treated for dispatch, taxiing and flight purposes as though it were inoperative. The item shall not be used or operated until the original deferred item is repaired. Additional actions include: documenting the item on the dispatch release (if applicable), placarding, and complying with all remarks, exceptions, and related MEL provisions, including any (M) and (O) procedures and observing the rectification interval.

- **'Daylight'** means the period between the beginning of morning civil twilight and the end of evening civil twilight relevant to the local aeronautical airspace; or such other period, as may be prescribed by the appropriate authority.
- **'Day of discovery'** means the calendar day that a malfunction was recorded in the airplane maintenance record / log book.
- **'Flight'**, for the purposes of this MEL, means the period of time between the moment when an airplane begins to move under its own power, for the purpose of preparing for take-off, until the moment the airplane comes to a complete stop on its parking area, after the first landing.
- **'Flight Day'** means a 24 hour period from midnight to midnight based on either Universal Coordinated Time (UCT) or local time, as selected by the operator, during which at least one flight is initiated for the affected airplane.
- **'Icing Conditions'** means an atmospheric environment that may cause ice to form on the airplane or in the engine(s) as defined in the AFM.
- **'Is not used'** in the dispatch conditions, remarks or exceptions for an MEL item may specify that another item relieved in the MEL 'is not used'. In such cases, crew members should not activate, actuate, or otherwise utilise that component or system under normal operations. It is not necessary for the operators to accomplish the (M) procedures associated with the item. However, operations-related provisions, (O) procedures and rectification interval must be complied with. An additional placard must be affixed, to the extent practical, adjacent to the control or indicator for the item that is not used to inform crew members that a component or system is not to be used under normal operations.
- **'Intended Route'** corresponds to any point on the route including diversions to reach alternate aerodromes required to be selected by the operational rules.
- **'Item'** (Header section) means component, instrument, equipment, system, or function listed therein.
- **'(M)'** symbol indicates a requirement for a specific maintenance procedure which must be accomplished prior to operation with the listed item inoperative. Normally these procedures are accomplished by maintenance personnel; however, other personnel may be qualified and authorised to perform certain functions. Procedures requiring specialised knowledge or skill, or requiring the use of tools or test equipment should be accomplished by maintenance personnel. The satisfactory accomplishment of all maintenance procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are required to be published as part of the Operator's Manual or MEL.
- **'Master Minimum Equipment List'** means a document approved by the Agency (EASA) that establishes the airplane equipment allowed to be inoperative under conditions specified therein for a specific type of airplane.
- **'Minimum Equipment List'** means a document established as specified under 8.a.3. of Annex IV to Regulation (EC) No 216/2008 and approved by the competent authority (ANAC), in accordance with ORO.MLR.105, that authorised an operator (NTA) to dispatch an airplane (Embraer EMB-505) with airplane equipment inoperative as per CAT.IDE.A/H.105, NCC.IDE.A/H.105, or NCO.IDE.A/H.105 under the conditions specified herein.
- **'Notes'** provide additional information for flight crew or maintenance consideration. Notes are used to identify applicable material which is intended to assist with compliance, but do not relieve the operator of the responsibility for compliance with all applicable requirements. Notes are not a part of the dispatch conditions.

- '**Number Installed**' (Table Column 2) is the number (quantity) of items normally installed in the airplane. This number represents the airplane configuration considered in developing this MEL. Should the number be a variable within the fleet (e.g. passenger cabin items) or not applicable, a number is not required. An en dash ('-') is then inserted.
- '**Number Required for Dispatch**' (Table Column 3) is the minimum number (quantity) of items required for operation provided the conditions specified are met. Should the number be a variable within the fleet (e.g. passenger cabin items) or not applicable, a number is not required. An en dash ('-') is then inserted.

NOTE

The MEL should reflect the actual number required for dispatch or an alternate means of configuration control approved by the competent authority (ANAC).

- '**(O)**' symbol indicates a requirement for a specific operations procedure which must be accomplished in planning for and / or operating with the listed item inoperative. Normally these procedures are accomplished by the flight crew; however, other personnel may be qualified and authorised to perform certain functions. The satisfactory accomplishment of all procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are required to be published as a part of the operator's manual or MEL.
- '**Operating minima**' means the set of requirements associated to operations requiring a specific approval (refer to Part-SPA).
- '**Placarding**' ('**Placard Procedure**' Section) - Each inoperative item must be placarded, as applicable, to inform and remind the crew members and maintenance personnel of the item's condition.

NOTE

To the extent practical, placards should be located adjacent to the control or indicator for the item affected, unless otherwise specified.

- '**Rectification intervals**' (Table Column 1) - Inoperative items or components, deferred in accordance with the MEL, must be rectified at or prior to the rectification intervals established by the following letter designators:

Category A - No standard interval is specified; however, items in this category shall be rectified in accordance with the conditions stated in this MEL.

- Where a time period is specified in days, the interval excludes the day of discovery.
- Where a time period is specified other than in days, it shall start at the point when the defect is deferred in accordance with this approved MEL.

Category B - Items in this category shall be rectified within three (3) calendar days, excluding the day of discovery.

Category C - Items in this category shall be rectified within ten (10) calendar days, excluding the day of discovery.

Category D - Items in this category shall be rectified within one hundred and twenty (120) calendar days (2880 hours), excluding the day of discovery.

NOTE

A '-' inserted in Table Column 1 (Category) indicates the item is not installed or not applicable.

- **'Remarks or Exceptions'** ('Remarks / Exceptions' Section) include statements either prohibiting or allowing operation with a specific number of items inoperative, provisos (conditions and limitations), notes, (M) and / or (O) symbols, as appropriate for such operation.
- **'Visible Moisture'** means an atmospheric environment containing water in any form that can be seen in natural or artificial light; for example, clouds, fog, rain, sleet, hail, or snow.
- **'Deactivated'** and **'Secured'** means that the specified component must be put into an acceptable condition for safe flight. An acceptable method of securing or deactivating will be established by the operator.
- A vertical bar (change bar) in the margin indicates a change, addition or deletion in the adjacent text for the current revision of that page only. The change bar is dropped at the next revision of that page.
- **'Deleted'** in the remarks column after a sequence item indicates that the item was previously listed but is now required to be operative if installed in the airplane.
- Alphabetical symbol in the **'Remarks / Exceptions'** Section indicates a proviso (condition or limitation) that must be complied with for operation with the listed item inoperative.
- **Inoperative components of an inoperative system:** Inoperative items which are components of a system which is inoperative are usually considered components directly associated with and having no other function than to support that system. (Warning / Caution systems associated with the inoperative system must be operative unless relief is specifically authorised per the MMEL / MEL).
- **'Visual Flight Rules'** (VFR) means any flights conducted in accordance with visual flight rules, defined in applicable regulations.
- **'Visual Meteorological Conditions'** (VMC) means the atmospheric environment is such that would allow a flight to proceed under the visual flight rules applicable to the flight. This does not preclude operating under Instrument Flight Rules.
- **'Passenger Convenience Items'** means those items related to passenger convenience, comfort, or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc.
- **Electronic fault alerting system - General** New generation aircraft display system fault indications to the flight crew by use of computerised display systems. Each aircraft manufacturer has incorporated individual design philosophies in determining the data that would be represented. The following are customised definitions (specific to each manufacturer) to help determine the level of messages affecting the aircraft's dispatch status. When preparing the MEL document, operators are to select the proper definition for their aircraft, if appropriate.

Uncontrolled Copy when Printed

11 Optional Safety and Emergency Equipment

The following optional Safety and Emergency Equipment, in case of inoperative or missing, an Aircraft Appearance Log (AAL) entry shall be made in accordance with NJMP 1.01:

- Infant Extension Belts (with operational restrictions - unable to carry infants);
- Automated External Defibrillator (AED);
- Fire Containment Bag;
- Fire Gloves.

Uncontrolled Copy when Printed

12 MEL Revisions

Routine revisions

Whenever an MMEL is issued, the Programs Development Manager (or his designee) shall analyse the changes and revise the MEL within 90 days after MMEL reception.

Temporary Revisions

The Temporary Revisions to the MEL shall be issued in the following situations:

- When for aircraft dispatch, the current applicable MMEL is used (following ANAC previous approval).
- When a new MMEL revision is received, if the analysis demonstrates it requires immediate implementation in the applicable MEL.
- When an error is highlighted in the current MEL.

Uncontrolled Copy when Printed

13 Flights conducted in accordance with ORO.GEN.310 and ORO.AOC.125

Flights conducted in accordance with ORO.GEN.310 and ORO.AOC.125 shall refer to the applicable procedures outlined in the NTA Operations Manual Part-A, Section 8.7, as specified in Operations Manual Part-A, paragraph 2.1.

Uncontrolled Copy when Printed

Chapter 21 - Air Conditioning

21-00-00 Environment Control System Synoptic Display (MFD ECS page)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) MFD indications not addressed elsewhere in MEL may be inoperative.

CAUTION

THIS RELIEF IS NOT INTENDED TO BE USED FOR DISPATCH OF SYSTEMS' FAILURES, BUT THEIR INDICATION ON THE MFD SYNOPTIC PAGE. REFER TO ASSOCIATED CAS MESSAGES FOR SYSTEMS' STATUSES.

Maintenance Procedures

None.

Operational Procedures

(O) MFD indications other than those addressed in the MEL may be inoperative and dispatched under this relief.

Placard Procedure

None.

Uncontrolled Copy when Printed

21-21-01 Flow Control Shut-off Valves (FCSOV)**21-21-01-A**

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(M) (O) May be inoperative provided:

- MFD ECS Synoptic is operative;
- ECS Knob command to Ram Air Valve is tested before each flight;
- ECS Knob is set to the opposite side for flight;
- Affected FCSOV is confirmed closed and deactivated; and
- The airplane is operated at or below FL 250.

Maintenance Procedures

(M) If the inoperative FCSOV can be confirmed closed, deactivate the valve according to AMM TASK 21-21-01-040-801-A.

Operational Procedures

(O) After power up with an external GPU or after start:

- If inoperative FCSOV is confirmed deactivated closed:
 - The ECS 1 (2) FAIL message is shown on CAS.
 - On the ECS synoptic page the valve indication is shown not aligned with the flow line and affected valve is covered by 'X'.
 - Set the ECS knob to the opposite side.
- If inoperative, FCSOV cannot be confirmed closed:

BLEED Switch of Affected Side..... **OFF**

XBLEED..... **OFF**

NOTE

The Anti-ice System shall be considered inoperative.

RAM AIR VALVE ACTUATION CHECK:

- Energize the airplane.
- Pull the WOW 1 Circuit Breaker (A3).
- Select the ECS Knob to BOTH position.

Uncontrolled Copy when Printed

- On the ECS Synoptic page check the Ram Air Valve closed.
- Select the ECS Knob to OFF-VENT position.
- On the ECS synoptic page check the Ram Air Valve open.
- Set ECS Knob as required.
- Push WOW 1 (A3) circuit breakers.

NOTE

RAM AIR FAIL message must not be presented on CAS.

Placard Procedure

Placard ECS Knob 'ECS 1 (2) VALVE INOP'.

Uncontrolled Copy when Printed

21-21-01-B

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- a. MFD ECS Synoptic is operative;
- b. ECS Knob command to Ram Air Valve is tested before each flight;
- c. ECS Knob is set to the opposite side for flight;
- d. PRSOV of affected side is kept closed;
- e. Cross Bleed valve is kept closed;
- f. The airplane is operated at or below FL 250; and
- g. Operations are not conducted in known or forecast icing conditions.

Maintenance Procedures

None.

Uncontrolled Copy when Printed

Operational Procedures

(O) After power up with an external GPU or after start:

- If inoperative FCSOV is confirmed deactivated closed:
 - The ECS 1 (2) FAIL message is shown on CAS.
 - On the ECS synoptic page the valve indication is shown not aligned with the flow line and affected valve is covered by 'X'.
 - Set the ECS knob to the opposite side.
- If inoperative, FCSOV cannot be confirmed closed:

BLEED Switch of Affected Side..... **OFF**

XBLEED..... **OFF**

NOTE

The Anti-ice System shall be considered inoperative.

RAM AIR VALVE ACTUATION CHECK:

- Energize the airplane.
- Pull the WOW 1 Circuit Breaker (A3).
- Select the ECS Knob to BOTH position.
- On the ECS Synoptic page check the Ram Air Valve closed.
- Select the ECS Knob to OFF-VENT position.
- On the ECS synoptic page check the Ram Air Valve open.
- Set ECS Knob as required.
- Push WOW 1 (A3) circuit breakers.

NOTE

RAM AIR FAIL message must not be presented on CAS.

Placard Procedure

Placard ECS Knob 'ECS 1 (2) VALVE INOP'.

Uncontrolled Copy when Printed

21-22-00 Gasper Valves

Category	Number Installed	Number Required
D	7	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

21-23-05 Ground Cooling Fan (GCF)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided ECS Switch is OFF during ground operations.

Maintenance Procedures

None.

Operational Procedures**(O)**

BEFORE START:

- Select ECS knob to OFF VENT; make sure that the CAS messages ECS 1 OFF and ECS 2 OFF shows.

AFTER TAKE-OFF:

- Select ECS knob to BOTH; make sure that the CAS messages ECS 1 OFF and ECS 2 OFF do not show.

Placard Procedure

Placard ECS Knob 'ECS OFF ON GROUND'.

21-24-01 IFE Cooling Fan

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

21-31-00 Cabin Pressure Control System**21-31-00-1****21-31-00-1-A Automatic Control**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided:

- a. The airplane is operated with a second in command;
- b. Outflow valve indication on MFD operates normally;
- c. Manual control is used and verified operative before each flight;
- d. Auto control channel cabin pressurisation indications on EIS are verified operative before each flight;
- e. Cabin pressure indications are operative; and
- f. The airplane is operated at or below FL 250.

Maintenance Procedures**NOTE**

If Negative Valve removal is necessary, refer to Item [21-31-02](#).

Operational Procedures**(O)****Operation in Manual Mode:**

If automatic control of the pressurization system is not possible, manual control of cabin pressure can be used as follows:

AFTER START (manual mode test):

- On the Pressurization Panel set the MODE switch to MAN position;
- On MFD select the ECS synoptic page;
- Hold the CAB ALT switch in the DN position. Check that the OFV indication arrow moves down to the CLOSE indication;
- Hold the CAB ALT switch in the UP position. Check that the OFV indication arrow moves up to the OPEN position.

AFTER TAKE-OFF / CLIMB / CRUISE / DESCENT (manual mode operation):

- Manually control cabin pressurization: Position the CAB ALT to DN (momentary commands) to decrease cabin altitude or UP (momentary commands) to increase cabin altitude.

- To manual adjust of cabin pressurization parameters up to 25000 ft refer to QRH - Non Annunciated Procedures - Loss of Pressurization Indication Table.
- Monitor cabin differential pressure to ensure it remains within limits.

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: Position the CAB ALT to UP (momentary commands) to depressurize the airplane.
- Verify zero delta pressure.

Test of Auto Channel Cabin Pressurization Indication on Engine Indication System (EIS):

- Energize the airplane.
- Pull out the CPCS Manual Channel circuit breaker (B3) on MAIN LH CB PANEL.
- Make sure that all cabin parameters (altitude, rate, Delta-P) still show values and no dashes are displayed.
- Push the CPCS Manual Channel circuit breaker (B3) back in.

Operation without LFE:

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Unpressurised Configuration:

Refer to Item [21-31-02](#), for unpressurized configuration.

Placard Procedure

Placard Pressurisation Panel 'AUTO INOP'.

Uncontrolled Copy when Printed

21-31-00-1-B Automatic Control

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted unpressurised at or below 10,000 ft.

Maintenance Procedures

None.

Uncontrolled Copy when Printed

Operational Procedures

(O)

Operation in Manual Mode:

If automatic control of the pressurization system is not possible, manual control of cabin pressure can be used as follows:

AFTER START (manual mode test):

- On the Pressurization Panel set the MODE switch to MAN position;
- On MFD select the ECS synoptic page;
- Hold the CAB ALT switch in the DN position. Check that the OFV indication arrow moves down to the CLOSE indication;
- Hold the CAB ALT switch in the UP position. Check that the OFV indication arrow moves up to the OPEN position.

AFTER TAKE-OFF / CLIMB / CRUISE / DESCENT (manual mode operation):

- Manually control cabin pressurization: position the CAB ALT to DN (momentary commands) to decrease cabin altitude or UP (momentary commands) to increase cabin altitude;
- To manual adjust of cabin pressurization parameters up to 25,000 ft, refer to QRH - Non Annunciated Procedures - Loss of Pressurization Indication Table;
- Monitor cabin differential pressure to ensure it remains within limits.

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Operation without LFE:

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Unpressurised Configuration:

Refer to Item [21-31-02](#), for unpressurized configuration.

Placard Procedure

Placard Pressurisation Panel 'AUTO INOP'.

Uncontrolled Copy when Printed

21-31-00-2**21-31-00-2-A Manual Control**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided:

- a. Automatic mode is operative; and
- b. The airplane is operated at or below FL 250.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard Pressurisation Panel 'MAN INOP'.

Uncontrolled Copy when Printed

21-31-00-2-B Manual Control

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted unpressurised at or below 10,000 ft.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation in Manual Mode:

If automatic control of the pressurization system is not possible, manual control of cabin pressure can be used as follows:

AFTER START (manual mode test):

- On the Pressurization Panel set the MODE switch to MAN position;
- On MFD select the ECS synoptic page;
- Hold the CAB ALT switch in the DN position. Check that the OFV indication arrow moves down to the CLOSE indication;
- Hold the CAB ALT switch in the UP position. Check that the OFV indication arrow moves up to the OPEN position.

AFTER TAKE-OFF / CLIMB / CRUISE / DESCENT (manual mode operation):

- Manually control cabin pressurization: position the CAB ALT to DN (momentary commands) to decrease cabin altitude or UP (momentary commands) to increase cabin altitude;
- To manual adjust of cabin pressurization parameters up to 25,000 ft, refer to QRH - Non Annunciated Procedures - Loss of Pressurization Indication Table;
- Monitor cabin differential pressure to ensure it remains within limits.

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Operation without LFE:

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Unpressurised Configuration:

Refer to Item [21-31-02](#), for unpressurised configuration.

Placard Procedure

Placard Pressurisation Panel 'MAN INOP'.

Uncontrolled Copy when Printed

21-31-00-3 Cabin Pressure Parameters (Altitude, Rate, Delta-P) Indication

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted unpressurised at or below 10,000 ft.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation in Manual Mode:

If automatic control of the pressurization system is not possible, manual control of cabin pressure can be used as follows:

AFTER START (manual mode test):

- On the Pressurization Panel set the MODE switch to MAN position;
- On MFD select the ECS synoptic page;
- Hold the CAB ALT switch in the DN position. Check that the OFV indication arrow moves down to the CLOSE indication;
- Hold the CAB ALT switch in the UP position. Check that the OFV indication arrow moves up to the OPEN position.

AFTER TAKE-OFF / CLIMB / CRUISE / DESCENT (manual mode operation):

- Manually control cabin pressurization: position the CAB ALT to DN (momentary commands) to decrease cabin altitude or UP (momentary commands) to increase cabin altitude;
- To manual adjust of cabin pressurization parameters up to 25,000 ft, refer to QRH - Non Annunciated Procedures - Loss of Pressurization Indication Table;
- Monitor cabin differential pressure to ensure it remains within limits.

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Operation without LFE:

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Unpressurised Configuration:

Refer to Item [21-31-02](#), for unpressurized configuration.

Placard Procedure

Placard Pressurization Panel "AUTO/MAN INOP".

Uncontrolled Copy when Printed

21-31-00-4 Landing Field Elevation (LFE) Indication

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided that for landing field elevation above 8000 ft, the airplane is manually depressurised before landing.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation without LFE:

APPROACH (manual mode operation - below 10,000 ft):

- Slowly depressurize the airplane: position the CAB ALT to UP (momentary commands) to depressurize the airplane;
- Verify zero delta pressure.

Placard Procedure

Placard Pressurization Panel 'LFE INOP' if destination (or alternate, if applicable) elevation is above 8000 ft.

Uncontrolled Copy when Printed

21-31-02 Outflow Valve (OFV)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) (O) May be inoperative provided:

- NPRV is removed; and
- Flight is conducted unpressurised at or below 10,000 ft.

Maintenance Procedures

(M) Remove the NPRV according to AMM TASK 21-31-03-000-801-A.

Operational Procedures

(O)

Unpressurized Configuration:

Outflow Valve..... OPEN

- Outflow valve may be kept open through one of the following ways:
 - Pressurization Dump Button..... PRESSED
- OR
- Pressurization Mode Switch..... MAN
- CAB ALT Switch..... UP

Confirm that the valve is open on the ECS synoptic page.

ECS knob..... BOTH

Altitude..... 10,000 ft

Placard Procedure

Placard Pressurization Panel 'AUTO / MAN INOP'.

Uncontrolled Copy when Printed

21-31-03 Negative Pressure Relief Valve (NPRV)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted unpressurised at or below 10,000 ft.

Maintenance Procedures

None.

Operational Procedures**Unpressurized Configuration:**

Refer to Item [21-31-02](#) for unpressurized configuration.

Placard Procedure

Placard Pressurization Panel 'AUTO / MAN INOP'.

Uncontrolled Copy when Printed

21-31-04 Pressure Relief Valve (PRV)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted unpressurized at or below 10,000 ft.

Maintenance Procedures

None.

Operational Procedures

(O)

Unpressurized Configuration:

Refer to Item [21-31-02](#) for unpressurized configuration.

Placard Procedure

Placard Pressurization Panel 'AUTO / MAN INOP'.

Uncontrolled Copy when Printed

21-31-05 Pressure Relief Valve (PRV) Static Pressure Line

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be blocked provided flight is conducted unpressurized at or below 10000 ft.

Maintenance Procedures

None.

Operational Procedures

(O)

Unpressurized Configuration:

Refer to Item [21-31-02](#) for unpressurized configuration.

Placard Procedure

Placard Pressurization Panel 'AUTO / MAN INOP'.

Uncontrolled Copy when Printed

21-52-00 Vapour Cycle System (VCS)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided ground operations are limited to 25 minutes for OAT above ISA + 19°C and limited to 60 minutes for OAT above ISA + 14°C.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard Air Conditioning Panel 'AIR COND INOP'.

Uncontrolled Copy when Printed

21-52-04 Evaporator Fans**21-52-04-1 Cabin Fan**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided ground operations are limited to 60 minutes for OAT above ISA + 33°C.

NOTE

IFE must be turned OFF for ground operations with OAT above ISA + 20°C.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

On Air Conditioning Panel placard the CABIN FAN switches 'INOP'.

Uncontrolled Copy when Printed

51-52-04-2 Cockpit Fan

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided:

- a. Cabin fan is operative;
- b. Vapour Cycle System is operative;
- c. Ground operations are limited to OAT below ISA + 22°C; and
- d. Airplane is not operated in known or forecast icing conditions.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

On Air Conditioning Panel placard the CKPT FAN switches 'INOP'.

Uncontrolled Copy when Printed

21-53-00 Avionics Cooling

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Refer to item [31-41-07](#).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

21-61-00 Temperature Control System - Automatic Control

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided:

- Both pressure regulating and shutoff valves (PRSOV) operate normally;
- Heat Exchanger (HX) Temperature Sensor indications on MFD operates normally; and
- Temperature Control Manual mode is used and verified operative before each flight.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation in Manual Mode:

If automatic control of the temperature is inoperative, manual control of cabin temperature can be used as follows:

AFTER START (Manual mode test):

- On the Air Conditioning Panel set the MODE switch to MAN.
- On MFD select the ECS synoptic page. Make sure both HX pictorials show the respective duct temperature.
- Select the TEMP switch to H position and release it twice. Check that the duct temperature shown in both HX pictorials increases.
- Make sure that messages DUCT 1 (2) OVERTEMP do not show.
- Select the TEMP switch to C position and release it twice. Check that the duct temperature shown in both HX pictorials decreases.
- Give H or C inputs as required to have an acceptable cabin / cockpit temperature.

Placard Procedure

On the Air Conditioning Panel placard the MODE switch 'AUTO INOP'.

Uncontrolled Copy when Printed

21-61-02 Temperature Modulating Valve (TMV)

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- ECS switch is set to the opposite side (FCSOV of affected side is confirmed closed);
- Pressure regulating shut-off valve (PRSOV) of affected side is operative; and
- Airplane operation is conducted at or below FL 250.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation in Manual Mode:

AFTER START:

- Set the ECS knob to the side of the operative TMV. On MFD select the ECS synoptic page. Make sure both HX pictorials show the respective duct temperature.
- Confirm that the FCSOV on the side of inoperative TMV is closed. The message ECS 1 (2) OFF shows.

Placard Procedure

On the Air Conditioning Panel placard the MODE switch 'AUTO INOP'.

Uncontrolled Copy when Printed

Chapter 22 - Auto Flight Control System

22-10-00 Autopilot System

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided operations are conducted using a second in command.

NOTE

RVSM operation is not allowed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard on Guidance Panel 'AP / FD INOP'.

Uncontrolled Copy when Printed

22-10-01 Flight Director**22-10-01-A**

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) If flight director is required, PFDs must be coupled to operative one.

NOTE

Navigation and Approach modes sources are selected only through the PFD on the side of the operative flight director, unless Active NAV (for G3000 Avionics System) are synchronized.

Maintenance Procedures

None.

Operational Procedures

(O)

Operation with one Flight Director inoperative:

AFTER START:

- On the AFCS Control Unit press the CPL button to switch the Flight Director active (selected).
- Verify that the Flight Director Indicator Arrow on the AFCS Status Box is pointing to the side of operative Flight Director (left or right).

APPROACH AND NAVIGATION LATERAL MODES OPERATION:

- The roll command bar will provide roll commands, for the Approach and Navigation modes, based on the navigation source (VOR / LOC 1, VOR / LOC 2, GPS) selected by the PFD Active NAV key on the side of the active Flight Director (Pilot PFD for FD 1, Co-pilot PFD for FD 2).
- If it is desired to select the navigation source from the cross PFD, the Active NAV key must be synchronised. This is done on the MFD Auxiliary (AUX) Page Group, System Setup Page, on SYNCHRONISATION Box. Active NAV key synchronisation must be selected ON.

Operation with both Flight Directors inoperative:

TAKE-OFF:

Rotate the airplane according to the table below:

Flaps Position	1	2
Pitch Angle	10.5°	8°

GO-AROUND:

Rotate the airplane 8° nose up.

Uncontrolled Copy when Printed

Placard Procedure

Placard on Guidance Panel 'FD 1 (2) INOP'.

22-10-01-B

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

May be inoperative provided operations do not require autopilot use.

(Refer to MEL item [22-10-00](#)).

NOTE

Table 34-1 - PBN (RNAV / RNP) Operations Dispatch Conditions

PBN Nav Specification	Minimum Equipment Requirements
RNAV 1 (P-RNAV)	One (1) GPS.
RNAV 5 (B-RNAV)	One (1) GPS.
RNAV 10	Two (2) GPS.
RNP APCH (LNAV)	One (1) GPS.
RNP APCH (LNAV/VNAV)	One (1) Flight Director; and
RNP APCH (LPV)	One (1) GPS.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard on Guidance Panel 'FD 1 (2) INOP'.

Uncontrolled Copy when Printed

22-10-02 Yaw Damper Function

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided airplane airspeed is limited to 180 KIAS if in icing conditions.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard on Guidance Panel 'YD INOP'.

Uncontrolled Copy when Printed

22-10-03 Current Speed Control (CSC)

Category	Number Installed	Number Required
C	1	0

NOTE

If Installed. - Aircraft with G3000 Avionics Software Load 29.04 and on: CS-PJA and on.

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard on Guidance Panel 'CSC INOP'.

Uncontrolled Copy when Printed

22-11-01 Guidance Panel (GP)**22-11-01-1 Course Knobs (CRS)**

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-2 Flight Director (FD) Buttons

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

Uncontrolled Copy when Printed

22-11-01-3 Autopilot (AP) Button

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided autopilot is considered inoperative (refer to MEL item [22-10-00](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-4**22-11-01-4-A Yaw Damper (YD) Button**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided autopilot is operative and engaged if above 180 KIAS if in icing conditions.

NOTE

If associated with ventral rudder failure max altitude is set to 25000 ft.

Maintenance Procedures

None.

Operational Procedures

(O)

Yaw Damper Engage Button Inoperative:

Verify AP and YD indication on PFD AFCS Status Box with autopilot engaged.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-4-B Yaw Damper (YD) Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided airplane airspeed is limited to 180 KIAS if in icing conditions.

NOTE

If associated with ventral rudder failure max altitude is set to 25000 ft.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

Uncontrolled Copy when Printed

22-11-01-5 Couple (CPL) Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-6 Navigation (NAV) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

Uncontrolled Copy when Printed

22-11-01-7 Heading (HDG) Mode Button

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided autopilot is considered inoperative (refer to MEL item [22-10-00](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-8 Approach (APR) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-9 Bank Limiter (BANK) Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-10 Heading Selector (HDG SEL) Knob

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided autopilot is considered inoperative (refer to MEL item [22-10-00](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-11 Heading Synchronization (PUSH SYNC) Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-12 Flight Level (FLC) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-13 Vertical Navigation (VNV) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-14 Altitude Hold (ALT) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Uncontrolled Copy when Printed

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-15 Vertical Speed (VS) Mode Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-16 Vertical Speed (VS DN UP) Thumb Wheel

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-17 Airspeed To Mach (PUSH IAS MACH) Change Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-18 Altitude Selector (ALT SEL) Knob

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided autopilot is considered inoperative (Refer to item MEL [22-10-00](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

Uncontrolled Copy when Printed

22-11-01-19 Speed (SPD SEL) Knob**22-11-01-19-A**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-19-B

Category	Number Installed	Number Required
-	-	-

NOTE

Applicable only for airplanes equipped with Autothrottle.

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

22-11-01-20 Speed Selector (FMS/MAN)

Category	Number Installed	Number Required
C	1	0

NOTE

For airplanes equipped with G3000 Avionics System Version 3305. - Applicable to CS-PJA (S/N 50500753) and on.

System Version is shown on the MFD Splash Page upon initialization.

Remarks / Exceptions

(O) May be inoperative provided:

- Selection of the source of the speed reference is in manual mode (cyan on PFD); and
- Alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures**(O) Speed (FMS/MAN) Selector inoperative:**

For operation of the source of speed reference in manual mode: CLIMB / CRUISE / DESCENT / APPROACH:

- Target speed indication color on PFD will be cyan.
- Select the speed to fly manually through the SPD Knob.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

22-11-01-21 Autothrottle (A/T) Button

Category	Number Installed	Number Required
-	-	-

NOTE

If Installed.

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

22-11-01-22 Current Speed Control (CSC) Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided CSC function is considered inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected AFCS Control Unit button or knob 'INOP'.

Uncontrolled Copy when Printed

22-11-21 AP / FD CWS Button

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative in not active position.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

22-11-22 Autopilot / Trim Disengage (QUICK DISCONNECT) Button

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

Either side may be inoperative in not active position provided operative button is on flying pilot's side.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

22-11-23 Take-off / Go-around (TOGA) Button**22-11-23-A**

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

May be inoperative in not active position.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

22-11-23-B

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

(O) May be inoperative in not active position provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

(O) Operation with both TO / GA buttons inoperative:

TAKE-OFF:

Rotate the airplane according to the table below:

Flaps Position	1	2
Pitch Angle	10.5°	8°

GO-AROUND:

Rotate the airplane 8° nose up.

Placard Procedure

None.

Uncontrolled Copy when Printed

22-30-00 Autothrottle Channels

Category	Number Installed	Number Required
-	-	-

NOTE

If Installed.

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

22-30-00-01 A/T HOLD Mode

Category	Number Installed	Number Required
-	-	-

NOTE

If Installed.

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

22-30-01 Autothrottle Quick Disconnect (A/T DISC) Buttons

Category	Number Installed	Number Required
-	-	-

NOTE

If Installed.

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 23 - Communications**23-11-00 High Frequency (HF) Communication System**

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-12-00 Very High Frequency (VHF) Communication System (Commercial air transport for airplanes equipped with G3000 Avionics System)**23-12-00-A**

Category	Number Installed	Number Required
C	3	2

Remarks / Exceptions

(O) VHF 2 may be inoperative provided:

- a. VHF 3 is used for communication;
- b. ATN CPDLC and / or FANS 1 / A - CPDLC are considered inoperative;
- c. Applicable airspace requirements for the intended flight route are complied with; and
- d. Alternate procedures are established and used, if applicable.

Maintenance Procedures

None.

Operational Procedures

For airplanes equipped with G3000, to use VHF 3 as a radio, disable DATALINK mode option (COM 3) in the GTC (Audio & Radios Page).

Placard Procedure

Placard associated Audio Panel 'VHF 2 INOP'.

Uncontrolled Copy when Printed

23-12-00-B

Category	Number Installed	Number Required
C	3	2

Remarks / Exceptions

(O) VHF 3 may be inoperative provided:

- ATN CPDLC and/or FANS 1/A - CPDLC are considered inoperative;
- Applicable airspace requirements for the intended flight route are complied with; and
- Alternate procedures are established and used, if applicable.

NOTE

With G3000 Avionics System the ATN CPDLC and/or FANS 1/A - CPDLC are inoperative when VHF 3 is inoperative.

Maintenance Procedures

None.

Operational Procedures

For airplanes equipped with G3000, to use VHF 3 as a radio, disable DATALINK mode option (COM 3) in the GTC (Audio & Radios Page).

Placard Procedure

Placard associated Audio Panel 'VHF 3 INOP'.

23-12-00-C

Category	Number Installed	Number Required
C	3	1

Remarks / Exceptions

(O) VHF may be inoperative provided:

- VHF 1 operates normally;
- Operations are conducted under VFR over routes navigated by reference to visual landmarks;
- Applicable airspace requirements for the intended flight route are complied with;
- Alternate procedures are established and used, if applicable.

NOTE

With G3000 Avionics System the ATN CPDLC and / or FANS 1 / A - CPDLC are inoperative when VHF 3 is inoperative.

Maintenance Procedures

None.

Operational Procedures

For airplanes equipped with G3000, to use VHF 3 as a radio, disable DATALINK mode option (COM 3) in the GTC (AUDIO & RADIOS Page).

Placard Procedure

Placard associated Audio Panel 'VHF 2 (3) INOP'.

Uncontrolled Copy when Printed

**23-15-00 Data Link Management System - Satellite Communication (SATCOM)
Function**

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard 'SATCOM INOP'.

Uncontrolled Copy when Printed

23-15-01 AVIATOR 200 DATA LINK System - Swift Broadband Inmarsat Satellite Communication Function (Airplanes CS-PHA thru CS-PHJ, with AVIATOR 200 SATCOM System Installed in Conjunction with Aircell UCS with WLAN)

Category	Number Installed	Number Required
D	1	0

NOTE**Additional Info:** POST MOD. AV200-NY-11276-05 or POST SB 17-08740SB-01.**Remarks / Exceptions****(O)** May be inoperative provided SBU circuit breaker is pulled.**Maintenance Procedures**

None.

Operational Procedures

Pull the SBU circuit breaker located on the aft circuit breaker panel and labelled 'SBU'.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-21-00 Selective Call System (SELCAL)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-23-00 Data Link Management System - Maintenance Data Transmittal Function

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard 'DLMS - Maintenance Data Transmittal Function INOP'.

Uncontrolled Copy when Printed

23-24-00 Controller-to-pilot Data Link Communication System (CPDLC)**23-24-00-1****23-24-00-1-A ATN CPDLC**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided that alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

Supplementary means of communication such as normal ATC-Pilot VHF comms shall be used for non-time critical messages. Voice shall remain the primary means of communication.

Placard Procedure

Placard 'CPDLC INOP'.

23-24-00-1-B ATN CPDLC

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative provided that procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard 'CPDLC INOP'.

Uncontrolled Copy when Printed

23-24-00-2 FANS 1/A - CPDLC

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-51-01 Audio Panel (For airplanes equipped with G1000 Avionics System)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not applicable (aircraft equipped with G3000 avionics system).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-51-02 Cockpit Speakers

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Applicable for Two Pilot Operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-51-07 PTT Switches**23-51-07-A**

Category	Number Installed	Number Required
B	4	2

Remarks / Exceptions

(O) One in each side may be inoperative, provided the affected switch is verified failed open (non-transmitting).

Maintenance Procedures

None.

Operational Procedures

According to MEL remarks.

Placard Procedure

None.

23-51-07-B

Category	Number Installed	Number Required
B	4	2

Remarks / Exceptions

(M) One in each side may be inoperative, provided the affected switch is deactivated.

Maintenance Procedures

Refer to Deactivation/Reactivation Index into AMM Part II.

PTT Switches - Deactivation (refer to AMM TASK 23-51-07-040-801-A/400).

PTT Switches – Reactivation (refer to AMM TASK 23-51-07-440-801-A/400).

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-51-09 Headset with Boom Microphones

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Applicable for Two Pilot Operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

23-51-11 Hand Microphone

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard associated Audio Jack Panel "HAND MIC INOP".

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 24 - Electrical Power

24-00-00 Electrical Synoptic Display (MFD Electrical Page)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) MFD Indications not required elsewhere in the MEL may be inoperative.

CAUTION

THIS RELIEF IS NOT INTENDED TO BE USED FOR DISPATCH OF SYSTEMS' FAILURES, BUT THEIR INDICATION ON THE MFD SYNOPTIC PAGE. REFER TO ASSOCIATED CAS MESSAGES FOR SYSTEMS' STATUSES.

Maintenance Procedures

None.

Operational Procedures

MFD indications other than those addressed in the MEL may be inoperative and dispatched under this relief.

Placard Procedure

None.

Uncontrolled Copy when Printed

24-41-00 DC External Power System

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

NOTE

Please make sure GPU output voltage is between 27,5 V and 30 V.

May be inoperative provided operations do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

24-41-00-1) DC GPU AVAIL / IN USE PUSHBUTTON LIGHTS

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

(O) May be inoperative provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

(O) DC GPU Avail / In use Pushbutton Lights If the AVAIL and / or IN USE lights of GPU pushbutton are not operative, the GPU operation can be monitored on the airplane through the following steps:

- Connect the GPU to the airplane.
- Turn on both batteries.
- On MFD select the ELECTRICAL synoptic page.
- On the GPU pictorial, make sure the voltage indication is at least 27.5 V. This indicates a capable GPU. The line between GPU and CENTRAL bus must be white.
- Push in the GPU button.
- On the synoptic page check that the line between the GPU and CENTRAL bus turn into green. This indicates that the GPU is energising the airplane buses.

The GPU can also be monitored through built-in GPU gauges.

Placard Procedure

Placard Electrical Panel 'AVAIL / IN USE INOP'.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 25 - Equipment / Furnishing

25-11-01 Pilot Seats

25-11-01-1 Lumbar Support

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided seat is acceptable to affected crew member.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard the inoperative equipment - 'INOP'.

25-11-01-2 Armrests

25-11-01-2A

Category	Number Installed	Number Required
C	4	0

Remarks / Exceptions

(O) May be inoperative provided armrest is secured in the retracted (up) position.

Maintenance Procedures

None.

Operational Procedures

According to MEL remarks.

Placard Procedure

Placard the inoperative equipment - 'INOP'.

25-11-01-2B

Category	Number Installed	Number Required
C	4	0

Remarks / Exceptions

(M) May be inoperative provided armrest is removed.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Pilot Seats Armrests - Deactivation (refer to AMM TASK 25-11-01-040-802-A / 400).

Pilot Seats Armrests - Reactivation (refer to AMM TASK 25-11-01-440-802-A / 400).

Operational Procedures

None.

Placard Procedure

Placard the inoperative equipment - 'INOP'.

Uncontrolled Copy when Printed

25-11-01-3 Recline Function

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

May be inoperative provided:

- a. Affected seat has failed locked in a position that permits normal pilot visibility;
- b. Full flight control movement is available; and
- c. Seat is acceptable to the affected crew member.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard the inoperative equipment or function - 'INOP'.

Uncontrolled Copy when Printed

25-11-01-4 Headrests

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided it is adequate to the occupant.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard the inoperative equipment - 'INOP'.

Uncontrolled Copy when Printed

25-11-01-5 Vertical Seat Adjustment

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

May be inoperative provided:

- a. Affected seat has failed locked in a position that permits normal pilot visibility;
- b. Full flight control movement is available; and
- c. Seat is acceptable to the affected crew member.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard the inoperative equipment or function - 'INOP'.

Uncontrolled Copy when Printed

25-12-09 Cockpit Sunvisor

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Deleted in MEL Revision 19.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-12-10 Cockpit Sunshades

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Deleted in MEL Revision 19.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-20-00 Passenger Convenience Items

Category	Number Installed	Number Required
D	-	0

Remarks / Exceptions

Passenger convenience items are those related to passenger convenience, comfort, or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, and overhead reading lamps. Items addressed elsewhere in this document shall not be included.

(M) procedures may be required. Refer to [APPENDIX B - Passenger Convenience Items \(PCI\) List](#). Defects related to Passenger Convenience Items not listed in [APPENDIX B - Passenger Convenience Items \(PCI\) List](#) shall be controlled through Aircraft Appearance Log (AAL) in accordance with NJMP 1.01.

NOTE

Exterior lavatory door ashtrays are not considered convenience items.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-20-01 Aircell Universal Cabin System (UCS) with WLAN (Airplanes CS-PHA thru CS-PHJ, with AVIATOR 200 SATCOM System Installed in Conjunction with Aircell UCS with WLAN)

Category	Number Installed	Number Required
D	1	0

NOTE

Additional Info: POST MOD. AV200-NY-11276-05 or POST SB 17-08740SB-01.

Remarks / Exceptions

(O) May be inoperative provided UCS circuit breaker is pulled.

Maintenance Procedures

None.

Operational Procedures

Pull the UCS circuit breaker located on the aft circuit breaker panel and labelled 'UCS'.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-21-01 Passenger Seats**25-21-01A**

Category	Number Installed	Number Required
D	7	0

Remarks / Exceptions

(M) May be inoperative provided:

- Seat does not block an Emergency Exit;
- Seat does not restrict any passenger from access to the main airplane aisle; and
- The affected seat(s) is(are) blocked and placarded 'DO NOT OCCUPY'.

NOTE

A seat with an inoperative seat belt or inoperative seatbelt airbag whenever applicable is considered inoperative.

Maintenance Procedures

Deactivate the affected seat and secure it in the upright position. Refer to AMM TASK 25-21-01-040-801-A.

Deactivate the affected seat's adjustment controls and secure it in the upright position. Refer to AMM TASK 25-21-01-040-802-A.

Operational Procedures

None.

Placard Procedure

Placard the affected seat(s) 'DO NOT OCCUPY'.

25-21-01B

Category	Number Installed	Number Required
C	7	0

Remarks / Exceptions

(O) May be inoperative provided:

- Seat does not block an Emergency Exit,
- Seat does not restrict any passenger from access to the main airplane aisle,
- The affected seat(s) is(are) immovable in the takeoff and landing position, and
- The affected seat(s) is(are) blocked and placarded 'DO NOT OCCUPY'.

NOTE

A seat with an inoperative seat belt or inoperative seatbelt airbag whenever applicable is considered inoperative.

Maintenance Procedures

None.

Operational Procedures

Verify that the affected passenger seat is immovable in the takeoff and landing position. Block and placard the affected passenger seat(s) as not to be occupied. Make sure that the seat does not block the emergency exit and does not restrict any passenger from access to the airplane aisle.

Placard Procedure

Placard the affected seat(s) 'DO NOT OCCUPY'.

25-21-01-1**25-21-01-1-A Recline Function**

Category	Number Installed	Number Required
D	6	0

Remarks / Exceptions

(O) May be inoperative and the affected seat occupied provided the seat is secured in the upright position.

Maintenance Procedures

None.

Operational Procedures

Put the affected passenger seat in the upright position. Apply moderate force to the back cushion. Make sure that the back cushion does not recline.

Placard Procedure

Placard the affected seat 'DO NOT RECLINE'.

Uncontrolled Copy when Printed

25-21-01-1-B Recline Function

Category	Number Installed	Number Required
C	6	0

Remarks / Exceptions

May be inoperative and the affected seat occupied provided the seat back is immovable in the upright position.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard the affected seat 'DO NOT RECLINE'.

25-21-01-2 Passenger Seat Armrests without Recline Control Mechanism

Category	Number Installed	Number Required
D	6	0

Remarks / Exceptions

May be inoperative, damaged or missing and the affected seat occupied provided:

- The affected armrest does not block an Emergency Exit; and
- The affected armrest is not in such a position that restricts any passenger from accessing the main airplane aisle.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-21-01-3**25-21-01-3-A Swivel / Travel Mechanisms**

Category	Number Installed	Number Required
D	6	0

Remarks / Exceptions

(O) One or more may be inoperative and the affected seat occupied provided:

- Affected seat is secured in the takeoff and landing position;
- Affected seat does not block an Emergency Exit; and
- Affected seat does not restrict any passenger from access to the main airplane aisle.

Maintenance Procedures

None.

Operational Procedures

Verify that the affected passenger seat is immovable in the takeoff and landing position. Make sure that the seat does not block the emergency exit and does not restrict any passenger from access to the airplane aisle. Apply moderate force to forward, aft lateral and swivel movements of the seat. Make sure that the seat does not move.

Placard Procedure

None.

25-21-01-3-B Swivel / Travel Mechanisms

Category	Number Installed	Number Required
C	6	0

Remarks / Exceptions

One or more may be inoperative and the affected seat occupied provided the affected seat is immovable in the take-off and landing position.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-44-02 Exterior Lavatory Door Ashtray**25-44-02-A Exterior Lavatory Door Ashtray**

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

May be inoperative or missing provided repairs are made within 3 consecutive calendar days.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

25-44-02-B Exterior Lavatory Door Ashtray

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative or missing provided flight is non-smoking.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-61-00 Emergency Locator Transmitter (ELT)

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

May be inoperative for a maximum of 6 flights or 25 flight hours, whichever occurs first.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard ELT Switch 'ELT INOP'.

Uncontrolled Copy when Printed

25-62-01 First Aid Kit (FAK)

Category	Number Installed	Number Required
D	1	1

Remarks / Exceptions

(O) If seal is broken the Kit contents must be inspected before each flight for the presence of the mandatory AIR OPS items.

Maintenance Procedures

None.

Operational Procedures

(O) With reference to the MEDAIRE contents card - located within the First Aid Kit and associated Companion Kit - the following mandatory AIR OPS (refer to AMC1 CAT.IDE.A.220) items must be present (any other items may be missing):

1. Equipment:

- bandages (assorted sizes, including a triangular bandage);
- burns dressings (unspecified);
- wound dressings (large and small);
- adhesive dressings (assorted sizes);
- adhesive tape;
- adhesive wound closures;
- safety pins;
- safety scissors;
- antiseptic wound cleaner;
- disposable resuscitation aid;
- disposable gloves;
- tweezers: splinter;
- thermometers (non-mercury); and
- surgical masks.

2. Medications:

- simple analgesic (including paediatric form);
- antiemetic - non-injectable (including paediatric form);
- nasal decongestant; and
- antihistamine (including paediatric form).

Uncontrolled Copy when Printed

3. Other:

- a list of contents in at least two languages (English and Portuguese). This would include information on the effects of medications carried;
- first aid handbook, current edition;
- basic life support instructions cards (summarising and depicting the current algorithm for basic life support); and
- medical incident report form.

4. Additional equipment. The following additional equipment should be carried on board each aircraft not necessarily in the first-aid kit (e.g. Companion Kit):

- bag-valve masks (masks in three sizes: one for adults, one for children, and one for infants);
- suitable airway management device (e.g. supraglottic airway devices, oropharyngeal or nasopharyngeal airways);
- eye irrigator;
- biohazard disposal bags.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-62-02 Passenger Life Vests

Category	Number Installed	Number Required
D	7	0

Remarks / Exceptions

(M)(O) Any in excess of one for each person on board may be missing or inoperative, provided:

- Required distribution is maintained;
- Inoperative lifejacket and its installed location are placarded inoperative;
- Inoperative life jacket is secured out of sight; and
- Procedures are established and used to alert crew members of inoperative or missing equipment.

Maintenance Procedures

Inoperative ones must be placarded and removed from its regular location and put out of sight.

NOTE

Procedure may be accomplished by flight crew.

Operational Procedures

According to MEL remarks.

Placard Procedure

Placard associated Life Vest location 'LIFE VEST INOP'.

25-62-02-1 Infant Life Vests

Category	Number Installed	Number Required
D	3	0

Remarks / Exceptions

(M)(O) Any in excess of one for each infant on board may be missing or inoperative provided:

- Required distribution is maintained;
- Inoperative life jacket and its installed location are placarded inoperative;
- Inoperative life jacket is secured out of sight; and
- Procedures are established and used to alert crew members of inoperative or missing equipment.

Maintenance Procedures

Inoperative ones must be placarded and removed from its regular location and put out of sight.

NOTE

Procedure may be accomplished by flight crew.

Operational Procedures

According to MEL remarks.

Placard Procedure

Placard associated Life Vest location 'LIFE VEST INOP'.

Uncontrolled Copy when Printed

25-62-05 Flashlights and Holder Assemblies**25-62-05-1 Flashlights**

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

One or more may be inoperative provided each required crew member assigned to affected position has an operative flashlight.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected item 'INOP' or 'REMOVED'.

Uncontrolled Copy when Printed

25-62-05-2 Flashlight Holders

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative or missing provided associated flashlight is stowed by alternate means.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard affected item 'INOP' or 'REMOVED'.

Uncontrolled Copy when Printed

25-62-06 Protective Breathing Equipment (PBE)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Refer to MEL item [35-10-01](#).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

25-66-01 Life Raft

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 26 - Fire Protection

26-15-00 Baggage Compartment Smoke Detection System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided cargo compartment remains empty or does not contain combustible or inflammable material.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

26-24-01 Portable Fire Extinguisher

Category	Number Installed	Number Required
-	2	2

Remarks / Exceptions

Required for dispatch.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 27 - Flight Controls

27-14-00 Roll Trim System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided:

- Aileron trim tabs are verified in neutral position before each flight; and
- Roll trim circuit breaker is pulled.

Maintenance Procedures

None.

Operational Procedures

Cockpit Inspection:

- Pull the ROLL TRIM circuit breaker (A15).

Placard Procedure

Placard aileron trim knob 'ROLL TRIM INOP'.

24-14-00-1 Roll Trim Position Indication on EIS

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided ailerons trim tabs are verified centred before each flight.

Maintenance Procedures

None.

Operational Procedures

External Inspection:

- Verify that the aileron trim tab is flat with aileron surface.

Placard Procedure

Placard aileron trim knob 'ROLL TRIM INOP'.

27-20-00 Rudder Pedal Adjustment

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided rudder pedal position is acceptable to affected crew member.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard 'Rudder Pedal Adjustment INOP'.

Uncontrolled Copy when Printed

27-24-00 Yaw Trim Position Indication on EIS

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided ailerons trim tabs are verified centred before each flight.

Maintenance Procedures

None.

Operational Procedures**External Inspection:**

- Verify that the rudder trim tab is flat with rudder surface.

Placard Procedure

Placard yaw trim switch 'YAW TRIM INOP'.

Uncontrolled Copy when Printed

27-34-01 Yoke Pitch Trim Switch

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

Either side may be inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

27-70-00 Gust Lock System**27-70-00-1 Rudder Gust Lock (RGL)**

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

(M) May be inoperative provided:

- The RGL system is removed; and
- Alternate procedures are established and used to prevent damage from gust on ground.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

NOTE

The airplane would be parked inside the hangar to avoid damages caused by gusts on the rudder surfaces.

Operational Procedures

None.

Placard Procedure

Placard 'RUDDER GUST LOCK INOP'.

Uncontrolled Copy when Printed

**THIS
PAGE
INTENTIONALLY
LEFT
BLANK**

Uncontrolled Copy when Printed

Chapter 28 - Fuel

28-00-00 Fuel System Synoptic Display (MFD Fuel Page)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) MFD Indications not required elsewhere in the MEL may be inoperative.

CAUTION

THIS RELIEF IS NOT INTENDED TO BE USED FOR DISPATCH OF SYSTEMS' FAILURES, BUT THEIR INDICATION ON THE MFD SYNOPTIC PAGE. REFER TO ASSOCIATED CAS MESSAGES FOR SYSTEMS' STATUSES.

Maintenance Procedures

None.

Operational Procedures

MFD indications other than those addressed in the MEL may be inoperative and dispatched under this relief.

Placard Procedure

None.

28-11-05 Fuel Drain Valves

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative (closed) provided:

- a. The affected valve is checked for no leakage; and
- b. No water is found on the opposite tank before each flight day.

Maintenance Procedures

None.

Operational Procedures**External Inspection:**

- Make sure the valve has no leakage.
- Drain water on the opposite tank. Make sure no water is found.

Placard Procedure

None.

Uncontrolled Copy when Printed

28-11-07 Fuel Dump Valves

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

(M) May be inoperative (open) provided the affected valve is checked for no leakage.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Fuel Dump Valve - Deactivation (refer to AMM TASK 28-11-07-040-801-A/ 400).

Fuel Dump Valve - Reactivation (refer to AMM TASK 28-11-07-400-801-A/ 400).

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

28-11-09 Gravity Fuel Caps

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

(M) (O) May be inoperative (locked) provided:

- Cap is checked for no leakage;
- Pressure Refueling System is operative; and
- Fuel Quantity Indication system is operative.

Maintenance Procedures

(M) Refer to Deactivation / Reactivation Index into AMM Part II.

Gravity Filler Cap - Deactivation (refer to AMM TASK 28-11-09-040-801-A/ 400).

Gravity Filler Cap - Reactivation (refer to AMM TASK 28-11-09-440-801-A/ 400).

Operational Procedures

(O) Ensure Fuel quantity indication is operative through the cockpit indication system (MFD indication).

Placard Procedure

None.

Uncontrolled Copy when Printed

28-23-00 Pressure Refueling System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided airplane is refuelled by gravity.

NOTE

Both fuel caps must be operative for gravity refuelling.

Maintenance Procedures

None.

Operational Procedures

Refuel the airplane by gravity according to POH.

Placard Procedure

None.

Uncontrolled Copy when Printed

28-23-01 Fuel Quantity Indication of Refueling Panel

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided:

- Airplane is refuelled by pressure mode or by gravity; and
- Fuel Quantity Indication on EIS is operative.

Maintenance Procedures

None.

Operational Procedures

The pressure refueling in manual mode is done following the same steps of normal pressure refueling stated in POH. But instead of selecting a fuel quantity on refueling panel, the operator should direct control the refuel shutoff valve, using the REFUEL switch located on the REFUEL Control Panel. Another person in cockpit should monitor the fuel quantity on the wings.

Refuel the airplane by gravity according to POH.

Placard Procedure

None.

Uncontrolled Copy when Printed

28-41-00 Fuel Quantity Indicating System

Category	Number Installed	Number Required
B	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- Airplane is refuelled to full fuel capacity before first flight of the day;
- Fuel Used Indication on MFD is operative and monitored throughout the flight;
- Both Fuel Flow indications are operative and monitored throughout the flight; and
- Both Fuel Low Pressure switches are operative.

Maintenance Procedures

None.

Operational Procedures

Refuel airplane to full capacity before the first flight of the day.

Refuel airplane to full capacity in order to know the total fuel quantity before each flight:

- Top off each wing tank.
- Read the fuel quantity indication on the operative side.
- Multiply this figure by two to get the total quantity.
- Record the total quantity (kilograms).

Use FUEL USED information (FUEL synoptic) to calculate fuel on board in flight:

- Subtract from the initial total quantity the FUEL USED information. This figure should provide the remaining fuel. Compare this figure with the planned remaining fuel along the route to be flown. The difference should be lower than 5%.
- Divide the remaining fuel by two. Compare this figure with the fuel quantity indication on the operative side. If the quantity shown is lower than the calculated, get more two calculated data 5 minutes apart. If the difference between the calculated figure and the indication is increasing and fuel flows are the same for both engines, suspect of fuel leakage on the side of operative quantity indication.

Monitor the required roll trim throughout the flight. Land as soon as practical if required roll trim is increasing.

NOTE

Airplane should be refueled before first flight of the day, as required by Fuel Quantity Indication maintenance procedures.

Uncontrolled Copy when Printed

Placard Procedure

Placard Fuel Panel 'DO NOT USE XFEED'.

Uncontrolled Copy when Printed

Chapter 30 - Ice and Rain Protection

30-00-00 Ice Protection System Synoptic Display (MFD ICEPROT PAGE)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) MFD Indications not required elsewhere in the MEL may be inoperative.

CAUTION

THIS RELIEF IS NOT INTENDED TO BE USED FOR DISPATCH OF SYSTEMS' FAILURES, BUT THEIR INDICATION ON THE MFD SYNOPTIC PAGE. REFER TO ASSOCIATED CAS MESSAGES FOR SYSTEMS' STATUSES.

Maintenance Procedures

None.

Operational Procedures

MFD indications other than those addressed in the MEL may be inoperative and dispatched under this relief.

Placard Procedure

None.

30-12-00 Wing and Horizontal Stabilizer Anti-icing System (WHSAIS)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) May be inoperative provided:

- Airplane is not operated in know or forecast icing conditions; and
- Both Anti-icing Valves are secured closed.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Wing and Horizontal Stabilizer Anti-icing System (WHSAIS) - Deactivation (refer to AMM TASK 30-12-02-040-081-A/400).

Wing and Horizontal Stabilizer Anti-icing System (WHSAIS) - Reactivation (refer to AMM TASK 30-12-02-440-801-A/400).

Operational Procedures

None.

Placard Procedure

Placard Ice Protection panel 'WING AND HORIZONTAL STABILIZER SYSTEM INOP'.

Uncontrolled Copy when Printed

30-21-00 Nacelle Anti-icing System

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- Airplane is not operated in known or forecast icing conditions; and
- Affected side Anti-ice switch remains selected OFF and Anti-ice valve is confirmed closed.

Maintenance Procedures

None.

Operational Procedures

AFTER START (both engines):

- Set the affected engine anti-ice switch to OFF.
- Make sure the messages A-I E1 (2) ON and A-I E1 (2) FAIL do not show.

Placard Procedure

Placard Ice Protection panel 'ENGINE 1 (2) SYSTEM INOP'.

Uncontrolled Copy when Printed

30-41-00 Windshield Rain Repellent Coating

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided:

- a. No precipitation is forecasted during a period from one hour before until one hour after the estimated time of departure and arrival at the take-off and destination aerodromes; and
- b. Affected system is not part of the equipment required for the intended operation.

NOTE

1. Take-off and destination aerodromes include any take-off and destination alternate aerodromes required by the operational rules.
2. Condition (b) means that when low visibility conditions are known or forecasted, approach or take-off minima do not require their use. Check the Aircraft Flight Manual for minimum required equipment for approaches and low visibility take-offs.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard associated 'WINDSHIELD COATING INOP'.

Uncontrolled Copy when Printed

30-81-02 Ice Detector

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

On Ice Protection panel placard 'ICE DETECTOR INOP'.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 31 - Indicating / Recording System**31-22-01 Yoke Chronometer Pushbutton**

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

Both may be inoperative, provided FDUs chronometer command buttons are operative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-31-01 Cockpit Voice and Data Recorder (CVDR)**31-31-01-A**

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

The flight data recorder function or the cockpit voice recorder function may be inoperative provided:

- The other function, where required, is operative;
- The airplane does not exceed 8 further consecutive flights with the inoperative function; and
- A maximum of 72 hours have elapsed since the inoperative function was found.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard CVDR panel 'CVDR INOP'.

31-31-01-B

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

Any function may be inoperative provided:

- The affected function is not required, and
- The affected data is not required for monitoring purposes.

Maintenance Procedures

None.

Uncontrolled Copy when Printed

Operational Procedures

None.

Placard Procedure

Placard CVDR panel 'CVDR INOP'.

Uncontrolled Copy when Printed

31-32-00 Quick Access Recorder (QAR)

Category	Number Installed	Number Required
D	1	0

NOTE

Aircraft with QAR installed (CS-PHA thru CS-PHY).

Remarks / Exceptions

May be inoperative provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-33-01 Flight Data Recorder (FDR)

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

May be inoperative provided:

- The airplanes does not exceed 8 further consecutive flights with the FDR inoperative;
- A maximum of 72 hours have elapsed since FDR was found to be inoperative; and
- CVDR is operative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-41-07 Avionics Blower

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided:

- a. VCS is operative; and
- b. Cockpit evaporator fan is operative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-61-01 Flight Display Unit (FDU)**31-61-01-A Flight Display Units (FDU)**

Category	Number Installed	Number Required
C	3	2

NOTE

For airplanes equipped with G3000 Avionics System **except** Version 3305. - Applicable to CS-PHA (S/N 50500203) thru CS-PHY (S/N 50500725).

System Version is shown on the MFD Splash Page upon initialization.

Remarks / Exceptions

(O) For operations requiring a second in command, MFD may be inoperative provided:

- HSDB Switch is set to REV position;
- MFD Circuit Breakers are PULLED; and
- Check status page on PFD for engine messages.

NOTE

All MFD information are available on PFD through reversionary or split modes.

Maintenance Procedures

None.

Operational Procedures

According to MEL remarks.

For airplanes NOT equipped with G3000 Avionics System Version 3305. - Aircraft CS-PHA (S/N 50500203) thru CS-PHY (S/N 50500725).

NOTE

System Version is shown on the MFD Splash Page upon initialization. Refer to POH.

In case of MFD failure:

- On Maintenance panel set HSDB switch to REV position.
- Pull the MFD circuit breaker (A9 and A24).

NOTE

All MFD information is available on PFD through reversionary or split modes.

Placard Procedure

Placard 'MFD INOP'.

31-61-01-B Flight Display Units (FDU)

Category	Number Installed	Number Required
C	3	2

NOTE

For airplanes equipped with G3000 Avionics System Version 3305. - Applicable to CS-PJA (S/N 50500753) and on.

System Version is shown on the MFD Splash Page upon initialization.

Remarks / Exceptions

(O) For operations requiring a second in command, MFD may be inoperative provided:

- MFD Circuit Breakers are PULLED; and
- Check status page on PFD for engine messages.

NOTE

All MFD information is available on PFD through reversionary or split modes.

Maintenance Procedures

None.

Operational Procedures

According to MEL remarks.

For airplanes equipped with G3000 Avionics System Version 3305. - Aircraft CS-PJA (S/N 50500753) and on.

NOTE

System Version is shown on the MFD Splash Page upon initialization. Refer to POH.

In case of MFD failure:

- Pull the MFD circuit breaker (A9 and A24).

NOTE

All MFD information is available on PFD through reversionary or split modes.

Placard Procedure

Placard 'MFD INOP'.

Uncontrolled Copy when Printed

31-61-01-1 Buttons and Knobs

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not applicable for airplanes equipped with G3000 Avionics System.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

31-61-01-2 Charts and Maps Databases (ChartView and FliteCharts)

Category	Number Installed	Number Required
C	-	0

Remarks / Exceptions

May be out of currency provided:

- Current aeronautical information (e.g. portable EFB (see MEL item [46-00-01](#)) or paper charts) are available for the entire planned route to be flown; and
- Charts and maps database information is disregarded.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard associated database 'INOP'.

Uncontrolled Copy when Printed

31-61-01-3**31-61-01-3-A Electronic Checklist (ECL)**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

Electronic Check List (ECL) is alternatively available through EFB (iPad) and also through a Paper copy of the QRH on board.

Placard Procedure

None.

31-61-01-3-B Electronic Checklist (ECL)

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-61-01-4 Basemap

Category	Number Installed	Number Required
D	-	0

Remarks / Exceptions

May be inoperative provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

31-61-01-5**31-61-01-5-A Safe Taxi**

Category	Number Installed	Number Required
C	-	0

Remarks / Exceptions

(O) May be inoperative or out of date provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

SafeTaxi is alternatively available through EFB (iPad).

Placard Procedure

None.

Uncontrolled Copy when Printed

31-61-01-5-B Safe Taxi

Category	Number Installed	Number Required
D	-	0

Remarks / Exceptions

May be inoperative or out of date provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

31-61-01-6**31-61-01-6-A Airport Directory**

Category	Number Installed	Number Required
C	-	0

Remarks / Exceptions

(O) May be inoperative or out of date provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

Airport Directory is alternatively available through EFB (iPad).

Placard Procedure

None.

Uncontrolled Copy when Printed

31-61-01-6-B Airport Directory

Category	Number Installed	Number Required
D	-	0

Remarks / Exceptions

May be inoperative or out of date provided procedures do not require its use.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

31-61-01-07 IFR / VFR Charts

Category	Number Installed	Number Required
C	-	0

Remarks / Exceptions

May be out of date provided:

- Current aeronautical information (e.g. portable EFB (seem MEL item [46-00-01](#)) or paper charts) is available for the entire planned route to be flown; and
- Charts and maps database information is disregarded.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-62-02 Display Cooling Fans

Category	Number Installed	Number Required
C	3	0

Remarks / Exceptions

May be inoperative provided:

- a. VCS is operative; and
- b. Cockpit evaporator fan is operative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

31-61-04 GTC Cooling Fans

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

(O) One or both may be inoperative provided:

- a. Cockpit temperature does not exceed 30° C; and
- b. MFD ECS Synoptic is operative.

Maintenance Procedures

None.

Operational Procedures

On the MFD ECS Synoptic page check that the cockpit temperature does not exceed 30°C.

Placard Procedure

Placard GTC 1 (2) 'GTC 1 (2) COOLING FAN INOP'.

Uncontrolled Copy when Printed

31-62-00 SYNTHETIC VISION SYSTEM (SVS)

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 32 - Landing Gear

32-45-21 Brake Assembly Wear Indicator

Category	Number Installed	Number Required
A	4	2

Remarks / Exceptions

One per brake assembly may be missing or inoperative provided:

- The remaining brake wear indicator is checked each flight day; and
- Brake repairs are made within 2000 flight cycles.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 33 - Lights

33-10-00 Cockpit and Instruments Panel Lighting Systems

33-10-00-A

Category	Number Installed	Number Required
C	6	1

Remarks / Exceptions

Individual lights may be inoperative provided remaining lights are:

- Sufficient to clearly illuminate all required instruments, controls, and other devices for which they are provided;
- Positioned so that direct rays are shielded from flight crew members' eyes;
- Lighting configuration and intensity is acceptable to the flight crew; and
- Dome light operates normally.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-10-00-B

Category	Number Installed	Number Required
C	6	0

Remarks / Exceptions

May be inoperative for daylight operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-21-00 Passenger Upwash Lights**33-21-00-A**

Category	Number Installed	Number Required
D	14	0

Remarks / Exceptions

May be inoperative provided passengers are not carried.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-21-00-B

Category	Number Installed	Number Required
C	14	-

Remarks / Exceptions

Individual lights may be inoperative provided lighting is acceptable for the crew located in the cabin to perform their required duties.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-23-01 Passenger Warning Signs (FASTEN SEATBELT / TURN OFF PED, NO SMOKING)**33-23-01-A**

Category	Number Installed	Number Required
C	3	0

Remarks / Exceptions

(M)(O) One or more may be inoperative provided affected passenger seats, crew member seats, or lavatories from which at least one cabin sign is not readily legible are blocked and placarded 'DO NOT OCCUPY'.

Maintenance Procedures

Give guidance reference for a practical mean of blocking the use of the affected seat. Refer to AMM TASK 25-21-01-040-801-A.

Operational Procedures

According MEL remarks.

Alert the crew about the affected seats / lavatories.

Brief passengers, through the PA System, when the seat belts must be fastened and smoking is prohibited, as appropriate.

Placard Procedure

Placard the affected passenger seat with 'DO NOT OCCUPY'.

33-23-01-B

Category	Number Installed	Number Required
C	3	0

Remarks / Exceptions

(O) May be inoperative and the affected passenger seat(s), cabin crew seat(s), or lavatories may be occupied provided:

- The PA system is installed, operative, and can be clearly heard throughout the cabin during flight; and
- A procedure is used to notify passengers when the seat belts must be fastened and smoking is prohibited as appropriate.

Maintenance Procedures

None.

Operational Procedures

According MEL remarks.

Alert the crew about the affected seats / lavatories.

Brief passengers, through the PA System, when the seat belts must be fastened and smoking is prohibited, as appropriate.

Verbally notify the passengers when seat belts must be fastened and smoking is prohibited and turn off any portable electronic devices.

Placard Procedure

None.

33-23-01-C

Category	Number Installed	Number Required
C	3	0

Remarks / Exceptions

May be inoperative provided passengers are not carried.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-26-02 Courtesy Airstairs Step Lights

Category	Number Installed	Number Required
D	3	0

Remarks / Exceptions

May be inoperative provided alternate source of illumination is available during night operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-31-00 Baggage Compartment Lights

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-32-00 Service Compartment Lights

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-42-00 Taxi Lights

Category	Number Installed	Number Required
C	2	0

NOTE

For airplanes equipped with High Intensity Discharge (HID) Taxi Lights. - All tails listed in this MEL applicability.

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-44-01 Wing Inspection Lights**33-44-01-A**

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided a portable lamp / light of adequate capacity for wing and / or control surface inspection is available and used for night operations in icing conditions.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-44-01-B

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative for daylight operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-45-01 Red Beacon

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided anti-collision lights are operative and turned ON before engine operation.

Maintenance Procedures

None.

Operational Procedures

BEFORE START:

On the LIGHTS panel set the STROBE switch to ON.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-46-01 Logo Lights

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-47-00 Landing Lights**33-47-00-A**

Category	Number Installed	Number Required
C	2	0

NOTE

For airplanes equipped with HID Landing Lights. - All tails listed in this MEL applicability.

Remarks / Exceptions

One or more may be inoperative for daylight operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-47-00-B

Category	Number Installed	Number Required
B	2	1

NOTE

For airplanes equipped with HID Landing Lights. - All tails listed in this MEL applicability.

Remarks / Exceptions

One may be inoperative for night operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-48-00 Navigation Lights

Category	Number Installed	Number Required
C	4	0

Remarks / Exceptions

May be inoperative for daylight operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-50-01 Cabin Emergency Exit Lighting System

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Deleted in MEL Revision 01.

(See items [33-52-03](#), [33-52-07](#), [33-52-09](#), [33-52-11](#), [33-52-13](#) and [33-52-15](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-50-02 Exit Safety Mark

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Deleted in MEL Revision 01.

(See items [33-52-13](#) and [33-52-15](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-50-03 Exterior Emergency Lights (Over Wing)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Deleted in MEL Revision 01.

(See item [33-52-09](#)).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-03 Internal Flood Led Lights

Category	Number Installed	Number Required
B	3	2

Remarks / Exceptions

One may be inoperative provided LED Emergency Exit Markers are operative.

NOTE

Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-07 Airstairs Emergency Lights

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

One or more may be inoperative for daylight operations.

NOTE

Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-09 Overwing and Underwing Emergency Lights

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

One or more may be inoperative for daylight operations.

NOTE

Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-11 Floor Proximity Lights

Category	Number Installed	Number Required
B	6	3

Remarks / Exceptions

One or more may be inoperative provided:

- All lights marking right angle intersection (red lights) are operative; and
- The middle white light located between the red lights is operative.

NOTE

Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-13 Exit Identifier Sign

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

Up to 50% of the bulbs / LED may be inoperative in one or more signs provided the sign remains legible.

NOTE

- Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.
- Any sign with $\leq 50\%$ failed LEDs is considered degraded but may be dispatched under this relief, whereas a sign with $> 50\%$ failed LEDs is considered unserviceable and dispatch is not permitted.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33-52-15 Exit Marker Sign

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

Up to 50% of the bulbs / LED may be inoperative in one or more signs provided the sign remains legible.

NOTE

- Before opening the ATL, check if it is possible to successfully recharge the emergency batteries with a GPU for 45 min.
- Any sign with $\leq 50\%$ failed LEDs is considered degraded but may be dispatched under this relief, whereas a sign with $> 50\%$ failed LEDs is considered unserviceable and dispatch is not permitted.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 34 - Navigation

34-11-01 Integrated Electronic Standby Instrument (IESI)

34-11-01-1 Standby Attitude Indication

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided flight is conducted under day VMC with a visual horizon.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-11-01-2 STD Baro Button

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided BARO knob on the IESI operates normally.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-11-01-3 Brightness Buttons

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative provided brightness level is acceptable to the crew.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-11-01-4**34-11-01-4-A CAGE Button**

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

(O) May be inoperative provided IESI is reinitialised before each flight.

Maintenance Procedures

None.

Operational Procedures

Reinitialise IESI:

- Pull IESI PWR 1 (A27) and IESI PWR 2 (B13) circuit breakers on cockpit panel. This will switch off IESI.
- Reset IESI PWR 1 circuit breaker. This will switch on IESI and commence re-initialisation.
- When re-initialisation is complete (approximately 90 seconds), check that invalid field or flag is not displayed.
- Reset IESI PWR 2 circuit breaker and check that no changes occur in display.

Placard Procedure

None.

34-11-01-4-B CAGE Button

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided IESI attitude indication is considered inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-15-00 ADS Slip Correction

Category	Number Installed	Number Required
B	2	1

Remarks / Exceptions

May be inoperative provided airplane is not operated in RVSM airspace.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-21-00 Attitude and Heading Reference System (AHRS)

Category	Number Installed	Number Required
B	2	1

Remarks / Exceptions

(O) One may be inoperative provided:

- Operations are conducted under VFR;
- Operative AHRS is selected as attitude and heading source to both PFDs; and
- IESI attitude is operative.

NOTE

Autopilot is inoperative with one AHRS inoperative.

Maintenance Procedures

None.

Operational Procedures**BEFORE START:**

- On the PFD press the SENSOR softkey and then select the operative AHRS (1 or 2) as source of attitude and heading. The message BOTH ON AHRS 1 (2) will show on the reversionary sensor window (above CAS window).

Placard Procedure

None.

34-23-01 Standby Magnetic Compass System

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

May be inoperative provided:

- a. Both AHRS operate normally; and
- b. Flight is conducted under day VFR conditions.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-31-00 Radar Altimeter System

Category	Number Installed	Number Required
A	1	0

Additional Info: Aircraft are not equipped with Predictive Windshear function.

Remarks / Exceptions

(M)(O) May be inoperative provided:

- Radio altimeter is deactivated;
- Operations do not require its use;
- Terrain Awareness and Warning System-A (TAWS-A) is considered inoperative.
- Traffic Alert and Collision Avoidance System (TCAS II) is considered inoperative.
- Repairs are made within 6 flights or 25 flight hours or 2 calendar days, whichever occurs first; and
- Alternate procedures are established and used.

NOTE

TAWS (refer to MEL item [34-41-00](#)) and TCAS II (refer to MEL item [34-43-00](#)) must be considered inoperative.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Operational Procedures

Refer to Chief Pilot for guidance on alternate procedures to be established and used.

Placard Procedure

Placard both PFDs 'INOP'.

Uncontrolled Copy when Printed

34-32-00 VHF Navigation System**34-32-00-1 VOR**

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

One may be inoperative provided:

- Both ADF (where required) and DME is operative; and
- FMS database is updated.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-32-00-2**34-32-00-2-A ILS (or MLS)**

Category	Number Installed	Number Required
B	2	0

Remarks / Exceptions

May be inoperative under IFR operations provided approaches and missed approaches where navigation is based on ILS are not included in the flight plan.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-32-00-2-B ILS (or MLS)

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

May be inoperative under VFR operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-32-00-3**34-32-00-3-A Marker Beacon**

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

May be inoperative under IFR operations provided approach procedures do not require marker fixes.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-32-00-3-B Marker Beacon

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

May be inoperative under VFR operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-41-00 Terrain Awareness and Warning System (TAWS)

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

May be inoperative for a maximum of 6 flights or 2 calendar days, whichever occurs first, and no LPV approaches are flown.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-42-00 Weather Radar System**34-42-00-A**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided operations are conducted under daylight VMC.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-42-00-B

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided no thunderstorm or other potentially hazardous weather condition, regarded as detectable with the airborne weather detection system, are forecasted along the route.

NOTE

The route corresponds to any point on the route including diversions to reach alternate aerodromes required by the operational rules.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-42-00-1 Predictive Windshear (PWS) Function

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-43-00 Traffic Collision and Avoidance System (TCAS II)

Category	Number Installed	Number Required
A	1	0

Remarks / Exceptions

(M)(O) May be inoperative for a maximum of 10 calendar days provided:

- The system is deactivated and secured; and
- Operating procedures do not require its use.

NOTE

- With TCAS inoperative, it is not permitted to dispatch an aircraft in **Uncontrolled** Airspace.
- With Deconfliction Service provided by the UK ATS providers (in accordance with UK Flight Information Services CAP 774) flying with an inoperative TCAS is acceptable.
- Exempted are ferry flights into MX facilities to repair the TCAS system when the fleet MEL allows it. This requires CP release and should be conducted under Day / VMC conditions.
- Flights in German Airspace are not allowed with TCAS deferred for a period of more than three (3) days.
- Local authorities may impose a more restrictive rectification interval.
- Refer to Operations Manual Part C for possible additional airport specific restrictions.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

TCAS System - Deactivation (refer to AMM TASK 34-43-01-040-801-A/400).

TCAS System - Reactivation (refer to AMM TASK 34-43-01-440-801-A/400).

Operational Procedures

Plan flights in accordance with the following rules:

- With TCAS inoperative, it is not permitted to dispatch an aircraft in **Uncontrolled** Airspace.
- With Deconfliction Service provided by the UK ATS providers (in accordance with UK Flight Information Services CAP 774) flying with an inoperative TCAS is acceptable.
- Exempted are ferry flights into MX facilities to repair the TCAS system when the fleet MEL allows it. This requires CP release and should be conducted under day / VMC conditions.
- Flights in German airspace are not allowed with TCAS deferred for a period more than three (3) days.
- Local authorities may impose a more restrictive rectification interval.
- Refer to Operations Manual Part C for possible additional airport specific restrictions.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-46-00 SurfaceWatch

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-46-10 Stabilised Approach

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-47-00 Reactive Windshear Detection System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided alternate procedures are established and used.

Maintenance Procedures

None.

Operational Procedures

Refer to the OM-B Chapter 3 for guidance on alternate means to increase situational awareness regarding windshear conditions.

Refer to Standard Operating Procedures – SOP-4590 Section 4-00 Windshear Procedures and Techniques – for detailed operational procedures to avoid areas of known severe windshear and escape from unexpected windshear conditions.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-48-00 Runway Overrun Awareness and Alerting System (ROAAS)

Category	Number Installed	Number Required
C	1	0

NOTE

Aircraft with ROAAS installed.

Remarks / Exceptions

May be inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-51-00 DME System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided navigation procedures for the planned routes to be flown, including approach to an alternate airport, if required, are not dependent upon the use of the DME.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-52-00 ATC Transponder and Automatic Altitude Reporting Systems**34-52-00-A**

Category	Number Installed	Number Required
A	2	0

Remarks / Exceptions

(O) May be inoperative for a maximum of 5 flights provided:

- Permission is obtained from the Air Navigation Service Provider(s) along the route or any planned diversion; and
- Flight is conducted under VFR over routes navigated by reference to visual landmarks.

NOTE

Mode C function is required to be operative for RVSM operations.

Maintenance Procedures

None.

Operational Procedures

Obtain permission from the Air Navigation Service provider(s) along the route or any planned diversion.

Placard Procedure

None.

34-52-00-B

Category	Number Installed	Number Required
D	2	1

Remarks / Exceptions

Any in excess of those required for the intended route, may be inoperative.

NOTE

One must be operative for RVSM operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-52-00-1**34-52-00-1-A Automatic Dependent Surveillance - Broadcast (ADS-B) Out
Extended Squitter Transmissions**

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

One or more extended squitter transmissions may be inoperative when not required for the intended flight route.

NOTE

One (1) operative extended squitter transmission is required for European Airspace after 7 Dec 2020.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

**34-52-00-1-B Automatic Dependent Surveillance - Broadcast (ADS-B) Out
Extended Squitter Transmissions**

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

One or more extended squitter transmissions may be inoperative when required for the intended flight route.

NOTE

One (1) operative extended squitter transmission is required for European Airspace after 7 Dec 2020.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-52-02 ADS-B In Transmissions

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-53-00 Automatic Direction Finder (ADF)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided navigation procedures for the planned routes to be flown are not dependent upon the use of the ADF.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-56-00 Global Positioning System (GPS)

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

One may be inoperative provided limitations stated in AFM are observed.

NOTE

Refer to the following table:

PBN (RNAV /RNP) Operations Dispatch Conditions

PBN Nav Specification	Minimum Equipment Requirements
RNAV 1 (P-RNAV)	One (1) GPS.
RNAV 5 (B-RNAV)	One (1) GPS.
RNAV 10	Two (2) GPS.
RNP APCH (LNAV)	One (1) GPS.
RNP APCH (LNAV/VNAV)	One (1) Flight Director; and One (1) GPS.
RNP APCH (LPV)	One (1) GPS.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-57-00 Satellite Weather / Radio System

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-61-00 Flight Management System (FMS)**34-61-00-1****34-61-00-1-A Navigation Databases**

Category	Number Installed	Number Required
A	3	0

Remarks / Exceptions

(O) One or more may be out of date for a maximum of 10 calendar days provided:

- a. Conventional (Non-RNAV) departure, arrival, and approach procedures are used as an alternative to RNAV procedures which have been amended in the current database cycle;
- b. Before each flight, current aeronautical information is used to verify the database Navigation Fixes, the coordinates, frequencies, status (as applicable) and suitability of Navigation Facilities required for the intended route;
- c. Radio navigation aids, which are required to be flown for departure, arrival, and approach procedures and which have been amended in the current database cycle, are manually tuned and identified;
- d. No LPV approaches are flown;
- e. P-RNAV operations are not conducted.

NOTE

The rectification interval should always start from the day following the expiration date of the database.

Maintenance Procedures

None.

Operational Procedures**Navigation Databases**

- Refer to AFM for limitations.
- Cross-check each navigation waypoint along planned route with appropriate and current navigation charts or master flight document.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-61-00-1-B Navigation Databases

Category	Number Installed	Number Required
C	3	0

Remarks / Exceptions

(O) One or more may be out of date for the intended route where conventional (non-RNAV / RNP) navigation is sufficient, provided:

- a. Current aeronautical information (e.g. charts) is available for the entire route and for the aerodromes to be used; and
- b. Navigation database information is disregarded;
- c. Radio navigation aids, which are required to be flown for departure, arrival and approach procedures and which have been amended in the current database cycle, are manually turned and identified; and
- d. No LPV approaches are flown.

NOTE

The rectification interval should always start from the day following the expiration date of the database

Maintenance Procedures

None.

Operational Procedures**Navigation Databases**

- Refer to AFM for limitations.
- Cross-check each navigation waypoint along planned route with appropriate and current navigation charts or master flight document.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-61-00-1-C Navigation Databases

Category	Number Installed	Number Required
C	3	1

Remarks / Exceptions

(O) Any in excess of one may be inoperative provided:

- The operative database must be up to data for routes, departures, arrival, and approach procedures that require the use of Navigation Database for RNAV / RNP;
- The operative database is available and used by the flight crew member(s) responsible for navigation;
- Radio navigation aids, which are required to be flown for departure, arrival, and approach procedures are manually turned and identified.

NOTE

The rectification interval should always start from the day following the expiration date of the database.

Maintenance Procedures

None.

Operational Procedures**Navigation Databases**

- Refer to AFM for limitations.
- Cross-check each navigation waypoint along planned route with appropriate and current navigation charts or master flight document.

Placard Procedure

None.

34-61-00-2 Weight and Balance (W&B) Function

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-61-00-3 Performance Management (PERF) Function

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

34-61-00-4 Take-off and Landing Data (TOLD) Function

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-61-01 Flight Management System (FMS) Panel (For airplanes equipped with G1000 Avionics System)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not applicable (aircraft equipped with G3000 Avionics System).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 35 - Oxygen

35-01-01 Cylinder Pressure Gauge

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) May be inoperative provided:

- Gauge is inspected for no leakage; and
- Alternate procedures to measure the oxygen cylinder pressure for servicing must be established.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Cylinder Pressure Gauge - Deactivation (refer to AMM TASK 35-01-01-040- 801-A/400).

Cylinder Pressure Gauge - Reactivation (refer to AMM TASK 35-01-01-440- 801-A/400).

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-01-02 Pressure and Temperature Transducer

Category	Number Installed	Number Required
B	1	0

Remarks / Exceptions

(O) May be inoperative provided:

- a. Cylinder pressure gauge is operative; and
- b. Oxygen pressure is checked in cylinder before each flight.

Maintenance Procedures

None.

Operational Procedures

EXTERNAL INSPECTION:

- On cylinder pressure gauge, do the check of oxygen pressure according placard instructions.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-01-03 Overboard Discharge Indicator (Green Disc)**35-01-03-A**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

None.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-01-03-B

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) May be missing provided cavity is covered with speed tape.

Maintenance Procedures

Deactivate the Overboard Discharge Indicator disc. Refer to AMM TASK 35- 01-03-040-801-A.

Apply the speed tape according to AMM TASK 51-26-00-910-801-A.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-02-02 Cylinder Fill Port

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) May be inoperative provided:

- a. Valve is inspected for no leakage; and
- b. If oxygen cylinder refilling is necessary, it must be done outside airplane or cylinder replaced for a fully charged one.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Cylinder Fill Port - Deactivation (refer to AMM TASK 35-02-02-040-801-A/ 400).

Cylinder Fill Port - Reactivation (refer to AMM TASK 35-02-02-440-801-A/ 400).

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-10-01 Portable Breathing Equipment (PBE)

Category	Number Installed	Number Required
-	1	1

Remarks / Exceptions

Required for dispatch.

NOTE

Depending on the P/N installed, some anomalies do not imply that the PBE is inoperative

For **P/N 15-40F**, if the protective seal is broken, but the equipment is still vacuum sealed, the PBE is considered operative. Replace the seal at next maintenance opportunity.

For **P/Ns MR10035N, MR-10022NEMB** and **MR10021N** if the humidity Indicator is blue, the PBE is considered operative. If the indicator is pink, the PBE should be replaced.

For **P/N 802300-14**, the device is ready for use on the aircraft unless the transparent bag has lost vacuum or the colour of the moisture indicator has change to pink.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-11-02 Crew Oxygen Masks

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not applicable for two pilot operations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-21-00 Passenger Oxygen System**35-21-00-0A**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be inoperative provided the airplane is operated with no passengers.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

35-21-00-0B

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided flight is conducted at or below 10,000 ft.

Maintenance Procedures

None.

Operational Procedures

Conduct flight at or below 10,000 ft.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-21-00-1 Passenger Auto Deployment Function

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) (O) May be inoperative provided:

- Flight is conducted at or below 30,000 ft;
- Manual deployment function is verified operative once each flight day; and
- Both Air Bleed sources operate normally.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Passenger Oxygen System 1) Passenger Auto Deployment Function - Deactivation (refer to AMM TASK 35-21-00-040-801-A/400).

Passenger Oxygen System 1) Passenger Auto Deployment Function - Reactivation (refer to AMM TASK 35-21-00-440-801-A/400).

Operational Procedures

According to MEL remarks.

Placard Procedure

None.

Uncontrolled Copy when Printed

35-21-01 Passenger Oxygen Masks

Category	Number Installed	Number Required
C	7	0

Remarks / Exceptions

(O) May be inoperative provided affected seat is placarded and blocked to prevent occupancy.

Maintenance Procedures

None.

Operational Procedures

Put the inoperative passenger seat in the upright position.
Make sure that the seat does not block the emergency exit.

Placard Procedure

Placard the affected passenger seat - "DO NOT OCCUPY".

Uncontrolled Copy when Printed

Chapter 36 - Pneumatic

36-11-00 Engine Pneumatic Bleed System

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- Associated engine bleed remains selected OFF;
- The airplane is not operated in known or forecast icing conditions; and
- The airplane is operated at or below FL 250.

Maintenance Procedures

None.

Operational Procedures

AFTER START:

- For the bleed 1 system failure, set the BLEED 1 switch to OFF. Verify that the CAS message BLEED 1 OFF shows.
- For the bleed 2 system failure, set the BLEED 2 switch to OFF. Verify that the CAS message BLEED 2 OFF shows.
- Make sure CAS messages BLEED 1 (2) FAIL do not show.

Placard Procedure

Placard BLEED switch 'BLEED 1 (2) INOP'.

Uncontrolled Copy when Printed

36-11-01 Pressure Regulating Shut-off Valve (PRSOV)

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(M) (O) May be inoperative provided:

- Associated engine bleed remains selected OFF;
- Affected PRSOV is secured closed;
- The airplane is not operated in known or forecast icing conditions; and
- The airplane is operated at or below FL 250.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Pressure Regulating Shut-off Valve (PRSOV) - Deactivation (refer to AMM TASK 36-11-01-040-801-A/400).

Pressure Regulating Shut-off Valve (PRSOV) - Reactivation (refer to AMM TASK 36-11-01-440-801-A/400).

Operational Procedures

AFTER START:

- For the bleed 1 system failure, set the BLEED 1 switch to OFF. Verify that the CAS message BLEED 1 OFF shows.
- For the bleed 2 system failure, set the BLEED 2 switch to OFF. Verify that the CAS message BLEED 2 OFF shows.
- Make sure CAS messages BLEED 1 (2) FAIL do not show.

Placard Procedure

Placard BLEED switch 'BLEED 1 (2) INOP'.

Uncontrolled Copy when Printed

36-11-03 AMS Controller Channel

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

May be inoperative provided airplane is operated at or below FL 250.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard BLEED switch 'BLEED 1 (2) INOP'.

Uncontrolled Copy when Printed

36-11-04 Fan Air Valve (FAV)

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

May be inoperative provided associated engine pneumatic bleed system is considered inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

34-11-06 Cross Bleed Valve

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) (O) May be inoperative provided:

- XBLEED switch remains selected OFF;
- Cross bleed valve is secured closed; and
- The airplane is not operated in known or forecast icing conditions.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Cross Bleed Valve (XBV) - Deactivation (refer to AMM TASK 36-11-06-040- 801-A/400).

Cross Bleed Valve (XBV) - Reactivation (refer to AMM TASK 36-11-06-440- 801-A/400).

Operational Procedures

BEFORE START:

- For the bleed 1 system failure, set the XBLEED switch to OFF. Verify that the CAS message XBLEED SW OFF shows.

AFTER START:

- Make sure CAS messages XBLEED FAIL do not show.

Placard Procedure

None.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 38 - Water and Waste

38-30-00 Waste Disposal System

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(M) Individual components may be inoperative provided:

- Associated components are deactivated or isolated; and
- Associated system components are verified not to have leaks.

Maintenance Procedures

Refer to Deactivation / Reactivation Index into AMM Part II.

Waste Disposal System - Deactivation (refer to AMM TASK 38-30-00-040- 801-A/400).

Waste Disposal System - Reactivation (refer to AMM TASK 38-30-00-440- 801-A/400).

Operational Procedures

NOTE

Inform passengers that lavatory is inoperative and cannot be used.

Placard Procedure

Placard the lavatory cover 'LAVATORY INOP'.

Uncontrolled Copy when Printed

**THIS
PAGE
INTENTIONALLY
LEFT
BLANK**

Uncontrolled Copy when Printed

Chapter 44 - Cabin System

44-13-00 Passenger Intercom System

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

(O) May be inoperative provided Passenger Intercom System is deactivated.

Maintenance Procedures

None.

Operational Procedures

Pull the Passenger Intercom System circuit breaker (PAX Intercom) on the AFT CB Panel.

Placard Procedure

Placard 'Passenger Intercom System INOP'.

Uncontrolled Copy when Printed

Airborne Broadband Internet System (ABIS)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 46 - Information Systems

46-00-01 Electronic Flight Bag System (Portable EFB)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

NOTE

Portable EFBs are not part of aircraft configuration; therefore no MEL relief is available.

Please refer to OM-A regarding Portable EFBs dispatch considerations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

46-00-01-1 Chart Data Base Out of date (Portable EFB)

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

NOTE

Portable EFBs are not part of aircraft configuration; therefore no MEL relief is available.

Please refer to OM-A regarding Portable EFBs dispatch considerations.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

46-21-00 Flight Stream 510

Category	Number Installed	Number Required
-	-	-

Remarks / Exceptions

Not Installed.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 52 - Doors**52-10-00 Main Door****52-10-00-1 Keyed Lock**

Category	Number Installed	Number Required
D	1	0

Remarks / Exceptions

May be inoperative provided unlocked.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

52-11-00 Main Door Locking and Actuating Mechanism**52-11-00-1****52-11-00-1-A Latch Indication Visor**

Category	Number Installed	Number Required
C	8	7

Remarks / Exceptions

(O) One may be visually obstructed provided:

- The other Latches Visual Indicators are checked and confirmed closed; and
- The door is verified closed, latched, and locked before each flight.

Maintenance Procedures

None.

Operational Procedures

Check other Latches Visual Indicators and confirm they are closed.

Verify the door is closed, latched and locked before each flight.

Placard Procedure

None.

52-11-00-1-B Latch Indication Visor

Category	Number Installed	Number Required
D	8	0

Remarks / Exceptions

(M) (O) May be inoperative or missing provided:

- The door latches and locks indications are visible;
- Cavity is covered with polyurethane tape;
- Covered area is inspected daily to make sure there is no disbonding, missing or damaged tape; and
- The door is verified closed, latched and locked before each flight.

Maintenance Procedures

Apply speed tape to the main door lock and latch visors. Refer to AMM TASK 52-11-00-910-801-A.

Uncontrolled Copy when Printed

Operational Procedures

Check other Latches Visual Indicators and confirm they are closed.

Verify the door is closed, latched and locked before each flight.

Placard Procedure

None.

52-11-00-2 Lock Indication Visor

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

(M) (O) May be inoperative or missing provided:

- The door latches and locks indications are visible;
- Cavity is covered with polyurethane tape;
- Covered area is inspected daily to make sure there is no disbonding, missing or damaged tape; and
- The door is verified closed, latched and locked before each flight.

Maintenance Procedures

Apply speed tape to the main door lock and latch visors. Refer to AMM TASK 52-11-00-910-801-A.

Operational Procedures

Verify the door is closed, latched and locked before each flight.

Placard Procedure

None.

Uncontrolled Copy when Printed

52-31-00 Forward Baggage Doors**52-31-00-1 Keyed Lock**

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

May be inoperative provided unlocked.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

52-32-00 AFT Baggage Doors**52-32-00-1 Keyed Lock**

Category	Number Installed	Number Required
D	2	0

Remarks / Exceptions

May be inoperative provided it is unlocked.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

52-53-00 Keyed Locks

Category	Number Installed	Number Required
D	5	0

NOTE

EMB-505 Keyed Locks covered by this relief:

1. FUEL DOOR (WING-TO-FUS.);
2. FWD FAIRING DOOR;
3. HYD. COMPARTMENT DOOR;
4. BATTERY COMPARTMENT DOOR;
5. FUEL DRAIN DOOR (WING-TOFUS.).

Remarks / Exceptions

(O) May be inoperative in the UNLOCKED position provided associated door or access panel is verified CLOSED and LATCHED before each flight.

Maintenance Procedures

None.

Operational Procedures

According to MEL remarks.

Verify the affected door or access panel is CLOSED and LATCHED before each flight.

Perform a visual inspection before each flight inside the access panel with keyed lock mechanism inoperative to verify it does not prevent properly closing or latching.

Placard Procedure

None.

Uncontrolled Copy when Printed

52-70-00 Door Warning System (CAS Indication)**52-70-00-1 Passenger Door Warning System (CAS Indication)**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided, before each flight:

- The door is verified closed and latched;
- The 8 latches visual indicators are checked and confirmed closed; and
- The 2 lock indicator flags are checked and confirmed closed.

Maintenance Procedures

None.

Operational Procedures**Passenger Door:**

- Carefully check the door closed and locked before each departure. Internal handle must be at full down position. Refer to Pilot's Operating Handbook (POH) Section 6-01-45 for inspection of green indications of locks and latches.

Placard Procedure

None.

52-70-00-2 Forward Baggage Door Warning System (CAS Indication)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided, before each flight:

- The affected door is verified closed and latched; and
- Locking latches are inspected for correct engagement.

Maintenance Procedures

None.

Operational Procedures**Baggage Doors:**

- Visually inspect affected door to ensure it is closed, latched, and locked before each departure. Door external side must be verified flush with fuselage skin. Latches must be verified flush with door skin.

Placard Procedure

None.

52-70-00-3 Aft Baggage Door Warning System (CAS Indication)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided, before each flight:

- The affected door is verified closed and latched; and
- Locking latches are inspected for correct engagement.

Maintenance Procedures

None.

Operational Procedures**Baggage Doors:**

- Visually inspect affected door to ensure it is closed, latched, and locked before each departure. Door external side must be verified flush with fuselage skin. Latches must be verified flush with door skin.

Placard Procedure

None.

52-70-00-4 Emergency Door Warning System (CAS Indication)

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

(O) May be inoperative provided the door is verified closed and latched before each flight.

Maintenance Procedures

None.

Operational Procedures**Emergency Door:**

- Verify the door is closed and latched before each departure.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 73 - Engine Fuel and Control

73-21-01 Full Authority Digital Electronic Control (FADEC)

73-21-01-1 System Faults

Category	Number Installed	Number Required
A	2	0

Remarks / Exceptions

May be dispatched with ENGINE SHORT DISPATCH indication, provided repairs are made within 125 flight hours. No extensions are authorised.

NOTE

The intent of the 0 in the number required for dispatch column is to show that dispatch is allowed with some faults present in both FADECs.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard MFD 'FADEC 1 (2) DISP BY MEL / TLD'.

73-21-01-2 System Faults - LONG DISPATCH

Category	Number Installed	Number Required
A	2	0

Remarks / Exceptions

May be dispatched with ENGINE LONG DISPATCH indication, provided repairs are made in the next 630 flight hours inspection check. No extensions are authorised.

NOTE

The intent of the 0 in the number required for dispatch column is to show that dispatch is allowed with some faults present in both FADECs.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

Placard MFD 'FADEC 1 (2) DISP BY MEL / TLD'.

Uncontrolled Copy when Printed

73-33-00 Fuel Flow Indication

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

(O) May be inoperative provided:

- a. Both wings Fuel Quantity Indications on EIS are operative;
- b. Used Fuel information on synoptic Fuel Page; and
- c. Remaining Fuel information on FMS are not used by flight crew.

Maintenance Procedures

None.

Operational Procedures

Do not rely on FUEL USED information displayed on FUEL synoptic page or in remaining fuel information on FMS.

Placard Procedure

Placard MFD 'FFLOW 1 (2) INOPERATIVE'.

Uncontrolled Copy when Printed

73-34-01 Fuel Filter Impending Bypass Sensor

Category	Number Installed	Number Required
A	2	1

Remarks / Exceptions

(M) One may be inoperative for one flight provided:

- After affected engine shut down the E1 (2) FUEL IMP BYP message is still displayed;
- All engine parameters are operative; and
- Fuel filter is inspected for no contamination.

Maintenance Procedures

According to MEL remarks.

Inspect fuel filter for no contamination (refer to AMM TASK 73-11-01/600).

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

Chapter 74 - Ignition

74-00-00 Ignition Channels

Category	Number Installed	Number Required
C	4	2

Remarks / Exceptions

(O) One channel per engine may be inoperative provided associated ENG IGNITION switch is selected ON for ground starts.

Maintenance Procedures

None.

Operational Procedures

BEFORE START:

- Set the affected ENG IGNITION to ON.

AFTER START:

- Set the affect ENG IGNITION to AUTO.

Placard Procedure

Placard the affected engine switch "CHANNEL A (B) INOP".

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 77 - Engine Indicating

77-21-03 TT0 Inlet Total Air Temperature Sensor Heating System

Category	Number Installed	Number Required
C	2	1

Remarks / Exceptions

One may be inoperative provided airplane is not operated in known or forecast icing conditions.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Chapter 79 - Oil

79-00-01 Chip Detected

Category	Number Installed	Number Required
A	2	1

Remarks / Exceptions

One may be dispatched with system faults provided:

- Indication in one engine only;
- E1 (2) CHIP DETECTED message is displayed on engine maintenance page;
- No engine chip indication on either engine in the previous 50 engine flight hours;
- All engine parameters be operative;
- No engine oil filter impending bypass indication (E1 (2) OIL IMP BYP message not displayed); and
- Repairs are made within 10 engine flight hours or in 2 flights after initial indication, whichever occurs first.

NOTE

Extensions are not authorised.

Maintenance Procedures

None.

Operational Procedures

NOTE

Make sure CAS messages E1 (2) OIL IMP BYP do not show.

Placard Procedure

Placard MFD 'Chip Detected INOP'.

Uncontrolled Copy when Printed

79-34-00 Oil Filter Impending Bypass Indicator

Category	Number Installed	Number Required
A	2	1

Remarks / Exceptions

(M) May be inoperative in one engine only, provided:

- After affected engine shut down the E1 (2) OIL IMP BYP message is still displayed;
- All engine parameters be operative;
- No engine chip indication on either engine in the previous 50 engine flight hours;
- Oil level is checked at maximum;
- Oil filter is checked free of contamination by a visual inspection prior to the first flight under this item and then daily prior to the first flight of the day; and
- Repairs are made within 10 calendar days.

NOTE

Extensions are not authorised.

Maintenance Procedures

Check the oil level on the oil sight glass according to AMM TASK 12-12-00- 210-801-A.

Do the oil filter visual inspection on the oil filter module according to AMM TASK 79-21-00-214-801-A.

Operational Procedures

None.

Placard Procedure

Placard MFD 'Oil Impending Bypass Indicator INOP'.

Uncontrolled Copy when Printed

79-35-01 Chip Detector Sensor

Category	Number Installed	Number Required
A	2	1

Remarks / Exceptions

(M) May be inoperative in one engine only, provided:

- E1 (2) CHIP DETECTED message not displayed on engine maintenance page;
- No engine chip indication on either engine in the previous 50 engine flight hours;
- All engine parameters be operative;
- No engine oil filter impending bypass indication (E1 (2) OIL IMP BYP message not displayed);
- Affected Magnetic Chip Detector is checked for no debris prior to the first flight under this item and then every 10 calendar days, or 10 flight hours, whichever occurs first; and
- Repairs are made within 30 calendar days.

NOTE

Extensions are not authorised.

Maintenance Procedures

To check debris on the Magnetic Chip Detector Sensor refer to AMM TASK 79-35-01 / 500.

Operational Procedures**NOTE**

Make sure CAS messages E1 (2) OIL IMP BYP do not show.

Placard Procedure

Placard MFD 'Chip Detector INOP'.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

CAS Messages List

INTRO Introduction

The main purpose of the CAS Message List is to provide a quick mean to cross-reference a CAS message with the possible associated MEL items.

This list presents all CAS messages for the EMB-505, and is divided according to the following columns:

- **TYPE:** indicates whether the message is classified as Warning (W), Caution (C), Advisory (A) or Status (S);
- **MESSAGE:** provides the CAS messages on alphabetical order;
- **POSSIBLE FAILED COMPONENTS:** among all possible failure causes related to the CAS message, it indicates the components that when inoperative may be dispatched in accordance with the MEL. Troubleshooting the affected system to identify the failed component is required;
- **DISPATCH CONDITION:** indicates the MEL items or dispatch condition associated to the CAS message. A 'Not Applicable' indicates that the MEL is not the applicable document to be used, i.e., the CAS message reflects a transient condition or it would normally be mitigated by applicable crew or maintenance procedures. When no component is indicated and is associated with a 'No Dispatch', no dispatch is allowed whichever failure is causing the CAS message;
- **REMARKS:** includes a note on the actual system failure condition, i.e., if the system has failed (actual failure) or it is still operative and its monitoring system has failed (false indication).

To find out the dispatch condition related to the CAS messages presented, the Fault Isolation Manual (FIM) shall be used for proper troubleshooting of the associated messages. This Section does not replace troubleshooting actions and proper application of the approved MEL.

NOTE

The messages displayed on the AFD display shall be used for troubleshooting purposes.

Uncontrolled Copy when Printed

WCAS Warning CAS Messages

Type	Message	Possible Failed Components	Dispatch Condition	Remarks
WARNING	BAG SMK	-	NO DISPATCH	Actual Warning
		Baggage Compartment Smoke Detection System	MEL 26-15-00	False Warning
	CABIN ALTITUDE HI	Cabin Pressure Control System	MEL 21-31-00	-
		Outflow Valve (OFV)	MEL 21-31-02	-
		Negative Pressure Relief Valve (NPRV)	MEL 21-31-03	-
		Pressure Relief Valve (PRV)	MEL 21-31-04	-
	DOOR EMER OPEN	-	NO DISPATCH	Actual Warning
		Door Warning System	MEL 52-70-00	False Warning
	DOOR PAX OPEN	-	NO DISPATCH	Actual Warning
		Doors Warning System	MEL 52-70-00	False Warning
	E1(2) FIRE	-	NO DISPATCH	-
	E1(2) OIL LO PRES	-	NO DISPATCH	-
	ELEC EMERGENCY	-	NO DISPATCH	-
	ELEC XFR FAIL	-	NO DISPATCH	-
	LG LEVER DISAG	-	NO DISPATCH	-
	NO TO CONFIG	-	NO DISPATCH	-

Uncontrolled Copy when Printed

CCAS Caution CAS Messages

Type	Message	Possible Failed Components	Dispatch Condition	Remark
CAUTION	ADS 1(2) FAIL	-	NO DISPATCH	-
	ADS 1(2) HTR FAIL	-	NO DISPATCH	-
	AHRS 1(2) FAIL	AHRS	MEL 34-21-00	-
	A-I E1(2) FAIL	Nacelle Anti-icing System	MEL 30-21-00	-
	A-I LO CAPACITY	-	Not Applicable	-
	A-I WINGSTB FAIL	Wing and Horizontal Stabilizer Anti-icing System (WHSAIS)	MEL 30-12-00	-
	A-I WINGSTB INHB	-	Not Applicable	-
	A-I WINGSTB LEAK	-	NO DISPATCH	-
	AMS CTRL FAIL	-	NO DISPATCH	-
	ANTI-SKID FAIL	-	NO DISPATCH	-
	AP FAIL	Autopilot System	MEL 22-10-00	-
	AP PITCH MISTRIM	-	Not Applicable	-
	AP ROLL MISTRIM	-	Not Applicable	-
	AT FAIL	Autothrottle Channels	MEL 22-30-00	-
	AUDIO PNL 1(2) FAIL	-	NO DISPATCH	-
	AURAL WRN FAIL	-	NO DISPATCH	-
	AUTO PTRIM FAIL	Autopilot System	MEL 22-10-00	-
	BAG SMK FAIL	Baggage Compartment Smoke Detection System	MEL 26-15-00	-
	BARO MISCOMP	-	Not Applicable	Baro setting as applicable.
	BATT 1(2) OFF BUS	-	NO DISPATCH	-
	BATT DISCHARGE	-	NO DISPATCH	-

Uncontrolled Copy when Printed

CAUTION	BATT EXCEEDANCE	-	NO DISPATCH	-
	BLEED 1(2) FAIL	Engine Pneumatic Bleed System	MEL 36-11-00	-
		Pressure Regulating Shut-off Valve (PRSOV)	MEL 36-11-01	-
		Fan Air Valves (FAV)	MEL 36-11-04	-
	BLEED 1(2) LEAK	-	NO DISPATCH	-
	BLEED 1(2) OVERPRES	Pressure Regulating Shut-off Valve (PRSOV)	MEL 36-11-01	-
	BRK FAIL	-	NO DISPATCH	-
	CAB DELTA-P FAIL	Cabin Pressure Control System	MEL 21-31-00	-
		Outflow Valve (OFV)	MEL 21-31-02	-
		Negative Pressure Relief Valve (NPRV)	MEL 21-31-03	-
		Pressure Relief Valve (PRV)	MEL 21-31-04	-
		Pressure Relief Valve (PRV) Static Pressure Line	MEL 21-31-05	-
	CLUTCH PIT FAIL	-	NO DISPATCH	-
	CLUTCH ROL FAIL	-	NO DISPATCH	-
	CLUTCH VNTL FAIL	-	NO DISPATCH	-
	CLUTCH YAW FAIL	-	NO DISPATCH	-
	CONFIG MDL FAIL	-	NO DISPATCH	-
	DOORBAG AFT OPEN	-	NO DISPATCH	Actual Caution
		Doors Warning System	MEL 52-70-00	False Caution
	DOORBAG LH OPEN	-	NO DISPATCH	Actual Caution

Uncontrolled Copy when Printed

CAUTION		Doors Warning System	MEL 52-70-00	False Caution
	DOORBAG RH OPEN	-	NO DISPATCH	Actual Caution
		Doors Warning System	MEL 52-70-00	False Caution
	DUCT 1(2) OVERTEMP	-	NO DISPATCH	-
	E1(2) CTRL FAULT	-	NO DISPATCH	-
	E1(2) FAIL	-	NO DISPATCH	-
	E1(2) FIRE DET FAIL	-	NO DISPATCH	-
	E1(2) FIREX FAIL	-	NO DISPATCH	-
	E1(2) FUEL IMP BYP	-	NO DISPATCH	-
	E1(2) TLA FAIL	-	NO DISPATCH	-
	E1(2) TT0 HTR FAIL	TT0 Inlet Total Air Temperature Heating System	MEL 77-21-03	-
	E1 (2) TT0 PROBE ICE	-	Not Applicable	-
	EBAY LEAK	-	NO DISPATCH	-
	EBAY OVHT	-	NO DISPATCH	-
	ECS 1(2) VALVE FAIL	Flow Control Shut-off Valves (FCSOV)	MEL 21-21-01	-
	EMER BRK LO PRES	-	NO DISPATCH	-
	EMER LT NOT ARM	-	Not Applicable	-
	ENG NO TO DATA	-	Not Applicable	-
	ENG TLA NOT TOGA	-	Not Applicable	-
	FLAP FAIL	-	NO DISPATCH	-
	FMS LANDING DISAG	-	Not Applicable	-
	FMS TAKE-OFF DISAG	-	Not Applicable	-
	FUEL 1(2) LO LEVEL	-	NO DISPATCH	-

Uncontrolled Copy when Printed

CAUTION	FUEL 1(2) LO PRES	-	NO DISPATCH	-
	FUEL 1(2) LO SOV FAIL	-	NO DISPATCH	-
	FUEL IMBALANCE	-	NO DISPATCH	-
	FUEL PUMP 1(2) FAIL	-	NO DISPATCH	-
	FUEL XFEED FAIL	-	NO DISPATCH	-
	GEN 1(2) OFF BUS	-	NO DISPATCH	-
	GEN OVLD	-	NO DISPATCH	-
	GEN START FAULT	-	NO DISPATCH	-
	GIA 1(2) FAIL	-	NO DISPATCH	-
	GIA 1(2) OVHT	-	NO DISPATCH	-
	GND SPLR FAIL	-	NO DISPATCH	-
	GTC 1(2) OVHT	-	NO DISPATCH	-
	HYD HI TEMP	-	NO DISPATCH	-
	HYD LO PRES	-	NO DISPATCH	-
	HYD SOV 1(2) FAIL	-	NO DISPATCH	-
	ICE CONDITION	-	Not Applicable	-
	LG WOW SYS FAIL	-	NO DISPATCH	-
	MFD CONFIG	Flight Display Units (FDU)	MEL 31-61-01	-
	MFD FAULT	Flight Display Units (FDU)	MEL 31-61-01	-
	MFD OVHT	Flight Display Units (FDU)	MEL 31-61-01	-
	OXY LO PRES	-	NO DISPATCH	Actual Caution
		Pressure and Temperature Transducer	MEL 35-01-02	False Caution
	PARK BRK NOT REL	-	Not Applicable	-
	PAX OXY NO PRES	Passenger Oxygen System	MEL 35-21-00	-
	PFD 1(2) CONFIG	Primary Flight Displays (PFD)	MEL 31-61-01	Only PFD 2 may be failed

CAUTION	PFD 1(2) FAULT	Primary Flight Displays (PFD)	MEL 31-61-01	Only PFD 2 may be failed
	PFD 1(2) OVHT	Primary Flight Displays (PFD)	MEL 31-61-01	Only PFD 2 may be failed
	PRESN AUTO FAIL	Cabin Pressure Control System	MEL 21-31-00	-
	PTRIM BKP FAIL	-	NO DISPATCH	-
	PTRIM NML FAIL	-	NO DISPATCH	-
	PUSHER FAIL	-	NO DISPATCH	-
	PUSHER OFF	-	NO DISPATCH	-
	RUD GUST LOCKED	Rudder Gust Lock (RGL)	MEL 27-70-00	-
	RUD OVERBOOST	-	NO DISPATCH	-
	STBY HTR FAIL	-	NO DISPATCH	-
	STEEP FAIL	-	NO DISPATCH	-
	SURFWATCH NODATA	-	Not Applicable	-
	SWPS FAIL	-	NO DISPATCH	-
	SWPS FAULT	-	NO DISPATCH	-
	SWPS UNTESTED	-	Not Applicable	-
	TCAS FAIL	Traffic Collision and Avoidance System (TCAS II)	MEL 34-43-00	-
	WSHLD 1(2) HTR FAIL	-	NO DISPATCH	-
	XPDR FAIL	Transponder	MEL 34-52-00	-
	XPDR IN STBY	-	Not Applicable	-
	YD FAIL	Yaw Damper Function	MEL 22-10-02	-
	YD MISTRIM	-	Not Applicable	-

Uncontrolled Copy when Printed

ACAS Advisory CAS Messages

Type	Message	Possible Failed Components	Dispatch Condition	Remarks
ADVISORY	ADS HTR SW ON	-	Not Applicable	-
	ADS 1(2) SLIP FAIL	ADS Slip Correction	MEL 34-15-00	-
	ADS-B IN AIR NOT AVAIL	ADS-B IN Function	MEL 34-52-02	-
	ADS-B IN SURF NOT AVAIL	-	Not Applicable	-
	ADS-B NOT AVAIL	ADS-B System	MEL 34-52-00	-
	ADS-B OUT NOT AVAIL	ADS-B Out Function	MEL 34-52-00	-
	AHRS 1(2) FAULT	AHRS	MEL 34-21-00	-
	A-I E1(2) FAULT	-	NO DISPATCH	-
	A-I E1(2) ON	-	Not Applicable	-
	A-I WINGSTB ARM	-	Not Applicable	-
	A-I WINGSTB ON	-	Not Applicable	-
	AMS CTRL FAULT	AMS Controller Channel	MEL 36-11-03	-
	AT FAULT	Autothrottle Channels	MEL 22-30-00	-
	AT HOLD PROT FAIL	Autothrottle Hold Mode	MEL 22-30-00-01	-
	ATC DLK FAIL	CPDLC System	MEL 23-24-00	-
	AUDIO PNL 1(2) FAULT	-	NO DISPATCH	-
	AURAL WRN FAULT	Cockpit Speakers	MEL 23-51-02	-
	AVNX FAN FAIL	Avionics Blower	MEL 31-41-07	-
	BAG SMK FAULT	Baggage Compartment Smoke Detection System	MEL 26-15-00	-
	BLEED 1(2) OFF	-	Not Applicable	-
	CLUTCH PIT PASS	-	Not Applicable	-
	CLUTCH PIT PROG	-	Not Applicable	-

Uncontrolled Copy when Printed

ADVISORY	CLUTCH ROL PASS	-	Not Applicable	-
	CLUTCH ROL PROG	-	Not Applicable	-
	CLUTCH VNLT PASS	-	Not Applicable	-
	CLUTCH VNLT PROG	-	Not Applicable	-
	CLUTCH YAW PASS	-	Not Applicable	-
	CLUTCH YAW PROG	-	Not Applicable	-
	CSC FAIL	Current Speed Control Function	MEL 22-10-03	-
	DC BUS 1(2) OFF	-	NO DISPATCH	-
	DOOR REFUEL OPEN	-	NO DISPATCH	-
	E1(2) CHIP DETECTED	Chip detected	MEL 79-00-01	Indication in one engine only
		Chip Detector Sensor	MEL 79-35-01	
	E1(2) FADEC FAULT	-	NO DISPATCH	-
	E1(2) OIL IMP BYP	Oil Filter Impending Bypass Indicator	MEL 79-34-00	-
	ECS 1(2) OFF	-	Not Applicable	-
	ELEC SYS FAULT	-	NO DISPATCH	-
	EMER BUS OFF	-	NO DISPATCH	-
	ENG EXCEEDANCE	-	NO DISPATCH	-
	ENG FIREX DISCH	-	Not Applicable	-
	ENG NO DISPATCH	-	NO DISPATCH	-
	FLAP NOT AVAIL	-	NO DISPATCH	-
	FANS FAIL	CPDLC System	MEL 23-24-00	-
	FUEL 1(2) FEED FAULT	-	NO DISPATCH	-
	FUEL 1(2) PSW FAIL	-	NO DISPATCH	-
	FUEL EQUAL	-	Not Applicable	-

Uncontrolled Copy when Printed

ADVISORY	FUEL PUMP 1(2) FAIL	-	NO DISPATCH	-
	GEA 1(2)(3) FAIL	-	NO DISPATCH	-
	GPU CONNECTED	-	Not Applicable	-
	GSD 1(2) FAIL	-	NO DISPATCH	-
	GTC 1(2) FAN FAIL	GTC Cooling Fans	MEL 31-61-04	-
	GTC 1(2) FAULT		NO DISPATCH	
	HSDB FAULT	-	NO DISPATCH	-
		Satellite Weather/Radio System	MEL 34-57-00	-
	HSDB SW REV POS	-	Not Applicable	-
	HYD SYS FAULT	-	NO DISPATCH	
	ICE DET FAIL	Ice Detector	MEL 30-81-02	-
	MFD FAN FAIL	Display Cooling Fans	MEL 31-61-02	-
	NAV 1(2) FAIL	VOR / LOC	MEL 34-32-00	-
	OXY SW NOT AUTO	-	Not Applicable	-
	PFD 1(2) FAN FAIL	Display Cooling Fans	MEL 31-61-02	-
	PREDCT WSHEAR NOT AVAIL	Predictive Windshear Function	MEL 34-42-00	
	PTRIM LO RATE	-	NO DISPATCH	-
	PTRIM SW 1(2) FAIL	Yoke Pitch Trim Switch	MEL 27-34-01	-
	RALT FAIL	Radar Altimeter System	MEL 34-31-00	-
	RAM AIR FAIL	-	NO DISPATCH	-
	ROAAS FAIL	Runway Overrun Awareness and Alerting System	MEL 34-48-00	-
	ROAAS INHIB	-	Not Applicable	-
	ROAAS NO DATA	-	Not Applicable	-
	RUD BOOST FAIL	-	NO DISPATCH	-
	SHED BUS OFF	-	NO DISPATCH	-

Uncontrolled Copy when Printed

ADVISORY	SPDBRK SW DISAG	-	NO DISPATCH	-
	SPOILER FAULT	-	NO DISPATCH	-
	STAB APPR FAIL	Stabilised Approach Function	MEL 34-46-10	-
	STAB APPR INHIB	-	Not Applicable	-
	STBY BARO NOCOMP	-	NO DISPATCH	-
	STEEP NOT AVAIL	-	NO DISPATCH	-
	SURFWATCH FAIL	SurfaceWatch Function	MEL 34-46-00	-
	SURFWATCH INHIB	-	Not Applicable	-
	SURFWATCH NO DATA	-	Not Applicable	-
	SWPS ICE SPEED	-	Not Applicable	-
	VENTRAL RUD FAIL	-	NO DISPATCH	-
	VHF3 FAIL	VHF Communication System	MEL 23-12-00	-
	WSHEAR NOT AVAIL	Reactive Windshear Detection System	MEL 34-47-00	-
	XBLEED FAIL	Cross Bleed Valve	MEL 36-11-06	-
	XBLEED SW OFF	-	Not Applicable	-
	XPDR FAULT	Transponder	MEL 34-52-00	-

Uncontrolled Copy when Printed

SCAS Status CAS Messages

Type	Message	Possible Failed Components	Dispatch Condition	Remarks
STATUS	ENG 1(2) SHORT DISPATCH	FADEC	MEL 73-21-01-1	Presented on STATUS Page on MFD.
	ENG 1(2) LONG DISPATCH	FADEC	MEL 73-21-01-2	Presented on STATUS Page on MFD.

Uncontrolled Copy when Printed

Passenger Convenience Items (PCI) List

INTRO Introduction

Passenger Convenience Items (PCI) are items installed on the airplane as part of the original type certification, supplemental type certificate, or other form of alteration that have no effect on the safe operation of flight and would not be required by the applicable certification rules or operational rules. The PCIs are those items that, if inoperative, damaged, or missing, have no effect on the airplane's ability to be operated safely under all operational conditions.

These non-essential items may be installed in areas including, but not limited to, the passenger compartment, flight deck area, service areas, cargo areas, crew rest areas, lavatories, and galley areas.

NOTE

PCI must not pose any safety hazard to occupants and must not impede emergency egress. In some cases, deactivation, removal, or other Maintenance Procedures may be associated to a given item to complement this PCI list.

Uncontrolled Copy when Printed

PCI LIST - CABIN

DESCRIPTION	REMARKS
Forward Cabin Curtain	May be damaged, missing, or inoperative.
Individual Handset	May be inoperative or missing.
Cabin Mirrors	May be damaged provided it does not present hazard to PAX / crew or impede emergency egress.
Cabin Windows Shade	May be damaged or inoperative.
Sidewall Lining Panels	May be damaged provided: a. Holes components are not allowable; and b. Cracks are acceptable since correct panel mounting is not affected. (M) Check damage does not pose any safety hazard to occupants and must not impede emergency egress.
	NOTE Damage at emergency window region and free panel is not allowable.
Carpet / Floor Coverings	May be soiled, worn, or damaged.
Passenger Seat Trim	May be missing or damaged or worn provided seat operation is not affected.
Passenger Seat Upholstery	May be soiled, worn, or damaged.
Seat Belt Extensions	May be missing or damaged provided it is not used.
Individual Gasper Outlets	May be inoperative or damaged.
Interior Panel (Ceiling, Sideledge, Dado Panel)	May be damaged provided: a. Holes components are not allowable; and b. Cracks are acceptable since correct panel mounting is not affected. (M) Check damage does not pose any safety hazard to occupants and must not impede emergency egress.
Magazine Rack / Restraint	May be missing or damaged provided it is not used.
Reading Lights	May be inoperative or missing.
Speaker(s) Cover(s) (Grill)	May be damaged, missing, or inoperative.
Jack(s)	May be damaged, missing, or inoperative.
Passenger Seat Volume Control	May be damaged, missing, or inoperative.

Uncontrolled Copy when Printed

Speaker(s)	May be inoperative.
IFE (In-Flight Entertainment)	May be inoperative.
Exterior Placards and / or Markings	Required placards will be identified by maintenance and may be degraded but legible.
	NOTE Each placard must be evaluated considering the applicable regulations.
Interior Placards and / or Markings	Non-required placards may be missing or damaged. Required placards (cabin safety, doors, and emergency equipment) will be identified by maintenance and may be degraded but legible.
	NOTE Each placard must be evaluated considering applicable regulations.
Divan Cargo Nets	Not Installed.
Divan Stowage Compartment	Not Installed.
Foldable Table	May be damaged or inoperative provided secured in the stowed position.
	NOTE If the finished panel cannot be secured in the stowed position, they must be removed from the mechanism.

PCI LIST - GALLEY

DESCRIPTION	REMARKS
Hot Jug	May be damaged, missing, or inoperative.
Internal Lights	May be damaged or missing.
Waste Container	May be missing or damaged provided it is not used.

Uncontrolled Copy when Printed

PCI LIST - LAVATORY

DESCRIPTION	REMARKS
Aft Pocket Door	May be damaged, loose, or inoperative provided it does not present hazard to PAX / crew or impede emergency egress.
	NOTE The doors must be locked in open position.
Air Grill Covers	May be damaged.
Privacy Curtains	Not Installed.
Interior Wall Trim / Coverings (Ceiling, Sidewall, Aft Divider)	May be damaged provided: a. Holes components are not allowable; and b. Cracks are acceptable since correct panel mounting is not affected. (M) Check damage does not pose any safety hazard to occupants and must not impede emergency egress.
Lights	May be missing or damaged.
	NOTE For Advisory signs, the belted toilet cannot be used.
Paper Towel or Tissue Holder	May be missing or damaged.
Mirror	May be damaged provided it does not present hazard to PAX / crew or impede emergency egress.
Waste Containers	May be missing or damaged provided it is not used.
Carpet	May be soiled, worn, or damaged.
Sink Drain	Not Applicable.
Toilet Seat Lid	May be missing or damaged.

Uncontrolled Copy when Printed

PCI LIST - COCKPIT

DESCRIPTION	REMARKS
Cockpit Cup Holders	May be missing or damaged.
Cockpit Lining (Ceiling, Sidewall, Windshield, Pedal Assembly, Control Column, Direct Vision Window)	May be damaged provided: a. Holes components are not allowable; and b. Cracks are acceptable since correct panel mounting is not affected. (M) Check damage does not pose any safety hazard to occupants and must not impede emergency egress.
Crew Gasper Outlets	May be inoperative or damaged.
Crew Seat Upholstery	May be soiled or worn.
Glareshield Coverage	May be soiled or worn.
Window Sunshade	May be missing or damaged.
Cockpit Floor Finishing	May be missing or damaged.
Personal Electronic Device Power (Outlet Power)	May be inoperative.
Reading Lights	May be inoperative or missing.
Document Holder (Including Retention Bar / Strap)	May be missing or damaged.
Window Sunshade	May be missing or damaged.
Window Sunvisor	May be missing or damaged.

Uncontrolled Copy when Printed

PCI LIST - OTHER ITEMS

DESCRIPTION	REMARKS
Cargo Door Rubber Trim Seal	May be damaged.
Cargo Door Trim Panel	May be damaged.
Cargo Compartment Floor Lining	May be missing or damaged.
Door Panel Missing Lanyards	May be missing or damaged.
Cargo Floor Panels	May be worn.
Grill Smoke Detector	May be damaged.

Uncontrolled Copy when Printed

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Ferry Flights Items

INTRO Introduction

This Section presents information that may be used when dispatching the airplane with selected configuration deviations, for which revenue operation is not allowed by the MMEL or CDL, and when it is necessary to fly the airplane to a base where repairs, modification, or maintenance are to be performed. The procedures presented herein must be used for a flight or series of flights necessary to return the airplane to the next available maintenance base. No passengers are allowed on board. Only required crew members can be carried aboard during ferry flights. The procedures established herein are based on the assumption that all airplane systems are operating normally and that the integrity of the structure is not affected except by those systems or parts that are being dispatched in the ferry-flight condition.

Since variables such as airplane configuration, airline routes, special operational procedures, and the maintenance practices of the airline itself may affect a given procedure, it is recommended that the pilot review the procedures presented herein to verify that the airplane is capable of performing a safe flight, and to ensure that they are suitable for this particular operation. It is NetJets Transportes Aéreos (NTA) responsibility to exercise good judgment to evaluate factors such as airplane condition, weather, etc.

The use of the information contained herein is for guidance purposes only, not being mandatory to be used.

CAUTION

DIFFERENCES IN CONFIGURATION OR CONDITIONS CAN INVALIDATE THE FERRY FLIGHT INFORMATION PRESENTED IN THIS SECTION.

WARNING

A permit to fly (refer to NJMP 1.09) must be obtained to use the information contained in this MEL Section.

Uncontrolled Copy when Printed

27 Ferry Flight Items**Ferry Flight with Flap Locked in Position 1****CAUTION**

A permit to fly (refer to NJMP 1.09) must be obtained to use the information contained in this Ferry Flight Item.

The information presented in this Section, associated with the basic AFM, enables the establishment of the conditions required to accomplish the ferry flight operation with Flap locked in position 1.

For limitations, procedures, and performance information not contained in this Section, refer to the AFM and / or applicable Supplements.

NOTE

Flap panels not locked in position 1 cannot be dispatched using this ferry flight procedure.

Operational Limitations**AIRSPPEED**

Maximum Operating Limit Speed..... 180 KIAS

Minimum Airspeed under LSA (Low Speed Awareness) specifications.

ALTITUDE

Maximum Operating Altitude..... 18000 ft

ICE CONDITION

Airplane must not be operated in known or forecasted icing condition, during a period from one hour before until one hour after the estimated time of departure and arrival at the take-off and destination aerodromes, including alternated aerodromes.

KINDS OF OPERATION

Ferry flight is only authorised under the following conditions:

- CAT I;
- Visual Meteorological Condition (VMC);
- Instrument (IFR);
- No obstacles in the take-off path;
- Avoid turbulence.

OCCUPANTS

No passengers are allowed on board. Only required crew members can be carried aboard during this ferry flight.

Uncontrolled Copy when Printed

Normal Procedures

The actions listed below complement the procedures contained in the basic AFM. All the other Normal Procedures remain unchanged, except those described in this section.

FLAP SYSTEM CONFIGURATION

The following configuration must be set to perform this ferry flight:

- Flaps in position 1. It must remain actuated during the ferry flight.

EXTERNAL INSPECTION

Verify that flaps are in position 1 and they are symmetric. They must remain in place position during the ferry flight.

FUEL CONSUMPTION

Monitor fuel quantity indication throughout the whole flight. Since higher fuel consumption is expected, this information must be considered when preparing the flight planning.

CAS MESSAGES

FLAP FAIL CAS message may be presented. No additional CAS message is expected due to this ferry flight configuration.

Emergency and Abnormal Procedures

The Emergency and Abnormal Procedures remain unchanged, except that all procedures will be performed with flap locked in position 1 and the airspeed is limited to 180 KIAS.

The driftdown must be considered when preparing the flight planning.

Performance

For performance calculations, refer to AFM.

FLIGHT PLANNING

The pilot is responsible to make the flight planning calculation and apply the range decrement for flap locked in position 1.

For flight planning data, a drag index of 106 must be applied to flight planning.

Climb, cruise, descent, and holding data for a Flap Locked in Position 1 configuration may be obtained from Embraer In-flight Performance software.

As a reference, the tables below present specific range decreasing and specific fuel consumption for this ferry flight.

The tables are presented for the conditions below:

- All Engines Operatives (AEO);
- ISA Conditions;
- Remaining Rate of Climb - 100 ft / min;
- Buffer Margin - None;
- Airplane Weight - 8340 kg.

SPECIFIC RANGE – ALL ENGINES OPERATING**140 KIAS - ISA Conditions**

Altitude (ft)	Specific Range (NM/kg)	Range Decreasing in Relation to Gear Up (%)
10000	0.37	8
12000	0.39	7
14000	0.42	7
16000	0.44	6
18000	0.46	6

SPECIFIC RANGE – ALL ENGINES OPERATING**160 KIAS - ISA Conditions**

Altitude (ft)	Specific Range (NM/kg)	Range Decreasing in Relation to Gear Up (%)
10000	0.41	9
12000	0.43	9
14000	0.45	8
16000	0.47	10
18000	0.50	9

Maintenance Procedures**FLAP PANELS**

To lock the flap panels in position 1 perform the following procedures:

- On the flap PDU, remove the lockwire and disconnect the flexible shaft (refer to AMM MPP 27-51-01/400);
- Turn the flexible shaft until the flap surface trailing edge and wing torque-box trailing edge are aligned with a tolerance of +/- 2.0 mm;
- Turn the flexible shaft until flaps surfaces stopped in position;
- Outboard flaps: 8.0 +/- 1 degrees;
- Inboard flaps: 7.8 +/- 1 degrees.

NOTE

The maximum permitted asymmetry between LH and RH surfaces of the inboard or outboard flaps is 1.0 degree.

Uncontrolled Copy when Printed

CAUTION

FLAPS MUST BE LOCKED SYMMETRICALLY ACCORDING TO TOLERANCES ABOVE AND WILL REMAIN STUCK DURING THE ENTIRE FLIGHT.

- Connect the flexible shaft to the PDU and install the nut and lockwire (refer to AMM MPP 27-51-01/400);
- On ground pedestal, set FSL to flap 1 position; and
- Pull the Flap Motor Power CB on the LPDU.

Uncontrolled Copy when Printed

32 Ferry Flight Items

Ferry Flight with Landing Gear Locked Down

CAUTION

A permit to fly (refer to NJMP 1.09) must be obtained to use the information contained in this Ferry Flight Item.

The information presented in this Section, associated with the basic AFM, enables the establishment of the conditions required to accomplish the ferry flight operation with main and nose the landing gear locked down.

For limitations, procedures, and performance information not contained in this Section, refer to the AFM and / or applicable Supplements.

Operational Limitations

AIRSPPEED

Maximum Operating Limit Speed..... 250 KIAS

Do not exceed 180 KIAS whenever LG LEVER DISAG message displayed.

Minimum Airspeed under LSA (Low Speed Awareness) specifications.

ALTITUDE

Maximum Operating Altitude..... 35000 ft

TEMPERATURE

Minimum Operating Temperature..... -54°C

ICE CONDITION

Airplane must not be operated in known or forecasted icing condition during a period from one hour before until one hour after the estimated time of departure and arrival at the take-off and destination aerodromes including alternated aerodromes.

KINDS OF OPERATION

Ferry flight is only authorised under the following conditions:

- CAT I;
- Visual Meteorological Condition (VMC);
- Instrument (IFR);
- No obstacles in the take-off path;
- Avoid turbulence.

OCCUPANTS

No passengers are allowed on board. Only required crew members can be carried aboard during this ferry flight.

Normal Procedures

The actions listed below complement the procedures contained in the basic AFM. All the other Normal Procedures remain unchanged, except those described in this Section.

LDG SYSTEM CONFIGURATION

The following configuration must be set to perform this ferry flight:

- Free Fall handle must be actuated. It must remain actuated during the ferry flight.

EXTERNAL INSPECTION

Verify that landing gear ground locking pins are placed in each landing gear. They must remain in place during the ferry flight.

FUEL CONSUMPTION

Monitor fuel quantity indication throughout the whole flight. Since higher fuel consumption is expected, the operator must consider this information when preparing the flight planning.

CAS MESSAGES

No additional CAS message is expected due to this ferry flight configuration.

Emergency and Abnormal Procedures

The Emergency and Abnormal Procedures remain unchanged, except that all procedures will be performed with landing gear down.

The driftdown must be considered when preparing the flight planning.

Performance

For performance calculations, refer to AFM.

FLIGHT PLANNING

The pilot is responsible to make the flight planning calculation and apply in the results obtained for landing gear up the range decrement for landing gear down.

For flight planning data, a drag index of 456 must be applied to flight planning. Climb, cruise, descent, and holding data for a Landing Gear Down configuration may be obtained from Embraer Inflight Performance software.

As a reference, the tables below present specific range decreasing and specific fuel consumption for this ferry flight.

The tables are presented for the conditions below:

- All Engines Operatives (AEO);
- ISA Conditions;
- Remaining Rate of Climb - 100 ft / min;
- Buffer Margin - None;
- Airplane Weight - 8340 kg.

SPECIFIC RANGE – ALL ENGINES OPERATING**150 KIAS - ISA Conditions**

Altitude (ft)	Specific Range (NM/kg)	Range Decreasing in Relation to Gear Up (%)
10000	0.31	28
15000	0.35	29
20000	0.39	29
25000	0.44	29
30000	0.48	31
35000	0.51	35

SPECIFIC RANGE – ALL ENGINES OPERATING**180 KIAS - ISA Conditions**

Altitude (ft)	Specific Range (NM/kg)	Range Decreasing in Relation to Gear Up (%)
10000	0.31	34
15000	0.35	34
20000	0.39	35
25000	0.42	38
30000	0.45	41
35000	-	-

Maintenance Procedures

LANDING GEAR Placard 'LDG DOWN and INOPERATIVE'. To lock the landing gear down position refer to AMM 32-00-00.

Uncontrolled Copy when Printed

Special Dispatch Procedures

INTRO Introduction

This Section presents information on dispatch of the EMB-505 for flights with selected items not covered by the CDL or the MMEL / MEL.

The procedures established herein are based on the assumption that all airplane systems are operating normally and that the integrity of the structure is not affected except by those systems or parts that are being dispatched under this section.

Variables such as airplane configuration, routes, special operational procedures, and maintenance practices may affect a given procedure.

Therefore, it is recommended that the pilot review the procedures presented herein, verifying the airplane capability of performing a safe flight and to ensure suitability for any particular operation. It is NetJets Transportes Aéreos (NTA) responsibility to exercise good judgment to evaluate factors like airplane condition and weather.

The use of the information contained herein is for guidance purposes only, not being mandatory to be used.

CAUTION

DIFFERENCES IN CONFIGURATION OR CONDITIONS CAN INVALIDATE THE FERRY FLIGHT INFORMATION PRESENTED IN THIS SECTION.

NOTE

Embraer Structures, Systems AOG, and Flight Support Engineering teams support may be required to provide technical guidance for conditions not covered in this Section, on a case-by-case basis.

Uncontrolled Copy when Printed

1 Missing / Damaged Polyurethane Film

1.1 General

This section is intended to provide information regarding damaged or missing external protective polyurethane film parts with no associated structural damage.

The polyurethane film prevents erosion and avoids premature wear of the airplane paint finished parts, caused by atmospheric pollution and rain. The installation of polyurethane film increases the in-service life of the airplane component and extends the durability of painted areas.

1.2 Dispatch Procedure

Do a visual inspection on the polyurethane film. If the polyurethane film is damaged or missing, the airplane can be dispatched for **50 Flight Cycles**. Take notes on the airplane logbook. No additional action is required.

NOTE


- FLYING WITH MISSING OR DAMAGED POLYURETHANE FILM MAY CAUSE DAMAGE ON THE COMPOSITE PARTS AND / OR AIRPLANE PAINTING.
- CONTACT THE MAINTENANCE TEAM IN CASE OF STRUCTURAL DAMAGE.

Replace the polyurethane film before expire the period of time defined above. No extensions are permitted.

For removal and installation refer to AMM:


- Landing Gear: 32-13-20;
- Wing-to-Fuselage Fairing NACA: 53-04-24;
- Radome: 53-14-20;
- Pylon: 54-51-20 and 54-54-20;
- Stabilizers: 55-14-22, 55-15-22, 55-32-30, and 55-35-20;
- Winglet: 57-35-21.

Refer to the next figures:

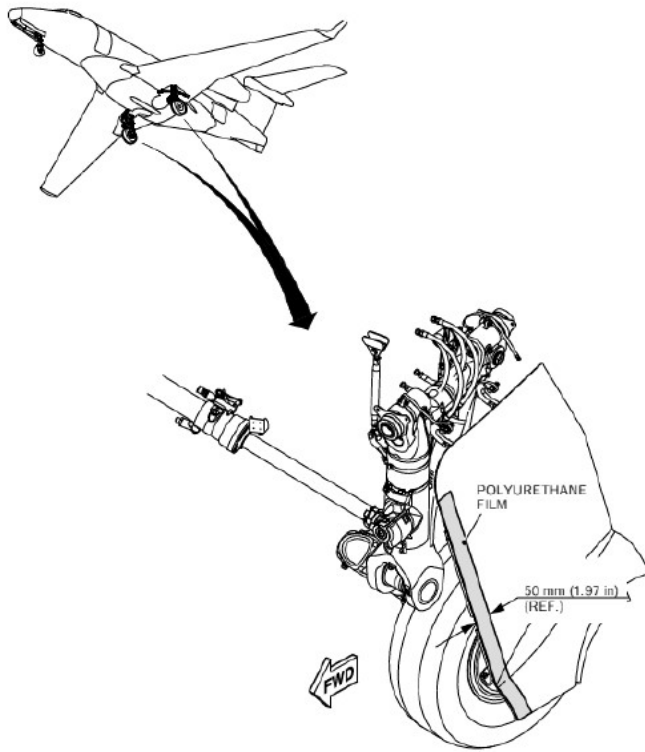


MAIN LANDING GEAR DOOR POLYURETHANE FILM

Uncontrolled Copy when Printed

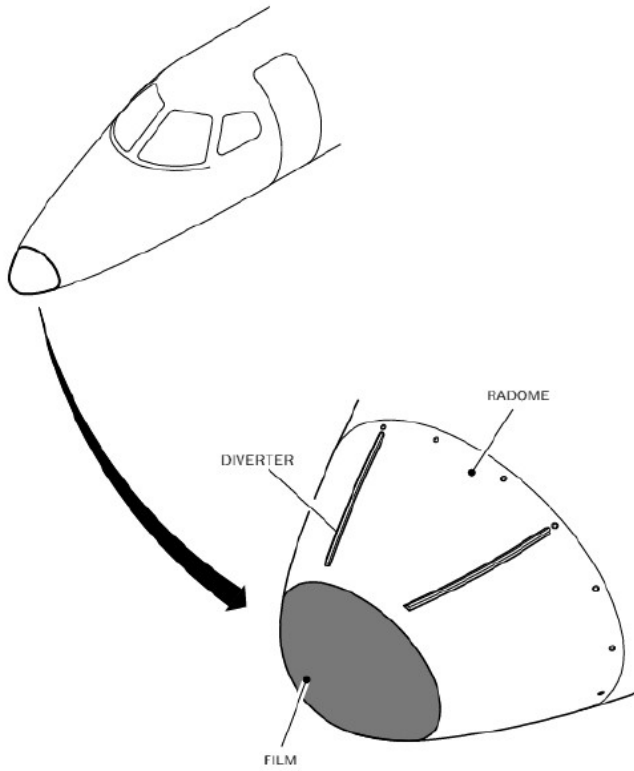


RADOME POLYURETHANE FILM

Uncontrolled Copy when Printed

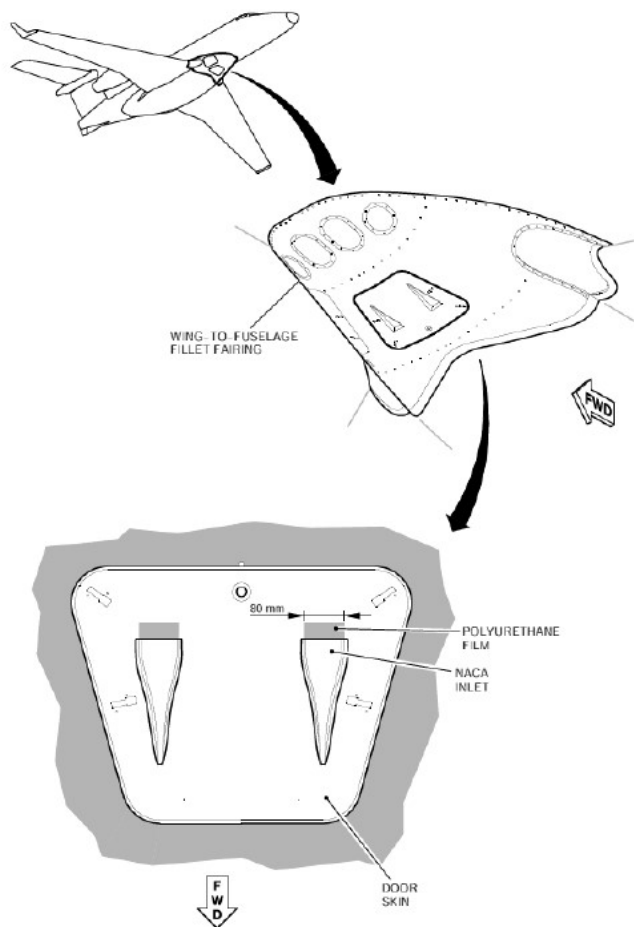
**WING-TO-FUSELAGE FAIRING NACA POLYURETHANE FILM**

Uncontrolled Copy when Printed

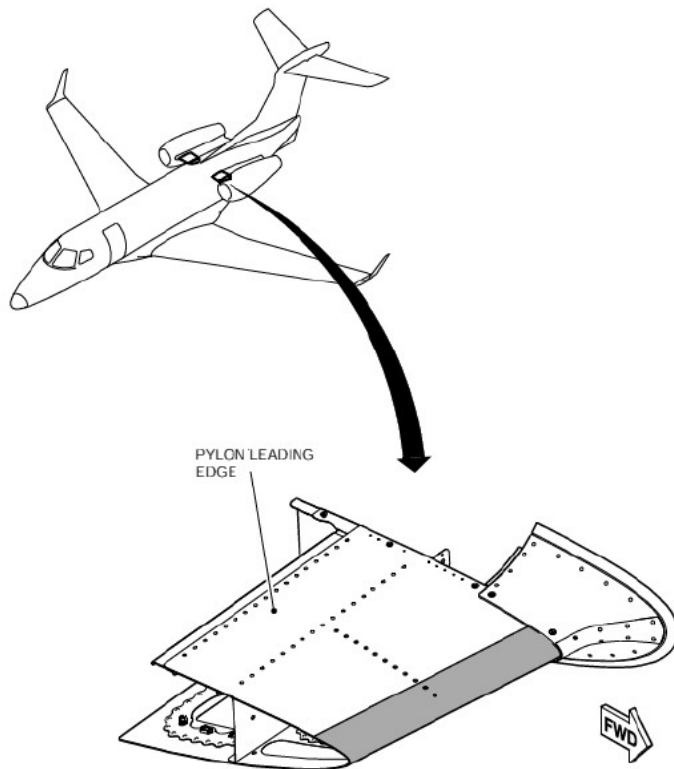


PYLON LEADING-EDGE POLYURETHANE FILM

Uncontrolled Copy when Printed

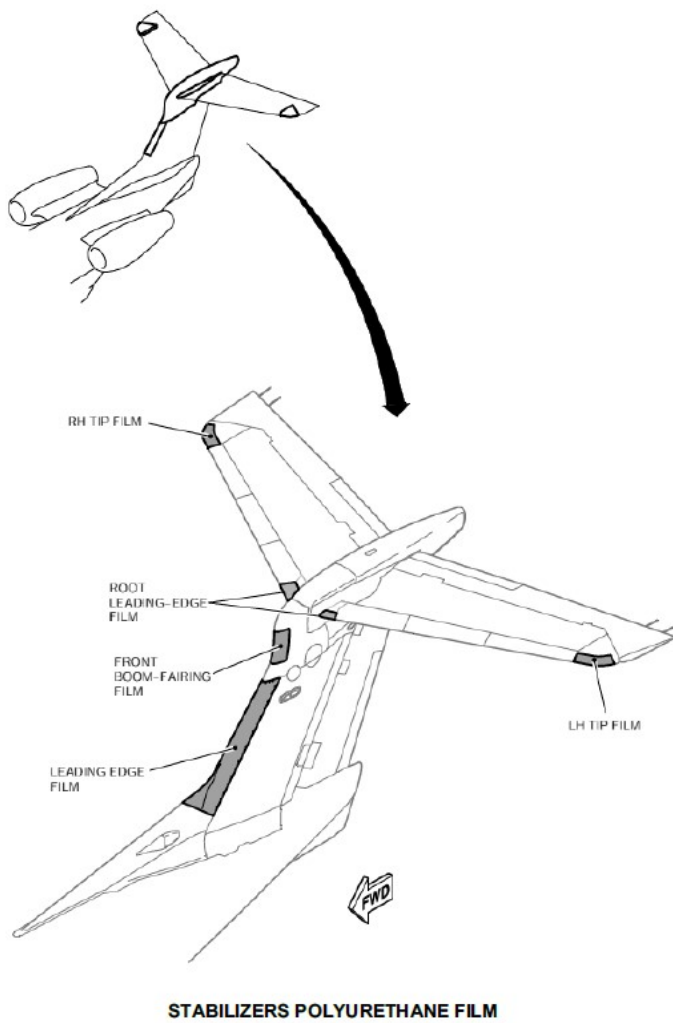

Uncontrolled Copy when Printed

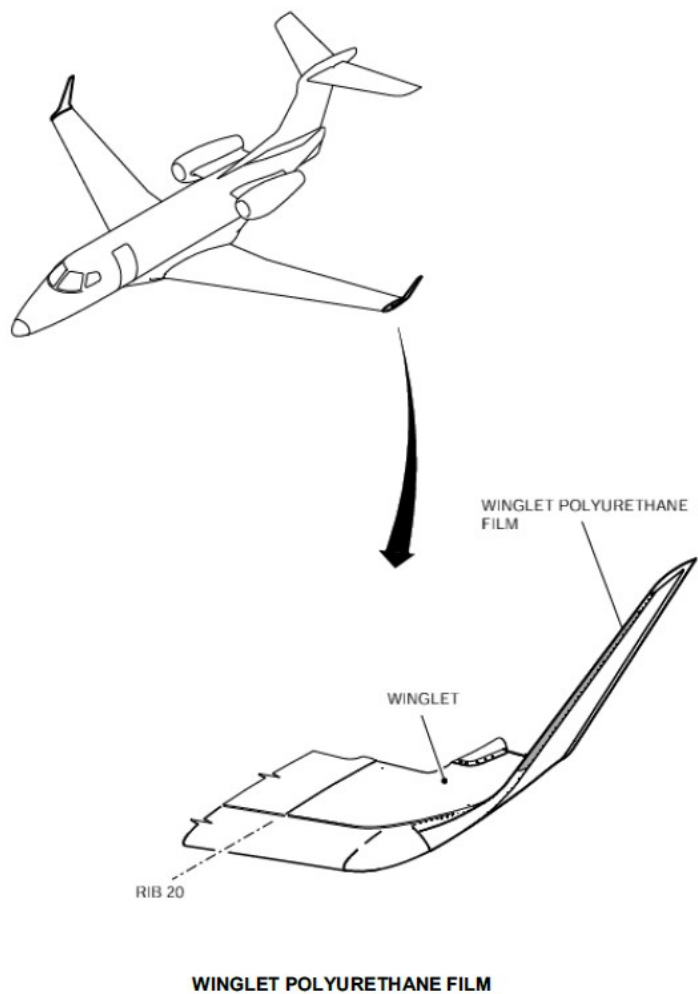

Uncontrolled Copy when Printed

2 REFUELING WITH WIDE-CUT FUEL

2.1 General

Wide-cut fuel (designated JET B, JP-4 or AVTAG) is an aviation turbine fuel that falls between gasoline and kerosene in the distillation range and consequently, compared to kerosene (JET A or JET A1), it has the properties of higher volatility (vapour pressure), lower flash point and lower freezing point.

For these reasons, the operator should avoid 'Wide-cut fuel' types. It should only be used if a situation arises such that only wide-cut fuels are available for refuelling.

WARNING

Refuelling with wide-cut fuel must never be conducted in the presence of passengers (embarking / on-board / disembarking).

2.2 Dispatch Procedure

CAUTION

OBEY ALL THE FUEL SYSTEM SAFETY PRECAUTIONS WHEN REFUELING THE AIRCRAFT

After the Refuelling with 'Wide-Cut Fuel':

- Check the Caps and surrounding area for leakage / spillage;
- Ensure Fuel quantity indication is operative through the cockpit indication system;
- Open an ATL (Aircraft Technical Log) entry and record the usage of 'Wide-Cut Fuel' as well as the uplift quantities.
- Defer the ATL entry with the following sequence code: 28-00-01 – Cat A (**valid until 2 consecutive uplifts with JET A / JET A-1 Fuel**).

(O) Procedure: FCM to check if the previous 2 fuel uplifts were performed with JET A / JET A1.

If yes, ATL to be closed., with the following statement:

'Two consecutive fuel uplifts performed on XX/XX/20XX and XX/XX/20XX with non wide-cut fuel'

AMCC to be informed.

CAUTION

- 'Wide-Cut Fuel' mixed with kerosene turbine fuels can result in the air/fuel mixture in the tank being in the combustible range at ambient temperatures.
- In case of leakage / spillage or an inoperative Fuel quantity indication, contact the Maintenance Team.

THIS
PAGE
INTENTIONALLY
LEFT
BLANK

Uncontrolled Copy when Printed

Configuration Deviation List

INTRO Introduction

This Configuration Deviation List contains additional certificate limitations for operation of the airplanes without certain secondary airframe and engine parts as listed herein. When the airplane is operated using the CDL, the limitations specified in the AFM must still be complied with, as amended in this Appendix. All the items that are related to the airworthiness of the airplane and not included on the list are automatically required to be installed.

The associated limitations must be listed on a placard affixed in the cockpit in clear view of the pilots and other appropriate crew member(s). The pilot in command should be notified of each operation with a missing part(s) by listing the missing part(s) in the flight or dispatch release. Airplane logbook must list appropriate notations covering any missing part(s) on each flight.

If an additional part is lost, the airplane may not depart the airport at which it landed following this event, until it complies with the limitation of the CDL.

This, of course, does not preclude the issuance of a ferry permit to allow the airplane to be flown to a point where the necessary repairs or replacement can be made.

No more than one part for any one system may be missing, unless specific combinations of parts are included in the CDL. Unless otherwise specified, parts from different systems may be missing. The performance penalties are cumulative, unless specifically designated penalties are indicated for the combination of missing parts.

Where performance penalties are listed as negligible, no more than three negligible items may be missing without taking further penalty. For each missing item more than three, reduce the take-off, landing, and en-route climb limits by 41 kg (90 lb). Where performance penalties are listed as no penalty, any accumulative number of items listed as no penalty may be missing without further penalty.

Take-off performance penalties should be applied to the take-off weights that are limited by performance considerations (i.e., take-off field length, first, second, or final segment climb, or take-off flight path).

If the performance-limited take-off weight is greater than the maximum certified take-off weight, the take-off performance penalties should be applied to the maximum certified take-off weight to ensure compliance with the noise requirements.

Landing performance penalties should be applied to the landing weights that are limited by performance considerations (i.e., landing field length, landing climb, or approach climb). If the performance limited landing weight is greater than the maximum certified landing weight, the landing performance penalties should be applied to the maximum certified landing weight to ensure compliance with the noise requirements.

En route performance penalties apply only to operations that are limited by the one-engine inoperative en route climb performance.

To correctly apply the speed tape, perform Aircraft Maintenance Manual TASK 51-26-00-910-801-A.

The use of speed tape is time limited to 10 days.

Uncontrolled Copy when Printed

If the CDL item refers to a MEL item, the MEL repair interval must be applied.

COMPONENT LOCATION

The numbering and designation of each system in this Appendix is based on ATA Spec. 2200. The parts within each system are identified by its functional description and, when necessary, by door or panel identification. See Aircraft Maintenance Manual, Chapter 06, for panel identification.

Uncontrolled Copy when Printed

23 Communications**23-61-00A 2 static dischargers on each aileron**

Category	Number Installed	Number Required
D	14	8

Remarks / Exceptions

The airplane is allowed to be dispatched with 1 (one) static discharger per control surface and winglet, provided the total amount of installed static dischargers is equal to or greater than 8 (eight).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

23-61-00B 3 static dischargers on each aileron

Category	Number Installed	Number Required
D	16	8

Remarks / Exceptions

The airplane is allowed to be dispatched with 1 (one) static discharger per control surface and winglet, provided the total amount of installed static dischargers is equal to or greater than 8 (eight).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

33 Lights

33-44-01 Wing Inspection Light Lens

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be missing with no penalty provided:

- Cavity is covered with speed tape; and
- Affected light is deactivated and considered inoperative.

Refer to MEL [33-44-01](#).

CAUTION

If using MEL [33-44-01-A](#), rectification interval Category B must be used.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-45-01 Red Beacon Light Assembly

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be missing with no penalty provided:

- Cavity is covered with speed tape; and
- Affected light is deactivated and considered inoperative.

Refer to MEL [33-45-01](#).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-48-02 Aft Navigation Light Assembly

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

One or both may be missing with negligible penalty provided:

- a. Cavity is covered with speed tape; and
- b. Affected light is deactivated and considered inoperative.

Refer to MEL [33-48-00](#).

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

33-49-01 Upper Anti-collision (strobe) Light Assembly

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be missing with no penalty provided:

- a. Cavity is covered with speed tape; and
- b. Affected light is deactivated and considered inoperative.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

53 Fuselage**53-03-00 Forward Fuselage Jack Point Cover (122 AR)**

Category	Number Installed	Number Required
C	1	0

Remarks / Exceptions

May be missing with no penalty provided cavity is covered with speed tape.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

57 Wings**57-03-00 Wing Jack Point Covers (541 VB / 641 VB)**

Category	Number Installed	Number Required
C	2	0

Remarks / Exceptions

One or both may be missing with no penalty provided cavity is covered with speed tape.

Maintenance Procedures

None.

Operational Procedures

None.

Placard Procedure

None.

Uncontrolled Copy when Printed

**THIS
PAGE
INTENTIONALLY
LEFT
BLANK**

Uncontrolled Copy when Printed