



Nucleo_L476rg




File: SubSheet1.kicad_sch

Nucleo_F207zg




File: SubSheet2.kicad_sch

Nucleo_L4r5zi




File: SubSheet3.kicad_sch

Nucleo_F767zi




File: SubSheet4.kicad_sch

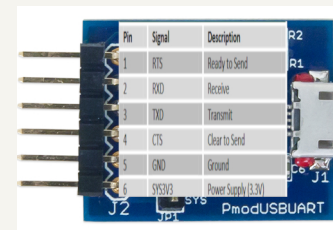

Use UART 2 in Nucleo board for as Terminal port.
This will be used allos for interactive mode.
USB port should be used for debug if defined

Look at datasheet,
and source code to determine
the pin available.

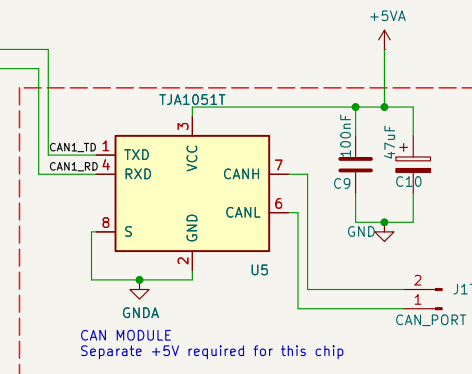

CAN MODULE
Separate +5V required for this chip


Sheet: /
File: CrackyOS.kicad_sch

Title:

Size: A4
KiCad E.D.A. 10.0.6

Date:

Rev:
Id: 0/5

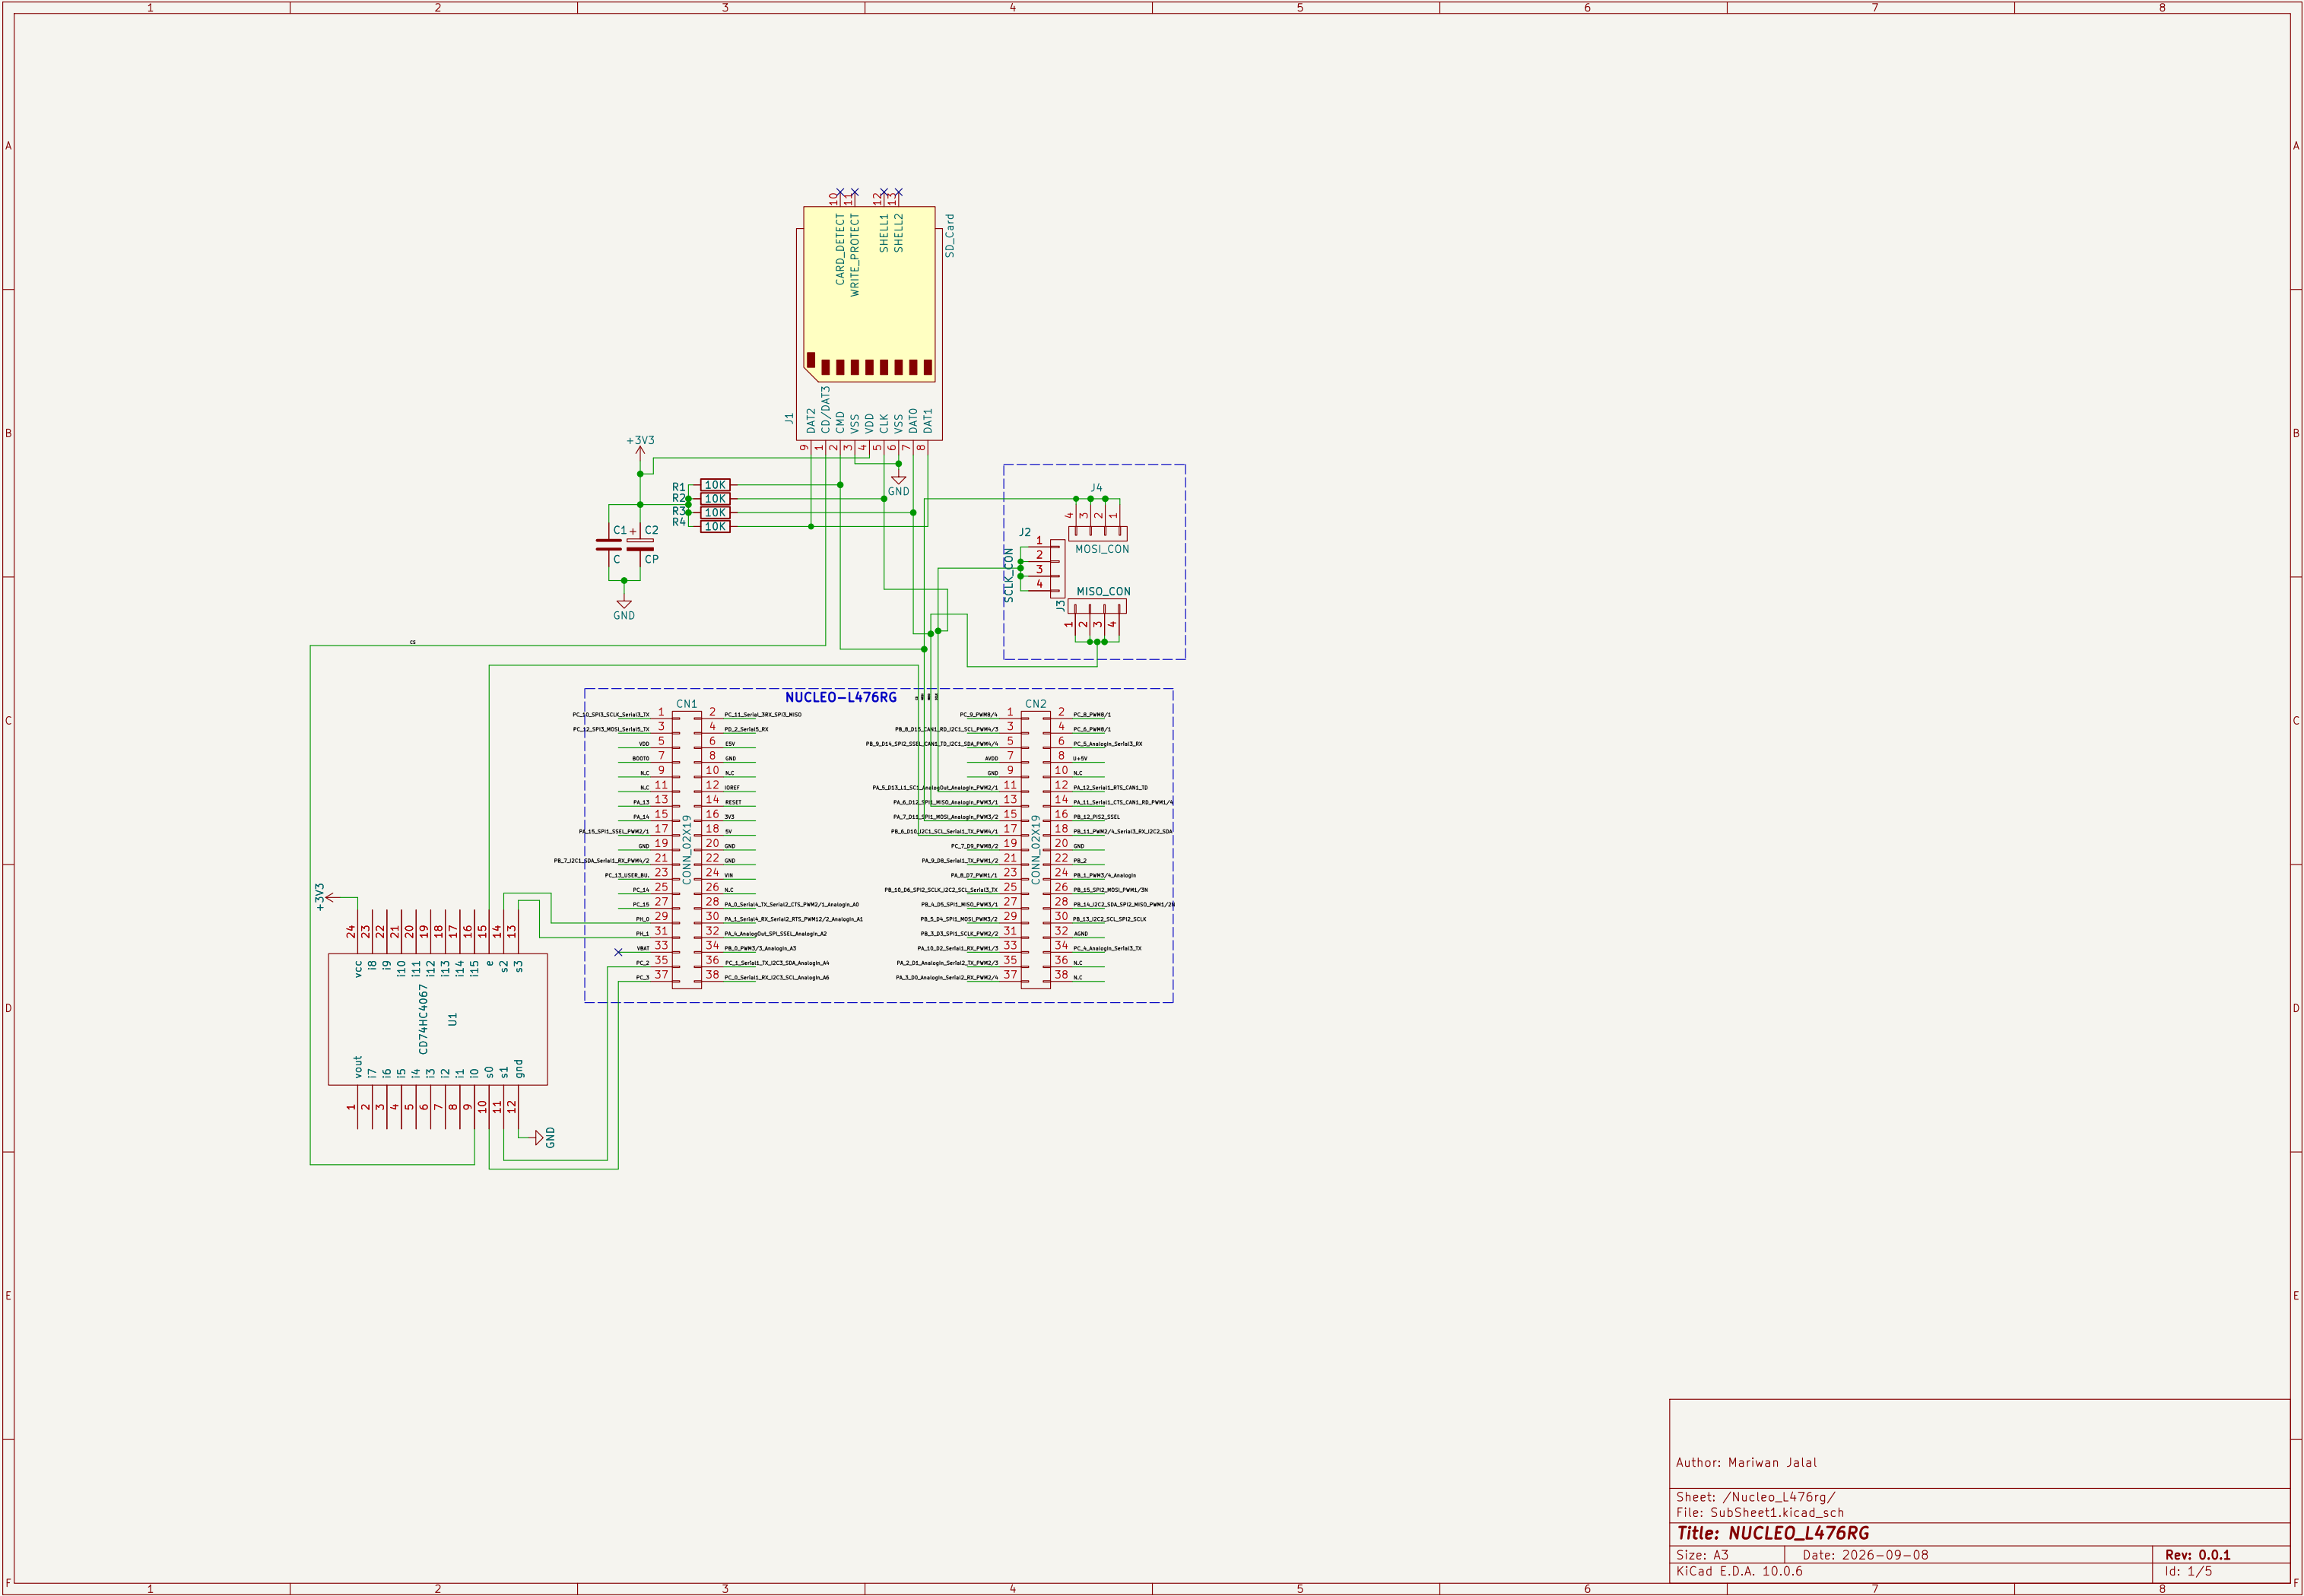


Author: Mariwan Jalal

Sheet: /Nucleo_L476rg/
File: SubSheet1.kicad_sch

Title: NUCLEO_L476RG

Size: A3 Date: 2026-09-08
KiCad E.D.A. 10.0.6

Rev: 0.0.1
Id: 1/5



Rev: 0.0.1
Id: 2/5

