Reference

Writing control data and checking the checksum

February 29, 2016

Dai Nippon Printing Co., Ltd.

1. Procedure to update the firmware and color control data with RX1-Tools

Rewriting the firmware and color control data using RX1-Tools can be performed as shown below.


(Note.) When rewriting the firmware or color control data, get the status, and check that the status is "Idle" (with no errors) before starting the rewriting. Also, do not perform any actions such as turning the printer OFF or opening the printer cover during the rewriting process.


(1) Start RX1-Tools

Depending on your operating system, run “RX1-Tools32.exe” or “RX1-Tools64.exe”.

(2) Write the firmware


With [Flashrom writer (F)] under the [Option (O)] menu, select the write file, and click on [Open] to start writing the firmware.

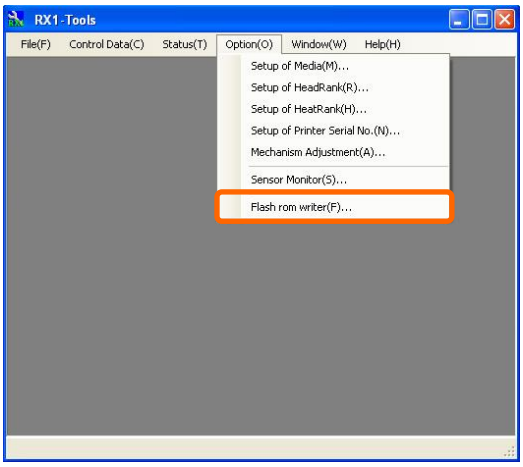


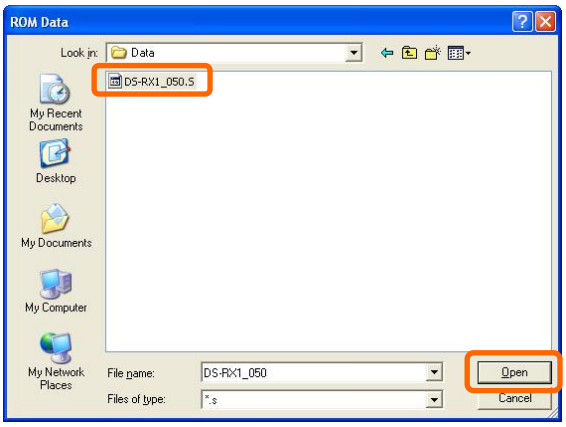

(3) Check the firmware version


With [Rom Version (V)] under the [Status (T)] menu, check the version of the firmware.
Click on [Get] to get the version.
(If you can’t get the version immediately after updating, click on [Get] again.)

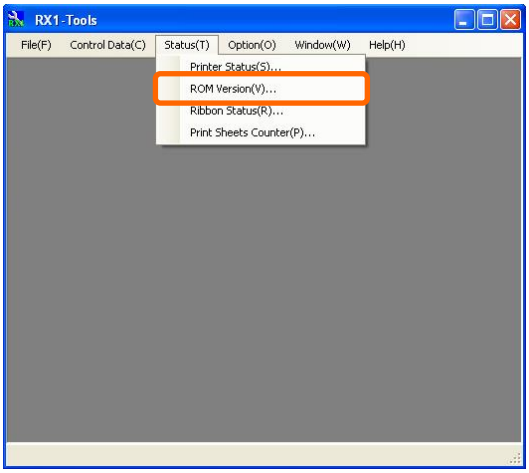


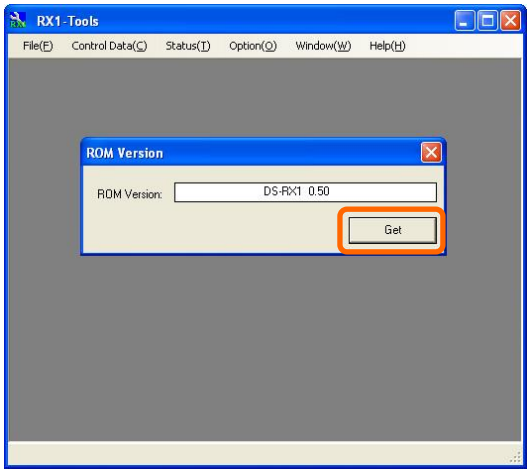

(4) Write the 300dpi color control data.


With [Write All Data(*.CWD)] under the [Control Data(C)] menu, select the 300dpi CWD file, and click on [Open]. This will write the control data.

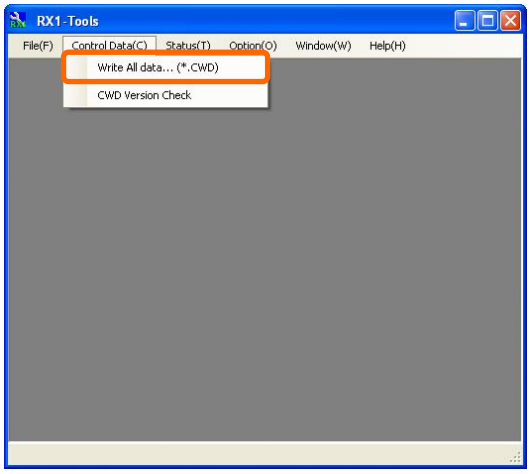


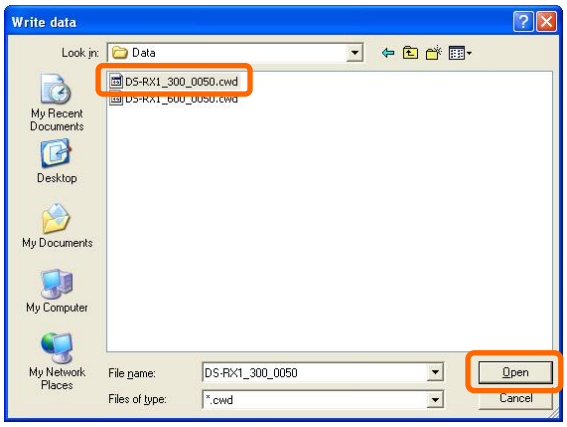

(5) Check the 300dpi color control data version and checksum

With [CWD Version Check] under the [Control Data(C)] menu, you can check the version and checksum of the control data just written. Click on [Get] to display the version and checksum.

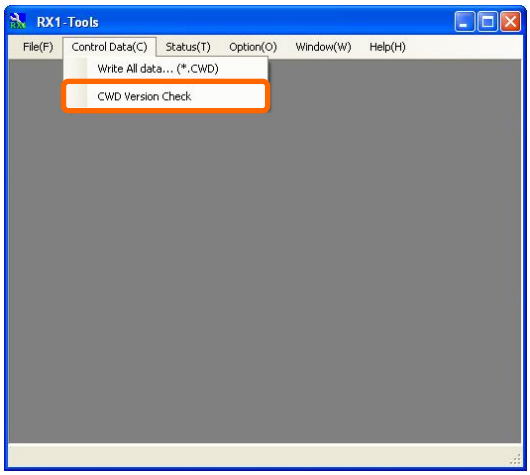

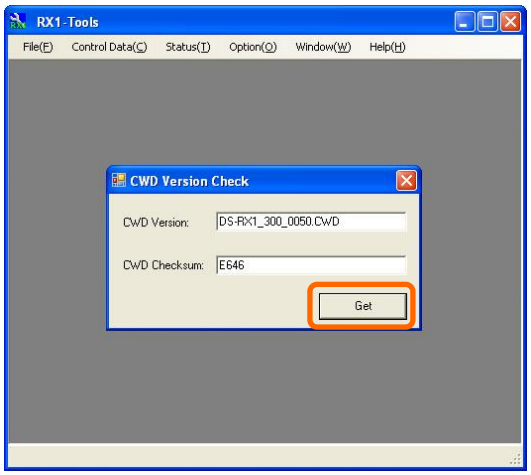

(6) Write the 600dpi color control data

The same as in (4), write the 600dpi color control data.

(7) Check the 600dpi color control data version and checksum.

The same as in (5), check the 600dpi color control data version and checksum.

2. Procedure to update when using SDK

If you write the firmware using Status API, you can follow the same procedure as above. Then check that the writing occurred properly by checking the version and checksum.

■Using API

① GetStatus()	Check that the status is "Idle" (with no error).
② SetFirmwUpdateMode()	Switch to firmware update mode.
③ SetFirmwDataWrite()	Write firmware data.
④ GetFirmwVersion()	Check the firmware version.
⑤ GetStatus()	Check that the status is "Idle" (with no error).
⑥ SetColorDataClear()	Clear the control data.
⑦ SetColorDataVersion()	Set the 300dpi control data version.
⑧ SetColorDataWrite()	Write the 300dpi control data.
⑨ GetColorDataVersion()	Check the 300dpi control data version.
⑩ GetColorDataChecksum()	Check the 300dpi control data checksum.
⑪ SetColorDataVersion()	Set the 600dpi control data version.
⑫ SetColorDataWrite()	Write the 600dpi control data.
⑬ GetColorDataVersion()	Check the 600dpi control data version.
⑭ GetColorDataChecksum()	Check the 600dpi control data checksum.

3. Other notes

By reading the control data version, after writing the 300dpi control data, the version and checksum 300dpi will be read, and after writing the 600dpi control data, the version and checksum 600dpi will be read

The relationship between printer status and the version and checksum that are read are shown below.

Printer status	Control Data version and checksum
After writing 300dpi control data	300dpi
After writing 600dpi control data	600dpi
After turning power ON	300dpi
300dpi After printing	300dpi
600dpi After printing	600dpi