Digital Camera Z 9

USB Still Image Capture Device Media Transfer Protocol (MTP) Specifications

Rev. 6.00

Nikon Corporation
Imaging Division
Development Management Department

Do Not Copy

Table of Contents

Table of Contents 2
1 Introduction 7
1.1 Application 7
2 Outline 8
2.1 PC Connection Mode 8
2.2 PC Connection Mode and Camera Operations 8
2.3 PC Camera Mode and Remote Mode 8
2.4 Application Mode 8
2.5 Photo Mode and Video Mode 9
2.6 Recording Destination 9
2.6.1 Access to the Card 10
2.6.2 Access to the SDRAM 10
2.7 Sending the Event 11
2.8 Sequence of Shooting Operation and Image Data Acquisition in the PC Connection Mode 12
2.8.1 Recording in the Card 12
2.8.2 Recording in the SDRAM 12
2.8.3 Recording by the Shutter-Release Button of the Camera 13
2.8.4 Bulb Shooting 13
2.8.5 Interval Timer Shooting 14
2.8.6 Focus Shift Shooting 15
2.9 Sequence of Live View Image and Data Acquisition in the PC Connection Mode 16
2.9.1 Live View 16
2.9.2 Video Recording 17
2.9.3 Spot WB 19
2.9.4 Tracking Operation 21
2.10 Reacquisition of the Image Data 22
2.11 Operation with the Empty Battery 22
2.12 Sending a Voice Memo File 23
2.12.1 Sequence to Send a Voice Memo File 23
2.12.2 Conditions for Cancellation 23
2.12.3 Restrictions 23
2.13 Auto Capture 25
3 Device Requests 26
3.1 Standard Device Requests 26
3.2 Class-Specific Requests 27
3.2.1 Cancel Request 27
3.2.2 DeviceReset Request 27
3.2.3 GetDeviceStatus Request 27
4 Descriptors 28
4.1 Standard Descriptors 28
4.1.1 Device Descriptor 28
4.1.2 Device_Qualifier Descriptor 30
4.1.3 Configuration Descriptor 31
4.1.4 Other_Speed_Configuration Descriptor 31

Do Not Copy

4.1.5 Interface Descriptor 32
4.1.6 Endpoint Descriptor 32
4.1.7 Super Speed Endpoint Companion Descriptor 36
4.1.8 String Descriptor 39
4.1.9 BOS Descriptor 42
4.1.10 USB 2.0 Extension Descriptor 42
4.1.11 Super Speed Device Capabilities Descriptor 42
4.2 Class-Specific Descriptor 42
5 Protocol 43
5.1 Generic Container Structure 44
5.2 Asynchronous Event Interrupt Data Format 45
5.3 Phases 46
5.3.1 Command Phase 46
5.3.2 Data Phase 46
5.3.3 Response Phase 47
5.4 Error Handling 48
5.4.1 Command Block Reception Failure 48
5.4.2 Command Block Invalidity 48
5.4.3 Command Execution Error 48
6 Code 49
6.1 ObjectFormatCode 49
6.1.1 Association Type 50
6.2 Operation Code 51
6.2.1 Standard 54
6.2.2 Vendor 78
6.2.3 Vendor (Object) 106
6.2.4 Vendor (Shooting) 122
6.2.5 Vendor (Lens) 136
6.2.6 Vendor (LiveView) 143
6.2.7 Vendor (Video) 151
6.2.8 Vendor (White balance) 155
6.2.9 Vendor (Picture Control) 162
6.2.10 Vendor (IPTC) 171
6.2.11 Vendor (Auto Capture) 174
6.2.12 Vendor (Speedlight) 181
6.2.13 Vendor (MTP) 193
6.3 Response Code 201
6.3.1 Standard 203
6.3.2 Vendor 209
6.4 Event Code 214
6.4.1 Standard 215
6.4.2 Vendor 218
6.5 DevicePropCode 224
6.5.1 Standard 233
6.5.2 Vendor (Photo Shooting Menu) 251
6.5.3 Vendor (Video Recording Menu) 324
6.5.4 Vendor (Custom Settings Menu) 404
6.5.5 Vendor (Setup Menu) 446

Do Not Copy

6.5.6 Vendor (Camera Information) 459
6.5.7 Vendor (Recording Destination) 487
6.5.8 Vendor (Bracketing) 492
6.5.9 Vendor (Speedlight) 502
6.5.10 Vendor (Lens) 519
6.5.11 Vendor (Live View) 526
6.5.12 Vendor (Video) 532
6.5.13 Vendor (Picture Control) 538
6.5.14 Vendor (Auto Capture) 542
6.5.15 Vendor (Power Supply) 555
6.5.16 Vendor (USB) 556
6.5.17 Vendor (MTP) 557
6.6 ObjectPropCode 558
6.6.1 Object Information 559
6.6.2 Thumbnail 570
6.6.3 Image Information 575
6.6.4 Video Information 579
6.7 SBAttributeCode 587
6.7.1 SBAttribute 588
6.7.2 SBGroupAttribute 592
7 Data Type 603
7.1 DataTypeCode 603
7.2 Character String Format 604
7.3 Date Format 604
7.4 Array Format 604
7.5 SBHandle 605
7.6 SBGroupID 605
8 ObjectHandle 606
8.1 ObjectHandle of the Object Recorded in the Card 606
8.2 ObjectHandle of the Object Recorded in the SDRAM 606
8.3 Addition of the ObjectHandle 606
9 DataSet 607
9.1 DeviceInfo DataSet 607
9.2 StorageInfo DataSet 613
9.3 ObjectInfo DataSet 614
9.3.1 Directory/Virtual Association DataSet 615
9.3.2 Image File DataSet 616
9.3.3 Script File DataSet 617
9.3.4 Video File DataSet 618
9.3.5 WAV File Data Set 619
9.4 DevicePropDesc DataSet 621
9.5 ObjectPropDesc DataSet 622
9.6 Property Description DataSet 623
9.6.1 Range Form 623
9.6.2 Enumeration Form 623
9.6.3 Time Form 623
9.6.4 Fixed-Length Array Form 624
9.6.5 Regular Expression Form 624

Do Not Copy

9.6.6 Byte String Form ... 624
9.6.7 LongString Form ... 624
9.7 LiveViewObject DataSet ... 625
9.7.1 DataSet with Version ... 625
9.7.2 DataSet without Version ... 628
9.8 IPTCPreset Data Set ... 630
9.8.1 NMS-IPTC ... 630
9.8.2 XMP-IPTC ... 631
9.9 PictureControl DataSet ... 632
9.9.1 BasePictureControl ... 633
9.9.2 RegistrationName ... 633
9.9.3 ApplyLevel ... 634
9.9.4 QuickSharpFlag ... 635
9.9.5 QuickSharp ... 635
9.9.6 Sharpening ... 636
9.9.7 MiddleRangeSharpening ... 636
9.9.8 Clarity ... 637
9.9.9 Contrast ... 637
9.9.10 Brightness ... 638
9.9.11 Saturation ... 638
9.9.12 Hue ... 639
9.9.13 FilterEffects ... 639
9.9.14 Toning ... 640
9.9.15 ToningDensity ... 640
9.9.16 CustomCurveFlag ... 641
9.9.17 CustomCurveData ... 641
9.10 PictureControlCapability DataSet ... 642
9.10.1 DefaultLevel ... 642
9.11 HLGQuality DataSet ... 643
9.12 ObjectMetaData Dataset ... 644
9.12.1 Version 1 ... 644
9.12.2 Version 2 ... 645
9.13 SBAttributeDesc DataSet ... 646
9.14 SBAttributeDescList DataSet ... 646
9.15 SBAttribute DataSet ... 647
9.16 SBAttributeList DataSet ... 647
9.17 PortraitImpressionBalance DataSet ... 647
9.18 CaptureAreaDrawInfo DataSet ... 649
9.19 CaptureArea DataSet ... 650
10 Data Format ... 651
10.1 ASCII Codes ... 651
11 Appendices ... 652
11.1 Properties Affected by Mounting the CPU Lens ... 652
11.2 Properties Affected by Mounting the Speedlight ... 652
11.3 Properties Affected by the Shooting Mode ... 653
11.4 Properties Affected by Time Zone ... 654
11.5 White Balance Fine Tuning Coordinates ... 655
11.6 Speedlight Types ... 656

Do Not Copy

11.7 Command Release Operation 657
11.7.1 Continuous Shooting 657
11.7.2 AF Operation 657
11.7.3 Preset WB acquisition 657
11.7.4 Event on the Release Operation 658
11.7.5 Recovery from the Sequence Error 658

Do Not Copy

1 Introduction

1.1 Application

These specifications describe the operations of the Z 9 (hereinafter referred to as the camera) as the USB Still Image Capture Device.

The specifications of the USB Still Image Capture Device are defined by “MTP Specification v1.0 - Media Transfer Protocol (MTP)” and the camera is based on it.

The camera conforms to the USB-related specifications below. For the details of each specification, refer to the related specifications manual.

Item	Contents
USB specifications	Revision 3.0
Class	Image Interface
Subclass	Still Image Capture Device
Protocol	Bulk-Only Transport Protocol

Do Not Copy

2 Outline

2.1 PC Connection Mode

When the camera is connected to the PC, the camera is switched to the PC connection mode.

2.2 PC Connection Mode and Camera Operations

The operations of the camera in the PC connection mode differ from those of the camera alone in the following points.

No.	Description
1	When the remote mode is set (the camera is controlled by the PC), the operations by the dials and buttons of the camera body are locked with some exceptions. (Refer to section 2.4.)
2	The captured images are recorded either in the card or in the SDRAM. (Refer to section 2.6.)
3	The image playback cannot be performed. The image deletion by operating the camera body also cannot be performed. (Except in the application mode)
4	The Auto meter-off delay is set to “No limit”.

2.3 PC Camera Mode and Remote Mode

The PC connection mode has the PC camera mode and the remote mode, and the camera is set to the PC camera mode when it is connected to the PC. Switching between the PC camera mode and the remote mode is performed by the command processing routine in the camera automatically for each command sent from the host or by the ChangeCameraMode command defined as a vendor command.

If a command for which changing the PC camera mode to the remote mode is necessary is issued while the remote mode is specified by the ChangeCameraMode command, the remote mode is retained even when the command processing is terminated.

During switching to the remote mode by the ChangeCameraMode command, the operation of each dial or button is ignored and the value set by the host is valid. When switching to the PC camera mode, the values set by the host in the remote mode are canceled and those set by each dial or button are used. For the setting value of each dial or button when switching to the remote mode, the value set by each dial or button becomes the initial value.

2.4 Application Mode

The camera is switched to the application mode by the ChangeApplicationMode property. At this time, the StoreRemoved event is passed.

In the application mode by the PC camera mode, the image playback, deletion and the video recording can be performed on the camera.

The host, which acquires the events by using the GetEventEx command, can acquire all the events generated in the application mode.

The host, which acquires the events by using the Interrupt IN transfer, can acquire only the DevicePropChanged event of the standard property.

Do Not Copy

2.5 Photo Mode and Video Mode

In the case of PC camera mode, you can switch between photo mode and video mode with the photo/video selector (switching lever) of the camera. Also, the status can be checked from the host using the LiveViewSelector property (section 6.5.6.1).

When in remote mode, you can switch using the LiveViewSelector property.

2.6 Recording Destination

The camera supports the following three methods for the recording destinations of the image data when the images are acquired by using the shutter-release button of the camera or the release request command from the host during the USB connection.

No.	Description
1	Records in the card (default).
2	Transfers to the host (records in the SDRAM temporarily).
3	Records in the card and transfers to the PC simultaneously.

The camera has the RecordingMedia property to save the recording destination setting. The RecordingMedia property can be changed only by issuing the command from the host.

RecordingMedia property	Operations
Card	The captured data are recorded in the card.
SDRAM	The captured data are recorded in the SDRAM temporarily and transferred to the host.
Card and SDRAM	Operation with the recording destination set to the card and that with the recording destination set to the SDRAM are both performed.

The operation that changes the recording destination depending on the RecordingMedia property is as follows.

- Shutter release button of the camera
- Interval timer shooting
- Focus shift shooting

Shooting with the following commands is not affected by the RecordingMedia property, and the recording destination differs depending on the requested command.

RecordingMedia property	Operations
InitiateCapture	The captured data are recorded in the card.
InitiateCaptureRecInSdram	The captured data are recorded in the SDRAM temporarily and transferred to the host.
AfAndCaptureRecInSdram	
InitiateCaptureRecInMedia	The recording destination is selected with specifying the parameter.

If the host is incapable of image acquisition operation by the SDRAM recording shown in section 2.8, the value of the RecordingMedia property must not be changed.

Do Not Copy

2.6.1 Access to the Card

During the USB connection, the insertion/ejection, existence/nonexistence, capacity, and the type of the card are detected by the camera. For the access to the card, the file system of the camera is always used and that of the host is not used. Therefore the host can access the card only after the USB connection is performed and the initialization of the information in the card is completed. During the USB connection, even if the card does not exist and then it is inserted, the host cannot access the data in the card until the initialization of the card information is completed.

The file system conforms to the DCF. The DPOF specification is also supported. Therefore the host cannot access the card with the directory structure or the file structure that does not conform to the DCF or the DPOF specification.

The host can read the data in the card, but cannot write the data to the card.

The camera can make the deletion of data in the card and perform card formatting by the command from the host.
When the captured images are being recorded on the card, the data deletion and the card formatting cannot be performed until all the images are recorded on the card. The release operation by the shutter-release button of the camera and the shooting request command cannot be executed during the data deletion and the card formatting.

2.6.2 Access to the SDRAM

When accessing the image data recorded in the SDRAM, accessing can be performed only to the one image data that is ready to be taken in and to the oldest image data in order of storage in the SDRAM. The image data in the SDRAM cannot be accessed randomly. (Refer to section 8.2).
The image data sent to the host completely is erased from the SDRAM.

Do Not Copy

2.7 Sending the Event

When the status in the camera is changed, the camera sends an event by the Interrupt transfer to notify the host of the contents of the change. However, the host may not be able to get the event sent by the camera depending on the OS type of the PC (host). Therefore the camera provides two methods of getting the event.

All the generated events can be acquired in order of generation by either of the two methods. The methods are shown below.

No.	Description
1	Sending the event by the Interrupt transfer (based on the PTP specifications)
2	Sending the event by the GetEventEx command (vendor-defined)

The camera stores the event generated in the camera in order in the queue buffer and retains the queue buffer status until the event is acquired by the host. The camera is provided with two queue buffers for the two methods of getting the event.

It is necessary for the host to use only one of the two methods of acquiring the event to perform the event processing. The camera does not manage the coordination of the two queue buffers.

Up to 2048 events can be stored in the queue buffer. When the queue buffer becomes full, the camera deletes the old event from the queue buffer and stores the new event in the queue buffer.

The event of the GetEventEx command is stored in the queue buffer only when the session is open, and the information in the queue buffer is cleared when the session is closed.

For sending the event in the application mode, refer to “Application Mode” (section 2.4).

Do Not Copy

2.8 Sequence of Shooting Operation and Image Data Acquisition in the PC Connection Mode

While the session is open in the PC connection mode, the camera performs the shooting operation by the command from the host or the shutter-release button of the camera. The captured images are stored in the card or the SDRAM by the command from the host or the setting value of the recording destination property (refer to section 2.6).

The host can acquire the saved image data by the GetObject or the GetPartialObject command.

The command sequence of each operation is described below.

2.8.1 Recording in the Card

The command sequence leading from the recording of the captured image data in the card to the data acquisition by the host is shown below.

No.	Description
1	When acquiring the event by the command, the host issues the GetEventEx command regularly to acquire the event.
2	The host issues the InitiateCapture command or the InitiateCaptureRecInMedia command to capture the image data. The camera performs the single shot operation or the continuous shot operation according to the shooting mode setting.
3	When the captured image data is saved in the card, the camera issues the ObjectAdded event. The object handle indicating the saved image data is added to the ObjectAdded event.
4	If the continuous shot operation is set, the camera repeats the procedure in (3) as many times as the number of shooting.
5	The camera issues the CaptureComplete event when all the image data captured by the InitiateCapture command or the InitiateCaptureRecInMedia command are saved completely.
6	The host acquires the image data information by issuing the GetObjectInfo command.
7	The host acquires the thumbnail data by issuing the GetThumb and the GetLargeThumb commands, if necessary.
8	The host acquires the image data by issuing the GetObject or GetPartialObject command.
9	When two or more image data are saved by the continuous shot operation, the host repeats the procedures in (6) to (8) to acquire all the image data.

2.8.2 Recording in the SDRAM

The command sequence leading from the recording of the captured image data in the SDRAM to the data acquisition by the host is shown below.

No.	Description
1	When acquiring the event by the command, the host issues the GetEventEx command regularly to acquire the event.
2	The host issues the InitiateCaptureRecInSdram, the AfAndCaptureRecInSdram, or the InitiateCaptureRecInMedia command to capture the image data. The camera performs the single shot operation or the continuous shot operation according to the shooting mode setting.
3	The host issues the DeviceReady command repeatedly while executing the operations in (4) and after.
4	The host waits for the camera to issue the ObjectAddedInSdram event.
5	The camera saves the captured image data in the SDRAM in order, and issues the ObjectAddedInSdram event in sequence when the sending of image data to the host becomes enabled.
6	The host acquires the image data information by issuing the GetObjectInfo command.
7	The host acquires the thumbnail data by issuing the GetThumb and the GetLargeThumb commands, if necessary.
8	The host acquires the image data by issuing the GetObject or GetPartialObject command.
9	The host repeats the procedures in (6) to (8) as many times as the number of received ObjectAddedInSdram events.
10	When all the image data captured by one InitiateCaptureRecInSdram, the AfAndCaptureRecInSdram, or the InitiateCaptureRecInMedia command are sent completely, the camera sends the CaptureCompleteRecInSdram event.

Do Not Copy

2.8.3 Recording by the Shutter-Release Button of the Camera

The command sequence leading from the capture of the image data by the shutter-release button of the camera to the acquisition of the recorded image data is shown below.

No.	Description
1	When acquiring the event by the command, the host issues the GetEventEx command regularly to acquire the event.
2	The shooting operation is performed by the shutter-release button of the camera. The camera performs the shooting operation (single shot operation, the continuous shot operation, or the interval timer shooting) according to the shooting mode setting.
3	The camera saves the images in the card, the SDRAM, or the card and the SDRAM according to the setting of the recording destination property.
4	When the images are saved in the card, the procedures in (5) to (10) should be performed. When the images are saved in the SDRAM, the procedures in (11) to (15) should be performed.
5	When the captured image data is saved in the card, the camera issues the ObjectAdded event. The object handle indicating the saved image data is added to the ObjectAdded event.
6	If the continuous shot operation is set, the camera repeats the procedure in (5) as many times as the number of shooting.
7	The host acquires the image data information by issuing the GetObjectInfo command.
8	The host acquires the thumbnail data by issuing the GetThumb and the GetLargeThumb commands, if necessary.
9	The host acquires the image data by issuing the GetObject or GetPartialObject command.
10	When two or more image data are saved by the continuous shot operation, the host repeats the procedures in (11) to (14) to acquire all the image data.
11	The camera saves the captured image data in the SDRAM in order, and issues the ObjectAddedInSdram event in sequence when the sending of image data to the host becomes enabled.
12	The host acquires the image data information by issuing the GetObjectInfo command.
13	The host acquires the thumbnail data by issuing the GetThumb and the GetLargeThumb commands, if necessary.
14	The host acquires the image data by issuing the GetObject or GetPartialObject command.
15	The host repeats the procedures in (12) to (15) as many times as the number of received ObjectAddedInSdram events.
16	The camera issues CaptureCompleteRecInSdram event when the transmission of image data is complete.

2.8.4 Bulb Shooting

The command sequence to acquire the image data recorded by Bulb shooting is shown below.

No.	Description
1	The host changes the camera to the remote mode by using the ChangeCameraMode command.
2	The host sets “M” by using the ExposureProgramMode property.
3	The host sets Bulb shooting (0xFFFFFFFF) by using the ExposureTime property and the ShutterSpeed property.
4	The host issues the InitiateCaptureRecInMedia command to start shooting.
5	The host issues the DeviceReady command and confirms that the response code is Bulb_Release_Busy.
6	The host issues the TerminateCapture command to terminate Bulb shooting.
7	The camera records the created images in the card, the SDRAM, or the card and the SDRAM after completion of the shooting and issues the ObjectAdded event or the ObjectAddedInSdram event to the host.
8	The host acquires the ObjectAdded event or the ObjectAddedInSdram event by the GetEventEx command to acquire the ObjectHandle of the created images.
9	The host acquires the image information by the GetObjectInfo command.
10	The host acquires the thumbnail image by the GetThumb and the GetLargeThumb commands, if necessary.
11	The host acquires the image data by issuing the GetObject or GetPartialObject command.
12	The camera issues the CaptureComplete event or the CaptureCompleteRecInSdram event.
13	The host acquires the CaptureComplete event or the CaptureCompleteRecInSdram event by the GetEventEx command.
14	The host changes the camera to the PC camera mode by using the ChangeCameraMode command.

Do Not Copy

2.8.5 Interval Timer Shooting

The command sequence to acquire the image data recorded by interval timer shooting is shown below.

No.	Description
1	The host acquires information about interval timer shooting by issuing the GetOpenCaptureInfo commands, if necessary.
2	The host requests the start of the interval timer shooting by issuing InitiateOpenCaptureV command.
3	The specialShootingMode property of the camera is turned on, and the shooting operation is performed according to the interval timer shooting setting.
4	The camera saves the images in the card, the SDRAM, or the card and the SDRAM according to the setting of the recording destination property.
5	When saving an image on a card, perform operations (6) to (8), and when saving an image on an SDRAM, perform operations (9) to (12).
6	When the captured image data is saved in the card, the camera issues the ObjectAdded event.
7	The host acquires the image data. The acquisition method is the same as the sequence in section 2.8.1.
8	Multiple image data is saved depending on the interval timer shooting setting. The host repeats (7) to acquire all the image data.
9	The camera sequentially saves the captured image data in SDRAM. The camera issues ObjectAddedInSdram events in sequence when it is ready to send to the host.
10	The host acquires the SDRAM image data. The acquisition method is the same as the sequence in section 2.8.2.
11	The host repeats (10) the number of times the ObjectAddedInSdram event is received.
12	The camera issues a CaptureCompleteRecInSdram event when the transmission of SDRAM image data is completed. The camera issues a CaptureCompleteRecInSdram event when all the SDRAM images taken up to that point are transmitted even during the interval timer shooting.
13	When the interval timer shooting can be skipped, the camera issues a CaptureSkip event if shooting is skipped.
14	If the host needs to stop the interval timer shooting in the middle, it requests the stop with the TerminateOpenCaptureV command.
15	If the time-lapse video option for interval timer shooting is enabled, the camera writes the time-lapse video file to the card and issues an ObjectAdded event.
16	The host gets the video file. The acquisition method is the same as the video recording sequence (Section 2.9.2, Section 2.9.2.2).
17	The camera issues an OpenCaptureComplete event when the interval timer shooting started by the InitiateOpenCaptureV command is completed (including when stopped in the middle of shooting).
18	The camera turns off the SpecialShootingMode property when interval timer shooting is complete.

Do Not Copy

2.8.6 Focus Shift Shooting

The command sequence to acquire the image data recorded by focus shift shooting is shown below.

No.	Description
1	The host acquires information about focus shift shooting by issuing the GetOpenCaptureInfo commands, if necessary.
2	The host requests the start of the focus shift shooting by issuing InitiateOpenCaptureV command.
3	The specialShootingMode property of the camera is turned on, and the shooting operation is performed according to the focus shift shooting setting.
4	The camera saves the images in the card, the SDRAM, or the card and the SDRAM according to the setting of the recording destination property.
5	When saving an image on a card, perform operations (6) to (8), and when saving an image on an SDRAM, perform operations (9) to (12).
6	When the captured image data is saved in the card, the camera issues the ObjectAdded event.
7	The host acquires the image data. The acquisition method is the same as the sequence in section 2.8.1.
8	Multiple image data is saved depending on the focus shift shooting setting. The host repeats (7) to acquire all the image data.
9	The camera sequentially saves the captured image data in SDRAM. The camera issues ObjectAddedInSdram events in sequence when it is ready to send to the host.
10	The host acquires the SDRAM image data. The acquisition method is the same as the sequence in section 2.8.2.
11	The host repeats (10) the number of times the ObjectAddedInSdram event is received.
12	The camera issues a CaptureCompleteRecInSdram event when the transmission of SDRAM image data is completed. The camera issues a CaptureCompleteRecInSdram event when all the SDRAM images taken up to that point are transmitted even during the focus shift shooting.
14	If the host needs to stop the focus shift shooting in the middle, it requests the stop with the TerminateOpenCaptureV command.
15	The camera issues an OpenCaptureComplete event when the focus shift shooting started by the InitiateOpenCaptureV command is completed (including when stopped in the middle of shooting).
16	The camera turns off the SpecialShootingMode property when focus shift shooting is complete.

Do Not Copy

2.9 Sequence of Live View Image and Data Acquisition in the PC Connection Mode

When the session is open in the PC connection mode, the camera starts the live view by the request from the host.

During the remote live view after the host executed the StartLiveView command, the live view images can be acquired by the GetLiveViewImageEx command.

The command sequence of each operation is described below.

2.9.1 Live View

The command sequence leading from the start of live view by the request from the host to the acquisition of the live view image is shown below.

No.	Description
1	The host issues the StartLiveView command to request the camera to start the remote live view.
2	After confirming the normal termination of the StartLiveView command, the host issues the DeviceReady command repeatedly until the DeviceReady command response other than Device_Busy appears.
3	The camera returns the normal termination response to the DeviceReady command when the live view image acquisition becomes enabled. If the live view image acquisition is disabled for some reason, the camera returns an error response to the DeviceReady command to terminate the live view.
4	After confirming the normal termination of the DeviceReady command response, the host issues the GetLiveViewImageEx command to acquire the live view image.
5	The host issues the GetLiveViewImageEx command repeatedly while the live view continues. At this time, the AF driving (AfDrive command), the MF driving (MfDrive command), the AF area change (ChangeAfArea command), etc. can be performed optionally.
6	When the remote live view is finished, the host issues the EndLiveView command.

Do Not Copy

2.9.2 Video Recording

The sequence leading from the recording of the video in the card by the MovieRec command to the acquisition of the video file is shown below.

2.9.2.1 Video Recording Transfer

No.	Description
1	The host issues MovieRecProhibitionCondition in video mode to confirm that video recording can be performed.
2	The host issues the StartMovieRecord command to start the video recording.
3	The camera stops the video recording or the host issues the EndMovieRecord command to stop the video recording.
4	The camera writes the captured video file in the card and issues the ObjectAdded event.
5	The camera issues the MovieRecordComplete event after stopping video recording.
6	The host acquires the MovieRecordComplete event by the GetEventEx command.
7	The host acquires the ObjectAdded event by the GetEventEx command to acquire the ObjectHandle of the video file.
8	The host acquires the file size of the video file by the GetObjectInfo command.
9	The host divides and acquires the video file by the GetPartialObject command. When the video file is acquired by the GetObject command, the control from the host cannot be performed until the file transfer is finished because the file size of the video file is large. Therefore, use the GetPartialObject command.

2.9.2.2 Over 4GB Video Transfer

The command sequence to transfer the video data over 4GB is shown below.

No.	Description
1 - 7	Same as normal video recording transfer.
8	The host acquires the file size of the video file by the GetObjectInfo command. When the file size of the GetObjectInfo command is 0xFFFFFFFF, use the following method to get the file size. PTP: Use GetObjectSize command to get the file size. MTP: Use ObjectSize of the GetObjectPropValue command to get the file size.
9	The host divides and acquires the video file by the GetPartialObjectHighSpeed or GetPartialObjectEx command. When the video file is acquired by the GetObject command, the control from the host cannot be performed until the file transfer is finished because the file size of the video file is large. Therefore, use the GetPartialObjectHighSpeed or GetPartialObjectEx command.

Do Not Copy

2.9.2.3 RAW Video Transfer

When video recording is performed with N-RAW12-bit(NEV)/ProResRAW HQ12bit(MOV), a video of the parent NEV (MOV) and the child MP4 is created.
The sequence to get this parent-child video is as follows.

No.	Description
1 - 3	Same as normal video recording transfer.
4	The camera writes the captured video file of NEV(MOV) in the card and issues the ObjectAdded event.
5	The camera writes the captured video file of MP4 in the card and issues the ObjectAdded event.
6	The camera issues the MovieRecordComplete event after stopping video recording.
7	The host acquires the MovieRecordComplete event by the GetEventEx command.
8	The host acquires the ObjectAdded event of NEV(MOV) by the GetEventEx command to acquire the ObjectHandle of the video file.
9	The host acquires the file size of the video file of NEV(MOV) by the GetObjectInfo command. When the file size of the GetObjectInfo command is 0xFFFFFFFF, use the following method to get the file size. PTP: Use GetObjectSize command to get the file size. MTP: Use ObjectSize of the GetObjectPropValue command to get the file size.
10	The host divides and acquires the video file of NEV(MOV) by the GetPartialObjectHighSpeed or GetPartialObjectEx command.
11	Perform No.8 to No.10 for MP4 files.

Do Not Copy


2.9.3 Spot WB

The command sequence to acquire the spot WB by the MeasureSpotWB command and set it to preset manual is shown below.

No.	Description
1	The host issues the StartLiveView command to request the camera to start the remote live view.
2	The host changes the camera to the remote mode by using the ChangeCameraMode command.
3	The host sets WhiteBalance to Preset manual.
4	The host sets WbPresetDataNo in which the spot WB is saved. At this time, a WbPresetDataNo in which Preset manual is protected must not be set.
5	The host issues the StartSpotWb command to request the camera to start the spot WB acquisition standby state. Confirm the spot WB condition of LiveViewObject that can be acquired by the GetLiveViewImageEx command to check whether the spot WB acquisition standby state is started.
6	The host sets the area to be acquired by ChangeSpotWbArea.
7	The host issues the MeasureSpotWb command to acquire the spot WB. Confirm the spot WB condition of LiveViewObject to check the acquisition result.
8	If the acquisition succeeds, the camera cancels the spot WB acquisition standby state and sets the spot WB condition of LiveViewObject to “On standby” (acquisition success) for three seconds.
9	If the acquisition fails, the camera remains in the spot WB acquisition standby state and sets the spot WB condition of LiveViewObject to “On standby” (acquisition failure) for five seconds.
10	The host issues the EndSpotWbResultDisp command to cancel the spot WB acquisition result display quickly.
11	The host issues the EndSpotWb command to terminate the spot WB acquisition standby state.
12	The host changes the camera to the PC camera mode by using the ChangeCameraMode command.

Do Not Copy

The transition of the spot WB condition that can be acquired by GetLiveViewImageEx command is shown below.

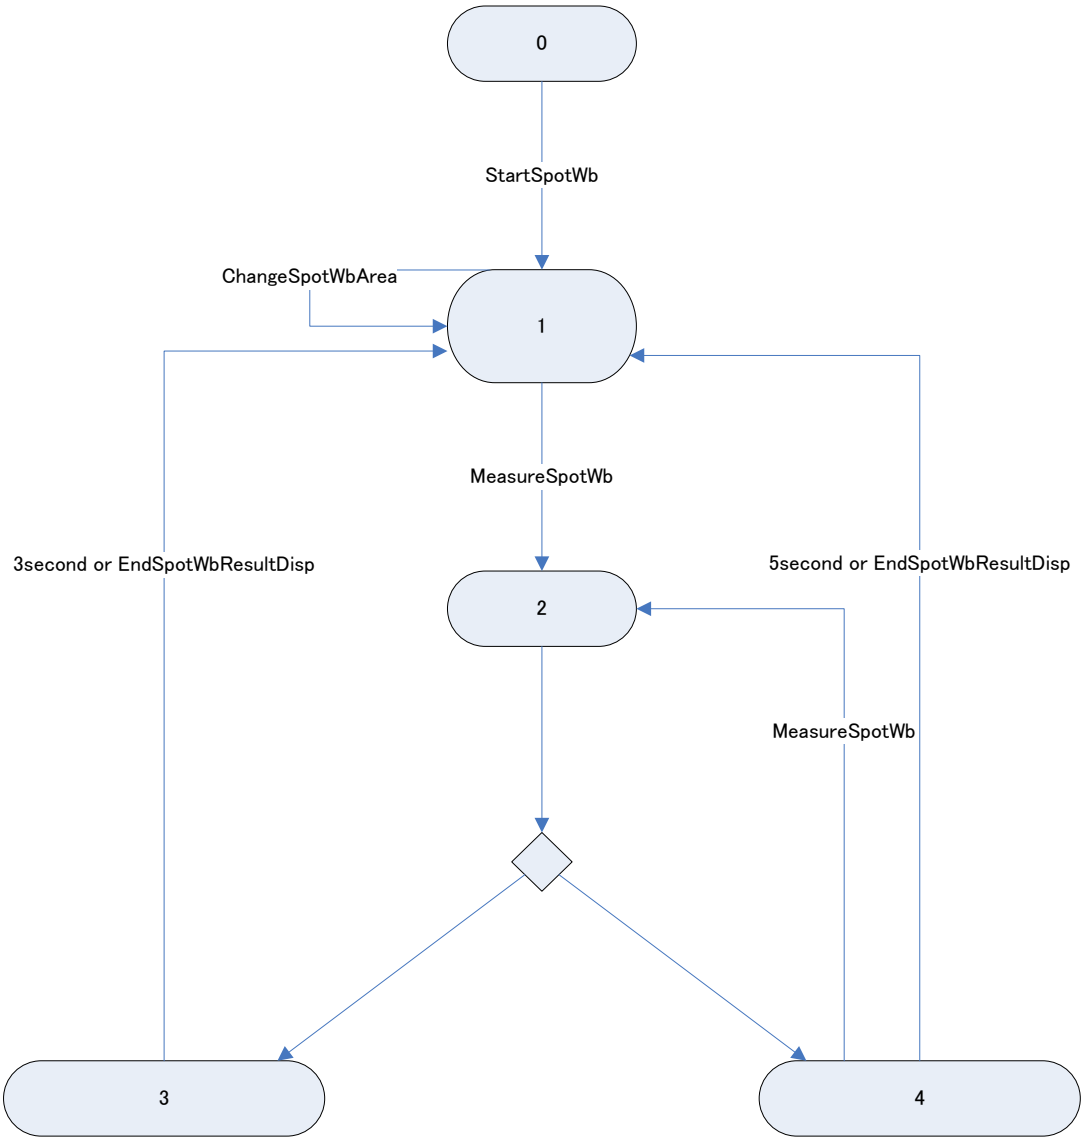

The figures in the diagram above show “Spot WB condition” of LiveViewObject acquired by the GetLiveViewImageEx command.

Do Not Copy

2.9.4 Tracking Operation

The command sequence from tracking start to tracking end is shown below.

No.	Description
1	The host issues the StartLiveView command to request the camera to start the remote live view.
2	The host sets the AF area mode to Auto-area AF.
3	The host can execute the following commands to change the tracking state. - StartTracking command The host issues the StartTracking command with the area where you want to start tracking as the parameters. When the subject recognition target is not detected at the specified coordinates, the camera sets the tracking state of LiveViewObject to "On tracking" and starts tracking operation at the specified coordinates. When the subject recognition target is detected at the specified coordinates, the camera updates the selected face index. At this time, the tracking state changes to the standby state. When the StartTracking command is executed with "On tracking" in the tracking state, the camera starts tracking operation at the specified coordinates with or without detected subject recognition target.
5	The host issues the EndTracking command to end tracking action.

* Whether the tracking state has changed or not is confirmed by checking the tracking state of LiveViewObject acquired by the GetLiveViewImageEx command.

Do Not Copy

2.10 Reacquisition of the Image Data

When one of the following occurs during the reading sequence of the image data recorded in the SDRAM in sections 2.8.2 and 2.8.3, the host can redo the image data acquisition by issuing the GetObjectInfo command.

No.	Description
1	The USB connection is cut. (Such as the case that the USB cable is extracted.)
2	The camera returns an error to the GetObject or the GetPartialObject command.
3	It is desirable for the host to redo the acquisition of the SDRAM image.

When the image data that is not sent yet exists in the SDRAM, the camera must retain it even if the USB connection is cut.

If the shooting has been performed with “RAW+JPEG” and either of the image data has been sent normally, only the other image data should be sent again.

2.11 Operation with the Empty Battery

When the battery is exhausted, the camera cannot detect the card and notify the host of no card status even if it is inserted.

Do Not Copy

2.12 Sending a Voice Memo File

The host sends the information of the voice memo file (WAV) to the camera using the SendPartialObjectInfo command, and then sends the voice memo file to the camera using the SendPartialObject command.

The term "sending a voice memo file" refers to the period from when the host completes execution of the SendPartialObjectInfo command to when the host completes sending the voice memo file using the SendPartialObject command.

2.12.1 Sequence to Send a Voice Memo File

The command sequence to send a voice memo file from the host to the camera is as follows.

No.	Description
1	The host issues the ChangeCameraMode command to change the camera to remote mode.
2	The host issues the SendPartialObjectInfo command to send the information of the voice memo file to the camera.
3	The host issues the SendPartialObject command to send the voice memo file. (Divided if the size is large)
4	The voice memo file has been sent and saved to the card, then the camera issues an ObjectAdded event.
5	The host issues the ChangeCameraMode command to change the camera to PC camera mode.

2.12.2 Conditions for Cancellation

If any of the following conditions are met while sending the voice memo file, the transmission of the voice memo file will be canceled. At this time, the camera discards the already received ObjectInfo DataSet. Additionally, if the camera already has a received voice memo file, it discards the received file.

No.	Conditions
1	If the camera receives the ObjectInfo DataSet again
2	If execution of the SendPartialObject command fails
3	When PTP communication ends
4	When the card is removed

2.12.3 Restrictions

If the camera receives a command other than the following while sending a voice memo file, it will return an error (Access_Denied).

Commands like the following will return this error.

・Commands to start camera operation

・Commands that access storage

Commands that connect/disconnect communication or commands that only get values do not return this error.

Operation Code	Description
0x1001	GetDeviceInfo
0x1002	OpenSession
0x1003	CloseSession
0x1014	GetDevicePropDesc
0x1015	GetDevicePropValue

Do Not Copy

0x90C7	GetEvent
0x90C8	DeviceReady
0x90CC	GetPicCtrlData
0x940D	GetPicCtrlDataEx
0x941C	GetEventEx
0x942E	GetHLGQualityData
0x9439	GetVendorCodes
0x943A	GetDevicePropDescEx
0x943B	GetDevicePropValueEx
0x943E	GetDevicePropDescList
0x943F	GetDevicePropValueList
0x9443	GetPicCtrlDataList
0x9444	GetPicCtrlCapabilityList
0x9447	GetOpenCaptureInfo
0x944C	GetCommandFeature
0x9470	GetManualSettingLensData2
0x9472	SendParitalObjectInfo
0x9473	SendPartialObject

Do Not Copy

2.13 Auto Capture

Definitions of terms used in this document for auto capture are listed below.

Terms	Description
Capture area	All focus points whose subject detection settings can be changed in capture area settings.
Focus point where subject detection is enabled	A focus point with a green frame that is displayed when a focus point for which subject detection is enabled in confirmation mode or distance setting is detecting a subject.
Shooting range	Near and Far values that can be set in distance settings.
Lenses with restrictions	Lenses that cannot convert the focal length of the lens into distance information.
Lenses without restrictions	Lenses that can convert the focal length of the lens into distance information.
Advanced mode	Auto capture modes below. ・Advanced: Motion ・Advanced: Subject detection ・Advanced: Distance

Do Not Copy

3 Device Requests

3.1 Standard Device Requests

Request		wIndex	
		Data stage	Status stage
Get Status	Device	The current device power status and the setting of REMOTE_WAKEUP function	Receive NULL data
	Endpoint: Endpoint number that is supported	The current ENDPOINT_STALL status	Receive NULL data
	Endpoint: Endpoint number that is not supported	STALL response	-
Clear Feature	Device: DEVICE_REMOTE_WAKEUP	-	Return NULL data
	Endpoint: END_POINT_HALT Endpoint number that is supported	-	Return NULL data
	Endpoint: END_POINT_HALT Endpoint number that is not supported	-	STALL response
Set Feature	Device: DEVICE_REMOTE_WAKEUP	-	Return NULL data
	Endpoint: END_POINT_HALT Endpoint number that is supported	-	Return NULL data
	Endpoint: END_POINT_HALT Endpoint number that is not supported	-	STALL response
Set Address		-	Return NULL data
Get Descriptor		The specified descriptor	Receive NULL data
Set Descriptor		STALL response	-
Get Configuration		The current configuration value	Return NULL data
Set Configuration	Configuration number that is supported	-	Return NULL data
	Configuration number that is not supported	-	STALL response
Set Interface	Interface number and alternate number that are supported	-	Return NULL data
	Interface number and alternate number that are not supported	-	STALL response
Get Interface	Interface number that is supported	The current alternate value	Return NULL data
	Interface number that is not supported	STALL response	-
Synch Frame		STALL response	-

Do Not Copy

3.2 Class-Specific Requests

The camera supports the class-specific requests below.

3.2.1 Cancel Request

This request is used for the host to cancel the data transfer.

bmRequestType	bRequest	wValue	wIndex	wLength
00100001b	01100100b	0000h	0000h	06h

The camera receives the Cancel request data according to the following format.

Offset	Field	Size	Value	Description
0	Cancellation Code	2	Code	0x4001
2	TransactionID	4	Number	TransactionID

The camera cancels the command processing that corresponds to the TransactionID.

3.2.2 DeviceReset Request

This request is sent from the host to the camera in order to make the device become in the idle status when the Bulk Pipe is stalled.

bmRequestType	bRequest	wValue	wIndex	wLength
00100001b	01100110	0000h	0000h	0

3.2.3 GetDeviceStatus Request

This request is used for the host to acquire the device information for the recovery of the endpoint that is in the halt status.

bmRequestType	bRequest	wValue	wIndex	wLength
10100001b	01100110	0000h	0000h	0

The camera sends the GetDeviceStatus request data according to the following format.

Offset	Field	Size	Value	Description
0	WLength	2	Number	4
2	Code	2	Code	0x2001: Status OK 0x2019: DeviceBusy

Do Not Copy

4 Descriptors

4.1 Standard Descriptors

The camera has the following standard descriptors.

4.1.1 Device Descriptor

4.1.1.1 HIGH-SPEED

USB 2.x				
Offset	Field	Size	Value	Description
0	bLength	1	12h	Size of the descriptor
1	bDescriptorType	1	01h	Type of the descriptor (Device descriptor)
2	bcdUSB	2	0210h	USB specification number (0210h=Revision 2.10)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	40h	Maximum packet size of endpoint 0
8	idVendor	2	04B0h	Vendor ID (“NIKON”)
10	idProduct	2	0450h	Product ID
12	bcdDevice	2	0100h	Device release number (0100h=1.00)
14	iManufacture	1	01h	Index of the string descriptor describing the manufacturer name
15	iProduct	1	02h	Index of the string descriptor describing the product name
16	iSerialNumber	1	03h	Index of the string descriptor describing the serial number
17	bNumConfigurations	1	01h	The number of configurations

USB 3.x				
Offset	Field	Size	Value	Description
0	bLength	1	12h	Size of the descriptor
1	bDescriptorType	1	01h	Type of the descriptor (Device descriptor)
2	bcdUSB	2	0320h	USB specification number (0320h=Revision 3.20)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	09h	Maximum packet size of endpoint 0
8	idVendor	2	04B0h	Vendor ID (“NIKON”)
10	idProduct	2	0450h	Product ID
12	bcdDevice	2	0100h	Device release number (0100h=1.00)
14	iManufacture	1	01h	Index of the string descriptor describing the manufacturer name
15	iProduct	1	02h	Index of the string descriptor describing the product name
16	iSerialNumber	1	03h	Index of the string descriptor describing the serial number
17	bNumConfigurations	1	01h	The number of configurations

Do Not Copy

4.1.1.2 FULL-SPEED

USB 2.x				
Offset	Field	Size	Value	Description
0	bLength	1	12h	Size of the descriptor
1	bDescriptorType	1	01h	Type of the descriptor (Device descriptor)
2	bcdUSB	2	0210h	USB specification number (0210h=Revision 2.10)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	40h	Maximum packet size of endpoint 0
8	idVendor	2	04B0h	Vendor ID (“NIKON”)
10	idProduct	2	0450h	Product ID
12	bcdDevice	2	0100h	Device release number (0100h=1.00)
14	iManufacture	1	01h	Index of the string descriptor describing the manufacturer name
15	iProduct	1	02h	Index of the string descriptor describing the product name
16	iSerialNumber	1	03h	Index of the string descriptor describing the serial number
17	bNumConfigurations	1	01h	The number of configurations

USB 3.x				
Offset	Field	Size	Value	Description
0	bLength	1	12h	Size of the descriptor
1	bDescriptorType	1	01h	Type of the descriptor (Device descriptor)
2	bcdUSB	2	0320h	USB specification number (0320h=Revision 3.20)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	09h	Maximum packet size of endpoint 0
8	idVendor	2	04B0h	Vendor ID (“NIKON”)
10	idProduct	2	0450h	Product ID
12	bcdDevice	2	0100h	Device release number (0100h=1.00)
14	iManufacture	1	01h	Index of the string descriptor describing the manufacturer name
15	iProduct	1	02h	Index of the string descriptor describing the product name
16	iSerialNumber	1	03h	Index of the string descriptor describing the serial number
17	bNumConfigurations	1	01h	The number of configurations

Do Not Copy

4.1.2 Device_Qualifier Descriptor

USB 2.x				
Offset	Field	Size	Value	Description
0	bLength	1	0Ah	Size of the descriptor
1	bDescriptorType	1	06h	Type of the descriptor (Device_Qualifier descriptor)
2	bcdUSB	2	0210h	USB specification number (0210h=Revision 2.10)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	40h	Maximum packet size of endpoint 0
8	bNumComfigurations	1	01h	The number of configurations other than USB2.0
9	bReserved	1	00h	Reserved

USB 3.x				
Offset	Field	Size	Value	Description
0	bLength	1	0Ah	Size of the descriptor
1	bDescriptorType	1	06h	Type of the descriptor (Device_Qualifier descriptor)
2	bcdUSB	2	0210h	USB specification number (0210h=Revision 2.10)
4	bDeviceClass	1	00h	Class (specified by the interface descriptor)
5	bDeviceSubClass	1	00h	Subclass (specified by the interface descriptor)
6	bDeviceProtocol	1	00h	Protocol (specified by the interface descriptor)
7	bMaxPacketSize0	1	40h	Maximum packet size of endpoint 0
8	bNumComfigurations	1	01h	The number of configurations other than USB2.0
9	bReserved	1	00h	Reserved

Do Not Copy

4.1.3 Configuration Descriptor

Offset	Field	Size	Value	Description	
0	bLength	1	09h	Size of the descriptor	
1	bDescriptorType	1	02h	Type of the descriptor (Configuration descriptor)	
2	wTotalLength	2	0027h	The total length of the data returned for this configuration All the descriptors are included (configuration, interface, endpoint, and class-specific). Total length is 0039h when the SuperSpeed is used.	
4	bNumInterfaces	1	01h	The number of interfaces	
5	bConfiguration Value	1	01h	The value used as an argument to Set Configuration Request for selecting this configuration	
6	iConfiguration	1	00h	Index of the string descriptor	
7	bmAttributes	1	C0h	Configuration characteristics	
				Bit7	Reserved (1)
				Bit6	Self-powered
				Bit5	Remote Wakeup
				Bit4…0	Reserved (0)
8	MaxPower	1	FAh	Maximum power consumption supplied from the bus to the USB device (2 mA). 003fh (8 mA) for SuperSpeed.	

4.1.4 Other_Speed_Configuration Descriptor

Offset	Field	Size	Value	Description	
0	bLength	1	09h	Size of the descriptor	
1	bDescriptorType	1	07h	Type of the descriptor (OtherSpeedConfiguration descriptor)	
2	wTotalLength	2	0027h	The total length of the data returned for this configuration All the descriptors are included (configuration, interface, endpoint, and class-specific).	
4	bNumInterfaces	1	01h	The number of interfaces	
5	bConfiguration Value	1	01h	The value used as an argument to Set Configuration Request for selecting this configuration	
6	iConfiguration	1	00h	Index of the string descriptor	
7	bmAttributes	1	C0h	Configuration characteristics	
				Bit7	Reserved (1)
				Bit6	Self-powered
				Bit5	Remote Wakeup
				Bit4…0	Reserved (0)
8	MaxPower	1	FAh	Maximum power consumption supplied from the bus to the USB device (2 mA)	

Do Not Copy

4.1.5 Interface Descriptor

Offset	Field	Size	Value	Description
0	bLength	1	09h	Size of the descriptor
1	bDescriptorType	1	04h	Type of the descriptor (Interface descriptor)
2	bInterfaceNumber	1	00h	Interface number (0 is the standard.)
3	bAlternatingSetting	1	00h	The value used for selecting the interface
4	bNumEndpoints	1	03h	The number of endpoints
5	bInterfaceClass	1	06h	Class code (06=ImageInterface)
6	bInterfaceSubClass	1	01h	Subclass code (01=Still Image Capture Device)
7	bInterfaceProtocol	1	01h	Protocol (01h=Bulk-Only Transport)
8	iInterface	1	00h	Index of the string descriptor describing this interface

4.1.6 Endpoint Descriptor

4.1.6.1 Bulk-Out Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	02h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0400h	Maximum packet size of this endpoint (0400h=1024Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

For HIGH-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	02h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0200h	Maximum packet size of this endpoint (0200h=512Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

Do Not Copy

For FULL-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	02h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0040h	Maximum packet size of this endpoint (0040h=64Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

Do Not Copy

4.1.6.2 Bulk-In Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	81h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control、01 = Isochronous、10 = Bulk、11 = Interrupt)	
4	wMaxPacketSize	2	0400h	Maximum packet size of this endpoint (0400h=1024Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

For HIGH-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	81h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control、01 = Isochronous、10 = Bulk、11 = Interrupt)	
4	wMaxPacketSize	2	0200h	Maximum packet size of this endpoint (0200h=512Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

For FULL-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	81h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	02h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control、01 = Isochronous、10 = Bulk、11 = Interrupt)	
4	wMaxPacketSize	2	0040h	Maximum packet size of this endpoint (0040h=64Byte)	
6	bInterval	1	00h	Polling interval (invalid for the Bulk and the Control endpoints)	

Do Not Copy

4.1.6.3 Interrupt Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	83h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	03h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0018h	Maximum packet size of this endpoint (0018h=24Byte)	
6	bInterval	1	0Ah	Polling interval (0Ah = 10ms)	

For HIGH-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	83h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	03h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0008h	Maximum packet size of this endpoint (0008h=8Byte)	
6	bInterval	1	09h	Polling interval	

For FULL-SPEED

Offset	Field	Size	Value	Description	
0	bLength	1	07h	Size of the descriptor	
1	bDescriptorType	1	05h	Type of the descriptor (Endpoint descriptor)	
2	bEndpointAddress	1	83h	Address of the endpoint	
				Bit7	Transfer direction (0=OUT, 1=IN)
				Bit6…4	Reserved (0)
				Bit3…0	Endpoint number
3	bmAttributes	1	03h	Attributes of the endpoint	
				Bit1…0	Transfer type
				(00 = Control, 01 = Isochronous, 10 = Bulk, 11 = Interrupt)	
4	wMaxPacketSize	2	0008h	Maximum packet size of this endpoint (0008h=8Byte)	
6	bInterval	1	09h	Polling interval	

Do Not Copy

4.1.7 Super Speed Endpoint Companion Descriptor

4.1.7.1 Bulk-Out Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description
0	bLength	1	06h	Size of the descriptor
1	bDescriptorType	1	30h	Type of the descriptor (SuperSpeed Endpoint Companion Descriptor)
2	bMaxBurst	1	0Fh	Maximum number of packets that can be transmitted and received by burst transfer. (Number of burst transfers -1) should be set. The maximum value is 15
3	bmAttributes	1	00h	Maximum number of streams for Bulk-Endpoint. 0 for no stream definition. In the case of an isochronous end point, the maximum number of packets in the service interval.
4	wBytesPerInterval	2	0000h	Maximum number of bytes at which a fixed interval interrupt or isochronous endpoint will transfer per service interval.

Do Not Copy

4.1.7.2 Bulk-In Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description
0	bLength	1	06h	Size of the descriptor
1	bDescriptorType	1	30h	Type of the descriptor (SuperSpeed Endpoint Companion Descriptor)
2	bMaxBurst	1	0Fh	Maximum number of packets that can be transmitted and received by burst transfer. (Number of burst transfers -1) should be set. The maximum value is 15
3	bmAttributes	1	00h	Maximum number of streams for Bulk-Endpoint. 0 for no stream definition. In the case of an isochronous end point, the maximum number of packets in the service interval.
4	wBytesPerInterval	2	0000h	Maximum number of bytes at which a fixed interval interrupt or isochronous endpoint will transfer per service interval.

Do Not Copy

4.1.7.3 Interrupt Endpoint

For SUPER-SPEED

Offset	Field	Size	Value	Description
0	bLength	1	06h	Size of the descriptor
1	bDescriptorType	1	30h	Type of the descriptor (SuperSpeed Endpoint Companion Descriptor)
2	bMaxBurst	1	0Fh	Maximum number of packets that can be transmitted and received by burst transfer. (Number of burst transfers -1) should be set. The maximum value is 15
3	bmAttributes	1	00h	Maximum number of streams for Bulk-Endpoint. 0 for no stream definition. In the case of an isochronous end point, the maximum number of packets in the service interval.
4	wBytesPerInterval	2	0018h	Maximum number of bytes at which a fixed interval interrupt or isochronous endpoint will transfer per service interval.

Do Not Copy

4.1.8 String Descriptor

4.1.8.1 Index1 (iManufacture)

Offset	Field	Size	Value	Description
0	bLength	1	0Ch	Size of the descriptor
1	bDescriptorType	1	03h	Type of the descriptor (String descriptor)
2	bString	10	4E00h 4900h 4B00h 4F00h 4E00h	Unicode character string “NIKON”

Do Not Copy

4.1.8.2 Index2 (iProduct)

Offset	Field	Size	Value	Description
0	bLength	1	1Ch	Size of the descriptor
1	bDescriptorType	1	03h	Type of the descriptor (String descriptor)
2	bString	26	4E00h 4900h 4B00h 4F00h 4E00h 2000h 4400h 5300h 4300h 2000h 5A00h 2000h 3900h	Unicode character string “NIKON DSC Z 9

Do Not Copy

4.1.8.3 Index3 (iSerialNumber)

Offset	Field	Size	Value	Description
0	bLength	1	42h	Size of the descriptor
1	bDescriptorType	1	03h	Type of the descriptor (String descriptor)
2	bString	64	XX00h XX00h XX00h XX00h XX00h XX00h XX00h XX00h XX00h XX00h XX00h XX00h	Unicode character string “XXXXXXXXXXXX” Currently 0000h is set after the twelfth character.

Do Not Copy

4.1.9 BOS Descriptor

Offset	Field	Size	Value	Description
0	bLength	1	05h	Size of the descriptor
1	bDescriptorType	1	0Fh	Type of the descriptor (BOS descriptor)
2	wTotalLength	2	0016h	Length of this descriptor and all of its sub descriptors
4	bString	1	02h	The number of separate device capability descriptors in the BOS

4.1.10 USB 2.0 Extension Descriptor

Offset	Field	Size	Value	Description
0	bLength	1	07h	Size of the descriptor
1	bDescriptorType	1	10h	Type of the descriptor (DEVICE CAPABILITY descriptor)
2	bDevCapabilityType	1	02h	Capability type (USB 2.0 Extension)
3	bmAttributes	4	00000006h	Bit0 : Reserved Bit1 : LPM (Link Power Management protocol) Bit2 : BESL & Altermate HIRD definitions supported Bit3 to Bit31 : Reserved

4.1.11 Super Speed Device Capabilities Descriptor

Offset	Field	Size	Value	Description
0	bLength	1	0Ah	Size of the descriptor
1	bDescriptorType	1	10h	Type of the descriptor (DEVICE CAPABILITY descriptor)
2	bDevCapabilityType	1	03h	Capability type (SUPERSPEED_USB)
3	bmAttributes	1	00h	Bit0 : Reserved Bit1 : LTM Capable Bit2 to Bit31 : Reserved
4	wSpeedsSupported	2	000Eh	Bit0 : Reserved Bit1 : full-speed supported Bit2 : high-speed supported Bit3 : 5Gbs supported Bit4 to Bit15 : Reserved
6	bFunctionalitySupport	1	01h	
7	bU1DevExitLat	1	01h	U1 Device Exit Latency. 01h : Less than 1μs
8	wU1DevExitLat	2	0065h	U2 Device Exit Latency. 0065h : Less than 101μs

4.2 Class-Specific Descriptor

The camera has no class-specific descriptor.

Do Not Copy

5 Protocol

The camera supports the Bulk-Only Transport protocol. In the Bulk-Only protocol, all transmission/reception of the command, data, and response are performed by the bulk transfer. When an asynchronous event is generated in the camera, the information is sent by the Interrupt transfer.

The protocol processing is composed of three phases (command phase, data phase, and response phase). All the commands, data, and responses are stored in the Generic Container Structure and transferred between the host and the camera. The processing starts by sending the command (Bulk-Out transfer) from the host to the camera first (command phase). Then the data is transmitted or received by the bulk transfer if the command needs the data transfer (data phase). The processing is completed when the device transmits the command response to the host (Bulk-In transfer) last (response phase). The command and the response phases are always present.

When sending the event to the host, the contents of the event to be sent are stored according to the asynchronous event interrupt data format and sent as the asynchronous event (Interrupt transfer).

Do Not Copy

5.1 Generic Container Structure

Each field data of the Generic Container Structure is transferred in order of the LSB first (little endian). The Container Type and the contents of the Payload differ according to the phase difference.

Offset	Size	Field	Description
0	4	Container Length	The number of bytes in the unsigned integer of this container is coded. The still image capture device decides the container size by using this field.
4	2	Container Type	This field shows the container type. 0: Not defined 1: Command block 2: Data block 3: Response block 4: Event block
6	2	Code	This field conforms to MTP Specification v1.0. (OperationCode, ResponseCode, or EventCode) For the data block, the OperationCode of the command block is used.
8	4	TransactionID	This is the number of the 32-bit unsigned integer created by the host related to all the phases. It starts with 0x00000001 and is incremented along with the command block issue. When the OperationCode is OpenSession, 0x00000000 is set and 0x00000001 is given by the next command block. When the number reaches the maximum value (0xFFFFFFFE), the next TransactionID becomes 0x00000001.
12	??	Payload	Differs depending on the phase.

Do Not Copy

5.2 Asynchronous Event Interrupt Data Format

When an event is generated in the camera, the information is transferred to the host according to the following format. Each field data is transferred in order of the LSB first (little endian).

Offset	Size	Field	Description
0	4	Container Length	The number of bytes in the unsigned integer of the length of this container is coded. The value is 0x00000010.
4	2	Container Type	Container Type = 0x0004 (Event)
6	2	Code	EventCode
8	4	TransactionID	TransactionID = 0xFFFFFFFF
12	??	Payload	Differs depending on the event.

5.3 Phases

The communication between the camera and the host is composed of the three phases; command phase, data phase, and response phase. The details of each phase are shown below.

5.3.1 Command Phase

In the command phase, the host sends the Generic Container Structure of the command block to the camera. The processing is started by sending the command block from the host in the command phase. The camera performs the processing according to the OperationCode sent in the command block. For the OperationCode and its processing, refer to section 6.2. The Generic Container Structure field data set in the command phase is shown below.

Offset	Size	Field	Description
0	4	Container Length	Indicates the length of this container. Each code has its own container length.
4	2	Container Type	1: Command block
6	2	Code	Operation Code
8	4	TransactionID	This is the number given by the 32-bit unsigned integer created by the host related to all the phases. It starts with 0x00000001 and is incremented by 1 along with the command block issue. When the OperationCode is OpenSession, 0x00000000 is set and 0x00000001 is given by the next command block. When the number reaches the maximum value of the field (0xFFFFFFFE), the next TransactionID becomes 0x00000001.
12	4	Parameter 1	This field includes the operation parameter. The format and the meaning of the parameter differ depending on the OperationCode.
16	4	Parameter 2	
20	4	Parameter 3	

5.3.2 Data Phase

The data phase is an optional phase used to transfer the data that is larger than what can fit in the data sets of the command or the response block. According to the OperationCode specified by the command block, the data is transferred from the host to the camera, from the camera to the host, or not transferred at all. For the OperationCode and the corresponding data contents, refer to section 6.2. The Generic Container Structure field data set in the data phase is shown below.

Offset	Size	Field	Description
0	4	Container Length	Indicates the length of this container. The container length differs depending on the size of the Payload.
4	2	Container Type	2: Data block
6	2	Code	The corresponding OperationCode sent in the command phase is set.
8	4	TransactionID	This is the number given by the 32-bit unsigned integer created by the host related to all the phases. It starts with 0x00000001 and is incremented by 1 along with the command block issue. When the OperationCode is OpenSession, 0x00000000 is set and 0x00000001 is given by the next command block. When the number reaches the maximum value of the field (0xFFFFFFFE), the next TransactionID becomes 0x00000001.
12	??	Payload	The contents of this field differ depending on the OperationCode.

Do Not Copy

5.3.3 Response Phase

In the response phase, the Generic Container Structure of the response block is sent from the camera to the host in order to indicate whether the command sent in the command phase succeeds or fails.

The contents of the response can be identified by the ResponseCode stored in the Code field. For the ResponseCode, refer to section 6.3.

The Generic Container Structure field data set in the response phase is shown below.

Offset	Size	Field	Description
0	4	Container Length	Indicates the length of this container. Each code has its own container length.
4	2	Container Type	3: Response block
6	2	Code	The ResponseCode is set in order to indicate whether the processing corresponding to the OperationCode sent in the command phase succeeds or fails.
8	4	TransactionID	This is the number given by the 32-bit unsigned integer created by the host related to all the phases. It starts with 0x00000001 and is incremented by 1 along with the command block issue. When the OperationCode is OpenSession, 0x00000000 is set and 0x00000001 is given by the next command block. When the number reaches the maximum value of the field (0xFFFFFFFE), the next TransactionID becomes 0x00000001.
12	4	Response Parameter	This field includes the response parameter. The format and the meaning of the parameter differ depending on the OperationCode and the ResponseCode.

Do Not Copy

5.4 Error Handling

If the following state is detected, the camera returns to the command phase status.

No.	Description
1	Bus reset
2	Reset recovery

5.4.1 Command Block Reception Failure

When the command block reception fails and the reset recovery and the bus reset are not detected, the camera stalls the Bulk-In and the Bulk-Out endpoints and returns to the command phase status.

5.4.2 Command Block Invalidity

When the following error is detected after the command block reception succeeds and the reset recovery and the bus reset are not detected, the camera stalls the Bulk-In and the Bulk-Out endpoints.

No.	Description
1	Container Type of Generic Container Structure is other than the command block.

5.4.3 Command Execution Error

When the command execution error is detected after a valid command block is received, the phase is changed to the response phase and the response code corresponding to the error is set in the Code field of the Generic Container Structure and sent. Stalling is not performed.

Do Not Copy

6 Code

The codes supported by the camera are described.

6.1 ObjectFormatCode

The ObjectFormatCode indicates the format of the objects in the card inserted in the camera (image file and script file) and the related objects (corresponding to the directories and the virtual association representing the relation between the images that conform to the DCF standards and the DCF objects in the camera). The following table represents the ObjectFormatCodes supported by the camera.

ObjectFormatCode	Format	Description
0x3000	Undefined	NDF (dust reference image) NEF (when MTP is not supported) (In the definition of MTP Specification v1.0, it is defined as “Format not defined”.)
0x3001	Association	Association (Indicates the directories or the virtual association representing the relation between the images that conform to the DCF standards and the DCF objects.)
0x3002	Script	Script (only the virtual script file is the target)
0x3008	WAV	AudioClip
0x3800	Unknown Image Object	NEF (when MTP is supported)
0x3801	EXIF/JPEG	JEIDA Standard
0x3808	JFIF	JPEG File Interchange Format (represents the thumbnail format.)
0x300D	MOV	Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF (RGB)	Tag Image File Format
0xB201	NEV	N-RAW
0xB982	MP4 Container	ISO 14496-1

The ObjectFormatCode may be used as one of the parameters in the command phase.
It is also used in the ObjectInfo data set.

Do Not Copy


6.1.1 Association Type

There are various Types in the Association defined by ObjectFormatCode. Association is for representing the folders and the file system. All the objects that belong to the Association correspond to the branches of the tree structure under the Association. The associations to which the objects belong are specified in the ParentObject field of the ObjectInfo data set for each object. Type is specified in the AssociationType field of the ObjectInfo data set for the associations object. The Association Type used in the camera is shown below.

Association Code	Association Type	Description
0x0001	GenericFolder	Indicates the general directory. For the camera, it indicates the DCF image directory and DCF directory.

An example of how the Association is used in the DCF file system for the camera is shown below. Note, however, that the directory name, the file name, and the ObjectHandle value may differ from the ObjectHandle that is actually used in the camera to simplify the explanation.

ObjectHandle	Description	ObjectFormatCode	ParentObject
0x00000001	¥DCIM folder	0x3001	0x00000000
0x00000002	¥DCIM¥100NIKON	0x3001	0x00000001
0x00000003	¥DCIM¥100NIKON¥DSC_0001.JPG	0x3801	0x00000002
0x00000004	¥DCIM¥100NIKON¥DSC_0002.NEF	0x3000	0x00000002
0x00000005	¥DCIM¥100NIKON¥DSC_0003.JPG	0x3801	0x00000002
0x00000006	¥DCIM¥100NIKON¥DSC_0003.NEF	0x3000	0x00000002

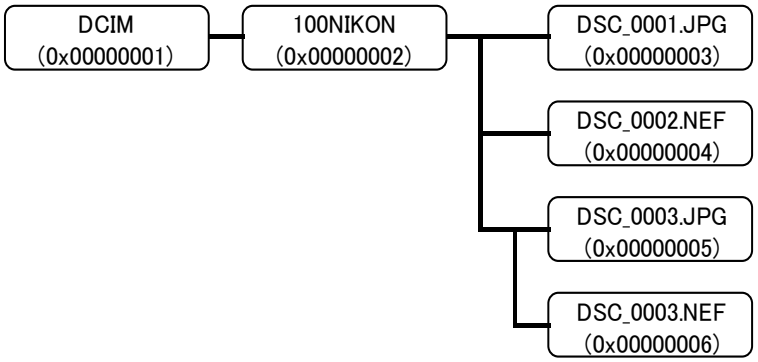

Do Not Copy

6.2 Operation Code

The OperationCode is the command that is used by the host to request the operation of the camera in the command phase. The OperationCode is sent as a part of the command block data set.

OperationDataNone, OperationReceiveData and OperationSendData can execute 4Bytes OperationCodes.

Operation Codes that cannot be executed in photo mode, video mode, or video recording are described in the table below. Access_Denied response is sent when execution is disabled.

The OperationCodes supported by the camera are shown below.

Operation Code	Description	Reference item	Photo mode	Video mode	During video recording
0x1001	GetDeviceInfo	6.2.1.1	✓	✓	✓
0x1002	OpenSession	6.2.1.2	✓	✓	-
0x1003	CloseSession	6.2.1.3	✓	✓	✓
0x1004	GetStorageIDs	6.2.1.4	✓	✓	✓
0x1005	GetStorageInfo	6.2.1.5	✓	✓	✓
0x1006	GetNumObjects	6.2.1.6	✓	✓	✓
0x1007	GetObjectHandles	6.2.1.7	✓	✓	✓
0x1008	GetObjectInfo	6.2.1.8	✓	✓	-
0x1009	GetObject	6.2.1.9	✓	✓	-
0x100A	GetThumb	6.2.1.10	✓	✓	-
0x100B	DeleteObject	6.2.1.11	✓	✓	-
0x100C	SendObjectInfo	6.2.1.12	✓	✓	-
0x100D	SendObject	6.2.1.13	✓	✓	-
0x100E	InitiateCapture	6.2.1.14	✓	-	-
0x100F	FormatStore	6.2.1.15	✓	✓	-
0x1012	SetObjectProtection	6.2.1.16	✓	✓	-
0x1014	GetDevicePropDesc	6.2.1.17	✓	✓	✓
0x1015	GetDevicePropValue	6.2.1.18	✓	✓	✓
0x1016	SetDevicePropValue	6.2.1.19	✓	✓	✓
0x101B	GetPartialObject	6.2.1.20	✓	✓	-
0x90C0	InitiateCaptureRecInSdram	6.2.4.2	✓	-	-
0x90C1	AfDrive	6.2.5.1	✓	✓	✓
0x90C2	ChangeCameraMode	6.2.2.15	✓	✓	-
0x90C3	DeleteImagesInSdram	6.2.3.9	✓	✓	-
0x90C4	GetLargeThumb	6.2.3.6	✓	✓	-
0x90C7	GetEvent	6.2.2.12	✓	✓	✓
0x90C8	DeviceReady	6.2.2.11	✓	✓	✓
0x90C9	SetPreWbData	6.2.8.1	✓	✓	-
0x90CB	AfAndCaptureRecInSdram	6.2.4.3	✓	-	-
0x90CC	GetPicCtrlData	6.2.9.1	✓	✓	✓
0x90CD	SetPicCtrlData	6.2.9.3	✓	✓	-
0x90CE	DeleteCustomPicCtrl	6.2.9.4	✓	✓	-
0x90CF	GetPicCtrlCapability	6.2.9.5	✓	✓	✓
0x9201	StartLiveView	6.2.6.1	✓	✓	✓

Do Not Copy

0x9202	EndLiveView	6.2.6.2	✓	✓	✓
0x9203	GetLiveViewImage	6.2.6.3	✓	✓	✓
0x9204	MfDrive	6.2.5.3	✓	✓	✓
0x9205	ChangeAfArea	6.2.6.6	✓	✓	✓
0x9206	AfDriveCancel	6.2.5.2	✓	✓	✓
0x9207	InitiateCaptureRecInMedia	6.2.4.1	✓	-	-
0x9209	GetVendorStorageIDs	6.2.3.1	✓	✓	✓
0x920A	StartMovieRecord	6.2.7.1	-	✓	-
0x920B	EndMovieRecord	6.2.7.2	✓	✓	✓
0x920C	TerminateCapture	6.2.4.4	✓	✓	-
0x920F	GetFhdPicture	6.2.3.7	✓	✓	-
0x9400	GetPartialObjectHighSpeed	6.2.3.5	✓	✓	-
0x9401	GetIPTCInfo	6.2.10.1	✓	✓	✓
0x9402	StartSpotWb	6.2.8.2	-	✓	-
0x9403	EndSpotWb	6.2.8.3	✓	✓	-
0x9404	ChangeSpotWbArea	6.2.8.4	✓	✓	-
0x9405	MeasureSpotWb	6.2.8.5	✓	✓	-
0x9406	EndSpotWbResultDisp	6.2.8.6	✓	✓	-
0x940C	CancelImagesInSdram	6.2.3.8	✓	✓	-
0x9412	GetIPTCPresetInfo	6.2.10.2	✓	✓	✓
0x9413	SetIPTCPresetInfo	6.2.10.3	✓	✓	-
0x9414	GetSBHandles	6.2.12.1	✓	✓	✓
0x9415	GetSBAttrDesc	6.2.12.2	✓	✓	✓
0x9416	GetSBAttrValue	6.2.12.3	✓	✓	✓
0x9417	SetSBAttrValue	6.2.12.4	✓	✓	-
0x9418	GetSBGroupAttrDesc	6.2.12.5	✓	✓	✓
0x9419	GetSBGroupAttrValue	6.2.12.6	✓	✓	✓
0x941A	SetSBGroupAttrValue	6.2.12.7	✓	✓	-
0x941B	TestFlash	6.2.12.8	✓	✓	✓
0x941C	GetEventEx	6.2.2.13	✓	✓	✓
0x9420	SaveCameraSetting	6.2.2.20	✓	✓	-
0x9421	GetObjectSize	6.2.3.2	✓	✓	-
0x9422	ChangeMonitorOff	6.2.2.17	✓	✓	✓
0x9423	GetLiveViewCompressedSize	6.2.6.5	✓	✓	✓
0x9424	StartTracking	6.2.6.7	✓	✓	✓
0x9425	EndTracking	6.2.6.8	✓	✓	✓
0x9426	ChangeAELock	6.2.4.5	✓	✓	✓
0x9428	GetLiveViewImageEx	6.2.6.4	✓	✓	✓
0x942E	GetHLGQualityData	6.2.7.3	✓	✓	✓
0x942F	SetHLGQualityData	6.2.7.4	✓	✓	-
0x9431	GetPartialObjectEx	6.2.3.4	✓	✓	-
0x9433	InitiatePixelMapping	6.2.4.6	✓	✓	-
0x9434	GetObjectsMetaData	6.2.3.3	✓	✓	-
0x9435	ChangeApplicationMode	6.2.2.16	✓	✓	-
0x9436	ResetMenu	6.2.2.21	✓	✓	-
0x9439	GetVendorCodes	6.2.2.1	✓	✓	✓
0x943A	GetDevicePropDescEx	6.2.2.5	✓	✓	✓

Do Not Copy

0x943B	GetDevicePropValueEx	6.2.2.6	✓	✓	✓
0x943C	SetDevicePropValueEx	6.2.2.7	✓	✓	✓
0x943D	RegisterDevicePropGroup	6.2.2.8	✓	✓	✓
0x943E	GetDevicePropDescList	6.2.2.9	✓	✓	✓
0x943F	GetDevicePropValueList	6.2.2.10	✓	✓	✓
0x9440	OperationDataNone	6.2.2.2	✓	✓	✓
0x9441	OperationReceiveData	6.2.2.3	✓	✓	✓
0x9442	OperationSendData	6.2.2.4	✓	✓	✓
0x9443	GetPicCtrlDataList	6.2.9.2	✓	✓	✓
0x9444	GetPicCtrlCapabilityList	6.2.9.6	✓	✓	✓
0x9445	InitiateOpenCaptureV	6.2.4.7	✓	-	-
0x9446	TerminateOpenCaptureV	6.2.4.8	✓	-	-
0x9447	GetOpenCaptureInfo	6.2.4.9	✓	✓	✓
0x944C	GetCommandFeature	6.2.2.22	✓	✓	✓
0x9453	SetPortraitImpressionBalanceData	6.2.2.24	✓	✓	-
0x9454	GetPortraitImpressionBalanceDataList	6.2.2.23	✓	✓	✓
0x945C	ChangeAutoCaptureMode	6.2.11.1	✓	✓	-
0x945D	MeasureAutoCaptureFocus	6.2.11.2	✓	✓	-
0x945E	GetCaptureAreaDrawInfo	6.2.11.3	✓	✓	✓
0x945F	GetCaptureArea	6.2.11.4	✓	✓	-
0x9460	SetCaptureArea	6.2.11.5	✓	✓	-
0x9461	ClearEvent	6.2.2.14	✓	✓	✓
0x9463	SetFlickerReductionShutterSpeed	6.2.4.10	✓	✓	✓
0x9464	PowerZoomDrive	6.2.5.4	✓	✓	✓
0x946D	GetCameraSettingData	6.2.2.18	✓	✓	-
0x946E	SendCameraSettingData	6.2.2.19	✓	✓	-
0x9470	GetManualSettingLensData2	6.2.5.5	✓	✓	✓
0x9471	SetAutoCaptureTimingOptions	6.2.11.6	✓	✓	-
0x9472	SendPartialObjectInfo	6.2.3.10	✓	✓	-
0x9473	SendPartialObject	6.2.3.11	✓	✓	-
0x9801	GetObjectPropsSupported	6.2.13.1	✓	✓	✓
0x9802	GetObjectPropDesc	6.2.13.2	✓	✓	✓
0x9803	GetObjectPropValue	6.2.13.3	✓	✓	-
0x9804	SetObjectPropValue	6.2.13.4	✓	✓	-
0x9805	GetObjectPropList	6.2.13.5	✓	✓	-

Do Not Copy

6.2.1 Standard

6.2.1.1 GetDeviceInfo

○ Command Specifications

Operation Code	0x1001
Operation Parameter	Refer to Operation Parameter in this section.
Data	DeviceInfo data set
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the information of the camera (DeviceInfo data set).
The DeviceInfo data set includes information such as the camera version information and the codes supported by the camera.

○ Command Details

This operation is the only operation that may be issued inside or outside of a session.
The contents of the DeviceInfo data set sent by the camera are shown in section 9.1.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.1.2 OpenSession

○ Command Specifications

Operation Code	0x1002
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts the logical connection (session) between the camera and the host.

The SessionID is specified optionally by the host and retained during the session.

○ Operation Parameter

Operation Parameter	Details
Parameter1	SessionID
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	The value of the parameter1 is 0x00000000.
Session_Already_Open	The session between the camera and the host has been already started.

Do Not Copy

6.2.1.3 CloseSession

○ Command Specifications

Operation Code	0x1003
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode closes the logical connection (session) between the camera and the host.

When this operation is performed, the operation being run is terminated. Besides, the camera state changed after OpenSession returns to the default.

State	Contents of change
During shooting operation	Only the shooting operation currently being performed is executed. For the continuous shooting, it is not continued.
During AF operation	The AF operation by the command stops.
During power-zoom driving	The power-zoom driving by the command stops.
During AE lock	AE lock is released (when the AE lock is not assigned in the camera button).
During remote live view	The camera live view is executed.
In the remote mode	The camera enters the PC camera mode.
The recording destination is “SDRAM” or “Card and SDRAM”.	The recording destination is set to “Card”.
In the application mode	Set to OFF.
During forcibly monitor-off	Forcibly monitor-off is released.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Parameter_Not_Supported	An unsupported parameter is specified.

Do Not Copy

6.2.1.4 GetStorageIDs

○ Command Specifications

Operation Code	0x1004
Operation Parameter	None
Data	StorageIDArray
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns a list of the currently valid StorageIDs.
For the application mode, the StorageID with the card not inserted can be acquired by this command. The valid StorageID can be known by using the GetVendorStorageIDs.

○ Command Details

The camera returns the StorageID of each slot.
The StorageID of each slot takes the following values.

StorageID	Details
0x00010001	When the card is inserted in the slot1
0x00010000	When the card is not inserted in the slot1
	When the card in the slot1 is being formatted
	When the battery is exhausted
0x00020001	When the card is inserted in the slot2
0x00020000	When the card is not inserted in the slot2
	When the card in the slot2 is being formatted
	When the battery is exhausted

The format of the StorageIDArray that is sent by the camera is shown below.
Each field data is stored in the little-endian format.

Field	Size (Byte)	Data
NumElement	4	0x00000002 (Two elements for the array)
ArrayEntry1	4	StorageID (slot1)
ArrayEntry2	4	StorageID (slot2)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.1.5 GetStorageInfo

○ Command Specifications

Operation Code	0x1005
Operation Parameter	Refer to Operation Parameter in this section.
Data	StorageInfo
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the information of the card inserted in the camera.

○ Command Details

The camera returns the StorageInfo data set of the card specified by the StorageID.
The StorageIDs supported by the camera are shown in section 6.2.1.4.
The StorageInfo data set sent by the camera is described in section 9.2.

○ Operation Parameter

Operation Parameter	Details
Parameter1	StorageID
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.

Do Not Copy

6.2.1.6 GetNumObjects

○ Command Specifications

Operation Code	0x1006
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	NumObjects

○ Command Outline

The operation by this OperationCode obtains the number of objects that are present in the card. The number of objects recorded in the SDRAM is not included.

○ Command Details

If the new object is being recorded in the card when this command is received, the processing starts after the acquisition of all the data is completed.

The camera returns the number of objects in the card specified by the StorageID. In addition, Parameter2 and Parameter3, which are optional, can be combined.

Operation Parameter	Value	Details
Parameter1	0xFFFFFFFF	All the cards should be the targets.
	StorageID	The specified card should be the target. Refer to section 6.2.1.4.
Parameter2 (Option)	0x00000000	All the object formats should be the targets.
	No value	
	0xFFFFFFFF	All the image formats in the card corresponding to the specified StorageID should be the targets.
	ObjectFormatCode	The specified object format should be the target. Refer to section 6.1.
Parameter3 (Option)	0x00000000	All the directories should be the targets.
	No value	
	0xFFFFFFFF	The objects directly under the root should be the targets.
	ObjectHandle	The objects directly under the specified directory should be the targets.

○ Operation Parameter

Operation Parameter	Details
Parameter1	StorageID
Parameter2	[ObjectFormatCode]
Parameter3	[ObjectHandle of the directory]

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Invalid_Object_Handle	For an invalid object handle
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.

Do Not Copy

Specification_By_Format_Unsupported	The specified ObjectFormatCode is not supported.
Invalid_Parent_Object	An ObjectHandle other than that indicating the directory in the card was specified for ObjectHandle (Parameter3) of the specified directory.
	The specified directory does not exist.

6.2.1.7 GetObjectHandles

○ Command Specifications

Operation Code	0x1007
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectHandleArray
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the handle of the object in the card. The ObjectHandle of the object recorded in the SDRAM is not included.

○ Command Details

If the new object is being recorded in the card when this command is received, the processing starts after the acquisition of all the data is completed.

The camera returns the ObjectHandle in the card specified by the StorageID. In addition, Parameter2 and Parameter3, which are optional, can be combined.

Operation Parameter	Value	Details
Parameter1	0xFFFFFFFF	All the cards should be the targets.
	StorageID	The specified card should be the target. Refer to section 6.2.1.4.
Parameter2 (Option)	0x00000000	All the object formats should be the targets.
	No value	
	0xFFFFFFFF	All the image formats in the card corresponding to the specified StorageID should be the targets.
	ObjectFormatCode	The specified object format should be the target. Refer to section 6.1.
Parameter3 (Option)	0x00000000	All the directories should be the targets.
	No value	
	0xFFFFFFFF	The objects directly under the root should be the targets.
	ObjectHandle	The objects directly under the specified directory should be the targets.

The format of the ObjectHandleArray that is sent by the camera is shown below.
Each field data is stored in the little endian format.

Field	Size (Byte)	Data
NumElement	4	The element of the array is N (N indicates the number of objects).
ArrayEntry [0]	4	ObjectHandle [0]
ArrayEntry [1]	4	ObjectHandle [1]
ArrayEntry [2]	4	ObjectHandle [2]

ArrayEntry [N - 1]	4	ObjectHandle [N - 1]

Do Not Copy

○ Operation Parameter

Operation Parameter	Details
Parameter1	StorageID
Parameter2	[ObjectFormatCode]
Parameter3	[ObjectHandle of the directory]

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Invalid_Object_Handle	For an invalid object handle
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Specification_By_Format_Unsupported	The specified ObjectFormatCode is not supported.
Invalid_Parent_Object	An ObjectHandle other than that indicating the directory in the card was specified for ObjectHandle (Parameter3) of the specified directory.
	The specified directory does not exist.

Do Not Copy

6.2.1.8 GetObjectInfo

○ Command Specifications

Operation Code	0x1008
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectInfo
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the information of the specified object (ObjectInfo). When a new object is added to the card and the host is informed of the addition of the object by the event, the host acquires the information of the object by this command.

○ Command Details

The camera sends the information of the object corresponding to the ObjectHandle specified in Parameter1.

If the specified ObjectHandle is the data in the card, the camera returns the information of the object corresponding to the ObjectHandle.

The ObjectHandle passed by ObjectAddedInSdram should be specified in order to acquire the information of the object in the SDRAM. For the ObjectHandle passed by ObjectAddedInSdram, the image data information is sent to the host.

The ObjectInfo data set sent in the data phase differs depending on the directory and the file types.

The ObjectInfo data set of each object is shown in section 9.3.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.1.9 GetObject

○ Command Specifications

Operation Code	0x1009
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the specified object (DataObject).

○ Command Details

The camera sends all the file data (DataObject) corresponding to the specified ObjectHandle to the host.

If the specified ObjectHandle is the data in the card, the camera returns the object corresponding to the ObjectHandle.

The ObjectHandle passed by ObjectAddedInSdram should be specified in order to acquire information of the object in the SDRAM. For the ObjectHandle passed by ObjectAddedInSdram, the image data is sent to the host.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	The ObjectHandle of the directory (Association) is specified.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.1.10 GetThumb

○ Command Specifications

Operation Code	0x100A
Operation Parameter	Refer to Operation Parameter in this section.
Data	ThumbnailObject
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the thumbnail data of the specified image/video object (ThumbnailObject).

○ Command Details

The camera sends the thumbnail data (ThumbnailObject) corresponding to the specified ObjectHandle to the host.

If the specified ObjectHandle is the data in the card, the camera returns the thumbnail data corresponding to the ObjectHandle.

The ObjectHandle passed by ObjectAddedInSdram should be specified in order to acquire the information of the object in the SDRAM. For the ObjectHandle passed by ObjectAddedInSdram, the thumbnail data of the image or the video data is sent to the host.

ThumbnailObject is the thumbnail data of the object (file) specified in ObjectHandle. The size of the ThumbnailObject is 160 x 120 of the small thumbnail size.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
No_Thumbnail_Present	The object corresponding to the specified ObjectHandle does not have a thumbnail.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.1.11 DeleteObject

○ Command Specifications

Operation Code	0x100B
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode deletes a specific object saved in the card or all the objects saved in the card. The protected objects are not deleted.

○ Command Details

The protected objects are not deleted. An object with an image format that is not supported by the camera is not deleted.

The release is locked until the image deletion is completed.

Operation Parameter	Value	Details
Parameter1	0xFFFFFFFF	All the objects in the card should be the targets.
	ObjectHandle	The specified object should be the target.
Parameter2 (Option)	0x00000000	All the object formats should be the targets.
	No value	
	ObjectFormatCode	The specified object format should be the target. When 0xFFFFFFFF is specified in Parameter1, all the objects that correspond to the specified object format are deleted.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	[ObjectFormatCode]
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
Object_Write_Protect	The object corresponding to the specified ObjectHandle is protected.
Partial_Deletion	When the deletion of two or more objects is specified, all the objects are not deleted.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Store_Read_Only	The card including the specified image is protected.
	All the inserted cards are protected.
Specification_By_Format_Unsupported	The specified ObjectFormatCode is not supported.
Device_Busy	The acquisition operation is being performed when the command processing is started.
Invalid_Parameter	The ObjectFormatCode is specified with the ObjectHandle set to a value other than 0xFFFFFFFF.

Do Not Copy

6.2.1.12 SendObjectInfo

○ Command Specifications

Operation Code	0x100C
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectInfo
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this OperationCode sends the object information (ObjectInfo) from the host to the camera.

○ Command Details

The operation by this OperationCode is effective when the StorageID is 0x00000000 (the storage destination is not specified) and the Parent ObjectHandle is 0x00000000 or 0xFFFFFFFF.

The camera retains the ObjectInfo received by this command until it receives the SendObject command to be sent from the host successively.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[StorageID]
Parameter2	[(Parent) ObjectHandle]
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block reception failed.
Invalid_StorageID	The StorageID is a value other than 0x00000000.
Invalid_ObjectFormatCode	The ObjectFormat field of the received ObjectInfo is set to a value other than 0x3002 (Script).
Store_Full	The object cannot be received with the size of the buffer prepared by the camera (32768Byte).
Access_Denied	A StorageID of the card is specified.
Specification_of_ Destination_Unsupported	The (Parent) ObjectHandle is a value other than 0x00000000 or 0xFFFFFFFF.

○ Response Parameter

Response Parameter	Description
Parameter1	StorageID [0x00000000]
Parameter2	Parent ObjectHandle [0x00000000]
Parameter3	Any ObjectHandle

Do Not Copy

6.2.1.13 SendObject

○ Command Specifications

Operation Code	0x100D
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sends the object from the host to the camera.

○ Command Details

The camera records the ObjectData based on the information of the ObjectInfo received in advance. The recording destination is not a card but a virtual recording medium (SDRAM). The camera deletes the ObjectInfo data received in advance when receiving this command and completing the ObjectData reception.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block reception failed.
No_Valid_ObjectInfo	This command is received before the SendObjectInfo command is accepted.

Do Not Copy

6.2.1.14 InitiateCapture

○ Command Specifications

Operation Code	0x100E
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None
Event Code	Refer to Event Code in this section.

○ Command Outline

The operation by this OperationCode starts the camera acquiring one or more new objects (release operation of the camera) according to the current setting. The acquired objects (image data) are always recorded in the card independently of the recording destination property.

○ Command Details

The camera starts the release operation when receiving this command. The camera returns OK after starting the release operation. If the AF is required, the camera starts the release operation after finishing the AF. (This command is an activation command, so returns the response code before the release operation is completed.)

The camera starts acquiring one or more new objects (release operation of the camera) according to the current setting. The acquisition of the new object is performed asynchronously.

Whether the AF is operated when the release is started depends on the setting of the focus-mode selector.

Refer to Command Release Operation (section 11.7) for the details of the command release operation.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	[StorageID]	
	0x00000000	The recording destination specified in the camera.
	StorageID	The specified recording destination.
Parameter2	[ObjectFormatCode]	
	0x00000000	The image quality mode set in the camera.
	ObjectFormatCode	The image quality mode according to the format.
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
General_Error	An error is generated in the camera body when the command processing is started.
	All of the following conditions are satisfied, and the AF operation is not focused. - The AF operation mode is set to [Focus priority].
	The aperture value is “F--”.
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Invalid_ObjectFormatCode	The format of the ObjectFormatCode is not supported by the camera.
Store_Full	The free area for recording is not provided in the card.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Store_Read_Only	All the inserted cards are protected.

Do Not Copy

Device_Busy	The acquisition operation is being performed when the command processing is started.
	The shutter-release button is being fully pressed.
Access_Denied	When a retractable lens is mounted, the lens is retracting.
	STM lens is being initialized.
	The MovieLogOutput property (section 6.5.12.4) is [On].
	Shooting cannot be performed depending on the state of the camera other than the above factors.

○ Event Code

Event Code	Details
ObjectAdded	A new object is recorded in the card.
StoreFull	The free area for recording is not provided in the card.
CaptureComplete	The acquisition operation of the new object is completed.

Do Not Copy

6.2.1.15 FormatStore

○ Command Specifications

Operation Code	0x100F
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode formats the card inserted in the camera.

○ Command Details

The camera formats the card specified by the StorageID.
The StorageIDs supported by the camera are shown in section 6.2.1.4.
The FilesystemFormat parameter shown in Parameter2 is optional. However, setting of only 0x0003 indicating the DCF is permitted.

○ Operation Parameter

Operation Parameter	Details
Parameter1	StorageID
Parameter2	[FilesystemFormat]
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Store_Read_Only	The specified card is protected.
Device_Busy	The acquisition operation is being performed when the command processing is started.
Invalid_Parameter	Parameter2 is neither 0x00000000 nor 0x00000003.

Do Not Copy

6.2.1.16 SetObjectProtection

○ Command Specifications

Operation Code	0x1012
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets the protection status of an object.

○ Command Details

Sets the protection status of the object in the ObjectHandle specified by parameter 1 to the ProtectionStatus of parameter 2..

○ Operation Parameter

Operation Parameter	Details	
Parameter1	ObjectHandle	
Parameter2	ProtectionStatus	
	0x0000	Not protected
	0x0001	Read-only
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	The ObjectHandle of the directory (Association) is specified.
	An object in the SDRAM is specified.
Invalid_Parameter	Specified ProtectionStatus is out of range.
Store_Read_Only	The specified card is protected.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.

Do Not Copy

6.2.1.17 GetDevicePropDesc

○ Command Specifications

Operation Code	0x1014
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropDesc data set
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the DevicePropDesc data set corresponding to the specified DevicePropCode.

○ Command Details

For the supported DevicePropCode, refer to section 6.5.

In this OperationCode, only the property of DevicePropCode of 2 bytes can be acquired.
To get the 4bytes property, use the GetDevicePropDescEx command (section 6.2.2.5).

For the DevicePropDesc, refer to section 9.4.

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.
	4bytes DevicePropCode is specified.

Do Not Copy

6.2.1.18 GetDevicePropValue

○ Command Specifications

Operation Code	0x1015
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropValue
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the current value corresponding to the specified DevicePropCode.

○ Command Details

For the supported DevicePropCode and the details of the DevicePropValue, refer to section 6.5.

In this OperationCode, only the property of DevicePropCode of 2 bytes can be acquired.
To get the 4bytes property, use the GetDevicePropValueEx command (section 6.2.2.6).

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.
	4bytes DevicePropCode is specified.

Do Not Copy

6.2.1.19 SetDevicePropValue

○ Command Specifications

Operation Code	0x1016
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropValue
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None
Event Code	Refer to Event Code in this section.

○ Command Outline

The operation by this OperationCode sets the DevicePropValue corresponding to the specified DevicePropCode to the camera.

○ Command Details

For the supported DevicePropCode and the details of the DevicePropValue, refer to section 6.5.

In this OperationCode, only the property of DevicePropCode of 2 bytes can be acquired.
To get the 4bytes property, use the SetDevicePropValueEx command (section 6.2.2.7).

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block reception failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.
	4bytes DevicePropCode is specified.
Access_Denied	An operation is denied depending on the status of the camera.
	The specified DevicePropCode is not permitted for setting.
Device_Busy	The acquisition operation is being performed when the command processing is started, or the AF is being operated.
Invalid_DeviceProp_Format	The size or the format of the DevicePropDesc data set is not appropriate.
Invalid_DeviceProp_Value	The specified DevicePropValue is not supported.

Do Not Copy

6.2.1.20 GetPartialObject

○ Command Specifications

Operation Code	0x101B
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	The number of bytes actually sent

○ Command Outline

The operation by this OperationCode is the same as that of GetObject.
However, the offset and the number of bytes to be acquired can be specified and the object (DataObject) can be acquired partially.

○ Command Details

The camera sends the file data (DataObject) of the specified size corresponding to the specified ObjectHandle to the host. When the specified ObjectHandle is the data in the card, the camera returns the object corresponding to the ObjectHandle.
The ObjectHandle passed by ObjectAddedInSdram should be specified in order to acquire the information of the object in the SDRAM.
For the DataObject, which is the data to be sent, the file data corresponding to the specified ObjectHandle for MaxSize starting from the position set by the offset is sent to the host. In the case of “(File size - Offset) < MaxSize”, the data of “(File size - Offset)”, not MaxSize, is sent to the host. The sent number of bytes is stored in ResponseParameter and sent to the host.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	Offset (Byte)
Parameter3	MaxSize (Byte)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Incomplete_Transfer	The data block transmission failed.
	The size of the object corresponding to the specified ObjectHandle is 4 GB or more.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	The ObjectHandle of the directory (Association) is specified.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Access_Denied	The video is playing.

Do Not Copy

6.2.2 Vendor

6.2.2.1 GetVendorCodes

○ Command Specifications

Operation Code	0x9439
Operation Parameter	None
Data	DevicePropCodeArray
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires an array of vendor definition codes supported by the camera.

○ Command Details

The format of the array sent by the camera is shown below.

Field	Size (Byte)	Data
NumElement	4	The number of elements in the array.
ArrayEntry [0]	4	Vendor Code [0]
ArrayEntry [1]	4	Vendor Code [1]
ArrayEntry [2]	4	Vendor Code [2]
・・・		
ArrayEntry [NumElement - 1]	4	Vendor Code [N - 1]

○ Operation Parameter

Operation Parameter	Details	
Parameter1	Type of code	
	0x09	Vendor OperationCode
	0x0D	Vendor DevicePropCode

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	The value of the specified parameter is out of range.

Do Not Copy

6.2.2.2 OperationDataNone

○ Command Specifications

Operation Code	0x9440
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	Depends on the command.

○ Command Outline

This Operation Code executes the command corresponding to the 4-byte extension.

○ Command Details

In this Operation Code, it is possible to execute commands that do not have send / receive data.

The Operation Code command specified in Parameter1 is executed.
For Parameters 2 to 5, specify the Operation Parameter corresponding to the command specified in Parameter1.
Operation Parameters specified in Parameters 2 to 5 are shown in each Operation Code definition.
If the command specified in Parameter1 requires Operation Parameter5, it cannot be executed.

○ Operation Parameter

Operation Parameter	Details
Parameter1	Operation Code (4-byte extension) NOTE1
Parameter2	Operation Parameter1 of the command specified in Parameter1
Parameter3	Operation Parameter2 of the command specified in Parameter1
Parameter4	Operation Parameter3 of the command specified in Parameter1
Parameter5	Operation Parameter4 of the command specified in Parameter1

NOTE1) 2-byte Operation Code (upper 2 bytes are 0x0000) command can also be executed.

○ Response Code

For the command-specific Response Code, refer to the Response Code of each command.

Response Code	Description
OK	Normal termination
Operation_Not_Supported	An unsupported Operation Code is specified.
Invalid_Parameter	An Operation Code with data is specified.
	The Operation Code of this operation is specified.

Do Not Copy

6.2.2.3 OperationReceiveData

○ Command Specifications

Operation Code	0x9441
Operation Parameter	Refer to Operation Parameter in this section.
Data	Depends on the command.
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	Depends on the command.

○ Command Outline

This Operation Code executes the command corresponding to the 4-byte extension.

○ Command Details

In this Operation Code, it is possible to execute a command that has the data received from the camera.

The Operation Parameter is the same as the OperationDataNone command (section 6.2.2.2).

○ Operation Parameter

Operation Parameter	Details
Parameter1	Operation Code (4-byte extension) NOTE1
Parameter2	Operation Parameter1 of the command specified in Parameter1
Parameter3	Operation Parameter2 of the command specified in Parameter1
Parameter4	Operation Parameter3 of the command specified in Parameter1
Parameter5	Operation Parameter4 of the command specified in Parameter1

NOTE1) 2-byte Operation Code (upper 2 bytes are 0x0000) command can also be executed.

○ Response Code

For the command-specific Response Code, refer to the Response Code of each command.

Response Code	Description
OK	Normal termination
Operation_Not_Supported	An unsupported Operation Code is specified.
Incomplete_Transfer	Data block transmission failed.
Invalid_Parameter	An Operation Code other than "Camera-> Host" is specified for the data direction.
	The Operation Code of this operation is specified.

Do Not Copy

6.2.2.4 OperationSendData

○ Command Specifications

Operation Code	0x9442
Operation Parameter	Refer to Operation Parameter in this section.
Data	Depends on the command.
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	Depends on the command.

○ Command Outline

This Operation Code executes the command corresponding to the 4-byte extension.

○ Command Details

In this Operation Code, it is possible to execute a command that has the data sent to the camera.

The Operation Parameter is the same as the OperationDataNone command (section 6.2.2.2).

○ Operation Parameter

Operation Parameter	Details
Parameter1	Operation Code (4-byte extension) NOTE1
Parameter2	Operation Parameter1
Parameter3	Operation Parameter2
Parameter4	Operation Parameter3
Parameter5	Operation Parameter4

NOTE1) 2-byte Operation Code (upper 2 bytes are 0x0000) command can also be executed.

○ Response Code

For the command-specific Response Code, refer to the Response Code of each command.

Response Code	Description
OK	Normal termination
Operation_Not_Supported	An unsupported Operation Code is specified.
Incomplete_Transfer	Data block transmission failed.
Invalid_Parameter	An Operation Code other than "Host -> Camera" is specified for the data direction.
	The Operation Code of this operation is specified.

Do Not Copy

6.2.2.5 GetDevicePropDescEx

○ Command Specifications

Operation Code	0x943A
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropDesc Dataset
Data direction	From camera to host
Response Code	Same as GetDevicePropDesc
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the DevicePropDesc data set corresponding to the specified DevicePropCode.

For the DevicePropDesc, refer to section 9.4.

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode (4-byte extension)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.

Do Not Copy

6.2.2.6 GetDevicePropValueEx

○ Command Specifications

Operation Code	0x943B
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropValue
Data direction	From camera to host
Response Code	Same as GetDevicePropValue
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the current value corresponding to the specified DevicePropCode.

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode (4-byte extension)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.

Do Not Copy

6.2.2.7 SetDevicePropValueEx

○ Command Specifications

Operation Code	0x943C
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropValue
Data direction	From host to camera
Response Code	Same as SetDevicePropValue.
Response Parameter	None
Event Code	Refer to Event Code in this section.

○ Command Outline

The operation by this OperationCode sets the DevicePropValue corresponding to the specified DevicePropCode to the camera.

○ Operation Parameter

Operation Parameter	Details
Parameter1	DevicePropCode (4-byte extension)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block reception failed.
DeviceProp_Not_Supported	The specified DevicePropCode is not supported.
Access_Denied	An operation is denied depending on the status of the camera.
	The specified DevicePropCode is not permitted for setting.
Device_Busy	The acquisition operation is being performed when the command processing is started.
Invalid_DeviceProp_Format	The size or the format of the DevicePropDesc data set is not appropriate.
Invalid_DeviceProp_Value	The specified DevicePropValue is not supported.

Do Not Copy

6.2.2.8 RegisterDevicePropGroup

○ Command Specifications

Operation Code	0x943D
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropCode Array
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	Number of properties registered in the property group

○ Command Outline

The operation by this OperationCode registers property group.

○ Command Details

The registered property group information is retained until the session with the camera ends.
The property group numbers that can be registered are 1 to 32.
If the property group is registered again for the registered property group, it will be overwritten.

If you specify the registered property group when executing the GetDevicePropDescList command (section 6.2.2.9) and GetDevicePropValueList command (section 6.2.2.10), you can get DevicePropDesc DataSet and PropertyValue all at once.

If the property group to be registered contains a DevicePropertyCode that does not exist, that property will not be registered.

The format of the property group to be registered is shown below.

Field	DataSize	Description
NumElement	4	Number of elements in the array.
ArrayEntry[0]	4	DevicePropCode 1
ArrayEntry[1]	4	DevicePropCode 2
…		
ArrayEntry[NumElement-1]	4	DevicePropCode N

○ Operation Parameter

Operation Parameter	Details
Parameter1	Property group number

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block reception failed.
Invalid_Parameter	The specified value of Parameter is out of the range.
Invalid_Data	The format of the property group to be registered is incorrect.

Do Not Copy

6.2.2.9 GetDevicePropDescList

○ Command Specifications

Operation Code	0x943E
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropDesc List
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode is to get the list of the specified DevicePropDesc DataSet.

○ Command Details

If you specify the property group number registered with the RegisterDevicePropGroup command (section 6.2.2.8) in Parameter1, you will get a list of registered properties.

The format of the list of properties to be acquired is shown below.

Field	DataSize	Description
NumberOfElements	4	Number of commands in the list.
Element1	DTS	
Element Size	2	Size of the element.
DevicePropDesc DataSet	DTS	See section 9.4
Element2	DTS	
～		
ElementN	DTS	

○ Operation Parameter

Operation Parameter	Details
Parameter1	Property group number

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	A property group that is not registered is specified.
Invalid_Parameter	The specified value of Parameter is out of the range.

Do Not Copy

6.2.2.10 GetDevicePropValueList

○ Command Specifications

Operation Code	0x943F
Operation Parameter	Refer to Operation Parameter in this section.
Data	DevicePropValue List
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode is to get the list of the current value of the specified DevicePropCode.

○ Command Details

If you specify the property group number registered with the RegisterDevicePropGroup command (section 6.2.2.8) in Parameter1, you will get a list of registered properties.

The format of the list of properties to be acquired is shown below.

Field	DataSize	Description
NumberOfElements	4	Number of properties in the list
Element1	DTS	
DevicePropCode	4	DevicePropCode 1
DataType	2	DataType of DevicePropCode 1
DevicePropValue	DTS	Current value of DevicePropCode 1
Element2	DTS	
～		
ElementN	DTS	

○ Operation Parameter

Operation Parameter	Details
Parameter1	Property group number

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	A property group that is not registered is specified.
Invalid_Parameter	The specified value of Parameter is out of the range.

Do Not Copy

6.2.2.11 DeviceReady

○ Command Specifications

Operation Code	0x90C8
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode checks the action by the activation-type command.

○ Command Details

This command is issued after issuing the following activation-type commands in order to check the operation.

Activation-type commands	Reference
InitiateCapture	6.2.1.14
InitiateCaptureRecInMedia	6.2.4.1
InitiateCaptureRecInSdram	6.2.4.2
AfAndCaptureRecInSdram	6.2.4.3
AfDrive	6.2.5.1
MfDrive	6.2.5.3
StartLiveView	6.2.6.1

This command should be issued repeatedly until the operation of the activation-type command is completed.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Device_Busy	The operation of the activation-type command is not finished.
Out_of_Focus	The AF operation by the command is in the non-focused status.
Wb_Preset_Error	The preset measurement release failed.
MfDrive_Step_End	The MF driving reaches the end of steps.
MfDrive_Step_ Insufficiency	The driving amount is insufficient.
Bulb_Release_Busy	The bulb shooting is being performed.
Silent_Release_Busy	During the silent photography (Only models that support the silent photography).
MovieFrame_Release_Busy	The frames for the video recording are being saved. (Only for models that support video frame storage)

Do Not Copy

6.2.2.12 GetEvent

○ Command Specifications

Operation Code	0x90C7
Operation Parameter	None
Data	Event array
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sends the event retained in the camera to the host.

○ Command Details

This OperationCode is a command for compatibility with the GetEventEx command (section 6.2.2.13) and has the following restriction. The GetEventEx command (section 6.2.2.13) should be used for this camera.

This command cannot handle the events that have two or more parameters.

The format of the event array to be sent by the camera is shown below.

Offset	Value	Name	Description
0	N	EventCount	The number of events
2	EventCode	EventCode [0]	The oldest event
4		EventParameter [0]	Parameter attaching to the oldest event
8	EventCode	EventCode [1]	The second oldest event
10		EventParameter [1]	Parameter attaching to the second oldest event
...			
6 x (N – 1) + 2	EventCode	EventCode [N - 1]	The newest event
6 x (N – 1) + 4		EventParameter [N - 1]	Parameter attaching to the newest event

If there is no event to be sent, the EventCount value is set to 0 and sent to the host.

When an event is sent by this command, the contents of the event queue buffer prepared for the GetEvent command are updated. The sent event is deleted.

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.2.13 GetEventEx

○ Command Specifications

Operation Code	0x941C
Operation Parameter	Refer to Operation Parameter in this section.
Data	Event array
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sends the event retained in the camera to the host.

○ Command Details

The camera sends all the events saved in the event queue buffer prepared for the GetEventEx command.

When Parameter1 has no value or is 0, the event stored in the queue buffer is deleted after sending the event.

If 1 is specified for Parameter1, the event stored in the queue buffer will not be deleted after the event is sent.

The format of the event array to be sent by the camera is shown below.
Maximum element is 2048.

Field	DataSize	DataType	Description
NumberOfElements	4	UINT32	The number of events in the list.
Element1 Event Code	2	UINT16	Event Code for element1.
Element1 NumParameters	2	UINT16	Number of parameters for element1.
Element1 Parameter1	4	UINT32	Parameter1 for element1.
Element1 Parameter2	4	UINT32	Parameter2 for element1.
…			
Element1 ParameterN	4	UINT32	Parameter N for element1.
…			
ElementN Event Code	2	UINT16	Event Code for element N.
ElementN NumParameters	2	UINT16	Number of parameters for element N.
ElementN Parameter1	4	UINT32	Parameter1 for element N.
ElementN Parameter2	4	UINT32	Parameter2 for element N.
…			
ElementN ParameterN	4	UINT32	Parameter N for element N.

If there is no event to be sent, the EventCount value is set to 0 and sent to the host.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	[Whether to delete the buffer]	
	No value	The event stored in the queue buffer is deleted after sending the event.
	0	
	1	The event stored in the queue buffer is not deleted after sending the event
Parameter2	None	
Parameter3	None	

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	The specified value is out of the range.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.2.14 ClearEvent

○ Command Specifications

Operation Code	0x9461
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode deletes the event held in the camera.

○ Command Details

This command deletes the sent event when it is executed by specifying "1: The event stored in the queue buffer is not deleted after sending the event" in Parameter1 of the GetEventEx command.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.

Do Not Copy

6.2.2.15 ChangeCameraMode

○ Command Specifications

Operation Code	0x90C2
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode switches between the PC camera mode and the remote mode.

○ Command Details

The camera is set to the mode specified by the ModeValue.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	ModeValue	
	0	Sets to the PC camera mode.
	1	Sets to the remote mode.
Parameter2	None	
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value of ModeValue is out of the range.
Change_CameraMode_Failed	Mode cannot be changed due to shutter-release operation.
	Mode cannot be changed due to AF operation.
	Mode cannot be changed during cleaning image sensor.

Do Not Copy

6.2.2.16 ChangeApplicationMode

○ Command Specifications

Operation Code	0x9435
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode switches the application mode.

○ Command Details

Refer to section 2.4 for the application mode.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	Mode	
	0	Application mode OFF
	1	Application mode ON
Parameter2	None	
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value of ModeValue is out of the range.

Do Not Copy

6.2.2.17 ChangeMonitorOff

○ Command Specifications

Operation Code	0x9422
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode changes the monitor forced off state of the camera.

○ Command Details

When the camera receives this command, it switches the monitor forced off state.
If “Forced light off” is specified for MonitorOffStatus of Parameter1 while the monitor is on, the monitor turns off.
If "Cancel forced light off" is specified while the monitor is off, the monitor turns on or off according to the camera status.

Monitors targeted by this command are as follows.
- Main monitor (Playback monitor)

The response of the normal end indicates that the request to switch the monitor off state has been received, completion of turning on / off the monitor is not guaranteed.

Refer to MonitorOffStatus property (section 6.5.6.18) for the monitor forced off state.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	MonitorOffStatus	
	0	Cancel forced light off.
	1	Forced light off.
Parameter2	None	
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Device_Busy	The acquisition operation is being performed when the command processing is started.
Access_Denied	The battery is exhausted
Hardware_Error	When the command processing is started, some error is generated in the camera body.

Do Not Copy

6.2.2.18 GetCameraSettingData

○ Command Specifications

Operation Code	0x946D
Operation Parameter	Refer to Operation Parameter in this section.
Data	CameraSettingData Dataset
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode gets the camera setting file saved on the memory card..

○ Command Details

If you are using two memory cards, get the camera setting file from the card in the primary slot (*).
*The primary slot of this camera is slot 1.

CameraSettingData Dataset is as follows.

Field	Size	Description
Camera setting file name	64byte	ASCII：63 characters maximum +NULL
Camera setting data	-	Contents of the camera setting file name

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	Specified TransactionID is not a valid value.
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	The video is playing.
	Camera setting file does not exist on the card.
Store_Not_Available	The card does not exist.
	The card is being initialized.
	The battery is exhausted.
Store_Error	Card access error occurs.
Store_Unformatted	Card is not formatted.

Do Not Copy

6.2.2.19 SendCameraSettingData

○ Command Specifications

Operation Code	0x946E
Operation Parameter	Refer to Operation Parameter in this section.
Data	Camera setting data
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode saves camera setting data to a memory card.

○ Command Details

If you are using two memory cards, save the camera settings file to the card in the primary slot.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	Specified TransactionID is not a valid value.
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block transmission failed.
Object_Write_Protect	Camera settings file is protected.
Access_Denied	The video is playing.
Store_Full	There is no free space for saving on the card.
Store_Read_Only	The recording card is protected
Store_Not_Available	The card does not exist.
	The card is being initialized.
	The battery is exhausted.
Store_Error	Card access error occurs.
Store_Unformatted	Card is not formatted.

Do Not Copy

6.2.2.20 SaveCameraSetting

○ Command Specifications

Operation Code	0x9420
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode saves the camera setting values. This is the same operation as that of saving the camera setting values when the power switch is turned off.

○ Command Details

The camera setting values are stored in the non-volatile area. If this operation is not completed in the case that the power supply is interrupted in saving the setting values, the operation of the camera is not guaranteed after that.

After responding to this command, do not execute any command (other than CloseSession) or do not operate the camera other than power OFF.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Device_Busy	The shooting operation is being performed.
Access_Denied	During the PC camera mode.
	The camera cannot save the setting values.

Do Not Copy

6.2.2.21 ResetMenu

○ Command Specifications

Operation Code	0x9436
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode resets the camera settings.

○ Command Details

The setting value that is specified in Parameter1 (Reset Type) is reset.

In Reset Type where you can specify the bank, specify Bank in Parameter2.
In Reset Type where bank cannot be specified, Bank specification is ignored.

White balance, white balance sub-item, fine tuning values other than preset manual data, and preset manual data number are reset.

In the case of resetting file number sequence, the value of “Custom menu – Shooting/display – File number sequence” is reset.

○ Operation Parameter

Operation Parameter	Detail		
Parameter1	Reset Type		Bank can be specified
	0x0001	Photo shooting menu	yes
	0x0002	White balance (Photography)	no
	0x0102	White balance (Video)	no
	0x0201	Custom menu	yes
	0x0202	File number sequence	no
Parameter2	[Bank]		
	None	Bank in use (NOTE1)	
	0		
	1	Bank A	
	2	Bank B	
	3	Bank C	
	4	Bank D	
Parameter3	None		

NOTE1)
The shooting menu uses the bank set in the ShootingMenuBank property (section 6.5.2.1).
The custom menu uses the bank set in the CustomSettingBank property (section 6.5.4.1).

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	The specified value is out of the range.
Access_Denied	In the case of the spot WB acquisition standby state.
	[White balance (Photography, Video)] is specified when the AWBLockStatus property (section 6.5.6.7) is set to [Locked].
	[File number sequence] is specified when the HDRMode property (section 6.5.2.75) is set to [On].
Device_Busy	The shooting operation is being performed.

Do Not Copy

6.2.2.22 GetCommandFeature

○ Command Specifications

Operation Code	0x944C
Operation Parameter	Refer to Operation Parameter in this section.
Data	CommandFeature DataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the feature information about the specified operation code.

○ Command Details

The camera sends the CommandFeature DataSet about about the operation code specified by the parameter1 to the host.

Feature information can be acquired only for commands for which Feature information is defined.

○ Operation Parameter

Operation Parameter	Description
Parameter1	Operation Code
Parameter2	Index (Fixed to 0 with this camera)
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	The specified operation code has no feature information.

Do Not Copy

6.2.2.23 GetPortraitImpressionBalanceDataList

○ Command Specifications

Operation Code	0x9454
Operation Parameter	Refer to Operation Parameter in this section.
Data	PortraitImpressionBalance List
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the PortraitImpressionBalance List set in the adjustment value of “Portrait Impression Adjustment – Mode”.

○ Command Details

When the mode number is specified in Parameter1, the PortraitImpressionBalance DataSet (section 9.17) of the specified ModeNum is sent to the host.

If 0xFFFFFFFF is specified, all modes are sent to the host.

The data set of PortraitImpressionBalance List is shown below.

Field		DataSize	Description
NumberOfElements		2	Number of modes in the list
Element1		6	
	Element Size	2	Size of the element
	ModeNum	2	Portrait impression adjustment mode number
	PortraitImpressionBalance DataSet	2	Adjustment value of Portrait impression adjustment
…			
ElementN		6	

○ Operation Parameter

Operation Parameter	Description	
Parameter1	ModeNum	Specified mode number Same as PortraitImpressionBalance property (section 6.5.2.66), but "OFF" is an invalid value.
	0xFFFFFFFF	All modes
Parameter2	ShootingMode	
	0	Adjustment value of photo shooting menu
	1	Adjustment value of video recording menu
Parameter3	DefaultFlag	
	0	Current setting
	1	Default value

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified parameter is out of the range.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.2.24 SetPortraitImpressionBalanceData

○ Command Specifications

Operation Code	0x9453
Operation Parameter	Refer to Operation Parameter in this section.
Data	PortraitImpressionBalance DataSet
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets PortraitImpressionBalance DataSet to the adjustment value of “Portrait Impression Adjustment – Mode”.

○ Command Details

The contents of the PortraitImpressionBalance DataSet are shown in section 9.17.

○ Operation Parameter

Operation Parameter	Description	
Parameter1	ModeNum	Specified mode number Same as PortraitImpressionBalance property (section 6.5.2.66), but "OFF" is an invalid value.
Parameter2	ShootingMode	
	0	Adjustment value of photo shooting menu
	1	Adjustment value of video recording menu
Parameter3	None	

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified parameter is out of the range.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	When ShootingMode is 0 (photo shooting menu) and when the ActivePicCtrlItem property (section 6.5.13.1) is set to "Monochrome style" or "Creative Picture Control"
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - The currently set video recording file format tone mode is "SDR" - MovieActivePicCtrlItem property (section 6.5.13.2) is set to "Monochrome style" or "Creative Picture Control"
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - The currently set video recording file format tone mode is "SDR" - MovieActivePicCtrlItem property (section 6.5.13.2) is set to "Same as photo settings" - ActivePicCtrlItem property is set to "Monochrome style" or "Creative Picture Control"
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit(MOV)] - MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log]
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - MovieFileType property is set to [ProRes 422 HQ 10-bit(MOV)] - MovieProResToneMode property (section 6.5.3.5) is set to [N-Log]
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - MovieFileType property is set to [ProRes RAW HQ 12-bit(MOV)] - MovieProResRawHq12bitToneMode property (section 6.5.3.6) is set to [N-Log]
	If all of the following conditions are met: - ShootingMode is 1 (video recording menu) - MovieFileType property is set to [N-RAW 12-bit(NEV)] - MovieNRaw12bitToneMode property (section 6.5.3.4) is set to [N-Log]
Invalid_Data	Wrong PortraitImpressionBalance DataSet was specified.

Do Not Copy

6.2.3 Vendor (Object)

6.2.3.1 GetVendorStorageIDs

○ Command Specifications

Operation Code	0x9209
Operation Parameter	None
Data	StorageIDArray
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns a list of the currently valid StorageIDs.

In the application mode, the StorageID that can be obtained by GetStorageIDs is the one without the card installed, so it is possible to know the valid StorageID by using this Operation.

○ Command Details

The camera returns the StorageID of each slot.
The StorageID of each slot takes the following values.

StorageID	Details
0x00010001	When the card is inserted in the slot1
0x00010000	When the card is not inserted in the slot1
	When the card in the slot1 is being formatted
	When the battery is exhausted
0x00020001	When the card is inserted in the slot2
0x00020000	When the card is not inserted in the slot2
	When the card in the slot2 is being formatted
	When the battery is exhausted

The format of the StorageIDArray that is sent by the camera is shown below.
Each field data is stored in the little endian format.

Field	Size (Byte)	Data
NumElement	4	0x00000002 (Two elements for the array)
ArrayEntry1	4	StorageID (slot1)
ArrayEntry2	4	StorageID (slot2)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.3.2 GetObjectSize

○ Command Specifications

Operation Code	0x9421
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectSize
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the size of the specified object.

○ Command Details

When the value of the ObjectCompressedSize returned by GetObjectInfo command is 0xFFFFFFFF, the correct size of the object can be obtained by this operation code.

The ObjectSize transmitted by the camera is 8 bytes of data.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.3.3 GetObjectsMetaData

○ Command Specifications

Operation Code	0x9434
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectMetaData Dataset
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the handle and the metadata of the object in the card. The ObjectHandle of the object recorded in the SDRAM is not included.

○ Command Details

If the new object is being recorded in the card when this command is received, the processing starts after the acquisition of all the data is completed.

The camera returns the ObjectHandle and the metadata in the card specified by the StorageID. In addition, Parameter2 and Parameter3, which are optional, can be combined.

Operation Parameter	Value	Details
Parameter1	0xFFFFFFFF	All the cards should be the targets.
	StorageID	The specified object should be the target.
Parameter2 (Option)	0x00000000	All the object formats should be the targets.
	No value	
	0xFFFFFFFF	All the image formats in the card corresponding to the specified StorageID should be the targets.
	ObjectFormatCode	The specified object format should be the target.
Parameter3 (Option)	0x00000000	All the directories should be the targets. (NOTE1)
	No value	
	ObjectHandle	The objects directly under the specified directory should be the targets.
Parameter4 (Option)	0x00000001	For ObjectMetaData Dataset with Version 1
	No value	
	0x00000002	For ObjectMetaData Dataset with Version 2

NOTE1: Since the processing time increases in proportion to the number of objects, if all directories are specified with a large number of objects, it may take time to execute.

The format of the ObjectMetaData Dataset sent by the camera is shown in section 9.12.

○ Operation Parameter

Operation Parameter	Details
Parameter1	StorageID
Parameter2	[ObjectFormatCode]
Parameter3	[ObjectHandle of directory]
Parameter4	[ObjectMetaData Dataset Version]

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The value specified in Parameter4 is out of range
Invalid_StorageID	The StorageID sent by the camera differs from the StorageID specified by the host.
Invalid_Object_Handle	For an invalid object handle
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Specification_By_Format_Unsupported	The specified ObjectFormatCode is not supported.
Invalid_Parent_Object	An ObjectHandle other than that indicating the directory in the card was specified for ObjectHandle (Parameter3) of the specified directory.
	The specified directory does not exist.
Device_Busy	The management file is not ready.

Do Not Copy

6.2.3.4 GetPartialObjectEx

○ Command Specifications

Operation Code	0x9431
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this OperationCode is an extension of GetPartialObject (section 6.2.1.20).

○ Command Details

The Offset, MaxSize and actual number of bytes sent (Response Parameter) are expanded. Objects up to the size represented by 8 Bytes can be obtained.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	Offset (Lower 4Byte)
Parameter3	Offset (Upper 4Byte)
Parameter4	MaxSize (Lower 4Byte)
Parameter5	MaxSize (Upper 4Byte)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	The ObjectHandle of the directory (Association) is specified.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Access_Denied	The video is playing.

○ Response Parameter

Response Parameter	Description
Parameter1	Actual number of bytes sent (Lower 4Byte)
Parameter2	Actual number of bytes sent (Upper 4Byte)

Do Not Copy

6.2.3.5 GetPartialObjectHighSpeed

○ Command Specifications

Operation Code	0x9400
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this OperationCode transfers the file data (DataObject) of the specified size corresponding to the specified ObjectHandle (parameter1) from the camera to the host.

This command is suited to transfer large-size file because the time for the camera to read the data from the card is shorter than that of the GetPartialObject command (section 6.2.1.20).

○ Command Details

The maximum size of the data transferred by this command is the size of the file specified by the ObjectHandle (parameter1). The data size can be checked by the GetObjectInfo command (section 6.2.1.8).

The following must be satisfied to use this command.

- Turn on application mode by using ChangeApplicationMode command (section 6.2.2.16).

The command should be issued with Terminate (parameter3) set to “Terminate transferring” in order to cancel the transfer while all data of the specified file are not transferred.

When Terminate (parameter3) is set to “Terminate transferring”, data transfer with 0 byte is performed.

An example of using the virtual file data is shown below.

(ObjectHandle = 0x00000001, FileSize = 0x00100000)

In the case that all data are transferred	In the case that data transfer is canceled
The first time: ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000000 The second time: ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000000 The eighth time (last data acquisition): ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000000	The first time: ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000000 The second time: ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000000 The third time (data transfer is canceled): ObjectHandle = 0x00000001 TransferMaxSize = 0x00020000 Terminate = 0x00000001

Do Not Copy

The information necessary to maintain this command is released in any of the following conditions.

After the information is released, the file data is acquired from the beginning if this command is issued again.

Termination condition
The file data specified by the ObjectHandle (parameter1) has been transferred completely.
The parameter3 (Terminate) of this command is set to “Terminate transferring”.
The interval between the response of this command and the next issue of this command exceeds approx. 60 seconds. * If the file data offset of the response parameter is 0 after the second transfer of divided data and before transfer of all data, it is regarded as a time-out.
A card has been inserted or ejected regardless of whether the card contains the file data specified by the ObjectHandle or not.
The file has been deleted.
Video recording or video playback has started.
Issued the following command. CloseSession command GetObjectHandles command GetObjectInfo command GetObject command GetThumb command DeleteObject command SendObjectInfo command SendObject command InitiateCapture command FormatStore command SetObjectProtection command GetPartialObject command ChangeApplicationMode command GetCameraSettingData command SendCameraSettingData command SaveCameraSetting command GetObjectSize command GetPartialObjectEx command GetLargeThumb command InitiateCaptureRecInMedia command StartMovieRecord command InitiatePixelMapping command GetObjectPropValue command SetObjectPropValue command GetObjectPropList command

○ Operation Parameter

Operation Parameter	Details	
Parameter1	ObjectHandle	
Parameter2	TransferMaxSize (Byte)	
Parameter3	Terminate	
	0	Continue transferring
	1	Terminate transferring

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	In the case of an ObjectHandle other than the image file
	In the case of an ObjectHandle of the SDRAM
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.
Invalid_Parameter	“Terminate” is neither 0 nor 1.
Invalid_Status	The application mode is set to OFF.

○ Response Parameter

Response Parameter	Description
Parameter1	The number of bytes actually sent
Parameter2	File data offset before command execution and data transfer (Lower 4Byte)
Parameter3	File data offset before command execution and data transfer (Upper 4Byte)

Do Not Copy

6.2.3.6 GetLargeThumb

○ Command Specifications

Operation Code	0x90C4
Operation Parameter	Refer to Operation Parameter in this section.
Data	LargeThumbnail data
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the large thumbnail data of the specified object.

○ Command Details

The camera sends all the large thumbnail data corresponding to the specified ObjectHandle to the host.

When the specified ObjectHandle is the data in the card, the camera returns the large thumbnail data corresponding to the ObjectHandle.

The ObjectHandle passed by ObjectAddedInSdram should be specified in order to acquire the information of the object in the SDRAM.

The LargeThumbnail data is the large thumbnail data of the object (file) specified by the ObjectHandle. The size of the LargeThumbnail data shall be the reference JPEG image size acquired in order of priority shown in the table below.

Order of priority	Reference (Still image object)	Reference (Video object)
1	MPF class 1	MPF class 1
2	VIEW	MPF class 2
3	MPF class 2	Small thumbnail

The size of small thumbnail is the same as thumbnail that can be obtained with the GetThumb command (section 6.2.1.10).

Aspect ratio	VIEW	MPF class 1	MPF class 2
3:2	570x375	640x424	1620x1080
5:4		600x480	1350x1080
4:3		640x480	1440x1080
1:1		480x480	1080x1080
16:9		640x360	1920x1080

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
No_Thumbnail_Present	The object corresponding to the specified ObjectHandle does not include a thumbnail.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.3.7 GetFhdPicture

○ Command Specifications

Operation Code	0x920F
Operation Parameter	Refer to Operation Parameter in this section.
Data	FullHD image data
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the FullHD image data of the specified object in the card.

○ Command Details

The camera sends all the FullHD image data corresponding to the specified ObjectHandle in the card to the host.

The FullHD image data is a maximum of 1920x1080-size JPEG image.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist. The object other than Jpeg, RAW or TIFF is specified.
No_FullHD_Present	An object that corresponds to the specified ObjectHandle is not the FullHD image.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.

Do Not Copy

6.2.3.8 CancelImagesInSdram

○ Command Specifications

Operation Code	0x940C
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode cancels the transfer of a specific object saved in the SDRAM.

○ Command Details

This command cancels the transfer of the object corresponding to the specified ObjectHandle. For the ObjectHandle, the ObjectHandle passed by the ObjectAddedInSdram event should be specified. When the object corresponding to the specified ObjectHandle has been already sent to the host or deleted, an error response is made.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Device_Busy	The shooting operation is being performed.
	The ObjectAddedInSdram event is not ready for passing.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.

Do Not Copy

6.2.3.9 DeleteImagesInSdram

○ Command Specifications

Operation Code	0x90C3
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode deletes a specific object saved in the SDRAM or all the objects saved in the SDRAM.

○ Command Details

The object that corresponds to the specified ObjectHandle is deleted. All the objects in the SDRAM are deleted if the value of Parameter1 is 0. During the process of deleting all the objects, the camera does not issue a new ObjectAddedInSdram event.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Device_Busy	The shooting operation is being performed.
	The ObjectAddedInSdram event is not ready for passing.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.

Do Not Copy

6.2.3.10 SendPartialObjectInfo

○ Command Specifications

Operation Code	0x9472
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectInfo DataSet
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this OperationCode is to complete preparations for object transmission by sending object information from the host to the camera, prior to the operation of the SendPartialObject (section 6.2.3.11) command.

○ Command Details

If you execute SendPartialObjectInfo again after sending an ObjectInfo DataSet using this command, the ObjectInfo DataSet sent later will be adopted.

If "0" is specified for the file size of the ObjectInfo DataSet sent with this command, the SendPartialObject command will return OK, indicating that the object was sent successfully.

The format of the ObjectInfo DataSet sent by the host is shown in section 9.3.5.2.

○ Operation Parameter

Operation Parameter	Details
Parameter1	Reserved(0)
Parameter2	ObjectHandle of the image to associate the WAV file with
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Store_Not_Available	The card does not exist.
	The battery is exhausted.
Store_Read_Only	The card that is ready for recording is protected.
Store_Full	There is no free area for recording in the card.
Store_Error	A card access error occurs.
Store_Unformatted	The card is not formatted.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An ObjectHandle other than an image is specified.
Invalid_ObjectFormatCode	The ObjectFormat field of the received ObjectInfo DataSet is other than 0x3008 (WAV).
Access_Denied	During PC camera mode
	A WAV file already exists in the image file to be associated with the WAV file.
	The value specified in the ObjectCompressedSize field of the received ObjectInfo DataSet exceeds the size of the voice memo file that can be generated by the camera.

Do Not Copy

○ Response Parameter

Response Parameter	Description
Parameter1	StorageID where the object is saved
Parameter2	(Parent) ObjectHandle that stores the object
Parameter3	ObjectHandle reserved for objects received by the camera
Parameter4	ObjectHandle reserved for objects received by the camera (WAV files associated with the same image) If any of the following conditions are met: 0x00000000 - If the same image as the image to which the WAV file is associated does not exist - If the same image as the image to which the WAV file is associated exists, and a WAV file already exists for the same image

Do Not Copy

6.2.3.11 SendPartialObject

○ Command Specifications

Operation Code	0x9473
Operation Parameter	Refer to Operation Parameter in this section.
Data	DataObject
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	Actual number of bytes sent

○ Command Outline

The operation by this OperationCode is to send an object (DataObject) from the host to the camera.

○ Command Details

Send the object based on the ObjectInfo DataSet information sent prior to this command.

With this command, data can be divided and sent multiple times sequentially from the beginning to the end.

The object has been sent, then the previously received ObjectInfo DataSet is discarded.

The maximum size that can be sent at one time with this command is 2M (2097144) bytes.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed. The size of the object being sent exceeds the maximum size that can be sent at one time.
Store_Not_Available	The battery is exhausted.
Store_Full	The total size of the received files is greater than the size specified in the previously received data.
No_Valid_ObjectInfo	This command was received before the SendPartialObjectInfo command was accepted.
Access_Denied	During PC camera mode

Do Not Copy

6.2.4 Vendor (Shooting)

6.2.4.1 InitiateCaptureRecInMedia

○ Command Specifications

Operation Code	0x9207
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None
Event Code	Refer to Event Code in this section.

○ Command Outline

The operation by this OperationCode makes the camera start the acquisition of one or more new objects (release operation of the camera) according to the current setting. The acquired object (image data) is saved in the specified location.

○ Command Details

This command is an activation-type command. OK response is made when the start of the AF operation or the release operation is completed.

When the host gets the response of the normal termination, the host should issue the DeviceReady command (section 6.2.2.11) to confirm whether the release operation is terminated.

The following information can be returned for the DeviceReady command (section 6.2.2.11) when requesting the release operation.

Response Code	Description
OK	The release operation is normally terminated.
Device_Busy	The AF, the shooting or the continuous shooting operation is being performed
Bulb_Release_Busy	The bulb shooting is being performed.
Silent_Release_Busy	The silent shooting is being performed.
Out_of_Focus	The AF operation is not focused before shooting or during continuous shooting.
Wb_Preset_Error	The preset measurement release failed.
Other Response Code	Some error has occurred when requesting the release.

* For the details, refer to the DeviceReady command (section 6.2.2.11).

Whether the AF operation is performed or not depends on the value of CaptureSort (described later) in Parameter1 and the focus mode setting. When the live view is executed, it also depends on the live view mode.

For the details of the command release operation, refer to Command Release Operation (section 11.7).

○ Operation Parameter

Operation Parameter	Details	
Parameter1	CaptureSort (The details are shown in the table below.)	
Parameter2	SaveMedia	
	0x0000	Card
	0x0001	SDRAM
	0x0002	Card and SDRAM
Parameter3	None	

Do Not Copy

CaptureSort	Operation	Description
0xFFFFFFFE	Image acquisition release after AF driving	The AF driving is started and then the release operation of the camera is performed. - In photo mode In the case of focus priority, the release operation is started only when the AF is focused after AF driving. Other than in the case of focus priority, the release operation is always started independent of the status after AF driving. - In video mode Because it is fixed to the release priority, the release operation is always started independent of the status after AF driving.
0xFFFFFFFF	Image acquisition release	Normal release operation is performed.
0x00000001	Preset measurement release 1	Stores the acquired preset gain in D1.
0x00000002	Preset measurement release 2	Stores the acquired preset gain in D2.
0x00000003	Preset measurement release 3	Stores the acquired preset gain in D3.
0x00000004	Preset measurement release 4	Stores the acquired preset gain in D4.
0x00000005	Preset measurement release 5	Stores the acquired preset gain in D5.
0x00000006	Preset measurement release 6	Stores the acquired preset gain in D6.
0x00000010	Dust reference image release	Dust reference image release operation is performed. When the shooting succeeds, the operation similar to the image acquisition release is performed hereafter.

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified CaptureSort or SaveMedia is out of the setting range.
Device_Busy	When the command processing is started, the acquisition operation is being performed.
	The shutter-release button is being fully pressed.
	The STM lens is being initialized.
Hardware_Error	When the command processing is started, some error is generated in the camera body.
Out_of_Focus	All of the following conditions are satisfied and the AF operation is not focused. - CaptureSort is the image acquisition release after AF driving. - The AF operation mode is set to [Focus priority].
Invalid_Status	The shutter speed is set to Time.
Dust_Reference_Error	The CPU internal lens is not mounted during the dust reference image release.
	The dust reference image release failed.
	The dust reference image release is specified when the HDR mode is set to [On].
	The dust reference image release is specified when the LiveViewSelector is set to [Video mode].
Wb_Preset_Error	The preset manual WB data save destination that is specified in the preset measurement release is protected.
	The preset measurement release is specified when the HDR mode is set to ON.
	The preset measurement release is specified during PC

Do Not Copy

	camera mode.
CameraMode_Not_Adjust_Fnumber	An aperture value error occurs.
Store_Full	There is no free area for recording in the card.
	There is no free area for recording in the SDRAM.
Store_Not_Available	The card is being initialized
	The card does not exist when SaveMedia is set to [Card] or [Card and SDRAM].
	The battery is exhausted.
Store_Error	SaveMedia is [Card] or [Card and SDRAM] and a card access error occurs in the camera.
Store_Unformatted	SaveMedia is [Card] or [Card and SDRAM] and the card is not formatted.
Store_Read_Only	The card that is ready for recording is protected.
Access_Denied	In the case of the spot WB acquisition standby state
	When a retractable lens is mounted, the lens is retracting.
	The WarningStatus property (section 6.5.6.24) is “Version upgrade warning when mount adapter is attached”.
	The preset measurement release is performed when StillCaptureMode property (section 6.5.1.15) is set to [High-speed frame capture].
	SpecialShootingMode property (section 6.5.6.3) is set to ON (during interval timer shooting/focus shift shooting).
	Shooting cannot be performed depending on the camera status by a cause other than the above.

○ Event Code

Event Code	Description
ObjectAdded	A new object is recorded in the card.
StoreFull	There is no free area for recording in the card after shooting.
CaptureComplete	The acquisition operation of all the new objects is completed.
ObjectAddedInSdram	A new object is recorded in the SDRAM.
CaptureCompleteRecInSdram	All the images captured by this command are sent from the SDRAM to the host completely.

Do Not Copy

6.2.4.2 InitiateCaptureRecInSdram

○ Command Specifications

Operation Code	0x90C0
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode makes the camera start the acquisition of one or more new objects (release operation of the camera) according to the current setting. The acquired object (image data) is saved in the SDRAM.

○ Command Details

This command performs the same operation as that of the InitiateCaptureRecInMedia command with CaptureSort set to a value other than [Image acquisition release after AF driving] and SaveMedia set to [SDRAM].

The parameters to perform the same operation as that of InitiateCaptureRecInSdram by InitiateCaptureRecInMedia are shown below.

Operation Parameter	
Parameter1(CaptureSort)	0x00000010(DustOff) 0xFFFFFFFF(Image acquisition release)
Parameter2(SaveMedia)	0x00000001(SDRAM)

For the details, refer to the InitiateCaptureRecInMedia command (section 6.2.4.1).

○ Operation Parameter

Operation Parameter	Details
Parameter1	CaptureSort Refer to the InitiateCaptureRecInMedia command.
Parameter2	None
Parameter3	None

○ Response Code

This section describes only ResponseCodes different from that of the InitiateCaptureRecInMedia command.

For the details of other response codes, refer to the InitiateCaptureRecInMedia command.

Response Code	Description
Shutter_Speed_Bulb	The shutter speed is set to Bulb.
Shutter_Speed_Time	The shutter speed is set to Time.

Do Not Copy

6.2.4.3 AfAndCaptureRecInSdram

○ Command Specifications

Operation Code	0x90CB
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts the AF driving and makes the camera start the acquisition of one or more new objects (release operation of the camera). The acquired object (image data) is saved in the SDRAM.

○ Command Details

This command performs the same operation as that of the InitiateCaptureRecInMedia command with CaptureSort set to [Image acquisition release after AF driving] and SaveMedia set to [SDRAM].

The parameters to perform the same operation as that of AfAndCaptureRecInSdram by InitiateCaptureRecInMedia are shown below.

Operation Parameter	Description
Parameter1 (CaptureSort)	0xFFFFFFFE (Image acquisition release after AF driving)
Parameter2 (SaveMedia)	0x00000001(SDRAM)

For the details, refer to the InitiateCaptureRecInMedia command (section 6.2.4.1).

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

This section describes only ResponseCodes different from that of the InitiateCaptureRecInMedia command.

For the details of other response codes, refer to the InitiateCaptureRecInMedia command.

Response Code	Description
Shutter_Speed_Bulb	The shutter speed is set to Bulb.
Shutter_Speed_Time	The shutter speed is set to Time.

Do Not Copy

6.2.4.4 TerminateCapture

○ Command Specifications

Operation Code	0x920C
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode stops the shooting operation executed by the host.

○ Command Details

The camera stops the following shooting operation executed by the host.

Shooting operation	Operation after stopping
Bulb shooting	The images captured until the operation is stopped are recorded in the card or the SDRAM.
Continuous shooting	If this command is executed during continuous shooting, the shooting operation is terminated.

The transition to the response phase is performed when the start of the shooting stop processing is completed.

○ Operation Parameter

Operation Parameter	Details
Parameter1	Reserved (0)
Parameter2	Reserved (0)
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.

Do Not Copy

6.2.4.5 ChangeAELock

○ Command Specifications

Operation Code	0x9426
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode changes the state of AE lock and AWB lock.

○ Command Details

If the white balance is other than auto or natural auto, and LockValue is set to "Locked (hold)" and the lock type is set to "AE/AWB", only the AE lock is enabled.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	LockValue	
	0	Lock released
	1	Locked (hold)
Parameter2	[LockType]	
	None	AE
	0	
	1	AWB
	2	AE/AWB
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	The specified value is out of the range.
Access_Denied	The WarningStatus property (section 6.5.6.24) is [Sequence error], [Minimum aperture warning] or [Retractable zoom-ring warning].
	Waiting for spot WB data acquisition
	During aperture preview.
	White balance (NOTE1) is other than auto or natural light auto, and LockType is set to [AWB]. (NOTE1)
Device_Busy	When the command processing is started, the acquisition operation is being performed.

NOTE1)

The white balance of the WhiteBalance property (section 6.5.1.4) is targeted in photo mode, and the white balance of the MovieWhiteBalance property (section 6.5.3.14) is targeted in video mode.

Do Not Copy

6.2.4.6 InitiatePixelMapping

○ Command Specifications

Operation Code	0x9433
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts pixel mapping.

○ Command Details

This command is an activation command. The camera returns OK after starting pixel mapping operation.

When pixel mapping operation is completed, the camera sends PixelMappingComplete event (section 6.4.2.9).

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Device_Busy	The shooting operation is being performed.
	During recording image.
Access_Denied	Sequence error.
	The battery is exhausted.
	Temperature in the camera exceeds the specified value.
	Wireless remote control is connected.

Do Not Copy

6.2.4.7 InitiateOpenCaptureV

○ Command Specifications

Operation Code	0x9445
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this Operation Code starts interval timer shooting and focus shift shooting.

○ Command Details

If interval timer shooting and focus shift shooting have already started, an OK response is given.
If the start of the interval timer shooting is requested while the interval timer shooting is paused, the interval timer shooting is restarted.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	CaptureSort	
	1	Interval timer shooting
	2	Focus shift shooting

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Parameter_Not_Supported	An unsupported parameter is specified.
Store_Full	There is no free space on the card.
	There is no free space on the SDRAM.
Invalid_Parameter	Invalid value is specified in CaptureSort.
Store_Read_Only	The card to be recorded is protected.
Access_Denied	Failed to start shooting.
	Focus shift shooting is specified in CaptureSort during interval timer shooting. Interval timer shooting is specified in CaptureSort during focus shift shooting.
	Shutter-release mode is set to self-timer.
	Shutter-release mode is set to high-speed frame capture.
	Shutterspeed is set to bulb.
	Shutterspeed is set to time.
	HDRMode property (section 6.5.2.75) is set to ON.
	EnableBracketing property (section 6.5.8.1) is set to ON.
	When a retractable lens is mounted, the lens is retracting.
	The WarningStatus property (section 6.5.6.24) is “Version upgrade warning when mount adapter is attached”.
Store_Not_Available	RecordingMedia property is set to [Card] or [Card and SDRAM] and the card is not inserted.
	All of the following conditions are met and there is no card. - CaptureSort is interval timer shooting. - Time-lapse video option is enabled for interval timer shooting.
	The battery is exhausted.
Device_Busy	The capturing operation is being performed at the start of command processing.
Store_Error	Card access error occurs.
Store_Unformatted	The card is not formatted.

Do Not Copy

○ Response Parameter

Response Parameter	Description
Parameter1	Number of shots
Parameter2	Shooting time [second] (Fixed to 0 for focus shift shooting)

6.2.4.8 TerminateOpenCaptureV

○ Command Specifications

Operation Code	0x9446
Operation Parameter	None
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this Operation Code stops interval timer shooting and focus shift shooting.

○ Command Details

This command is an activation command.　The camera returns OK after accepting stop request.
When shooting operation is completed, the camera sends OpenCaptureComplete event.

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Parameter_Not_Supported	An unsupported parameter is specified.
Capture_Already_Terminated	Shooting has already been completed.

Do Not Copy

6.2.4.9 GetOpenCaptureInfo

○ Command Specifications

Operation Code	0x9447
Operation Parameter	Refer to Operation Parameter in this section.
Data	OpenCaptureInfo Dataset
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this Operation Code acquires the information of interval timer shooting and focus shift shooting.

○ Command Details

You can cquire information on the number of shots and shooting time specified in Capture Sort.

Information can be acquired in the case of CaptureSort specified by the InitiateOpenCaptureV command during shooting, but the number of shootings and time are invalid values (fixed to 0) when the CaptureSort is different.
(Example: The number and time of focus shift shooting are invalid during interval timer shooting)

The format of OpenCaptureInfo Dataset is shown below.

Field	Size(Byte)	Description
Version	2	Version of dataset Version 1.00(0x0064)
Shooting condition	2	0:Stop (If the interval timer shooting is paused, it will be stopped.) 1:During interval timer shooting 2:During focus shift shooting
Number of shots	4	-
Shooting time	4	The time it takes to finish shooting. Unit: seconds Invalid value (fixed to 0) for focus shift shooting

○ Operation Parameter

Operation Parameter	Details	
Parameter1	CaptureSort	
	1	Interval timer shooting
	2	Focus shift shooting

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_Parameter	The specified CaptureSort is out of the setting range.

Do Not Copy

6.2.4.10 SetFlickerReductionShutterSpeed

○ Command Specifications

Operation Code	0x9463
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this Operation Code sets the shutter speed for high-frequency flicker reduction.

○ Command Details

Sets the shutter speed for high-frequency flicker reduction according to the current state (photo mode or video mode).

The change direction of the shutter speed specified by Parameter1 is as follows.
- On the high-speed side, it is equivalent to turning the main command dial counterclockwise.
- On the low-speed side, it is equivalent to turning the main command dial clockwise.

One step of the shutter speed change specified by Parameter2 corresponds to one click of the main command dial.

When the shutter speed for high-frequency flicker reduction is set with this command, the normal shutter speed is updated with an approximate value of the shutter speed for high-frequency flicker reduction.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	The change direction of the shutter speed	
	0	High-speed side
	1	Low-speed side
Parameter2	Shutter speed change steps	
	From1 to 10	Number of steps

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	The specified CaptureSort is out of the setting range.
Access_Denied	When the normal shutter speed is other than 1/30 second to 1/8000 second.
	When the following conditions are not met in photo mode. HighFrequencyFlickerReduction property (section 6.5.2.68) is set to [On (high-resolution shutter setting)] and ExposureProgramMode property (section 6.5.1.11) is [M] or [S].
	When the following conditions are not met in video mode. MovieHighFrequencyFlickerReduction property (section 6.5.3.59) is set to [On (high-resolution shutter setting)] and ExposureProgramMode property (section 6.5.1.11) is [M].

Do Not Copy

6.2.5 Vendor (Lens)

6.2.5.1 AfDrive

○ Command Specifications

Operation Code	0x90C1
Operation Parameter	None
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts the AF driving and has the same function as that of pressing the shutter-release button of the camera body halfway.

○ Command Details

This command is an activation command. When the AF driving is started or the camera is in the AF non-driving condition described below, the OK response is made.

After the command is terminated normally, the host should issue the DeviceReady command to confirm the completion of the operation.

The following information can be returned for the DeviceReady command when the AF driving is started.

Response Code	Description
OK	AF driving operation is terminated.
Device_Busy	AF is in operation.
Out_of_Focus	AF operation failed (out of focus).
Other Response Code	AF operation failed.

For the details, refer to the DeviceReady command (section 6.2.2.11).

If the following conditions are true, the AF operation is not performed and the camera immediately returns OK.

No	AF non-driving condition
1	The value of the FocusMode property (section 6.5.1.7) is 0x0001[MF].
2	WarningStatus property (section 6.5.6.24) is [Retractable zoom-ring warning].

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Access_Denied	WarningStatus property (section 6.5.6.24) is set to [A non-compatible lens is attached] or [A lens that failed to firmware upgrade is attached].
Device_Busy	When the command processing is started, the acquisition operation or the AF operation is being performed.
	The STM lens is being initialized.

Do Not Copy

6.2.5.2 AfDriveCancel

○ Command Specifications

Operation Code	0x9206
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode cancels the AF driving.

○ Command Details

The camera cancels the AF driving in operation.

The transition to the response phase is performed when the cancellation of the AF driving is completed.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.

Do Not Copy

6.2.5.3 MfDrive

○ Command Specifications

Operation Code	0x9204
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts the MF driving.

○ Command Details

This command is an activation command. OK response is made when the MF driving is started. When the host gets the response of the normal termination, the host should issue the DeviceReady command to confirm whether the operation is terminated.

The following information can be returned for the DeviceReady command when the MF driving is started.

Response Code	Description
OK	MF driving operation is terminated.
Device_Busy	MF is driving.
MfDrive_Step_End	The MF driving reaches the end of steps.
MfDrive_Step_Insufficiency	The driving amount is insufficient.
Other Response Code	The MF driving operation failed.

* For the details, refer to the DeviceReady command (section 6.2.2.11).

The camera performs the MF driving based on the contents of DriveType specified by Parameter1. The MF driving amount is based on the contents of StepValue specified by Parameter2. The MF driving operates according to the current position.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	DriveType	
	0x00000001	Infinite -> Nearest
	0x00000002	Nearest -> Infinite
Parameter2	StepValue (driving amount (the number of pulses))	
	From 1 to 32767	
Parameter3	None	

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	The AF operation is being performed in the camera.
	The AF-F is being set.
	The STM lens is being initialized.
	When the command processing is started, the acquisition operation is being performed.
Invalid_Parameter	The specified value of DriveType or StepValue is out of the range.
Invalid_Status	The MF driving cannot be performed due to a problem caused by the camera (an error caused by the camera, the CPU internal lens is not mounted, the lens cannot be used, a non-compatible lens is attached, a lens that failed to firmware upgrade is attached, etc.).
	The focus mode is MF.

Do Not Copy

6.2.5.4 PowerZoomDrive

○ Command Specifications

Operation Code	0x9464
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	None
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode requests the start/stop of power zoom drive by a power zoom compatible lens.

○ Command Details

If a lens that supports power zoom is attached, a normal termination response is returned regardless of whether the power zoom drive started/stopped successfully.

Whether the power zoom is activated or stopped can be confirmed by changing the FocalLength property (section 6.5.1.6).

If this command is executed with "Start" while the power zoom is being driven, it will be re-driven with the specified parameters.

As for the correspondence between this command for the drive speed of the power zoom and the camera menu, the value obtained by subtracting 5 from the value of Parameter 3 of this command is same as the menu value.

Speed	Low				High
Parameter3	0	…	5	…	10
Menu	-5		0		+5

○ Operation Parameter

Operation Parameter	Details	
Parameter1	Power zoom driving	
	0	Stop
	1	Start
Parameter2	Driving direction	
	1	Wide
	2	Tele
Parameter3	Driving speed	
	From 0(Low speed) to 10(High speed)	

If "Stop" is specified for Parameter1, Parameters2 and 3 are not used.

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_Parameter	The specified value is out of the range.
Access_Denied	When the power zoom compatible lens in the LensTypeML property (section 6.5.10.2) is set to zero.

Do Not Copy

6.2.5.5 GetManualSettingLensData2

○ Command Specifications

Operation Code	0x9470
Operation Parameter	Refer to Operation Parameter in this section.
Data	ManualSettingLens DataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the information about “Non-CPU lens data” in the setup menu.

○ Command Details

The camera sends the information (ManualSettingLens DataSet) about “Non-CPU lens data” of LensNo specified by the parameter1 to the host.

When 0xFFFFFFFF is set to LensNo, the camera sends all the information to the host.

The ManualSettingLens DataSet is shown below.

Field		Size	DataType	Description
Dataset version		2	UINT16	Version 1.00 : 0x0064
Lens No. being set		4	UINT32	Refer to ManualSettingLensNo property (section 6.5.5.1).
Number of manual setting lens information (N)		4	UINT32	Acquire one data : 1/ Acquire all data : 20
Manual setting lens information[0] (Information about the lens No. 1. See NOTE.)	Focal length	4	UINT32	Refer to FmmManualSetting2 property (section 6.5.5.2).
	Maximum aperture	2	UINT16	Refer to F0ManualSetting2 property (section 6.5.5.3).
	Lens name	DTS	String	Refer to ManualSettingLensName property (section 6.5.5.4).
Manual setting lens information [1]	Focal length	4		Information about the lens No. 2.
	Maximum aperture	2		
	Lens name	DTS		
Manual setting lens information [N - 1]	Focal length	4		Information about the lens No. N.
	Maximum aperture	2		
	Lens name	DTS		

NOTE) When “Acquire one data” is selected, the information about the lens of LensNo specified by Parameter1.

○ Operation Parameter

Operation Parameter	Description	
Parameter1	LensNo	
	Refer to ManualSettingLensNo property.	Acquire one data
	0xFFFFFFFF	Acquire all data
Parameter2	None	
Parameter3	None	

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.

6.2.6 Vendor (LiveView)

6.2.6.1 StartLiveView

○ Command Specifications

Operation Code	0x9201
Operation Parameter	None
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode makes the camera enter the remote live view status.

○ Command Details

This command is an activation-type command. OK response is made when the entry into the remote live view status is started.

When the host gets the response code of normal termination, the host should issue the DeviceReady command to confirm whether the camera enters the remote live view status (and the acquisition of the live view image becomes enabled).

The following information can be returned for the DeviceReady command when entering the remote live view status.

Response Code	Description
OK	The camera has entered the remote live view status.
Device_Busy	The camera is entering the remote live view status.
Other Response Code *	Some error has occurred when entering the remote live view status.

* For the details, refer to the DeviceReady command (section 6.2.2.11).

When the live view is active on the camera but the camera does not enter the remote live view status because the StartLiveView command is not executed, commands such as GetLiveViewImageEx command cannot be executed.

The live view prohibition condition is shown in the LiveViewProhibitionCondition property (section 6.5.11.7). The StartLiveView command must be issued when there is no prohibition factor in the LiveViewProhibitionCondition property. If there is any prohibition factor in the LiveViewProhibitionCondition property, even if the StartLiveView command is issued and the live view is started, the operation is not guaranteed.

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	When the command processing is started, the acquisition operation is being performed.
Hardware_Error	When the command processing is started, some error is generated in the camera body.
Invalid_Status	An error caused by the camera (battery empty, warning information) occurs.

Do Not Copy

6.2.6.2 EndLiveView

○ Command Specifications

Operation Code	0x9202
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode releases the live view status.

○ Command Details

The remote live view status is released and the camera becomes into the camera live view status.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	The live view cannot be terminated because of the camera factor.

Do Not Copy

6.2.6.3 GetLiveViewImage

○ Command Specifications

Operation Code	0x9203
Operation Parameter	Refer to Operation Parameter in this section.
Data	LiveViewObject (without version)
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the newest live view image.
The format of the live view image is JPEG.

○ Command Details

This OperationCode is a command for compatibility with the GetLiveViewImageEx command (section 6.2.6.4).

For this camera, GetLiveViewImageEx command should be used.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	The WarningStatus property (section 6.5.6.24) is “Version upgrade warning when mount adapter is attached”.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.6.4 GetLiveViewImageEx

○ Command Specifications

Operation Code	0x9428
Operation Parameter	Refer to Operation Parameter in this section.
Data	LiveViewObject (with version)
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the newest live view image.
The format of the live view image is JPEG.

○ Command Details

This command is valid when the camera is in the remote live view condition after executing the StartLiveView command.

The camera sends the newest live view image (LiveViewObject) to the host. LiveViewObject is composed of the display information and the live view image (JPEG).
The data set of LiveViewObject is described in section 9.7.

Even if the through image display of the camera is being enlarged during video recording, the live view image transmitted by this command is the whole image.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	The WarningStatus property (section 6.5.6.24) is “Version upgrade warning when mount adapter is attached”.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.6.5 GetLiveViewCompressedSize

○ Command Specifications

Operation Code	0x9423
Operation Parameter	Refer to Operation Parameter in this section.
Data	LiveViewObjectMaxSize Value
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the maximum size (Byte) of LiveViewObject returned by the GetLiveViewImageEx command.

○ Command Details

The size of the live view image is calculated with the value set in the LiveViewImageCompression property and LiveViewImageSize property.

The format of LiveViewObjectMaxSize is UINT32.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.6.6 ChangeAfArea

○ Command Specifications

Operation Code	0x9205
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode changes the AF area in the live view condition.

○ Command Details

This command is valid when the camera is in the remote live view condition after getting the StartLiveView command.

The camera specifies the AF area with the coordinates specified by Parameter1 and Parameter2 set to the center. XValue of Parameter1 and YValue of Parameter2 are used to set the X-axis and the Y-axis, respectively.

The range of XValue and YValue should be the “Whole size” of the header information acquired by the GetLiveViewImageEx command. However, the range that can be specified should be smaller by the half size of the “AF frame size”. When a value that exceeds the setting permitted range is set, the maximum or the minimum value is reflected.

If the image is enlarged during video recording, only the enlarged position is changed without changing the AF area.

○ Operation Parameter

Operation Parameter	Details
Parameter1	XValue
Parameter2	YValue
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Access_Denied	In the case of the spot WB acquisition standby state
Device_Busy	The AF operation is being performed in the camera.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.6.7 StartTracking

○ Command Specifications

Operation Code	0x9424
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode starts tracking action for auto-area AF and target tracking AF, or changes the target of subject recognition.

○ Command Details

The specification method of OperationParameter is the same as the command details of ChangeAfArea (section 6.2.6.6).

After this command is executed, the changes in LiveViewObject (section 9.7) acquired by the GetLiveViewImageEx command are shown below.

Condition		Value of LiveViewObject that changes after this command is executed		
AF area mode	Subject recognition target is detected or not	Tracking state	Center coordinates of AF frame	Index of selected subject
Auto-area AF	There is a detected subject recognition target at the specified coordinates.	Waiting	-	Index of the subject recognition target at the specified coordinates
	There is no detected subject recognition target at the specified coordinates.	Tracking	Specified coordinates	-
Target tracking AF	-	Tracking	Specified coordinates	-

○ Operation Parameter

Operation Parameter	Details
Parameter1	XValue
Parameter2	YValue

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Access_Denied	The StillFocusMeteringMode property (section 6.5.2.70) is set to the value other than [Auto-area AF] in photo mode.
	The MovieFocusMeteringMode property (section 6.5.3.62) is set to the value other than [Auto-area AF / Target tracking AF] in video mode.
	In the case of the spot WB acquisition standby state
Device_Busy	The image acquisition operation is being performed.
Invalid_Status	Failed to change the tracking state due to the camera factor.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.6.8 EndTracking

○ Command Specifications

Operation Code	0x9425
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode terminates the tracking operation in auto-area AF and target tracking AF.

○ Command Details

After executing this command, the tracking state of LiveViewObject acquired by the GetLiveViewImageEx command (section 6.2.6.4) is set to [Waiting].

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	The image acquisition operation is being performed.
Invalid_Status	Failed to change the tracking state due to the camera factor.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.7 Vendor (Video)

6.2.7.1 StartMovieRecord

○ Command Specifications

Operation Code	0x920A
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	Refer to Response Parameter in this section.

○ Command Outline

The operation by this OperationCode starts video recording.

○ Command Details

This command is accepted only during the live view execution. It is recommended to check the video recording prohibition condition property (MovieRecProhibitionCondition (section 6.5.12.5)) before issuing this command.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Access_Denied	In the case of the spot WB acquisition standby state
Invalid_Status	The video recording cannot be started due to an error caused by the camera.
Not_LiveView	The camera is not in the live view condition.

○ Response Parameter

Response Parameter	Description
Parameter1	When the response code is OK, the recording media is specified in this field. When the response code is not OK, this field is invalid. 0: Recording in the card 1: Recording in the external recorder 2: Recording in the card and the external recorder
Parameter2	None
Parameter3	None

Do Not Copy

6.2.7.2 EndMovieRecord

○ Command Specifications

Operation Code	0x920B
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode finishes video recording.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.

Do Not Copy

6.2.7.3 GetHLGQualityData

○ Command Specifications

Operation Code	0x942E
Operation Parameter	Refer to Operation Parameter in this section.
Data	HLGQuality DataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the HLGQuality DataSet set in "HLG Quality Adjustment" in the video recording menu.

○ Command Details

The contents of the HLGQuality DataSet are shown in section 9.11.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.7.4 SetHLGQualityData

○ Command Specifications

Operation Code	0x942F
Operation Parameter	Refer to Operation Parameter in this section.
Data	HLGQuality DataSet
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets the HLGQuality DataSet in "HLG Quality Adjustment" in the video recording menu.

○ Command Details

The contents of the HLGQuality DataSet are shown in section 9.11.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Device_Busy	During shooting operation.
Access_Denied	MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit (MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to other than [HLG].
	MovieFileType property is set to [ProRes RAW HQ 12-bit(MOV)] or [N-RAW 12-bit(NEV)].
Invalid_Data	Wrong HLGQuality DataSet was specified.

Do Not Copy

6.2.8 Vendor (White balance)

6.2.8.1 SetPreWbData

○ Command Specifications

Operation Code	0x90C9
Operation Parameter	Refer to Operation Parameter in this section.
Data	PreWbThumImage
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets the data in the preset manual white balance data area of the camera.

○ Command Details

This command sets the data in the preset manual white balance data area of the camera.

The camera stores the preset white balance gain value specified by PreWbGainValue in the data area specified by PreWbDataIndex and stores the thumbnail image of PreWbThumImage.

The format of PreWbThumImage shall be the same as that of the thumbnail image (JPEG format) recorded in the JPEG file defined in the accompanying document “RAW Data Format for Digital Camera”.

When PreWbThumImageSize is 0, PreWbThumImage is not sent in the data phase and the thumbnail image is not recorded.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	byte3: Reserved(0)	
	byte2: ShootingMode	
	0	Photography
	1	Video
	byte1: RotateThumb (*1)	
	0	Horizontal
	1	Grip side upward
	2	Grip side downward
	byte0: PreWbDataIndex (*2) This is equivalent to the WbPresetDataNo property (section 6.5.2.32).	
Parameter2	PreWbGainValue	
Parameter3	PreWbThumImageSize	

*1: RotateThumb is referred to by the camera when Parameter3 (PreWbThumImageSize) is a value other than 0.

*2: If the value of the WbPresetDataNo property is zero (in the case of the camera with acquired data), any data cannot be set in the preset manual white balance data area.

Do Not Copy

The contents of PreWbGainValue are shown below.

Upper 2 Bytes of PreWbGainValue are RGain and lower 2 Bytes are BGain.
The format of RGain and BGain is fixed point. RGain sets Bit 16 to 26 as decimal parts and BGain sets up to Bit 10 as decimal parts.
Since the number of significant digits of the decimal part is 9 bits, the lower 2 bits are ignored.

$$\mathrm{RGain} = \frac{\mathrm{G}}{\mathrm{R}} \times 2048$$

$$\mathrm{BGain} = \frac{\mathrm{G}}{\mathrm{B}} \times 2048$$

The range that can be set for RGain, BGain is as follows.

$$0 \leq \mathrm{RGain} < 8 \times 2048$$
$$0 \leq \mathrm{BGain} < 8 \times 2048$$

PreWbGainValue																
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
RGain	Integer part					Decimal part										
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
BGain	Integer part					Decimal part										

PreWbThumImageSize indicates the size of PreWbThumImage. In addition, PreWbThumImage should be the compression quality Fine (1/4 compression) and the size should be 13440 bytes or less.

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Incomplete_Transfer	The data block reception failed.
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].
Device_Busy	During shooting operation.
Invalid_Parameter	The specified value is out of the range.
Wb_Preset_Error	The specified index of the preset is protected.

Do Not Copy

6.2.8.2 StartSpotWb

○ Command Specifications

Operation Code	0x9402
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode makes the camera enter into the spot WB acquisition standby state in the live view condition.

○ Command Details

This command is valid when the camera is in the remote live view condition after executing the StartLiveView command in video mode.

The camera enters into the acquisition standby state for the storage destination specified by the MovieWbPresetDataNo property (section 6.5.3.26). When the MovieWhiteBalance (section 6.5.3.14) is set to [Same as photo settings], the storage destination specified by the WbPresetDataNo property is used.

A property other than the following cannot be set in the spot WB acquisition standby state. If it is set, the Access_Denied response is made.

Property Code	Description	Reference item
0xD1BD	LiveViewZoomArea	6.5.11.6

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Access_Denied	The white balance is set to anything other than [Preset manual].
	During the PC camera mode.
Device_Busy	The shooting operation is being performed at the start of command processing.
Invalid_Status	The storage destination of the preset manual WB data is protected.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.8.3 EndSpotWb

○ Command Specifications

Operation Code	0x9403
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode cancels the spot WB acquisition standby state.

○ Command Details

This command cancels the spot WB acquisition standby state.
The OK response is made even when the camera is not in the spot WB acquisition standby state.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	During transition into the spot WB condition
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.8.4 ChangeSpotWbArea

○ Command Specifications

Operation Code	0x9404
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode changes the spot WB area in the spot WB acquisition standby state.

○ Command Details

This command is valid when the camera is in the spot WB acquisition standby state after getting the StartSpotWb command.

For the details, refer to ChangeAfArea (section 6.2.6.6).

○ Operation Parameter

Operation Parameter	Details
Parameter1	XValue
Parameter2	YValue
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Status	The camera is not in the spot WB acquisition standby state.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.8.5 MeasureSpotWb

○ Command Specifications

Operation Code	0x9405
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires the spot WB in the spot WB acquisition standby state.

○ Command Details

This command is valid when the camera is in the spot WB acquisition standby state after getting the StartSpotWb command (section 6.2.8.2).

This command is an activation command. When the spot WB acquisition is started, the transition to the response phase is performed.

When receiving this command, the camera acquires the spot WB with the coordinates set by ChangeSpotWbArea command (section 6.2.8.4).

The spot WB acquisition result is passed by the display information in LiveViewObject acquired by GetLiveViewImageEx command (section 6.2.6.4).

After releasing the acquisition result, the camera is in the spot WB acquisition standby state and the acquisition operation can be performed again by executing this command.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Device_Busy	During transition into the spot WB condition
Invalid_Status	The camera is not in the spot WB acquisition standby state.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.8.6 EndSpotWbResultDisp

○ Command Specifications

Operation Code	0x9406
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode cancels the spot WB acquisition result screen display.

○ Command Details

This command cancels the spot WB acquisition result screen display.
The OK response is made even while the spot WB acquisition result screen is not displayed.
This command is an activation command. When the cancellation of the spot WB acquisition result screen display is started, the transition to the response phase is performed.
The result of the spot WB acquisition result screen display is passed by the display information in LiveViewObject acquired by the GetLiveViewImageEx command (section 6.2.6.4).

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Not_LiveView	The camera is not in the remote live view condition.

Do Not Copy

6.2.9 Vendor (Picture Control)

6.2.9.1 GetPicCtrlData

○ Command Specifications

Operation Code	0x90CC
Operation Parameter	Refer to Operation Parameter in this section.
Data	PictureControl DataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires PictureControl DataSet of the specified PicCtrlItem.

○ Command Details

The parameter3 is optional and the photo shooting menu or video recording menu can be specified.

For the format of the PictureControl DataSet, refer to section 9.9.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PicCtrlItem (equivalent to the ActivePicCtrlItem property (section 6.5.13.1)	
Parameter2	DefaultFlag	
	0	The current setting value
	1	The default value
Parameter3	[ShootingMode]	
	None	PictureControl data for the photo shooting menu
	0	
	1	PictureControl data for the video recording menu

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.9.2 GetPicCtrlDataList

○ Command Specifications

Operation Code	0x9443
Operation Parameter	Refer to Operation Parameter in this section.
Data	PictureControl List
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires PictureControl List of the specified PicCtrlItem.

○ Command Details

When PicCtrlItem is specified in Parameter1, the current value and default value of PictureControl DataSet (section 9.9) of the specified PicCtrlItem are sent to the host. When 0xFFFFFFFF is specified, all PicCtrlItems are sent.

If the specified PicCtrlItem is an unregistered custom picture control, NumberOfElements is set to 0. If 0xFFFFFFFF is specified, it will not be added to the list.

The Dataset of Picture Control List is shown below.

Field		DataSize	Description
NumberOfElements		4	Number of PictureControl in the list.
Element1		DTS	
	Element Size	2	Data size of an element
	PicCtrlItem	2	Type of PictureControl
	Default PictureControl DataSet	36 or 614	Default value of PictureControl
	Current PictureControl DataSet	36 or 614	Current value of PictureControl
…			
ElementN		DTS	

NOTE) The DataSize of the PictureControl DataSet differs depending on whether there is CustomCurveData data (614 bytes) or no data (36 bytes).

○ Operation Parameter

Operation Parameter	Description	
Parameter1	PicCtrlItem	PicCtrlItem (equivalent to the ActivePicCtrlItem property (section 6.5.13.1)
	0xFFFFFFFF	All PictureControl
Parameter2	ShootingMode	
	0	Photo shooting menu
	1	Video recording menu

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.9.3 SetPicCtrlData

○ Command Specifications

Operation Code	0x90CD
Operation Parameter	Refer to Operation Parameter in this section.
Data	PictureControl DataSet
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets PictureControl DataSet to the specified PicCtrlItem.

○ Command Details

The parameter3 is optional and the photo shooting menu or video recording menu can be specified.

For the format of the PictureControl DataSet, refer to section 9.9.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PicCtrlItem (equivalent to the ActivePicCtrlItem property (section 6.5.13.1))	
Parameter2	ModifiedFlag	
	0	The contents of PictureControl DataSet are applied as a new picture control.
	1	The contents of PictureControl DataSet are applied to the current setting value of the existing picture control.
Parameter3	[ShootingMode]	
	None	PictureControl data for the photo shooting menu
	0	
	1	PictureControl data for the video recording menu

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.
Device_Busy	During shooting by the camera
Access_Denied	When PicCtrlItem is a custom picture control and ModifiedFlag is set to 1, the registered base picture control and BasePictureControl in PictureControl DataSet do not match.
	When ShootingMode is set to 1, ToneMode is set to N-Log or HLG (If any of the following conditions are met). - MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit(MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log] or [HLG]. - MovieFileType property is set to [ProRes 422 HQ 10-bit(MOV] and MovieProResToneMode property (section 6.5.3.5) is set to [N-Log]. - MovieFileType property is set to [N-RAW 12-bit(NEV] and MovieNRaw12bitToneMode property (section 6.5.3.4) is set to [N-Log]. - MovieFileType property is set to [ProRes RAW HQ 12-bit(MOV] and MovieProResRawHq12bitToneMode property (section 6.5.3.6) is set to [N-Log].
	Invalid PictureControl DataSet (section 9.9) is specified.

Do Not Copy

6.2.9.4 DeleteCustomPicCtrl

○ Command Specifications

Operation Code	0x90CE
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode deletes the specified custom picture control item.

○ Command Details

The contents of CustomPicCtrlItem are the same as those of ActivePicCtrlItem property (section 6.5.13.1).

○ Operation Parameter

Operation Parameter	Details	
Parameter1	CustomPicCtrlItem	
Parameter2	[ShootingMode]	
	None	PictureControl data for the photo shooting menu
	0	
	1	PictureControl data for the video recording menu
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Device_Busy	During shooting by the camera

Do Not Copy

6.2.9.5 GetPicCtrlCapability

○ Command Specifications

Operation Code	0x90CF
Operation Parameter	Refer to Operation Parameter in this section.
Data	PictureControlCapabilityData
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires PictureControlCapability DataSet of the picture control that is the basis of the specified PicCtrlItem.

○ Command Details

The parameter2 is optional and the photo shooting menu or video recording menu can be specified.

For the format of the PictureControlCapability DataSet, refer to section 9.10.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PicCtrlItem (equivalent to the ActivePicCtrlItem property (section 6.5.13.1))	
Parameter2	[ShootingMode]	
	None	PictureControl data for the photo shooting menu
	0	
	1	PictureControl data for the video recording menu
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.9.6 GetPicCtrlCapabilityList

○ Command Specifications

Operation Code	0x9444
Operation Parameter	Refer to Operation Parameter in this section.
Data	PictureControlCapability List
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires PictureControlCapability List of the picture control that is the basis of the specified PicCtrlItem.

○ Command Details

When PicCtrlItem is specified in Parameter1, the PictureControlCapability DataSet (section 9.10) of the specified PicCtrlItem is sent to the host. When 0xFFFFFFFF is specified, all PicCtrlItems are sent.

If the specified PicCtrlItem is an unregistered custom picture control, NumberOfElements is set to 0. If 0xFFFFFFFF is specified, it will not be added to the list.

The data set of PictureContorl Capability List is shown below.

Field		DataSize	Description
NumberOfElements		4	Number of PictureControl in the list.
Element1		32	
	Element Size	2	Data size of an element
	PicCtrlItem	2	Type of
	PictureContorlCapability DataSet	28	PictureControl function information
…			
ElementN		32	

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PicCtrlItem	Specified PictureControl (equivalent to the ActivePicCtrlItem property (section 6.5.13.1))
	0xFFFFFFFF	All PictureControl
Parameter2	ShootingMode	
	0	Photo shooting menu
	1	Video recording menu

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	The specified value is out of the range.
Incomplete_Transfer	The data block transmission failed.

6.2.10 Vendor (IPTC)

6.2.10.1 GetIPTCInfo

○ Command Specifications

Operation Code	0x9401
Operation Parameter	Refer to Operation Parameter in this section.
Data	Presence or absence of the IPTC information
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the presence or absence of the IPTC information of the specified object.

○ Command Details

The camera sends the presence or absence of the IPTC information corresponding to the ObjectHandle specified in Parameter1.

Information to be sent (the transfer data size is 4byte)

0: IPTC absent, 1: IPTC present

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	Specified parameter is not supported.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object that corresponds to the specified ObjectHandle does not exist.
	An object in the SDRAM other than the ObjectHandle passed by ObjectAddedInSdram is specified.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.

Do Not Copy

6.2.10.2 GetIPTCPresetInfo

○ Command Specifications

Operation Code	0x9412
Operation Parameter	Refer to Operation Parameter in this section.
Data	IPTCPreset list
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the specified IPTC preset information.

○ Command Details

The camera sends IPTCPreset list with following format.

Each field data is stored in the little endian format.

Field	Size(Byte)	Data
NumElement	4	The number of array elements (N is the number of object)
ArrayEntry [0]	DTS	IPTCPresetDataSet [0]
ArrayEntry [1]	DTS	IPTCPresetDataSet [1]
ArrayEntry [2]	DTS	IPTCPresetDataSet [2]
...		
ArrayEntry [N - 1]	DTS	IPTCPresetDataSet [N - 1]

When PresetNo is set to 0, the number of entries in the list is 13.

IPTC preset information is stored in a list in the order of PresetNo.

When PresetNo is more than 1, the number of entry is 1 and the dataset specified by PresetNo is stored in IPTCPresetDataSet[0] field.

The dataset of IPTCPreset is described in section 9.8.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PresetNo	
	0	All preset
	1 to 10	Specified IPTC preset (NMS-IPTC)
	11 to 13	Specified IPTC preset (XMP-IPTC)

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	Specified parameter is not supported.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	The specified PresetNo is out of range.

Do Not Copy

6.2.10.3 SetIPTCPresetInfo

○ Command Specifications

Operation Code	0x9413
Operation Parameter	Refer to Operation Parameter in this section.
Data	IPTCPreset list
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets the specified IPTC preset information.

○ Command Details

The format of the preset list that is set to the camera is described in GetIPTCPresetInfo (section 6.2.10.2).

The IPTC format set in IPTCPresetDataSet differs depending on PresetNo.

When PresetNo is set to 0, 13 items of information should be set. Set IPTC preset information in ascending order of PresetNo in the storage order of the IPTCPreset list.

When PresetNo is more than one, the specified preset information should be set in IPTCPresetDataSet[0] field.

○ Operation Parameter

Operation Parameter	Details	
Parameter1	PresetNo	
	0	All preset
	1 to 10	Specified IPTC preset (NMS-IPTC)
	11 to 13	Specified IPTC preset (XMP-IPTC)
Parameter2	None	
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	Specified parameter is not supported.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Device_Busy	During shooting by the camera
Invalid_Parameter	The specified PresetNo is out of range.
Invalid_Data	The format of the specified PrisetNo and IPTCPresetDataSet are different.

Do Not Copy

6.2.11 Vendor (Auto Capture)

6.2.11.1 ChangeAutoCaptureMode

○ Command Specifications

Operation Code	0x945C
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode is to change to the specified auto capture mode.

○ Command Details

The mode will be changed to the auto capture mode specified in Parameter1.

The auto capture modes that can be changed from the current mode are shown below.

Current mode	Changeable mode					
	OFF	Check mode	Shooting mode	Setting mode	Advanced mode	Capture area setting mode
OFF	-	-	-	YES	-	-
Check mode	YES	-	YES	YES	-	-
Shooting mode	YES	YES	-	-	-	-
Setting mode	YES	YES	-	-	YES	YES
Advanced mode ・Motion ・Subject detection ・Distance	YES	YES	-	YES	-	-
Capture area setting mode	YES	-	-	YES	-	-

○ Operation Parameter

Operation Parameter	Details
Parameter1	The auto capture mode described in the AutoCaptureMode property (section 6.5.14.1).
Parameter2	None
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Parameter_Not_Supported	An unsupported parameter is specified.
Invalid_Parameter	An auto capture mode that cannot be changed from the current mode is specified in Parameter1. ＊ Returns OK if OFF is specified from OFF.
Access_Denied	During PC camera mode
	The AutoCaptureProhibitCondition property (section 6.5.14.15) is "Execution prohibited".
	"Motion" was specified for Parameter1 when "Motion" of the AutoCaptureCaptureCriteria property (section 6.5.14.2) was disabled.
	"Subject detection" was specified for Parameter1 when "Subject detection" of the AutoCaptureCaptureCriteria property (section 6.5.14.2) was disabled.
	"Distance" was specified for Parameter1 when "Distance" of the AutoCaptureCaptureCriteria property (section 6.5.14.2) was disabled.
	"Capture area setting mode" was specified for Parameter1 when the FocusMode property (section 6.5.1.7) was "MF" and the "Distance" of the AutoCaptureCaptureCriteria property was enabled.
	"Capture area setting mode" was specified for Parameter1 when the FocusMode property was other than "MF" and the AF area mode was other than "Auto area AF".
	"Check mode" is specified for Parameter1 when "Distance" of the AutoCaptureCaptureCriteria property is enabled and the AutoCaptureFocusNear property (section 6.5.14.8) and AutoCaptureFocusFar property (section 6.5.14.9) meet one of the following conditions. ・Near or Far is "0" ・Near≧Far

Do Not Copy

6.2.11.2 MeasureAutoCaptureFocus

○ Command Specifications

Operation Code	0x945D
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	-

○ Command Outline

The operation by this OperationCode sets the target distance range for distance setting using AF drive.

○ Command Details

The camera performs AF drive in the direction specified by Parameter 1 and sets the target distance range.

If "Start" is specified in Parameter 2, the setting of the target distance range will start. The setting operation continues until you specify "End" in Parameter 2 and execute it.

The Near value set with this command can be obtained from the AutoCaptureFocusNear property (section 6.5.14.8), and the Far value can be obtained from the AutoCaptureFocusFar property (section 6.5.14.9).

○ Operation Parameter

Operation Parameter	Details	
Parameter1	Direction of target distance range	
	0	Near
	1	Far
Parameter2	Operation for setting target distance range	
	0	Start
	1	End
Parameter3	None	

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_Parameter	The specified parameter is out of range.
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is not "Distance".
	The AF drive failed.

Do Not Copy

6.2.11.3 GetCaptureAreaDrawInfo

○ Command Specifications

Operation Code	0x945E
Operation Parameter	Refer to Operation Parameter in this section.
Data	CaptureAreaInfoDataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	-

○ Command Outline

The operation by this OperationCode acquires the drawing data of the target area of auto capture.

○ Command Details

The contents of CaptureAreaDrawInfoDataSet are shown in section 9.18.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Incomplete_Transfer	The data block transmission failed.

Do Not Copy

6.2.11.4 GetCaptureArea

○ Command Specifications

Operation Code	0x945F
Operation Parameter	Refer to Operation Parameter in this section.
Data	CaptureAreaDataSet
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	-

○ Command Outline

The operation by this OperationCode obtains the setting value of the target area for auto capture.

○ Command Details

The contents of CaptureAreaDataSet are shown in section 9.19.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is not "Capture area setting mode".

Do Not Copy

6.2.11.5 SetCaptureArea

○ Command Specifications

Operation Code	0x9460
Operation Parameter	Refer to Operation Parameter in this section.
Data	CaptureAreaDataSet
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	-

○ Command Outline

The operation by this OperationCode sets the setting value of the target area for auto capture.

○ Command Details

The contents of CaptureAreaDataSet are shown in section 9.19.

○ Operation Parameter

Operation Parameter	Details
Parameter1	None
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is not "Capture area setting mode".

Do Not Copy

6.2.11.6 SetAutoCaptureTimingOptions

○ Command Specifications

Operation Code	0x9471
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	-

○ Command Outline

The operation by this OperationCode sets each item of auto capture shooting time setting.

○ Command Details

The value of the shooting time set with this command can be obtained using the AutoCaptureRecordingTime property (section 6.5.14.11), and the value of the waiting time after shooting can be obtained using the AutoCaptureWaitAfterShootingTime property (section 6.5.14.12).

○ Operation Parameter

Operation Parameter	Details
Parameter1	Shooting time See AutoCaptureRecordingTime property.
Parameter2	Waiting time after shooting See AutoCaptureWaitAfterShootingTime property.
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_Parameter	The specified parameter is out of range.
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is not "Setting mode".

Do Not Copy

6.2.12 Vendor (Speedlight)

6.2.12.1 GetSBHandles

○ Command Specifications

Operation Code	0x9414
Operation Parameter	Refer to Operation Parameter in this section.
Data	SBHandleList
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the handle of the flash attached with the camera.

○ Command Details

When the parameter1 (SBGroupID, section 7.6) is specified, the handle of the flash in the specified group is transferred.

When the parameter1 (SBGroupID, section 7.6) is not specified or set to zero, the handles of all flash are transferred.

The data set of SBHandleList is shown below.

Field	DataSize	DataType	Description
NumberOfElements	4	UINT32	The number of SBHandle in the list.
Element1 SBHandle	4	SBHandle	The handle of the element1 flash.
Element2 SBHandle	4	SBHandle	The handle of the element2 flash.
…			
ElementN SBHandle	4	SBHandle	The handle of the element N flash.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[SBGroupID]
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBGroupID is specified.

Do Not Copy

6.2.12.2 GetSBAttrDesc

○ Command Specifications

Operation Code	0x9415
Operation Parameter	Refer to Operation Parameter in this section.
Data	SBHandleAttributeDescList
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the descriptor of the attribute for the flash.

○ Command Details

When the parameter1 (SBHandle, section 7.5) is specified, the descriptor for the specified flash is transferred. When the parameter1 (SBHandle, section 7.5) is not specified or set to zero, the descriptors for all flash are transferred.

When the parameter2 (SBAttrID) is specified, the descriptor for the specified SBAttribute (section 6.7.1) is transferred. When the parameter2 (SBAttrID) is not specified, the descriptors for all SBAttribute are transferred.

The data set of SBHandleAttributeDescList is shown below.

Field	DataSize	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of SBHandle in the list.
Element1 SBHandle	4	SBHandle	SBHandle for element1.
Element1 SBAttributeDescList	DTS	SBAttributeDescList (section 9.14)	Attribute descriptor of the element1 flash.
Element2 SBHandle	4	SBHandle	SBHandle for element2.
Element2 SBAttributeDescList	DTS	SBAttributeDescList	Attribute descriptor of the element2 flash.
…			
ElementN SBHandle	4	SBHandle	SBHandle for element N.
ElementN SBAttributeDescList	DTS	SBAttributeDescList	Attribute descriptor of the element N flash.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[SBHandle]
Parameter2	[SBAttrID]
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBHandle is specified.
	Invalid SBAttrID is specified.
	Valid SB information cannot be acquired.

Do Not Copy

6.2.12.3 GetSBAttrValue

○ Command Specifications

Operation Code	0x9416
Operation Parameter	Refer to Operation Parameter in this section.
Data	SBHandleAttributeList
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the current attribute value for the specified flash.

○ Command Details

When the parameter1 (SBHandle, section 7.5) is specified, the value for the specified flash is transferred. When the parameter1 (SBHandle, section 7.5) is not specified or set to zero, the values for all flash are transferred.

When the parameter2 (SBAttrID) is specified, the value for the specified SBAttribute (section 6.7.1) is transferred. When the parameter2 (SBAttrID) is not specified, the values for all SBAttribute are transferred.

The data set of SBHandleAttributeList is shown below.

Field	DataSize	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of SBHandle in the list.
Element1 SBHandle	4	SBHandle	SBHandle for element1.
Element1 SBAttributeList	DTS	SBAttributeList (section 9.16)	SBAttributeList for element1.
Element2 SBHandle	4	SBHandle	SBHandle for element2.
Element2 SBAttributeList	DTS	SBAttributeList	SBAttributeList for element2.
…			
ElementN SBHandle	4	SBHandle	SBHandle for element N.
ElementN SBAttributeList	DTS	SBAttributeList	SBAttributeList for element N.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[SBHandle]
Parameter2	[SBAttrID]
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBHandle is specified.
	Invalid SBAttrID is specified.
	Valid SB information cannot be acquired.

Do Not Copy

6.2.12.4 SetSBAttrValue

○ Command Specifications

Operation Code	0x9417
Operation Parameter	None
Data	SBHandleAttributeList
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode updates the current attribute value for the specified flash.

○ Command Details

The data set of SBHandleAttributeList is shown below.

Field	DataSize	DataType or Data Set	Description
NumberOfElements	4	UINT32	The number of SBHandle in the list.
Element1 SBHandle	4	SBHandle	SBHandle for element1.
Element1 SBAttributeList	DTS	SBAttributeList (section 9.16)	SBAttributeList for element1.
Element2 SBHandle	4	SBHandle	SBHandle for element2.
Element2 SBAttributeList	DTS	SBAttributeList	SBAttributeList for element2.
…			
ElementN SBHandle	4	SBHandle	SBHandle for element N.
ElementN SBAttributeList	DTS	SBAttributeList	SBAttributeList for element N.

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBHandle is specified.
	Invalid SBAttrID is specified.
Invalid_SBAttribute_Value	The specified attribute value is not supported.
Access_Denied	The specified flash is not in a settable state.
	An operation is denied depending on the status of the camera.
	The specified SBAttributeCode is not permitted for setting.
Device_Busy	The shooting operation or the AF operation is being performed when starting this command.

Do Not Copy

6.2.12.5 GetSBGroupAttrDesc

○ Command Specifications

Operation Code	0x9418
Operation Parameter	Refer to Operation Parameter in this section.
Data	SBGroupAttributeDescList
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the attribute descriptor for the flash group.

○ Command Details

When the parameter1 (SBGroupID, section 7.6) is specified, the data for the specified flash is transferred. When the parameter1 (SBGroupID, section 7.6) is not specified or set to zero, the data for all flash are transferred.

When the parameter2 (SBGroupAttrID) is specified, the data for the specified SBGroupAttribute (section 6.7.2) is transferred. When the parameter2 (SBGroupAttrID) is not specified, the data for all SBGroupAttribute are transferred.

The data set of SBGroupAttributeList is shown below.

Field	DataSize	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of SBGroupID in the list.
Element1 SBGroupID	4	SBGroupID	SBGroupID for element1.
Element1 SBAttributeDescList	DTS	SBAttributeDescList (section 9.14)	Attribute descriptor for the element1 flash.
Element2 SBGroupID	4	SBGroupID	SBGroupID for element2.
Element2 SBAttributeDescList	DTS	SBAttributeDescList	Attribute descriptor for the element2 flash.
…			
ElementN SBGroupID	4	SBGroupID	SBGroupID for element N.
ElementN SBAttributeDescList	DTS	SBAttributeDescList	Attribute descriptor for the element N flash.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[SBGroupID]
Parameter2	[SBGroupAttrID]
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBGroupID is specified.
	Invalid SBGroupAttrID is specified.

Do Not Copy

6.2.12.6 GetSBGroupAttrValue

○ Command Specifications

Operation Code	0x9419
Operation Parameter	Refer to Operation Parameter in this section.
Data	SBGroupAttributeList
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode obtains the current attribute value for the flash group.

○ Command Details

When the parameter1 (SBGroupID, section 7.6) is specified, the data for the specified flash group is transferred. When the parameter1 (SBGroupID, section 7.6) is not specified or set to zero, the data for all flash group are transferred.

When the parameter2 (SBGroupAttrID) is specified, the data for the specified SBGroupAttribute (section 6.7.2) is transferred. When the parameter2 (SBGroupAttrID) is not specified, the data for all SBGroupAttribute are transferred.

The data set of SBGroupAttributeList is shown below.

Field	DataSize	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of SBGroupID in the list.
Element1 SBGroupID	4	SBGroupID	SBGroupID for element1.
Element1 SBAttributeList	DTS	SBAttributeList (section 9.16)	SBAttributeList for element1.
Element2 SBGroupID	4	SBGroupID	SBGroupID for element2.
Element2 SBAttributeList	DTS	SBAttributeList	SBAttributeList for element2.
…			
ElementN SBGroupID	4	SBGroupID	SBGroupID for element N.
ElementN SBAttributeList	DTS	SBAttributeList	SBAttributeList for element N.

○ Operation Parameter

Operation Parameter	Details
Parameter1	[SBGroupID]
Parameter2	[SBGroupAttrID]
Parameter3	None

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBGroupID is specified.
	Invalid SBGroupAttrID is specified.

Do Not Copy

6.2.12.7 SetSBGroupAttrValue

○ Command Specifications

Operation Code	0x941A
Operation Parameter	None
Data	SBGroupAttributeList
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode updates the current attribute value for the flash group.

○ Command Details

The data set of SBGroupAttributeList is shown below.

Field	DataSize	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of SBGroupID in the list.
Element1 SBGroupID	4	SBGroupID	SBGroupID for element1.
Element1 SBAttributeList	DTS	SBAttributeList (section 9.16)	SBAttributeList for element1.
Element2 SBGroupID	4	SBGroupID	SBGroupID for element2.
Element2 SBAttributeList	DTS	SBAttributeList	SBAttributeList for element2.
…			
ElementN SBGroupID	4	SBGroupID	SBGroupID for element N.
ElementN SBAttributeList	DTS	SBAttributeList	SBAttributeList for element N.

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Parameter	Invalid SBHandle is specified.
	Invalid SBAttrID is specified.
Invalid_SBAttribute_Value	The specified attribute value is not supported.
Access_Denied	An operation is denied depending on the status of the camera.
	The specified SBAttributeCode is not permitted for setting.
Device_Busy	The shooting operation or the AF operation is being performed when starting this command.

Do Not Copy

6.2.12.8 TestFlash

○ Command Specifications

Operation Code	0x941B
Operation Parameter	Refer to Operation Parameter in this section.
Data	None
Data direction	-
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode makes the flash fire for testing.

○ Command Details

The parameter1 (Flash mode) should be set to the flash testing.

When the parameter1 is set to the flash testing:
The flash specified by the parameter2 (SBHandle, section 7.5) fires. When the parameter2 is set to zero, all flashes fire.

○ Operation Parameter

Operation Parameter	Details
Parameter1	Flash mode (fixed to zero)
Parameter2	SBHandle
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Parameter	Invalid flash mode is specified.
	Invalid SBHandle is specified.
Access_Denied	The specified flash cannot be operated.

Do Not Copy

6.2.13 Vendor (MTP)

6.2.13.1 GetObjectPropsSupported

○ Command Specifications

Operation Code	0x9801
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectPropCodeArray
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode acquires an array of codes of the object property supported by the camera.

○ Command Details

The camera sends the Array of the property corresponding to ObjectFormatCode specified by Parameter1.

The format of ObjectPropCodeArray sent by the camera is shown below.
Each field data is stored in the little endian format.

For the supported ObjectPropCode, refer to section 6.6.

Field	Size (Byte)	Data
NumElement	4	The element of the array is N (N means the number of objects).
ArrayEntry [0]	2	ObjectPropCode [0]
ArrayEntry [1]	2	ObjectPropCode [1]
ArrayEntry [2]	2	ObjectPropCode [2]

ArrayEntry [N - 1]	2	ObjectPropCode [N - 1]

The camera supports the following ObjectFormatCodes only.

PropertyValue	ObjectFormat
0x3000	Undefined
0x3001	Association
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x380D	TIFF (RGB)
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectFormatCode
Parameter2	None
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
ObjectProp_Not_Supported	The specified ObjectFormatCode is not supported.

Do Not Copy

6.2.13.2 GetObjectPropDesc

○ Command Specifications

Operation Code	0x9802
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectPropDesc data set
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the ObjectPropDesc data set corresponding to the specified ObjectPropCode and ObjectFormatCode.

○ Command Details

For the supported ObjectPropCodes, refer to section 6.6.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectPropCode
Parameter2	ObjectFormatCode
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
ObjectProp_Not_Supported	The specified ObjectPropCode is not supported.
	The specified ObjectFormatCode is not supported.

Do Not Copy

6.2.13.3 GetObjectPropValue

○ Command Specifications

Operation Code	0x9803
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectPropValue
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the current value corresponding to the specified ObjectPropCode.

○ Command Details

The camera sends the object property information specified by Parameter2 to the object corresponding to the ObjectHandle specified by Parameter1.

For the supported ObjectPropCode and the details of ObjectPropValue, refer to section 6.6.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	ObjectPropCode
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Invalid_Object_Handle	An object corresponding to the specified ObjectHandle does not exist, or it indicates an object in the SDRAM.
Incomplete_Transfer	The data block transmission failed.
Access_Denied	The video is playing.
ObjectProp_Not_Supported	The specified ObjectPropCode is not supported.

Do Not Copy

6.2.13.4 SetObjectPropValue

○ Command Specifications

Operation Code	0x9804
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectPropValue
Data direction	From host to camera
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode sets the value to the specified ObjectPropCode.

○ Command Details

Sets the object property information specified by Parameter2 to the object corresponding to the ObjectHandle specified by Parameter1.

For the supported ObjectPropCode and the details of ObjectPropValue, refer to section 6.6.

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	ObjectPropCode
Parameter3	None

○ Response Code

Response Code	Description
OK	Normal termination
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Parameter_Not_Supported	An unsupported parameter is specified.
Access_Denied	Operation rejected due to camera status.
	Does not allow setting of specified ObjectPropCode.
Device_Busy	Camera is busy and cannot start processing.
Invalid_Object_Handle	An object corresponding to the specified ObjectHandle does not exist, or it indicates an object in the SDRAM.
Invalid_ObjectPropCode	The specified ObjectPropCode is not supported.
Invalid_ObjectProp_Format	Specified ObjectPropValue has incorrect format or size.
Invalid_Objectprop_Value	The specified ObjectPropCode is not supported.

Do Not Copy

6.2.13.5 GetObjectPropList

○ Command Specifications

Operation Code	0x9805
Operation Parameter	Refer to Operation Parameter in this section.
Data	ObjectPropList data set
Data direction	From camera to host
Response Code	Refer to Response Code in this section.
Response Parameter	None

○ Command Outline

The operation by this OperationCode returns the ObjectPropList data set.

○ Command Details

The camera returns the ObjectPropList data set for the object corresponding to the ObjectHandle specified by Parameter1 and the ObjectPropCode (object property) specified by Parameter3. The target can be identified by specifying the optional Parameter2, Parameter4, and Parameter5.

For the supported ObjectPropCode and the details of ObjectPropValue, refer to section 6.6.

Operation Parameter	Value	Details
Parameter1	0x00000000	The objects directly under the root should be the targets.
	ObjectHandle	The object matching with the specified object handle should be the target.
	0xFFFFFFFF	All the objects should be the targets.
Parameter2 (Optional)	0x00000000	Parameter2 is not specified. The objects with all the object formats should be the targets.
	ObjectFormatCode	The object with the specified format should be the target.
Parameter3	0x00000000	All the objects with the group code specified by Parameter4 should be the targets.
	ObjectPropCode	The object with the specified property should be the target.
	0xFFFFFFFF	All the objects without the group code of 0xFFFFFFFF should be the targets.
Parameter4 (Optional)	ObjectPropGroupCode	The object with the specified group code should be the target. *This is used only when Parameter3 is set to 0x00000000.
Parameter5 (Optional)	No value *1	Only the object specified by Parameter1 should be the target. If Parameter1 is not specified (0x00000000), the camera returns an empty ObjectPropList data set.
	0x00000000	
	Depth	All the objects from the objects specified by Parameter1 to the depth specified by Parameter5 should be the targets.
	0xFFFFFFFF	All the objects included in the folder hierarchy of the object specified by Parameter1 should be the targets. If an object of the file is specified in Parameter1, however, only the object specified by Parameter1 should be the target.

*1 This is the case that ObjectHandle is specified in Parameter1. When Parameter1 is set to 0x00000000, all the objects should be the targets.

Do Not Copy

The format of ObjectPropList sent by the camera is shown below.

Field name	Field order	Size（Byte）	Datatype	Description
NumberOfElements	1	4	UINT32	Number of properties (N) The number of property fields is four times the number of properties.
Element1ObjectHandle	2	4	ObjectHandle	ObjectHandle of the object to which Property 1 is applied
Element1PropertyCode	3	2	Datacode	Datacode that specifies the ObjectPropDesc describing Property 1
Element1Datatype	4	2	Datacode	Specifies DatatypeCode of Property 1.
Element1Value	5	DTS	DTS	Value of Property 1
Element2ObjectHandle	6	4	ObjectHandle	ObjectHandle of the object to which Property 2 is applied
Element2PropertyCode	7	2	Datacode	Datacode that specifies the ObjectPropDesc describing Property 2
Element2Datatype	8	2	Datacode	Specifies DatatypeCode of Property 2.
Element2Value	9	DTS	DTS	Value of Property 2
...				
ElementNObjectHandle	N x 4 - 2	4	ObjectHandle	ObjectHandle of the object to which Property N is applied
ElementNPropertyCode	N x 4 - 1	2	Datacode	Datacode that specifies the ObjectPropDesc describing Property N
ElementNDatatype	N x 4	2	Datacode	Specifies DatatypeCode of Property N.
ElementNValue	N x 4 + 1	DTS	DTS	Value of Property N

○ Operation Parameter

Operation Parameter	Details
Parameter1	ObjectHandle
Parameter2	[ObjectFormatCode]
Parameter3	ObjectPropCode
Parameter4	[ObjectPropGroupCode]
Parameter5	[Depth]

Do Not Copy

○ Response Code

Response Code	Description
OK	Normal termination
Parameter_Not_Supported	An unsupported parameter is specified.
Session_Not_Open	The session is not started.
Invalid_TransactionID	The TransactionID retained by the camera differs from the TransactionID specified by the host.
Incomplete_Transfer	The data block transmission failed.
Invalid_Object_Handle	An object corresponding to the specified ObjectHandle does not exist, or it indicates an object in the SDRAM.
Store_Not_Available	The card is being initialized.
	The card does not exist.
	The battery is exhausted.
Access_Denied	The video is playing.
Specification_By_Format_Unsupported	The specified ObjectFormatCode is not supported.
Invalid_ObjectPropCode	The specified ObjectPropCode is not supported.

Do Not Copy

6.3 Response Code

The camera returns the response for the processing in the response phase to the command sent from the host to the camera in the command phase. The ResponseCode shows the contents of the response. The relationship between the ResponseCode and the OperationCode sent in the command phase is as shown in section 6.2.

The ResponseCodes supported by the camera are shown below.

Response Code	Description	Reference item
0x2001	OK	6.3.1.1
0x2002	General_Error	6.3.1.2
0x2003	Session_Not_Open	6.3.1.3
0x2004	Invalid_TransactionID	6.3.1.4
0x2005	Operation_Not_Supported	6.3.1.5
0x2006	Parameter_Not_Supported	6.3.1.6
0x2007	Incomplete_Transfer	6.3.1.7
0x2008	Invalid_StorageID	6.3.1.8
0x2009	Invalid_Object_Handle	6.3.1.9
0x200A	DeviceProp_Not_Supported	6.3.1.10
0x200B	Invalid_ObjectFormatCode	6.3.1.11
0x200C	Store_Full	6.3.1.12
0x200D	Object_Write_Protect	6.3.1.13
0x200E	Store_Read_Only	6.3.1.14
0x200F	Access_Denied	6.3.1.15
0x2010	No_Thumbnail_Present	6.3.1.16
0x2012	Partial_Deletion	6.3.1.17
0x2013	Store_Not_Available	6.3.1.18
0x2014	Specification_By_Format_Unsupported	6.3.1.19
0x2015	No_Valid_ObjectInfo	6.3.1.20
0x2018	Capture_Already_Terminated	6.3.1.21
0x2019	Device_Busy	6.3.1.22
0x201A	Invalid_Parent_Object	6.3.1.23
0x201B	Invalid_DeviceProp_Format	6.3.1.24
0x201C	Invalid_DeviceProp_Value	6.3.1.25
0x201D	Invalid_Parameter	6.3.1.26
0x201E	Session_Already_Open	6.3.1.27
0x201F	Transaction_Cancelled	6.3.1.28
0x2020	Specification_of_Destination_Unsupported	6.3.1.29
0xA001	Hardware_Error	6.3.2.1
0xA002	Out_of_Focus	6.3.2.2
0xA003	Change_CameraMode_Failed	6.3.2.3
0xA004	Invalid_Status	6.3.2.4
0xA006	Wb_Preset_Error	6.3.2.5
0xA007	Dust_Reference_Error	6.3.2.6
0xA008	Shutter_Speed_Bulb	6.3.2.7
0xA00A	CameraMode_Not_Adjust_Fnumber	6.3.2.8
0xA00B	Not_LiveView	6.3.2.9
0xA00C	MfDrive_Step_End	6.3.2.10

Do Not Copy

0xA00E	MfDrive_Step_Insufficiency	6.3.2.11
0xA00F	No_FullHD_Present	6.3.2.12
0xA021	Store_Error	6.3.2.13
0xA022	Store_Unformatted	6.3.2.14
0xA200	Bulb_Release_Busy	6.3.2.15
0xA201	Silent_Release_Busy	6.3.2.16
0xA202	MovieFrame_Release_Busy	6.3.2.17
0xA204	Shutter_Speed_Time	6.3.2.18
0xA209	Invalid_SBAttribute_Value	6.3.2.19
0xA210	Invalid_Data	6.3.2.20
0xA801	Invalid_ObjectPropCode	6.3.2.21
0xA802	Invalid_ObjectProp_Format	6.3.2.22
0xA803	Invalid_ObjectProp_Value	6.3.2.23
0xA80A	ObjectProp_Not_Supported	6.3.2.24

Do Not Copy

6.3.1 Standard

6.3.1.1 OK

- **Response Specifications**

Response Code	0x2001

- **Response Outline**

Indicates that the processing has been terminated normally.

6.3.1.2 General_Error

- **Response Specifications**

Response Code	0x2002

- **Response Outline**

Indicates that the processing cannot be terminated normally for some reason.

6.3.1.3 Session_Not_Open

- **Response Specifications**

Response Code	0x2003

- **Response Outline**

Indicates that the session is not started.

6.3.1.4 Invalid_TransactionID

- **Response Specifications**

Response Code	0x2004

- **Response Outline**

Indicates that the TransactionID retained by the camera differs from the TransactionID specified by the host.

6.3.1.5 Operation_Not_Supported

- **Response Specifications**

Response Code	0x2005

- **Response Outline**

Indicates that an OperationCode that is not passed by the DeviceInfo data set is specified.

Do Not Copy

6.3.1.6 Parameter_Not_Supported

- **Response Specifications**

Response Code	0x2006

- **Response Outline**

Indicates that the specification of a parameter is inappropriate for the requested operation.

6.3.1.7 Incomplete_Transfer

- **Response Specifications**

Response Code	0x2007

- **Response Outline**

Indicates that the transmission/reception of the data block fails.
When the file access fails in the camera body, the camera may return this response.

6.3.1.8 Invalid_StorageID

- **Response Specifications**

Response Code	0x2008

- **Response Outline**

Indicates that a StorageID that differs from the StorageID sent by the camera is specified.

6.3.1.9 Invalid_Object_Handle

- **Response Specifications**

Response Code	0x2009

- **Response Outline**

Indicates that an invalid object handle is specified or the target object does not exist.

6.3.1.10 DeviceProp_Not_Supported

- **Response Specifications**

Response Code	0x200A

- **Response Outline**

Indicates that a DevicePropCode that is not passed by the DeviceInfo data set is specified.

Do Not Copy

6.3.1.11 Invalid_ObjectFormatCode

- **Response Specifications**

Response Code	0x200B

- **Response Outline**

Indicates that the specified ObjectFormatCode is not supported.
It is also used to indicate that the contents specified in the ObjectCompressedSize field of ObjectInfo are not supported with the SendObjectInfo command.

6.3.1.12 Store_Full

- **Response Specifications**

Response Code	0x200C

- **Response Outline**

Indicates that the object cannot be received with the size of the buffer prepared by the camera with the SendObjectInfo command.

6.3.1.13 Object_Write_Protect

- **Response Specifications**

Response Code	0x200D

- **Response Outline**

Indicates that the target object is protected.

6.3.1.14 Store_Read_Only

- **Response Specifications**

Response Code	0x200E

- **Response Outline**

Indicates that a StorageID of the card is specified with the SendObjectInfo command.
The camera does not support the writing to the card from the host.

6.3.1.15 Access_Denied

- **Response Specifications**

Response Code	0x200F

- **Response Outline**

Indicates that the operation is denied because of the camera status.
This means that the operation will be denied unless the camera status is changed.
It is not an event that means the busy status.

Do Not Copy

6.3.1.16 No_Thumbnail_Present

- **Response Specifications**

Response Code	0x2010

- **Response Outline**

Indicates that the target object does not have a thumbnail.

6.3.1.17 Partial_Deletion

- **Response Specifications**

Response Code	0x2012

- **Response Outline**

Indicates that although the deletion of two or more objects is commanded, only a part of those are deleted.
It may occur when a part of the target objects are protected.

6.3.1.18 Store_Not_Available

- **Response Specifications**

Response Code	0x2013

- **Response Outline**

Indicates that the card cannot be accessed because the card is being initialized, the card does not exist, or the battery is exhausted.

6.3.1.19 Specification_By_Format_Unsupported

- **Response Specifications**

Response Code	0x2014

- **Response Outline**

Indicates that the specified ObjectFormatCode is not supported.

6.3.1.20 No_Valid_ObjectInfo

- **Response Specifications**

Response Code	0x2015

- **Response Outline**

Indicates that the SendObject command is received before the SendObjectInfo command is accepted.

Do Not Copy

6.3.1.21 Capture_Already_Terminated

- **Response Specifications**

Response Code	0x2018

- **Response Outline**

Indicates that shooting operation was already finished when trying to finish shooting.

6.3.1.22 Device_Busy

- **Response Specifications**

Response Code	0x2019

- **Response Outline**

Indicates that the camera is in the busy status.

6.3.1.23 Invalid_Parent_Object

- **Response Specifications**

Response Code	0x201A

- **Response Outline**

Indicates that an ObjectHandle other than that indicating a directory is specified for a parameter with which an ObjectHandle of the directory should be specified.
It indicates that the specified directory does not exist.

6.3.1.24 Invalid_DeviceProp_Format

- **Response Specifications**

Response Code	0x201B

- **Response Outline**

Indicates that the size or the format of the DevicePropDesc data set is inappropriate.

6.3.1.25 Invalid_DeviceProp_Value

- **Response Specifications**

Response Code	0x201C

- **Response Outline**

Indicates that the specified DevicePropValue is not supported.

Do Not Copy

6.3.1.26 Invalid_Parameter

- **Response Specifications**

Response Code	0x201D

- **Response Outline**

Indicates that the specified parameter is out of the specifications.

6.3.1.27 Session_Already_Open

- **Response Specifications**

Response Code	0x201E

- **Response Outline**

Indicates that the OpenSession operation is specified with a session already started.
The camera supports only one session.

6.3.1.28 Transaction _Cancelled

- **Response Specifications**

Response Code	0x201F

- **Response Outline**

Indicates that the transfer was cancelled.

6.3.1.29 Specification_of_Destination_Unsupported

- **Response Specifications**

Response Code	0x2020

- **Response Outline**

Indicates that the recording destination specified by the SendObjectInfo command is not supported.

Do Not Copy

6.3.2 Vendor

6.3.2.1 Hardware_Error

- **Response Specifications**

Response Code	0xA001

- **Response Outline**

Indicates that any error that prevents the camera from operating has occurred in the camera body.

6.3.2.2 Out_of_Focus

- **Response Specifications**

Response Code	0xA002

- **Response Outline**

Indicates that the AF operation is terminated with the non-focused status.

6.3.2.3 Change_CameraMode_Failed

- **Response Specifications**

Response Code	0xA003

- **Response Outline**

Indicates that the switching between the PC camera mode and the remote mode failed.

6.3.2.4 Invalid_Status

- **Response Specifications**

Response Code	0xA004

- **Response Outline**

Indicates that the operation is invalid depending on the status of the camera.

6.3.2.5 Wb_Preset_Error

- **Response Specifications**

Response Code	0xA006

- **Response Outline**

Indicates that the preset measurement release failed.

Do Not Copy

6.3.2.6 Dust_Reference_Error

- **Response Specifications**

Response Code	0xA007

- **Response Outline**

Indicates that the dust reference image release failed.

6.3.2.7 Shutter_Speed_Bulb

- **Response Specifications**

Response Code	0xA008

- **Response Outline**

Indicates that the shutter speed is Bulb.

6.3.2.8 CameraMode_Not_Adjust_Fnumber

- **Response Specifications**

Response Code	0xA00A

- **Response Outline**

Indicates that the aperture value is set to “F-".

6.3.2.9 Not_LiveView

- **Response Specifications**

Response Code	0xA00B

- **Response Outline**

Indicates that the camera is not in the live view condition.

6.3.2.10 MfDrive_Step_End

- **Response Specifications**

Response Code	0xA00C

- **Response Outline**

Indicates that the MF driving reaches the termination.

6.3.2.11 MfDrive_Step_ Insufficiency

- **Response Specifications**

Response Code	0xA00E

- **Response Outline**

Indicates that the driving amount is insufficient.

Do Not Copy

6.3.2.12 No_FullHD_Present

- **Response Specifications**

Response Code	0xA00F

- **Response Outline**

Indicates that the target object does not include FullHD image data.

6.3.2.13 Store_Error

- **Response Specifications**

Response Code	0xA021

- **Response Outline**

Indicates that a damaged card is included in the inserted cards.

6.3.2.14 Store_Unformatted

- **Response Specifications**

Response Code	0xA022

- **Response Outline**

Indicates that an unformatted card is included in the inserted cards.

6.3.2.15 Bulb_Release_Busy

- **Response Specifications**

Response Code	0xA200

- **Response Outline**

Indicates that bulb shooting is being performed.

6.3.2.16 Silent_Release_Busy

- **Response Specifications**

Response Code	0xA201

- **Response Outline**

Indicates that silent shooting is being performed.

6.3.2.17 MovieFrame_Release_Busy

- **Response Specifications**

Response Code	0xA202

- **Response Outline**

Indicates that the still image shooting is being performed during video recording.

Do Not Copy

6.3.2.18 Shutter_Speed_Time

- **Response Specifications**

Response Code	0xA204

- **Response Outline**

Indicates that the shutter speed is Time.

6.3.2.19 Invalid_SBAttribute_Value

- **Response Specifications**

Response Code	0xA209

- **Response Outline**

Indicates that the specified attribute value is not supported.

6.3.2.20 Invalid_Data

- **Response Specifications**

Response Code	0xA210

- **Response Outline**

Indicates that the data in the data phase is inappropriate.

6.3.2.21 Invalid_ObjectPropCode

- **Response Specifications**

Response Code	0xA801

- **Response Outline**

Indicates that the specified ObjectPropCode is not supported.

6.3.2.22 Invalid_ObjectProp_Format

- **Response Specifications**

Response Code	0xA802

- **Response Outline**

Indicates that the size or the type of the specified ObjectPropValue is not supported.

6.3.2.23 Invalid_ObjectProp_Value

- **Response Specifications**

Response Code	0xA803

- **Response Outline**

Indicates that the specified ObjectPropValue is not supported.

Do Not Copy

6.3.2.24 ObjectProp_Not_Supported

○ Response Specifications

Response Code	0xA80A

○ Response Outline

Indicates that the specified ObjectPropCode is valid but the camera doesn't support it.

6.4 Event Code

The EventCodes are used when an event is passed asynchronously from the camera to the host.

Following chart describes the EventCodes supported by the camera and whether event sending by command from host or by interrupt transfer is permitted.

Event Code	Description	Reference	Interrupt transfer	GetEvent command	GetEventEx command
0x4001	CancelTransaction	6.4.1.1	✓	✓	✓
0x4002	ObjectAdded	6.4.1.2	✓	✓	✓
0x4003	ObjectRemoved	6.4.1.3	✓	✓	✓
0x4004	StoreAdded	6.4.1.4	✓	✓	✓
0x4005	StoreRemoved	6.4.1.5	✓	✓	✓
0x4006	DevicePropChanged	6.4.1.6	✓	✓	✓
0x4007	ObjectInfoChanged	6.4.1.7	✓	✓	✓
0x4008	DeviceInfoChanged	6.4.1.8	✓	✓	✓
0x4009	RequestObjectTransfer	6.4.1.9	✓	✓	✓
0x400A	StoreFull	6.4.1.10	✓	✓	✓
0x400C	StorageInfoChanged	6.4.1.11	✓	✓	✓
0x400D	CaptureComplete	6.4.1.12	✓	✓	✓
0xC101	ObjectAddedInSdram	6.4.2.1	-	✓	✓
0xC102	CaptureCompleteRecInSdram	6.4.2.2	-	✓	✓
0xC103	CaptureSkip	6.4.2.3	-	✓	✓
0xC105	MovieRecordInterrupted	6.4.2.6	-	-	✓
0xC108	MovieRecordComplete	6.4.2.5	-	✓	✓
0xC10A	MovieRecordStarted	6.4.2.4	-	✓	✓
0xC10B	PictureControlAdjustChanged	6.4.2.7	-	-	✓
0xC10C	LiveViewStateChanged	6.4.2.8	-	✓	✓
0xC10D	PixelMappingComplete	6.4.2.9	-	✓	✓
0xC10E	ManualSettingLensDataChanged	6.4.2.10	-	✓	✓
0xC10F	OpenCaptureComplete	6.4.2.11	-	-	✓
0xC120	SBAdded	6.4.2.12	-	✓	✓
0xC121	SBRemoved	6.4.2.13	-	✓	✓
0xC122	SBAttrChanged	6.4.2.14	-	-	✓
0xC123	SBGroupAttrChanged	6.4.2.15	-	-	✓
0xC125	HlgQualityAdjustChanged	6.4.2.16	-	✓	✓
0xC126	PortraitImpressionBalanceAdjustChanged	6.4.2.17	-	-	✓

See Application Mode (section 2.4) for application mode event transmission.

Do Not Copy

6.4.1 Standard

6.4.1.1 CancelTransaction

- **Event Specifications**

Event Code	0x4001
Event Parameter1	None

- **Event Outline**

It is used to inform the host that the processing is canceled. However, it is not used in the camera.

6.4.1.2 ObjectAdded

- **Event Specifications**

Event Code	0x4002
Event Parameter1	ObjectHandle

- **Event Outline**

It is used to inform the host that a new object is added to the card.

6.4.1.3 ObjectRemoved

- **Event Specifications**

Event Code	0x4003
Event Parameter1	ObjectHandle

- **Event Outline**

It is used to inform the host that a specific object in the card is deleted.

6.4.1.4 StoreAdded

- **Event Specifications**

Event Code	0x4004
Event Parameter1	StorageID

- **Event Outline**

It is used to inform the host that the card is inserted in the slot in which the card has not been inserted yet.

The StorageID corresponding to the slot in which the card is inserted is passed as an EventParameter.

Do Not Copy

6.4.1.5 StoreRemoved

○ **Event Specifications**

Event Code	0x4005
Event Parameter1	StorageID

○ **Event Outline**

It is used to inform the host that the card is ejected from the slot in which the card has been inserted.

The StorageID corresponding to the slot in which the card has been inserted is passed as an EventParameter.

It is also used when the card is formatted to inform the host that the card information is invalid. When the formatting is completed, StoreAdded is used to inform the host that the card information is valid.

6.4.1.6 DevicePropChanged

○ **Event Specifications**

Event Code	0x4006
Event Parameter1	PropertyCode

○ **Event Outline**

It is used to inform the host that the setting value of the camera is changed.

The setting value to be passed is that of DevicePropCode defined in section 6.5.

If the setting value of the camera is changed by the SetDevicePropValue command from the host, this event is not passed.

When the InterruptIN transfer is used, this event is passed only for the standard property.

When the GetEventEx command is used, this event is passed for all the properties.

6.4.1.7 ObjectInfoChanged

○ **Event Specifications**

Event Code	0x4007
Event Parameter1	ObjectHandle

○ **Event Outline**

It is used to inform the host that the ObjectInfo data set corresponding to a specific object in the card has been changed.

6.4.1.8 DeviceInfoChanged

○ **Event Specifications**

Event Code	0x4008
Event Parameter1	None

○ **Event Outline**

It is used to inform the host that the device function is changed.

Do Not Copy

6.4.1.9 RequestObjectTransfer

○ **Event Specifications**

Event Code	0x4009
Event Parameter1	ObjectHandle

○ **Event Outline**

It is used to request the GetObject operation for the ObjectHandle specified by the parameter.

6.4.1.10 StoreFull

○ **Event Specifications**

Event Code	0x400A
Event Parameter1	StorageID

○ **Event Outline**

It is used to inform the host that the card corresponding to the StorageID becomes full.

This event is passed when the card becomes full by operating the shutter-release button of the camera or by recording the video.

6.4.1.11 StorageInfoChanged

○ **Event Specifications**

Event Code	0x400C
Event Parameter1	StorageID

○ **Event Outline**

It is used to inform the host that the free area in the card corresponding to the StorageID is changed.

This event is notified when the setting value of the image size and image quality mode applied to shooting is changed in [Photo shooting menu]-[Image size setting].

6.4.1.12 CaptureComplete

○ **Event Specifications**

Event Code	0x400D
Event Parameter1	TransactionID

○ **Event Outline**

It is used to inform the host that the release operation started by the InitiateCapture command or the InitiateCaptureRecInMedia command is completed.

Do Not Copy

6.4.2 Vendor

6.4.2.1 ObjectAddedInSdram

○ **Event Specifications**

Event Code	0xC101
Event Parameter1	ObjectHandle

○ **Event Outline**

It is used to inform the host that a new object is added to the SDRAM (transmission of the image data to the host becomes enabled).

The ObjectHandle of the new object is passed as an EventParameter.

If the USB cutting occurs with the image data of the recording destination SDRAM saved in the SDRAM and then it is reconnected, the event is passed again.

6.4.2.2 CaptureCompleteRecInSdram

○ **Event Specifications**

Event Code	0xC102
Event Parameter1	None

○ **Event Outline**

It is used to inform the host that all the image data acquired by the release operation started by the InitiateCaptureRecInSdram, the AfAndCaptureRecInSdram, or the InitiateCaptureRecInMedia command is sent to the host completely.

6.4.2.3 CaptureSkip

○ **Event Specifications**

Event Code	0xC103
Event Parameter1	SkipCount

○ **Event Outline**

It is used to inform that shooting was skipped by interval timer shooting.

○ **Event Details**

If a skip occurs during shooting, this event will be notified.

In the case of "number of shots x number of frames per shot", one notification is given for each skip during shooting.

Even if multiple shots are skipped during one shooting, the notification is sent only once for each shooting.

Do Not Copy

6.4.2.4 MovieRecordStarted

○ Event Specifications

Event Code	0xC10A
Event Parameter1	RecordKind

○ Event Outline

It is used to inform the host that the video recording has started on the camera.
This event is not issued when the video recording has started by using StartMovieRecord command.

The recording method is sent as an EventParameter.

RecordKind	Recording method
0x00000000	Card
0x00000001	External recorder
0x00000002	Card and external recorder

6.4.2.5 MovieRecordComplete

○ Event Specifications

Event Code	0xC108
Event Parameter1	RecordKind
Event Parameter2	StopCode

○ Event Outline

It is used to inform the host that the video recording is successfully completed.
The recording method and the couse of stop are sent as an EventParameter. For recording method, see the explanation of MovieRecordStarted (section 6.4.2.4).

StopCode	Cause of stop
0	Stopping due to user operation
3	Stopping due to reaching recording time

6.4.2.6 MovieRecordInterrupted

○ Event Specifications

Event Code	0xC105
Event Parameter1	ErrorCode
Event Parameter2	RecordKind

○ Event Outline

It is used to inform the host that the video recording is interrupted.

The recording method and the interruption cause are sent as EventParameter. For recording method, see the explanation of MovieRecordStarted (section 6.4.2.4).

ErrorCode	Interruption cause
1	A certain error
2	Low-speed card error

Do Not Copy

6.4.2.7 PictureControlAdjustChanged

○ Event Specifications

Event Code	0xC10B
Event Parameter1	PicCtrlItem (ActivePicCtrlItem property (section 6.5.13.1)
Event Parameter2	ShootingMode

○ Event Outline

It is used to inform the host that any setting value of the picture control was changed, or any setting value of the custom picture control was changed, registerd, renamed or deleted.

The changed menu (photo shooting menu or video recording menu) is set in Parameter 2.

ShootingMode	Menu
0x00000000	Photo shooting menu
0x00000001	Video recording menu

6.4.2.8 LiveViewStateChanged

○ Event Specifications

Event Code	0xC10C
Event Parameter1	CameraLiveViewStatus

○ Event Outline

It is used to inform the host that the state of live view has changed on the camera.

CameraLiveViewStatus	Description
0	OFF
1	ON

6.4.2.9 PixelMappingComplete

○ Event Specifications

Event Code	0xC10D
Event Parameter1	Result

○ Event Outline

It is used to inform the host that pixel mapping initiated by the InitiatePixelMapping command is complete.

Code	Result
0x00000000	Failed
0x00000001	Completed

Do Not Copy

6.4.2.10 ManualSettingLensDataChanged

○ Event Specifications

Event Code	0xC10E
Event Parameter1	LensNo

○ Event Outline

It is used to inform the host that the information of “Non-CPU lens data” in the setup menu has been changed.

The lens No. of the changed lens is passed as an EventParameter.

LensNo	Description
Refer to ManualSettingLensNo property (section 6.5.5.1)	Lens No. of the changed lens
0xFFFFFFFF	All lenses (Not supported on this camera)

6.4.2.11 OpenCaptureComplete

○ Event Specifications

Event Code	0xC10F
Event Parameter1	TransactionID
Event Parameter2	EndFactor

○ Event Outline

It is used to inform that interval timer shooting and focus shift shooting are completed.
The TransactionID of Parameter1 is the TransactionID of the InitiateOpenCaptureV command.
If shooting is started from the camera side, it will be 0.

The end factor is notified with EndFactor of Parameter2.

EndFactor Code	End factor
0x00000000	Shooting completed
0x00000001	No free card space
0x00000002	No free SDRAM space
0xFFFFFFFF	Other factors

Do Not Copy

6.4.2.12 SBAdded

○ **Event Specifications**

Event Code	0xC120
Event Parameter1	SBHandle

○ **Event Outline**

It is used to inform the host that the flash unit is newly attached to the camera.

6.4.2.13 SBRemoved

○ **Event Specifications**

Event Code	0xC121
Event Parameter1	SBHandle

○ **Event Outline**

It is used to inform the host that the flash unit is detached from the camera.

6.4.2.14 SBAttrChanged

○ **Event Specifications**

Event Code	0xC122
Event Parameter1	SBHandle
Event Parameter2	SBAttrID

○ **Event Outline**

It is used to inform the host that the attributes of the flash unit have changed.
This event is not issued when the attributes of the flash have changed by receiving SetSBAttrValue command from the host.

6.4.2.15 SBGroupAttrChanged

○ **Event Specifications**

Event Code	0xC123
Event Parameter1	SBGroupID
Event Parameter2	SBGroupAttrID

○ **Event Outline**

It is used to inform the host that the attribute descriptor for the flash group or the current value has changed.
This event is not issued when the attributes of the flash group have changed by receiving SetSBGroupAttrValue command from the host.

If the SBWirelessMode property (section 6.5.9.7) is set to other than “Stand-alone flash” and the SBWirelessMultipleFlashMode property (section 6.5.9.8) is set to “Repeating”, SBGroupID of the master flash is used to inform the changes for the following flash group regardless of the value of the SBUsableGroup property (section 6.5.9.9).

・SBGroupFlashLevel (section 6.7.2.4)
・SBGroupRepeatCount (section 6.7.2.7)
・SBGroupRepeatInterval (section 6.7.2.8)

Do Not Copy

6.4.2.16 HlgQualityAdjustChanged

○ Event Specifications

Event Code	0xC125
Event Parameter1	None

○ Event Outline

It is used to inform that the HLG image quality adjustment settings have been changed.

6.4.2.17 PortraitImpressionBalanceAdjustChanged

○ Event Specifications

Event Code	0xC126
Event Parameter1	ModeNum Following PortraitImpressionBalance property (section 6.5.2.66), but "OFF" is an invalid value.
Event Parameter2	ShootingMode

○ Event Outline

It is used to notify that the adjustment value of the Portrait impression adjustment has been changed and the changed mode number.

In Parameter2, specify whether the photo shooting menu or the video recording menu has changed.

ShootingMode	Menu
0x00000000	Photo shooting menu
0x00000001	Video recording menu

Do Not Copy

6.5 DevicePropCode

The camera has an attribute that can be changed as an option. The change is made by operating the device property. The property shows the device characteristics. Each property has a corresponding DevicePropCode.

When the setting value of each defined property is changed, the camera sends the DevicePropChanged event including the DevicePropCode in order to inform the host of the change. The camera sends the event as shown below.

1. The camera periodically (every 1 second) checks all the values of DeviceProperty. When a DeviceProperty whose value has changed since the last checking is detected, the camera sends the DevicePropChanged event in order to inform the host of the change. When detecting changes in two or more DeviceProperties, the camera sends the DevicePropChanged event for all the DeviceProperties in succession.

2. When the setting value of the DeviceProperty is changed by the SetDevicePropValue command, the camera does not send the DevicePropChanged event including the changed DevicePropCode. However, if any other DeviceProperty is changed under the influence of the change of the DeviceProperty, the camera sends the DevicePropChanged event for the property. For example, if the aperture value is changed by the SetDevicePropValue command when shooting is performed in the A mode (aperture priority), the camera changes the shutter speed automatically. In this case, the camera sends the DevicePropChanged event for the shutter speed.

However, depending on the type of PropertyCode, it is necessary to issue further events following the DevicePropChanged event. It is described in the explanation of each PropertyCode.

The error response is made to GetDevicePropDesc, GetDevicePropValue, SetDevicePropValue, and their extended commands as shown below.

1. When either or both of getting/setting are invalid depending on the setting status of the camera for each property, the response of the ResponseCode corresponding to the invalid status is made.

2. When setting is performed for the property that supports getting only, the Access_Denied error response is made.

The properties whose values cannot be set in photo mode, video mode or during video recording are described in the following table of DevicePropCodes instead of Response Code of each property. Access_Denied response is sent when the value is set in a state where setting is not possible.

The DevicePropCodes supported by the camera are shown below.

Property Code	Description	Reference	Photo mode	Video mode	During video recording
0x5001	BatteryLevel	6.5.1.1			
0x5003	ImageSize	6.5.1.2	✓	✓	–
0x5004	CompressionSetting	6.5.1.3	✓	–	–
0x5005	WhiteBalance	6.5.1.4	✓	✓	✓
0x5007	Fnumber	6.5.1.5	✓	✓	✓
0x5008	FocalLength	6.5.1.6			
0x500A	FocusMode	6.5.1.7			
0x500B	ExposureMeteringMode	6.5.1.8	✓	✓	–

Do Not Copy

0x500C	FlashMode	6.5.1.9	✓	–	–
0x500D	ExposureTime	6.5.1.10	✓	–	–
0x500E	ExposureProgramMode	6.5.1.11	✓	✓	–
0x500F	ExposureIndex	6.5.1.12	✓	✓	✓
0x5010	ExposureBiasCompensation	6.5.1.13	✓	✓	✓
0x5011	DateTime	6.5.1.14	✓	✓	–
0x5013	StillCaptureMode	6.5.1.15	✓	✓	✓
0x5018	BurstNumber	6.5.1.16	✓	✓	✓
0x501E	Artist	6.5.1.17			
0x501F	Copyright	6.5.1.18			
0xD010	ShootingMenuBank	6.5.2.1	✓	✓	–
0xD011	ShootingBankNameA	6.5.2.2	✓	✓	–
0xD012	ShootingBankNameB	6.5.2.3	✓	✓	–
0xD013	ShootingBankNameC	6.5.2.4	✓	✓	–
0xD014	ShootingBankNameD	6.5.2.5	✓	✓	–
0xD016	RawCompressionType	6.5.2.13	✓	✓	–
0xD017	WbTuneAuto	6.5.2.21	✓	✓	✓
0xD018	WbTuneIncandescent	6.5.2.26	✓	✓	✓
0xD019	WbTuneFluorescent	6.5.2.28	✓	✓	✓
0xD01A	WbTuneSunny	6.5.2.23	✓	✓	✓
0xD01B	WbTuneFlash	6.5.2.29	✓	✓	✓
0xD01C	WbTuneCloudy	6.5.2.24	✓	✓	✓
0xD01D	WbTuneShade	6.5.2.25	✓	✓	✓
0xD01E	WbColorTemp	6.5.2.30	✓	✓	✓
0xD01F	WbPresetDataNo	6.5.2.32	✓	✓	✓
0xD021	WbPresetDataComment1	6.5.2.33	✓	✓	–
0xD022	WbPresetDataComment2	6.5.2.34	✓	✓	–
0xD023	WbPresetDataComment3	6.5.2.35	✓	✓	–
0xD024	WbPresetDataComment4	6.5.2.36	✓	✓	–
0xD026	WbPresetDataValue1	6.5.2.39			
0xD027	WbPresetDataValue2	6.5.2.40			
0xD028	WbPresetDataValue3	6.5.2.41			
0xD029	WbPresetDataValue4	6.5.2.42			
0xD030	CaptureAreaCrop	6.5.2.9	✓	✓	–
0xD032	ColorSpace	6.5.2.57	✓	✓	–
0xD034	DecreaseFlicker	6.5.3.58	✓	✓	–
0xD038	WbPresetDataComment5	6.5.2.37	✓	✓	–
0xD039	WbPresetDataComment6	6.5.2.38	✓	✓	–
0xD03A	WbTunePreset5	6.5.2.49	✓	✓	✓
0xD03B	WbTunePreset6	6.5.2.50	✓	✓	✓
0xD03C	WbPresetProtect5	6.5.2.55	✓	✓	–
0xD03D	WbPresetProtect6	6.5.2.56	✓	✓	–
0xD03E	WbPresetDataValue5	6.5.2.43			
0xD03F	WbPresetDataValue6	6.5.2.44			
0xD040	CustomSettingBank	6.5.4.1	✓	✓	–
0xD041	CustomBankNameA	6.5.4.2	✓	✓	–
0xD042	CustomBankNameB	6.5.4.3	✓	✓	–

Do Not Copy

0xD043	CustomBankNameC	6.5.4.4	✓	✓	–
0xD044	CustomBankNameD	6.5.4.5	✓	✓	–
0xD046	AFStillLockOnAcross	6.5.4.8	✓	✓	–
0xD047	AFStillLockOnMove	6.5.4.9	✓	✓	–
0xD048	DynamicAFonAFC	6.5.4.6	✓	✓	–
0xD049	DynamicAFonAFS	6.5.4.7	✓	✓	–
0xD04F	FocusAreaSelect	6.5.4.12	✓	✓	–
0xD053	EnableCopyright	6.5.5.11	✓	✓	–
0xD054	ISOAutoControl	6.5.2.15	✓	✓	–
0xD055	IsoStep	6.5.4.13	✓	✓	–
0xD056	ExposureEVStep	6.5.4.14	✓	✓	–
0xD059	CenterWeightedExRange	6.5.4.16	✓	✓	–
0xD05A	ExposureBaseCompMatrix	6.5.4.17	✓	✓	–
0xD05B	ExposureBaseCompCenter	6.5.4.18	✓	✓	–
0xD05C	ExposureBaseCompSpot	6.5.4.19	✓	✓	–
0xD05D	StillFocusMeteringMode	6.5.2.70	✓	✓	–
0xD060	IPTCPresetSelect	6.5.5.12	✓	✓	–
0xD061	StillFocusMode	6.5.2.69	✓	✓	–
0xD067	AngleLevel	6.5.6.21			
0xD068	CspeedLow	6.5.4.23	✓	✓	–
0xD069	BurstMaxNumber	6.5.4.24	✓	✓	–
0xD06A	ExposureDelay	6.5.4.27	✓	✓	–
0xD06B	NoiseReduction	6.5.2.59	✓	✓	–
0xD06C	NumberingMode	6.5.4.29	✓	✓	–
0xD070	NoiseReductionHiIso	6.5.2.61	✓	✓	–
0xD072	ArtistV	6.5.5.9	✓	✓	–
0xD073	CopyrightV	6.5.5.10	✓	✓	–
0xD074	FlashSyncSpeed	6.5.4.39	✓	✓	–
0xD075	FlashSlowSpeedLimit	6.5.4.40	✓	✓	–
0xD078	BracketingType	6.5.8.2	✓	✓	–
0xD079	SelectBracketChangeFactor	6.5.4.43	✓	✓	–
0xD07A	BracketingOrder	6.5.4.44	✓	✓	–
0xD07D	AngleLevelPitching	6.5.6.22			
0xD07E	AngleLevelYawing	6.5.6.23			
0xD07F	ExtendShootingMenu	6.5.2.6	✓	✓	–
0xD08A	EnableShutter	6.5.5.15	✓	✓	–
0xD08D	EnableAFAreaPoint	6.5.4.10	✓	✓	–
0xD08F	ImageSensorCleaning	6.5.5.6	✓	✓	–
0xD090	CommentString	6.5.5.7	✓	✓	–
0xD091	EnableComment	6.5.5.8	✓	✓	–
0xD092	OrientationSensorMode	6.5.6.20	✓	✓	–
0xD093	ManualSettingLensNo	6.5.5.1	✓	✓	–
0xD09C	RetractableLensWarning	6.5.10.9			
0xD09F	MatrixMetering	6.5.4.15	✓	✓	–
0xD0A0	MovieRecordScreenSize	6.5.3.7	✓	✓	–
0xD0A2	MovieRecordMicrophoneLevel	6.5.3.69	✓	✓	✓
0xD0A3	MovieRecordDestination	6.5.3.1	✓	✓	–

Do Not Copy

0xD0A4	MovieRecProhibitionCondition	6.5.12.5			
0xD0A8	MovieRecordMicrophoneLevelValue	6.5.3.70	✓	✓	✓
0xD0AA	MovieWindNoiseReduction	6.5.3.73	✓	✓	✓
0xD0AC	MovieRecordingZone	6.5.3.72	✓	✓	✓
0xD0AD	MovieISOAutoControl	6.5.3.12	✓	✓	✓
0xD0AE	MovieISOAutoHighLimit	6.5.3.11	✓	✓	✓
0xD0AF	MovieFileType	6.5.3.2	✓	✓	-
0xD0B4	ExposureIndexEx	6.5.2.14	✓	✓	✓
0xD0B5	ISOControlSensitivity	6.5.6.14			
0xD0B7	FlickerReductionSetting	6.5.2.67	✓	✓	-
0xD0BA	DiffractionCompensation	6.5.2.63	✓	✓	-
0xD0BB	MovieLogOutput	6.5.12.4			
0xD0BC	MovieAutoDistortion	6.5.3.55	✓	✓	-
0xD0BE	RemainingExposureTime	6.5.6.12			
0xD0C0	EnableBracketing	6.5.8.1	✓	✓	-
0xD0C1	AEBracketingStep	6.5.8.4	✓	✓	-
0xD0C2	AEBracketingPattern	6.5.8.3	✓	✓	-
0xD0C3	AEBracketingCount	6.5.8.9			
0xD0C4	WBBracketingStep	6.5.8.6	✓	✓	-
0xD0C5	WBBracketingPattern	6.5.8.5	✓	✓	-
0xD0C6	ADLBracketingPattern	6.5.8.7	✓	✓	-
0xD0C7	ADLBracketingStep	6.5.8.8	✓	✓	-
0xD0CD	SaveFocusPosition	6.5.5.5	✓	✓	-
0xD0E0	LensID	6.5.10.4			
0xD0E1	LensSort	6.5.10.1			
0xD0E2	LensTypeF	6.5.10.3			
0xD0E3	LensFocalMin	6.5.10.5			
0xD0E4	LensFocalMax	6.5.10.6			
0xD0E5	LensApatureMin	6.5.10.7			
0xD0E6	LensApatureMax	6.5.10.8			
0xD0E7	LensTypeML	6.5.10.2			
0xD0F6	StillCaptureModeQuick	6.5.6.2	✓	✓	✓
0xD0F7	VignetteControl	6.5.2.62	✓	✓	-
0xD0F8	AutoDistortion	6.5.2.64	✓	✓	-
0xD100	ShutterSpeed	6.5.6.10	✓	-	-
0xD101	ExternalDC-IN	6.5.15.1			
0xD102	WarningStatus	6.5.6.24			
0xD104	AFLockStatus	6.5.6.5			
0xD105	AELockStatus	6.5.6.4			
0xD106	FVLockStatus	6.5.6.6			
0xD109	FlexibleProgram	6.5.6.13	✓	-	-
0xD10B	RecordingMedia	6.5.7.1	✓	✓	-
0xD10C	USBSpeed	6.5.16.1			
0xD10E	Orientation	6.5.6.19			
0xD112	TVLockSetting	6.5.4.46	✓	✓	-
0xD113	AVLockSetting	6.5.4.47	✓	✓	-
0xD118	ExposureCompFlashUsed	6.5.4.41	✓	✓	-

Do Not Copy

0xD119	Slot2JpegImageSize	6.5.2.8	✓	✓	–
0xD120	ExternalSpeedLightExist	6.5.9.1			
0xD121	ExternalSpeedLightStatus	6.5.9.3			
0xD122	ExternalSpeedLightSort	6.5.9.2			
0xD124	FlashCompensation	6.5.9.5			
0xD125	NewExternalSpeedLightMode	6.5.9.4			
0xD126	InternalFlashCompensation	6.5.6.9	✓	–	–
0xD12D	ExternalSpeedLightMultiFlashMode	6.5.9.6			
0xD12E	ConnectionPath	6.5.16.2			
0xD12F	AWBLockStatus	6.5.6.7			
0xD130	HDRMode	6.5.2.75	✓	✓	–
0xD132	HDRStrength	6.5.2.76	✓	✓	–
0xD133	HDRSaveIndividualImages	6.5.2.77	✓	✓	–
0xD138	VibrationReduction	6.5.2.74	✓	✓	–
0xD141	WbAutoType	6.5.2.20	✓	✓	✓
0xD148	Slot2ImageSaveMode	6.5.2.7	✓	✓	–
0xD14E	Active-D-Lighting	6.5.2.58	✓	✓	–
0xD14F	WbFluorescentType	6.5.2.27	✓	✓	✓
0xD150	WbTuneColorTemp	6.5.2.31	✓	✓	✓
0xD152	WbTunePreset1	6.5.2.45	✓	✓	✓
0xD153	WbTunePreset2	6.5.2.46	✓	✓	✓
0xD154	WbTunePreset3	6.5.2.47	✓	✓	✓
0xD155	WbTunePreset4	6.5.2.48	✓	✓	✓
0xD158	WbPresetProtect1	6.5.2.51	✓	✓	–
0xD159	WbPresetProtect2	6.5.2.52	✓	✓	–
0xD15A	WbPresetProtect3	6.5.2.53	✓	✓	–
0xD15B	ActiveFolder	6.5.7.2			
0xD15C	WbPresetProtect4	6.5.2.54	✓	✓	–
0xD15E	WbTuneNatural	6.5.2.22	✓	✓	–
0xD164	ISOAutoShutterTime	6.5.2.18	✓	✓	–
0xD16E	ExtendedShutterSpeedsManual	6.5.4.28	✓	✓	–
0xD177	FocusModeRestrictions	6.5.4.11	✓	✓	–
0xD17B	ViewMode	6.5.4.30	✓	✓	–
0xD17C	MovieAfSpeed	6.5.4.52	✓	✓	–
0xD17D	MovieAfSpeedWhenToApply	6.5.4.53	✓	✓	–
0xD17E	MovieAfTrackingSensitivity	6.5.4.54	✓	✓	–
0xD180	FlushBurstPrioritize	6.5.4.45	✓	✓	–
0xD183	ISOAutoHighLimit	6.5.2.16	✓	✓	–
0xD186	CSpeedHigh	6.5.4.22	✓	✓	–
0xD199	FlashISOAutoHighLimit	6.5.2.17	✓	✓	–
0xD1A2	RemoteLiveViewStatus	6.5.11.2			
0xD1A4	LiveViewProhibitionCondition	6.5.11.7			
0xD1A6	LiveViewSelector	6.5.6.1	✓	✓	–
0xD1A8	MovieShutterSpeed	6.5.12.2	–	✓	✓
0xD1A9	MovieFnumber	6.5.12.1	–	✓	✓
0xD1AA	MovieExposureIndex	6.5.3.13	✓	✓	✓
0xD1AB	MovieExposureBiasCompensation	6.5.12.3	–	✓	✓

Do Not Copy

0xD1AC	LiveViewImageSize	6.5.11.4	✓	✓	–
0xD1AF	MovieExposureMeteringMode	6.5.3.60	✓	✓	–
0xD1B0	ExposureDisplayStatus	6.5.6.15			
0xD1B1	ExposureIndicateStatus	6.5.6.16			
0xD1B2	InfoDisplayErrorStatus	6.5.6.25			
0xD1B3	ExposureIndicateLightup	6.5.6.17			
0xD1B4	ContinuousShootingCount	6.5.7.5			
0xD1B8	CameraLiveViewStatus	6.5.11.1			
0xD1BA	MonitorOffStatus	6.5.6.18			
0xD1BB	LiveViewImageStatus	6.5.11.3			
0xD1BC	LiveViewImageCompression	6.5.11.5	✓	✓	–
0xD1BD	LiveViewZoomArea	6.5.11.6	✓	✓	✓
0xD1C5	AutoFlashIsoSensitivityControl	6.5.4.42	✓	✓	–
0xD1C6	KeepExposureWhenFNumberChanges	6.5.4.21	✓	✓	–
0xD1DE	ExternalRecordingControl	6.5.3.78	✓	✓	–
0xD1DF	HighlightBrightness	6.5.4.57	✓	✓	✓
0xD1E2	SBWirelessMode	6.5.9.7	✓	–	–
0xD1E3	SBWirelessMultipleFlashMode	6.5.9.8	✓	–	–
0xD1E4	SBUsableGroup	6.5.9.9			
0xD1E5	WirelessCLSEntryMode	6.5.9.10	✓	✓	–
0xD1E6	SBPINCode	6.5.9.11	✓	✓	–
0xD1E7	RadioMultipleFlashChannel	6.5.9.12			
0xD1E8	OpticalMultipleFlashChannel	6.5.9.13	✓	–	–
0xD1E9	FlashRangeDisplay	6.5.9.14			
0xD1EA	AllTestFiringDisable	6.5.9.15			
0xD1EC	SBSettingMemberLock	6.5.9.16	✓	–	–
0xD1ED	SBIntegrationFlashReady	6.5.9.17			
0xD1F1	ExposureRemaining	6.5.7.4			
0xD1F2	ActiveSlot	6.5.7.3			
0xD1F4	ISOAutoShutterTimeCorrectionValue	6.5.2.19	✓	✓	–
0xD1F8	MovieFocusMeteringMode	6.5.3.62	✓	✓	✓
0xD1F9	MovieVibrationReduction	6.5.3.67	✓	✓	✓
0xD1FA	MovieFocusMode	6.5.3.61	✓	✓	✓
0xD1FB	RecordTimeCodes	6.5.3.74	✓	✓	–
0xD1FC	CountUpMethod	6.5.3.75	✓	✓	–
0xD1FD	TimeCodeOrigin	6.5.3.76	✓	✓	–
0xD1FE	DropFrame	6.5.3.77	✓	✓	–
0xD200	ActivePicCtrlItem	6.5.13.1	✓	✓	–
0xD20F	MovieCaptureAreaCrop	6.5.3.9	✓	✓	–
0xD211	MovieWbAutoType	6.5.3.15	✓	✓	✓
0xD212	MovieWbTuneAuto	6.5.3.16	✓	✓	✓
0xD213	MovieWbTuneIncandescent	6.5.3.21	✓	✓	✓
0xD214	MovieWbFluorescentType	6.5.3.22	✓	✓	✓
0xD215	MovieWbTuneFluorescent	6.5.3.23	✓	✓	✓
0xD216	MovieWbTuneSunny	6.5.3.18	✓	✓	✓
0xD218	MovieWbTuneCloudy	6.5.3.19	✓	✓	✓
0xD219	MovieWbTuneShade	6.5.3.20	✓	✓	✓

Do Not Copy

0xD21A	MovieWbColorTemp	6.5.3.24	✓	✓	✓
0xD21B	MovieWbTuneColorTemp	6.5.3.25	✓	✓	✓
0xD21C	MovieWbPresetDataNo	6.5.3.26	✓	✓	✓
0xD21D	MovieWbPresetDataComment1	6.5.3.27	✓	✓	–
0xD21E	MovieWbPresetDataComment2	6.5.3.28	✓	✓	–
0xD21F	MovieWbPresetDataComment3	6.5.3.29	✓	✓	–
0xD220	MovieWbPresetDataComment4	6.5.3.30	✓	✓	–
0xD221	MovieWbPresetDataComment5	6.5.3.31	✓	✓	–
0xD222	MovieWbPresetDataComment6	6.5.3.32	✓	✓	–
0xD223	MovieWbPresetDataValue1	6.5.3.33			
0xD224	MovieWbPresetDataValue2	6.5.3.34			
0xD225	MovieWbPresetDataValue3	6.5.3.35			
0xD226	MovieWbPresetDataValue4	6.5.3.36			
0xD227	MovieWbPresetDataValue5	6.5.3.37			
0xD228	MovieWbPresetDataValue6	6.5.3.38			
0xD229	MovieWbTunePreset1	6.5.3.39	✓	✓	✓
0xD22A	MovieWbTunePreset2	6.5.3.40	✓	✓	✓
0xD22B	MovieWbTunePreset3	6.5.3.41	✓	✓	✓
0xD22C	MovieWbTunePreset4	6.5.3.42	✓	✓	✓
0xD22D	MovieWbTunePreset5	6.5.3.43	✓	✓	✓
0xD22E	MovieWbTunePreset6	6.5.3.44	✓	✓	✓
0xD22F	MovieWbPresetProtect1	6.5.3.45	✓	✓	–
0xD230	MovieWbPresetProtect2	6.5.3.46	✓	✓	–
0xD231	MovieWbPresetProtect3	6.5.3.47	✓	✓	–
0xD232	MovieWbPresetProtect4	6.5.3.48	✓	✓	–
0xD233	MovieWbPresetProtect5	6.5.3.49	✓	✓	–
0xD234	MovieWbPresetProtect6	6.5.3.50	✓	✓	–
0xD236	MovieNoiseReductionHiIso	6.5.3.52	✓	✓	–
0xD237	MovieActivePicCtrlItem	6.5.13.2	✓	✓	–
0xD239	ExposureBaseCompHighlight	6.5.4.20	✓	✓	–
0xD23A	MovieWhiteBalance	6.5.3.14	✓	✓	✓
0xD23B	MovieActive-D-Lighting	6.5.3.51	✓	✓	–
0xD23C	MovieWbTuneNatural	6.5.3.17	✓	✓	✓
0xD23D	MovieAttenuator	6.5.3.71	✓	✓	✓
0xD23E	MovieVignetteControl	6.5.3.53	✓	✓	–
0xD23F	MovieDiffractionCompensation	6.5.3.54	✓	✓	–
0xD303	UseDeviceStageFlag	6.5.17.3			
0xD314	ElectronicVR	6.5.3.68	✓	✓	–
0xD406	SessionInitiatorVersionInfo	6.5.17.1	✓	✓	–
0xD407	PerceivedDeviceType	6.5.17.2			
0x0001D000	MovieProResToneMode	6.5.3.5	✓	✓	–
0x0001D001	MovieH265ToneMode	6.5.3.3	✓	✓	–
0x0001D002	SpecialShootingMode	6.5.6.3			
0x0001D005	AFSubjectDetection	6.5.2.73	✓	✓	–
0x0001D006	MovieAFSubjectDetection	6.5.3.65	✓	✓	✓
0x0001D007	ViewModeEaseOfViewing	6.5.4.32	✓	✓	–
0x0001D008	ViewModeWhiteBalance	6.5.4.33	✓	✓	–

Do Not Copy

0x0001D009	ViewModeWbColorTemp	6.5.4.34	✓	✓	–
0x0001D00A	ViewModeWbTuneColorTemp	6.5.4.35	✓	✓	–
0x0001D00B	ViewModePictureControl	6.5.4.36	✓	✓	–
0x0001D00C	ViewModeBrightenShadow	6.5.4.37	✓	✓	–
0x0001D00E	StarlightView	6.5.4.38	✓	✓	–
0x0001D00F	MovieTVLockSetting	6.5.4.49	✓	✓	–
0x0001D010	MovieAVLockSetting	6.5.4.50	✓	✓	–
0x0001D011	SilentMode	6.5.5.14	✓	✓	✓
0x0001D012	ShutterSoundEffect	6.5.5.13	✓	✓	–
0x0001D014	AFWhenSubjectNotDetected	6.5.3.66	✓	✓	–
0x0001D015	FocusPointLock	6.5.4.48	✓	✓	–
0x0001D016	MovieFocusPointLock	6.5.4.51	✓	✓	–
0x0001D017	SkinSoftening	6.5.2.65	✓	✓	–
0x0001D018	MovieSkinSoftening	6.5.3.56	✓	✓	–
0x0001D019	PortraitImpressionBalance	6.5.2.66	✓	✓	–
0x0001D01A	MoviePortraitImpressionBalance	6.5.3.57	✓	✓	–
0x0001D01B	MovieExtendedShutterSpeedsManual	6.5.4.56	✓	✓	–
0x0001D01E	ExtendedOverSampling	6.5.3.10	✓	✓	–
0x0001D01F	MovieExtendedIsoStepManual	6.5.4.55	✓	✓	–
0x0001D025	PreCapturePreReleaseBurst	6.5.4.25	✓	✓	–
0x0001D026	PreCapturePostReleaseBurst	6.5.4.26	✓	✓	–
0x0001D028	MovieNRaw12bitToneMode	6.5.3.4	✓	✓	–
0x0001D029	MovieProResRawHq12bitToneMode	6.5.3.6	✓	✓	–
0x0001D02A	MovieQualityNRaw	6.5.3.8	✓	✓	–
0x0001D02B	AutoCaptureMode	6.5.14.1			
0x0001D02E	AutoCaptureFocusNear	6.5.14.8	✓	✓	–
0x0001D02F	AutoCaptureFocusFar	6.5.14.9	✓	✓	–
0x0001D030	AutoCaptureProhibitCondition	6.5.14.15			
0x0001D031	HighFrequencyFlickerReduction	6.5.2.68	✓	✓	–
0x0001D032	MovieHighFrequencyFlickerReduction	6.5.3.59	✓	✓	✓
0x0001D033	HiResZoom	6.5.3.79	✓	✓	–
0x0001D036	ViewModeShowEffectsOfSettings	6.5.4.31	✓	✓	–
0x0001D03D	FlickerReductionShutterSpeed	6.5.6.11			
0x0001D041	EnableDXImageSize	6.5.2.11	✓	✓	–
0x0001D042	ImageSizeDX	6.5.2.12	✓	✓	–
0x0001D046	WideAreaAFC1	6.5.2.71	✓	✓	–
0x0001D047	WideAreaAFC2	6.5.2.72	✓	✓	–
0x0001D048	MovieWideAreaAFC1	6.5.3.63	✓	✓	✓
0x0001D049	MovieWideAreaAFC2	6.5.3.64	✓	✓	✓
0x0001D04A	FmmManualSetting2	6.5.5.2	✓	✓	–
0x0001D04B	F0ManualSetting2	6.5.5.3	✓	✓	–
0x0001D04C	ManualSettingLensName	6.5.5.4	✓	✓	–
0x0001D052	AutoCaptureCaptureCriteria	6.5.14.2	✓	✓	–
0x0001D053	AutoCaptureMotionSpeed	6.5.14.3	✓	✓	–
0x0001D054	AutoCaptureMotionSubjectSize	6.5.14.4	✓	✓	–
0x0001D055	AutoCaptureMotionDirection	6.5.14.5	✓	✓	–
0x0001D056	AutoCaptureSubjectDetectionSize	6.5.14.6	✓	✓	–

Do Not Copy

0x0001D057	AutoCaptureSubjectDetectionType	6.5.14.7	✓	✓	–
0x0001D058	AutoCaptureRecordingTime	6.5.14.11			
0x0001D059	AutoCaptureWaitAfterShootingTime	6.5.14.12			
0x0001D05A	AutoCaptureSelectUserPreset	6.5.14.13	✓	✓	–
0x0001D05B	AutoCaptureMovieSelectUserPreset	6.5.14.14	✓	✓	–
0x0001D05C	ImageQualityHSFC	6.5.2.10	✓	✓	–
0x0001D05D	PreCaptureState	6.5.6.8			
0x0001D05E	HighISONRMode	6.5.2.60	✓	✓	–
0x0001D061	AutoCaptureFocusRange	6.5.14.10	✓	✓	–

Do Not Copy

6.5.1 Standard

6.5.1.1 BatteryLevel

○ Property Specifications

Property Code	0x5001
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	100 [100 %]
Property Value	From 1 [1 %] to 100 [100 %]

○ Property Outline

Indicates “Remaining battery level” of the camera.

○ Property Details

When the battery level is reduced, the PropertyValues sent by the camera are: 1%, 20%, 40%, 60%, 80%, and 100% only.

The relationship between the PropertyValue and the remaining battery level display is shown below.

Property Value	Remaining battery level display
100	5 / 5
80	4 / 5
60	3 / 5
40	2 / 5
20	1 / 5
1	1 / 5 (blinking)

When the remaining battery level is 1% and the shutter release is disabled, the following settings are made.

No.	Description
1	The WarningStatus property (section 6.5.6.24) is set to “Battery exhausted”.
2	The LiveViewProhibitionCondition property (section 6.5.11.7) is set to “Battery exhausted”.

Do Not Copy

6.5.1.2 ImageSize

○ Property Specifications

Property Code	0x5003
DataType	String
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	Size L
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image size” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

	PropertyValue			
CaptureAreaCrop	FX	DX	1:1	16:9
Size L	8256x5504	5392x3592	5504x5504	8256x4640
Size M	6192x4128	4032x2688	4128x4128	6192x3480
Size S	4128x2752	2688x1792	2752x2752	4128x2320

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The CompressionSetting property (section 6.5.1.3) is set to [RAW].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.1.3 CompressionSetting

○ Property Specifications

Property Code	0x5004
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	2 [JPEG (NORMAL)]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image quality mode” that is set in the camera.

○ Property Details

This property indicates the control value in the camera, not a setting value in the menu. This is a value including RAW when the Plus RAW function is valid.

When the StillCaptureMode property (section 6.5.1.15) is "high speed frame capture", it is the value set in the ImageQualityHSFC property (section 6.5.2.10).

When StorageInfo DataSet (section 9.2) is changed according to the change of this property, the StorageInfoChanged event (section 6.4.1.11) is issued.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	JPEG (BASIC)
1	JPEG (BASIC★)
2	JPEG (NORMAL)
3	JPEG (NORMAL★)
4	JPEG (FINE)
5	JPEG (FINE★)
7	RAW
8	RAW+JPEG (BASIC)
9	RAW+JPEG (BASIC★)
10	RAW+JPEG (NORMAL)
11	RAW+JPEG (NORMAL★)
12	RAW+JPEG (FINE)
13	RAW+JPEG (FINE★)

Do Not Copy

6.5.1.4 WhiteBalance

○ Property Specifications

Property Code	0x5005
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0002 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “White Balance” that is set in the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Auto
0x0004	Sunny
0x0005	Fluorescent
0x0006	Incandescent
0x0007	Flash
0x8010	Cloudy
0x8011	Shade
0x8012	Choose color temp.
0x8013	Preset manual
0x8016	Natural light auto

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During video recording, the MovieWhiteBalance (section 6.5.3.14) is set to anything other than [Same as photo settings].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.1.5 Fnumber

○ Property Specifications

Property Code	0x5007
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	(Minimum value in the setting range)
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Aperture value” with the CPU internal lens mounted.

○ Property Details

When the LensSort property (section 6.5.10.1) is [Not mounted], the enumeration cannot be created. Therefore, the number of enumeration values shall be 1 and the enumeration value, the DefaultValue, and the PropertyValue shall be the same value.

For models that support the exposure meter interlocking lever, it changes depending on the F0ManualSetting2 property (section 6.5.5.3) and the state of the exposure meter interlocking lever. The value shall be 1 EV except the maximum aperture value.

It is set to 0 if the model does not support the exposure meter interlocking lever or if the aperture value cannot be acquired.

If an aperture value error occurs, the number of enumeration values shall be 1 and the enumeration value, the DefaultValue, and the PropertyValue shall be 0xFFFF.

○ Property Value

The PropertyValue should be a hundred times the aperture value.

The PropertyValue changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

The setting range of PropertyValue changes depending on the lens and the magnification setting.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is anything other than [A] or [M].
	The LensSort property (section 6.5.10.1) is [Not mounted].
	The WarningStatus property (section 6.5.6.24) is [Sequence error], [Retractable zoom-ring warning] or [Shutter speed incompatibility, HDR shooting not possible].
	The AVLockSetting property (section 6.5.4.47) is set to [On].
	The aperture value error.

Do Not Copy

6.5.1.6 FocalLength

○ Property Specifications

Property Code	0x5008
DataType	UINT32
Description form	Range
Get / Set	Get
Default Value	(Minimum value in the setting range)
Property Value	The value of a hundred times the focal length

○ Property Outline

Indicates “Focal length” with the CPU internal lens mounted.

○ Property Details

The setting range of PropertyValue changes depending on the lens and the magnification setting.
When the LensSort property (section 6.5.10.1) is [Not mounted], the PropertyValue is not fixed.

Do Not Copy

6.5.1.7 FocusMode

○ Property Specifications

Property Code	0x500A
DataType	UINT16
Description form	Enumeration
Get / Set	Get
Default Value	0x8010 [Single AF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus mode” that is set in the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	Photo mode	Video mode
0x0001	Manual focus (MF)	✓	✓
0x8010	Single AF(AF-S)	✓	✓
0x8011	Continuous AF(AF-C)	✓	✓
0x8013	Full time AF(AF-F)	–	✓

Do Not Copy

6.5.1.8 ExposureMeteringMode

○ Property Specifications

Property Code	0x500B
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0003 [Matrix metering]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Metering mode” that is set in the camera.
Use the MovieExposureMeteringMode property (section 6.5.3.60) for the exposure metering mode in video mode.

○ Property Details

In the following cases, this property operates with center-weighted metering.

- The LensSort property (section 6.5.10.1) is set to [Not mounted] and highlight-weighted metering is selected.

- When the lens information is not registered in “Non-CPU lens data” menu, the LensSort property is set to [Not mounted] and matrix metering is selected.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Center-weighted metering
0x0003	Matrix metering
0x0004	Spot metering
0x8010	Highlight-weighted metering

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The AELockStatus property (section 6.5.6.4) is [Locked].

Do Not Copy

6.5.1.9 FlashMode

○ Property Specifications

Property Code	0x500C
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x8010 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Flash mode” that is set in the camera.

○ Property Details

If Rear curtain is set when the NewExternalSpeedLightMode property (section 6.5.9.4) is set to Multi-flash, normal flash is set.

The camera display status depends on the value of the ExposureProgramMode property (section 6.5.1.11). In addition, it also differs according to the speedlight condition.

When the camera is in the Access_Denied condition of this property or in video mode, this property is set to [Flash off].

The camera display status with the speedlight firing is shown below.

Shooting mode or selected scene	Normal flash	Normal flash + slow shutter	Rear curtain flash	Red-eye reduction flash	Red-eye reduction flash + slow shutter	Flash off
P / A	Normal flash	Normal flash + slow shutter	Rear curtain flash	Red-eye reduction flash	Red-eye reduction flash + slow shutter	Flash off
S / M	Normal flash	-	Rear curtain flash	Red-eye reduction flash	-	Flash off

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Flash off
0x0004	Red-eye reduction flash
0x8010	Normal flash
0x8011	Normal flash + slow shutter
0x8012	Rear curtain flash
0x8013	Red-eye reduction + slow shutter

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].
	The SilentMode property (section 6.5.5.14) is set to [On].
	During SB setting warning.
	During image dust off data acquiring mode
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.1.10 ExposureTime

○ Property Specifications

Property Code	0x500D
DataType	UINT32
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	(Minimum value in the setting range)
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shutter speed” that is set in the camera.

Since there are shutter speeds that cannot be expressed with this property, use the ShutterSpeed (section 6.5.6.10) property to obtain an accurate shutter speed.

For the shutter speed in video mode, the MovieShutterSpeed property (section 6.5.12.2) should be used.

○ Property Details

Setting prohibition conditions, contents of enumeration values, and factors for changing enumeration values are the same as for the ShutterSpeed property, but since the unit of PropertyValue is 1/10000, there is a range that is grouped together.

The handling within the range summarized below is described.

PropertyValue	Shutter speed	
	Get	Set (NOTE1)
1	Shutter speed faster than 1/5000	1/10000 1/8000
2	1/5000 1/4000	1/4000
3	1/3200 1/3000	1/3200 1/3000
6	1/1600 1/1500	1/1600 1/1500

NOTE1) Where there are multiple descriptions, the shutter speed that can be set depending on the state of the camera is set.

○ Property Value

Shutter speed:

Shutter speed x 10000 [unit: 1/10000 sec.]

Special values other than shutter speed:

PropertyValue	Description
0xFFFFFFFF	Bulb shooting
0xFFFFFFFD	Time shooting

(Example) PropertyValue of shutter speed.

Shutter speed 1/250 sec.: PropertyValue = 40

Shutter speed 25 sec.: PropertyValue = 250000

Do Not Copy

6.5.1.11 ExposureProgramMode

○ Property Specifications

Property Code	0x500E
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0002 [Program auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting mode” that is set in the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	Used setting
0x0001	[M] Manual	-
0x0002	[P] Program auto	-
0x0003	[A] Aperture priority auto	-
0x0004	[S] Shutter priority auto	-

Do Not Copy

6.5.1.12 ExposureIndex

○ Property Specifications

Property Code	0x500F
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	100 [ISO100]
Property Value	Refer to the ExposureIndexEx property.

○ Property Outline

Indicates “ISO sensitivity” that is set in the camera.
Refer to the MovieExposureIndex property (section 6.5.3.13) for the ISO sensitivity in video mode.

○ Property Details

The maximum value of ISO sensitivity that can be expressed by this property is up to the ISO sensitivity that can be handled with 16Bit.

Therefore, if the camera is set to an ISO sensitivity that exceeds 16Bit, the value of this property will be the maximum ISO sensitivity that can be expressed with 16Bit.

Use the ExposureIndexEx property (section 6.5.2.14) when dealing with ISO sensitivities over 16Bit.

Do Not Copy

6.5.1.13 ExposureBiasCompensation

○ Property Specifications

Property Code	0x5010
DataType	INT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [0.0 EV]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the compensation value of “Exposure compensation” that is set in the camera.
For the exposure compensation in video mode, the MovieExposureBiasCompensation property (section 6.5.12.3) should be used.

○ Property Value

The valid PropertyValues are shown below.
The value of PropertyValue changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

Property Value	Description	ExposureEVStep		
		1/3 step	1/2 step	1 step
+5000	+5.0 EV	✓	✓	✓
+4666	+4.7 EV	✓	–	✓
+4500	+4.5 EV	–	✓	–
+4333	+4.3 EV	✓	–	✓
+4000	+4.0 EV	✓	✓	✓
+3666	+3.7 EV	✓	–	✓
+3500	+3.5 EV	–	✓	–
+3333	+3.3 EV	✓	–	✓
+3000	+3.0 EV	✓	✓	✓
+2666	+2.7 EV	✓	–	✓
+2500	+2.5 EV	–	✓	–
+2333	+2.3 EV	✓	–	✓
+2000	+2.0 EV	✓	✓	✓
+1666	+1.7 EV	✓	–	✓
+1500	+1.5 EV	–	✓	–
+1333	+1.3 EV	✓	–	✓
+1000	+1.0 EV	✓	✓	✓
+666	+0.7 EV	✓	–	✓
+500	+0.5 EV	–	✓	–
+333	+0.3 EV	✓	–	✓
0	0.0 EV	✓	✓	✓
-333	-0.3 EV	✓	–	✓
-500	-0.5 EV	–	✓	–
-666	-0.7 EV	✓	–	✓
-1000	-1.0 EV	✓	✓	✓
-1333	-1.3 EV	✓	–	✓
-1500	-1.5 EV	–	✓	–
-1666	-1.7 EV	✓	–	✓
-2000	-2.0 EV	✓	✓	✓

Do Not Copy

-2333	-2.3 EV	✓	–	✓
-2500	-2.5 EV	–	✓	–
-2666	-2.7 EV	✓	–	✓
-3000	-3.0 EV	✓	✓	✓
-3333	-3.3 EV	✓	–	✓
-3500	-3.5 EV	–	✓	–
-3666	-3.7 EV	✓	–	✓
-4000	-4.0 EV	✓	✓	✓
-4333	-4.3 EV	✓	–	✓
-4500	-4.5 EV	–	✓	–
-4666	-4.7 EV	✓	–	✓
-5000	-5.0 EV	✓	✓	✓

Do Not Copy

6.5.1.14 DateTime

○ Property Specifications

Property Code	0x5011
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	20210101T000000 [00:00:00, Jan. 1, 2021]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Date and time” that is set in the camera.

○ Property Details

The format of PropertyValue is a Unicode string of “YYYYMMDDThhmmss” where YYYY is the year, MM is the month, DD is the day of the month, T is a constant character, hh is the hours, mm is the minutes, and ss is the seconds past the minute, in accordance with the ISO8601 standards.

The PropertyValue is the date and time obtained by “UTC + Time zone difference + Daylight saving time”.

The setting range of PropertyValue is from 20000101T000000 to 20991231T235959.

The format of PropertyValue is shown below.

Field	Size (Byte)	Data	Description
NumChar	1	0x10	The number of characters in the string. It is sixteen (including the null character).
StringChars	32		Unicode string “YYYYMMDDThhmmss”

The DevicePropChanged event (section 6.4.1.6) is not issued even if this PropertyValue has changed.

Do Not Copy

6.5.1.15 StillCaptureMode

○ Property Specifications

Property Code	0x5013
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0001 [Single-frame shooting]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Release mode” that is set in the camera.

○ Property Details

If the quick setting position is set, the release mode set in the StillCaptureModeQuick property (section 6.5.6.2) is applied.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0001	Single-frame shooting
0x0002	Continuous high-speed shooting
0x8010	Continuous low-speed shooting
0x8011	Self-timer
0x8100	Quick setting position

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC Camera Mode.

Do Not Copy

6.5.1.16 BurstNumber

○ Property Specifications

Property Code	0x5018
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	1 [One frame]
Property Value	From 1 [One frame] to 65535 [65535 frames]

○ Property Outline

Indicates “The number of continuous shooting frames” captured by the command.

○ Property Details

For shooting by the command processing, the continuous shooting is performed until the number of frames set by this property is reached.

Refer to Continuous Shooting (section 11.7.1) about the maximum number of continuous shooting.

Do Not Copy

6.5.1.17 Artist

○ Property Specifications

Property Code	0x501E
DataType	String
Description form	None
Get / Set	Get
Default Value	NULL (0x00) 0 character
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Artist” that is set in the camera.

○ Property Details

For setting “Artist”, the ArtistV property (section 6.5.5.9) should be used.

The PropertyValue is an optional string of 36 characters or shorter (not including the null character).

If the artist is not set in the camera, the value is zero length string (not including the null character).

6.5.1.18 Copyright

○ Property Specifications

Property Code	0x501F
DataType	String
Description form	None
Get / Set	Get
Default Value	NULL (0x00) 0 character
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Copyright” that is set in the camera.

○ Property Details

For setting “Copyright”, the CopyrightV property (section 6.5.5.10) should be used.

The PropertyValue is an optional string of 54 characters or shorter (not including the null character).

If the copyright is not set in the camera, the value is zero length string (not including the null character).

Do Not Copy

6.5.2 Vendor (Photo Shooting Menu)

6.5.2.1 ShootingMenuBank

Property Specifications

Property Code	0xD010
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	1[A]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Shooting menu bank” in the photo shooting menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	A
2	B
3	C
4	D

Do Not Copy

6.5.2.2 ShootingBankNameA

○ Property Specifications

Property Code	0xD011
DataType	String
Description form	None
Get / Set	Get, Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “A” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 20 characters or shorter (not including the null character).

When the string is shorter than 20 characters, the shortage is padded with spaces (0x20).

For the characters that can be input (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

6.5.2.3 ShootingBankNameB

○ Property Specifications

Property Code	0xD012
DataType	String
Description form	None
Get / Set	Get, Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “B” in the photo shooting menu.

The method of using this property is the same as that of the ShootingBankNameA property (section 6.5.2.2).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

Do Not Copy

6.5.2.4 ShootingBankNameC

○ Property Specifications

Property Code	0xD013
DataType	String
Description form	None
Get / Set	Get, Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “C” in the shooting menu.

The method of using this property is the same as that of the ShootingBankNameA property (section 6.5.2.2).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

6.5.2.5 ShootingBankNameD

○ Property Specifications

Property Code	0xD014
DataType	String
Description form	None
Get / Set	Get, Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “D” in the shooting menu.

The method of using this property is the same as that of the ShootingBankNameA property (section 6.5.2.2).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

Do Not Copy

6.5.2.6 ExtendShootingMenu

○ Property Specifications

Property Code	0xD07F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Extended menu banks” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.2.7 Slot2ImageSaveMode

○ Property Specifications

Property Code	0xD148
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Overflow]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Slot2 function” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Overflow
1	Backup
2	RAW primary - JPEG secondary
3	JPEG primary - JPEG secondary

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].

Do Not Copy

6.5.2.8 Slot2JpegImageSize

○ Property Specifications

Property Code	0xD119
DataType	String
Description form	Enumeration
Get / Set	Get / Set
Default Value	Size M
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Secondary slot function – JPEG+JPEG division recording” in the photo shooting menu. Specify the image size to be saved in JPEG + JPEG division recording.

○ Property Value

The valid PropertyValues are shown below.

PropertyValue changes depending on the value of the CaptureAreaCrop property (section 6.5.2.9). The size is the same as the image size applied to shooting in [Photo shooting menu]-[Image size setting].

Property Value	Description
Same as size L of ImageSize property (section 6.5.1.2) or ImageSizeDX property (section 6.5.2.12).	Size L
Same as size M of ImageSize property or ImageSizeDX property.	Size M
Same as size S of ImageSize property or ImageSizeDX property.	Size S

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].

Do Not Copy

6.5.2.9 CaptureAreaCrop

○ Property Specifications

Property Code	0xD030
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [FX]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image area - Image area setting” in the photo shooting menu.

○ Property Details

If the StillCaptureMode property (section 6.5.1.15) is set to high-speed frame capture, this property will be as follows.

StillCaptureMode property	Property Value
High speed frame capture (C15/C30)	[1:1] or [16:9], FX
High speed frame capture (C60)	DX
High speed frame capture (C120)	FX

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	FX
2	DX
4	1:1
5	16:9

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	A DX lens is mounted on the camera.
	The StillCaptureMode property is set to [High speed frame capture (C60/C120)].
	[1:1] or [16:9] is set when the StillCaptureMode property is set to [High speed frame capture (C15/C30)].

Do Not Copy

6.5.2.10 ImageQualityHSFC

Property Specifications

Property Code	0x0001D05C
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [Normal]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Image quality – Image quality (HSFC)” in the photo shooting menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Fine
1	Normal

Do Not Copy

6.5.2.11 EnableDXImageSize

○ Property Specifications

Property Code	0x0001D041
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [OFF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image size – Enable image size (DX)” in the photo shooting menu.

○ Property Details

If this property is ON, CaptureAreaCrop (section 6.5.2.9) is "DX", and the setting prohibition conditions are not met, the setting value of ImageSizeDX (section 6.5.2.12) will be the image size that is applied when shooting.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
1	ON

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The CompressionSetting property (section 6.5.1.3) is set to [RAW].
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.2.12 ImageSizeDX

○ Property Specifications

Property Code	0x0001D042
DataType	String
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	Size L
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image size – Image size (DX)” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
Size L	5392x3592
Size M	4032x2688
Size S	2688x1792

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The CompressionSetting property (section 6.5.1.3) is set to [RAW].
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.2.13 RawCompressionType

○ Property Specifications

Property Code	0xD016
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	3 [High efficiency★]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “NEF (RAW) recording” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Lossless compressed
3	High efficiency★
4	High efficiency

Do Not Copy

6.5.2.14 ExposureIndexEx

○ Property Specifications

Property Code	0xD0B4
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	100 [ISO100]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “ISO sensitivity” that is set in the camera.

This property is 32bit-expanded version of ExposureIndex property (section 6.5.1.12) and allows you to handle ISO sensitivities over 16Bit.

Refer to the MovieExposureIndex property (section 6.5.3.13) for the ISO sensitivity in video mode.

○ Property Details

Both ExposureIndex property (section 6.5.1.12) and this property can be used when setting from Lo-1.0 to Hi-1.0. This property should be used when setting Hi-2.0 and above.

○ Property Value

The valid PropertyValues are shown below.

The value of PropertyValue changes depending on the value of IsoStep property (section 6.5.4.13).

Property Value	Description	IsoStep	
		1/3 step	1 step
32	Lo 1.0	✓	✓
40	Lo 0.7	✓	–
50	Lo 0.3	✓	–
64	64	✓	✓
80	80	✓	–
100	100	✓	✓
125	125	✓	–
160	160	✓	–
200	200	✓	✓
250	250	✓	–
320	320	✓	–
400	400	✓	✓
500	500	✓	–
640	640	✓	–
800	800	✓	✓
1000	1000	✓	–
1250	1250	✓	–
1600	1600	✓	✓
2000	2000	✓	–
2500	2500	✓	–
3200	3200	✓	✓
4000	4000	✓	–
5000	5000	✓	–
6400	6400	✓	✓

Do Not Copy

8000	8000	✓	–
10000	10000	✓	–
12800	12800	✓	✓
16000	16000	✓	–
20000	20000	✓	–
25600	25600	✓	✓
32000	Hi 0.3	✓	–
40000	Hi 0.7	✓	–
51200	Hi 1.0	✓	✓
102400	Hi 2.0	✓	✓

Do Not Copy

6.5.2.15 ISOAutoControl

Property Specifications

Property Code	0xD054
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “ISO sensitivity settings – Auto ISO sensitivity control” in the photo shooting menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.2.16 ISOAutoHighLimit

○ Property Specifications

Property Code	0xD183
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	25600 [ISO25600]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “ISO sensitivity settings – Auto ISO sensitivity control – Maximum sensitivity” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
From 100 to 102400	Refer to the ExposureIndexEx property (section 6.5.2.14).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ISOAutoControl property (section 6.5.2.15) is set to [Off].

Do Not Copy

6.5.2.17 FlashISOAutoHighLimit

○ Property Specifications

Property Code	0xD199
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	0xFFFFFFFF [The setting in the case that the flash is not attached]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “ISO sensitivity settings – Auto ISO sensitivity control – Maximum sensitivity with flash” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
From 100 to 102400	Refer to the property value of ISOAutoHighLimit (section 6.5.2.16).
0xFFFFFFFF	The setting in the case that the flash is not attached.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ISOAutoControl property (section 6.5.2.15) is set to [Off].

Do Not Copy

6.5.2.18 ISOAutoShutterTime

○ Property Specifications

Property Code	0xD164
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	0xFFFFFFFF [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “ISO sensitivity settings – Auto ISO sensitivity control – Minimum shutter speed” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00013E80	1/16000 sec.
0x000132C8	1/13000 sec.
0x00012EE0	1/12000 sec.
0x00012710	1/10000 sec.
0x00011F40	1/8000 sec.
0x00011900	1/6400 sec.
0x00011770	1/6000 sec.
0x00011388	1/5000 sec.
0x00010FA0	1/4000 sec.
0x00010C80	1/3200 sec.
0x000109C4	1/2500 sec.
0x000107D0	1/2000 sec.
0x00010640	1/1600 sec.
0x000104E2	1/1250 sec.
0x000103E8	1/1000 sec.
0x00010320	1/800 sec.
0x00010280	1/640 sec.
0x000101F4	1/500 sec.
0x00010190	1/400 sec.
0x00010140	1/320 sec.
0x000100FA	1/250 sec.
0x000100C8	1/200 sec.
0x000100A0	1/160 sec.
0x0001007D	1/125 sec.
0x00010064	1/100 sec.
0x00010050	1/80 sec.
0x0001003C	1/60 sec.
0x00010032	1/50 sec.
0x00010028	1/40 sec.
0x0001001E	1/30 sec.
0x00010019	1/25 sec.
0x00010014	1/20 sec.
0x0001000F	1/15 sec.

Do Not Copy

0x0001000D	1/13 sec.
0x0001000A	1/10 sec.
0x00010008	1/8 sec.
0x00010006	1/6 sec.
0x00010005	1/5 sec.
0x00010004	1/4 sec.
0x00010003	1/3 sec.
0x000A0019	1/2.5 sec.
0x00010002	1/2 sec.
0x000A0010	1/1.6 sec.
0x000A000D	1/1.3 sec.
0x00010001	1 sec.
0x00020001	2 sec.
0x00040001	4 sec.
0x00080001	8 sec.
0x000F0001	15 sec.
0x001E0001	30 sec.
0xFFFFFFFF	Auto

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ISOAutoControl property (section 6.5.2.15) is set to [Off].

Do Not Copy

6.5.2.19 ISOAutoShutterTimeCorrectionValue

○ Property Specifications

Property Code	0xD1F4
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0
Property Value	From -2 to +2

○ Property Outline

Indicates the correction value when “ISO sensitivity settings – Auto ISO sensitivity control – Minimum shutter speed” in the photo shooting menu is [Auto].

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ISOAutoControl property (section 6.5.2.15) is set to [Off].
	The ISOAutoShutterTime property (section 6.5.2.18) is not set to [Auto].

Do Not Copy

6.5.2.20 WbAutoType

○ Property Specifications

Property Code	0xD141
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	2 [Keep white]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the type of “White balance - Auto” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Keep overall atmosphere
1	Keep warm lighting colors
2	Keep white

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.21 WbTuneAuto

○ Property Specifications

Property Code	0xD017
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Auto” in the photo shooting menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.22 WbTuneNatural

○ Property Specifications

Property Code	0xD15E
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Natural light auto” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.23 WbTuneSunny

○ Property Specifications

Property Code	0xD01A
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Direct sunlight” in the photo shooting menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.24 WbTuneCloudy

○ Property Specifications

Property Code	0xD01C
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Cloudy” in the photo shooting menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.25 WbTuneShade

○ Property Specifications

Property Code	0xD01D
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Shade” in the photo shooting menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

6.5.2.26 WbTuneIncandescent

○ Property Specifications

Property Code	0xD018
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Incandescent” in the photo shooting menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.27 WbFluorescentType

○ Property Specifications

Property Code	0xD14F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	3 [White fluorescent lamp]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the light source of “White balance - Fluorescent” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
3	White fluorescent lamp
4	Day white fluorescent lamp
5	Daylight fluorescent lamp

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.28 WbTuneFluorescent

○ Property Specifications

Property Code	0xD019
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Fluorescent” in the photo shooting menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.29 WbTuneFlash

○ Property Specifications

Property Code	0xD01B
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Flash” in the photo shooting menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.30 WbColorTemp

○ Property Specifications

Property Code	0xD01E
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	5000 [K]
Property Value	From 2500 K to 10000 K (increase or decrease in units of 10 K)

○ Property Outline

Indicates the color temperature (K) of “White balance – Choose color temp.” in the photo shooting menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.31 WbTuneColorTemp

○ Property Specifications

Property Code	0xD150
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine-tuning volume of “White balance – Choose color temp.” in the photo shooting menu.

See Section 11.5 for details on fine-tuning value.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.32 WbPresetDataNo

○ Property Specifications

Property Code	0xD01F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [d-1]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “White balance – Preset manual” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	d-1
2	d-2
3	d-3
4	d-4
5	d-5
6	d-6

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].
	The MovieWhiteBalance property (section 6.5.3.14) is set to anything other than [Same as photo settings] during video recording.

Do Not Copy

6.5.2.33 WbPresetDataComment1

○ Property Specifications

Property Code	0xD021
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-1” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment1 property (section 6.5.3.27)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect1 property (section 6.5.2.51) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.34 WbPresetDataComment2

○ Property Specifications

Property Code	0xD022
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-2” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment2 property (section 6.5.3.28)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect2 property (section 6.5.2.52) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.35 WbPresetDataComment3

○ Property Specifications

Property Code	0xD023
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-3” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment3 property (section6.5.3.29)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect3 property (section 6.5.2.53) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.36 WbPresetDataComment4

○ Property Specifications

Property Code	0xD024
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-4” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment4 property (section 6.5.3.30)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect4 property (section 6.5.2.54) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.37 WbPresetDataComment5

○ Property Specifications

Property Code	0xD038
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-5” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment5 property (section 6.5.3.31)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect5 property (section 6.5.2.55) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.38 WbPresetDataComment6

○ Property Specifications

Property Code	0xD039
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-6” in the photo shooting menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: MovieWbPresetDataComment6 property (section 6.5.3.32)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The WbPresetProtect6 property (section 6.5.2.56) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.39 WbPresetDataValue1

○ Property Specifications

Property Code	0xD026
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-1” in the photo shooting menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue1 property (section 6.5.3.33)

6.5.2.40 WbPresetDataValue2

○ Property Specifications

Property Code	0xD027
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-2” in the photo shooting menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue2 property (section 6.5.3.34)

Do Not Copy

6.5.2.41 WbPresetDataValue3

○ Property Specifications

Property Code	0xD028
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-3” in the photo shooting menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue3 property (section 6.5.3.35)

6.5.2.42 WbPresetDataValue4

○ Property Specifications

Property Code	0xD029
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-4” in the photo shooting menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue4 property (section 6.5.3.36)

Do Not Copy

6.5.2.43 WbPresetDataValue5

○ **Property Specifications**

Property Code	0xD03E
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ **Property Outline**

Indicates the white balance data of “White balance – Preset manual – d-5” in the photo shooting menu.

○ **Property Details**

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue5 property (section 6.5.3.37)

6.5.2.44 WbPresetDataValue6

○ **Property Specifications**

Property Code	0xD03F
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ **Property Outline**

Indicates the white balance data of “White balance – Preset manual – d-6” in the photo shooting menu.

○ **Property Details**

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetDataValue6 property (section 6.5.3.38)

Do Not Copy

6.5.2.45 WbTunePreset1

○ Property Specifications

Property Code	0xD152
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-1” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset1 property (section 6.5.3.39)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect1 property (section 6.5.2.51) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-1].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.46 WbTunePreset2

○ Property Specifications

Property Code	0xD153
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-2” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset2 property (section 6.5.3.40)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect2 property (section 6.5.2.52) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-2].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.47 WbTunePreset3

○ Property Specifications

Property Code	0xD154
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-3” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset3 property (section 6.5.3.41)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect3 property (section 6.5.2.53) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-3].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.48 WbTunePreset4

○ Property Specifications

Property Code	0xD155
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-4” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset4 property (section 6.5.3.42)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect4 property (section 6.5.2.54) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-4].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.49 WbTunePreset5

○ Property Specifications

Property Code	0xD03A
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-5” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset5 property (section 6.5.3.43)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect5 property (section 6.5.2.55) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-5].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.50 WbTunePreset6

○ Property Specifications

Property Code	0xD03B
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-6” in the photo shooting menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbTunePreset6 property (section 6.5.3.44)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The WbPresetProtect6 property (section 6.5.2.56) is [On].
	The WbPresetDataNo property (section 6.5.2.32) is set to anything other than [d-6].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.51 WbPresetProtect1

○ Property Specifications

Property Code	0xD158
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-1” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect1 property (section 6.5.3.45)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.52 WbPresetProtect2

○ Property Specifications

Property Code	0xD159
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-2” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect2 property (section 6.5.3.46)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.53 WbPresetProtect3

○ Property Specifications

Property Code	0xD15A
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-3” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect3 property (section 6.5.3.47)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.54 WbPresetProtect4

○ Property Specifications

Property Code	0xD15C
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-4” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect4 property (section 6.5.3.48)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.55 WbPresetProtect5

○ Property Specifications

Property Code	0xD03C
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-5” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect5 property (section 6.5.3.49)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.56 WbPresetProtect6

○ Property Specifications

Property Code	0xD03D
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-6” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieWbPresetProtect6 property (section 6.5.3.50)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.2.57 ColorSpace

○ Property Specifications

Property Code	0xD032
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [sRGB]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Color space” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	sRGB
1	Adobe RGB

Do Not Copy

6.5.2.58 Active-D-Lighting

○ Property Specifications

Property Code	0xD14E
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0000 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Active D-Lighting” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High
0x0105	Extra high 1
0x0205	Extra high 2
0xFFFF	Auto

Do Not Copy

6.5.2.59 NoiseReduction

○ Property Specifications

Property Code	0xD06B
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Long exposure NR” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The SilentMode property (section 6.5.5.14) is set to [On].

Do Not Copy

6.5.2.60 HighISONRMode

○ Property Specifications

Property Code	0x0001D05E
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [Type A]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “High ISO NR mode” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	Type A
2	Type B

6.5.2.61 NoiseReductionHiIso

○ Property Specifications

Property Code	0xD070
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0003 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “High ISO NR” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High

Do Not Copy

6.5.2.62 VignetteControl

○ Property Specifications

Property Code	0xD0F7
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0003 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Vignette control” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieVignetteControl property (section 6.5.3.53)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High

Do Not Copy

6.5.2.63 DiffractionCompensation

○ Property Specifications

Property Code	0xD0BA
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Diffraction compensation” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieDiffractionCompensation property (section 6.5.3.54)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.2.64 AutoDistortion

○ Property Specifications

Property Code	0xD0F8
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Auto distortion control” in the photo shooting menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: MovieAutoDistortion property (section 6.5.3.55)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The LensTypeML property (section 6.5.10.2) is set to [Lens whose automatic distortion correction is always effective].

Do Not Copy

6.5.2.65 SkinSoftening

○ Property Specifications

Property Code	0x0001D017
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0000 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Skin Softening” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The StillCaptureMode property is set to [High speed frame capture].
	The HDRMode property (section 6.5.2.75) is set to [On].

Do Not Copy

6.5.2.66 PortraitImpressionBalance

○ Property Specifications

Property Code	0x0001D019
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Portrait Impression Adjustment” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	Mode 1
2	Mode 2
3	Mode 3

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ActivePicCtrlItem property (section 6.5.13.1) is set to "Monochrome style" or "Creative Picture Control".

Do Not Copy

6.5.2.67 FlickerReductionSetting

○ Property Specifications

Property Code	0xD0B7
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Flicker reduction shooting” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.2.68 HighFrequencyFlickerReduction

○ Property Specifications

Property Code	0x0001D031
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “High-frequency flicker reduction shooting” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On (High resolution shutter setting)

Do Not Copy

6.5.2.69 StillFocusMode

○ Property Specifications

Property Code	0xD061
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [AF-S]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus mode” in photo shooting.

○ Property Details

Even if this property is set to AF, this property is set to MF when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	AF-S
1	AF-C
4	MF

Do Not Copy

6.5.2.70 StillFocusMeteringMode

○ Property Specifications

Property Code	0xD05D
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x8010 [Single-point AF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “AF-area mode” in photo shooting.

○ Property Details

In the following cases, this property is set to the single-point AF mode. When the following state is canceled without changing the AF area mode, it returns to the AF area mode which was set immediately before.

- In the case that the StillFocusMode property (section 6.5.2.69) is set to [MF].

- In the case that the AF area mode that cannot be selected is set when the StillFocusMode property (section 6.5.2.69) is changed.

○ Property Value

The valid PropertyValues are shown below.
The value of PropertyValue changes depending on the still image focus mode setting.

Property Value	Description	Still image focus mode setting		
		MF	AF-S	AF-C
0x0002	Dynamic AF (S)	-	-	✓
0x8010	Single-point AF	✓	✓	✓
0x8011	Auto-area AF	-	✓	✓
0x8012	3D-Tracking	-	-	✓
0x8013	Dynamic AF(M)	-	-	✓
0x8014	Dynamic AF(L)	-	-	✓
0x8017	Pinpoint AF	-	✓	-
0x8018	Wide-area AF (S)	-	✓	✓
0x8019	Wide-area AF (L)	-	✓	✓
0x801E	Wide-area AF (C1)	-	✓	✓
0x801F	Wide-area AF (C2)	-	✓	✓

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The photo focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.

Do Not Copy

6.5.2.71 WideAreaAFC1

○ Property Specifications

Property Code	0x0001D046
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0D03 [13×3]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the focus area size of “AF-area mode – Wide area AF(C1)” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0101	1×1
0x0103	1×3
0x0107	1×7
0x010B	1×11
0x0501	5×1
0x0503	5×3
0x0507	5×7
0x050B	5×11
0x0901	9×1
0x0903	9×3
0x0907	9×7
0x090B	9×11
0x0D01	13×1
0x0D03	13×3
0x0D07	13×7
0x0D0B	13×11
0x1301	19×1
0x1303	19×3
0x1307	19×7
0x130B	19×11

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The photo focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.

Do Not Copy

6.5.2.72 WideAreaAFC2

○ Property Specifications

Property Code	0x0001D047
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0507 [5x7]
Property Value	Same as the WideAreaAFC1 property (section 6.5.2.71).

○ Property Outline

Indicates the focus area size of “AF-area mode – Wide area AF(C2)” in the photo shooting menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The photo focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.

Do Not Copy

6.5.2.73 AFSubjectDetection

○ Property Specifications

Property Code	0x0001D005
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Subject detection setting in AF” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	Auto
2	People
3	Animal
4	Vehicle
5	Birds
6	Airplanes

Do Not Copy

6.5.2.74 VibrationReduction

○ Property Specifications

Property Code	0xD138
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Vibration reduction” in the photo setting menu.

○ Property Details

The supported Property Value differs depending on the type of attached lens.

○ Property Value

The valid PropertyValues are shown below.

When the lens anti-vibration mode is normal or sports:

Property Value	Description
0	Off
1	Normal
2	Sports

When the lens anti-vibration mode is normal only:

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The mounted lens has VR switch.
	The LensSort property (section 6.5.10.1) is set to [Not mounted] and the FmmManualSetting2 property (section 6.5.5.2) is set to [0.0mm].

Do Not Copy

6.5.2.75 HDRMode

○ Property Specifications

Property Code	0xD130
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x000 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “HDR (high dynamic range) – HDR mode” in the photo shooting menu.

○ Property Details

When the StillCaptureMode property (section 6.5.1.15) is [Continuous low-speed shooting] or [Continuous high-speed shooting], HDR is applied to only the first image with the continuous shot operation.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0001	On (single photo)
0x0101	On (series)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The EnableBracketing property (section 6.5.8.1) is set to [On].
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.2.76 HDRStrength

○ Property Specifications

Property Code	0xD132
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0xFFFF [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “HDR (high dynamic range) – HDR strength” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Low
0x0003	Normal
0x0004	High
0x0005	Extra high
0xFFFF	Auto

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The EnableBracketing property (section 6.5.8.1) is set to [On].
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.2.77 HDRSaveIndividualImages

○ Property Specifications

Property Code	0xD133
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “HDR (high dynamic range) – Save individual images (RAW)” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The EnableBracketing property (section 6.5.8.1) is set to [On].
	The StillCaptureMode property (section 6.5.1.15) is set to [High speed frame capture].

Do Not Copy

6.5.3 Vendor (Video Recording Menu)

6.5.3.1 MovieRecordDestination

○ Property Specifications

Property Code	0xD0A3
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Slot 1]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Destination” in the video recording menu.

If a card is not inserted in the slot that is set in this property, the video is recorded on the card that is inserted in the other slot.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	Slot 1
2	Slot 2

Do Not Copy

6.5.3.2 MovieFileType

○ Property Specifications

Property Code	0xD0AF
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x00010800 [H.265 8-bit(MOV)]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video file type” in the video recording menu.

○ Property Value

The meaning of each Bit of Property Value is as follows.

Bit	Bit size	Description
24-31	8	Reserved(0)
16-23	8	Video codec
8-15	8	Bit depth
0-7	8	File container

Video codec:

Value	Description
0	H.264/AVC
1	H.265/HEVC
2	N-RAW
16	ProRes 422 HQ
17	ProRes RAW HQ

Bit depth:

Assign the bit depth value as it is.

File container:

Property Value	Description
0	MOV
1	MP4
2	NEV

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	Tone mode
0x00000801	H.264 8-bit(MP4)	Fixed to SDR
0x00010800	H.265 8-bit(MOV)	Fixed to SDR
0x00010A00	H.265 10-bit(MOV)	MovieH265ToneMode (section 6.5.3.3)
0x00020C02	N-RAW 12-bit(NEV)	MovieNRaw12bitToneMode (section 6.5.3.4)
0x00100A00	ProRes 422 HQ 10-bit(MOV)	MovieProResToneMode (section 6.5.3.5)
0x00110C00	ProRes RAW HQ 12-bit(MOV)	MovieProResRawHq12bitToneMode (section 6.5.3.6)

Do Not Copy

6.5.3.3 MovieH265ToneMode

Property Specifications

Property Code	0x0001D001
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [SDR]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video file type - H.265 10-bit (MOV) tone mode” in the video recording menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	SDR
1	N-Log
2	HLG

6.5.3.4 MovieNRaw12bitToneMode

Property Specifications

Property Code	0x0001D028
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [SDR]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video file type – N-RAW 12-bit (NEV) tone mode” in the video recording menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	SDR
1	N-Log

Do Not Copy

6.5.3.5 MovieProResToneMode

Property Specifications

Property Code	0x0001D000
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [SDR]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video file type - ProRes 422 HQ 10-bit(MOV) tone mode” in the video recording menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	SDR
1	N-Log

6.5.3.6 MovieProResRawHq12bitToneMode

Property Specifications

Property Code	0x0001D029
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [SDR]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video file type - ProRes RAW HQ 12-bit(MOV) tone mode” in the video recording menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	SDR
1	N-Log

Do Not Copy

6.5.3.7 MovieRecordScreenSize

○ Property Specifications

Property Code	0xD0A0
DataType	UINT64
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0F000870001E0000 [3840×2160 30p]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image size/frame rate” in the video recording menu.

○ Property Details

This property represents the setting value of the menu, but if the setting prohibition condition is met, it represents the control value of the camera.

The following values are assigned to each bit of Property Value.

Bit	Bit number	Description
48-63	16	Horizontal resolution
32-47	16	Vertical resolution
24-31	8	Reserved (0)
16-23	8	Frame rate
14-15	2	Scan type
8-13	6	Special shooting
0-7	8	Special shooting supplementary information

Horizontal resolution / Vertical resolution / Frame rate

The resolution or frame rate values are assigned.

Scan type

Value	Description
0	p (Progressive)
1	i (Interlace)
From 2 to 3	Reserved

Special shooting

Value	Description
0	Normal
1	Slow-motion
2	Crop
From 3 to 63	Reserved

Special shooting supplementary information

If there is no supplementary information, it is fixed to 0.
In the case of slow motion, the value is 10 times the slow magnification.

Value	Description
40	x4 slow-motion
50	x5 slow-motion

Do Not Copy

○ Property Value

The valid PropertyValues are shown below.
PropertyValue changes depending on the setting of MovieFileType property (section 6.5.3.2).

Property Value	Description	MovieFileType				
		H.264	H.265	N-RAW	ProRes 422 HQ	ProRes RAW HQ
0x20401224003C0000	8256×4644 60p	-	-	✓	-	-
0x2040122400320000	8256×4644 50p	-	-	✓	-	-
0x20401224001E0000	8256×4644 30p	-	-	✓	-	-
0x2040122400190000	8256×4644 25p	-	-	✓	-	-
0x2040122400180000	8256×4644 24p	-	-	✓	-	-
0x1020091200780000	4128×2322 120p	-	-	✓	-	-
0x1020091200640000	4128×2322 100p	-	-	✓	-	-
0x10200912003C0000	4128×2322 60p	-	-	✓	-	✓
0x1020091200320000	4128×2322 50p	-	-	✓	-	✓
0x10200912001E0000	4128×2322 30p	-	-	✓	-	✓
0x1020091200190000	4128×2322 25p	-	-	✓	-	✓
0x1020091200180000	4128×2322 24p	-	-	✓	-	✓
0x15100BD8003C0000	5392×3032 60p	-	-	✓	-	-
0x15100BD800320000	5392×3032 50p	-	-	✓	-	-
0x15100BD8001E0000	5392×3032 30p	-	-	✓	-	✓
0x15100BD800190000	5392×3032 25p	-	-	✓	-	✓
0x15100BD800180000	5392×3032 24p	-	-	✓	-	✓
0x1E0010E0001E0000	7680×4320 30p	-	✓	-	-	-
0x1E0010E000190000	7680×4320 25p	-	✓	-	-	-
0x1E0010E000180000	7680×4320 24p	-	✓	-	-	-
0x0F00087000780000	3840×2160 120p	-	✓	✓	-	-
0x0F00087000640000	3840×2160 100p	-	✓	✓	-	-
0x0F000870003C0000	3840×2160 60p	-	✓	-	✓	✓
0x0F00087000320000	3840×2160 50p	-	✓	-	✓	✓
0x0F000870001E0000	3840×2160 30p	-	✓	-	✓	-
0x0F00087000190000	3840×2160 25p	-	✓	-	✓	-
0x0F00087000180000	3840×2160 24p	-	✓	-	✓	-
0x0780043800780000	1920×1080 120p	-	✓	-	✓	-
0x0780043800640000	1920×1080 100p	-	✓	-	✓	-
0x07800438003C0000	1920×1080 60p	✓	✓	-	✓	-
0x0780043800320000	1920×1080 50p	✓	✓	-	✓	-
0x07800438001E0000	1920×1080 30p	✓	✓	-	-	-
0x0780043800190000	1920×1080 25p	✓	✓	-	-	-
0x0780043800180000	1920×1080 24p	✓	✓	-	-	-
0x07800438001E0128	1920×1080 30p 4x Slow	✓	-	-	-	-
0x0780043800190128	1920×1080 25p 4x Slow	✓	-	-	-	-
0x0780043800180132	1920×1080 24p 5x Slow	✓	-	-	-	-

Do Not Copy

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	[8256×4644], [7680×4320] or [4128×2322] is set when a DX lens is mounted.

6.5.3.8 MovieQualityNRaw

○ Property Specifications

Property Code	0x0001D02A
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [High Quality]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video Quality” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Normal Quality
1	High Quality

Do Not Copy

6.5.3.9 MovieCaptureAreaCrop

○ Property Specifications

Property Code	0xD20F
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [FX]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image area - Choose image area” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	FX
2	DX

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieRecordScreenSize property (section 6.5.3.7) is set to [7680×4320].
	DX lens is mounted on the camera.
	MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].

Do Not Copy

6.5.3.10 ExtendedOverSampling

○ Property Specifications

Property Code	0x0001D01E
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Extended Over Sampling” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.3.11 MovieISOAutoHighLimit

○ Property Specifications

Property Code	0xD0AE
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	25600 [ISO 25600]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video ISO sensitivity settings – Maximum sensitivity” in the video recording menu.

○ Property Details

When the following conditions are satisfied, the minimum value and maximum value for Video ISO sensitivity are limited. The setting effective range can be confirmed in the descriptor of this property.

No	Condition
1	The MovieLogOutput property (section 6.5.12.4) is [On].
2	MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].

○ Property Value

The valid PropertyValues are shown below.

The value of PropertyValue changes depending on the value of IsoStep property (section 6.5.4.13).

Property Value	Description	IsoStep	
		1/3 step	1 step
200	200	✓	✓
250	250	✓	–
320	320	✓	–
400	400	✓	✓
500	500	✓	–
640	640	✓	–
800	800	✓	✓
1000	1000	✓	–
1250	1250	✓	–
1600	1600	✓	✓
2000	2000	✓	–
2500	2500	✓	–
3200	3200	✓	✓
4000	4000	✓	–
5000	5000	✓	–
6400	6400	✓	✓
8000	8000	✓	–
10000	10000	✓	–
12800	12800	✓	✓
16000	16000	✓	–
20000	20000	✓	–
25600	25600	✓	✓

Do Not Copy

32000	Hi 0.3	✓	-
40000	Hi 0.7	✓	-
51200	Hi 1.0	✓	✓
102400	Hi 2.0	✓	✓

Do Not Copy

6.5.3.12 MovieISOAutoControl

○ Property Specifications

Property Code	0xD0AD
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video ISO sensitivity settings – Auto ISO control (mode M)” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than M during video recording.

Do Not Copy

6.5.3.13 MovieExposureIndex

○ Property Specifications

Property Code	0xD1AA
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	100 [ISO100]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video ISO sensitivity settings – ISO sensitivity (mode M)” in the video recording menu.

○ Property Details

When the following conditions are satisfied, the minimum value and maximum value for Video ISO sensitivity are limited. The setting effective range can be confirmed in the descriptor of this property.

No	Condition
1	The MovieLogOutput property (section 6.5.12.4) is [On].
2	MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].
3	MovieFileType property is set to [H.265 10-bit (MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log] or [HLG].
4	MovieFileType property (section 6.5.3.2) is set to [ProRes 422 HQ 10-bit (MOV)] and MovieProResToneMode property (section 6.5.3.5) is set to [N-Log].

○ Property Value

The valid PropertyValues are shown below.

The value of PropertyValue changes depending on the value of IsoStep property (section 6.5.4.13).

When the MovieExtendedIsoStepManual property (section 6.5.4.55) is [On (1/6 steps)], the values of 1/6 steps are listed regardless of the value of the IsoStep property. However, for Lo sensitivity, if the IsoStep property is "1 step", the value of "1 step" is listed.

If the tone mode of the video file format is N-Log, values below ISO800 are Lo sensitivity.

* PropertyValue with Lo notation in the content is targeted.

Property Value	Description	Extended (1/6 step)	IsoStep	
			1/3 step	1 step
64	64	✓	✓	✓
72	72	✓	–	–
80	80	✓	✓	–
90	90	✓	–	–
100	100	✓	✓	✓
110	110	✓	–	–
125	125	✓	✓	–
140	140	✓	–	–
160	160	✓	✓	–
180	180	✓	–	–
200	200(Lo 2.0)	✓	✓	✓
220	220	✓	–	–
250	250(Lo 1.7)	✓	✓	–
280	280	✓	–	–
320	320(Lo 1.3)	✓	✓	–

Do Not Copy

360	360	✓	–	–
400	400(Lo 1.0)	✓	✓	✓
450	450	✓	–	–
500	500(Lo 0.7)	✓	✓	–
560	560	✓	–	–
640	640(Lo 0.3)	✓	✓	–
720	720	✓	–	–
800	800	✓	✓	✓
900	900	✓	–	–
1000	1000	✓	✓	–
1100	1100	✓	–	–
1250	1250	✓	✓	–
1400	1400	✓	–	–
1600	1600	✓	✓	✓
1800	1800	✓	–	–
2000	2000	✓	✓	–
2200	2200	✓	–	–
2500	2500	✓	✓	–
2800	2800	✓	–	–
3200	3200	✓	✓	✓
3600	3600	✓	–	–
4000	4000	✓	✓	–
4500	4500	✓	–	–
5000	5000	✓	✓	–
5600	5600	✓	–	–
6400	6400	✓	✓	✓
7200	7200	✓	–	–
8000	8000	✓	✓	–
9000	9000	✓	–	–
10000	10000	✓	✓	–
11400	11400	✓	–	–
12800	12800	✓	✓	✓
14400	14400	✓	–	–
16000	16000	✓	✓	–
18000	18000	✓	–	–
20000	20000	✓	✓	–
22800	22800	✓	–	–
25600	25600	✓	✓	✓
32000	Hi 0.3	✓	✓	–
40000	Hi 0.7	✓	✓	–
51200	Hi 1.0	✓	✓	✓
102400	Hi 2.0	✓	✓	✓

Do Not Copy

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than M during video recording.

6.5.3.14 MovieWhiteBalance

○ Property Specifications

Property Code	0xD23A
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x8015 [Same as photo settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “White Balance” in the video recording menu.

○ Property Details

When the property value is set to [Same as photo settings], the white balance value that is set in the WhiteBalance (section 6.5.1.4) is applied to the video white balance. In this case, the photo white balance setting is used for video setting as in the following table.

Item	Property
Auto – Type	WbAutoType(6.5.2.20)
Auto - FineTune	WbTuneAuto(6.5.2.21)
Incandescent - FineTune	WbTuneIncandescent(6.5.2.26)
Fluorescent - Type	WbFluorescentType(6.5.2.27)
Fluorescent - FineTune	WbTuneFluorescent(6.5.2.28)
Sunny - FineTune	WbTuneSunny(6.5.2.23)
Flash - FineTune	WbTuneFlash(6.5.2.29)
Cloudy - FineTune	WbTuneCloudy(6.5.2.24)
Shade - FineTune	WbTuneShade(6.5.2.25)
Choose color temp - Value	WbColorTemp(6.5.2.30)
Choose color temp - FineTune	WbTuneColorTemp(6.5.2.31)
Natural light auto - FineTune	WbTuneNatural(6.5.2.22)
Preset manual	WbPresetDataNo(6.5.2.32)

Regardless of whether the PropertyValue is [Same as photo settings], each of the following white balance settings is linked with the still image setting.

Item	Property
Preset manual-D1- Comment	WbPresetDataComment1(6.5.2.33)
Preset manual-D2- Comment	WbPresetDataComment2(6.5.2.34)
Preset manual-D3- Comment	WbPresetDataComment3(6.5.2.35)
Preset manual-D4- Comment	WbPresetDataComment4(6.5.2.36)
Preset manual-D5- Comment	WbPresetDataComment5(6.5.2.37)
Preset manual-D6- Comment	WbPresetDataComment6(6.5.2.38)
Preset manual-D1- Data	WbPresetDataValue1(6.5.2.39)
Preset manual-D2- Data	WbPresetDataValue2(6.5.2.40)
Preset manual-D3- Data	WbPresetDataValue3(6.5.2.41)
Preset manual-D4- Data	WbPresetDataValue4(6.5.2.42)
Preset manual-D5- Data	WbPresetDataValue5(6.5.2.43)
Preset manual-D6- Data	WbPresetDataValue6(6.5.2.44)
Preset manual-D1- FineTune	WbTunePreset1(6.5.2.45)
Preset manual-D2- FineTune	WbTunePreset2(6.5.2.46)

Do Not Copy

Preset manual-D3- FineTune	WbTunePreset3(6.5.2.47)
Preset manual-D4- FineTune	WbTunePreset4(6.5.2.48)
Preset manual-D5- FineTune	WbTunePreset5(6.5.2.49)
Preset manual-D6- FineTune	WbTunePreset6(6.5.2.50)
Preset manual-D1- Protect	WbPresetProtect1(6.5.2.51)
Preset manual-D2- Protect	WbPresetProtect2(6.5.2.52)
Preset manual-D3- Protect	WbPresetProtect3(6.5.2.53)
Preset manual-D4- Protect	WbPresetProtect4(6.5.2.54)
Preset manual-D5- Protect	WbPresetProtect5(6.5.2.55)
Preset manual-D6- Protect	WbPresetProtect6(6.5.2.56)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Auto
0x0004	Sunny
0x0005	Fluorescent
0x0006	Incandescent
0x8010	Cloudy
0x8011	Shade
0x8012	Choose color temp.
0x8013	Preset manual
0x8015	Same as photo settings
0x8016	Natural light auto

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	[Same as photo settings] was set during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.15 MovieWbAutoType

○ Property Specifications

Property Code	0xD211
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	2 [Keep white]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the type of “White balance - Auto” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Keep overall atmosphere
1	Keep warm lighting colors
2	Keep white

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.16 MovieWbTuneAuto

○ Property Specifications

Property Code	0xD212
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Auto” in the video recording menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.17 MovieWbTuneNatural

○ Property Specifications

Property Code	0xD23C
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Natural light auto” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.18 MovieWbTuneSunny

○ Property Specifications

Property Code	0xD216
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Direct sunlight” in the video recording menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.19 MovieWbTuneCloudy

○ Property Specifications

Property Code	0xD218
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Cloudy” in the video recording menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.20 MovieWbTuneShade

○ Property Specifications

Property Code	0xD219
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Shade” in the video recording menu.
For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.21 MovieWbTuneIncandescent

○ Property Specifications

Property Code	0xD213
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Incandescent” in the video recording menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.22 MovieWbFluorescentType

○ Property Specifications

Property Code	0xD214
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	3 [White fluorescent lamp]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the light source of “White balance - Fluorescent” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
3	White fluorescent lamp
4	Day white fluorescent lamp
5	Daylight fluorescent lamp

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.23 MovieWbTuneFluorescent

○ Property Specifications

Property Code	0xD215
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance - Fluorescent” in the video recording menu. For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.24 MovieWbColorTemp

○ Property Specifications

Property Code	0xD21A
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	5000 [K]
Property Value	From 2500 K to 10000 K (increase or decrease in units of 10 K)

○ Property Outline

Indicates the color temperature (K) of “White balance – Choose color temp.” in the video recording menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.25 MovieWbTuneColorTemp

○ Property Specifications

Property Code	0xD21B
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine tuning volume of “White balance – Choose color temp.” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.26 MovieWbPresetDataNo

○ Property Specifications

Property Code	0xD21C
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [d-1]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “White balance – Preset manual” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	d-1
2	d-2
3	d-3
4	d-4
5	d-5
6	d-6

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].
	The MovieWhiteBalance property (section 6.5.3.14) is set to [Same as photo settings] during video recording.

Do Not Copy

6.5.3.27 MovieWbPresetDataComment1

○ Property Specifications

Property Code	0xD21D
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-1” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment1 property (section 6.5.2.33)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect1 property (section 6.5.3.45) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.28 MovieWbPresetDataComment2

○ Property Specifications

Property Code	0xD21E
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-2” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment2 property (section 6.5.2.34)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect2 property (section 6.5.3.46) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.29 MovieWbPresetDataComment3

○ Property Specifications

Property Code	0xD21F
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-3” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment3 property (section 6.5.2.35)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect3 property (section 6.5.3.47) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.30 MovieWbPresetDataComment4

○ Property Specifications

Property Code	0xD220
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-4” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment4 property (section 6.5.2.36)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect4 property (section 6.5.3.48) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.31 MovieWbPresetDataComment5

○ Property Specifications

Property Code	0xD221
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-5” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment5 property (section 6.5.2.37)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect5 property (section 6.5.3.49) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.32 MovieWbPresetDataComment6

○ Property Specifications

Property Code	0xD222
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	36 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the comment of “White balance – Preset manual – d-6” in the video recording menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).
When the string is shorter than 36 characters, the shortage is padded with spaces (0x20).
For the characters that can be input (ASCII code), refer to section 10.1.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.
Linked properties: WbPresetDataComment6 property (section 6.5.2.38)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.
Access_Denied	The MovieWbPresetProtect6 property (section 6.5.3.50) is [On].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.33 MovieWbPresetDataValue1

○ Property Specifications

Property Code	0xD223
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-1” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue1 property (section 6.5.2.39)

6.5.3.34 MovieWbPresetDataValue2

○ Property Specifications

Property Code	0xD224
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-2” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue2 property (section 6.5.2.40)

Do Not Copy

6.5.3.35 MovieWbPresetDataValue3

○ Property Specifications

Property Code	0xD225
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-3” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue3 property (section 6.5.2.41)

6.5.3.36 MovieWbPresetDataValue4

○ Property Specifications

Property Code	0xD226
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-4” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue4 property (section 6.5.2.42)

Do Not Copy

6.5.3.37 MovieWbPresetDataValue5

○ Property Specifications

Property Code	0xD227
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-5” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue5 property (section 6.5.2.43)

6.5.3.38 MovieWbPresetDataValue6

○ Property Specifications

Property Code	0xD228
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x08000800 [Rgain: 1.0, Bgain: 1.0]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the white balance data of “White balance – Preset manual – d-6” in the video recording menu.

○ Property Details

Refer to PreWbGainValue in SetPreWbData (section 6.2.8.1) about the format of the PropertyValue.

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetDataValue6 property (section 6.5.2.44)

Do Not Copy

6.5.3.39 MovieWbTunePreset1

○ Property Specifications

Property Code	0xD229
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-1” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset1 property (section 6.5.2.45)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect1 property (section 6.5.3.45) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-1].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.40 MovieWbTunePreset2

○ Property Specifications

Property Code	0xD22A
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-2” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset2 property (section 6.5.2.46)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect2 property (section 6.5.3.46) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-2].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.41 MovieWbTunePreset3

○ Property Specifications

Property Code	0xD22B
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-3” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset3 property (section 6.5.2.47)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect3 property (section 6.5.3.47) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-3].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.42 MovieWbTunePreset4

○ Property Specifications

Property Code	0xD22C
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-4” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset4 property (section 6.5.2.48)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect4 property (section 6.5.3.48) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-4].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.43 MovieWbTunePreset5

○ Property Specifications

Property Code	0xD22D
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-5” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset5 property (section 6.5.2.49)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect5 property (section 6.5.3.49) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-5].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.44 MovieWbTunePreset6

○ Property Specifications

Property Code	0xD22E
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the white balance fine tuning volume of “White balance – Preset manual – d-6” in the video recording menu.

For the details of the fine tuning volume, refer to section 11.5.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbTunePreset6 property (section 6.5.2.50)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieWbPresetProtect6 property (section 6.5.3.50) is [On].
	The MovieWbPresetDataNo property (section 6.5.3.26) is set to anything other than [d-6].
	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.45 MovieWbPresetProtect1

○ Property Specifications

Property Code	0xD22F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-1” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect1 property (section 6.5.2.51)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.46 MovieWbPresetProtect2

○ Property Specifications

Property Code	0xD230
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-2” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect2 property (section 6.5.2.52)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.47 MovieWbPresetProtect3

○ Property Specifications

Property Code	0xD231
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-3” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect3 property (section 6.5.2.53)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.48 MovieWbPresetProtect4

○ Property Specifications

Property Code	0xD232
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-4” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect4 property (section 6.5.2.54)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.49 MovieWbPresetProtect5

○ Property Specifications

Property Code	0xD233
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-5” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect5 property (section 6.5.2.55)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.50 MovieWbPresetProtect6

○ Property Specifications

Property Code	0xD234
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the protection of “White balance – Preset manual – d-6” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: WbPresetProtect6 property (section 6.5.2.56)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	AWBLockStatus property (section 6.5.6.7) is set to [Locked].

Do Not Copy

6.5.3.51 MovieActive-D-Lighting

○ Property Specifications

Property Code	0xD23B
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0000 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Active D-Lighting” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High
0x0005	Extra high

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit (MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log] or [HLG].
	MovieFileType property (section 6.5.3.2) is set to [ProRes 422 HQ 10-bit (MOV)] and MovieProResToneMode property (section 6.5.3.5) is set to [N-Log].
	MovieFileType property is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].

Do Not Copy

6.5.3.52 MovieNoiseReductionHiIso

○ Property Specifications

Property Code	0xD236
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0003 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “High ISO NR” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit (MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log].
	MovieFileType property (section 6.5.3.2) is set to [ProRes 422 HQ 10-bit (MOV)] and MovieProResToneMode property (section 6.5.3.5) is set to [N-Log].
	MovieFileType property is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].

Do Not Copy

6.5.3.53 MovieVignetteControl

○ Property Specifications

Property Code	0xD23E
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x003 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Vignette control” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: VignetteControl property (section 6.5.2.62)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High

Do Not Copy

6.5.3.54 MovieDiffractionCompensation

○ Property Specifications

Property Code	0xD23F
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Diffraction compensation” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: DiffractionCompensation property (section 6.5.2.63)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	MovieFileType property is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].

Do Not Copy

6.5.3.55 MovieAutoDistortion

○ Property Specifications

Property Code	0xD0BC
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Auto distortion control” in the video recording menu.

○ Property Details

The properties of this setting are in both the photo shooting menu and the video recording menu, and if you change one of them, the settings will be the same.

Linked properties: AutoDistortion property (section 6.5.2.64)

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The LensTypeML property (section 6.5.10.2) is set to [Lens whose automatic distortion correction is always effective].

Do Not Copy

6.5.3.56 MovieSkinSoftening

○ Property Specifications

Property Code	0x0001D018
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0064 [Same as photo settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Skin Softening” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Off
0x0002	Low
0x0003	Normal
0x0004	High
0x0064	Same as photo settings

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit (MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log].
	The MovieFileType property is set to "ProRes 422 HQ 10-bit(MOV)" and the MovieProResToneMode property (section 6.5.3.5) is set to "N-Log".
	The MovieFileType property is set to "ProRes RAW HQ 12-bit(MOV)" or "N-RAW 12-bit(NEV)".
	The frame rate of the MovieRecordScreenSize property (section 6.5.3.7) is "100p" or higher.

Do Not Copy

6.5.3.57 MoviePortraitImpressionBalance

○ Property Specifications

Property Code	0x0001D01A
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Portrait Impression Adjustment” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	Mode 1
2	Mode 2
3	Mode 3

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit(MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log].
	The MovieFileType property is set to "ProRes 422 HQ 10-bit(MOV)" and the MovieProResToneMode property (section 6.5.3.5) is set to "N-Log".
	The MovieFileType property is set to "ProRes RAW HQ 12-bit(MOV)" and the MovieProResRawHq12bitToneMode property (section 6.5.3.6) is set to "N-Log".
	The MovieFileType property is set to "N-RAW 12bit(NEV)" and the MovieNRaw12bitToneMode property (section 6.5.3.4) is set to "N-Log".
	The currently set tone mode of the video recording file format is set to "SDR", and the MovieActivePicCtrlItem property (section 6.5.13.2) is set to "Monochrome style" or "Creative Picture Control".
	If all of the following conditions are met. - The currently set tone mode of the video recording file format is set to "SDR". - The MovieActivePicCtrlItem property is set to "Same as photo settings". - The ActivePicCtrlItem property (section 6.5.13.1) is set to "Monochrome style" or "Creative Picture Control".

Do Not Copy

6.5.3.58 DecreaseFlicker

Property Specifications

Property Code	0xD034
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0xFF [Auto]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the setting of “Flicker reduction” in the video recording menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00	50 Hz
0x01	60 Hz
0xFF	Auto

Do Not Copy

6.5.3.59 MovieHighFrequencyFlickerReduction

○ Property Specifications

Property Code	0x0001D032
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [OFF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “High frequency flicker reduction shooting” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
1	ON (High resolution shutter setting)

Do Not Copy

6.5.3.60 MovieExposureMeteringMode

○ Property Specifications

Property Code	0xD1AF
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0003 [Matrix metering]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Exposure metering mode” in video Lv.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0002	Center-weighted metering
0x0003	Matrix metering
0x8010	Highlight-weighted metering

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The AELockStatus property (section 6.5.6.4) is [Locked].

Do Not Copy

6.5.3.61 MovieFocusMode

○ Property Specifications

Property Code	0xD1FA
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	2 [AF-F]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus mode” in video recording.

○ Property Details

If the following conditions are satisfied, it operates with MF mode even when this property is set to AF.

- CPU lens is not mounted.
- The switches on the camera or lens are set to MF.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	AF-S
1	AF-C
2	AF-F
4	MF

Do Not Copy

6.5.3.62 MovieFocusMeteringMode

○ Property Specifications

Property Code	0xD1F8
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x8010 [Single-point AF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “AF-area mode” in video recording.

○ Property Details

In the following cases, this property is set to the single-point AF mode. When the following state is canceled without changing the AF area mode, it returns to the AF area mode which was set immediately before.

- In the case that the MovieFocusMode property (section 6.5.3.61) is [MF].

○ Property Value

The valid PropertyValues are shown below.
The value of PropertyValue changes depending on the value of the video focus mode.

Property Value	Description	Video focus mode setting			
		MF	AF-S	AF-C	AF-F
0x8010	Single-point AF mode	✓	✓	✓	✓
0x8011	Auto-area AF mode	-	✓	✓	✓
0x8018	Wide-area AF (S)	-	✓	✓	✓
0x8019	Wide-area AF (L)	-	✓	✓	✓
0x801E	Wide-area AF (C1)	-	✓	✓	✓
0x801F	Wide-area AF (C2)	-	✓	✓	✓
0x8033	Target tracking AF	-	✓	✓	✓

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The video focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.
	When the HiResZoom property (section 6.5.3.79) is ON and HiResZoom is controlled ON. HiResZoom is ON control when all the following conditions are satisfied. - MovieCaptureAreaCrop property (section 6.5.3.9) is [FX]. - MovieFileType property (section 6.5.3.2) is other than [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)]. - MovieRecordScreenSize property (section 6.5.3.7) is other than [7680×4320] and [3840×2160 120p/100p/60p/50p].

Do Not Copy

6.5.3.63 MovieWideAreaAFC1

○ Property Specifications

Property Code	0x0001D048
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0D03 [13×3]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “AF-area mode – Wide area AF(C1)” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0101	1×1
0x0103	1×3
0x0107	1×7
0x0501	5×1
0x0503	5×3
0x0507	5×7
0x0901	9×1
0x0903	9×3
0x0907	9×7
0x0D01	13×1
0x0D03	13×3
0x0D07	13×7

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The video focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.
	When the HiResZoom property (section 6.5.3.79) is ON and HiResZoom is controlled ON. Refer to the MovieFocusMeteringMode property (section 6.5.3.62) for conditions for HiResZoom ON control.

Do Not Copy

6.5.3.64 MovieWideAreaAFC2

○ Property Specifications

Property Code	0x0001D049
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0507 [5×7]
Property Value	Same as the MovieWideAreaAFC1 property (section 6.5.3.63)

○ Property Outline

Indicates “AF-area mode – Wide area AF(C2)” in the video recording menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The video focus mode is set to the manual focus. NOTE) Except when the focus mode is set to MF due to the CPU lens not attached or the operation with the camera dial/switch.
	When the HiResZoom property (section 6.5.3.79) is ON and HiResZoom is controlled ON. Refer to the MovieFocusMeteringMode property (section 6.5.3.62) for conditions for HiResZoom ON control.

Do Not Copy

6.5.3.65 MovieAFSubjectDetection

○ Property Specifications

Property Code	0x0001D006
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Subject detection setting in AF” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	Auto
2	People
3	Animal
4	Vehicle
5	Birds
6	Airplanes

Do Not Copy

6.5.3.66 AFWhenSubjectNotDetected

○ Property Specifications

Property Code	0x0001D014
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “AF drive when subject is not detected” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.3.67 MovieVibrationReduction

○ Property Specifications

Property Code	0xD1F9
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	100 [Same as photo settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Vibration reduction” in the video recording menu.

○ Property Details

The supported value changes depending on the type of mounted lens.

○ Property Value

The valid PropertyValues are shown below.

When the lens anti- vibration mode is [Normal] or [Sports]:

Property Value	Description
0	Off
1	Normal
2	Sports
100	Same as photo settings

When the lens anti- vibration mode is only [Normal]:

Property Value	Description
0	Off
1	On
100	Same as photo settings

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The mounted lens has VR switch.
	The LensSort property (section 6.5.10.1) is set to [Not mounted] and the FmmManualSetting2 property (section 6.5.5.2) is set to [0.0mm].

Do Not Copy

6.5.3.68 ElectronicVR

○ Property Specifications

Property Code	0xD314
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Electronic VR” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
	MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].
	The MovieRecordScreenSize property (section 6.5.3.7) is set to [7680 x 4320], [120p, 100p] or slow-motion video.
	When the HiResZoom property (section 6.5.3.79) is ON and HiResZoom is controlled ON. HiResZoom is ON control when all the following conditions are satisfied. - MovieCaptureAreaCrop property (section 6.5.3.9) is [FX]. - MovieFileType property (section 6.5.3.2) is other than [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)]. - MovieRecordScreenSize property (section 6.5.3.7) is other than [7680×4320] and [3840×2160 120p/100p/60p/50p].

Do Not Copy

6.5.3.69 MovieRecordMicrophoneLevel

○ Property Specifications

Property Code	0xD0A2
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Auto sensitivity]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Microphone sensitivity” in the video recording menu.

○ Property Details

Switching between [Auto sensitivity/Manual sensitivity] and [Microphone off] cannot be performed during video recording.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Auto sensitivity
1	Manual sensitivity
2	Microphone off

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	[Microphone off] is set during video recording.
	[Microphone off] is set while [Auto sensitivity] or [Manual sensitivity] is specified during video recording.
	The MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video.

Do Not Copy

6.5.3.70 MovieRecordMicrophoneLevelValue

○ Property Specifications

Property Code	0xD0A8
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	15
Property Value	From 1 to 20

○ Property Outline

Indicates the microphone sensitivity of “Microphone sensitivity – Manual sensitivity” in the video recording menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieRecordMicrophoneLevel property (section 6.5.3.69) is set to anything other than [Manual sensitivity].
	The MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video.

Do Not Copy

6.5.3.71 MovieAttenuator

○ Property Specifications

Property Code	0xD23D
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Attenuator” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieRecordMicrophoneLevel property (section 6.5.3.69) is set to [Microphone off] during video recording.
	The MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video.

Do Not Copy

6.5.3.72 MovieRecordingZone

○ Property Specifications

Property Code	0xD0AC
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Wide range]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Frequency response” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Wide range
1	Vocal range

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The MovieRecordMicrophoneLevel property (section 6.5.3.69) is set to [Microphone off] during video recording.
	The MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video.

Do Not Copy

6.5.3.73 MovieWindNoiseReduction

○ Property Specifications

Property Code	0xD0AA
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Wind noise reduction” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	An external microphone is connected.
	The MovieRecordMicrophoneLevel property (section 6.5.3.69) is set to [Microphone off] during video recording.
	The MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video.

Do Not Copy

6.5.3.74 RecordTimeCodes

○ Property Specifications

Property Code	0xD1FB
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Time codes – Recording time codes” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On
2	On (with HDMI external output)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During time not set warning.

Do Not Copy

6.5.3.75 CountUpMethod

○ Property Specifications

Property Code	0xD1FC
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Rec Run]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Time codes – Count up method” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Rec Run
1	Free Run

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The RecordTimeCodes property (section 6.5.3.74) is set to [Off].
	During time not set warning.
	When connection with ATOMOS AirGlu BT is ON.

Do Not Copy

6.5.3.76 TimeCodeOrigin

○ Property Specifications

Property Code	0xD1FD
DataType	AUINT8
Description form	None
Get / Set	Get, Get / Set
Default Value	Array[0]：2 [Current time] From Array[1] to [4]：0
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Time codes – Time code origin” in the video recording menu.

○ Property Details

If Array[0] (Time code origin nformation) is set to the value other than 1 (Manual input), it is as follows.

Get/Set	Description
Get operation	The values from Array[1] to Array[4] are not fixed.
Set operation	Any values set from Array[1] to Array[4] are ignored.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	
NumElement	Time code origin nformation, Number of elements of time	
Array[0]	Time code origin nformation	
	0	Reset
	1	Manual input
	2	Current time
Array[1]	Hour (From 00 to 23)	
Array[2]	Minute (From 00 to 59)	
Array[3]	Second (From 00 to 59)	
Array[4]	Frame *1 24fps (From 00 to 23) 25/50/100fps (From 00 to 24) 30/60/120fps (From 00 to 29)	

*1 The range of the settable value changes depending on the frame rate of the MovieRecordScreenSize property (section 6.5.3.7).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The RecordTimeCodes property (section 6.5.3.74) is set to [Off].
	During time not set warning.
	When connection with ATOMOS AirGlu BT is ON.

Do Not Copy

6.5.3.77 DropFrame

○ Property Specifications

Property Code	0xD1FE
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Time codes – Drop frame” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The RecordTimeCodes property (section 6.5.3.74) is set to [Off].
	During time not set warning.
	When connection with ATOMOS AirGlu BT is ON.

Do Not Copy

6.5.3.78 ExternalRecordingControl

○ Property Specifications

Property Code	0xD1DE
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “External recording control (HDMI)” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.3.79 HiResZoom

○ Property Specifications

Property Code	0x0001D033
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [OFF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Hi-Res Zoom” in the video recording menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
1	ON

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	MovieCaptureAreaCrop property (section 6.5.3.9) is other than [FX].
	MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].
	MovieRecordScreenSize property (section 6.5.3.7) is set to [7680×4320] or [3840×2160 120p/100p/60p/50p].

Do Not Copy

6.5.4 Vendor (Custom Settings Menu)

6.5.4.1 CustomSettingBank

○ Property Specifications

Property Code	0xD040
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [A]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Custom settings bank” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	A
2	B
3	C
4	D

Do Not Copy

6.5.4.2 CustomBankNameA

○ Property Specifications

Property Code	0xD041
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “A” in the custom settings menu.

○ Property Details

The PropertyValue is an optional string of 20 characters or shorter (not including the null character).

When the string is shorter than 20 characters, the shortage is padded with spaces (0x20).

For the characters that can be input (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

6.5.4.3 CustomBankNameB

○ Property Specifications

Property Code	0xD042
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “B” in the custom settings menu.

The method of using this property is the same as that of the CustomBankNameA property (section 6.5.4.2).

○ Response Code

When the value is set under the following conditions, an error response is made as shown below and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

Do Not Copy

6.5.4.4 CustomBankNameC

○ Property Specifications

Property Code	0xD043
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “C” in the custom settings menu.

The method of using this property is the same as that of the CustomBankNameA property (section 6.5.4.2).

○ Response Code

When the value is set under the following conditions, an error response is made as shown below and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

6.5.4.5 CustomBankNameD

○ Property Specifications

Property Code	0xD044
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	20 characters of spaces (0x20)
Property Value	(Depends on the user setting)

○ Property Outline

Indicates the name of “D” in the custom settings menu.

The method of using this property is the same as that of the CustomBankNameA property (section 6.5.4.2).

○ Response Code

When the value is set under the following conditions, an error response is made as shown below and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 20 characters is set.

Do Not Copy

6.5.4.6 DynamicAFonAFC

○ Property Specifications

Property Code	0xD048
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Release]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus – AF-C priority selection” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Release
2	Focus/ Release
3	Focus

6.5.4.7 DynamicAFonAFS

○ Property Specifications

Property Code	0xD049
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	3 [Focus]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus – AF-S priority selection” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Release
3	Focus

Do Not Copy

6.5.4.8 AFStillLockOnAcross

Property Specifications

Property Code	0xD046
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	3
Property Value	From 1 [High sensitivity] to 5 [Low sensitivity]

Property Outline

Indicates “Focus – Focus tracking with lock-on – Across” in the custom settings menu.

6.5.4.9 AFStillLockOnMove

Property Specifications

Property Code	0xD047
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [Smooth]
Property Value	From 1 [Smooth] to 2 [Random]

Property Outline

Indicates “Focus – Focus tracking with lock-on – Move” in the custom settings menu.

Do Not Copy

6.5.4.10 EnableAFAreaPoint

○ Property Specifications

Property Code	0xD08D
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [All points]
Property Value	Refer to Property Value in this section.


○ Property Outline


Indicates “Focus – Number of focus points” in the custom settings menu.

○ Property Details

If the selected focus point is not included in the skip when the focus points are switched from all points to skip, the selected focus point is changed automatically.

A change pattern of focus points is shown below.
The focus points on the left figure (All points) are changed to the focus points on the right figure (Skip).

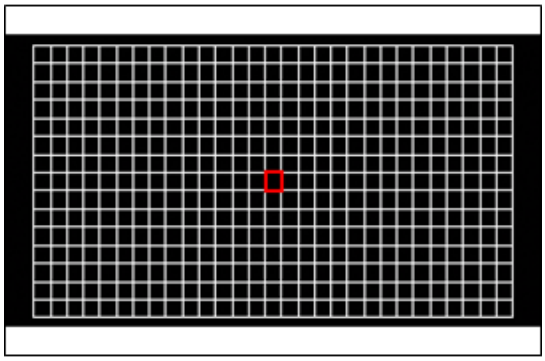

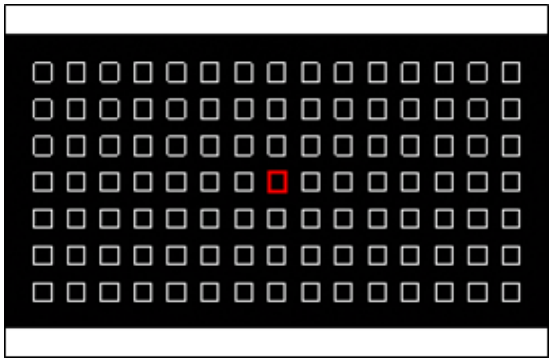

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	All points
1	Skip

Do Not Copy

6.5.4.11 FocusModeRestrictions

Property Specifications

Property Code	0xD177
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0xFF [No restrictions]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Focus – Focus mode restrictions” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	AF-S
1	AF-C
4	Manual focus
0xFF	No restrictions

Do Not Copy

6.5.4.12 FocusAreaSelect

○ Property Specifications

Property Code	0xD04F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [No wrap]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Focus – Focus point wrap-around” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	No wrap
1	Wrap

Do Not Copy

6.5.4.13 IsoStep

○ Property Specifications

Property Code	0xD055
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	2 [1/3 step (correction 1/3 step)]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Metering/exposure – ISO sensitivity step value” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
2	1/3 step
6	1 step

6.5.4.14 ExposureEVStep

○ Property Specifications

Property Code	0xD056
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	2 [1/3 step]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Metering/exposure – EV steps for exposure cntrl” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
2	1/3 step (correction 1/3 step)
3	1/2 step (correction 1/2 step)
6	1 step (correction 1/3 step)

Do Not Copy

6.5.4.15 MatrixMetering

Property Specifications

Property Code	0xD09F
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Metering/exposure – Face detection on matrix metering” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

6.5.4.16 CenterWeightedExRange

○ Property Specifications

Property Code	0xD059
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Metering/exposure – Center-weighted area” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Small
1	Normal
0xFF	Average

Do Not Copy

6.5.4.17 ExposureBaseCompMatrix

○ Property Specifications

Property Code	0xD05A
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [0.0 EV]
Property Value	From -6 [-1.0 EV] to +6 [+1.0 EV]

○ Property Outline

Indicates “Metering/exposure – Fine-tune optimal exposure - Matrix metering” in the custom settings menu.

6.5.4.18 ExposureBaseCompCenter

○ Property Specifications

Property Code	0xD05B
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [0.0 EV]
Property Value	From -6 [-1.0 EV] to +6 [+1.0 EV]

○ Property Outline

Indicates “Metering/exposure – Fine-tune optimal exposure - Center-weighted metering” in the custom settings menu.

6.5.4.19 ExposureBaseCompSpot

○ Property Specifications

Property Code	0xD05C
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [0.0 EV]
Property Value	From -6 [-1.0 EV] to +6 [+1.0 EV]

○ Property Outline

Indicates “Metering/exposure – Fine-tune optimal exposure - Spot metering” in the custom settings menu.

Do Not Copy

6.5.4.20 ExposureBaseCompHighlight

○ Property Specifications

Property Code	0xD239
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [0.0 EV]
Property Value	From -6 [-1.0 EV] to +6 [+1.0 EV]

○ Property Outline

Indicates “Metering/exposure – Fine-tune optimal exposure - Highlight-weighted metering” in the custom settings menu.

Do Not Copy

6.5.4.21 KeepExposureWhenFNumberChanges

○ Property Specifications

Property Code	0xD1C6
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Metering/exposure – Maintaining exposure when the aperture value changes” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	Shutter speed
2	ISO sensitivity

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	[Shutter speed] is set when the HighFrequencyFlickerReduction property (section 6.5.2.68) is [ON (high-resolution shutter setting)].

Do Not Copy

6.5.4.22 CSpeedHigh

○ Property Specifications

Property Code	0xD186
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	20 [20 fps]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – Continuous shooting speed – Continuous high-speed” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
10	10 fps
12	12 fps
15	15 fps
20	20 fps

6.5.4.23 CspeedLow

○ Property Specifications

Property Code	0xD068
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	5 [5 fps]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – Continuous shooting speed – Continuous low-speed” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	1 fps
2	2 fps
3	3 fps
4	4 fps
5	5 fps
6	6 fps
8	8 fps
10	10 fps

Do Not Copy

6.5.4.24 BurstMaxNumber

○ Property Specifications

Property Code	0xD069
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [No limit]
Property Value	0 [No limit], From 1 [One frame] to 200 [200 frames]

○ Property Outline

Indicates “Shooting/display – Max. continuous release” in the custom settings menu.

○ Property Details

1 to 50 frames can be set in 1 frame units, 50 to 100 frames can be set in 10 frame units, and 100 to 200 frames can be set in 20 frame units.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Value	A value that does not satisfy the frame unit is set.

Do Not Copy

6.5.4.25 PreCapturePreReleaseBurst

○ Property Specifications

Property Code	0x0001D025
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – C30/C120 Setting – Pre-release burst” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
3	0.3 second
5	0.5 second
10	1.0 second

6.5.4.26 PreCapturePostReleaseBurst

○ Property Specifications

Property Code	0x0001D026
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0xFF [Maximum]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – C30/C120 Setting – Post-release burst” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
10	1.0 second
20	2.0 second
30	3.0 second
0xFF	Maximum

Do Not Copy

6.5.4.27 ExposureDelay

○ Property Specifications

Property Code	0xD06A
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [OFF]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – Exposure delay mode” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
2	0.2 second
5	0.5 second
10	1 second
20	2 second
30	3 second

Do Not Copy

6.5.4.28 ExtendedShutterSpeedsManual

Property Specifications

Property Code	0xD16E
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Shooting/display – Extended Shutter Speed (M)” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.4.29 NumberingMode

○ Property Specifications

Property Code	0xD06C
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – File number sequence” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].

Do Not Copy

6.5.4.30 ViewMode

○ Property Specifications

Property Code	0xD17B
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Priority to shooting settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – View mode (photo Lv)” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Priority to shooting settings
1	Ease of viewing

6.5.4.31 ViewModeShowEffectsOfSettings

○ Property Specifications

Property Code	0x0001D036
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Only when flash is not used]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – View mode (photo Lv) – Show effects of settings” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Only when flash is not used
1	Always

Do Not Copy

6.5.4.32 ViewModeEaseOfViewing

○ Property Specifications

Property Code	0x0001D007
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – View mode (photo Lv) – Ease of viewing” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Auto
1	Custom

6.5.4.33 ViewModeWhiteBalance

○ Property Specifications

Property Code	0x0001D008
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Use shooting settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shooting/display – View mode (photo Lv) – Ease of viewing – Custom – White balance” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Use shooting settings
1	Auto
2	Color temperature setting

Do Not Copy

6.5.4.34 ViewModeWbColorTemp

○ Property Specifications

Property Code	0x0001D009
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	5000 [K]
Property Value	From 2500[K] to 10000[K] (Increase / decrease in 10K increments)

○ Property Outline

Indicates the color temperature value (K) of “Shooting/display – View mode (photo Lv) – Ease of viewing – Custom – White balance – Color temperature settings” in the custom settings menu.

6.5.4.35 ViewModeWbTuneColorTemp

○ Property Specifications

Property Code	0x0001D00A
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	612
Property Value	From 0 to 1224

○ Property Outline

Indicates the fine adjustment value of “Shooting/display – View mode (photo Lv) – Ease of viewing – Custom – White balance – Color temperature settings” in the custom settings menu.

For the details of the fine tuning volume, refer to section 11.5.

Do Not Copy

6.5.4.36 ViewModePictureControl

○ Property Specifications

Property Code	0x0001D00B
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Use shooting settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the settings of “Shooting/display – View mode (photo Lv) – Ease of viewing – Custom – Picture control” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Use shooting settings
1	Ease of viewing

6.5.4.37 ViewModeBrightenShadow

○ Property Specifications

Property Code	0x0001D00C
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the settings of “Shooting/display – View mode (photo Lv) – Ease of viewing – Custom – Shadow correction” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	+1
2	+2
3	+3

Do Not Copy

6.5.4.38 StarlightView

○ Property Specifications

Property Code	0x0001D00E
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the settings of “Shooting/display – Starlight view (photo Lv)” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.4.39 FlashSyncSpeed

○ Property Specifications

Property Code	0xD074
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x000100C8 [1/200 s]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Bracketing/flash – Flash sync speed” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x800100FA	1/250 s (auto FP)
0x800100C8	1/200 s (auto FP)
0x000100C8	1/200 s
0x000100A0	1/160 s
0x0001007D	1/125 s
0x00010064	1/100 s
0x00010050	1/80 s
0x0001003C	1/60 s

Do Not Copy

6.5.4.40 FlashSlowSpeedLimit

○ Property Specifications

Property Code	0xD075
DataType	UINT32
Description form	Enumeration
Get / Set	Get / Set
Default Value	0x0001003C [1/60 s]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Bracketing/flash – Flash shutter speed” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0001003C	1/60 s
0x0001001E	1/30 s
0x0001000F	1/15 s
0x00010008	1/8 s
0x00010004	1/4 s
0x00010002	1/2 s
0x00010001	1 s
0x00020001	2 s
0x00040001	4 s
0x00080001	8 s
0x000F0001	15 s
0x001E0001	30 s

Do Not Copy

6.5.4.41 ExposureCompFlashUsed

○ Property Specifications

Property Code	0xD118
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Entire frame]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Bracketing/flash – Exposure comp. for flash” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Entire frame
1	Background only

Do Not Copy

6.5.4.42 AutoFlashIsoSensitivityControl

Property Specifications

Property Code	0xD1C5
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Subject and background]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Bracketing/flash – Auto Flash ISO Sensitivity Control” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Subject and background
1	Subject only

Do Not Copy

6.5.4.43 SelectBracketChangeFactor

○ Property Specifications

Property Code	0xD079
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Flash/speed]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Bracketing/flash – Auto bracketing (mode M)” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Flash/speed
1	Flash/speed/aperture
2	Flash/aperture
3	Flash only
4	Flash/ISO sensitivity

Do Not Copy

6.5.4.44 BracketingOrder

○ Property Specifications

Property Code	0xD07A
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [[0] -> [-] -> [+]]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Bracketing/flash – Bracketing order” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	[0] -> [-] -> [+]
1	[-] -> [0] -> [+]

Do Not Copy

6.5.4.45 FlushBurstPrioritize

Property Specifications

Property Code	0xD180
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Dimming accuracy priority]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Bracketing/flash – Continuous shooting when using flash” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Speed priority
1	Dimming accuracy priority

Do Not Copy

6.5.4.46 TVLockSetting

○ Property Specifications

Property Code	0xD112
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Controls – Control lock – Shutter speed lock” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than [S] or [M].
	Error / warning displayed on shutter speed or aperture value display. (Either the shutter speed or aperture value turns off)
	On the card unformatted error.
	Attached a lens that failed firmware upgrade.

Do Not Copy

6.5.4.47 AVLockSetting

○ Property Specifications

Property Code	0xD113
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Controls – Control lock – Aperture lock” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
AAccess_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than [A] or [M].
	Error / warning displayed on shutter speed or aperture value display. (Either the shutter speed or aperture value turns off)
	On the card unformatted error.
	Attached a lens that failed firmware upgrade.

Do Not Copy

6.5.4.48 FocusPointLock

Property Specifications

Property Code	0x0001D015
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Controls – Control lock – Focus point lock” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.4.49 MovieTVLockSetting

○ Property Specifications

Property Code	0x0001D00F
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video – Control lock – Shutter speed lock” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
AAccess_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than [M].
	Error / warning displayed on shutter speed or aperture value display. (Either the shutter speed or aperture value turns off)
	On the card unformatted error.
	Attached a lens that failed firmware upgrade.

Do Not Copy

6.5.4.50 MovieAVLockSetting

○ Property Specifications

Property Code	0x0001D010
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video – Control lock – Aperture lock” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
AAccess_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than [A] or [M].
	Error / warning displayed on shutter speed or aperture value display. (Either the shutter speed or aperture value turns off)
	On the card unformatted error.
	Attached a lens that failed firmware upgrade.

Do Not Copy

6.5.4.51 MovieFocusPointLock

Property Specifications

Property Code	0x0001D016
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video – Control lock – Focus point lock” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.4.52 MovieAfSpeed

○ Property Specifications

Property Code	0xD17C
DataType	INT8
Description form	Range
Get / Set	Get / Set
Default Value	0
Property Value	From -5[Low speed] to 5[High speed]

○ Property Outline

Indicates “Video – AF speed” in the custom settings menu.

6.5.4.53 MovieAfSpeedWhenToApply

○ Property Specifications

Property Code	0xD17D
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Always]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Video – AF speed – When to apply” in the custom settings menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Always
1	Only while recording

Do Not Copy

6.5.4.54 MovieAfTrackingSensitivity

○ Property Specifications

Property Code	0xD17E
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	4
Property Value	From 1 [High sensitivity] to 7 [Low sensitivity]

○ Property Outline

Indicates “Video – AF tracking sensitivity” in the custom settings menu.

6.5.4.55 MovieExtendedIsoStepManual

Property Specifications

Property Code	0x0001D01F
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video – Extended ISO Step (M mode)” in the custom settings menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On (1/6 step)

6.5.4.56 MovieExtendedShutterSpeedsManual

Property Specifications

Property Code	0x0001D01B
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Video – Extended Shutter Speed (M mode)” in the custom settings menu.

Property Details

If the MovieRecordScreenSize property (section 6.5.3.7) is set to slow-motion video, this property setting is disabled.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.4.57 HighlightBrightness

Property Specifications

Property Code	0xD1DF
DataType	UINT16
Description form	Range
Get / Set	Get / Set
Default Value	250
Property Value	From 120 to 255 (step size is 5)

Property Outline

Indicates “Video – Zebra Pattern - Brightness detection range” in the custom settings menu.

6.5.5 Vendor (Setup Menu)

6.5.5.1 ManualSettingLensNo

Property Specifications

Property Code	0xD093
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [No.1]
Property Value	From 0 [No. 1] to 19 [No. 20]

Property Outline

Indicates “Non-CPU lens data – Lens number” in the setup menu.

Do Not Copy

6.5.5.2 FmmManualSetting2

○ Property Specifications

Property Code	0x0001D04A
DataType	UINT32
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [0.0mm]
Property Value	From 0 [0.0mm] to 999900 [9999.0mm] (StepSize 10)

○ Property Outline

Indicates “Non-CPU lens data – Focal length (mm)” in the setup menu.

○ Property Details

The PropertyValue is 100 times the focal length.

Values less than 100.0 mm can be set in units of 0.1 mm, and values over 100.0 mm can be set in units of 1.0 mm.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Value	When the focal length is 100.0mm or more, decimal places are set.

Do Not Copy

6.5.5.3 F0ManualSetting2

○ Property Specifications

Property Code	0x0001D04B
DataType	UINT16
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [F0.00]
Property Value	From 0 [F0.00] to 9990 [F99.90]

○ Property Outline

Indicates “Non-CPU lens data – Maximum aperture” in the setup menu.

○ Property Details

The PropertyValue is 100 times the maximum aperture value.

Values less than F10.00 can be set in units of F0.01, and values over F10.00 can be set in units of F0.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Value	When the maximum aperture value is F10.00 or more, the second decimal place is set.

Do Not Copy

6.5.5.4 ManualSettingLensName

○ Property Specifications

Property Code	0x0001D04C
DataType	String
Description form	None
Get / Set	Get, Get / Set
Default Value	NULL (0x00) 0 characters
Property Value	(depends on user settings)

○ Property Outline

Indicates “Non-CPU lens data – Lens name” in the setup menu.

○ Property Details

PropertyValue is an arbitrary string of 36 characters (not including NULL characters).

If the "lens name" is not set in the camera, it will be a string of 0 characters (not including NULL characters).

For characters that can be entered (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A character string exceeding 36 characters was set.

Do Not Copy

6.5.5.5 SaveFocusPosition

○ Property Specifications

Property Code	0xD0CD
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Save focus position” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.5.6 ImageSensorCleaning

○ Property Specifications

Property Code	0xD08F
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	2 [Clean at shutdown]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Clean image sensor – Clean at startup/shutdown” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Cleaning off
2	Clean at shutdown

Do Not Copy

6.5.5.7 CommentString

○ Property Specifications

Property Code	0xD090
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	NULL (0x00) 0 character
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Image comment” in the setup menu.

○ Property Details

The PropertyValue is an optional string of 36 characters (not including the null character).

When the comment is not set in the camera, the length of the string is 0 (not including the null character).

The camera does not send the DevicePropChanged event (section 6.4.1.6) even if the PropertyValue is changed.

For the characters that can be input (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.

6.5.5.8 EnableComment

○ Property Specifications

Property Code	0xD091
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Not attached]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Image comment – Attach comment” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not attached
1	Attached

Do Not Copy

6.5.5.9 ArtistV

○ Property Specifications

Property Code	0xD072
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	NULL (0x00) 0 character
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Artist” in the setup menu.

○ Property Details

The PropertyValue is an optional string of 36 characters or shorter (not including the null character).

If the artist is not set in the camera, the value is zero length string (not including the null character).

For the characters that can be input (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made as shown below and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 36 characters is set.

6.5.5.10 CopyrightV

○ Property Specifications

Property Code	0xD073
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	NULL (0x00) 0 character
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Copyright” in the setup menu.

○ Property Details

The PropertyValue is an optional string of 54 characters or shorter (not including the null character).

If the copyright is not set in the camera, the value is zero length string (not including the null character).

For the characters that can be input (ASCII code), refer to section 10.1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Format	A string exceeding 54 characters is set.

Do Not Copy

6.5.5.11 EnableCopyright

○ Property Specifications

Property Code	0xD053
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Not attached]
Property Value	(Depends on the user setting)

○ Property Outline

Indicates “Copyright information– Attach copyright information” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not attached
1	Attached

Do Not Copy

6.5.5.12 IPTCPresetSelect

○ Property Specifications

Property Code	0xD060
DataType	UINT8
Description form	Range
Get / Set	Get / Set
Default Value	0 [Not attached]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “IPTC – Attach IPTC when shooting” in the setup menu.

○ Property Details

Preset Nos. 1 to 10 are NMS-IPTC, and Preset Nos. 11 to 13 are XMP-IPTC presets.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not attached
From 1 to 13	Preset No. (from 1 to 13)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	A number with unregistered preset data is specified.

Do Not Copy

6.5.5.13 ShutterSoundEffect

○ Property Specifications

Property Code	0x0001D012
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [On]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shutter sound effect” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The SilentMode property (section 6.5.5.14) is set to [On] and headphones are not connected.

Do Not Copy

6.5.5.14 SilentMode

Property Specifications

Property Code	0x0001D011
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates “Silent mode” in the setup menu.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.5.15 EnableShutter

○ Property Specifications

Property Code	0xD08A
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	1 [Enable release]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Slot empty release lock” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Release locked
1	Enable release

Do Not Copy

6.5.6 Vendor (Camera Information)

6.5.6.1 LiveViewSelector

○ Property Specifications

Property Code	0xD1A6
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Photo Lv]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the state of live view mode.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Photo Lv
1	Video Lv

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The camera is in the PC camera mode.

Do Not Copy

6.5.6.2 StillCaptureModeQuick

○ Property Specifications

Property Code	0xD0F6
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0001 [Single-frame shooting]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates [Release mode] when the release mode dial is in the quick setting position.

○ Property Details

This is the release mode used when the StillCaptureMode property (section 6.5.1.15) is [Quick setting position].

The value obtained when it is not set in the [Quick setting position] is not guaranteed.

The release mode of the StillCaptureMode property and the release mode of this property are the same "release mode". Only the setting method differs between the release mode dial and the command dial.

If the release mode of the camera is "High Speed Frame Capture (C120)" when the DX lens is attached, the Property Value of this property is fixed to "High Speed Frame Capture (C60)".

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0001	Single-frame shooting
0x0002	Continuous high-speed shooting
0x8010	Continuous low-speed shooting
0x8011	Self-timer
0x810F	High-speed frame capture (C15)
0x811E	High-speed frame capture (C30)
0x813C	High-speed frame capture (C60)
0x8178	High-speed frame capture (C120)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The StillCaptureMode property (section 6.5.1.15) is set to anything other than [Quick setting position].

Do Not Copy

6.5.6.3 SpecialShootingMode

○ Property Specifications

Property Code	0x0001D002
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the shooting status of interval timer shooting and focus shift shooting.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On (interval timer shooting)
2	On (focus shift shooting)

When PropertyValue is the interval timer shooting, the command processing and property setting shown below are prohibited, and the Access_Denied response is performed.

Operation Code	Description	Conditions
0x100F	FormatStore	-
0x90C0	InitiateCaptureRecInSdram	-
0x9207	InitiateCaptureRecInMedia	-
0x9402	StartSpotWb	-
0x9420	SaveCameraSetting	-
0x9433	InitiatePixelMapping	-
0x9436	ResetMenu	-

Property Code	Description	Conditions
0x500C	FlashMode	When shooting interval priority is enabled
0x5011	DateTime	-
0xD010	ShootingMenuBank	-
0xD011	ShootingBankNameA	-
0xD012	ShootingBankNameB	-
0xD013	ShootingBankNameC	-
0xD014	ShootingBankNameD	-
0xD040	CustomSettingBank	-
0xD041	CustomBankNameA	-
0xD042	CustomBankNameB	-
0xD043	CustomBankNameC	-
0xD044	CustomBankNameD	-
0xD078	BracketingType	-
0xD07F	ExtendShootingMenu	-
0xD08F	ImageSensorCleaning	-
0xD0C0	EnableBracketing	-
0xD0C1	AEBracketingStep	-

Do Not Copy

0xD0C2	AEBracketingPattern	-
0xD0C4	WBBracketingStep	-
0xD0C5	WBBracketingPattern	-
0xD0C6	ADLBracketingPattern	-
0xD0C7	ADLBracketingStep	-
0xD126	InternalFlashCompensation	When shooting interval priority is enabled
0xD130	HDRMode	-
0xD132	HDRStrength	-
0xD133	HDRSaveIndividualImages	-

When PropertyValue is the focus shift shooting, the command processing and property setting shown below are prohibited, and the Access_Denied response is performed.

Operation Code	Description	Conditions
0x100B	DeleteObject	-
0x100F	FormatStore	-
0x90C0	InitiateCaptureRecInSdram	-
0x90CD	SetPicCtrlData	When registering a custom picture control
0x90CE	DeleteCustomPicCtrl	-
0x9207	InitiateCaptureRecInMedia	-
0x9402	StartSpotWb	-
0x9420	SaveCameraSetting	-
0x9433	InitiatePixelMapping	-
0x9436	ResetMenu	-

Property Code	Description	Conditions
0x5003	ImageSize	-
0x5004	CompressionSetting	-
0x5011	DateTime	-
0xD010	ShootingMenuBank	-
0xD011	ShootingBankNameA	-
0xD012	ShootingBankNameB	-
0xD013	ShootingBankNameC	-
0xD014	ShootingBankNameD	-
0xD016	RawCompressionType	-
0xD030	CaptureAreaCrop	-
0xD040	CustomSettingBank	-
0xD041	CustomBankNameA	-
0xD042	CustomBankNameB	-
0xD043	CustomBankNameC	-
0xD044	CustomBankNameD	-
0xD05D	StillFocusMeteringMode	-
0xD061	StillFocusMode	-
0xD078	BracketingType	-
0xD07F	ExtendShootingMenu	-
0xD08F	ImageSensorCleaning	-
0xD0C0	EnableBracketing	-
0xD0C1	AEBracketingStep	-

Do Not Copy

0xD0C2	AEBracketingPattern	-
0xD0C4	WBBracketingStep	-
0xD0C5	WBBracketingPattern	-
0xD0C6	ADLBracketingPattern	-
0xD0C7	ADLBracketingStep	-
0xD130	HDRMode	-
0xD132	HDRStrength	-
0xD133	HDRSaveIndividualImages	-
0xD148	Slot2ImageSaveMode	-
0x0001D041	EnableDXImageSize	-
0x0001D042	ImageSizeDX	-
0x0001D046	WideAreaAFC1	-
0x0001D047	WideAreaAFC2	-
0x0001D05C	ImageQualityHSFC	-

Do Not Copy

6.5.6.4 AELockStatus

○ Property Specifications

Property Code	0xD105
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Lock released]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the AE lock status.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Lock released
1	Locked

6.5.6.5 AFLockStatus

○ Property Specifications

Property Code	0xD104
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Lock released]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the AF lock status.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Lock released
1	Locked

Do Not Copy

6.5.6.6 FVLockStatus

○ Property Specifications

Property Code	0xD106
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Lock released]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the FV lock status.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Lock released
1	Locked

6.5.6.7 AWBLockStatus

○ Property Specifications

Property Code	0xD12F
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Lock released]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the AWB lock status.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Lock released
1	Locked

Do Not Copy

6.5.6.8 PreCaptureState

○ Property Specifications

Property Code	0x0001D05D
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Lock released]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the pre-release capture execution status of the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Pre-release capture is not running
1	Pre-release capture is running

Do Not Copy

6.5.6.9 InternalFlashCompensation

○ Property Specifications

Property Code	0xD126
DataType	INT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0
Property Value	From -18 to +6

○ Property Outline

Indicates “Flash compensation value” of the camera in units of 1/6 EV.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	ExposureEVStep		
		1/3 step	1/2 step	1 step
-18	-3.0EV	✓	✓	✓
-16	-2.7EV	✓	-	✓
-15	-2.5EV	-	✓	-
-14	-2.3EV	✓	-	✓
-12	-2.0EV	✓	✓	✓
-10	-1.7EV	✓	-	✓
-9	-1.5EV	-	✓	-
-8	-1.3EV	✓	-	✓
-6	-1.0EV	✓	✓	✓
-4	-0.7EV	✓	-	✓
-3	-0.5EV	-	✓	-
-2	-0.3EV	✓	-	✓
0	0.0EV	✓	✓	✓
2	0.3EV	✓	-	✓
3	0.5EV	-	✓	-
4	0.7EV	✓	-	✓
6	1.0EV	✓	✓	✓

The StepSize of this property changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

ExposureEVStep	StepSize
1/3 step	2
1/2 step	3
1 step	2

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is set to [On].
	The SilentMode property (section 6.5.5.14) is set to [On].
	During SB setting warning.
	During image dust off data acqusition mode.
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed

Do Not Copy

	Frame Capture".

Do Not Copy

6.5.6.10 ShutterSpeed

○ Property Specifications

Property Code	0xD100
DataType	UINT32
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	(Minimum value in the setting range)
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Shutter speed” that is set in the camera.
For the shutter speed in video mode, the MovieShutterSpeed property (section 6.5.12.2) should be used.

○ Property Details

This property can handle the 1/1000 or low shutter speed in addition to the ExposureTime property (section 6.5.1.10). In this property, the upper 2 bytes of PropertyValue are treated as the numerator of the shutter speed, and the lower 2 bytes are treated as the denominator.

If the enum value changes, update the enum value and DefaultValue. Enumerated values vary depending on the following factors.

Table 6.5.6-1 Associated properties

Property	Ref.	
ExposureProgramMode	6.5.1.11	Shooting mode
ExtendedShutterSpeedsManual	6.5.4.28	Extended shutter speeds (M)
StillCaptureMode	6.5.1.15	Release mode
ExposureEVStep	6.5.4.14	Step value for exposure setting
ExternalSpeedLightExist	6.5.9.1	Speedlight attached
NewExternalSpeedLightMode	6.5.9.4	Speedlight flash mode
FlashSyncSpeed	6.5.4.39	Flash sync speed
FlashMode	6.5.1.9	Flash mode
FlashSlowSpeedLimit	6.5.4.40	Flash shutter speed limit

When the shooting mode is M, values for bulb shooting and time shooting are added.
When the shooting mode is S, a value corresponding to the current value of bulb shooting/time shooting are added to the enumerated value.
If the shooting mode is M and the shutter speed extension in M mode is set to "On", a value exceeding 30 seconds is added.

Do Not Copy

When the StillCaptureMode property (section 6.5.1.15) is set to "High-speed frame capture (C15/C30/C60)", the slow shutter speed is limited to 1/60 second. When the StillCaptureMode property (section 6.5.1.15) is set to "High-speed frame capture (C120)", the slow shutter speed is limited to 1/125 second.

If the camera is equipped with a speedlight, it depends on the following factors:

Shutter speed on the high-speed side:
The value is limited to the slower value between flash shooting synchronization speed and the limit of the speedlight.
The value is not limited when the auto FP is supported by the flash mode of the speedlight and the flash shooting synchronization speed is set to the auto FP.

Shutter speed on the low-speed side:
If both the flash mode and shooting mode are set to the values shown below, the shutter speed is limited to the value set in flash shutter speed limit.

Flash mode	Shooting mode
Red-eye reduction flash	P
Normal flash	A

○ Property Value

The valid PropertyValues are shown below.
Shutter speed:

Property Value	Description
Upper 2 bytes	Numerator of the shutter speed
Lower 2 bytes	Denominator of the shutter speed

Special values other than shutter speed:

Property Value	Description
0xFFFFFFFF	Bulb shooting
0xFFFFFFFD	Time shooting

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is not set to [S] or [M].
	The WarningStatus property (section 6.5.6.24) is [Sequence error] or [Retractable zoom-ring warning].
	The TVLockSetting property (section 6.5.4.46) is set to [On].
	Bulb shooting or time shooting is set when the ExposureProgramMode property (section 6.5.1.11) is [S].
	Bulb shooting or time shooting is set when the HDRMode property (section 6.5.2.75) is set to [On].

Do Not Copy

6.5.6.11 FlickerReductionShutterSpeed

○ Property Specifications

Property Code	0x0001D03D
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	(Minimum shutter speed for high frequency flicker reduction)
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates shutter speed for high frequency flicker reduction set in the camera.

○ Property Details

You can get the shutter speed according to the current state (photo mode or video mode).

This property expresses the denominator value of the shutter speed with PropertyValue to the first decimal place.

If the Access_Denied condition of the SetFlickerReductionShutterSpeed command (section 6.2.4.10) is satisfied, the high-frequency flicker reduction control will be turned OFF, and the property value will be invalid and set to "0".

○ Property Value

Valid PropertyValues are listed below.

The denominator value of the shutter speed for high frequency flicker reduction x 10.

(Example) Shutter speed 1/8192.0 seconds: PropertyValue = 81920
(Example) Shutter speed 1/32.2 sec: PropertyValue = 322

Do Not Copy

6.5.6.12 RemainingExposureTime

○ Property Specifications

Property Code	0xD0BE
DataType	UINT16
Description form	Range
Get / Set	Get
Default Value	0 second
Property Value	From 0 to 900 second

○ Property Outline

Indicates the remaining exposure time for photo shooting.

○ Property Details

The DevicePropChanged event is transmitted when the shooting mode is set to M and shooting is performed at the extended shutter speed.

Do Not Copy

6.5.6.13 FlexibleProgram

○ Property Specifications

Property Code	0xD109
DataType	INT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [0.0 EV]
Property Value	From -30 [-5 EV] to +30 [+5 EV]

○ Property Outline

Indicates the program shift value in units of 1/6 EV.

○ Property Details

When the value of the ExposureProgramMode property (section 6.5.1.11) is a value other than [P], the value of PropertyValue is not valid but set to 0.

The StepSize of the property changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

ExposureEVStep	StepSize
1/3 step	2
1/2 step	3
1 step	6

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExposureProgramMode property (section 6.5.1.11) is set to anything other than [P].
	Displaying an error / warning that prohibits program shift setting.
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.6.14 ISOControlSensitivity

○ Property Specifications

Property Code	0xD0B5
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	100 [ISO 100]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates ISO sensitivity that is controlled by the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	Property Value	Description
32	Lo1.0	6400	ISO6400
40	Lo0.7	7200	ISO7200
45	Lo0.5	8000	ISO8000
50	Lo0.3	9000	ISO9000
56	ISO56	10000	ISO10000
64	ISO64	11000	ISO11000
72	ISO72	12800	ISO12800
80	ISO80	14400	ISO14400
90	ISO90	16000	ISO16000
100	ISO100	18000	ISO18000
110	ISO110	20000	ISO20000
125	ISO125	22000	ISO22000
140	ISO140	25600	ISO25600
160	ISO160	28800	Hi0.2
180	ISO180	32000	Hi0.3
200	ISO200	36000	Hi0.5
220	ISO220	40000	Hi0.7
250	ISO250	45600	Hi0.8
280	ISO280	51200	Hi1.0
320	ISO320	57600	Hi1.2
360	ISO360	64000	Hi1.3
400	ISO400	72000	Hi1.5
450	ISO450	80000	Hi1.7
500	ISO500	91200	Hi1.8
560	ISO560	102400	Hi2.0
640	ISO640		
720	ISO720		
800	ISO800		
900	ISO900		
1000	ISO1000		
1100	ISO1100		
1250	ISO1250		
1400	ISO1400		
1600	ISO1600		

Do Not Copy

1800	ISO1800		
2000	ISO2000		
2200	ISO2200		
2500	ISO2500		
2800	ISO2800		
3200	ISO3200		
3600	ISO3600		
4000	ISO4000		
4500	ISO4500		
5000	ISO5000		
5600	ISO5600		

Do Not Copy

6.5.6.15 ExposureDisplayStatus

○ Property Specifications

Property Code	0xD1B0
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Normal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the display status of the shutter speed and the aperture value in the camera.

○ Property Details

It is 1 (only shutter speed is blinking) during bulb/time warning.

○ Property Value

The valid PropertyValues are shown below.

		Shutter speed	
		Normal	Blinking
Aperture value	Normal	0	1
	Blinking	2	3

Do Not Copy

6.5.6.16 ExposureIndicateStatus

○ Property Specifications

Property Code	0xD1B1
DataType	INT8
Description form	Range
Get / Set	Get
Default Value	0 [0.0 EV]
Property Value	From -60 [-10 EV] to +60 [+10 EV]

○ Property Outline

Indicates the display value of the indicator in units of 1/6 EV.

When the ExposureIndicateLightup property (section 6.5.6.17) is [Off], the value of PropertyValue is not fixed.

Do Not Copy

6.5.6.17 ExposureIndicateLightup

Property Specifications

Property Code	0xD1B3
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [On]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the indicator display On/Off.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	On
1	Off

6.5.6.18 MonitorOffStatus

○ Property Specifications

Property Code	0xD1BA
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Not monitor-off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the camera monitor off state. The actual monitor control status is not shown.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not monitor-off
1	Monitor-off

Do Not Copy

6.5.6.19 Orientation

○ Property Specifications

Property Code	0xD10E
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Landscape or not fixed]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the orientation information.

○ Property Details

If the OrientationSensorMode property (section 6.5.6.20) is OFF, the PropertyValue will be “Landscape or not fixed”.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Landscape or not fixed
1	Portrait (grip side upward)
2	Portrait (grip side downward)
3	Landscape (upside down)

Do Not Copy

6.5.6.20 OrientationSensorMode

○ Property Specifications

Property Code	0xD092
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [ON]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Recording rotation information” in the playback menu

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
1	ON

Do Not Copy

6.5.6.21 AngleLevel

○ Property Specifications

Property Code	0xD067
DataType	INT32
Description form	None
Get / Set	Get
Default Value	0 [Horizontal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the level angle information of the camera.

○ Property Details

The valid angle information is shown below.

From 0.0 degrees to 359.9999847412109375 degrees

The angle information is 0.0 degrees when the camera is in the horizontal state. The angle increases as the camera is rotated counterclockwise viewing from the person who operates the camera.

When the camera is rotated clockwise starting from 0.0 degrees, the angle becomes 359.9999847412109375 degrees or smaller.
When the camera is rotated counterclockwise starting from 359.9999847412109375 degrees, the angle becomes 0.0 degrees or larger.

The angle information is displayed in green when it is horizontal or vertical in the virtual horizon of the setup menu.
Add +0.5 degrees to the angle information and omit the value below the decimal section. When the result is 0 or a multiple of 90 degrees, it is judged to be horizontal or vertical.

Even if the PropertyValue is changed, the camera does not send a DevicePropChanged event (section 6.4.1.6).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
Upper 16 bits	Integer section of the angle information
Lower 16 bits	Decimal section of the angle information

*When the angle information cannot be acquired or it is not reliable, the PropertyValue is set to 0xFFFFFFFF.

Do Not Copy

6.5.6.22 AngleLevelPitching

○ Property Specifications

Property Code	0xD07D
DataType	INT32
Description form	None
Get / Set	Get
Default Value	0 [Horizontal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the level angle information (pitching) of the camera.

○ Property Details

The valid angle information is shown below.

For the data type, the signed 32-bit fixed-point system is used, and the integer section and the decimal section use the upper 16 bits and the lower 16 bits, respectively.

The angle information is 0.0 or 180.0 degrees when the camera is in the horizontal state. The angle range is ±15 degrees from 0.0 or 180.0 degrees.

Camera orientation	Lens orientation	Angle range	Horizontal
Landscape	Up	From 0.0 to 60.0	0.0
	Down	0.0, from 359.9999847412109375 to 300.0	
Landscape (upside down)	Up	From 180.0 to 120.0	180.0
	Down	From 180.0 to 240.0	

The angle information is displayed in green when it is horizontal in the virtual horizon of the setup menu. Add +0.5 degrees to the angle information and omit the value below the decimal section. When the result is 0.0 or 180.0 degrees, it is judged to be horizontal.

Even if the PropertyValue is changed, the camera does not send a DevicePropChanged event (section 6.4.1.6).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
Upper 16 bits	Integer section of the angle information
Lower 16 bits	Decimal section of the angle information

*When the angle information cannot be acquired or it is not reliable, the PropertyValue is set to 0xFFFFFFFF.

Do Not Copy

6.5.6.23 AngleLevelYawing

○ Property Specifications

Property Code	0xD07E
DataType	INT32
Description form	None
Get / Set	Get
Default Value	0 [Horizontal]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the level angle information (yawing) of the camera.

○ Property Details

The valid angle information is shown below.

For the data type, the signed 32-bit fixed-point system is used, and the integer section and the decimal section use the upper 16 bits and the lower 16 bits, respectively.

The angle information is 0.0 or 180.0 degrees when the camera is in the horizontal state. The angle range is ±15 degrees from 0.0 or 180.0 degrees.

Camera orientation	Lens orientation	Angle range	Horizontal
Portrait (grip side upward)	Up	From 0.0 to 60.0	0.0
	Down	0.0, from 359.9999847412109375 to 300.0	
Portrait (grip side downward)	Up	From 180.0 to 120.0	180.0
	Down	From 180.0 to 240.0	

The angle information is displayed in green when it is horizontal in the virtual horizon of the setup menu. Add +0.5 degrees to the angle information and omit the value below the decimal section. When the result is 0.0 or 180.0 degrees, it is judged to be horizontal.

Even if the PropertyValue is changed, the camera does not send a DevicePropChanged event (section 6.4.1.6).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
Upper 16 bits	Integer section of the angle information
Lower 16 bits	Decimal section of the angle information

*When the angle information cannot be acquired or it is not reliable, the PropertyValue is set to 0xFFFFFFFF.

Do Not Copy

6.5.6.24 WarningStatus

○ Property Specifications

Property Code	0xD102
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0 [No warning]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the camera warning information.

○ Property Value

The valid PropertyValues are shown below.

When the PropertyValue is set to any value other than 0, the release is locked.
The PropertyValue takes the following values in the bit assignment. (1: Valid, 0: Invalid)

Bit	Description
From Bit15 to Bit31	Reserved
Bit14	A non-compatible lens is attached.
Bit13	A lens that failed to firmware upgrade is attached.
Bit12	Shutter speed incompatibility HDR shooting not possible Warning
Bit11	Version upgrade warning when mount adapter is attached
Bit10	Retractable zoom-ring warning
Bit9	Reserved
Bit8	Shooting error
Bit7	Reserved
Bit6	Bulb warning
Bit5	Minimum aperture warning
Bit4	Reserved
Bit3	Reserved
Bit2	Reserved
Bit1	Battery exhausted
Bit0	Sequence error

Do Not Copy

6.5.6.25 InfoDisplayErrorStatus

○ Property Specifications

Property Code	0xD1B2
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the error display status of the INFO display on the monitor.

○ Property Details

The error display conditions indicated by this property are as shown in the table below.

Name	Timing for starting message of errors and warning	Finish timing
Release sequence error	After the release sequence is completed	Generation cause released
Card access error	When the card is inserted or the card is accessed	Generation cause released
Battery ID unauthentication error	When a battery other than the exclusive ID battery is mounted	Generation cause released
Minimum aperture warning	When the Fmin detection switch is turned Off	Generation cause released
Card write-protected & not-formatted warning	When a card is inserted with the recording destination set to “Card (Card and SDRAM)” or when the recording destination is set to “Card (Card and SDRAM)” while a card is inserted	Generation cause released
Card not-formatted warning	Same as the above	Generation cause released
Card write-protected warning	Same as the above	Generation cause released
Battery exhausted (shutter release disabled) warning	After the shutter-release button is pressed fully	Generation cause released

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.7 Vendor (Recording Destination)

6.5.7.1 RecordingMedia

○ Property Specifications

Property Code	0xD10B
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Card]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the recording destination of the images.

○ Property Details

For the details, see Recording Destination (section 2.6).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Card
1	SDRAM
2	Card and SDRAM

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The SpecialShootingMode property (section 6.5.6.3) is set to [On (interval timer shooting/focus shift shooting)].

Do Not Copy

6.5.7.2 ActiveFolder

○ Property Specifications

Property Code	0xD15B
DataType	UINT16
Description form	Range
Get / Set	Get
Default Value	100
Property Value	From 100 to 999

○ Property Outline

Indicates the folder number of the recording location.

Do Not Copy

6.5.7.3 ActiveSlot

○ Property Specifications

Property Code	0xD1F2
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Card not inserted]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the recording destination slot when the recording destination is a card.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Card not inserted
1	Slot 1
2	Slot 2
3	Slot 1 & slot 2

Do Not Copy

6.5.7.4 ExposureRemaining

Property Specifications

Property Code	0xD1F1
DataType	UINT32
Description form	Range
Get / Set	Get
Default Value	0 [0 frames]
Property Value	0 [0 frames] to 4294967295 [4294967295 frames]

Property Outline

Indicates the number of frames that can be recorded on the card.

Property Details

The value changes depending on the setting of the camera. When a card is not inserted in the camera, it should be 0 frames.

Do Not Copy

6.5.7.5 ContinuousShootingCount

○ Property Specifications

Property Code	0xD1B4
DataType	UINT16
Description form	Range
Get / Set	Get
Default Value	450 [450 frames]
Property Value	From 0 [0 frames] to 450 [450 frames]

○ Property Outline

Indicates the number of frames that can be recorded in continuous shooting by the command.
The number of frames that can be recorded in continuous shooting can be acquired with any setting value of the RecordingMedia property (section 6.5.7.1).

○ Property Details

The number of continuous shooting frames changes depending on the following setting values on the camera.

Set contents	Property
Image quality mode	CompressionSetting property (section 6.5.1.3)
Image size	ImageSize property (section 6.5.1.2) EnableDXImageSize property (section 6.5.2.11) ImageSizeDX property (section 6.5.2.12)
Long exposure noise reduction	NoiseReduction property (section 6.5.2.59)
High ISO noise reduction	NoiseReductionHiIso property (section 6.5.2.61)
HDR	HDRMode property (section 6.5.2.75)
Max. continuous release	BurstMaxNumber property (section 6.5.4.24)
Choose image area	CaptureAreaCrop property (section 6.5.2.9)
NEF (RAW) recording – Compression Type	RawCompressionType property (section 6.5.2.13)
Pre-release burst	PreCapturePreReleaseBurst property (section 6.5.4.25)
Post-release burst	PreCapturePostReleaseBurst property (section 6.5.4.26)
Photo/Video switching lever	LiveViewSelector property (section 6.5.6.1)

Do Not Copy

6.5.8 Vendor (Bracketing)

6.5.8.1 EnableBracketing

○ Property Specifications

Property Code	0xD0C0
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the status of bracketing.

○ Property Details

If the property of the number of shots corresponding to the BracketingType property setting is "0", the PropertyValue will be "Off".

BracketingType property	Property of the number of shots	Number of shots	
		0	Other than 0
AE・Flash/AE/Flash	AEBracketingPattern	Off	On
WB	WBBracketingPattern	Off	On
ADL	ADLBracketingPattern	Off	On

PropertyValue becomes [Off] due to the combination of the setting of BracketingType property (section 6.5.8.2) and other settings.

The conditions for canceling the bracketing are described below.

No.	Conditions		BracketingType property				
			AE Flash	AE	Flash	WB	ADL
1	Change BracketingType property	WB⇔Changes between other types	On	On	On	On	On
		ADL⇔Changes between other types	On	On	On	On	On
2	Change ExposureEVStep property (section 6.5.4.14)		On	On	On	Off	Off
3	Change CompressionSetting property to RAW or RAW + JPEG		Off	Off	Off	On	Off
4	Change SilentMode property		Off	Off	On*	Off	Off
5	Change the StillCaptureMode property (section 6.5.1.15) to "High Speed Frame Capture".		On*	On*	On*	On*	On*
6	Change the value of the FlashMode property (section 6.5.1.9) to “Flash-off”.		Off	Off	On*	Off	Off

NOTE) PropertyValue temporarily becomes "Off".

The property of the number of shots does not become "0", and when the condition is canceled, the PropertyValue returns to "On".

Do Not Copy

When this property is changed, a value is also set for the number of shots property.
The values set in the number of shots property by changing this property are described below.

BracketingType property	Property of the number of shots	EnableBracketing	
		Off	On
AE・Flash/AE/Flash	AEBracketingPattern	0	3 images (normal, under and over)
WB	WBBracketingPattern	0	3 images (normal, under and over)
ADL	ADLBracketingPattern	0	2

For video mode, bracketing shooting is not performed even if this property is set to [On].

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The HDRMode property (section 6.5.2.75) is [On].
	The BracketingType property (section 6.5.8.2) is set to [WB bracketing] and the CompressionSetting property (section 6.5.1.3) is set to [RAW] or [RAW + JPEG].
	The BracketingType property (section 6.5.8.2) is set to [Flash only] and the SilentMode property (section 6.5.5.14) is set to [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".
	The BracketingType property (section 6.5.8.2) is set to [Flash only] and the FlashMode property (section 6.5.1.9) is set to [Flash-off].

Do Not Copy

6.5.8.2 BracketingType

○ Property Specifications

Property Code	0xD078
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [AE & flash]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Auto bracketing - Auto bracketing set” in the photo shooting menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	AE & flash
1	AE only
2	Flash only
3	WB bracketing
4	ADL bracketing

Do Not Copy

6.5.8.3 AEBracketingPattern

○ Property Specifications

Property Code	0xD0C2
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0000 [0 image]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the compensation direction and the number of images to be captured for AE bracketing.

○ Property Details

The conditions for PropertyValue to be 0 are described below.

No.	Description
1	When the value of the ExposureEVStep property (section 6.5.4.14) is changed.

When the BracketingType property (section 6.5.8.2) is set to [WB bracketing] or [ADL bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	0 image
0x0403	3 images (normal, under and over)
0x0405	5 images (normal, 2 unders and 2 overs)
0x0407	7 images (normal, 3 unders and 3 overs)
0x0409	9 images (normal, 4 unders and 4 overs)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to [WB bracketing] or [ADL bracketing].
	[7 images (normal, 3 unders and 3 overs)] or [9 images (normal, 4 unders and 4 overs)] is set when the AEBracketingStep property (section 6.5.8.4) is set to [2.0], [2.3], [2.5], [2.7] or [3EV],
	The BracketingType property (section 6.5.8.2) is set to [Flash only] and the SilentMode property (section 6.5.5.14) is set to [On].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.4 AEBracketingStep

○ Property Specifications

Property Code	0xD0C1
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	6 [1 EV]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the step range of AE bracketing.

○ Property Details

When the value of the ExposureEVStep property (section 6.5.4.14) is changed, the PropertyValue is set to 1.0.

When the BracketingType property (section 6.5.8.2) is set to [WB bracketing] or [ADL bracketing], the value of PropertyValue is not fixed.

The value of PropertyValue changes depending on the value of the ExposureEVStep property.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	ExposureEVStep		
		1/3 step	1/2 step	1 step
2	0.3	✓	-	-
3	0.5	-	✓	-
4	0.7	✓	-	-
6	1.0	✓	✓	✓
8	1.3	✓	-	-
9	1.5	-	✓	-
10	1.7	✓	-	-
12	2.0	✓	✓	✓
14	2.3	✓	-	-
15	2.5	-	✓	-
16	2.7	✓	-	-
18	3.0	✓	✓	✓

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to [WB bracketing] or [ADL bracketing].
	The BracketingType property (section 6.5.8.2) is set to [Flash only] and the SilentMode property (section 6.5.5.14) is set to [On].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.5 WBBracketingPattern

○ Property Specifications

Property Code	0xD0C5
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0000 [0 image]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the compensation direction and the number of images to be captured for WB bracketing.

○ Property Details

When the BracketingType property (section 6.5.8.2) is set to anything other than [WB bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	0 image
0x0403	3 images (normal, under and over)
0x0405	5 images (normal, 2 unders and 2 overs)
0x0407	7 images (normal, 3 unders and 3 overs)
0x0409	9 images (normal, 4 unders and 4 overs)

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to anything other than [WB bracketing].
	The CompressionSetting property (section 6.5.1.3) is set to [RAW] or [RAW + JPEG].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.6 WBBracketingStep

○ Property Specifications

Property Code	0xD0C4
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [1 EV]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the step range for WB bracketing.

○ Property Details

When the BracketingType property (section 6.5.8.2) is set to anything other than [WB bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	1 step
2	2 step
3	3 step

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to anything other than [WB bracketing].
	The CompressionSetting property (section 6.5.1.3) is set to [RAW] or [RAW + JPEG].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.7 ADLBracketingPattern

○ Property Specifications

Property Code	0xD0C6
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0x0000 [0 image]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the number of images to be captured for ADL bracketing.

○ Property Details

When the BracketingType property (section 6.5.8.2) is set to anything other than [ADL bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	0 shot
0x0002	2 shots (Off -> User setting)
0x0003	3 shots (Off -> Low -> Normal)
0x0004	4 shots (Off -> Low -> Normal -> High)
0x0105	5 shots (Off -> Low -> Normal -> High -> Extra high1)
0x0205	5 shots (Low -> Normal -> High -> Extra high1 -> Extra high2)

* For the user setting, the setting value of the ADLBracketingStep property (section 6.5.8.8) should be used.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to anything other than [ADL bracketing].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.8 ADLBracketingStep

○ Property Specifications

Property Code	0xD0C7
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0xFFFF [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the selected ADL with ADL bracketing set to two shots.

○ Property Details

When the BracketingType property (section 6.5.8.2) is set to anything other than [ADL bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0xFFFF	Auto
0x0002	Low
0x0003	Normal
0x0004	High
0x0105	Extra high 1
0x0205	Extra high 2

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The BracketingType property (section 6.5.8.2) is set to anything other than [ADL bracketing].
	The HDRMode property (section 6.5.2.75) is [On].
	The StillCaptureMode property (section 6.5.1.15) is set to "High Speed Frame Capture".

Do Not Copy

6.5.8.9 AEBracketingCount

○ Property Specifications

Property Code	0xD0C3
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	1
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the number of the image (nth image) to be captured next for AE bracketing and ADL bracketing.

○ Property Details

When the EnableBracketing property (section 6.5.8.1) is set to [Off] and the BracketingType property (section 6.5.8.2) is set to [WB bracketing], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
From 1 to 9	AE bracketing
From 1 to 5	ADL bracketing

Do Not Copy

6.5.9 Vendor (Speedlight)

6.5.9.1 ExternalSpeedLightExist

○ Property Specifications

Property Code	0xD120
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Not mounted]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the mounting status of the speedlight.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not mounted
1	Mounted

Do Not Copy

6.5.9.2 ExternalSpeedLightSort

○ Property Specifications

Property Code	0xD122
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Noncommunication]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the communication status of the speedlight.

○ Property Details

When the ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted], the value of PropertyValue is not fixed.

If the speedlight for old-type communication is mounted, the PropertyValue becomes [Noncommunication].

For the communication status types of the speedlight, refer to “Speedlight Types” (section 11.6).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Noncommunication
2	CLS (New-type communication) with the operating and setting section
3	CLS (New-type communication) without the operating and setting section

Do Not Copy

6.5.9.3 ExternalSpeedLightStatus

○ Property Specifications

Property Code	0xD121
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Not charged]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the charge status of the speedlight.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not charged
1	Ready

*When the ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted], the value of PropertyValue is not fixed.

Do Not Copy

6.5.9.4 NewExternalSpeedLightMode

○ Property Specifications

Property Code	0xD125
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the flash mode of the speedlight (CLS).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	i-TTL balanced fill flash
2	i-TTL fill flash
3	Auto aperture
4	Non-TTL auto
5	Distance-priority manual
6	Manual flash
7	Repeating-flash

*When the ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted], the value of PropertyValue is not fixed.

*When the ExternalSpeedLightSort property (section 6.5.9.2) is set to anything other than [CLS], the value of PropertyValue is not fixed.

Do Not Copy

6.5.9.5 FlashCompensation

○ Property Specifications

Property Code	0xD124
DataType	INT8
Description form	Range
Get / Set	Get
Default Value	0 [0.0 EV]
Property Value	From -18 [-3.0 EV] to +18 [+3.0 EV]

○ Property Outline

Indicates the flash compensation value in units of 1/6 EV.

○ Property Details

When the ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted], the value of PropertyValue is not fixed.

When the ExternalSpeedLightSort property (section 6.5.9.2) is set to anything other than [CLS], the value of PropertyValue is not fixed.

The value of PropertyValue is valid when the values of the ExternalSpeedLightSort property (section 6.5.9.2) and the NewExternalSpeedLightMode property (section 6.5.9.4) are as shown in the table below. In the cases other than those in the table below, the value of PropertyValue is 0.

ExternalSpeedLightSort	NewExternalSpeedLightMode
Noncommunication	(Invalid)
CLS	i-TTL balanced fill flash i-TTL fill flash Auto aperture Distance-priority manual

Do Not Copy

6.5.9.6 ExternalSpeedLightMultiFlashMode

○ Property Specifications

Property Code	0xD12D
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Stand-alone flash]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the commander mode of the speedlight.

○ Property Details

When the ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted], the value of PropertyValue is not fixed.

When the ExternalSpeedLightSort property (section 6.5.9.2) is set to anything other than [CLS], the value of PropertyValue is not fixed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Stand-alone flash (Commander mode is invalid or not supported)
1	Other flash units (Commander mode is valid)

Do Not Copy

6.5.9.7 SBWirelessMode

○ Property Specifications

Property Code	0xD1E2
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Stand-alone flash]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the wireless setting of the speedlight.

○ Property Details

The supported property values change depending on the type of the flash attached to the camera or whether the wireless communication accessory is equipped or not. If there's no value supported, the property value is not fixed.

If the supported property values change, it is informed by the DevicePropChanged event (section 6.4.1.6).

If the camera's wireless settings work with optical + radio, "optical + radio" is added to the enumerated values.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Stand-alone flash
1	Other flash units (Radio)
2	Other flash units (Optical)
3	Other flash units (Optical + Radio)

Do Not Copy

6.5.9.8 SBWirelessMultipleFlashMode

○ Property Specifications

Property Code	0xD1E3
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Group flash units]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the flash mode of the multiple speedlight.

○ Property Details

The supported property values change depending on the type of the flash attached to the camera or whether the wireless communication accessory is equipped or not. If there's no value supported, the property value is not fixed.

When the SBWirelessMode property (section 6.5.9.7) is [Other flash units (Optical + Radio)], this property is fixed to [Group flash units].

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Group flash units
1	Quick wireless lighting
2	Repeating

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash].

Do Not Copy

6.5.9.9 SBUsableGroup

○ Property Specifications

Property Code	0xD1E4
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x00000000
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the available group of the speedlight.

○ Property Details

The property value is the logical OR of the SBGroupIDs for available groups.
If the property value is zero, any group cannot be used.
For the details of SBGroupID, refer to section 7.6

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00000000	Cannot be used
Other than 0x00000000	Logical OR of the available SBGroupID

Do Not Copy

6.5.9.10 WirelessCLSEntryMode

○ Property Specifications

Property Code	0xD1E5
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Pairing mode]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the setting of “Remote (WR) setting – Link mode” in the setup menu.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Pairing mode
1	PIN code mode

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The wireless remote controller is not installed.
	The installed wireless remote controller doesn’t support the radio-controlled AWL.

Do Not Copy

6.5.9.11 SBPINCode

○ Property Specifications

Property Code	0xD1E6
DataType	UINT32
Description form	Range
Get / Set	Get, Get / Set
Default Value	0
Property Value	From 0 to 9999

○ Property Outline

Indicates the PIN code of “Remote (WR) setting – Link mode” in the setup menu.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The wireless remote controller is not installed.
	The installed wireless remote controller doesn’t support the radio-controlled AWL.

Do Not Copy

6.5.9.12 RadioMultipleFlashChannel

○ Property Specifications

Property Code	0xD1E7
DataType	UINT8
Description form	None
Get / Set	Get
Default Value	0
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the communication channel of the wireless remote controller.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
5	5CH
10	10CH
15	15CH

Do Not Copy

6.5.9.13 OpticalMultipleFlashChannel

○ Property Specifications

Property Code	0xD1E8
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [CH]
Property Value	From 1 to 4 [CH]

○ Property Outline

Indicates the channel of the optical communication to the speedlight.

If the channel of the optical communication is not fixed, this property returns 0xFF as an invalid value.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] or [Other flash units (Radio)].
	The flash supporting the SB control is not attached.

Do Not Copy

6.5.9.14 FlashRangeDisplay

Property Specifications

Property Code	0xD1E9
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [meter]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the unit of distance for the setting of the speedlight.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Meter
1	Feet

6.5.9.15 AllTestFiringDisable

Property Specifications

Property Code	0xD1EA
DataType	UINT8
Description form	None
Get / Set	Get
Default Value	0 [Enable firing]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the disabled state for the all test firing of the speedlight.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Enable firing
Other than 0	Disable firing

Do Not Copy

6.5.9.16 SBSettingMemberLock

○ Property Specifications

Property Code	0xD1EC
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Unlock]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the lock state of the dials and the buttons on the speedlight.

○ Property Details

The camera sets the default value when the speedlight is disconnected from the camera or the session to the camera terminates.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Unlock
1	Lock

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The ExternalSpeedLightExist property (section 6.5.9.1) is set to [Not mounted].

Do Not Copy

6.5.9.17 SBIntegrationFlashReady

○ Property Specifications

Property Code	0xD1ED
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Uncharged]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the information about the ready state of the external flash displayed in the flash info of the INFO display.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Uncharged
1	Ready

Do Not Copy

6.5.10 Vendor (Lens)

6.5.10.1 LensSort

○ Property Specifications

Property Code	0xD0E1
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	1 [CPU lens mounted]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the mounting status of the CPU lens.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not mounted (lens not mounted or non-CPU lens mounted)
1	CPU lens mounted

Do Not Copy

6.5.10.2 LensTypeML

○ Property Specifications

Property Code	0xD0E7
DataType	UINT64
Description form	None
Get / Set	Get
Default Value	0
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates information on the ML lens.

The LensTypeF property (section 6.5.10.3) becomes effective only when the mount adapter of this property is valid.

○ Property Value

The valid PropertyValues are shown below. It is invalid when bit is 0, and valid when it is 1.

Bit	Description
From Bit9 to Bit63	Reserved
Bit8	Power zoom lens
Bit7	Lens whose automatic distortion correction is always effective.
Bit6	Lens supporting automatic distortion correction
Bit5	DX lens (Lens for Nikon digital cameras)
Bit4	VR lens (with anti-vibration mechanism)
From Bit1 to Bit3	Reserved
Bit0	Mount adapter

Do Not Copy

6.5.10.3 LensTypeF

○ Property Specifications

Property Code	0xD0E2
DataType	UINT64
Description form	None
Get / Set	Get
Default Value	1 [D-type lens]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates information on the F-CPU lens.

When the mount adapter is set to invalid in the LensTypeML property (section 6.5.10.2), the value of this property is fixed to zero.

○ Property Value

The valid PropertyValues are shown below. It is invalid when bit is 0, and valid when it is 1.

Bit	Description
From Bit9 to Bit63	Reserved
Bit8	STM lens
Bit7	E-type lens (electromagnetic diaphragm)
Bit6	Retractable lens
Bit5	Lens supporting automatic distortion correction
Bit4	AF-S lens
Bit3	DX lens (Lens for Nikon digital cameras)
Bit2	VR lens (with anti-vibration mechanism)
Bit1	G-type lens (without aperture dial)
Bit0	D-type lens (with distance encoder)

Do Not Copy

6.5.10.4 LensID

○ Property Specifications

Property Code	0xD0E0
DataType	UINT16
Description form	None
Get / Set	Get
Default Value	0
Property Value	(Depends on the lens type)

○ Property Outline

Indicates the ID of the CPU lens.

○ Property Details

The value of PropertyValue indicates an ID (2Byte).

When the value of the LensSort property (section 6.5.10.1) is set to [Not mounted], the value of PropertyValue is fixed to zero.

Do Not Copy

6.5.10.5 LensFocalMin

Property Specifications

Property Code	0xD0E3
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	5000 [50 mm]
Property Value	(Depends on the lens type)

Property Outline

Indicates the focal length at the Wide-end with the CPU lens mounted.

Property Details

The value of PropertyValue should be a hundred times the focal length (mm).

When the value of the LensSort property (section 6.5.10.1) is set to [Not mounted], the value of PropertyValue is not fixed.

6.5.10.6 LensFocalMax

Property Specifications

Property Code	0xD0E4
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	5000 [50 mm]
Property Value	(Depends on the lens type)

Property Outline

Indicates the focal length at the Tele-end with the CPU lens mounted.

Property Details

The value of PropertyValue should be a hundred times the focal length (mm).

When the value of the LensSort property (section 6.5.10.1) is set to [Not mounted], the value of PropertyValue is not fixed.

Do Not Copy

6.5.10.7 LensApatureMin

○ Property Specifications

Property Code	0xD0E5
DataType	UINT16
Description form	None
Get / Set	Get
Default Value	140 [F 1.4]
Property Value	(Depends on the lens type)

○ Property Outline

Indicates the maximum aperture value at the Wide-end with the CPU lens mounted.

○ Property Details

The value of PropertyValue should be a hundred times the maximum aperture value.
When the value of the LensSort property (section 6.5.10.1) is set to [Not mounted], the value of PropertyValue is not fixed.

6.5.10.8 LensApatureMax

○ Property Specifications

Property Code	0xD0E6
DataType	UINT16
Description form	None
Get / Set	Get
Default Value	1600 [F16]
Property Value	(Depends on the lens type)

○ Property Outline

Indicates the maximum aperture value at the Tele-end with the CPU lens mounted.

○ Property Details

The value of PropertyValue should be a hundred times the maximum aperture value.
When the value of the LensSort property (section 6.5.10.1) is set to [Not mounted], the value of PropertyValue is not fixed.

Do Not Copy

6.5.10.9 RetractableLensWarning

Property Specifications

Property Code	0xD09C
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the retractable lens warning condition.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	(Retractable lens warning) Off
1	(Retractable lens warning) On

Do Not Copy

6.5.11 Vendor (Live View)

6.5.11.1 CameraLiveViewStatus

○ Property Specifications

Property Code	0xD1B8
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the status of the live view in the camera.

○ Property Details

This property is set to “On” when live view is active.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

6.5.11.2 RemoteLiveViewStatus

○ Property Specifications

Property Code	0xD1A2
DataType	UINT8
Description form	Range
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the status of the remote live view.

○ Property Details

This property is set to “On” when the StartLiveView command is executed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	On

Do Not Copy

6.5.11.3 LiveViewImageStatus

Property Specifications

Property Code	0xD1BB
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Live view image is not available]
Property Value	Refer to Property Value in this section.

Property Outline

Indicates the status of the live view image acquired by the GetLiveViewImage command.

Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Live view image is not available.
1	Live view image is available.

Do Not Copy

6.5.11.4 LiveViewImageSize

○ Property Specifications

Property Code	0xD1AC
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	2 [Equivalent to VGA]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the size of the live view image acquired by the GetLiveViewImage command.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	Equivalent to QVGA (up to 320x240)
2	Equivalent to VGA (up to 640x480)
3	Equivalent to XGA (up to 1024x768)

6.5.11.5 LiveViewImageCompression

○ Property Specifications

Property Code	0xD1BC
DataType	UINT8
Description form	Enumeration
Get / Set	Get / Set
Default Value	0 [Basic – Size priority]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the quality of the live view image acquired by the GetLiveViewImage command.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Basic – Size priority
1	Basic – Quality priority
2	Normal – Size priority
3	Normal – Quality priority
4	Fine – Size priority
5	Fine – Quality priority

Do Not Copy

6.5.11.6 LiveViewZoomArea

○ Property Specifications

Property Code	0xD1BD
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [Entire display]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the zoom-area of the live view image.

○ Property Details

Available property value changes depending on the display device on the camera. If you set a value that is not supported on the display device, it is changed to another area that has the same magnification.

When switching the image monitor and the electronic viewfinder during zoom preview, the area before switching is maintained as the current value. NOTE) During video recording, returns to full display without maintaining zooming.

If recording video or being connected to HDMI in video mode, the live view image of the GetLiveViewImageEx command (section 6.2.6.4) will not be enlarged even if this property is set to anything other than entire display. (The live view image on the camera side is enlarged)

With this property, only the same size (100%) can be used for enlargement during video recording.

In the following cases, the values that can be specified are limited, and the enumerated values vary.

- When the spot WB acquisition standby state.
  Magnification: 200% or more cannot be used.

- When in video mode, MovieRecordScreenSize property (section 6.5.3.7) is "1920x1080", and video recording or HDMI connection.
  Magnification: 50% cannot be used.

Do Not Copy

○ Property Value

The valid PropertyValues are shown below.

Property Value	Display device		Description
	Image monitor	Electronic viewfinder	
0	✓	✓	Entire display
256	✓	-	Zoom area: 256 x 170 Magnification: High magnification (400%)
320	-	✓	Zoom area: 320 x 214 Magnification: High magnification (400%)
512	✓	-	Zoom area: 512x 342 Magnification: Zoom-in (200%)
640	-	✓	Zoom area: 640x 426 Magnification: Zoom-in (200%)
1024	✓	-	Zoom area: 1024x 682 Magnification: Same size (100%)
1280	-	✓	Zoom area: 1280x 854 Magnification: Same size (100%)
2048	✓	-	Zoom area: 2048x1366 Magnification: Zoom-out (50%)
2560	-	✓	Zoom area: 2560x1706 Magnification: Zoom-out (50%)

The magnification is the magnification relative to the size of the display device.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Not_LiveView	The property was set in a state other than during live view.
Access_Denied	The zoom value was changed to other than the same size (100%) or the entire display while recording a video.
	The MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)].
Device_Busy	During pre-release capture recording

Do Not Copy

6.5.11.7 LiveViewProhibitionCondition

○ Property Specifications

Property Code	0xD1A4
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x00000000
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the live view prohibition condition. If there is any prohibition factor in this property, the StartLiveView command must not be issued. If the StartLiveView command is issued and the live view is started when there is any prohibition factor in this property, the operation is not guaranteed.

○ Property Value

The valid PropertyValues are shown below.
The PropertyValue takes the following values in the bit assignment. (1: Valid, 0: Invalid)

Bit	Description
Bit29 to Bit31	Reserved
Bit28	Lens error Version upgrade warning when mount adapter is attached
Bit18 to Bit27	Reserved
Bit17	The live view cannot be started when the temperature rises.
Bit16	Reserved
Bit15	Processing by shooting Until the shooting operation ends
Bit9 to Bit14	Reserved
Bit8	Battery exhausted
Bit3 to Bit7	Reserved
Bit2	Sequence error
Bit0 to Bit1	Reserved

*When the PropertyValue is a value other than 0, the live view cannot be started.

Do Not Copy

6.5.12 Vendor (Video)

6.5.12.1 MovieFnumber

○ Property Specifications

Property Code	0xD1A9
DataType	UINT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	The minimum value of the enumeration
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the aperture value that is used in video mode.

○ Property Details

When the LensSort property (section 6.5.10.1) is [Not mounted], the enumeration cannot be created. Therefore, the number of enumeration values shall be 1 and the enumeration value, the DefaultValue, and the PropertyValue shall be the same value.

For models that support the exposure meter interlocking lever, it changes depending on the F0ManualSetting2 property (section 6.5.5.3) and the state of the exposure meter interlocking lever. The value shall be 1 EV except the maximum aperture value.

It is set to 0 if the model does not support the exposure meter interlocking lever or if the aperture value cannot be acquired.

If an aperture value error occurs, the number of enumeration values shall be 1 and the enumeration value, the DefaultValue, and the PropertyValue shall be 0xFFFF.

If not in video mode, the number of enumeration values shall be 1 and the enumeration value, the DefaultValue, and the PropertyValue shall be 0 because the value is not fixed.

○ Property Value

When the ExposureProgramMode property (section 6.5.1.11) is M or A, the PropertyValue is set to the value of the Fnumber property (section 6.5.1.5) just before the start of video mode. When the ExposureProgramMode property (section 6.5.1.11) is other than M or A, the PropertyValue is set to a value depending on the camera.

The PropertyValue should be a hundred times the aperture value.

The PropertyValue changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

The setting range of PropertyValue changes depending on the lens and the magnification setting.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the ExposureProgramMode property (section 6.5.1.11) is not [A] or [M].
	The value of the LensSort property (section 6.5.10.1) is [Not mounted].
	The WarningStatus property (section 6.5.6.24) is [Sequence error] or [Retractable zoom-ring warning].
	The MovieAVLockSetting property (section 6.5.4.50) is [On].
	An aperture value error.

Do Not Copy

6.5.12.2 MovieShutterSpeed

○ Property Specifications

Property Code	0xD1A8
DataType	UINT32
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	The minimum value of the enumeration
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the shutter speed that is used in video mode.

○ Property Details

In this property, the upper 2 bytes of PropertyValue are treated as the numerator of the shutter speed, and the lower 2 bytes are treated as the denominator.

If the enum value changes, update the enum value and DefaultValue. Enumerated values vary depending on the following factors.

Table 6.5.12-1 Associated properties

Property	Ref.	
ExposureEVStep	6.5.4.14	Exposure step value
ExternalSpeedLightExist	6.5.9.1	Speedlight attached
MovieRecordScreenSize	6.5.3.7	Image size / Frame rate
MovieExtendedShutterSpeedsManual	6.5.4.56	Extended shutter speed (M mode)

The shutter speed on the low-speed side changes depending on the setting of the video frame rate. The relationship between each frame rate and the shutter speed is shown below.

In addition, if the extended shutter speed is valid and the video frame rate setting is not 100 fps or the 120fps, shutter speed becomes 1/4 seconds regardless of the setting of the video frame rate.

Video frame rate	ExposureEVStep		
	1/3 step	1/2 step	1 step
120fps	1/125	1/125	1/125
100fps	1/100	1/90	1/125
60fps	1/60	1/60	1/60
50fps	1/50	1/60	1/60
30fps	1/30	1/30	1/30
25fps	1/25	1/30	1/30
24fps	1/25	1/30	1/30

Do Not Copy

○ Property Value

The valid PropertyValues are shown below.

Shutter speed:

Property Value	Description
Upper 2 bytes	Numerator of the shutter speed
Lower 2 bytes	Denominator of the shutter speed

Example of the shutter speed:

For 1/250 sec. PropertyValue = 0x000100FA
For 25 sec. PropertyValue = 0x00190001

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the ExposureProgramMode property (section 6.5.1.11) is anything other than M.
	The WarningStatus property (section 6.5.6.24) is [Sequence error], [Minimum aperture warning] or [Retractable zoom-ring warning].
	The MovieTVLockSetting property (section 6.5.4.49) is [On].

Do Not Copy

6.5.12.3 MovieExposureBiasCompensation

○ Property Specifications

Property Code	0xD1AB
DataType	INT16
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	0 [0.0 EV]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the compensation value of the exposure compensation that is used in video mode.

○ Property Value

The valid PropertyValues are shown below.

The value of PropertyValue changes depending on the value of the ExposureEVStep property (section 6.5.4.14).

Property Value	Description	ExposureEVStep		
		1/3 step	1/2 step	1 step
+3000	+3.0 EV	✓	✓	✓
+2666	+2.7 EV	✓	-	✓
+2500	+2.5 EV	-	✓	-
+2333	+2.3 EV	✓	-	✓
+2000	+2.0 EV	✓	✓	✓
+1666	+1.7 EV	✓	-	✓
+1500	+1.5 EV	-	✓	-
+1333	+1.3 EV	✓	-	✓
+1000	+1.0 EV	✓	✓	✓
+666	+0.7 EV	✓	-	✓
+500	+0.5 EV	-	✓	-
+333	+0.3 EV	✓	-	✓
0	0.0 EV	✓	✓	✓
-333	-0.3 EV	✓	-	✓
-500	-0.5 EV	-	✓	-
-666	-0.7 EV	✓	-	✓
-1000	-1.0 EV	✓	✓	✓
-1333	-1.3 EV	✓	-	✓
-1500	-1.5 EV	-	✓	-
-1666	-1.7 EV	✓	-	✓
-2000	-2.0 EV	✓	✓	✓
-2333	-2.3 EV	✓	-	✓
-2500	-2.5 EV	-	✓	-
-2666	-2.7 EV	✓	-	✓
-3000	-3.0 EV	✓	✓	✓

Do Not Copy

6.5.12.4 MovieLogOutput

○ Property Specifications

Property Code	0xD0BB
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the state of N-log/HDR(HLG) control in the camera.

○ Property Details

The output destination of the control state changes depending on the value of the MovieFileType property (section 6.5.3.2).

If the MovieFileType property is "H.265 10-bit (MOV)", refer to the MovieH265ToneMode property (Section 6.5.3.3).

For "ProRes 422 HQ 10-bit (MOV)", see MovieProResToneMode property (Section 6.5.3.5).

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off (Not outputting)
1	On (Outputting)

Do Not Copy

6.5.12.5 MovieRecProhibitionCondition

○ Property Specifications

Property Code	0xD0A4
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x00000000
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the video recording prohibition condition.

○ Property Details

When the PropertyValue is a value other than 0, the video recording cannot be started.
When the live view is not started, the value of PropertyValue is not fixed. Even if a value has been entered, it is not guaranteed.

○ Property Value

The valid PropertyValues are shown below.
The PropertyValue takes the following values in the bit assignment. (1: Valid, 0: Invalid)

Bit	Description
From Bit21 to Bit31	Reserved
Bit20	If any of the following conditions are met when MovieFileType property (section 6.5.3.2) is set to [ProRes RAW HQ 12-bit (MOV)] or [N-RAW 12-bit (NEV)]. - Video Record Destination is set to SD card. - The format of the card that is set as Video Record Destination is FAT32.
Bit19	During warning / error of lens factor
Bit18	During sequence error
Bit15 to Bit17	Reserved
Bit14	The camera is not in the application mode.
Bit13	During photo mode
Bit12	During enlarged display of live view
Bit11	Card is protected.
Bit10	During video recording
Bit9	There are images or videos not recorded in the buffer.
Bit4 to Bit8	Reserved
Bit3	No free area in the card
Bit2	Card not formatted
Bit1	Card access error
Bit0	No card inserted. (When waiting for synchronous recording by an external recording device, 0: Invalid even if there is no card.)

Do Not Copy

6.5.13 Vendor (Picture Control)

6.5.13.1 ActivePicCtrlItem

○ Property Specifications

Property Code	0xD200
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	8 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the picture control item whose setting is currently valid.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	PictureControl Type
1	Standard	-
2	Neutral	-
3	Vivid	-
4	Monochrome	Monochrome style picture control
5	Portrait	-
6	Landscape	-
7	Flat	-
8	Auto	-
11	Rich Tone Portrait	-
101	Dream	Creative Picture Control
102	Morning	
103	Pop	
104	Sunday	
105	Somber	
106	Drama	
107	Silence	
108	Bleach	
109	Melancholic	
110	Pure	
111	Denim	
112	Toy	
113	Sepia	
114	Blue	
115	Red	
116	Pink	
117	Charcoal	
118	Graphite	
119	Binary	
120	Carbon	
From 201 to 209	Custom Picture Control (from 1 to 9)	A custom picture control is a type of picture control based on it.

Do Not Copy

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_Status	Setting to an unregistered area was performed for the custom picture control.

6.5.13.2 MovieActivePicCtrlItem

○ Property Specifications

Property Code	0xD237
DataType	UINT16
Description form	Enumeration
Get / Set	Get / Set
Default Value	100 [Same as photo settings]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the picture control item whose setting is currently valid in the video recording menu.

○ Property Details

When the property value is set to [Same as photography setting], the picture control specified by ActivePicCtrlItem (section 6.5.13.1) is used.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description	PictureControl Type
1	Standard	-
2	Neutral	-
3	Vivid	-
4	Monochrome	Monochrome style picture control
5	Portrait	-
6	Landscape	-
7	Flat	-
8	Auto	-
11	Rich Tone Portrait	-
100	Same as photography setting	-
101	Dream	Creative Picture Control
102	Morning	
103	Pop	
104	Sunday	
105	Somber	
106	Drama	
107	Silence	
108	Bleach	
109	Melancholic	
110	Pure	
111	Denim	
112	Toy	
113	Sepia	
114	Blue	
115	Red	
116	Pink	
117	Charcoal	
118	Graphite	
119	Binary	
120	Carbon	
From 201 to 209	Custom Picture Control (from 1 to 9)	A custom picture control is a type of picture

Do Not Copy

		control based on it.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_Status	Setting to an unregistered area was performed for the custom picture control.
Access_Denied	If the ToneMode is set to N-Log or HLG (If any of the following conditions are met). - MovieFileType property (section 6.5.3.2) is set to [H.265 10-bit(MOV)] and MovieH265ToneMode property (section 6.5.3.3) is set to [N-Log] or [HLG]. - MovieFileType property is set to [ProRes 422 HQ 10-bit(MOV] and MovieProResToneMode property (section 6.5.3.5) is set to [N-Log]. - MovieFileType property is set to [N-RAW 12-bit(NEV] and MovieNRaw12bitToneMode property (section 6.5.3.4) is set to [N-Log]. - MovieFileType property is set to [ProRes RAW HQ 12-bit(MOV] and MovieProResRawHq12bitToneMode property (section 6.5.3.6) is set to [N-Log].

Do Not Copy

6.5.14 Vendor (Auto Capture)

6.5.14.1 AutoCaptureMode

○ Property Specifications

Property Code	0x0001D02B
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the current auto capture mode.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	OFF
1	Shooting mode
2	Check mode
3	Setting mode
4	Advanced mode: Motion
5	Advanced mode: Subject detection
6	Advanced mode: Distance
7	Capture area setting mode

Do Not Copy

6.5.14.2 AutoCaptureCaptureCriteria

○ Property Specifications

Property Code	0x0001D052
DataType	UINT8
Description form	None
Get / Set	Get, Get / Set
Default Value	2 [Motion]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the capture conditions for auto capture.

○ Property Value

The valid PropertyValues are shown below.

PropertyValue takes the following values with bit assignment. (1: Enabled, 0: Disabled)

Bit	Description
Bit3 to Bit7	Reserved
Bit2	Subject detection
Bit1	Motion
Bit0	Distance

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Value	All bits are set to "Disabled".
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Setting mode".

Do Not Copy

6.5.14.3 AutoCaptureMotionSpeed

○ **Property Specifications**

Property Code	0x0001D053
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	1
Property Value	From1 to 5

○ **Property Outline**

Indicates “Advanced: Motion – Speed” for auto capture.

○ **Response Code**

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Motion".

6.5.14.4 AutoCaptureMotionSubjectSize

○ **Property Specifications**

Property Code	0x0001D054
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	1
Property Value	From1 to 5

○ **Property Outline**

Indicates “Advanced: Motion – Subject Size” for auto capture.

○ **Response Code**

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Motion".

Do Not Copy

6.5.14.5 AutoCaptureMotionDirection

○ Property Specifications

Property Code	0x0001D055
DataType	UINT8
Description form	None
Get / Set	Get, Get / Set
Default Value	0xFF [All Directions]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Advanced: Motion – Direction of motion” for auto capture.

○ Property Value

The valid PropertyValues are shown below.

The PropertyValue takes the following values in the bit assignment. (1: Valid, 0: Invalid)

Bit	Description
Bit7	Up
Bit6	Down
Bit5	Left
Bit4	Right
Bit3	Upper left
Bit2	Upper right
Bit1	Lower left
Bit0	Lower right

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Invalid_DeviceProp_Value	All bits are set to "Invalid".
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Motion".

Do Not Copy

6.5.14.6 AutoCaptureSubjectDetectionSize

○ Property Specifications

Property Code	0x0001D056
DataType	UINT8
Description form	Range
Get / Set	Get, Get / Set
Default Value	1
Property Value	From1 to 5

○ Property Outline

Indicates “Advanced: Subject detection – Subject Size” for auto capture.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Subject detection".

6.5.14.7 AutoCaptureSubjectDetectionType

○ Property Specifications

Property Code	0x0001D057
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [Auto]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Advanced: Subject detection – Subject Type” for auto capture.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	Auto
2	People
3	Animal
4	Vehicle
6	Airplanes

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Subject detection".

Do Not Copy

6.5.14.8 AutoCaptureFocusNear

○ Property Specifications

Property Code	0x0001D02E
DataType	UINT16
Description form	Range
Get / Set	Get, Get / Set
Default Value	1 [0.1m]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Advanced: Distance – Near” for auto capture.

○ Property Details

PropertyValue is the value multiplied by 10 the shooting distance range (m).

Values outside the range of the AutoCaptureFocusRange property (section 6.5.14.10) can be set, but the values will not be valid when executing auto capture.

This property cannot be set for lenses with restrictions.
(If you want to set the shooting distance range, you can only set it using the MeasureAutoCaptureFocus command (section 6.2.11.2).)

If the AutoCaptureMode property (section 6.5.14.1) is "OFF", PropertyValue is undefined.

If the shooting distance range is 20m or more, this property can be set in 0.1m increments, but the camera only displays the integer part and does not display the decimal part.

○ Property Value

For lenses with restrictions, the PropertyValue range is 0 to 9990 (0m to 999m).
For lenses with no restriction, the PropertyValue range is 1 to 9990 (0.1m to 999m).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Distance".
	A lense with restrictions is mounted.

Do Not Copy

6.5.14.9 AutoCaptureFocusFar

○ Property Specifications

Property Code	0x0001D02F
DataType	UINT16
Description form	Range
Get / Set	Get, Get / Set
Default Value	1 [0.1m]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Advanced: Distance – Far” for auto capture.

○ Property Details

Same as the AutoCaptureFocusNear property (section 6.5.14.8).

○ Property Value

Same as the AutoCaptureFocusNear property (section 6.5.14.8).

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	During PC camera mode
	The AutoCaptureMode property (section 6.5.14.1) is set to other than "Distance".
	A lense with restrictions is mounted.

Do Not Copy

6.5.14.10 AutoCaptureFocusRange

○ Property Specifications

Property Code	0x0001D061
DataType	AUINT16
Description form	None
Get / Set	Get
Default Value	Array[0], [2]：1 [0.1m] Array[1], [3]：9990 [999m]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the minimum and maximum setting values of “Advanced: Distance” for auto capture depending on the attached lens.

○ Property Details

PropertyValue is the value multiplied by 10 minimum and maximum setting values (m) for Near and Far.

If a lens with restrictions is attached, the minimum value of Near and Far is 1, and the maximum value is 9990.

If the AutoCaptureMode property (section 6.5.14.1) is "OFF", PropertyValue is undefined.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
NumElement	Number of elements in this array
Array[0]	Minimum value for Near
Array[1]	Maximum value for Near
Array[2]	Minimum value for Far
Array[3]	Maximum value for Far

Do Not Copy

6.5.14.11 AutoCaptureRecordingTime

○ Property Specifications

Property Code	0x0001D058
DataType	UINT16
Description form	Enumeration
Get / Set	Get
Default Value	0 [Off]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Timing options – Recording time selection” for auto capture.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Off
1	1 sec.
2	2 sec.
3	3 sec.
5	5 sec.
10	10 sec.
20	20 sec.
30	30 sec.
60	1 min.
180	3 min.
300	5 min.
600	10 min.
1800	30 min.

Do Not Copy

6.5.14.12 AutoCaptureWaitAfterShootingTime

○ Property Specifications

Property Code	0x0001D059
DataType	UINT16
Description form	Enumeration
Get / Set	Get
Default Value	0 [0 sec.]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Timing options – Wait after shooting” for auto capture.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	0 sec.
1	1 sec.
2	2 sec.
3	3 sec.
5	5 sec.
10	10 sec.
20	20 sec.
30	30 sec.
60	1 min.
180	3 min.
300	5 min.
600	10 min.
1800	30 min.

Do Not Copy

6.5.14.13 AutoCaptureSelectUserPreset

○ Property Specifications

Property Code	0x0001D05A
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [User preset 1]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Select user preset” for auto capture photo.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	User preset 1
2	User preset 2
3	User preset 3
4	User preset 4
5	User preset 5

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The AutoCaptureMode property (section 6.5.14.1) is set to other than "OFF".

Do Not Copy

6.5.14.14 AutoCaptureMovieSelectUserPreset

○ Property Specifications

Property Code	0x0001D05B
DataType	UINT8
Description form	Enumeration
Get / Set	Get, Get / Set
Default Value	1 [User preset 1]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates “Select user preset” for auto capture video.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	User preset 1
2	User preset 2
3	User preset 3
4	User preset 4
5	User preset 5

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The AutoCaptureMode property (section 6.5.14.1) is set to other than "OFF".

Do Not Copy

6.5.14.15 AutoCaptureProhibitCondition

○ Property Specifications

Property Code	0x0001D030
DataType	UINT8
Description form	None
Get / Set	Get
Default Value	0
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates whether auto capture is executable.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Auto capture is executable.
1	Execution of auto capture is prohibited.

Do Not Copy

6.5.15 Vendor (Power Supply)

6.5.15.1 ExternalDC-IN

○ Property Specifications

Property Code	0xD101
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [Not connected]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the AC adapter connection status.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	Not connected
1	Connected

Do Not Copy

6.5.16 Vendor (USB)

6.5.16.1 USBSpeed

○ Property Specifications

Property Code	0xD10C
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	2 [Super-Speed]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the maximum data transfer speed of USB.
When the Super-Speed is not selected, the property value is High-Speed.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
1	High-Speed
2	Super-Speed

6.5.16.2 ConnectionPath

○ Property Specifications

Property Code	0xD12E
DataType	UINT8
Description form	Enumeration
Get / Set	Get
Default Value	0 [USB]
Property Value	Refer to Property Value in this section.

○ Property Outline

Indicates the connection path for PTP communication.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0	USB
2	Built-in Wi-Fi
3	Wired LAN

Do Not Copy

6.5.17 Vendor (MTP)

6.5.17.1 SessionInitiatorVersionInfo

○ **Property Specifications**

Property Code	0xD406
DataType	String
Description form	None
Get / Set	Get / Set
Default Value	“Windows/6.0.5330.0 MTPClassDriver/6.0.5330.0” [Session initiator version information character string]
Property Value	(Depends on the camera setting)

○ **Property Outline**

Indicates the version information of the host in open session.

○ **Property Details**

The PropertyValue should be a PTP string of 255 characters or shorter.
(HTTP 1.1 spec (RFC 2068) User Agent string format)

6.5.17.2 PerceivedDeviceType

○ **Property Specifications**

Property Code	0xD407
DataType	UINT32
Description form	None
Get / Set	Get
Default Value	0x00000001 [Digital still camera]
Property Value	0x00000001 [Digital still camera]

○ **Property Outline**

Indicates the type of the device.

6.5.17.3 UseDeviceStageFlag

○ **Property Specifications**

Property Code	0xD303
DataType	UINT8
Description form	None
Get / Set	Get
Default Value	0x01 [On]
Property Value	0x01 [On]

○ **Property Outline**

Indicates that the device can use Device Stage when the PropertyValue is a value other than 0. Windows searches the metadata of Device Stage in the metadata service until the device installation is completed. If the metadata of Device Stage in the server of Microsoft cannot be acquired, Windows displays Baseline Experience instead of Device Stage.

Do Not Copy

6.6 ObjectPropCode

Each of the objects in the camera has various sorts of specific information. As a method of transmission/reception of object information, an operation already exists in the PTP for operating the ObjectInfo data set. However, this is a static data set that cannot be expanded and includes basic information on the object. Various metadata concerning objects can be handled by operating the object property. Each object property has a corresponding ObjectPropCode.

The ObjectPropCodes supported by the camera are shown below.

Object Code	Description	Reference item
0xDC01	StorageID	6.6.1.1
0xDC02	ObjectFormat	6.6.1.2
0xDC03	ProtectionStatus	6.6.1.3
0xDC04	ObjectSize	6.6.1.4
0xDC07	ObjectFilename	6.6.1.5
0xDC08	DateCreated	6.6.1.6
0xDC09	DateModified	6.6.1.7
0xDC0B	ParentObject	6.6.1.8
0xDC0D	Hidden	6.6.1.9
0xDC41	PersistentUniqueObjectIdentifier	6.6.1.10
0xDC44	Name	6.6.1.11
0xDC81	RepresentativeSampleFormat	6.6.2.1
0xDC82	RepresentativeSampleSize	6.6.2.2
0xDC83	RepresentativeSampleHeight	6.6.2.3
0xDC84	RepresentativeSampleWidth	6.6.2.4
0xDC86	RepresentativeSampleData	6.6.2.5
0xDC87	Width	6.6.3.1
0xDC88	Height	6.6.3.2
0xDC8A	Rating	6.6.3.3
0xDCD3	ImageBitDepth	6.6.3.4
0xDC89	Duration	6.6.4.1
0xDE93	SampleRate	6.6.4.2
0xDE94	NumberOfChannels	6.6.4.3
0xDE97	ScanType	6.6.4.4
0xDE9A	AudioBitRate	6.6.4.5
0xDE9B	VideoFourCCCode	6.6.4.6
0xDE9C	VideoBitRate	6.6.4.7
0xDE9D	FramesPerThousandSeconds	6.6.4.8

Do Not Copy

6.6.1 Object Information

6.6.1.1 StorageID

○ Property Specifications

Property Code	0xDC01
DataType	UINT32
Get / Set	Get
Default Value	0x00010001
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the StorageID of the object. (It is the same value as that of the first field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00010001	Slot 1
0x00020001	Slot 2

Do Not Copy

6.6.1.2 ObjectFormat

○ Property Specifications

Property Code	0xDC02
DataType	UINT16
Get / Set	Get
Default Value	0x3000
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the ObjectFormatCode of the object. (It is the same value as that of the second field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x3000	Undefined
0x3001	Association
0x3002	Script
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format（H.264/AVC）
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.1.3 ProtectionStatus

○ Property Specifications

Property Code	0xDC03
DataType	UINT16
Get / Set	Get
Default Value	0x0000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the protection status of the object. (It is the same value as that of the third field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Protection is not set.
0x0001	Protection is set. Read-only.

Do Not Copy

6.6.1.4 ObjectSize

○ Property Specifications

Property Code	0xDC04
DataType	UINT64
Get / Set	Get
Default Value	0x0000000000000000
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	(Object size)

○ Property Outline

This indicates the size of the object in units of bytes. (It is the same value as that of the fourth field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

Do Not Copy

6.6.1.5 ObjectFilename

○ Property Specifications

Property Code	0xDC07
DataType	String
Get / Set	Get
Default Value	0x00 (Null)
Group Code	0x00000001
Form Flag	0x05 (RegEx)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates an optional string that shows a file name of an object. (It is the same value as that of the sixteenth field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

However, the ObjectPropDesc returned in the Image format differs from that returned in the Association format.

○ Property Value

The valid PropertyValues are shown below.

ObjectFormat	RegEx
Association	[0-9]{3}[_a-zA-Z0-9]{5}
Other than Association	[_a-zA-Z]{4}[0-9]{4}¥.[a-zA-Z]{3}

Do Not Copy

6.6.1.6 DateCreated

○ Property Specifications

Property Code	0xDC08
DataType	String
Get / Set	Get
Default Value	0x00 (Null)
Group Code	0x00000001
Form Flag	0x03 (DateTime)
Property Value	(Date and time of object creation)

○ Property Outline

This indicates a string that shows the date and time of object creation. (It is the same value as that of the seventeenth field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

Do Not Copy

6.6.1.7 DateModified

○ Property Specifications

Property Code	0xDC09
DataType	String
Get / Set	Get
Default Value	0x00 (Null)
Group Code	0x00000001
Form Flag	0x03 (DateTime)
Property Value	(Date and time of object update)

○ Property Outline

This indicates a string that shows the date and time of object update. (It is the same value as that of the eighteenth field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

Do Not Copy

6.6.1.8 ParentObject

○ Property Specifications

Property Code	0xDC0B
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	(ObjectHandle of the parent object of the specified object)

○ Property Outline

This indicates the ObjectHandle of the parent object of the object. (It is the same value as that of the twelfth field of the ObjectInfo data set.)

It is applied to the objects of all the formats supported by the camera.

Do Not Copy

6.6.1.9 Hidden

○ Property Specifications

Property Code	0xDC0D
DataType	UINT16
Get / Set	Get
Default Value	0x0000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	(Hidden attribute of the object)

○ Property Outline

This indicates a hidden attribute of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3000	Undefined
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Displayed object
0x0001	Hidden object

Do Not Copy

6.6.1.10 PersistentUniqueObjectIdentifier

○ Property Specifications

Property Code	0xDC41
DataType	UINT128
Get / Set	Get
Default Value	0x00^16
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	(Object-specific identifier)

○ Property Outline

This indicates an object-specific identifier (PUOID).
It is applied to the objects of all the formats supported by the camera.

The generation rule of the PUOID is shown below.

0 through 3	4 through 15
ObjectHandle (4Byte)	Reserved (0)

Do Not Copy

6.6.1.11 Name

○ Property Specifications

Property Code	0xDC44
DataType	String
Get / Set	Get
Default Value	0x00 (Null)
Group Code	0x00000001
Form Flag	0x00 (None)
Property Value	(File name of an object)

○ Property Outline

This indicates an optional string that shows a file name of an object. (It should be the same value as that of ObjectFilename.)

It is applied to the objects of all the formats supported by the camera.

Do Not Copy

6.6.2 Thumbnail

6.6.2.1 RepresentativeSampleFormat

○ Property Specifications

Property Code	0xDC81
DataType	UINT16
Get / Set	Get
Default Value	0x3000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the ObjectFormatCode of the thumbnail image.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

PropertyValue	Setting
0x3000	Undefined
0x3808	JFIF
0x380D	TIFF

Do Not Copy

6.6.2.2 RepresentativeSampleSize

○ Property Specifications

Property Code	0xDC82
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 0x00010000

○ Property Outline

This indicates the size of the thumbnail in bytes.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.2.3 RepresentativeSampleHeight

○ Property Specifications

Property Code	0xDC83
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 120

○ Property Outline

This indicates the height of the thumbnail in pixels.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.2.4 RepresentativeSampleWidth

○ Property Specifications

Property Code	0xDC84
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 160

○ Property Outline

This indicates the width of the thumbnail in pixels.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.2.5 RepresentativeSampleData

○ Property Specifications

Property Code	0xDC86
DataType	AUINT8
Get / Set	Get
Default Value	0x00000000
Group Code	0xFFFFFFFF
Form Flag	0x06 (ByteArray)
Property Value	From 0 to 0x00010000

○ Property Outline

This indicates the thumbnail data.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.3 Image Information

6.6.3.1 Width

○ Property Specifications

Property Code	0xDC87
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 10000

○ Property Outline

This indicates the width of the object in pixels.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.3.2 Height

○ Property Specifications

Property Code	0xDC88
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 10000

○ Property Outline

This indicates the height of the object in pixels.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.3.3 Rating

○ Property Specifications

Property Code	0xDC8A
DataType	UINT16
Get / Set	Get / Set
Default Value	0
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 100

○ Property Outline

This indicates the rating of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0x380D	TIFF
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

If you set a value of 100 or less that does not correspond to the following, it will be rounded down.
Example: If you set 60, it will be 50.

Property Value	Rating setting
0	None
1	★
25	★★
50	★★★
75	★★★★
100	★★★★★

Do Not Copy

6.6.3.4 ImageBitDepth

○ Property Specifications

Property Code	0xDCD3
DataType	UINT32
Get / Set	Get
Default Value	0x0000000C
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the bit depth of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3800	Unknown Image Object
0x3801	EXIF/JPEG
0x380D	TIFF

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000000C	12bit
0x0000000E	14bit
0x00000018	24bit

Do Not Copy

6.6.4 Video Information

6.6.4.1 Duration

○ Property Specifications

Property Code	0xDC89
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0 to 0x001B773F (1799999msec)

○ Property Outline

This indicates the length of the object in msec.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.4.2 SampleRate

○ Property Specifications

Property Code	0xDE93
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the sample rate of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00000000	0 Hz (no sound)/Unknown
0x00002EE0	12.000 Hz
0x00005DC0	24.000 Hz
0x0000BB80	48.000 Hz

Do Not Copy

6.6.4.3 NumberOfChannels

○ Property Specifications

Property Code	0xDE94
DataType	UINT16
Get / Set	Get
Default Value	0x0000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the number of channels of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Unused (no sound)/Unknown
0x0001	Monaural (1ch)
0x0002	Stereo (2ch)

Do Not Copy

6.6.4.4 ScanType

○ Property Specifications

Property Code	0xDE97
DataType	UINT16
Get / Set	Get
Default Value	0x0000
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the scan type of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x0000	Unused

Do Not Copy

6.6.4.5 AudioBitRate

○ Property Specifications

Property Code	0xDE9A
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0x00000000 (No sound/Unknown) to 0x00177000

○ Property Outline

This indicates the audio bit rate of the object.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x3008	WAV
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.4.6 VideoFourCCCode

○ Property Specifications

Property Code	0xDE9B
DataType	UINT32
Get / Set	Get
Default Value	0x31637661
Group Code	0x00000001
Form Flag	0x02 (Enumeration)
Property Value	Refer to Property Value in this section.

○ Property Outline

This indicates the FourCC code for the video codec.
It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

○ Property Value

The valid PropertyValues are shown below.

Property Value	Description
0x00000000	Indefinite (ProRes 422 HQ/ProRes RAW/TICO RAW)
0x31637661	“avc1”
0x31637668	“hvc1”

Do Not Copy

6.6.4.7 VideoBitRate

○ Property Specifications

Property Code	0xDE9C
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	From 0x00000000 (Unknown) to 0xFFFFFFFF

○ Property Outline

This indicates the number of bits of the object processed per sec.

The PropertyValue should be a value obtained by multiplying the maximum number of bytes per sec. of the object by 8 (bit).

It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.6.4.8 FramesPerThousandSeconds

○ Property Specifications

Property Code	0xDE9D
DataType	UINT32
Get / Set	Get
Default Value	0x00000000
Group Code	0x00000001
Form Flag	0x01 (Range)
Property Value	(Frame rate of the object)

○ Property Outline

This indicates the frame rate of the object.
Since the value of the property is represented by 1/1000 frame, 29.97fps becomes 29970.

It is applied to the objects of the following formats.

ObjectFormatCode	Description
0x300D	MOV Apple QuickTime Video Format (H.264/AVC)
0xB201	NEV
0xB982	MP4 Container

Do Not Copy

6.7 SBAttributeCode

The flash has various peculiar information. The various metadata for the flash can be handled by operating the flash attributes. Each flash attribute has corresponding SBAttrID and SBGroupAttrID.

The camera supports the following SBAttrID and SBGroupAttrID.

SBAttrID	Description	Reference
0x1001	SBName	6.7.1.1
0x1002	SBGroupID	6.7.1.2
0x1003	SBStatus	6.7.1.3
0x1005	SBTestFlashDisable	6.7.1.4

SBGroupAttrID	Description	Reference
0x4001	SBGroupFlashMode	6.7.2.1
0x4002	SBGroupFlashCompensation	6.7.2.2
0x4003	SBGroupFlashRatio	6.7.2.3
0x4004	SBGroupFlashLevel	6.7.2.4
0x4005	SBGroupFlashRange	6.7.2.5
0x4006	SBGroupRepeat	6.7.2.6
0x4007	SBGroupRepeatCount	6.7.2.7
0x4008	SBGroupRepeatInterval	6.7.2.8
0x4009	SBGroupValid	6.7.2.9

Do Not Copy

6.7.1 SBAttribute

6.7.1.1 SBName

○ Attribute Specifications

SBAttrID	0x1001
DataType	String
Get / Set	Get / Set
Default Value	“Noused”
FormFlag	None
Attribute Value	(SB model name / nickname)

○ Attribute Outline

This indicates the string to express the name or the nickname of the remote flash.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	In video mode.

Do Not Copy

6.7.1.2 SBGroupID

Attribute Specifications

SBAttrID	0x1002
DataType	SBGroupID
Get / Set	Get
Default Value	0x00000000
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

Attribute Outline

This indicates the SBGroupID of the flash.

Attribute Value

For the AttributeValue, refer to the SBGroupID (section 7.6).

Do Not Copy

6.7.1.3 SBStatus

○ Attribute Specifications

SBAttrID	0x1003
DataType	UINT8
Get / Set	Get
Default Value	0x01
FormFlag	None
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the ready state of the remote flash.

○ Attribute Details

When getting this attribute with specifying the master flash, the GetSBAttrDesc and the GetSBAttrValue commands respond Invalid_Parameter.

Use the ExternalSpeedLightStatus property (section 6.5.9.3) to get the ready state of the master flash.

○ Attribute Value

The valid AttributeValues are shown below.

Attribute Value	Description
From Bit3 to Bit7	(Reserved)
Bit2	High temperature error
Bit1	Battery warning
Bit0	Ready

Do Not Copy

6.7.1.4 SBTestFlashDisable

○ Attribute Specifications

SBAttrID	0x1005
DataType	UINT8
Get / Set	Get
Default Value	0
FormFlag	None
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the disabled state for the test firing of the flash.

○ Attribute Value

The valid AttributeValues are shown below.

Attribute Value	Description
0	Enable firing
Other than 0	Disable firing

Do Not Copy

6.7.2 SBGroupAttribute

6.7.2.1 SBGroupFlashMode

○ Attribute Specifications

SBGroupAttrID	0x4001
DataType	UINT8
Get / Set	Get / Set
Default Value	The default value differs depending on the flash group.
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the flash mode of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.

Attribute Value	Description
0	Off
1	[TTL-BL] i-TTL balanced fill flash *
2	[TTL] i-TTL fill flash
3	[AA] Auto aperture
4	[A] Non-TTL auto *
5	[GN] Distance-priority manual *
6	[M] Manual
7	[RPT] Repeating flash *

* This can be used on the case of the stand-alone flash or the main flash.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The flash group that cannot be used was specified. (The specified group is not in the values of the SBUsableGroup (section 6.5.9.9).)
	The value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is [Repeating].

* Except that the value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is [Quick wireless lighting].

Do Not Copy

6.7.2.2 SBGroupFlashCompensation

○ Attribute Specifications

SBGroupAttrID	0x4002
DataType	INT8
Get / Set	Get, Get / Set
Default Value	0 [0.0EV]
FormFlag	Range
Attribute Value	From -18[-3.0EV] to +18[+3.0EV]

○ Attribute Outline

This indicates the flash group compensation value in units of 1/6 EV.
When the attached flash does not support this function, the value of this attribute is not fixed.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The flash group that cannot be used was specified. (The specified group is not in the values of the SBUsableGroup (section 6.5.9.9).)
	The value of the SBGroupFlashMode property (section 6.7.2.1) for the specified flash group is [Off], [Manual] or [Repeating flash].
	The value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is [Repeating].

* Except that the value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is [Quick wireless lighting].

Do Not Copy

6.7.2.3 SBGroupFlashRatio

○ Attribute Specifications

SBGroupAttrID	0x4003
DataType	UINT8
Get / Set	Get, Get / Set
Default Value	7 [1:1]
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the ratio of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.
When the attached flash does not support this function, the value of this attribute is not fixed.

Attribute Value	Description
0	1:--
1	8:1
2	6:1
3	4:1
4	3:1
5	2:1
6	1.5:1
7	1:1
8	1:1.5
9	1:2
10	1:3
11	1:4
12	1:6
13	1:8
14	--:1

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash].
	The value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is other than [Quick wireless lighting].

Do Not Copy

6.7.2.4 SBGroupFlashLevel

○ Attribute Specifications

SBGroupAttrID	0x4004
DataType	UINT8
Get / Set	Get, Get / Set
Default Value	The default value differs depending on the flash mode.
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the flash level of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.

Attribute Value	Description
1	1/1(Full)
2	1/1 – 0.3(Full - 1/3 step)
3	1/1 – 0.7(Full - 2/3 step)
4	1/2
5	1/2 – 0.3
6	1/2 – 0.7
7	1/4
8	1/4 – 0.3
9	1/4 – 0.7
10	1/8
11	1/8 – 0.3
12	1/8 – 0.7
13	1/16
14	1/16 – 0.3
15	1/16 – 0.7
16	1/32
17	1/32 – 0.3
18	1/32 – 0.7
19	1/64
20	1/64 – 0.3
21	1/64 – 0.7
22	1/128
23	1/128 – 0.3
24	1/128 – 0.7
25	1/256

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The flash group that cannot be used was specified. (The specified group is not in the values of the SBUsableGroup (section 6.5.9.9).)
	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] and the value of the SBGroupFlashMode property

Do Not Copy

	(section 6.7.2.1) for the master flash is not [Off], [Manual] or [Repeating flash].
	The value of the SBGroupFlashMode property (section 6.7.2.1) is other than [Manual].

* Except that the value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is [Quick wireless lighting] or [Repeating].

Do Not Copy

6.7.2.5 SBGroupFlashRange

○ Attribute Specifications

SBGroupAttrID	0x4005
DataType	UINT32
Get / Set	Get, Get / Set
Default Value	13 [2.0[m]/6.6[ft]]
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the distance of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.
When the attached flash does not support this function, the value of this attribute is not fixed.

Attribute Value	Description	Attribute Value	Description
0	0.3[m]/1.0[ft]	17	3.2[m]/10[ft]
1	0.4[m]/1.3[ft]	18	3.6[m]/12[ft]
2	0.5[m]/1.7[ft]	19	4.0[m]/13[ft]
3	0.6[m]/2.0[ft]	20	4.5[m]/15[ft]
4	0.7[m]/2.3[ft]	21	5.0[m]/17[ft]
5	0.8[m]/2.6[ft]	22	5.6[m]/19[ft]
6	0.9[m]/2.9[ft]	23	6.3[m]/21[ft]
7	1.0[m]/3.3[ft]	24	7.1[m]/23[ft]
8	1.1[m]/3.7[ft]	25	8.0[m]/26[ft]
9	1.3[m]/4.1[ft]	26	9.0[m]/29[ft]
10	1.4[m]/4.6[ft]	27	10[m]/33[ft]
11	1.6[m]/5.2[ft]	28	11[m]/37[ft]
12	1.8[m]/5.8[ft]	29	13[m]/42[ft]
13	2.0[m]/6.6[ft]	30	14[m]/47[ft]
14	2.2[m]/7.4[ft]	31	16[m]/52[ft]
15	2.5[m]/8.3[ft]	32	18[m]/59[ft]
16	2.8[m]/9.3[ft]	33	20[m]/66[ft]

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The group of the master flash is invalid in the SBUsableGroup property (section 6.5.9.9).
	The value of the SBWirelessMode property (section 6.5.9.7) is other than [Stand-alone flash].
	The value of the SBGroupFlashMode property (section 6.7.2.1) for the master flash is other than [Distance-priority manual].

Do Not Copy

6.7.2.6 SBGroupRepeat

○ Attribute Specifications

SBGroupAttrID	0x4006
DataType	UINT8
Get / Set	Get, Get / Set
Default Value	The default value differs depending on the flash group.
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the repeat setting of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.
When the attached flash does not support this function, the value of this attribute is not fixed.

Attribute Value	Description
0	Off
1	On

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The flash group that cannot be used was specified. (The specified group is not in the values of the SBUsableGroup (section 6.5.9.9).)
	The value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is not [Repeating].
	The value of the SBUsableGroup property (section 6.5.9.9) is zero (Cannot be used).

Do Not Copy

6.7.2.7 SBGroupRepeatCount

○ Attribute Specifications

SBGroupAttrID	0x4007
DataType	UINT8
Get / Set	Get, Get / Set
Default Value	10
FormFlag	Range
Attribute Value	From 2 to 90

○ Attribute Outline

This indicates the firing count of the flash group.
When the attached flash does not support this function, the value of this attribute is not fixed.

○ Attribute Details

The upper limit of the attribute value varies depending on the setting of the flash level and frequency. If the upper limit value varies, it is informed by the SBGroupAttrChanged event (section 6.4.2.15).

The number from 2 to 10 and the even number over 10 can be set.
When the odd number from 10 to 90 was set, it is converted to the even number by adding 1.

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] and the group of the master flash is invalid in the SBUsableGroup property (section 6.5.9.9).
	The value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is not [Repeating].
	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] and the value of the SBGroupFlashMode property (section 6.7.2.1) for the master flash is not [Repeating flash].
	The value of the SBUsableGroup property (section 6.5.9.9) is zero (Cannot be used).

Do Not Copy

6.7.2.8 SBGroupRepeatInterval

○ Attribute Specifications

SBGroupAttrID	0x4008
DataType	UINT16
Get / Set	Get, Get / Set
Default Value	9[10Hz]
FormFlag	Enumeration
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the repeat interval of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.
When the attached flash does not support this function, the value of this attribute is not fixed.

AttributeValue	Description
0	1Hz
1	2Hz
2	3Hz
3	4Hz
4	5Hz
5	6Hz
6	7Hz
7	8Hz
8	9Hz
9	10Hz
10	20Hz
11	30Hz
12	40Hz
13	50Hz
14	60Hz
15	70Hz
16	80Hz
17	90Hz
18	100Hz

Do Not Copy

○ Response Code

When the value is set under the following conditions, an error response is made and the value cannot be set.

Response Code	Description
Access_Denied	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] and the group of the master flash is invalid in the SBUsableGroup property (section 6.5.9.9).
	The value of the SBWirelessMode property (section 6.5.9.7) is anything other than [Stand-alone flash] and the value of the SBWirelessMultipleFlashMode property (section 6.5.9.8) is not [Repeating].
	The value of the SBWirelessMode property (section 6.5.9.7) is [Stand-alone flash] and the value of the SBGroupFlashMode property (section 6.7.2.1) for the master flash is not [Repeating flash].
	The value of the SBUsableGroup property (section 6.5.9.9) is zero (Cannot be used).

Do Not Copy

6.7.2.9 SBGroupValid

○ Attribute Specifications

SBGroupAttrID	0x4009
DataType	UINT8
Get / Set	Get
Default Value	0
FormFlag	None
Attribute Value	Refer to Attribute Value in this section.

○ Attribute Outline

This indicates the valid state of the flash group.

○ Attribute Value

The valid AttributeValues are shown below.

AttributeValue	Description
0	Invalid group
Other than 0	Valid group

Do Not Copy

7 Data Type

7.1 DataTypeCode

The standard data types used by the camera are shown below.

DataTypeCode	Type	Description
0x0001	INT8	Signed 8-bit integer
0x0002	UINT8	Unsigned 8-bit integer
0x0003	INT16	Signed 16-bit integer
0x0004	UINT16	Unsigned 16-bit integer
0x0005	INT32	Signed 32-bit integer
0x0006	UINT32	Unsigned 32-bit integer
0x0007	INT64	Signed 64-bit integer
0x0008	UINT64	Unsigned 64-bit integer
0x0009	INT128	Signed 128-bit integer
0x000A	UINT128	Unsigned 128-bit integer
0x4001	AINT8	Signed 8-bit integer array
0x4002	AUINT8	Unsigned 8-bit integer array
0x4003	AINT16	Signed 16-bit integer array
0x4004	AUINT16	Unsigned 16-bit integer array
0x4005	AINT32	Signed 32-bit integer array
0x4006	AUINT32	Unsigned 32-bit integer array
0x4007	AINT64	Signed 64-bit integer array
0x4008	AUINT64	Unsigned 64-bit integer array
0x4009	AINT128	Signed 128-bit integer array
0x400A	AUINT128	Unsigned 128-bit integer array
0xFFFF	STR	Variable length Unicode character string

Do Not Copy

7.2 Character String Format

The field representing the character string complies with the following format.
Each field data is stored in the little endian format.

Field	Size (Byte)	Data	Description
NumChar	1	N	Represents the number of characters in the string. The terminating null character is included. The maximum number of characters is 255.
StringChars [0]	2		Unicode character
StringChars [1]	2		Unicode character

StringChars [N - 1]	2	0x0000	Unicode character (null)

7.3 Date Format

The character string representing the date complies with the following format.
The date and time is shown in the form of the most significant value through the least significant value according to the format of ISO8601 standard. This is a Unicode string format of "YYYYMMDDThhmmss" where YYYY is the year, MM is the month, DD is the day of the month, T is a constant character, hh is the hours, mm is the minutes, and ss is the seconds past the minute. The data is stored in the following array for the transmission/reception between the camera and the host.

Field	Size (Byte)	Data	Description
NumChar	1	0x10	Represents the number of characters in the string. The terminating null character is included. The number of characters in the string representing the time is sixteen.
StringChars	32		Unicode string "YYYYMMDDThhmmss"

When the format setting is "YYYYMMDDThhmmss.xx", the data following "YYYYMMDDThhmmss" should be ignored for use.

7.4 Array Format

The array type complies with the following format. Each field data is stored in the little endian format.

Field	Size (Byte)	Data
NumElement	4	The number of array elements is N (N is the number of objects).
ArrayEntry [0]	ElementSize	ArrayData [0]
ArrayEntry [1]	ElementSize	ArrayData [1]
ArrayEntry [2]	ElementSize	ArrayData [2]

ArrayEntry [N - 1]	ElementSize	ArrayData [N - 1]

ElementSize: Data size of ArrayData

Do Not Copy

7.5 SBHandle

The SBHandle is used for identifying the flashes (the internal flash, speedlight or other flash units) connected to the camera.

The SBHandle takes an unsigned 32-bit value, and the unique number is assigned to each flash.

7.6 SBGroupID

The SBGroupID is the ID number for identifying the flash group.

SBGroupID	Description
0x00000001	Master flash
0x00000002	Group A
0x00000004	Group B
0x00000008	Group C
0x00000010	Group D
0x00000020	Group E
0x00000040	Group F

Do Not Copy

8 ObjectHandle

The ObjectHandle is used to represent the individual objects in the camera (image file, non-image file, directories, and the virtual association representing the relations of the images and the DCF objects conforming to the DCF standards).

The ObjectHandle is unsigned 32 bits. A unique value is set for the ObjectHandle indicating each object. The specified ObjectHandle is fixed in one session.

8.1 ObjectHandle of the Object Recorded in the Card

The camera sets a 4-byte unique value freely for the ObjectHandle created for the data in the card by the camera. The host application does not care the contents.

8.2 ObjectHandle of the Object Recorded in the SDRAM

The object recorded in the SDRAM is the image file only.

The host can access the image data in the SDRAM by specifying the ObjectHandle passed by ObjectAddedInSdram.

8.3 Addition of the ObjectHandle

The camera acts as shown below when an object is newly added to the card during one session.

No.	Description
1	In accordance with the ObjectHandle format defined in this section, the camera specifies a unique ObjectHandle that is not coordinated with other ObjectHandles already specified for the newly added object.
2	The camera sends the ObjectAdded event including the specified ObjectHandle as a parameter to the host. At this time, FreeSpaceInBytes and FreeSpaceInImages indicated in the StorageInfo data set are updated immediately.

Do Not Copy

9 DataSet

The camera transmits the information about the camera to the host by using some data sets.
The data sets supported by the camera and their contents are shown below.

9.1 DeviceInfo DataSet

The DeviceInfo data set is sent by the operation of the GetDeviceInfo command.
Each field data is stored in the little endian format.
The information sent by the DeviceInfo data set is shown below.

Field	Description
StandardVersion	The highest version of the standard that can support the device.
VendorExtensionID	The vendor extension ID used by the device.
VendorExtensionVersion	The vendor-specific version number of extensions that are supported.
VendorExtensionDesc	An optional string used to hold a human-readable description of the VendorExtensionID.
FunctionalMode	An optional field used to hold the functional mode.
OperationsSupported	An array of OperationCodes supported by the camera.
EventsSupported	An array of EventCodes supported by the camera.
DevicePropertiesSupported	An array of DevicePropCodes supported by the camera.
CaptureFormats	An array of ObjectFormatCodes that can be created by the camera with InitiateCapture.
ImageFormats	An array of ObjectFormatCodes supported by the camera.
Manufacture	An optional human-readable string used to indicate the device manufacturer.
Model	An optional human-readable string used to indicate the device name.
DeviceVersion	An optional human-readable string used to indicate the version of the device.
SerialNumber	An optional human-readable string used to indicate the serial number of the camera.

Field	Size (Byte)	Data	DataType	Description
StandardVersion	2	0x0064		Version 1.00
VendorExtensionID	4	0xFFFFFFFF		-
VendorExtensionVersion	2	0x006E		Version 1.10
VendorExtensionDesc	69	0x22 0x4D00 0x6900 0x6300 0x7200 0x6F00 0x7300 0x6F00 0x6600 0x7400 0x2E00 0x6300 0x6F00 0x6D00 0x2F00 0x4400 0x6500 0x7600	String	UNICODE character string “Microsoft.com/DeviceServices: 1.0”

Do Not Copy

		0x6900 0x6300 0x6500 0x5300 0x6500 0x7200 0x7600 0x6900 0x6300 0x6500 0x7300 0x3A00 0x2000 0x3100 0x2E00 0x3000 0x0000		
FunctionalMode	2	0x0000		Normal mode
OperationsSupported	280	0x0000008A 0x1001 0x1002 0x1003 0x1004 0x1005 0x1006 0x1007 0x1008 0x1009 0x100A 0x100B 0x100E 0x100F 0x1012 0x1014 0x1015 0x1016 0x101B 0x90C0 0x90C1 0x90C2 0x90C3 0x90C4 0x90C7 0x90C8 0x90C9 0x90CB 0x90CC 0x90CD 0x90CE 0x90CF 0x9201 0x9202 0x9203 0x9204 0x9205 0x9206 0x9207 0x9209 0x920A 0x920B 0x920C 0x920F 0x9400 0x9401 0x9402 0x9403 0x9404	Array	OperationCode supported by the camera This varies depending on whether the connection destination is MTP or not. MTP: 0x100C Not supported. 0x100D Not supported. Other than MTP: 0x9801 Not supported. 0x9802 Not supported. 0x9803 Not supported. 0x9804 Not supported. 0x9805 Not supported.

Do Not Copy

		0x9405 0x9406 0x940C 0x9412 0x9413 0x9414 0x9415 0x9416 0x9417 0x9418 0x9419 0x941A 0x941B 0x941C 0x9420 0x9421 0x9422 0x9423 0x9424 0x9425 0x9426 0x9428 0x942E 0x942F 0x9431 0x9433 0x9434 0x9435 0x9436 0x9439 0x943A 0x943B 0x943C 0x943D 0x943E 0x943F 0x9440 0x9441 0x9442 0x9443 0x9444 0x9445 0x9446 0x9447 0x944C 0x9453 0x9454 0x9455 0x9456 0x9457 0x9458 0x9459 0x945A 0x945C 0x945D 0x945E 0x945F 0x9460 0x9461 0x9463 0x9464 0x9465 0x9466 0x9467 0x9468 0x9469 0x946A		

Do Not Copy

		0x946B 0x946D 0x946E 0x946F 0x9470 0x9471 0x9472 0x9473 0x9475 0x9520 0x9521 0x9522 0x9523 0x9527 0x9528 0x9529 0x9530 0x9535 0x9801 0x9802 0x9803 0x9804 0x9805		
EventsSupported	60	0x0000001C 0x4001 0x4002 0x4003 0x4004 0x4005 0x4006 0x4007 0x4008 0x4009 0x400A 0x400C 0x400D 0xC101 0xC102 0xC105 0xC108 0xC10A 0xC10B 0xC10C 0xC10D 0xC10E 0xC120 0xC121 0xC122 0xC123 0xC126 0xC128 0xC700	Array	EventCode supported by the camera
DevicePropertiesSupported	46	0x00000015 0x5001 0x5003 0x5004 0x5005 0x5007 0x5008 0x500A 0x500B 0x500C 0x500D 0x500E 0x500F 0x5010 0x5011	Array	DevicePropertyCode supported by the camera The vendor codes are not enumerated in this field. The vendor codes can be acquired by the GetVendorCodes command (section 6.2.2.1).

Do Not Copy

		0x5013 0x5018 0x501E 0x501F 0xD303 0xD406 0xD407		
CaptureFormats	8	0x00000002 0x3801 0x3800	Array	ObjectFormatCode that can be created by the camera with InitiateCapture. This varies depending on whether the connection destination is MTP or not. MTP: 0x3000 Not supported. Other than MTP: 0x3800 Not supported
ImageFormats	22	0x00000009 0x3801 0x3800 0x3001 0x3008 0x380D 0x3000 0x300D 0xB201 0xB982	Array	ObjectFormatCode supported by the camera. This varies depending on whether the connection destination is MTP or not. MTP: 0x3002 Not supported. Other than MTP: 0x3800 Not supported.
Manufacture	37	0x12 0x4E00 0x6900 0x6B00 0x6F00 0x6E00 0x2000 0x4300 0x6F00 0x7200 0x7000 0x6F00 0x7200 0x6100 0x7400 0x6900 0x6F00 0x6E00 0x0000	String	UNICODE character string “Nikon Corporation”
Model	9	0x04 0x5A00 0x2000 0x3900 0x0000	String	UNICODE character string “Z 9”
DeviceVersion	13	0x06 0xXX00 0xXX00 0xXX00 0xXX00 0xXX00 0x0000	String	UNICODE character string The device version is stored in XX. In the case of V1.00, it is as follows. 0x5600 0x3100 0x2E00 0x3000 0x3000
SerialNumber	67	0x21 0xXX00 0xXX00 0xXX00 0xXX00 0xXX00 0xXX00 0xXX00 0xXX00	String	UNICODE character string “XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX”

Do Not Copy

		0xXX00 0x0000		

Do Not Copy

9.2 StorageInfo DataSet

The StorageInfo data set is sent by the operation of the GetStorageInfo command.
This data set indicates information about the storage medium (card).
Each field data is stored in the little endian format.
Information sent by the StorageInfo data set is shown below.

Field	Description
StorageType	Indicates the type of the card. Removable Ram is set.
FilesystemType	Indicates the filesystem of the card. It conforms to the DCF.
AccessCapability	Indicates the access right for the card. When the card is not locked, it is read-only and the image deletion is allowed. When the card is locked, it is read-only and the image deletion is not allowed.
MaxCapacity	Indicates the capacity of the card. It depends on the card used.
FreeSpaceInBytes	Indicates the free space in the card. It depends on the card used and the space that is currently used.
FreeSpaceInImages	Indicates the number of images that can be recorded in the free space of the card. It is the number of images captured in the mode that is currently set in the camera. It depends on the card used and the space that is currently used.
StorageDescription	Indicates a human-readable text description of the card. This field is not used for the camera.
VolumeLabel	Indicates the volume label of the card. It is described in a human-readable character string (Unicode character string).

Field	Size (Byte)	Data	DataType	Description
StorageType	2	0x0004		Removable Ram
FilesystemType	2	0x0003		Based on the DCF
AccessCapability	2	0x0002 0x0001 (Card lock)		Read-Only with Object Deletion Read-Only without Object Deletion (Card lock)
MaxCapacity	8			Depends on the card.
FreeSpaceInBytes	8			Depends on the card and the space used.
FreeSpaceInImages	4			Depends on the card and the space used.
StorageDescription	1	0x00		-
VolumeLabel			String	Unicode character string

Do Not Copy

9.3 ObjectInfo DataSet

The ObjectInfo data set is sent by the operation of the GetObjectInfo command and the SendPartialObjectInfo command.

This data set indicates information about the objects in the card.

Each field data in which the data type is not specified is stored in the little endian format.

Field	Description
StorageID	Indicates the StorageID of the card.
ObjectFormat	Indicates the ObjectFormatCode of the object.
ProtectionStatus	Indicates the protection status of the object.
ObjectCompressedSize	Indicates the size of the object in bytes. 0xFFFFFFFF for over 4GB.
ThumbFormat	Indicates the ObjectFormat of the thumbnail.
ThumbCompressedSize	Indicates the size of the thumbnail in bytes.
ThumbPixWidth	Indicates the thumbnail width in pixels.
ThumbPixHeight	Indicates the thumbnail height in pixels.
ImagePixWidth	Indicates the image width in pixels.
ImagePixHeight	Indicates the image height in pixels.
ImageBitDepth	Indicates the bit depth of the image.
ParentObject	Indicates the ObjectHandle of the parent object of this object.
AssociationType	Indicates the association type. It is used for the object of the association type.
AssociationDesc	Indicates the descriptor parameter of the association. It is not used in the camera.
SequenceNumber	Indicates the component of the association. It is not used in the camera.
Filename	Indicates an optional character string showing the file name of the object.
CaptureDate	Indicates the character string showing the date and time of object creation.
ModificationDate	Indicates the character string showing the date and time of object modification. When the object does not have a date and time of modification, the same date and time as that of the object creation is stored.
Keywords	Indicates the character string showing the image-related keyword. It is not used in the camera.

Do Not Copy

9.3.1 Directory/Virtual Association DataSet

Field	Size (Byte)	Data	DataType	Description
StorageID	4	StorageID		StorageID
ObjectFormat	2	0x3001		Association (Refer to ObjectFormatCode.)
ProtectionStatus	2	0x0000		-
ObjectCompressedSize	4	0x00000000		-
ThumbFormat	2	0x0000		-
ThumbCompressedSize	4	0x00000000		-
ThumbPixWidth	4	0x00000000		-
ThumbPixHeight	4	0x00000000		-
ImagePixWidth	4	0x00000000		-
ImagePixHeight	4	0x00000000		-
ImageBitDepth	4	0x00000000		-
ParentObject	4	ObjectHandle		ObjectHandle of the parent directory DCIM folder: 0x00000000
AssociationType	2	0x0001		GenericFolder
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	Unicode character string
CaptureDate			String	Date and time of capture (Unicode character string) (Not used for the virtual association)
ModificationDate			String	Date and time of modification (Unicode character string) (Not used for the virtual association)
Keywords	1	0x00		-

Do Not Copy

9.3.2 Image File DataSet

Field	Size (Byte)	Data	DataType	Description
StorageID	4	StorageID		StorageID SDRAM image: 0x00000000
ObjectFormat	2			0x3000 (Undefined) 0x3801 (EXIF) 0x380D (TIFF)
ProtectionStatus	2			0x0001 (with protection setting, read-only), 0x0000 (without protection setting)
ObjectCompressedSize	4			File size
ThumbFormat	2	0x3808		JFIF (Refer to ObjectFormatCode.)
ThumbCompressedSize	4			Thumbnail size
ThumbPixWidth	4	0x000000A0		Horizontal size of the thumbnail (160)
ThumbPixHeight	4	0x00000078		Vertical size of the thumbnail (120)
ImagePixWidth	4			Horizontal size of the main image
ImagePixHeight	4			Vertical size of the main image
ImageBitDepth	4	0x00000000		-
ParentObject	4	ObjectHandle		ObjectHandle of the parent directory
AssociationType	2	0x0000		-
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	File name character string (Unicode character string) “File name.extension” is set for the images recorded in the card with the recording destination set to “Card” or “Card and SDRAM”. “DSC_0000.extension” is set for the images whose recording destination is the SDRAM. For the images recorded in the SDRAM with the recording destination set to “Card and SDRAM”, the name including the folder name and the file name of the image recorded in the card simultaneously is set. “Folder name¥(backslash)file name.extension”. If the image deletion is performed by operating the camera during the card recording while “Card and SDRAM” recording is set in the application mode, the file name of the image with the recording destination SDRAM may be “DSC_0000.extension” in some cases. When the object format is “Undefined”, the extension is NEF (RAW) or NDF (dust reference image).
CaptureDate			String	Date and time of capture (Unicode character string)
ModificationDate			String	Date and time of modification (Unicode character string)
Keywords	1	0x00		-

Do Not Copy

9.3.3 Script File DataSet

Field	Size (Byte)	Data	DataType	Description
StorageID	4	0x00000000		
ObjectFormat	2	0x3002		Script (Refer to ObjectFormatCode.)
ProtectionStatus	2	0x0000		No protection setting
ObjectCompressedSize	4			File size
ThumbFormat	2	0x0000		-
ThumbCompressedSize	4	0x00000000		-
ThumbPixWidth	4	0x00000000		-
ThumbPixHeight	4	0x00000000		-
ImagePixWidth	4	0x00000000		-
ImagePixHeight	4	0x00000000		-
ImageBitDepth	4	0x00000000		-
ParentObject	4	0x00000000		-
AssociationType	2	0x0000		-
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	File name (Unicode character string) (“DDISCVRY.DPS” or “DREQUEST.DPS”)
CaptureDate			String	Date and time of creation (Unicode character string)
ModificationDate			String	Date and time of modification (Unicode character string)
Keywords	1	0x00		-

Do Not Copy

9.3.4 Video File DataSet

Field	Size (Byte)	Data	DataType	Description
StorageID	4	StorageID		StorageID Image: 0x00000000
ObjectFormat	2			0x300D (MOV) 0xB201 (NEV) 0xB982 (MP4)
ProtectionStatus	2			0x0001 (with protection setting, read-only) 0x0000 (without protection setting)
ObjectCompressedSize	4			File size
ThumbFormat	2	0x3808		JFIF (Refer to ObjectFormatCode.)
ThumbCompressedSize	4			Thumbnail size
ThumbPixWidth	4	0x000000A0		Horizontal size of the thumbnail (160)
ThumbPixHeight	4	0x00000078		Vertical size of the thumbnail (120)
ImagePixWidth	4			Horizontal size of the main video
ImagePixHeight	4			Vertical size of the main video
ImageBitDepth	4	0x00000000		-
ParentObject	4	ObjectHandle		ObjectHandle of the parent directory
AssociationType	2	0x0000		-
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	File name character string (Unicode character string) “File name.MOV”
CaptureDate			String	Date and time of capture (Unicode character string)
ModificationDate			String	Date and time of modification (Unicode character string)
Keywords	1	0x00		-

Do Not Copy

9.3.5 WAV File Data Set

9.3.5.1 When Sent by GetObjectInfo Command

Field	Size (Byte)	Data	DataType	Description
StorageID	4	StorageID		StorageID
ObjectFormat	2	0x3008		WAV
ProtectionStatus	2			0x0001 (with protection setting, read-only) 0x0000 (without protection setting)
ObjectCompressedSize	4			File size
ThumbFormat	2	0x0000		-
ThumbCompressedSize	4	0x00000000		-
ThumbPixWidth	4	0x00000000		-
ThumbPixHeight	4	0x00000000		-
ImagePixWidth	4	0x00000000		-
ImagePixHeight	4	0x00000000		-
ImageBitDepth	4	0x00000000		-
ParentObject	4	ObjectHandle		ObjectHandle of the parent directory
AssociationType	2	0x0000		-
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	File name character string (Unicode character string)
CaptureDate			String	Date and time of capture (Unicode character string)
ModificationDate			String	Date and time of modification (Unicode character string)
Keywords	1	0x00		-

Do Not Copy

9.3.5.2 When Sent by SendPartialObjectInfo Command

Field	Size (Byte)	Data	DataType	Description
StorageID	4	0x00000000		-
ObjectFormat	2	0x3008		WAV
ProtectionStatus	2	0x0000		-
ObjectCompressedSize	4			File size
ThumbFormat	2	0x0000		-
ThumbCompressedSize	4	0x00000000		-
ThumbPixWidth	4	0x00000000		-
ThumbPixHeight	4	0x00000000		-
ImagePixWidth	4	0x00000000		-
ImagePixHeight	4	0x00000000		-
ImageBitDepth	4	0x00000000		-
ParentObject	4	0x00000000		-
AssociationType	2	0x0000		-
AssociationDesc	4	0x00000000		-
SequenceNumber	4	0x00000000		-
Filename			String	-
CaptureDate			String	-
ModificationDate			String	-
Keywords	1	0x00		-

Do Not Copy

9.4 DevicePropDesc DataSet

The DevicePropDesc data set is sent by the operation of the GetDevicePropDesc command.
This data set indicates information about the settings and the attribute of the device.
Each field data in which the data type is not specified is stored in the little endian format.

Field	Description
DevicePropCode	Indicates DevicePropCode of the property.
DataType	Indicates the data type of the property.
GetSet	Indicates the access attribute of the property.
Factory Default Value	Indicates the default value of the property.
Current Value	Indicates the current value of the property.
FormFlag	Indicates the property description data set.

Field	Size (Byte)	Data	DataType	Description
DevicePropertyCode	2 or 4	DevicePropCode		DevicePropCode supported by the camera. When acquiring with the GetDevicePropDescEx command and GetDevicePropDescList command, the Field Size of DevicePropCode is 4Byte.
DataType	2			Indicates the data type of the property. It differs depending on each property. Refer to DataTypeCode (section 7.1).
GetSet	1			Indicates whether the property is for reading only or for both reading and writing. 0x00: Reading only (Get) 0x01: Reading/writing (Get/Set)
FactoryDefaultValue	DTS			Default value. It differs depending on each property.
CurrentValue	DTS			Current value. It differs depending on each property.
FormFlag	1			Indicates the property description data set. 0x00: None 0x01: Range 0x02: Enumeration
FORM	DTS			The contents of the field depend on the FormFlag field. It does not exist when the FormFlag field is set to 0.

Do Not Copy

9.5 ObjectPropDesc DataSet

The ObjectPropDesc data set is sent by the operation of the GetObjectPropDesc command.
This data set indicates information about the settings and the attribute of the object.
Each field data in which the data type is not specified is stored in the little endian format.

Field	Description
ObjectPropertyCode	Indicates ObjectPropCode of the property.
DataType	Indicates the data type of the property.
GetSet	Indicates the access attribute of the property.
Default Value	Indicates the default value of the property.
Group Code	Indicates the search group of the property.
FormFlag	Indicates the property description data set.

Field	Size (Byte)	Data	DataType	Description
ObjectPropertyCode	2	ObjectPropCode	UINT16	ObjectPropCode supported by the camera
DataType	2	DataTypeCode	UINT16	Indicates the data type of the property. It differs depending on each property. Refer to DataTypeCode (section 7.1).
GetSet	1		UINT8	Indicates whether the property is for reading only or for both reading and writing. 0x00: Reading only (Get) 0x01: Reading/writing (Get/Set)
DefaultValue	DTS			The default value in the camera. It differs depending on each property.
Group Code	4		UINT32	Search group
FormFlag	1		UINT8	Indicates the property description data set. 0x00: None 0x01: Range 0x02: Enumeration 0x03: Time 0x04: Fixed-length array 0x05: Regular expression 0x06: Byte string 0xFF: LongString
FORM	DTS			The contents of the field depend on the FormFlag field. It does not exist when the FormFlag field is set to 0.

Do Not Copy

9.6 Property Description DataSet

The property description data set is set in the FORM field of the DevicePropDesc data set and the ObjectPropDesc data set.

9.6.1 Range Form

Field	Size (Byte)	Description
MinimumValue	DTS	The minimum value supported by the PropertyValue
MaximumValue	DTS	The maximum value supported by the PropertyValue
StepSize	DTS	The property supports the value indicated as shown below. MinimumValue + N x StepSize * N: From 0 to the maximum value * PropertyValue: Smaller than the Maximum Value

9.6.2 Enumeration Form

Field	Size (Byte)	Description
NumberOfValue	2	Indicates the number of values of the PropertyValue supported by the property.
SupportedValue1	DTS	The property supports this PropertyValue.
SupportedValue2	DTS	The property supports this PropertyValue.
SupportedValue3	DTS	The property supports this PropertyValue.

SupportedValueM	DTS	The property supports this PropertyValue.

9.6.3 Time Form

For the time form, the FORM field does not exist.

The time form is represented by a Unicode character string in the ISO standard format. (Refer to ISO8601.)

YYYYMMDDThhmmss.s	
YYYY	Year
MM	Month (from 01 to 12)
DD	Date (from 01 to 31)
T	Fixed character
hh	Hour starting from 0 a.m. (from 00 to 23)
mm	Minutes (from 00 to 59)
ss.s	Seconds

Do Not Copy

9.6.4 Fixed-Length Array Form

Field	Size (Byte)	Description
Length	2	It is an unsigned 16-bit integer and indicates the number of array elements.

9.6.5 Regular Expression Form

Field	Size (Byte)	Description
RegEx	DTS	It indicates the regular expression for creating the PropertyValue correctly.

9.6.6 Byte String Form

Field	Description
MaxLength	It indicates the maximum length of the byte string.

9.6.7 LongString Form

Field	Description
MaxLength	It indicates the maximum length of the LongString. The property includes the data type of AUINT16. (Characters coded by 2-byte Unicode characters as defined in ISO10646.)

Do Not Copy

9.7 LiveViewObject DataSet

9.7.1 DataSet with Version

	Field			Offset	Size	Description
Display information	Version			0	2Byte	Major version (0x02)
				2	2Byte	Minor version (0x02)
	Reserved			4	4Byte	
	Display information area size			8	4Byte	
	Live view image area size			12	4Byte	
	Whole size		Horizontal size	16	2Byte	Standard of the coordinates
			Vertical size	18	2Byte	
	Display area size		Horizontal size	20	2Byte	The whole size is equal to the display area size when the image is not enlarged.
			Vertical size	22	2Byte	
	Display center coordinates		Horizontal size	24	2Byte	
			Vertical size	26	2Byte	
	Live view image Image size		Horizontal size	28	2Byte	The size set in the LiveViewImageSize property becomes the image size.
			Vertical size	30	2Byte	
	Live view image Quality			32	1Byte	The quality is set in the LiveViewImageCompression property.
	Reserved			33	7Byte	
	AF driving enabled status			40	1Byte	0: AF driving disabled, 1: AF driving enabled
	Focus driving status			41	1Byte	0: Not driving, 1: Driving
	Focusing judgement result			42	1Byte	0: No information, 1: Not focused, 2: Focused
	AF mode state			43	1Byte	0: Other 1: Subject detection AF 2: Auto-area AF / Target tracking AF / 3D-Tracking AF
	AF area number			44	1Byte	From 0 to 64 (The number of subjects when using subject detection)
	Selected subject index			45	1Byte	From 0 to 34
	Tracking state			46	1Byte	0: Waiting 2: Tracking
	Reserved			47	1Byte	
	From 0 to 95	AF frame size	Horizontal size	48	2Byte	Region of the AF frame size and the AF frame center coordinates for 96 areas.
			Vertical size	50	2Byte	
		AF frame center coordinates	Horizontal	52	2Byte	
			Vertical	54	2Byte	
	Remaining time of video recording			816	4Byte	From 0 to 7500000 [msec] * It is valid during the video recording state.
	Elapsed video recording time			820	4Byte	From 0 to 7500000 [msec] * It is valid during the video recording state.
	Sound indicator (peak value)		L	824	1Byte	From 0 to 14
			R	825	1Byte	From 0 to 14
	Sound indicator (current value)		L	826	1Byte	From 0 to 14
			R	827	1Byte	From 0 to 14

Do Not Copy

	Video recording information		828	1Byte	0: During LV execution 1: During video recording
	State of synchronous recording by the external recorder (NOTE1)		829	1Byte	0: Synchronous recording cannot be performed 1: Synchronous recording standby (Synchronous recording can be performed but does not start) 2: Synchronous recording is being performed
	Reserved		830	1Byte	
	Time code status		831	1Byte	0: Off, 1: On
	Time code count		832	1Byte	Hour
			833	1Byte	Minute
			834	1Byte	Second
			835	1Byte	Frame
	Countdown time		836	2Byte	Countdown every one second starting from 3600 (one hour) ; countdown starting from thirty seconds with a rise in temperature
	Spot WB condition		838	1Byte	0: Off 1: On standby (not acquired) 2: During acquisition operation 3: On standby (acquisition success) 4: On standby (acquisition failure)
	Rotation		839	1Byte	0: Off, 1: Rotate counterclockwise, 2: Rotate clockwise, 3: Upside down
	Level angle information	Rolling	840	4Byte	
		Pitching	844	4Byte	
		Yawing	848	4Byte	
	Using white balance for photo Lv		852	1Byte	0: Off 1: On
	Imaging temperature status		853	1Byte	0: Normal 1: Medium temperature (low) 2: Medium temperature (high) 3: High temperature 4: Countdown display
	Auto capture subject detection focus point		854	52Byte	Data specifications are the same as CaptureAreaDataSet (section 9.19). A focus point whose bit is 1 indicates that the object is being detected.
	Reserved		906	118Byte	
Live view image	Image data		1024		

The data specifications for LiveViewObject (With Version) are shown below.

No.	Description
1	The size of the display information is 1024Byte.
2	When the electronic VR is ON, the image is 90% of angle of view.

Do Not Copy

The values of AF frame size and AF frame center coordinates are shown below.

No.	Description
1	The AF frame size and the AF frame center coordinates for the number of [AF area number] are valid.

Refer to the following property about the value for virtual horizon.

No.	Description
1	AngleLevel property (section 6.5.6.21)
2	AngleLevelPitching property (section 6.5.6.22)
3	AngleLevelYawing property (section 6.5.6.23)

The details of the AF mode state are shown below.

No.	Description
1	The AF mode state becomes [1:Subject detect AF] under the following conditions. - The camera detects subjects when the AF area mode is [Wide-area AF (S)], [Wide-area AF (L)], [Auto-area AF], [Target tracking AF] or [3-D Tracking].
2	The AF mode state becomes [2:Auto-area AF/ Target tracking AF/3-D Tracking] under the following conditions. - The camera doesn't detect subjects when the AF area mode is [Auto-area AF], [Target tracking AF] or [3-D Tracking].
3	The AF mode state becomes [0:Other] under the following conditions. - When the conditions of No1 and No2 are not met.

Do Not Copy

9.7.2 DataSet without Version

	Field			Size	Description
	Display information area size			4Byte	
	Live view image area size			4Byte	
Display information	Live view image Image size		Horizontal size	2Byte	The size set in the LiveViewImageSize property becomes the image size.
			Vertical size	2Byte	
	Whole size		Horizontal size	2Byte	Standard of the coordinates
			Vertical size	2Byte	
	Display area size		Horizontal size	2Byte	The whole size is equal to the display area size when the image is not enlarged.
			Vertical size	2Byte	
	Display center coordinates		Horizontal size	2Byte	
			Vertical size	2Byte	
	AF frame size		Horizontal size	2Byte	
			Vertical size	2Byte	
	AF frame center coordinates		Horizontal size	2Byte	
			Vertical size	2Byte	
	Reserved			4Byte	
	Selected focus area			1Byte	From 0 to 51
	Rotation			1Byte	0: Off, 1: Rotate counterclockwise, 2: Rotate clockwise, 3: Upside down
	Focus driving status			1Byte	0: Not driving, 1: Driving
	Reserved			1Byte	
	Reserved			4Byte	
	Reserved			2Byte	
	Countdown time			2Byte	Countdown every one second starting from 3600 (one hour) ; countdown starting from thirty seconds with a rise in temperature
	Focusing judgement result			1Byte	0: No information, 1: Not focused, 2: Focused
	AF driving enabled status			1Byte	0: AF driving disabled, 1: AF driving enabled
	Reserved			2Byte	
	Level angle information		Rolling	4Byte	
			Pitching	4Byte	
			Yawing	4Byte	
	Remaining time of video recording			4Byte	From 0 to 7500000 [msec] * It is valid during the video recording state.
	Video recording information			1Byte	0: During LV execution 1: During video recording
	Subject detection AF mode state			1Byte	0: Subject detection AF is not set. 1: Subject detection AF is set.
	The number of detected subjects			1Byte	From 0 to 35
	Selected subject index			1Byte	From 0 to 34
	0 to 34	AF frame size	Horizontal size	2Byte	Area of the AF frame size and the AF frame center coordinates for thirty-five persons (4 Byte + 4 Byte) x 35 persons; 280 Byte in total
			Vertical size	2Byte	
		AF frame center coordinates	Horizontal position	2Byte	
			Vertical position	2Byte	
	Sound indicator		L	1Byte	From 0 to 14

Do Not Copy

	(peak value)	R	1Byte	From 0 to 14
	Sound indicator (current value)	L	1Byte	From 0 to 14
		R	1Byte	From 0 to 14
	Reserved		1Byte	
	Reserved		1Byte	
	Reserved		1Byte	
	Spot WB condition		1Byte	0: Off 1: On standby (not acquired) 2: During acquisition operation 3: On standby (acquisition success) 4: On standby (acquisition failure)
	Reserved		24Byte	
Live view image	Image data			

The data specifications for LiveViewObject (No Version) are shown below.

No.	Description
1	The size of the display information is 376Byte.
2	When the electronic VR is ON, the image is 90% of angle of view.

Refer to the following property about the value for virtual horizon.

No.	Description
1	AngleLevel property (section 6.5.6.21)
2	AngleLevelPitching property (section 6.5.6.22)
3	AngleLevelYawing property (section 6.5.6.23)

The details of the case in which the subject detection AF mode state is set to “1: Subject detection AF is set” are shown below.

No.	Description
1	When the camera detects subject, the subject detection AF mode state is set to “1: Subject detection AF” is set”, and AF frame size and AF center coordinate for subject detection become valid.

Do Not Copy

9.8 IPTCPreset Data Set

The IPTCPreset data set is transmitted by the operation of the GetIPTCPresetInfo command or the SetIPTCPresetInfo command.

9.8.1 NMS-IPTC

NMS-IPTC deta is described below.

Field	Size(Byte)	Data	DataType	Description
DatasetVersion	2	0x00C9	UINT16	Version of this dataset Version 2.01
IPTC Type	1	1	UINT8	IPTC data format 1:NMS-IPTC 2:XMP-IPTC
Reserved	5	-	-	
Profile			AUINT8	Profile name ASCII:Maximum 18Byte+NULL
NMS Data		-	-	NMS format IPTC data
Caption			AUINT8	Caption UTF-8:Maximum 2000Byte+NULL
EventID			AUINT8	Event ID UTF-8:Maximum 64Byte+NULL
Headline			AUINT8	Headline UTF-8:Maximum 256Byte+NULL
ObjectName			AUINT8	ObjectName UTF-8:Maximum 256Byte+NULL
City			AUINT8	City UTF-8:Maximum 256Byte+NULL
State			AUINT8	State UTF-8:Maximum 256Byte+NULL
Country			AUINT8	Country UTF-8:Maximum 256Byte+NULL
Category			AUINT8	Category ASCII:Maximum 256Byte+NULL
SuppCat			AUINT8	Supplemental Categories UTF-8:Maximum 256Byte+NULL
Byline			AUINT8	Byline UTF-8:Maximum 256Byte+NULL
BylineTitle			AUINT8	BylineTitle UTF-8:Maximum 256Byte+NULL
WriterEditor			AUINT8	Writer/Editor UTF-8:Maximum 256Byte+NULL
Credit			AUINT8	Credit UTF-8:Maximum 256Byte+NULL
Source			AUINT8	Source UTF-8:Maximum 256Byte+NULL

* Each element terminates with NULL. The maximum byte count equals the byte count that can be input plus 1.

The length of each element is variable. If the element is empty, the element count is 0x00000000 and no element exists.

Do Not Copy

9.8.2 XMP-IPTC

XMP-IPTC deta is described below.

Field	Size(Byte)	Data	DataType	Description
DatasetVersion	2	0x00C9	UINT16	Version of this dataset Version 2.01
IPTC Type	1	2	UINT8	IPTC data format 1:NMS-IPTC 2:XMP-IPTC
Reserved	5	-	-	
Profile			AUINT8	Profile ASCII:Maximum 18Byte+NULL
XMP Data			AUINT8	XMP format IPTC data Maximum 30KByte

The length of each element is variable. If the element is empty, the element count is 0x00000000 and no element exists.

Do Not Copy

9.9 PictureControl DataSet

PictureControl DataSet is sent by operation of SetPicCtrlData command or GetPicCtrlData command.

PictureControl DataSet indicates information about a picture control.

Field	Size	Reference
BasePictureControl	2	9.9.1
RegistrationName	20	9.9.2
ApplyLevel	1	9.9.3
QuickSharpFlag	1	9.9.4
QuickSharp	1	9.9.5
Sharpening	1	9.9.6
MiddleRangeSharpening	1	9.9.7
Clarity	1	9.9.8
Contrast	1	9.9.9
Brightness	1	9.9.10
Saturation	1	9.9.11
Hue	1	9.9.12
FilterEffects	1	9.9.13
Toning	1	9.9.14
ToningDensity	1	9.9.15
CustomCurveFlag	1	9.9.16
CustomCurveData	0 or 578	9.9.17

The values for Sharpening, MiddleRangeSharpening, Clarity, Contrast, Brightness, Saturation, Hue and ToningDensity are shown below.

Value	Description
-128	Auto
-N	-N x 0.25
...	
-1	-0.25
0	0
1	0.25
...	
N	N x 0.25

Do Not Copy

9.9.1 BasePictureControl

These are the types of picture controls on which the custom picture control is based.
If the picture control is pre-installed, this indicates the picture control.
The value is zero for unused custom picture control.

Value	Description
1	Standard
2	Neutral
3	Vivid
4	Monochrome
5	Portrait
6	Landscape
7	Flat
8	Auto
11	Rich Tone Portrait
101	Dream
102	Morning
103	Pop
104	Sunday
105	Somber
106	Drama
107	Silence
108	Bleach
109	Melancholic
110	Pure
111	Denim
112	Toy
113	Sepia
114	Blue
115	Red
116	Pink
117	Charcoal
118	Graphite
119	Binary
120	Carbon

9.9.2 RegistrationName

This is the registration name of picture control.
The size is fixed to 20Bytes (ASCII: 19Bytes + NULL).

Do Not Copy

9.9.3 ApplyLevel

This is the degree of control for picture control.

Value	Description
0	0
10	10
20	20
30	30
40	40
50	50
60	60
70	70
80	80
90	90
100	100

Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0			0 10 20 30 40 50 60 70 80 90 100			

Do Not Copy

9.9.4 QuickSharpFlag

This is the state of the quick sharpening control for a picture control.
If QuickSharpFlag is set to [Valid] when setting a picture control, the values of Sharpening, MiddleRangeSharpening and Clarity are ignored.

Value	Description
0	Invalid
1	Valid

9.9.5 QuickSharp

This is the quick sharpening control for a picture control.

Value	Description
-128	Auto
-2	-2
-1	-1
0	0
1	1
2	2

Available values for each picture control are shown below.
If QuickSharpFlag is set to [Invalid] when setting a picture control, [Auto] cannot be set.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
From -2 to 2	-128 From -2 to 2		From -2 to 2			

Do Not Copy

9.9.6 Sharpening

This is the sharpening control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
-8 -4 0 4 8	-128 (When QuickSharp is set to [Auto]) From -12 to 36					

9.9.7 MiddleRangeSharpening

This is the middle-range sharpening control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
-8 -4 0 4 8	-128 (When QuickSharp is set to [Auto]) From -20 to 20					

Do Not Copy

9.9.8 Clarity

This is the clarity control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
-8 -4 0 4 8	-128 (When QuickSharp is set to [Auto]) From -20 to 20					

9.9.9 Contrast

This is the contrast control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
-8 -4 0 4 8	-128 From -12 to 12		From -12 to 12			

Do Not Copy

9.9.10 Brightness

This is the brightness control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0	From -6 to 6		0			

9.9.11 Saturation

This is the saturation control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
-8 -4 0 4 8	-128 From -12 to 12	0	From -12 to 12		0	

Do Not Copy

9.9.12 Hue

This is the hue control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0	From -12 to 12	0	From -12 to 12	0		

9.9.13 FilterEffects

This is the filter effect for a picture control.

Value	Description
0	Off
1	Yellow
2	Orange
3	Red
4	Green

Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0		From 0 to 4	0		From 0 to 4	

Do Not Copy

9.9.14 Toning

This is the toning control for a picture control.
If toning can be selected and toning is set to [B&W] when setting a picture control, the value of ToningDensity is ignored.

Value	Description
0	B&W
1	Sepia
2	Cyanotype
3	Red
4	Yellow
5	Green
6	Blue Green
7	Blue
8	Purple Blue
9	Red Purple

Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0		From 0 to 9	0			From 0 to 9

9.9.15 ToningDensity

This is the toning (density) control for a picture control.
Available values for each picture control are shown below.

Auto	Standard Vivid Portrait Rich Tone Portrait Landscape Neutral Flat	Monochrome	Dream Morning Pop Sunday	Somber Drama Silence Bleach Melancholic Pure Denim Toy	Sepia Blue Red Pink	Charcoal Graphite Binary Carbon
0		From 0 to 28	0		From 0 to 28	

Do Not Copy

9.9.16 CustomCurveFlag

This is the state of custom curve for a picture control.
[Valid] is available only for a custom picture control.

Value	Description
0	Invalid
1	Valid

9.9.17 CustomCurveData

This is the custom curve data for a picture control.
The data format for a custom curve is described in LUT Format (section 9.9.17.1).
If the CustomCurveFlag is set to [Invalid], this is not used.

9.9.17.1 LUT Format

The LUT data consists of the header (64 bytes) for use on the host and following 514 bytes (2 bytes x 257 points) lut data. The header format is specified by the host (The stored location for such as the line point of the LUT to be sent, the data for reproducing the LUT at the time of reading). The camera does not care about the header contents. However, since 2 bytes of the header is used for judging whether header data is present on the camera, it is necessary to set data in the header.

The LUT format is as follows.

Byte	Description
From 0 to 63	Lut Header
64, 65	Data0
66, 67	Data1
...	
576, 577	Data256

As an example of the Lut header, the contents of the header set by the application made by Nikon are shown below.

Byte	Description	Range
1	ID (Byte1)	0x49
2	ID (Byte2)	0x30
3	Input Minimum (Black Point)	0-255
4	Input Maximum	0-255
5	Output Minimum	0-255
6	Output Maximum	0-255
7	Gamma (integer portion)	0-20
8	Gamma (fractional portion)	0-100
9	Number of Spline Points	2-20
10, 11	Spline Point1 (x, y)	0-255, 0-255
12, 13	Spline Point2 (x, y)	0-255, 0-255
...		
48, 49	Spline Point20 (x, y)	0-255, 0-255
From 50 to 64	Reserved	0

Do Not Copy

9.10 PictureControlCapability DataSet

The PictureControlCapability DataSet is sent by operation of GetPicCtrlCapability command.
The PictureControlCapability DataSet indicates information about the function of a picture control.

Field	Size	Data	Description
ApplyLevelCapability	1	0x00: Not selectable 0x80: Selectable 0x01: AUTO is available 0x81: Selectable and AUTO is available	Apply level: Selectability and availability of AUTO
QuickSharpCapability	1		Quick sharpening: Selectability and availability of AUTO
SharpeningCapability	1		Sharpening: Selectability and availability of AUTO
MiddleRangeSharpening Capability	1		Middle range sharpening: Selectability and availability of AUTO
ClarityCapability	1		Clarity: Selectability and availability of AUTO
ContrastCapability	1		Contrast: Selectability and availability of AUTO
BrightnessCapability	1		Brightness: Selectability and availability of AUTO
SaturationCapability	1		Saturation: Selectability and availability of AUTO
HueCapability	1		Hue: Selectability and availability of AUTO
FilterEffectsCapability	1		Filter effect: Selectability and availability of AUTO
ToningCapability	1		Toning: Selectability and availability of AUTO
ToningDensityCapability	1		Toning (density): Selectability and availability of AUTO
DefaultQuickSharpLevel	1	QuickSharp (9.9.5)	The default value of QuickSharp
DefaultLevel[0]	3	DefaultLevel (9.10.1)	QuickSharp -2
DefaultLevel[1]	3		QuickSharp -1
DefaultLevel[2]	3		QuickSharp 0
DefaultLevel[3]	3		QuickSharp +1
DefaultLevel[4]	3		QuickSharp +2

9.10.1 DefaultLevel

The information for the default level used in the PictureControlCapability DataSet is shown below.

Field	Size	Reference
Sharpening	1	9.9.6
MiddleRangeSharpening	1	9.9.7
Clarity	1	9.9.8

Do Not Copy

9.11 HLGQuality DataSet

The HLGQuality DataSet provides information about HLG image quality adjustments sent by operating the SetHLGQualityData or GetHLGQualityData commands.

The details of the HLG Quality Data Set are shown below.

Field	Size	Range	Description
QuickSharpFlag	1	0: Invalid 1: Valid	Flag for quick sharpening If this value is [valid] when setting HLG, the value of Sharpening, MiddleRangeSharpening and Clarityis ignored.
QuickSharp	1	-2 to +2	Quick sharpening
Sharpening	1	-12 to +36	Sharpening
MiddleRangeSharpening	1	-20 to +20	Middle range sharpening
Clarity	1	-20 to +20	Clarity
Contrast	1	-12 to +12	Contrast
Saturation	1	-12 to +12	Saturation (Color intensity)
Hue	1	-12 to +12	Hue

Sharpening, MiddleRangeSharpening, Clarity, Contrast, Saturation, and Hue have a resolution of 0.25, so the value set for the camera is in 0.25 increments. The values used are shown below.

Value	Description
-N	-N x 0.25

-1	-0.25
0	0
1	0.25

N	N x 0.25

Do Not Copy

9.12 ObjectMetaData Dataset

The ObjectMetaData Dataset is sent by operation of the GetObjectsMetaData command.

9.12.1 Version 1

Field	Size(Byte)	DataType	Description
Version	4	UINT32	Dataset version Version 1.00
NumElement	4	UINT32	Number of metadata
ObjectMetaData[0]	16	-	Metadata 1
ObjectHandle	4	UINT32	Object handle
ObjectAttribute	4	UINT32	Bit2 and after: Reserved Bit1: Protected Bit0: Rating
Reserved	1	UINT8	-
ModificationDate	1	UINT8	Modification date: Second
	1	UINT8	Modification date: Minute
	1	UINT8	Modification date: Hour
	1	UINT8	Modification date: Day
	1	UINT8	Modification date: Month
	2	UINT16	Modification date: Year
ObjectMetaData[1]	16	-	Metadata 2
...			
ObjectMetaData[N - 1]	16	-	Metadata N

Do Not Copy

9.12.2 Version 2

Field	Size(Byte)	DataType	Description
Version	4	UINT32	Dataset version Version 2.00
ObjectMetaDataSize	4	UINT32	Data size of one ObjectMetaData
NumElement	4	UINT32	Number of metadata
ObjectMetaData[0]	24	-	Metadata 1
ObjectHandle	4	Object handle	Object handle
ObjectAttribute	4	UINT32	Bit2 and after: Reserved Bit1: Protected Bit0: Rating
Reserved	1	UINT8	-
ModificationDate	1	UINT8	Modification date: Second
	1	UINT8	Modification date: Minute
	1	UINT8	Modification date: Hour
	1	UINT8	Modification date: Day
	1	UINT8	Modification date: Month
	2	UINT16	Modification date: Year
GroupData	8	-	Group data
ContinuousId	4	UINT32	Continuous shooting ID 1 or later: Continuous shooting ID 0: Disabled *
ContinuousFrameNumber	4	UINT32	Continuous shooting frame number*
ObjectMetaData[1]	24	-	Metadata 2
...			
ObjectMetaData[N - 1]	24	-	Metadata N

* If the object is an image file taken in a single shot, the group data will be invalid and the value of this field will be "0".

Do Not Copy

9.13 SBAttributeDesc DataSet

The SBAttributeDesc data set is sent by the operation of the GetSBAttrDesc command or GetSBGroupAttrDesc command.
The SBAttributeDesc data set is used to indicate the information of the flash attribute.

The details of the SBAttributeDesc data set are shown below.

Field	Size (Byte)	DataType	Description
AttributeID	2	UINT16	SBAttrID or SBGroupAttrID
DataType	2	UINT16	Data type of the attribute The value varies depending on the attribute. Refer to DataTypeCode (section 7.1).
GetSet	1	UINT8	Availability of Get and Set operations. 0x00 : Only Get operation is available (Get) 0x01 : Get and Set operations are available (Get / Set)
DefaultValue	DTS	DTS	The default value in the camera The value varies depending on the attribute.
CurrentValue	DTS	DTS	The current value in the camera The value varies depending on the attribute.
FormFlag	1	UINT8	Type of the data set descriptor 0x00 : None 0x01 : Range 0x02 : Enumeration
FORM	DTS	DTS	The value in the field depends on FormFlag field. If FormFlag is 0, this field doesn't exist.

9.14 SBAttributeDescList DataSet

The SBAttributeList data set is sent by the operation of the GetSBAttrValue command, the SetSBAttrValue command, the GetSBGroupAttrValue command or the SetSBGroupAttrValue command.
The SBAttributeList data set is used to indicate the list of the current values of the flash attribute.

The details of the SBAttributeList data set are shown below.

Field	Size (Byte)	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of attributes in the list.
Element1 AttributeDesc	DTS	Refer to SBAttributeDesc (section 9.13)	SBAttributeDesc for element 1
Element2 AttributeDesc	DTS	Refer to SBAttributeDesc (section 9.13)	SBAttributeDesc for element 2
...			
ElementN AttributeDesc	DTS	Refer to SBAttributeDesc (section 9.13)	SBAttributeDesc for element N

Do Not Copy

9.15 SBAttribute DataSet

The SBAttribute data set is sent by the operation of the GetSBAttrValue command, the SetSBAttrValue command, the GetSBGroupAttrValue command or the SetSBGroupAttrValue command.

The SBAttribute data set is used to indicate the current values of the flash attribute.

The details of the SBAttribute data set are shown below.

Field	Size (Byte)	DataType	Description
AttributeID	2	UINT16	SBAttrID or SBGroupAttrID
DataType	2	UINT16	Data type of the attribute The value varies depending on the attribute. Refer to DataTypeCode (section 7.1).
CurrentValue	DTS	DTS	The current value in the camera The value varies depending on the attribute.

9.16 SBAttributeList DataSet

The SBAttributeList data set is sent by the operation of the GetSBAttrValue command, the SetSBAttrValue command, the GetSBGroupAttrValue command or the SetSBGroupAttrValue command.

The SBAttributeList data set is used to indicate the list of the current values of the flash attribute.

The details of the SBAttributeList data set are shown below.

Field	Size (Byte)	DataType or DataSet	Description
NumberOfElements	4	UINT32	The number of attributes in the list.
Element1 Attribute	DTS	Refer to SBAttribute (section 9.15)	SBAttribute for element 1
Element2 Attribute	DTS	Refer to SBAttribute (section 9.15)	SBAttribute for element 2
...			
ElementN Attribute	DTS	Refer to SBAttribute (section 9.15)	SBAttribute for element N

9.17 PortraitImpressionBalance DataSet

PortraitImpressionBalance DataSet is transferred by the operation of SetPortraitImpressionBalanceData command or GetPortraitImpressionBalanceDataList command and contains information about portrait impression adjustment.

The details of PortraitImpressionBalance DataSet are shown below.

Field	Size	Range	Description
Brightness	1	-6 to +6	Brightness
Hue	1	-6 to +6	Hue

Since the setting resolution of Brightness and Hue is 0.5, the value set for the camera is in 0.5 increments.

The values to be used are shown below.

Value	Description
-N	-N x 0.5
...	
-1	-0.5

Do Not Copy

0	0
1	0.5
...	
N	N x 0.5

Do Not Copy

9.18 CaptureAreaDrawInfo DataSet

Details of CaptureAreaDrawInfoDataSet are shown below.

Field		Size	Description
Focus point frame size	Horizontal size	2Byte	
	Vertical size	2Byte	
Center coordinates of the focus point at the top left corner	Horizontal coordinate	2Byte	Top left focus point coordinates that can be set in the current imaging area
	Vertical coordinate	2Byte	
Center coordinates of the focus point at the bottom right corner	Horizontal coordinate	2Byte	Bottom right focus point coordinates that can be set in the current imaging area
	Vertical coordinate	2Byte	
Number of focus points	Horizontal number	2Byte	Maximum 405 points (27 horizontally x 15 vertically). The number of focus points changes depending on the imaging area setting.
	Vertical number	2Byte	

Do Not Copy

9.19 CaptureArea DataSet

The focus points of the effective area are assigned to each Bit of the dataset.
If Bit is 1, it indicates that the corresponding focus point is valid.

The correspondence between focus points and Bits is shown in the table below.

	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6	Bit7	Description
Byte0	1	2	3	4	5	6	7	8	Focus point 1 - 8
Byte1	9	10	11	12	13	14	15	16	Focus point 9 - 16
Byte2 - 48	…								Focus point 7 - 392
Byte49	393	394	395	396	397	398	399	400	Focus point 393 - 400
Byte50	401	402	403	404	405	Reserved			Focus point 401 - 405
Byte51	Reserved								

Table 9-1 Bit field at focus point position

The position of the focus point indicated by this dataset is calculated from the information on the number of focus points in CaptureAreaDrawInfoDataSet (section 9.18).

When the number of focus points is 8 in the horizontal direction and 6 in the vertical direction, the focus point positions are as shown in the diagram below.

	Horizontal number: 8							
Vertical number: 6	1	2	3	4	5	6	7	8
	9	10	11	12	13	14	15	16
	17	18	19	20	21	22	23	24
	25	26	27	28	29	30	31	32
	33	34	35	36	37	38	39	40
	41	42	43	44	45	46	47	48

Focus points that exceed the number of focus points (horizontal number X vertical number) of CaptureAreaDrawInfoDataSet are undefined.

In the case of the figure, the data above focus point 49 is undefined.

Do Not Copy

10 Data Format

10.1 ASCII Codes

For the property related to the comment of the camera, only the following 90 characters of ASCII codes can be input.

SP	!	"	#	$	%	&	'	(	)	*	+	,	-	.	/
:	;	<	=	>	?	@	[	]	_	{	}				
0	1	2	3	4	5	6	7	8	9						
A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
Q	R	S	T	U	V	W	X	Y	Z						
a	b	c	d	E	f	g	h	i	j	k	l	m	n	o	p
q	r	s	t	U	v	w	x	y	z						

In addition to the above characters, following five characters can be used in the ManualSettingLensName property (section 6.5.5.4), the CommentString property (section 6.5.5.7), ArtistV property (section 6.5.5.9) and CopyrightV property (section 6.5.5.10).

¥	^	`	|	~

7-Bit ASCII Code Table (JIS Roman letter set: C0, GL)								
	0x0?	0x1?	0x2?	0x3?	0x4?	0x5?	0x6?	0x7?
0x?0	NUL	DLE	SP	0	@	P	`	p
0x?1	SOH	DC1	!	1	A	Q	a	q
0x?2	STX	DC2	"	2	B	R	b	r
0x?3	ETX	DC3	#	3	C	S	c	s
0x?4	EOT	DC4	$	4	D	T	d	t
0x?5	ENQ	NAK	%	5	E	U	e	u
0x?6	ACK	SYN	&	6	F	V	f	v
0x?7	BEL	ETB	'	7	G	W	g	w
0x?8	BS	CAN	(	8	H	X	h	x
0x?9	HT	EM	)	9	I	Y	i	y
0x?a	LF	SUB	*	:	J	Z	j	z
0x?b	VT	ESC	+	;	K	[	k	{
0x?c	FF	FS	,	<	L	¥	l	|
0x?d	CR	GS	-	=	M	]	m	}
0x?e	SO	RS	.	>	N	^	n	~
0x?f	SI	US	/	?	O	_	o	DEL

Do Not Copy

11 Appendices

11.1 Properties Affected by Mounting the CPU Lens

The following properties are affected by mounting the CPU lens.

Property	Reference
LensSort	6.5.10.1
Fnumber	6.5.1.5
FocalLength	6.5.1.6
LensTypeML	6.5.10.2
LensTypeF	6.5.10.3
LensID	6.5.10.4
LensFocalMin	6.5.10.5
LensFocalMax	6.5.10.6
LensApatureMin	6.5.10.7
LensApatureMax	6.5.10.8
MovieFnumber	6.5.12.1

11.2 Properties Affected by Mounting the Speedlight

Property	Speedlight mounted		Speedlight not mounted
	CLS	Noncommunication	
ExternalSpeedLightExist	Mounted	Mounted	Not mounted
ExternalSpeedLightSort	CLS	Noncommunication	Not fixed
ExternalSpeedLightStatus	Valid	Valid	Not fixed
NewExternalSpeedLightMode	Valid	Not fixed	Not fixed
FlashCompensation	Valid/Not fixed	Not fixed	Not fixed
ExposureTime	Bulb ～ (*1) (*2)	Bulb ～ (*1)	Bulb ～ 1/8000
ShutterSpeed	Bulb ～ (*1) (*2)	Bulb ～ (*1)	Bulb ～ 1/8000

*1: Flash shooting synchronization speed
*2: Speed limit of the speedlight

Do Not Copy

11.3 Properties Affected by the Shooting Mode

Property	Shooting mode			
	M	P	A	S
ExposureProgramMode	M	P	A	S
Fnumber	Get / Set (*1)	Get	Get / Set (*1)	Get
ExposureTime	Get / Set	Get	Get	Get / Set (*2)
ShutterSpeed	Get / Set	Get	Get	Get / Set
FlexibleProgram	Not fixed	Get / Set	Not fixed	Not fixed

*1: Setting is disabled when a lens other than the CPU lens is mounted.
*2: Setting is disabled with Bulb.

Do Not Copy

11.4 Properties Affected by Time Zone

The UTC is retained in the camera. When displaying the time on the menu or getting/setting the DateTime property, “Time zone” and “Daylight saving time” in the camera are considered.

When getting the DateTime property, the calculated value shown below is passed to the host.

Time in the camera + Time zone difference + Daylight saving time

When the camera settings are as shown in the table below, the calculation is “13:00:00 + 09:00 + 0:00” and the value passed to the host is “2020/06/01 22:00:00”.

Time in the camera (UTC)	2020/06/01 13:00:00
Time zone	UTC+9 (Tokyo, Seoul)
Daylight saving time	Off

When the DateTime property is set, the value calculated as shown below is set in the camera.

Time set by the host - Time zone difference - Daylight saving time

When the camera settings are as shown in the table below and the time set by the host is “2020/06/01 13:00:00”, the calculation is “13:00:00 - 09:00 - 0:00” and the time setting in the camera is “2020/06/01 04:00:00”.


Time zone	UTC+9 (Tokyo, Seoul)
Daylight saving time	Off

Do Not Copy

11.5 White Balance Fine Tuning Coordinates

The relationship between the values of PropertyValue of the property affecting the white balance fine tuning and the actual setting coordinates is shown below.

On the A-B axis: in steps of 0.5, on the G-M axis: in steps of 0.25

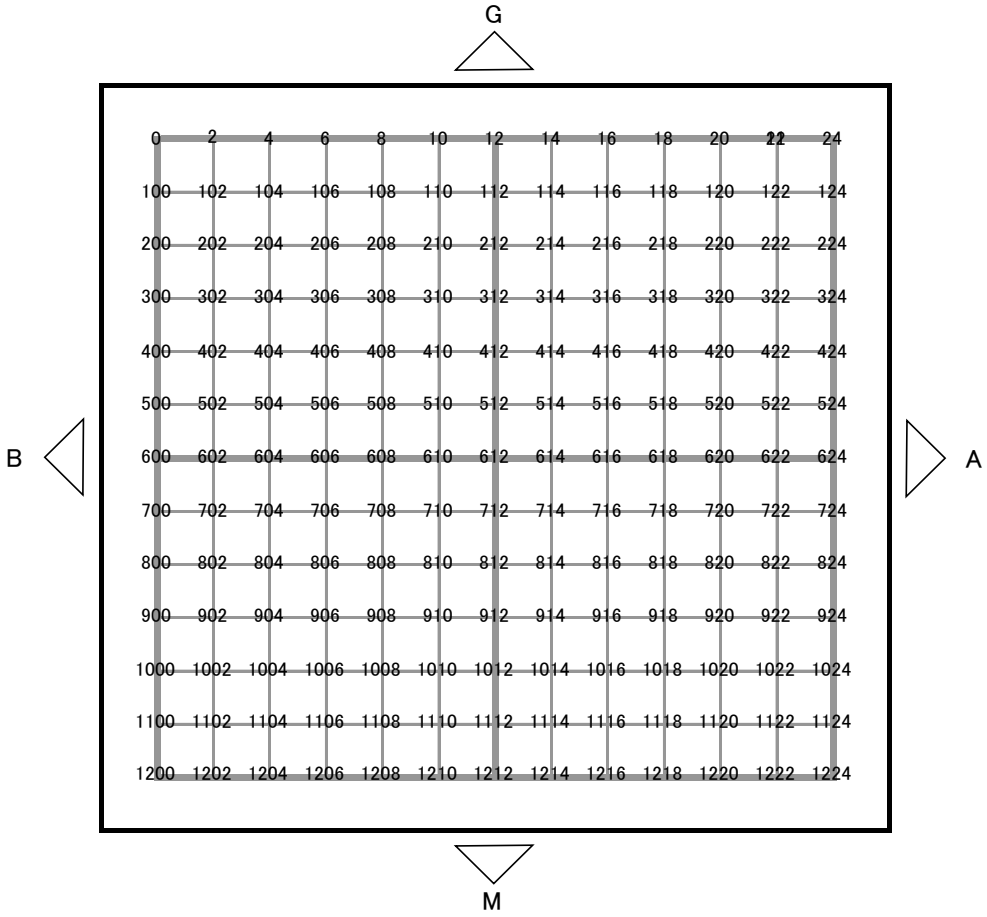

Do Not Copy

11.6 Speedlight Types

The communication status types of the speedlight are shown below.

CLS (New-type communication) with the operating and setting section	CLS (New-type communication) without the operating and setting section	Old-type communication	Noncommunication	Mounting not detected
SB-5000 SB-910 SB-900 SB-800 SB-700 SB-600 SU-800	SB-500 SB-400 SB-300	SB-80DX SB-50DX SB-28DX SB-28D SB-28 SB-27 SB-26 SB-25 SB-24	SB-30 SB-29 SB-29S SB-23 SB-22 SB-22S SB-21A SB-21B SB-20 SB-19 SB-18 SB-17 SB-16A SB-16B SB-15 SB-14 SB-12 SB-11 SB-10 SB-E	SB-9 SB-8 SB-7 SB-6 SB-5 SB-4 SB-3 SB-2 SB-1

*For old-type communication and noncommunication, mounting is not detected in the camera.

Do Not Copy

11.7 Command Release Operation

The operation by the command release is described in this section.

11.7.1 Continuous Shooting

The number of images that can be captured continuously by the continuous shooting is the smallest number among the following property combination.

Property
BurstNumber (section 6.5.1.16)
ContinuousShootingCount (section 6.5.7.5)

The availability of the continuous shooting in the release mode of StillCaptureMode (section 6.5.1.15) and StillCaptureModeQuick (section 6.5.6.2) is described below.

Release mode	BurstNumber	Description
Single frame	Invalid	Only one image can be captured.
Continuous high-speed shot Continuous low-speed shot High speed frame capture	Valid	Among the BurstNumber setting value, the number of images that can be recorded in the SDRAM that is calculated in the camera, and the number of remaining images for recording while the bracketing is being performed, until the least number is reached, the acquisition of the new objects can be performed. Only one image can be captured when the internal flash is enabled or the HDR mode is set.
Self-timer	Invalid	Only one image can be captured. StillCaptureMode is temporarily set to the single frame when release.

11.7.2 AF Operation

AF is performed in accordance with the setting of the FocusMode property (section 6.5.1.7).

11.7.3 Preset WB acquisition

In photo mode, the preset WB acquisition is performed with release sequence.

Refer to InitiateCaptureRecInMedia command about the preset measurement release.

In video mode, it is the same as the spot WB acquisition.

Refer to StartSpotWb command.

Do Not Copy

11.7.4 Event on the Release Operation

When the release operation is started, one or more new objects are created. When the new objects are recorded, the camera generates the asynchronous interrupt event to inform the host of the addition of the new objects.

The new object addition event includes the ObjectHandle indicating the new object that is created. If two or more new objects are created, the new object addition event is issued two or more times.
When all the new objects that can be acquired are recorded, the camera issues the capturing completion event to the host to inform that the acquisition of all the new objects is completed.
The new object addition event and the capturing completion event vary depending on the recording destination. The following table shows the correspondence of the destination to the event.

Recording destination	New object addition event	Capturing completion event
Card	ObjectAdded	CaptureComplete
SDRAM	ObjectAddedInSdram	CaptureCompleteInSdram
Card and SDRAM	ObjectAdded and ObjectAddedInSdram	CaptureComplete and CaptureCompleteInSdram

When the recording destination is set to [Card and SDRAM], the order of issuing the new object addition event is not decided and the events are issued in order of completing image recording.
The capturing completion event is issued in the same way; the event of the recording destination in which acquisition of all the new objects is completed first, is issued first.

11.7.5 Recovery from the Sequence Error

When the Bit0 of the WarningStatus property (section 6.5.6.24) is set to 1 [Sequence error] and the release operation is performed by the command, the sequence error is cancelled if the sequence error can be recovered. When it is cancelled, the release is not started and the command is terminated.

Do Not Copy