



A6-2 TOC READ OPERATION - PLAY OPERATION FLOW CHART

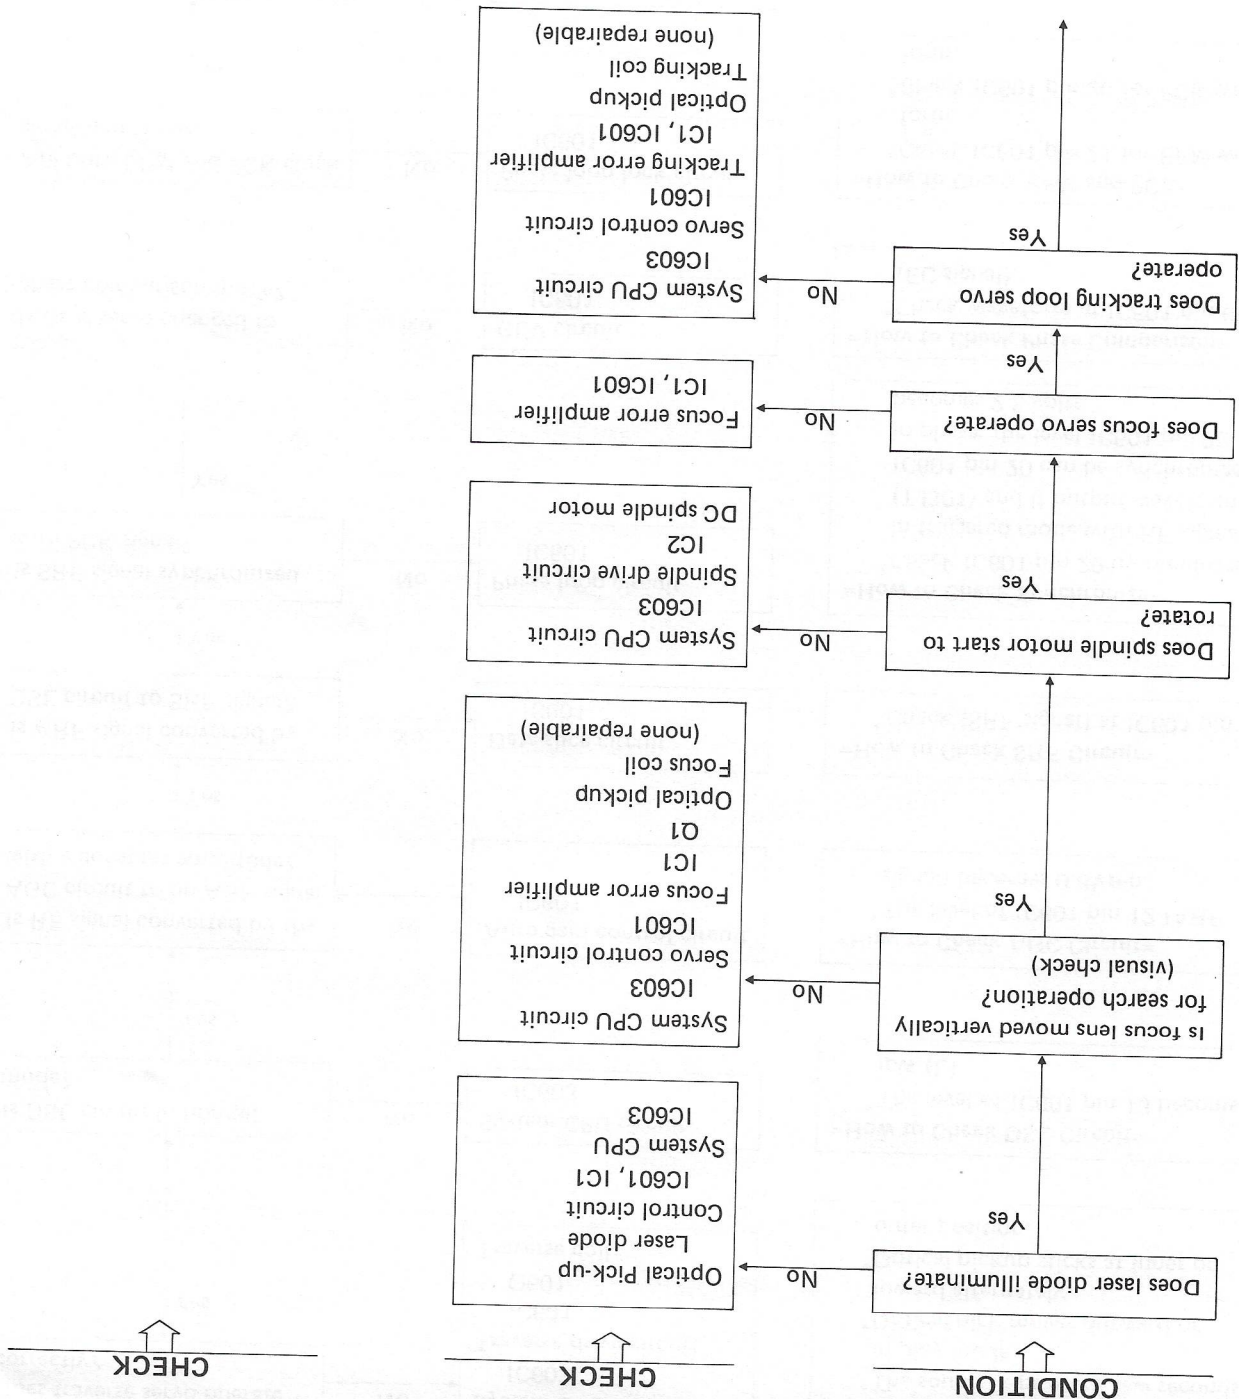

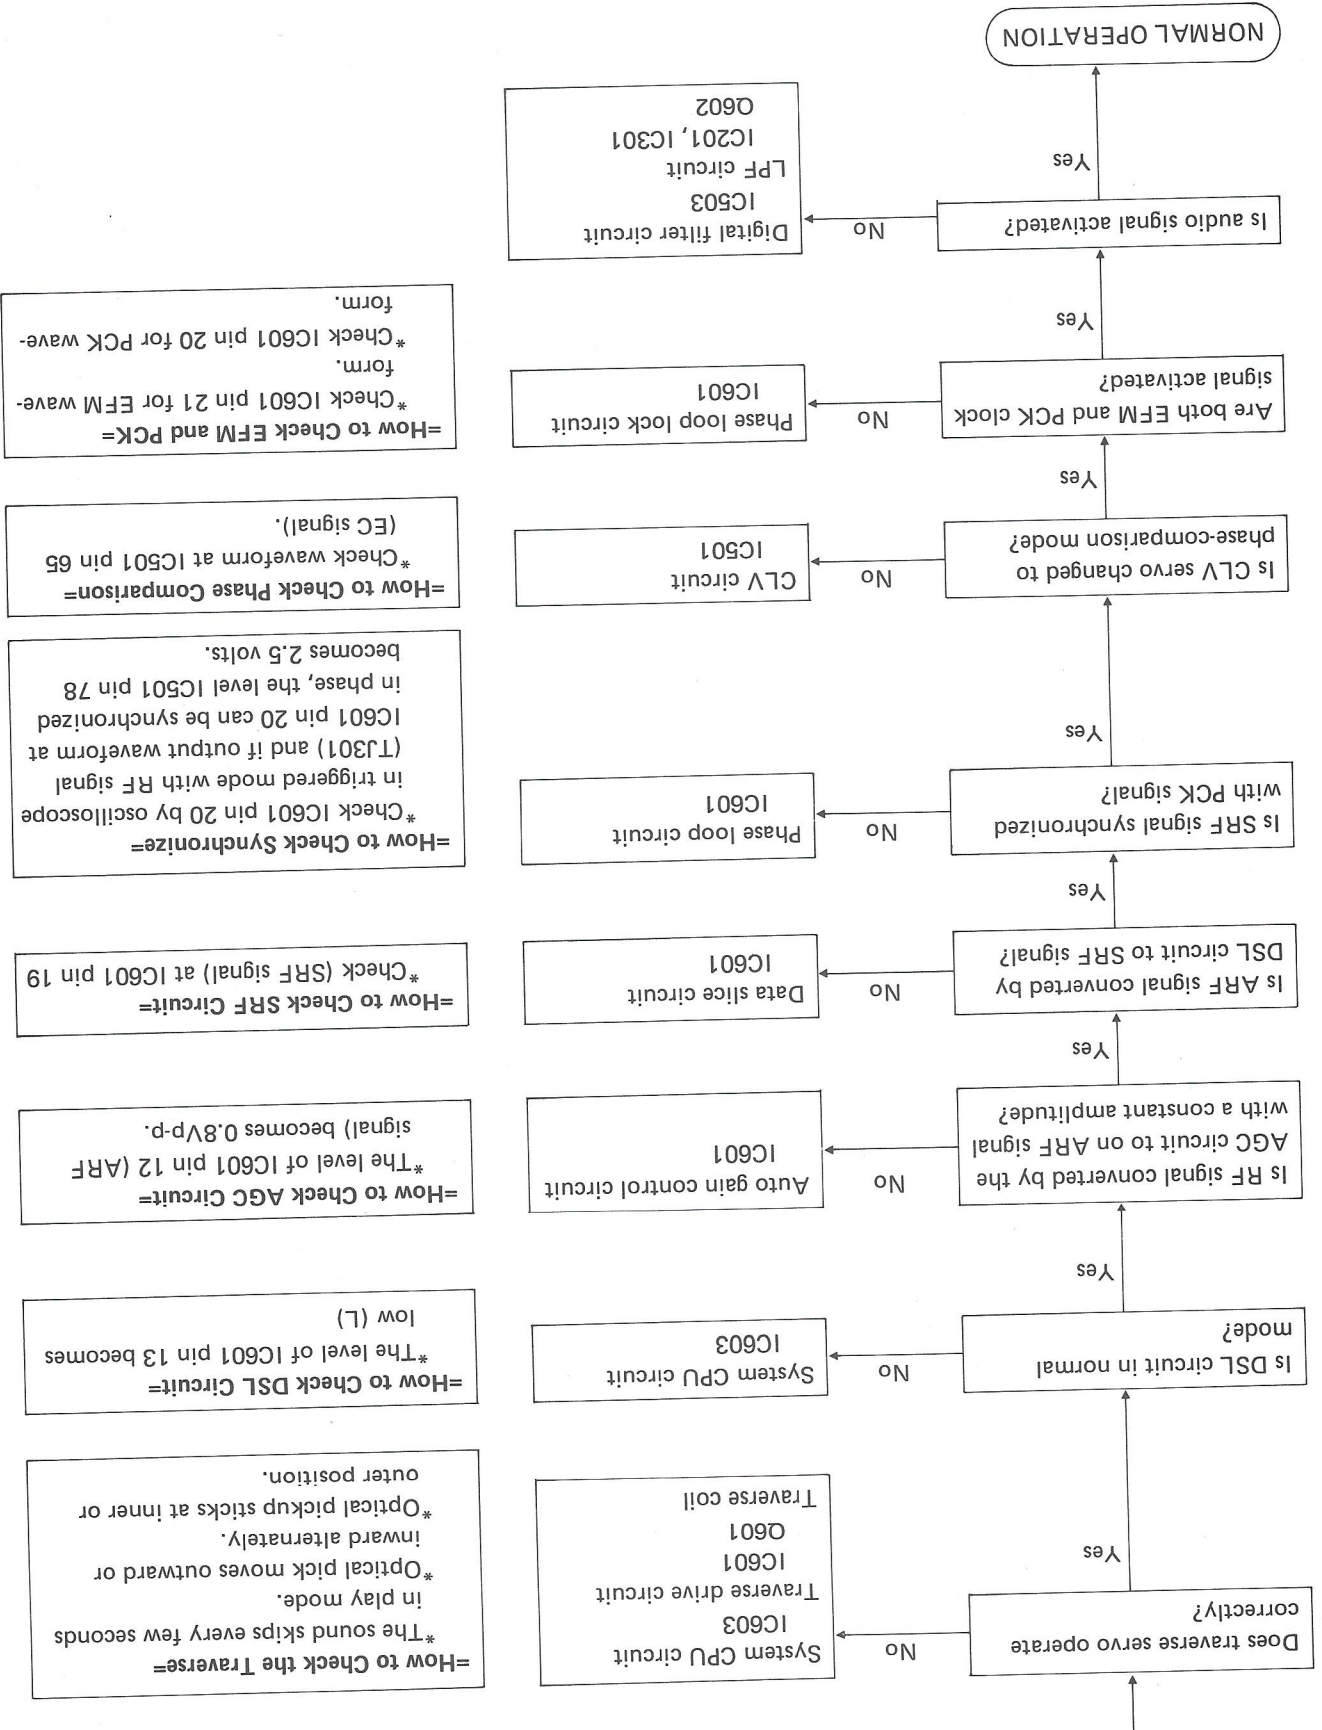

A6-3 CLEANING PROCEDURE FOR THE FOCUS LENS

Symptoms

The following symptoms may be caused not only by faulty software or hardware but also by the soiled focus lens.

- Not reading TOC
- Not playback
- Skipping sound

Cause

Soiling of the focus lens surfaces with dirt, dust, finger print, and others.
(Note) Clean the lens in the following steps even if it looks to be clean because soiling is not always discernible visually.

Cleaning Steps

(1) Remove the optical pick-up ASSY from unit.

1 Deck ASSY Removal

- Remove the four screws.
- Pull out CN1, CN2 and CN3.
- Pull the check ass'y upward.

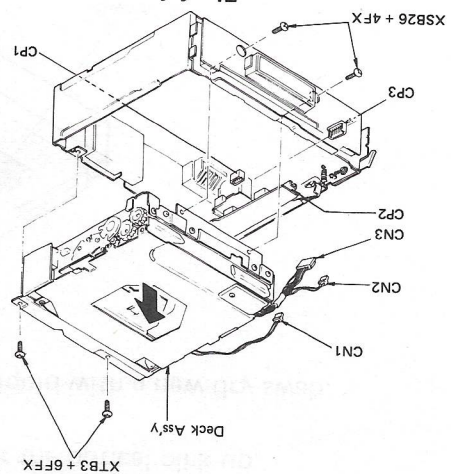


Fig. 1-1

2 Optical Pick-up ASSY Removal

- Pull out the two flexible PCBs from CN1 and CN2.
- Pull out CP1 and CP2.
- Remove the five screws.


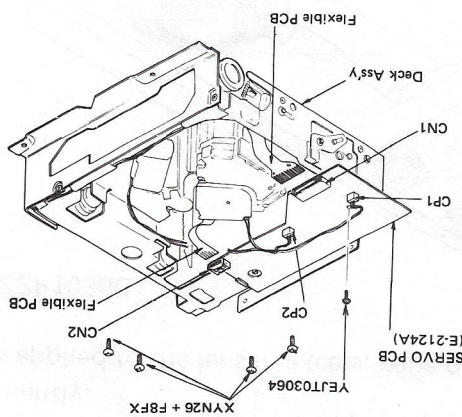



Fig. 1-2

- (2) Clean the surface of Optical Pick-up ASSY
- (3) Removing method of dirt, dust, or etc., from the focus lens.
● Blow dust, dirt, or etc, off the lens surface by the blower contained in the cleaning kit as shown below.

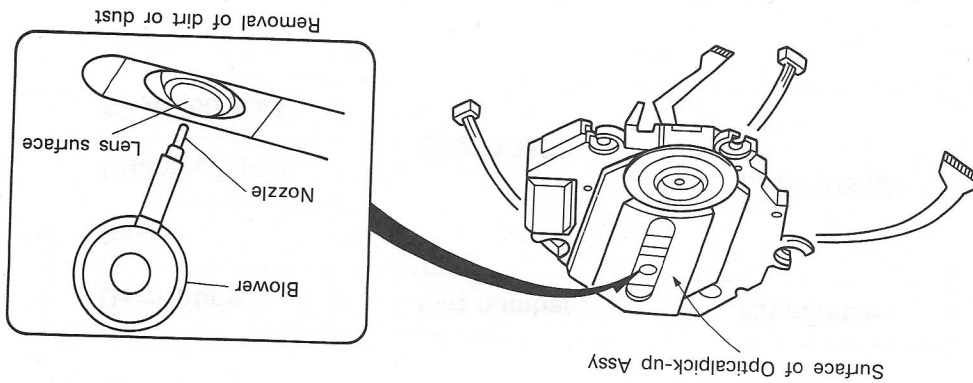

Description	Part number	Kit number
Swab (50 pcs.)	SZZP1050C	SZZP1038C
Cleaning liquid		
Blower	-----	


Fig. 1-2

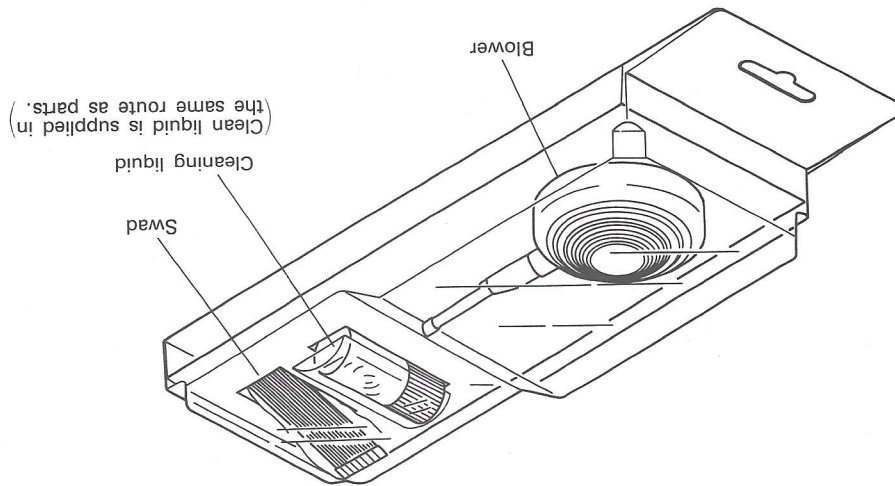

Kit Item Number: SZZP1038C

- Warning**
- Don't apply the cleaning liquid to the lens directly, also don't wet the swab with the cleaning liquid more than necessary, otherwise the liquid may enter the optical pick-up.
 - Wipe the lens lightly.
 - If the liquid is applied to the lens in excess, wipe off the liquid with a new dry swab.

Fig. 1-4

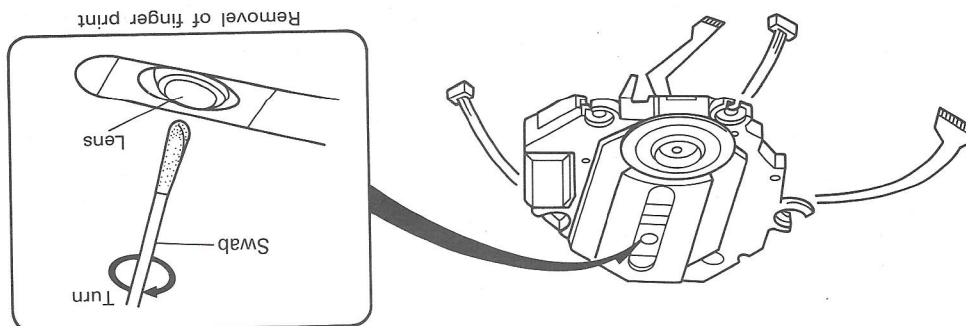

- (4) Removing method of finger print or the like
- Wet a swab with a little volume of the lens cleaning liquid contained in the cleaning kit. Wipe the surface of the lens with the wet swab by turning the swab.
 - Don't apply a solid portion of the swab to the lens surface again.
- (Note) Cleaning may be made by applying pressure to some degree to the lens.

B6 TROUBLESHOOTING (TYPE B)

B6-1 CAUTION


1. When making any connections, be sure to turn off all power source.
2. This changer is exclusive for 12 cm CD. Therefore, it cannot play 8 cm CD even with some form of adaptor.
3. For enabling the disk moves smoothly in the magazine, check that the CD is free of burr.

Display surface
Burr when disk is taken out from the die.
Touch the corner and if the disk has burr,
remove it with emery paper, etc.





4. When operating the changer main body, be sure to close the cover. If the disk detecting sensor is exposed to the direct sun-light the sensor will malfunction.
5. Sound skipping due to vibration
Since the CD autochanger, is mounted in the trunk, countermeasure for vibration is considered. However, when the car is driving on a very rough road conditions will sometimes cause the player to skip the music. However, the disc and the CD Player will not be damaged by these conditions.
(Example: Pothole, railroad crossing, road paved with stone, etc.)

B6-2 TROUBLESHOOTING

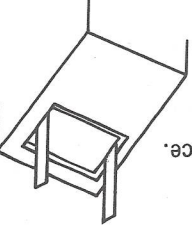
	SYMPTOM	DISPLAY	CAUSE	REMEDY
Disk loading/unloading	Disk magazine won't load.		1. ACC power source is cut off. 2. Back-up power source is cut off. 3. 8P Din cord of main body is not properly connected.	Check fuse. Check fuse. Check connection.
	System inoperative	E3		 Reset power source. 1. Cut ACC power source. 2. Cut back-up power source. (Pull out fuse for back-up power source.) 3. After 10 seconds later, reconnect power sources for ACC and back-up. 4. Turn SYSTEM ON and push eject button. With thin metal plates unlock the claws on both sides and pull out.
CD playing	Selected disk cannot play.	E1	Disk is dirty or loaded upside down.	Clean disk. Check loaded disk.
	(Disk is ejected.)	E2	Disk is scarred	Replace the disk with a proper one.
	Some special disk cannot play.	(Example) 6-01 ↑ 8-01	Disk has burr around its outer circumference and which burr prevents smooth playing.	File out the burr of the 7th disk. (Refer to Item 3 of Caution.)
			Disk's pit height is lower.	Compare and check with other disks.
	Selected disk cannot play sometimes.		Disk's positioning is not line-up properly.	Please have the service shop check and adjust the height of the changer.
	Disks No. 1 to No. 4 cannot play.	(Example) 12-01 ↑ 5-01	Disk detecting sensor is exposed to direct sunlight. main body is left open.	Close the cover of the changer and then operate. (Refer to Item 4 of Caution.)
	Play by remote control won't function.		Bad batteries in the remote control.	Replace With new batteries.
	No sound only on CD play.		Improper connection of RCA junction cord.	1. Between changer main body and controller 2. Between controller and amplifier
	Noise when Disc is changing		1. Change of electric potential ground. 2. Noise is picked up by the cord.	1. Change or add ground points of the set on the amplifier side. 2. Change cords or cords locations.
	Skipping is very frequent.		Loose fitting of the changer main body Optical lens is dirty. Disk itself is dirty or scarred.	Retighten bracket for fitting and screws and nuts. Have the service shop clean lens. Clean disks.


B6-3 EXAMPLES OF CD CHANGER MECHANISM REPAIRS

No.	SYMPTOM	CAUSE	REMEDY
①	Disc won't return to magazine.	Greasy rollers.	Clean rubber rollers by using swab with rubbing alcohol or replace it with roller assembly (YESFX003009). 
②	Magazine won't load.	When the magazine is fully loaded, the loading motor (M1) current may increase and generate noise pulse to CPU IC101. SW1 defective. Motor (M1) defective.	M1 : Elevator Motor ②41 0.1μF, 2Pcs M2 : Disc feed motor. ②40 0.1μF Replace defective parts.
③	Disc jams between the rollers.	Lifter base height off specification.	Perform the lifter base and level adjustments.
④	Magazine won't manually eject.	SW101 defective. Motor (M1) defective. IC101 defective.	Check and/or replace defective parts.
⑤	No disc search.	SW2 defective. IC101 defective. IC501 defective. Motor (M1) defective.	Check and/or replace defective parts.
⑥	Disc is stuck on magazine so that disc loading is impossible.	No search pulse. Burr on the disc.	Check and/or replace QON119 and IC503. Remove burrs. 
⑥		Spring pressure inside the magazine is too strong.	Replace with an improved magazine (YEP9FZ1782D).
		Solenoid drive defective.	Check and/or replace Q501 and solenoid.

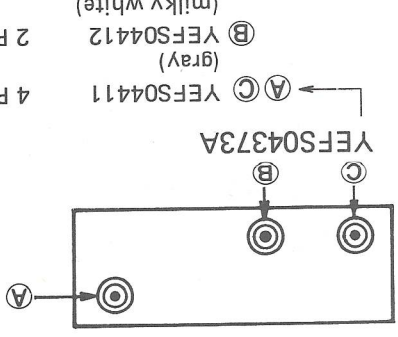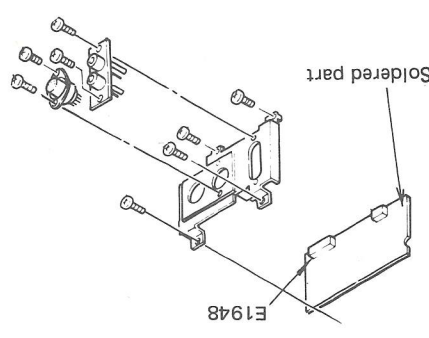No.	SYMPTOM	CAUSE	REMEDY
⑦	Disc won't load to deck.	Rollers defective.	Replace roller assembly YESFX003009.
⑧	Sound skips due to vibration.	Anti-shock system inoperative.	Replace rubber insulators and rubber dampers. 
⑨	No read TOC. No playback. Sound skips in normal play condition.	Servo control loops inoperative.	Check CD operation flow chart. Perform optical pickup servo control alignment. Perform servo control electrical alignment.
⑩	One channel out.	Soiling of the focus lens surfaces with dirt, dust and others.  Solder joints of pins CN801, CN802 on PCB (E-1948) were cracked due to vibration during installation.	Resolder the cracked joints.

B6-4 TOC READ OPERATION - PLAY OPERATION FLOW CHART

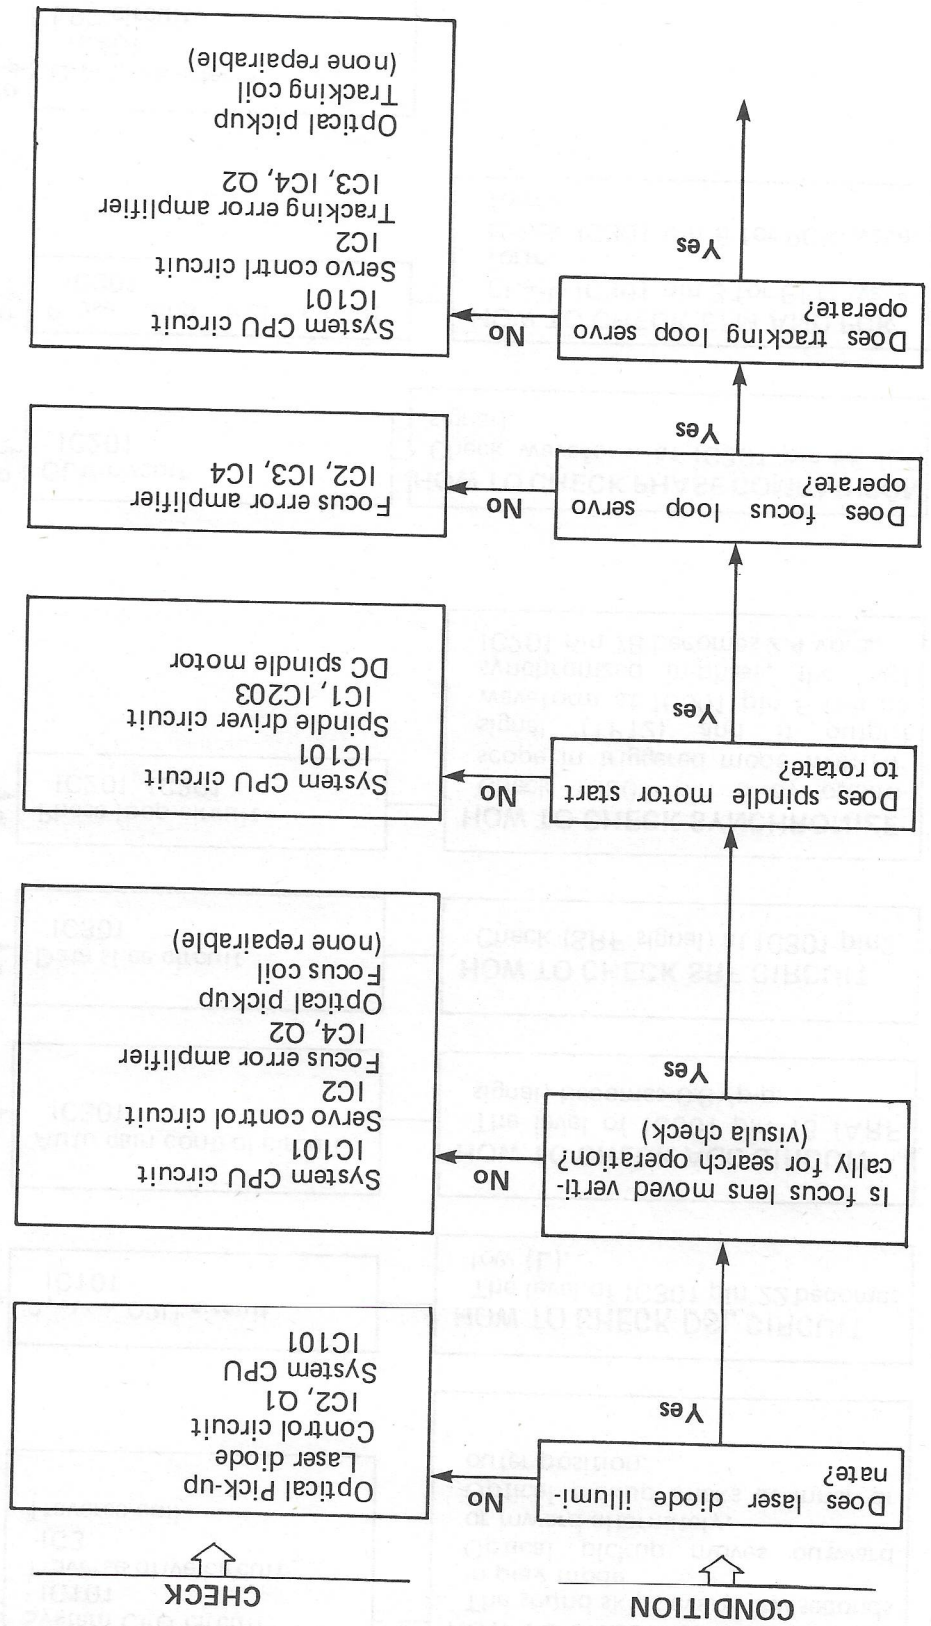

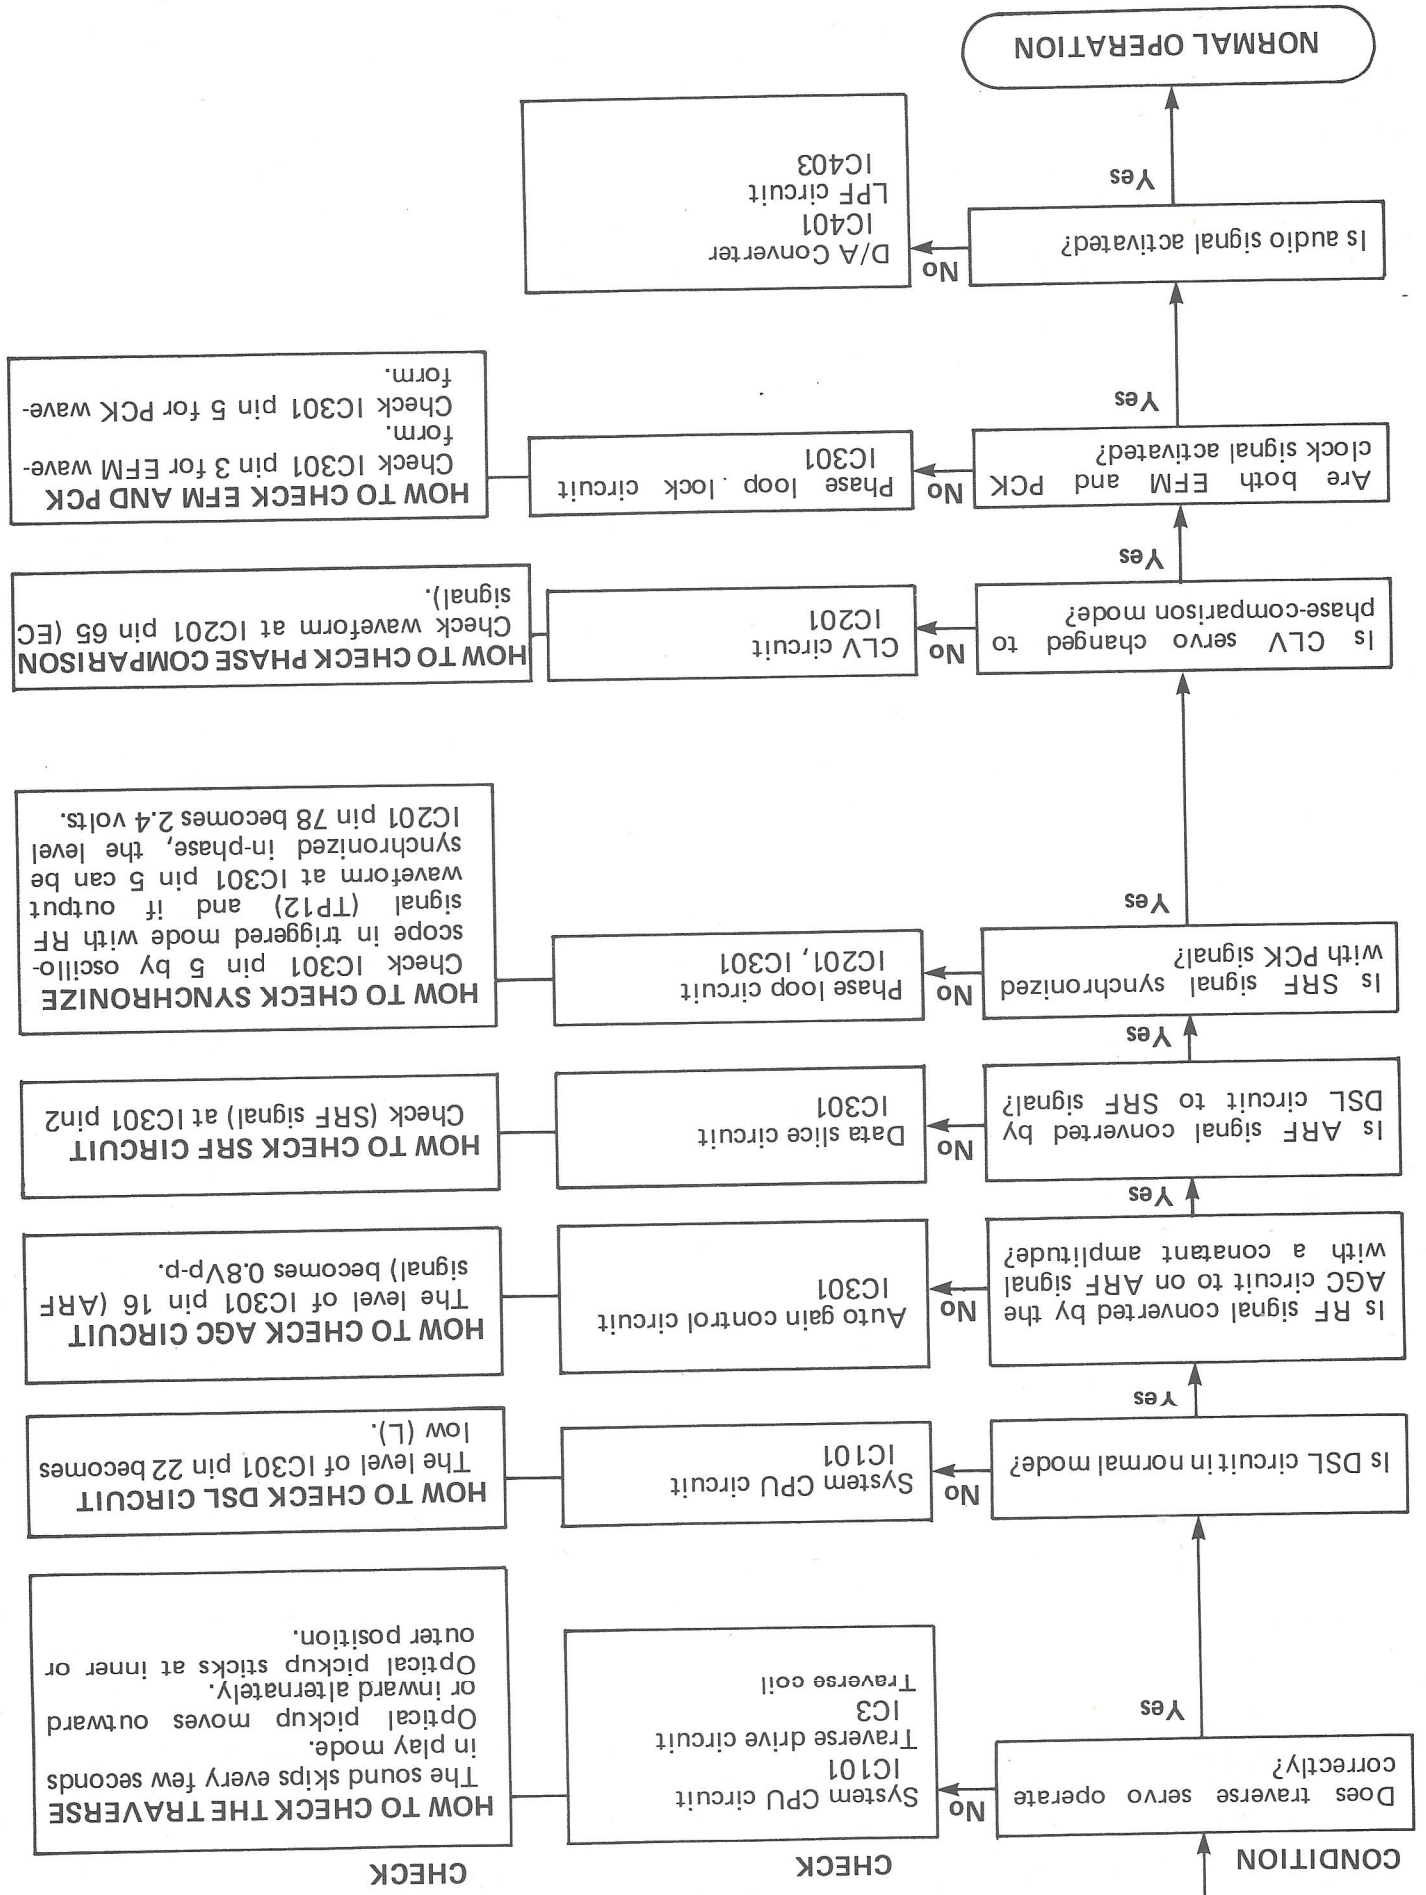

C6 TROUBLESHOOTING (TYPE C)


If trouble has occurred, check the symptoms according to the flowchart shown in Section C6-1.

Note: Do not skip steps in the symptom check.

Keep power on and, if the set is disassembled for troubleshooting, make sure that the symptoms are the same as before disassembling the set.

Note: When checking the set with the top cover open, cover the top of the deck to prevent the photo-sensors from wrong operation.

C6-1 SYMPTOM CHECK

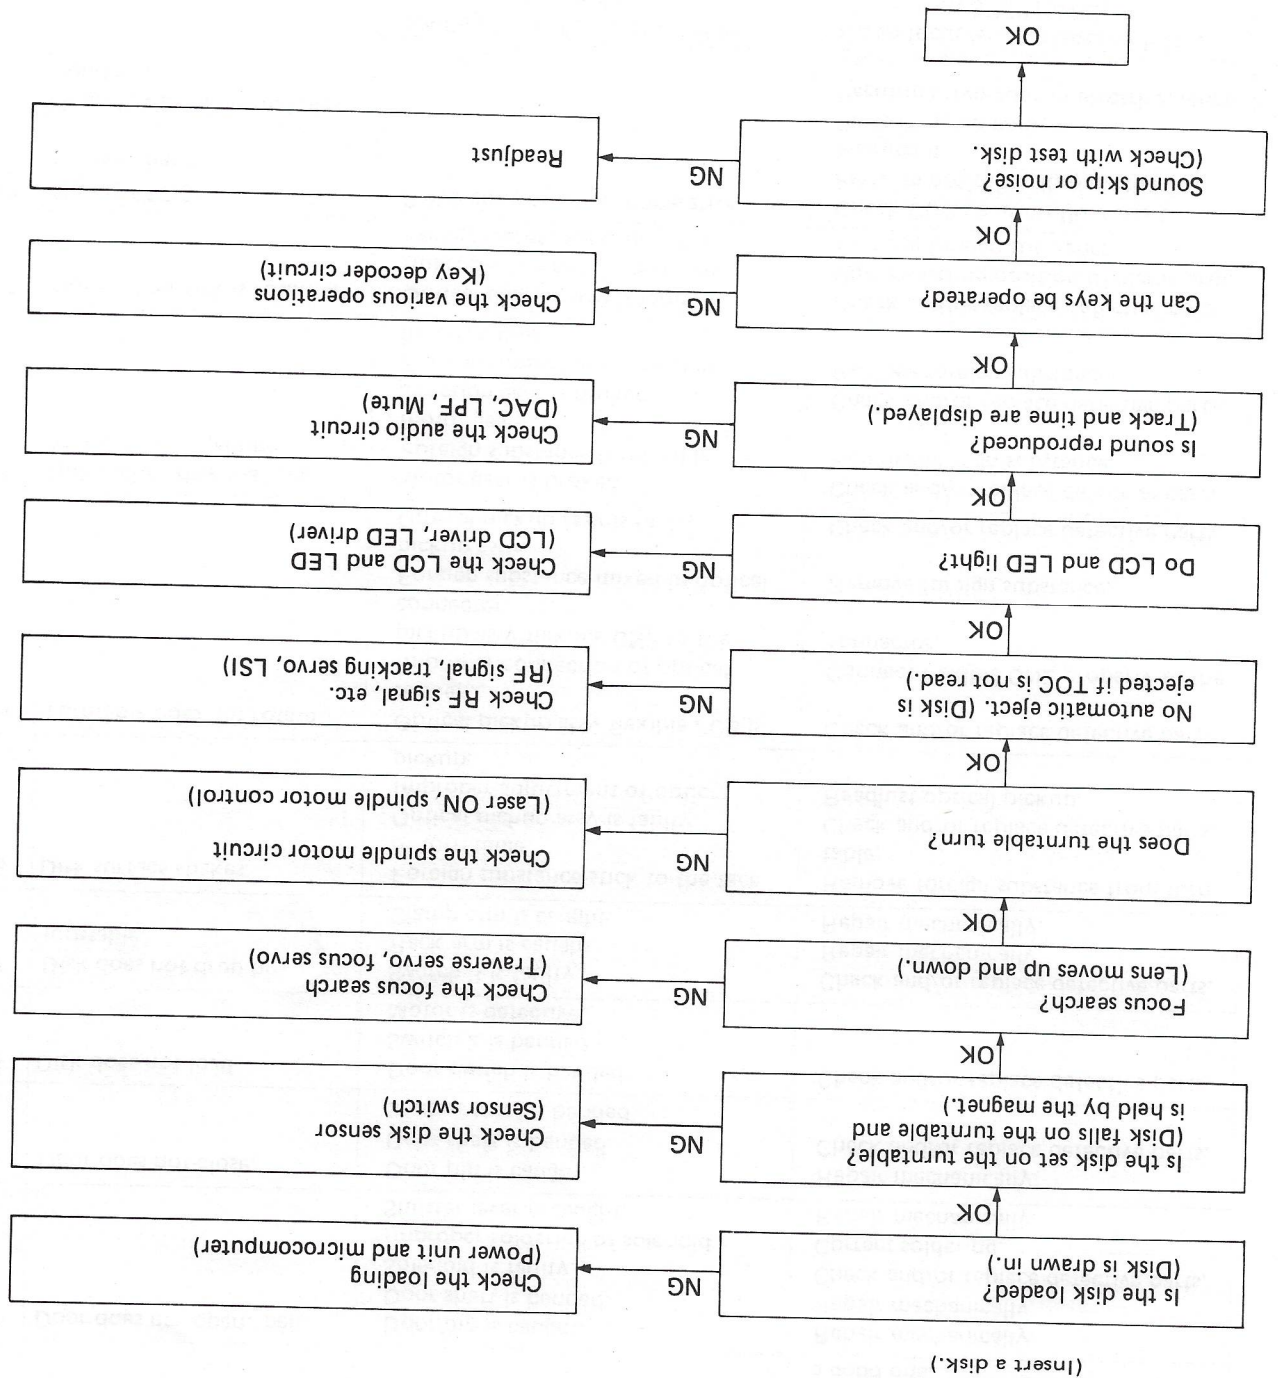

CD-2 CD DECK REPAIRS

NO.	SYMPTOM	CAUSE	REMEDY
1	Does not traverse. Does not eject.	Traverse wire disconnected. Improper soldering of traverse wire pickup assy.	Repair by soldering Remove foreign substance.
2	Traverse reverses.	Short due to solder between traverse wires	Correct soldering between traverse wires.
3	Traverse noise	Foreign substance mixed in optical pickup assy. Optical pickup is faulty.	Remove foreign substance. Replace optical pickup assy with a good one.
4	Door does not open. pen.	Door pin is caught. Door shaft is bended. Solenoid is faulty. Improper soldering of solenoid Shutter lever is caught.	Repair mechanically. Repair mechanically. Check and/or replace defective parts. Correct soldering. Repair mechanically.
5	Door does not close.	Door pin is caught. Door shaft is bended. Shutter lever is bended.	Repair mechanically. Check and/or replace defective parts.
6	Disk does not load.	Door switch is bended. Switch 2 is bended. Motor is defective.	Check and/or replace defective parts.
7	Disk does not drop on turntable.	Switch 3 is faulty. Rack arm is caught. Clamp arm is caught.	Check and/or replace defective parts. Repair mechanically. Repair mechanically.
8	Disk surface shakes.	Foreign substance stick to the face of turn table. Optical pickup assy is faulty. Improper adjustment of optical pickup.	Remove foreign substance from turn table. Check and/or replace defective parts. Readjust optical pickup.
9	Turntable does not rotate.	Optical pickup assy flexible PCB is broken. Improper connection of optical pickup assy flexible CN2 to the connector. Foreign substance mixed in optical pickup assy. Optical pickup assy is faulty.	Check and/or replace defective parts. Connect flexible CN2 properly to the connector. Remove foreign substance. Check and/or replace defective parts.
10	Noise when disk loading, dropping and ejecting	Motor gear is broken. Foreign substance is mixed in motor gear. Junction gear is broken. Foreign substance is mixed in junction gear.	Check and/or replace defective parts. Remove foreign substance. Check and/or replace defective parts. Remove foreign substance.
11	Noise when disk is rotating.	Optical pickup assy is faulty. Improper fitting of clamp arm Foreign substance is mixed in.	Check and/or replace defective parts. Correct fitting position of clamp arm. Remove foreign substance.
12	No read TOC No play back Sound skips in normal play condition	Servo control loops inoperative	Check CD operation flow chart. Perform optical pickup mechanical alignment. Perform servo control. Perform servo control electrical align- ment. Clean focus lens surfaces with lens cleaning kit SZP1938C.

CG-3 TOC READ OPERATION - PLAY OPERATION FLOW CHART

