Service Bulletin

Technics


Number: A6-87-17

Date: September 1987

Matsushita Services Company
Engineering Support Division
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway
Secaucus. New Jersey 07094

Model:

SL-P1200
Compact Disc Player

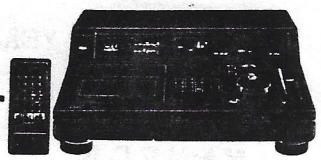

SL-P1200

FILE THIS BULLETIN WITH YOUR SERVICE MANUAL.

Symptom: 1) No operation at all.
2) Unit reads the T.O.C. but fails to enter the play mode.

Cause: The spindle drive IC (AN8290S) overheats and locks-up when:

A) The unit is subjected to excessive vibration during play causing the pick-up to skip.
B) The unit is subjected to excessive use of the skip function.
C) The play function is selected while the transport lock shaft is not set free.

Each of the above conditions cause Q12, Q13, Q101, and Q102 to overheat and become damaged. The excessive heat causes the transistor's solder joints to dry and therefore cause poor connection, or solder bridges.

Remedy: 1) Order kit number SZZP1093C. Refer to the kit contents below.
2) Replace the transistors as indicated in Figure 1.
3) Mount the heat sink to IC501 as shown and indicated in Figure 2.

DESCRIPTION	REF. NO	ORIGINAL PART NO.	NEW PART NO.	KIT PART NO.
TRANSISTOR	Q12	2SC1846 OR 2SD973	2SD1266	SZZP1093C
TRANSISTOR	Q13	2SA885 OR 2SB793	2SB941	
TRANSISTOR	Q101	2SD1055	2SD1266	
TRANSISTOR	Q102	2SB822	2SB941	
HEAT SINK	----	----------	SMWD3E	


----------IMPORTANT----------

THIS MODIFICATION HAS BEEN IMPLEMENTED DURING PRODUCTION FROM JULY 3, 1987. THE SERIAL NUMBER SUFFIX HAS BEEN CHANGED FROM "J" TO "K".

Dist: A6,97,W-877

(OVER)

Regardless of customer's complaint, perform the modification on units having serial number suffix up to and including "J", as indicated below:

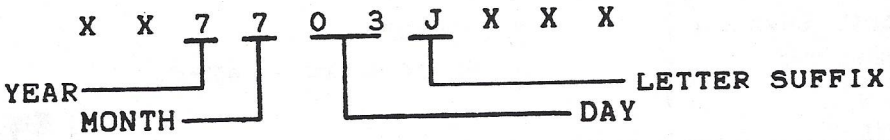

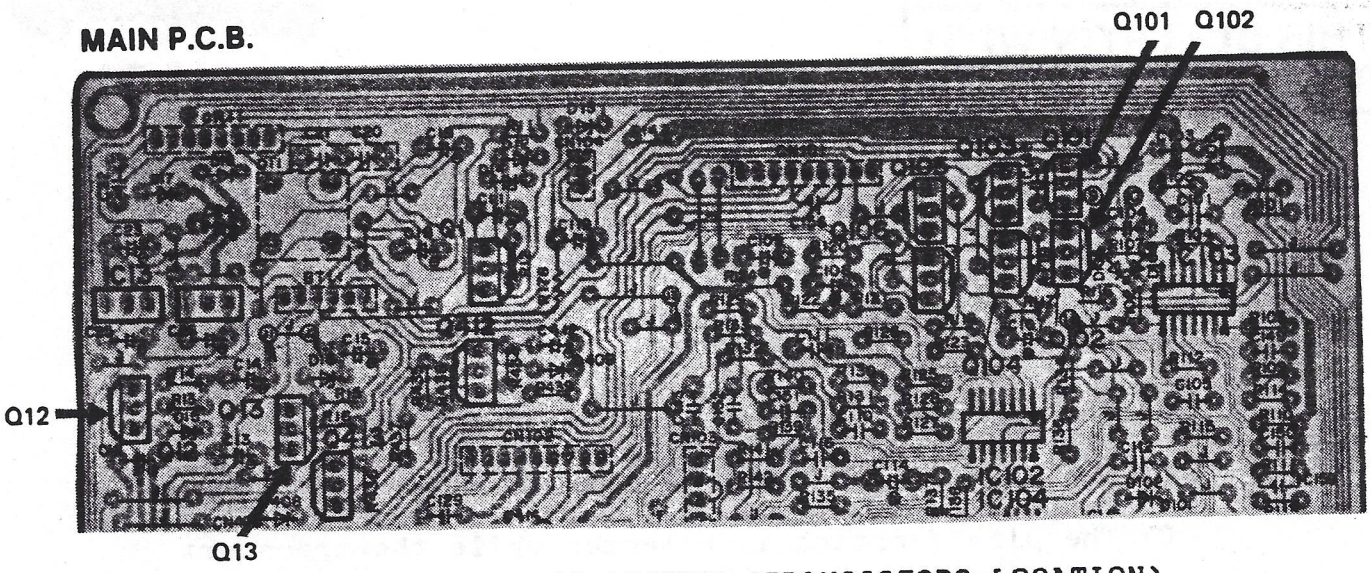


FIGURE 1 - PCB LAYOUT (TRANSISTORS LOCATION)

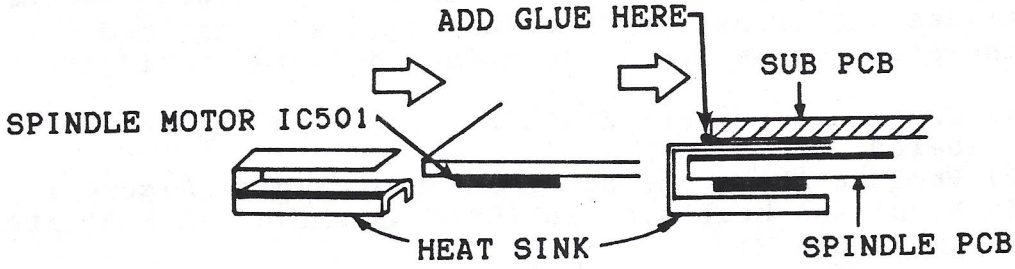


FIGURE 2 - MOUNTING THE HEAT SINK SMWD3E

HEAT SINK MOUNTING PROCEDURE

A) Loosen the spindle PCB and sub PCB mounting screws.
B) Insert the heat sink's thin leaf between the spindle, PCB and sub PCB.
C) Mount the PCBs.
D) Secure the thin leaf of the heat sink to the sub PCB using "3M" type glue.

# # #

Service Bulletin

Technics

Number: A6-88-11

Date: August 1988

Matsushita Services Company
Engineering Support Division
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway
Secaucus. New Jersey 07094

Model:

SL-P1200 & SL-P1200X
Compact Disc Players

FILE THIS BULLETIN WITH YOUR SERVICE MANUAL.

NOTE:
MAKE COPIES OF THIS SERVICE BULLETIN FOR THE FOLLOWING MODELS AND FILE IT WITH THE SERVICE MANUAL:
SL-P1200 & SL-P1200X

Symptoms:


1) A popping noise is heard through the Audio output when PLAY initiates.
2) The PLAY function is accidently interrupted; the pick-up remains at the current location or resets to its rest position. In either case erratic operation is noticed.
3) The unit does not respond to the wired remote control PLAY command.
4) The unit does not read the Disc's TOC or skips occasionally.

Causes:

1) Improper grounding between this unit and the rest of the system.
2) The control panel is not properly grounded, causing static electricity to affect normal operation.
3) Switch bouncing causes the unit to misinterpret the PLAY key function.
4) Dust accumulates on the optical pick-up lens. The OPEN/CLOSE detection switch may be defective.


Remedies: Perform the following modifications. Note that all of the following parts (except the lens cleaning kit SZZP1038C) are supplied in a kit as indicated on page 3.

1) Mount a ground lug according to the following:
   A. Drill a 4mm hole on the indicated location of the rear panel. Make sure that no filings fall inside the unit.

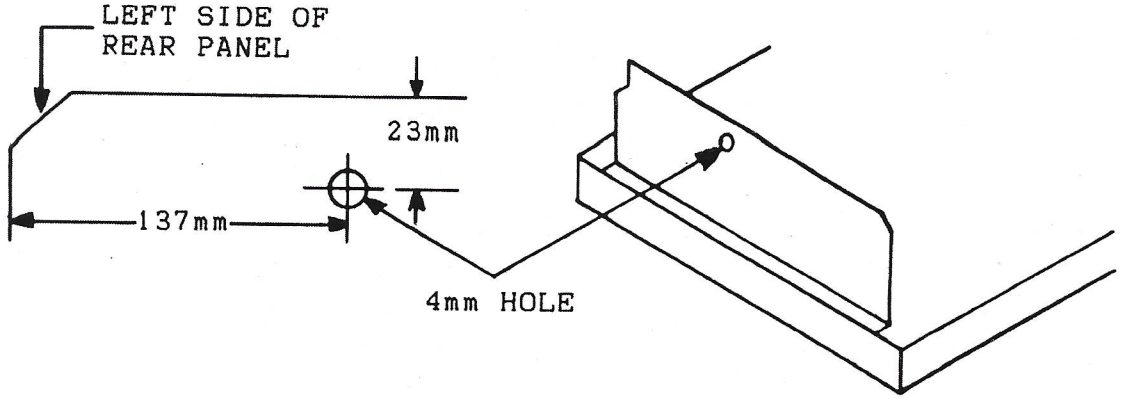

Dist: A6,88,W-903

B. Mount the ground lug as follows:

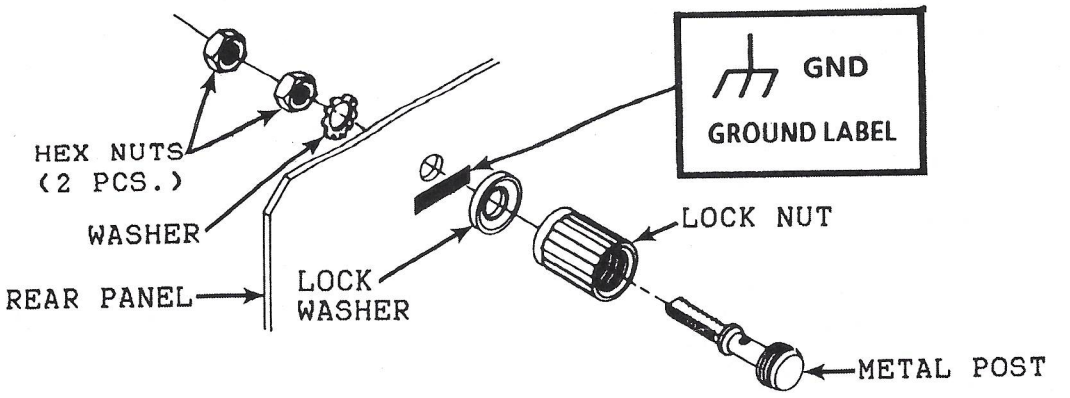


C. Affix the "GND" label below the ground lug.

Please refer to GROUNDING THE UNIT instructions on page 4 for additional related information.

2) Modify the front panel grounding as follows, and as shown in the figure below:


A. Remove the operation PCB (KEYBOARD PCB) according to the Service Manual, page 17.
B. Cut the wire tie at point "E".
C. Remove the ground wire from points "A" and "B". Mount this wire between points "C" and "D". Use the screw (included in the kit) to mount the wire at point "D".
D. Tie the wires at point "E" by using the wire tie.
E. Remove the REPEAT and AUTO SPACE knobs.
F. Mount the new ground plate.
G. Mount the REPEAT and AUTO SPACE knobs.

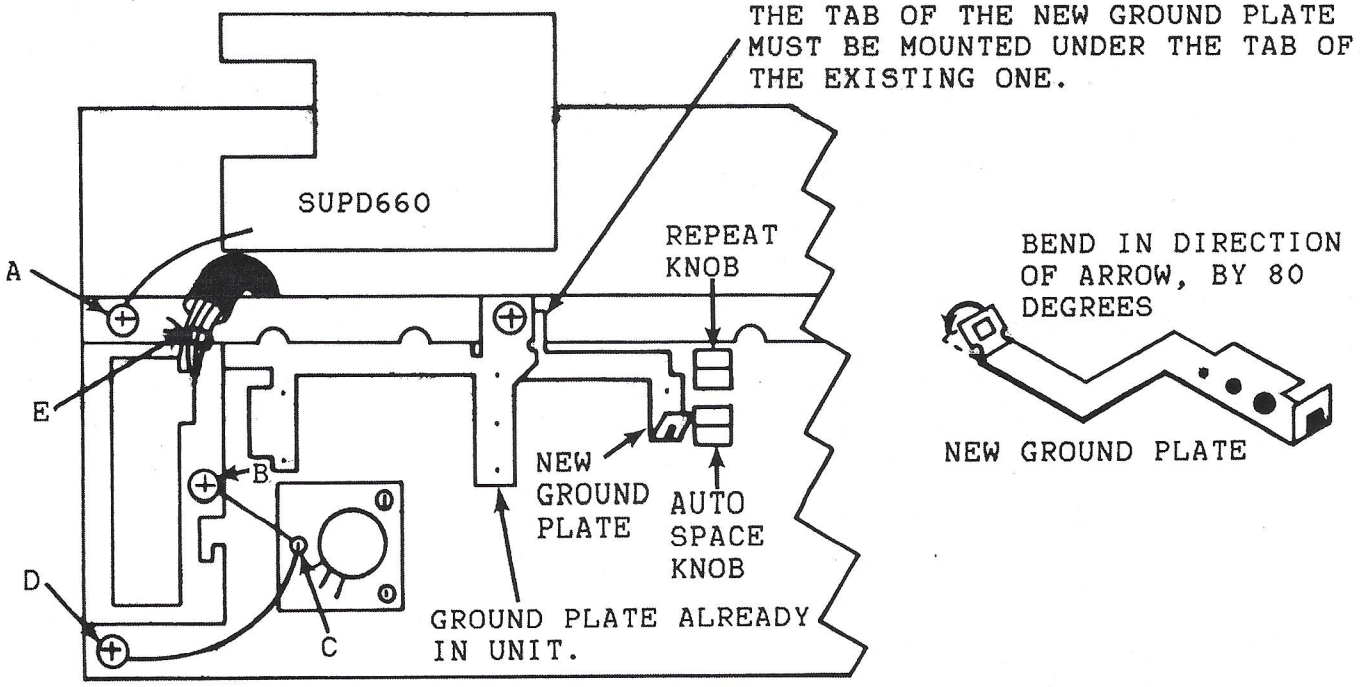

3) To improve the switch bouncing problem, change C415, from 0.001uf to 0.01uf. This capacitor is located on the "SOCKET PCB" on the rear panel.

4) A. Measure the RF level at test point TJ302. The level should be between 0.7 and 1.2 volts P-P. Clean the optical pick-up lens using the cleaning kit SZZP1038C. Follow the instructions in the Owner's Manual.

B. Check the OPEN/CLOSE detection switch S101. Make sure that all three terminals make good contact. If poor contact is noticed, replace it with the switch assembly (Part Number SWSD12001). See figure below:

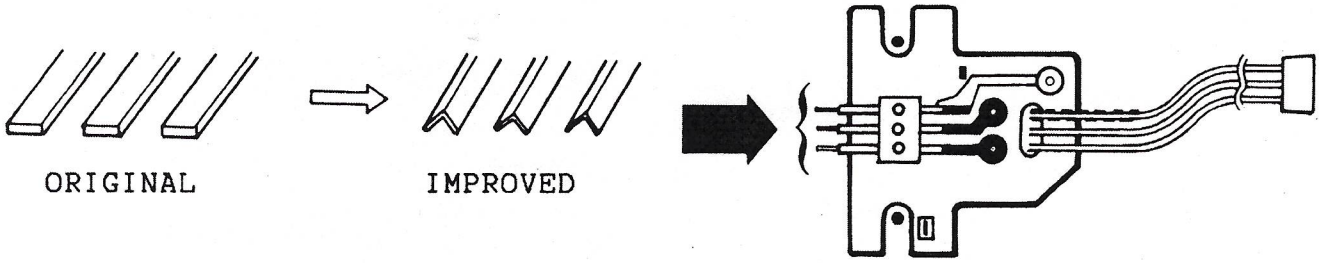

SWITCH TERMINAL MODIFICATION

SWITCH ASSEMBLY - SWSD12001

NOTE: THE SWITCH HAS BEEN IMPROVED FROM THE FEBRUARY 10, 1987 PRODUCTION ON SL-P1200, AND FROM FIRST PRODUCTION OF SL-P1200X. THE DATE CAN BE DETERMINED BY THE SERIAL NUMBER AS FOLLOWS:

X X 7 2 1 0 X X X X

YEAR — DAY

MONTH: 1 ~ 9 = JAN. ~ SEPT.
J = OCT.
K = NOV.
L = DEC.

MODIFICATION KIT

PROCEDURE	PART DESCRIPTION	QUANTITY	KIT NUMBER
1-B	HEX NUT WASHER LOCK WASHER LOCK NUT METAL POST GROUND LABEL	2 1 1 1 1 1	TAS8512001
2-C	SCREW	1	
2-D	WIRE TIE	1	
2-F	GROUND PLATE	1	
3	0.1μf CAPACITOR	1	
4-B	SWITCH ASSEMBLY	1	

GROUNDING THE UNIT

Please note the following when making connections to the audio output terminals:

1) SL-P1200X

* WHEN USING BOTH THE "UNBALANCE" AND "BALANCED" OUTPUTS AT THE SAME TIME:
  Make sure that pin 1 on both channels of the BALANCED output terminals is disconnected.

* WHEN USING ONLY THE "BALANCED" OUTPUTS:
  If pin 1 of the BALANCED outputs is disconnected, be sure to connect this unit's ground terminal to the ground of the component to which it is connected.

  If pin 1 of the BALANCED outputs is connected, connection of the ground terminal is not necessary.

  In either case confirm that the component to which this unit is connected is properly grounded.

* WHEN CONNECTING THE WIRED REMOTE CONTROL TERMINAL:
  Do not connect pin 4 of the WIRED REMOTE CONTROL to the system's ground.

2) SL-P1200

* WHEN CONNECTING TO AN "UNBALANCED TO BALANCED" ADAPTOR:
  Do not connect pin 1 of the BALANCED terminal to the adaptor side.

* WHEN CONNECTING THE WIRED REMOTE CONTROL TERMINAL:
  Do not connect pin 4 of the WIRED REMOTE CONTROL to the system's ground.

# # #