

AIoT Guidebook: Comprehensive tutorial for developing IoT and AI applications on STM32 microcontrollers

Mateus H. Galvão^{1, 2, 4} and Pietro M. Ferreira^{1, 2, 3}

¹ Université Paris-Saclay, CentraleSupélec, CNRS, Lab. de Génie Électrique et Électronique de Paris, 91192, Gif-sur-Yvette, France ² Sorbonne Université, CNRS, Lab. de Génie Électrique et Électronique de Paris, 75252, Paris, France ³ Univ. Savoie Mont Blanc, Univ. Grenoble Alpes, Grenoble INP, CNRS, CROMA, Grenoble, France ⁴ École Nationale Supérieure de Techniques Avancées, Institut Polytechnique de Paris, 91120, Palaiseau, France

DOI: [10.5281/zenodo.12700232](https://doi.org/10.5281/zenodo.12700232)

Software

- [Release ↗](#)
- [Repository ↗](#)

Submitted: N/A

Published: N/A

License

Authors of papers retain copyright and release the work under a GNU General Public License v3.0 ([GNU GPLv3](#)).

Chapter 1: Overview and Objectives

1. Learning Goals

The goal of this tutorial is to design various Internet of Things (IoT) applications through experimentation, creation, and validation of functional projects. By combining technological insights with practical, hands-on project-based learning, you will gain a comprehensive understanding of the components that make up a connected system, ranging from sensor selection to data processing in cloud and Artificial Intelligence (AI).

We will use different electronic development boards along with two development environments: *MBed OS* and *STM32CubeIDE*. Each section of this tutorial will be dedicated to teaching essential concepts of both development environments, IoT implementations, ThingSpeak cloud, and embedded AI. These tutorials are designed to inspire you to implement your own projects.

This material covers several key areas. First, it focuses on electronic design and integration, involving the selection and integration of sensors and other electronic components. Next, it addresses processing and communication, which includes programming in C, processing on the embedded board, and implementing communication protocols. The tutorial also delves into the implementation of AI, where you will learn to use pre-trained AI models in your embedded projects. Finally, it also explores data processing and application on a server via ThingSpeak, covering data handling and visualization on a cloud-based server.

The project involves multiple steps, including specifying a connected object and a target application by describing the needs and functionalities, assembling and integrating different elements to create the object, focusing on hardware design involving sensors and the processor board, integrating the hardware with AI to determine if your model can be implemented into your project and understanding its limitations, and developing the application and its cloud environment with a focus on software design involving data processing and visualization.

2. The Hardware and Software

2.1 B-L475E-IOT01A Development Board

For the first part of this material, we will use the board referenced a *B-L475E-IOT01A*. It (Fig. 1) features an *STM32L475VGT6* microcontroller, memory, sensors, radio frequency modules allowing for wireless connections, two USB connections, a connector for Arduino extensions, and two microphones. Thus, it constitutes a complete system for developing a connected object. Additionally, it is possible to add external sensors or radio frequency modules to enhance its functionalities. Its dimensions are 90mm x 60mm. It is assembled using SMD components placed on both sides (Fig. 2(a) and 2(b)). Its functional description is illustrated in Fig. 3 with all the peripherals.



Figure 1: B-L475E-IOT01A Discovery Board.

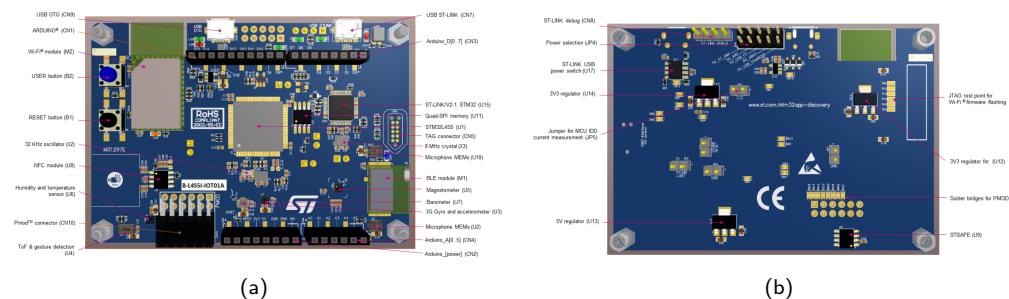


Figure 2: B-L475E-IOT01A top (a) and bottom (b) views.

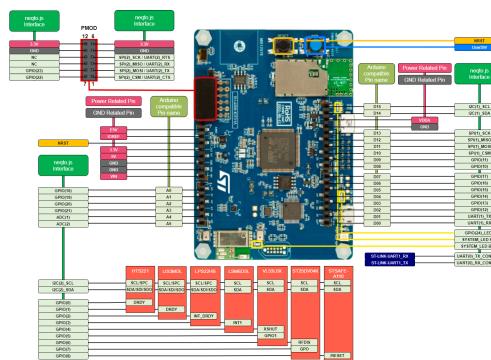


Figure 3: B-L475E-IOT01A Discovery Board pinout.

The microcontroller integrates 3 serial interfaces, 2 serial audio interfaces, 1 analog-to-digital converter, 1 I²C port, 1 USB connection, and 1 digital input/output port (GPIO). Its core is a 32-bit ARM RISC microprocessor with a power of 100 DMIPS (Dhrystone Million Instructions Per Second).

The board (Fig. 2(a), 2(b) and 3) includes a 3-axis magnetic induction sensor (+/-16 gauss = +/-16e-4T), a 3-axis acceleration sensor (+/-16g), and a 3-axis gyroscope (+/-2000°/s). It features a pressure sensor (260-1260hPa), a temperature sensor (+/-0.5°C), and a humidity sensor (0-100% relative humidity, accuracy +/-3.5%). Additionally, it has a motion and time-of-flight sensor (<2m) based on an infrared laser, and an authentication and security sensor.

The board includes 4 radio frequency modules:

1. a Bluetooth module (V4.1),
2. a WiFi module (802.11 b/g/n),
3. an NFC tag communication module,
4. a sub-GHz 868MHz module.

2.2 B-U585I-IOT02A Development Board

For the last section, that is where we will implement machine learning models into our projects, we will use the developer board *B-U585I-IOT02A*, as it offers 2 Mbytes of Flash memory (twice as much as the model used previously) and 786 Kbytes of SRAM (more than six times greater than the previous model). These two parameters are crucial when deciding which microcontroller to use because they are the primary factors that limit edge applications. Typically, models require a significant amount of memory to perform their calculations.

The enhanced memory capacity of the *B-U585I-IOT02A* makes it an excellent choice for developing embedded AI solutions, allowing for more complex and efficient machine learning models to be implemented directly on the device. This capability is essential for achieving high performance and independence in edge AI applications.

The board supports multiple connectivity options such as a Wi-Fi® module (802.11 b/g/n compliant) from MXCHIP and Bluetooth® Low Energy from STMicroelectronics. Additionally, it is equipped with various MEMS sensors, including a 3-axis magnetometer, 3D accelerometer, 3D gyroscope, pressure sensor, relative humidity and temperature sensor, time-of-flight and gesture-detection sensor, and an ambient-light sensor. It also includes two digital microphones and a security/authentication module for IoT devices.

Connectivity is further enhanced by the inclusion of multiple board connectors: USB Type-C®, ARDUINO® Uno V3 expansion connectors, a camera module expansion connector, two STMod+ expansion connectors, and a Pmod™ expansion connector. The board offers flexible power supply options, including ST-LINK USB VBUS, USB connector, or external sources. An on-board STLINK-V3E debugger/programmer provides USB re-enumeration capability, mass storage, Virtual COM port, and a debug port.

Fig. 4, 5(a) and 5(b) show the board, top and bottom peripherals respectively:



Figure 4: B-U585I-IOT02A Discovery Board.

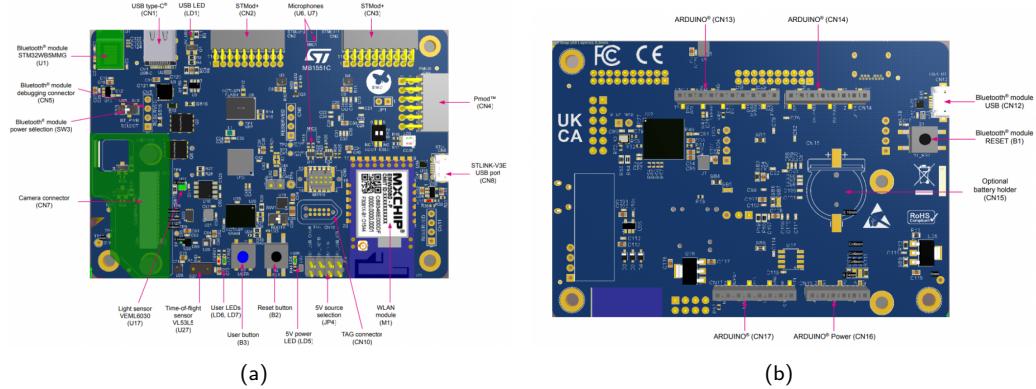


Figure 5: B-U585I-IOT02A top (a) and bottom (b) views.

The *STM32U585AI6Q* microcontroller at the core of this board integrates advanced functionalities and interfaces to support diverse applications. The microcontroller includes:

- **Analog-to-Digital Converters (ADC):** One fast 14-bit ADC (2.5 Msps) and one 12-bit ADC (2.5 Msps)
- **Digital-to-Analog Converters (DAC):** Two DAC channels
- **Comparators and Operational Amplifiers:** Two comparators and two operational amplifiers
- **Voltage Reference:** An internal voltage reference buffer
- **Timers:** A variety of timers including:
 - Four 32-bit general-purpose timers
 - Three 16-bit general-purpose timers
 - Two 16-bit PWM timers dedicated to motor control
 - Two 16-bit basic timers
 - Four 16-bit low-power timers
 - A low-power RTC (Real-Time Clock)

The microcontroller also features a comprehensive set of communication interfaces:

- **I2C Ports:** Four I2C interfaces
- **SPI Ports:** Three SPI interfaces
- **UART/USART Ports:** Three USARTs, two UARTs, and one low-power UART
- **Serial Audio Interfaces (SAIs):** Two SAIs for audio processing
- **Digital Camera Interface:** One DCMI (Digital Camera Interface)
- **SDMMC:** Two SDMMC (Secure Digital MultiMedia Card) interfaces
- **FDCAN:** One Flexible Data-Rate CAN interface
- **USB Connections:** One USB OTG full-speed and one USB Type-C / USB Power Delivery controller
- **PSSI:** One generic synchronous 8-/16-bit PSSI (parallel data input/output slave interface)

The core is a 32-bit ARM RISC microprocessor, enhanced with Arm® TrustZone® for secure execution environments.

The MEMS sensors on the board provide comprehensive environmental and motion sensing capabilities:

- A 3-axis magnetometer for magnetic field measurement
- A 3D accelerometer for motion detection
- A 3D gyroscope for angular velocity measurement
- A pressure sensor covering 260-1260 hPa
- A combined humidity and temperature sensor
- A time-of-flight sensor for distance and gesture detection
- An ambient-light sensor

Additionally, the board integrates authentication and security features to ensure secure operations in IoT applications.

The radio frequency modules on the board include:

- A Bluetooth module compliant with Bluetooth V4.1 standards
- A Wi-Fi module compliant with 802.11 b/g/n standards

This combination of features makes the *B-U585I-IOT02A* an ideal platform for developing and prototyping smart connected objects, with ample support for additional external modules and sensors through various expansion connectors.

2.3 How to Program your MCU

Programming an STM32 microcontroller unit (MCU) can be done using several methods and tools, each offering different features and benefits. Here are some of the most common ways to program an STM32 MCU:

STM32CubeIDE:

STM32CubeIDE is an integrated development environment (IDE) from *STMicroelectronics* tailored specifically for STM32 microcontrollers. It combines ST's *STM32CubeMX*, which is a graphical tool for configuring microcontrollers and generating initialization C code, with the Eclipse IDE and the GCC toolchain.

▪ **Features:**

- **Graphical Configuration:** *STM32CubeMX* allows you to configure peripherals and middleware components through a graphical interface.
- **Code Generation:** Automatic generation of initialization code for peripherals and middleware.
- **Debugging:** Integrated debugging tools with support for ST-LINK debug probes.
- **Compilation:** Uses GCC toolchain for compiling code.
- **Project Management:** Allows for easy project management and configuration.

▪ **Advantages:**

- **Integrated Environment:** Everything you need is in one place, from configuration to debugging.
- **STMicroelectronics Support:** Direct support from the MCU manufacturer ensures up-to-date features and compatibility.

- **Free to Use:** *STM32CubeIDE* is free to download and use.

MBed OS:

MBed OS is an open-source embedded operating system designed specifically for the Internet of Things (IoT). It provides a high-level API, simplifying the development of IoT applications on ARM Cortex-M microcontrollers, including STM32.

- **Features:**

- **High-Level API:** Provides abstractions for hardware interfaces, making code more portable.
- **RTOS:** Built-in real-time operating system for multitasking.
- **Connectivity:** Integrated support for various connectivity protocols (e.g., Bluetooth, Wi-Fi, Ethernet).
- **Security:** Built-in security features, including secure communication and secure boot.

- **Advantages:**

- **Ease of Use:** Simplifies the process of writing complex applications with its high-level API.
- **Portability:** Code written for *MBed OS* can be easily ported across different hardware platforms.
- **Community and Support:** Strong community support with extensive documentation and examples.
- **Online Compiler:** Provides an online compiler for quick prototyping and development.

VS Code with STM32 Extension:

Visual Studio Code (VS Code) is a lightweight, open-source code editor developed by Microsoft. Recently, extensions have been developed to support STM32 development within *VS Code*, such as the STM32 for VS Code extension.

- **Features:**

- **Lightweight IDE:** VS Code is known for being a lightweight and highly customizable code editor.
- **Extensions:** The STM32 extension provides integration with *STM32CubeMX*, debugging support, and code completion features.
- **Cross-Platform:** Available on Windows, macOS, and Linux.
- **Integrated Terminal:** Allows the use of command-line tools directly within the editor.

- **Advantages:**

- **Customization:** Highly customizable environment with numerous available extensions.
- **Modern Editor:** VS Code offers modern editing features, such as IntelliSense, debugging, and Git integration.
- **Flexibility:** Can be used with different compilers and build systems.

Each tool offers unique benefits and caters to different aspects of STM32 development. *STM32CubeIDE* provides a comprehensive, integrated solution directly from STMicroelectronics. *MBed OS* simplifies IoT development with its high-level APIs and real-time operating system.

VS Code, with its modern, extensible nature, offers a flexible and lightweight development environment suitable for a variety of use cases. Choosing the right tool depends on your specific needs, project requirements, and personal preferences.

2.4 Choosing the IDE

In Chapter 2, we will learn how to use the *Mbed Studio* platform to develop our projects, while in section 3, we will use *STM32CubeIDE*. While the former is an excellent tool that offers a simplified environment for projects with fewer requirements and a "user-friendly" interface, the latter allows for greater control over MCU programming and having a more flexible environment. Additionally, *STM32CubeIDE* includes a specific package for AI applications, making it more suitable for advanced projects that require additional functionalities. Here is a comparison between both software platforms:

1. Advantages of *STM32CubeIDE*:

- (a) **Control and Flexibility:** Provides greater control over MCU programming with a wide range of configurations and customization options.
- (b) **Advanced Features:** Support for specific packages for AI applications, advanced graphics, and other high-complexity features.
- (c) **Advanced Debugging:** Robust debugging tools, including support for breakpoints, memory, and register inspection.
- (d) **Integration with STM32CubeMX:** Facilitates peripheral and middleware configuration and initial code generation.
- (e) **Extensive Documentation and Community:** Broad community support and detailed documentation provided by STMicroelectronics.

2. Disadvantages of *STM32CubeIDE*:

- (a) **Learning Curve:** Can be more complex with a steeper learning curve for beginners.
- (b) **System Requirements:** Requires more system resources and can be heavier on lower-spec machines.
- (c) **Initial Setup:** Initial setup can be more time-consuming and complex due to numerous available options and adjustments.

3. Advantages of *Mbed Studio*:

- (a) **Simplicity and Ease of Use:** More simplified and user-friendly environment for beginners with quick and easy initial setup.
- (b) **Ready Libraries and Components:** Easy access to a vast library of components and code examples that accelerate development.
- (c) **Cross-Platform:** Supports a wide variety of boards and MCUs beyond STM32 products.
- (d) **Rapid Development:** Ideal for rapid prototyping and projects that do not require advanced functionalities.
- (e) **Online Environment:** Available as an online platform, allowing development without the need for local installation.

4. Disadvantages of *Mbed Studio*:

- (a) **Less Control:** Offers less control and customization compared to *STM32CubeIDE*, which can be limiting for complex projects.
- (b) **Limited Advanced Features:** May not support some advanced features needed for specific projects, such as AI applications or advanced graphics.

(c) **Limited Debugging:** Less robust debugging tools compared to *STM32CubeIDE*.

Chapter 2: Exploring MBed OS

As mentioned earlier, we will start with *MBed OS*, due to the points raised, so we will go through the initial setup steps of the environment, basic examples of how to create your projects, use sensors, interface them with the board, and perform communication protocols.

1. Installation and Setup

Before starting to program our MCU, we need to install our environment, the driver and update the board, so:

1. Connect the board to your PC via one of the USB ports: USB-STLink. The simplest way to power the board is by using the 5V from the USB. To do this, place a jumper on JP4 on the 5V_ST_LINK pins in your board.
2. Then, install the necessary driver in your PC and restart it. This driver is available in:

 [setup/en.stsw-link009.zip](#)

3. Once the driver is installed, the board appears as a D drive in your PC. Open this drive and check the Details.txt file. If the BIOS version seems outdated, it is preferable to update it. To do this, download the file to update the board and run the executable. When the window appears, click on Deviceconnect to verify the BIOS version. If the BIOS version is older than the one provided, click on Yes>>> to update to the new BIOS. The program is available in:

 [setup/Bios_update_ST.zip](#)



Figure 6: Updating the BIOS of the board.

4. **Installation of Mbed Studio:** This software is available at <https://os.mbed.com/studio/> for Windows, Mac, and Linux. The installation is straightforward by executing the provided program. Once installed, the software will prompt you to create an account to use the programming environment. If it identifies outdated drivers or BIOS versions on the board, it may ask you to authorize updates.
5. **An alternative to installing Mbed Studio** is using the *Keil Arm* online programming interface, available at <https://studio.keil.arm.com/>. The same *MBed* account can be used across all environments.

2. Example Blinking a LED

Using the board involves running executable software on it. Therefore, applications need to be developed in the form of executables for the board. This requires using a specific development system, which interfaces with the *MBed OS* operating system running on the ARM microcontrollers. This development system includes several sample source codes (in C language) that can be easily modified to create a specific application.


We will implement a very simple first example: the blinking LED.

1. **Start the software**, create your account, and configure your working directory.

- Once this is done, all projects will be located in this directory.


2. **Create a new project** by importing an example program:

- Navigate to **File -> New Program**.
- A selection window will appear, choose ***mbed-os-example-blinky***.

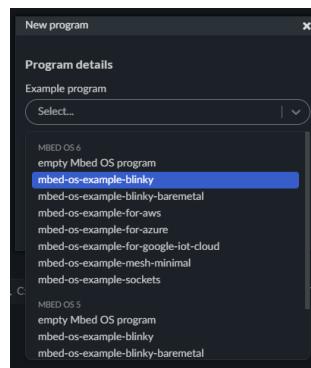


3. **Configure the program:**

- Next, you can give the project a name, such as **mbed-LED1**.
- Make the program active.
- For the first program, save the *Mbed* environment in your directory.

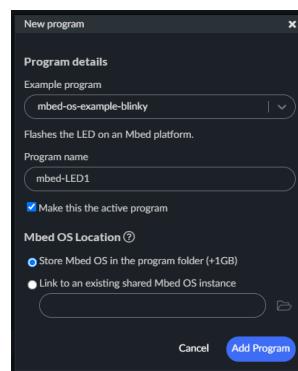

4. Click on **ADD PROGRAM** to complete the setup.

The program appears on the right side of the environment. To make a project active later, right-click on it and select **SetActiveProgram**. The name of the active program will then appear in bold among the different projects.

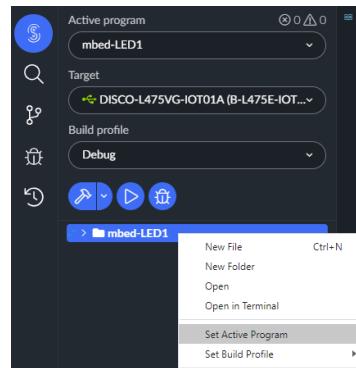

You can open the corresponding code by clicking on the `main.cpp` file:


```

1 #include "mbed.h"
2
3 // Blinking rate in milliseconds
4 #define BLINKING_RATE      500ms
5
6 int main()
7 {
8     // Initialize the digital pin LED1 as an output
9 #ifdef LED1
10     DigitalOut led(LED1);
11 #else
12     bool led;
13 #endif
14
15     while (true) {
16         led = !led;
17         ThisThread::sleep_for(BLINKING_RATE);
18     }
19 }
```

chapter-2/mbed-LED1/main.cpp

`led` is an object of the `DigitalOut` class. `LED1` is the name of the pin on the board, which is passed to the `DigitalOut` constructor. `LED1` and `LED2` are green LEDs located between the two USB interfaces, on the left and right respectively. `LED3` is a yellow LED located below the WiFi module on the left. `LED4` is a blue LED at the bottom right, near the MEMS microphones. The `led` object can take two binary values: '1' or '0'. The `MBed OS` function `sleep_for` allows the process to sleep for a specified time in milliseconds. The use of the `while(true)` loop ensures that the main program runs indefinitely, which is necessary for embedded IoT applications deployed in the field. Once turned on, the IoT device executes its main program continuously.

To compile and download the code to the board, click on the compile icon. The first compilation takes a long time because all the libraries are compiled. For subsequent compilations, only the main program `main.cpp` will be recompiled. If you make significant modifications, you can invoke the `CleanBuild` mode, which functions like the first compilation and takes a lot of time.

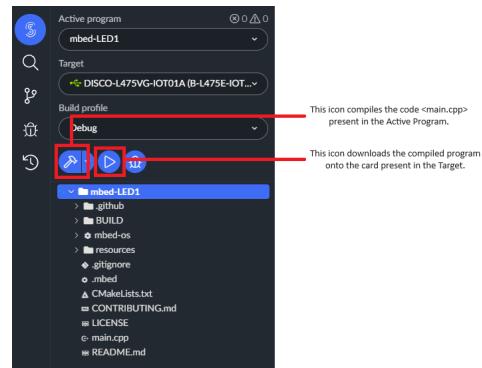

Note that whenever you modify the configuration or environment files, the entire project needs to be recompiled. Check that the LED blinks with a period of 1 second.


Now, let's add a second LED and display a message at startup.

```

1 #include "mbed.h"
2
3 // Blinking rates in milliseconds
4 #define BLINKING_RATE 500ms
5
6 int main() {
7     // Initialize the digital pins LED1 and LED2 as outputs
8     DigitalOut led1(LED1);
9     DigitalOut led2(LED2);
10    led1=0 ; led2=1 ;
11
12    // Display a message at startup
13    printf("Starting LED blink program\n");
14
15    while (true) {
16        led1 = !led1;
17        led2 = !led2;
18        ThisThread::sleep_for(BLINKING_RATE);
19    }
20}

```

When the program starts, a new tab appears in the bottom right section of the tool, allowing you to display the results of `printf` functions as shown below. You can extend this example with LED3 according to your needs. The LEDs on the board can serve as a visual indicator for the operation of the application being developed in the project.

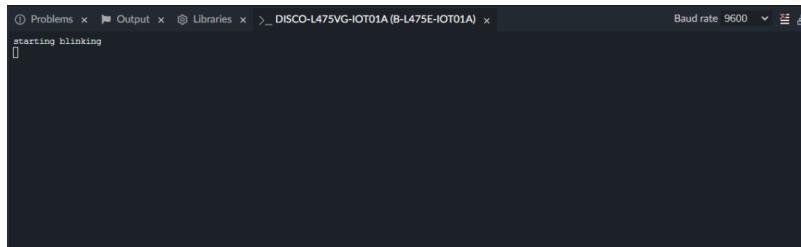


 chapter-2/mbed-LED2/main.cpp

3. Example Using the Board's Internal Sensors

The available development board already has several integrated sensors that are used to showcase the various applications that can be performed using it. Therefore, we can use a library to have easy access to the functionalities of these components or even a ready-made complete project available on the *Mbed* website.

3.1 Importing a Complete Project


1. First, go to the official site: <https://os.mbed.com/code/>
2. In the search bar, type:
 - *ST BSP_B-L475E-IOT01*
3. You will quickly find an official project from *ST*.

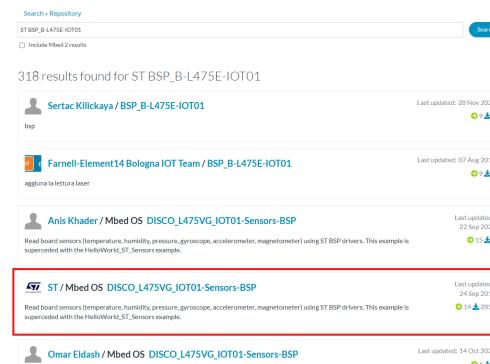

4. Copy the link address by right-clicking on it.



5. Then, go to the menu: **File -> Import Program**
6. Paste the previously copied address and click on **Add Program**.

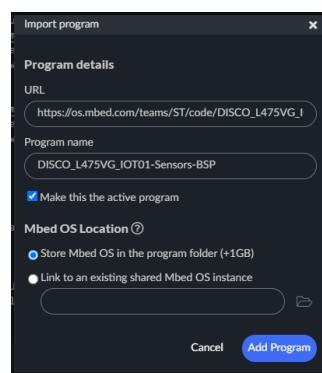

Open the code of `main.cpp`. Read the main program for a better understanding of the application.

1. You will find the importation of sensor reading libraries, the reading commands, and the commands for sending to the serial port.
2. Compile the project and download it onto the board.

3. You can check the value of the temperature, for example, and by positioning the board on its sides, you can check the accelerations in X, Y, and Z.


 chapter-2/DISCO_L475VG_IOT01-Sensors-BSP/main.cpp

3.2 Starting from a Blank Project

This time, we will create an empty project and import all the necessary libraries.

1. Create a New Project:

- Go to **File -> New Program**, then choose **mbed6 empty Mbed program**, and click on **Add Program**.

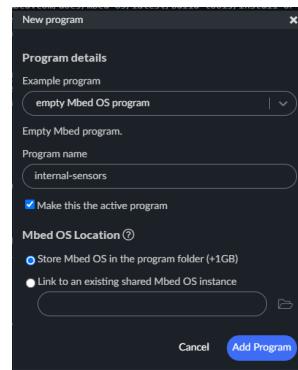


2. Add Internal Board Sensor Libraries:


- Return to <https://os.mbed.com/code/>.
- Click on the previously chosen project.
- At the top of the page, you will see a dependency on the *BSP_B-L475E-IOT01* library.
- Right-click on the library name to copy its address.

 ST / Mbed OS  DISCO_L475VG_IOT01-Sensors-BSP


Read board sensors (temperature, humidity, pressure, gyroscope, accelerometer, magnetometer) using ST BSP drivers. This example is superceded with the HelloWorld_ST_Sensors example.

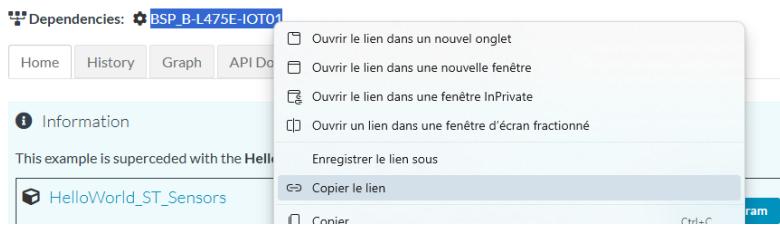

- Import the library into the project by going to **File -> Add Library to Active Program**.
- Paste the address into the window.

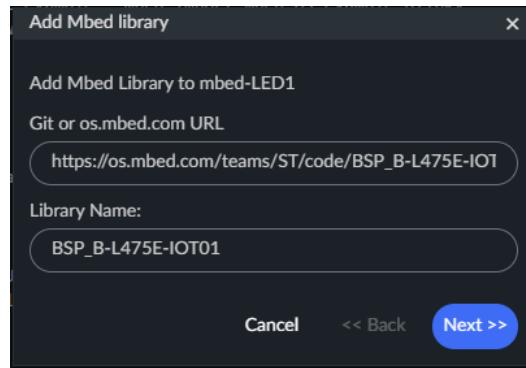

- Click on **Next** and choose the default option.

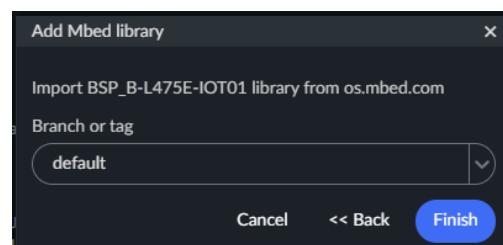

- Click on **Finish**.

3. Add Code to the Program

- Copy the code found in `chapter-2/internal-sensors/main.cpp` into your `main.cpp`.
- Compile and upload the program to the board.


4. See Results:

- You might notice that floating point numbers are not displayed correctly. This is because by default, *MBed OS 6* does not handle floating point printing to reduce code size.

```
TEMPERATURE = %.2f degC HUMIDITY      = %.2f % PRESSURE is = %.2f mBar
MAGNETO_X,Y,Z = -257      -74      -295
GYRO_X,Y,Z = %.2f      %.2f      %.2f
ACCELEROMETER_X,Y,Z = -4       -10      1035
[]
```

To enable this functionality:

1. Open the `mbed_lib.json` file in the path `chapter-2/internal-sensors/mbed-os/platform` of your project.

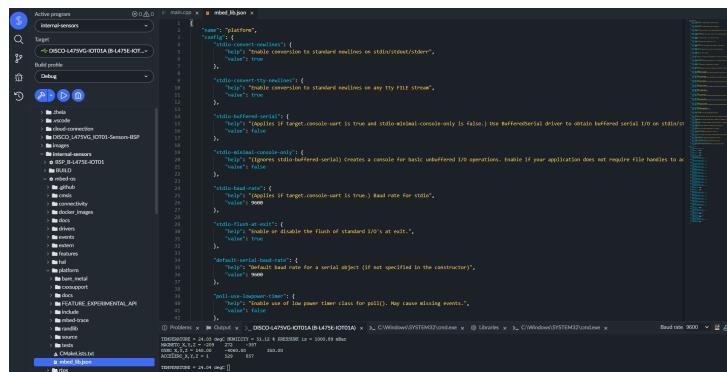

2. Look for the section:

```

1 "minimal-printf-enable-floating-point": {
2     "help": "Enable floating point printing when using minimal printf
3         library",
4     "value": false
}

```

3. Change "value":false to "value":true.

4. Recompile the entire project. Unfortunately, the system performs a complete recompilation because a system file has been modified and that can take a while to finish, so always pay attention to the configurations you want before compiling your project.

Now, you can verify that the floating point numbers are displayed correctly.

```

TEMPERATURE = 24.22 degC HUMIDITY = 50.67 % PRESSURE is = 1000.70 mBar
MAGNETO_X,Y,Z = -207    275    -394
GYRO_X,Y,Z = 140.00   -3990.00    350.00
ACELERO_X,Y,Z = 1      528     856

```

chapter-2/internal-sensors

4. Sensors Tutorial

For this section, we will use a kit containing various sensors and components, which is extremely useful for those starting in the world of microcontrollers due to the wide range of projects and applications in which they can be used. But you can use your own sensor and components that you have available.

This kit includes over twenty sensors (such as position, light, magnetic, and temperature sensors) and around ten actuators (including LEDs, relays, buzzers, and lasers). Another positive aspect of this kit is the availability of content on the internet regarding its use with various other microcontrollers, which can serve as a foundation for your projects.

Types of Sensor Outputs:

Sensors can provide different types of outputs:

1. **Analog Voltage:** These sensors output a varying voltage and need to be connected to ADC (Analog-to-Digital Converter) inputs.
2. **Digital Signal:** These sensors output a binary signal (high or low) and should be connected to digital inputs.

Some more complex sensors communicate via serial communication, requiring the use of an appropriate driver.

4.1 List of Available Sensors and Actuators

Here is the list of available sensors and actuators (Table 1), along with the type of signal to use. For actuators (A), the inputs are either digital (D) or PWM (Pulse Width Modulation). For sensors (S), the information can be analog (A), digital (D), or more complex, in which case the appropriate driver must be used.

ID	Name	Sens./Act.	Input	Output
1	Joystick module	S		AAD
3	Large microphone	S		AD
4	Small sound module	S		AD
5	Line Tracking module	S		D
6	Obstacle Avoidance module	S		D
7	Flame module	S		AD
8	Linear hall module	S		AD
9	Touch sensor	S		D (+A)
10	Digital temperature sensor	S		A
17	Reed switch module	S		D (+A)
18	Mini reed switch module	S		D
19	Heartbeat module	S		A
22	Button switch module	S		D
23	Vibration Shock module	S		D
24	Rotary encoders module	S		D (clock+sens)
26	Tilt switch module	S		D
27	Ball switch sensor	S		D
28	Photo-resistor module	S		A
29	Temp. and humidity module	S		driver
30	Hall effect sensor	S		A
31	Hall magnetic sensor module	S		D/A
32	Digital temperature module	S		driver (serial)
33	Analog temp module	S		
35	Infrared Receiver	S		D
36	Photo-interrupter module	S		D
37	HitSensor	S		D
25	Switch light module	S/A		
2	Relay module	A	D	relay
11	Buzzer module	A	D	
12	Passive buzzer	A	PWM	
13	RGB LED module	A	PWM	
14	SMD RGB module	A	PWM+resistor	
15	Dual-color LED	A	PWM	
16	Mini two-color module	A	PWM	
20	7 color flash module	A	D	
21	Laser module	A	D	
34	IR emission	A	D	

Table 1: List of available sensors and actuators.

Next, we will demonstrate the implementations of some of these sensors so that you have the basic knowledge needed to create your own projects using them or the other ones.

4.2 Joystick Sensor

This sensor, as shown in Fig. 7, provides two analog voltages (joystick position in X/Y) and a digital voltage (push button). The X and Y position signals should be connected to the A0 and A1 ports of the processor board, the Switch signal to the D8 input, and GND to ground.

However, the 5V signal should be connected to the 3.3V pin on the board. This is because the analog-to-digital converter on the ST board operates between 0 and 3.3V. If powered with 5V, the X and Y signals will exceed the allowed limit.



Figure 7: Joystick Sensor.

You can use the following program to test the joystick. This program displays the joystick's status every second and lights up the LED based on the push button status.

```

1 #include "mbed.h"
2
3 AnalogIn analog_value0(A0);
4 AnalogIn analog_value1(A1);
5
6 DigitalIn pb(D8);
7 DigitalOut led(LED1);
8
9 int main()
10 {
11     float meas_r0, meas_r1;
12     float meas_v0, meas_v1;
13     int but;
14
15     printf("\nJoystick example\n\r");
16
17     while(1) {
18         meas_r0 = analog_value0.read();
19         // Read the analog input value (value from 0.0 to 1.0 = full ADC
20         // conversion range)
21         meas_v0 = meas_r0 * 3300;
22         // Converts value in the 0V-3.3V range
23         meas_r1 = analog_value1.read();
24         // Read the analog input value (value from 0.0 to 1.0 = full ADC
25         // conversion range)
26         meas_v1 = meas_r1 * 3300;
27         // Converts value in the 0V-3.3V range
28         but = pb;
29
30         // Display values
31         printf("measure x= %f = %.0f mV y= %f = %.0f mV %d \n\r", meas_r0,
32               meas_v0, meas_r1, meas_v1, but);
33
34         // LED is ON when the button is pushed
35         led = pb;
36
37         ThisThread::sleep_for(1000ms); // 1 second
38     }
39 }
```

 chapter-2/joystick-sensor/main.cpp

4.3 Multicolor LED

There are two LED modules available, one with a standard LED (Fig. 8(a)) and one with a surface-mounted LED (Fig. 8(b)).

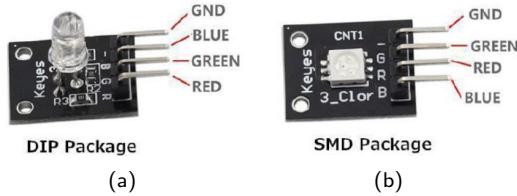


Figure 8: Multicolor LED: standard mounting (a) and surface mounting (b).

Connect the Red, Green and Blue inputs of the module to the D9, D10, and D11 outputs of the board and ground to a ground point. The first program controls the Red, Green, and Blue components of the LED separately. We have seven possible colors. In the provided program, we alternately see black, the three primary colors, and white.

```

1 #include "mbed.h"
2
3 DigitalOut R(D9);
4 DigitalOut G(D10);
5 DigitalOut B(D11);
6
7 int main()
8 {
9     printf("\n\r LED example ON/OFF\n\r");
10
11     while(1) {
12         R = 0; G = 0; B = 0;
13         ThisThread::sleep_for(1000ms); // wait 1 second
14         R = 1; G = 0; B = 0;
15         ThisThread::sleep_for(1000ms); // wait 1 second
16         R = 0; G = 1; B = 0;
17         ThisThread::sleep_for(1000ms); // wait 1 second
18         R = 0; G = 0; B = 1;
19         ThisThread::sleep_for(1000ms); // wait 1 second
20         R = 1; G = 1; B = 1;
21         ThisThread::sleep_for(1000ms); // wait 1 second
22     }
23 }
```

The second program uses PWM generators to control the intensity of the three colors.

```

1 #include "mbed.h"
2
3 PwmOut R(D9);
4 PwmOut G(D10);
5 PwmOut B(D11);
6
7 int val;
8
9 int main()
10 {
11     printf("\n\r LED example with PWM\n\r");
12
13     while(1) {
14         R.write(0); G.write(0); B.write(0);
15         ThisThread::sleep_for(1000ms); // wait 1 second
16
17         for (val = 0; val <= 1000; val++) {
18             R.write((double)val / 1000.0);
19             ThisThread::sleep_for(10ms); // wait 0.01 second
20         }
21
22         for (val = 0; val <= 1000; val++) {
23             G.write((double)val / 1000.0);
24             ThisThread::sleep_for(10ms); // wait 0.01 second
25     }
26 }
```

```

25     }
26
27     for (val = 0; val <= 1000; val++) {
28         B.write((double)val / 1000.0);
29         ThisThread::sleep_for(10ms); // wait 0.01 second
30     }
31
32     ThisThread::sleep_for(1000ms); // wait 1 second
33 }
34 }
```

chapter-2/multicolor-LED-PWM/main.cpp

Exercise: Using the joystick and the LED, intelligently control (in a manner of your choosing) the LED color using the joystick.

4.4 Humidity Sensor

Here is the connection for the humidity sensor illustrated in Fig. 9. Connect the signal pin to the D4 port of the processor board. The signal is digital and contains temperature and humidity information. As previously, start from an empty project.

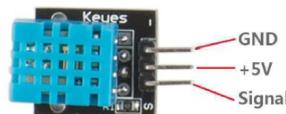


Figure 9: Humidity sensor connection.

To use this sensor, we need a specific driver that we can retrieve from the environment. As before, search for a library called DHT11 at <https://os.mbed.com/code/>.

The first result is suitable. Copy the link address.

Search » Repository

Include Mbed 2 results Search

46 results found for DHT11

 Shigenori Inoue / DHT11	A library for the use of DHT11, a temperature & humidity sensor.	Last updated: 25 Sep 2014 12 ↗ 3187
 Jhon Plantikow / DHT11	DHT11	Last updated: 13 Aug 2015 1 ↗ 191

Then add the library by navigating to **File -> Add library to active program**.

Add Mbed library

Add Mbed Library to mbed-os6-Joystick
Git or os.mbed.com URL
https://os.mbed.com/users/s_inoue_mbed/code/DHT11

Library Name:


Cancel << Back **Next >>**

Add Mbed library

Import DHT11 library from os.mbed.com
Branch or tag

Cancel << Back **Finish**

As you can see, the project now contains the driver sources for this sensor. All that's left is to write the program, based on the DHT11.h driver header file.

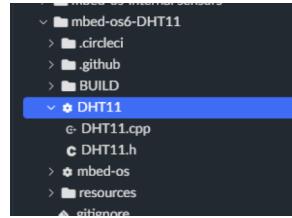

The header provides a constructor that takes a pin name argument and three methods: `readData` to read the sensor state, `readHumidity` to get humidity information, and `readTemperature` to get temperature information.

```

1<
2 class DHT11
3 {
4 public:
5     /* Create a DHT11 interface
6      * @param pin I-wire-like serial I/O port of
7      * DHT11
8      * @param pinName pin);
9      */
10    DHT11(pinName pin);
11    ~DHT11();
12
13    /** Reading the data from the DHT11
14     * @return Error code
15     * @retval 0 OK
16     * @retval 1 Reading the data too often.
17     * @retval 2 Serial port is busy.
18     * @retval 3 DHT11 does not respond.
19     * @retval 4 DHT11 is not ready.
20     * @retval 5 Checksum is incorrect.
21     * @retval 6 Timeout.
22     */
23    int readData(void);
24
25    /** Reading the humidity from the data
26     * @return Humidity in %
27     * @retval regardless of the error from readData()
28     */
29    int readHumidity(void);
30
31    /** Reading the temperature from the data
32     * @return Temperature in Celsius,
33     * @retval regardless of the error from readData()
34     */
35    int readTemperature(void);
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
649
650
651
652
653
654
655
656
657
658
659
659
660
661
662
663
664
665
666
667
668
669
669
670
671
672
673
674
675
676
677
678
679
679
680
681
682
683
684
685
686
687
687
688
689
689
690
691
692
693
694
695
696
697
697
698
699
699
700
701
702
703
704
705
706
707
708
709
709
710
711
712
713
714
715
716
717
718
719
719
720
721
722
723
724
725
726
727
728
729
729
730
731
732
733
734
735
736
737
737
738
739
739
740
741
742
743
744
745
745
746
747
747
748
749
749
750
751
752
753
753
754
755
755
756
756
757
757
758
758
759
759
760
760
761
761
762
762
763
763
764
764
765
765
766
766
767
767
768
768
769
769
770
770
771
771
772
772
773
773
774
774
775
775
776
776
777
777
778
778
779
779
780
780
781
781
782
782
783
783
784
784
785
785
786
786
787
787
788
788
789
789
790
790
791
791
792
792
793
793
794
794
795
795
796
796
797
797
798
798
799
799
800
800
801
801
802
802
803
803
804
804
805
805
806
806
807
807
808
808
809
809
810
810
811
811
812
812
813
813
814
814
815
815
816
816
817
817
818
818
819
819
820
820
821
821
822
822
823
823
824
824
825
825
826
826
827
827
828
828
829
829
830
830
831
831
832
832
833
833
834
834
835
835
836
836
837
837
838
838
839
839
840
840
841
841
842
842
843
843
844
844
845
845
846
846
847
847
848
848
849
849
850
850
851
851
852
852
853
853
854
854
855
855
856
856
857
857
858
858
859
859
860
860
861
861
862
862
863
863
864
864
865
865
866
866
867
867
868
868
869
869
870
870
871
871
872
872
873
873
874
874
875
875
876
876
877
877
878
878
879
879
880
880
881
881
882
882
883
883
884
884
885
885
886
886
887
887
888
888
889
889
890
890
891
891
892
892
893
893
894
894
895
895
896
896
897
897
898
898
899
899
900
900
901
901
902
902
903
903
904
904
905
905
906
906
907
907
908
908
909
909
910
910
911
911
912
912
913
913
914
914
915
915
916
916
917
917
918
918
919
919
920
920
921
921
922
922
923
923
924
924
925
925
926
926
927
927
928
928
929
929
930
930
931
931
932
932
933
933
934
934
935
935
936
936
937
937
938
938
939
939
940
940
941
941
942
942
943
943
944
944
945
945
946
946
947
947
948
948
949
949
950
950
951
951
952
952
953
953
954
954
955
955
956
956
957
957
958
958
959
959
960
960
961
961
962
962
963
963
964
964
965
965
966
966
967
967
968
968
969
969
970
970
971
971
972
972
973
973
974
974
975
975
976
976
977
977
978
978
979
979
980
980
981
981
982
982
983
983
984
984
985
985
986
986
987
987
988
988
989
989
990
990
991
991
992
992
993
993
994
994
995
995
996
996
997
997
998
998
999
999
1000
1000
1001
1001
1002
1002
1003
1003
1004
1004
1005
1005
1006
1006
1007
1007
1008
1008
1009
1009
1010
1010
1011
1011
1012
1012
1013
1013
1014
1014
1015
1015
1016
1016
1017
1017
1018
1018
1019
1019
1020
1020
1021
1021
1022
1022
1023
1023
1024
1024
1025
1025
1026
1026
1027
1027
1028
1028
1029
1029
1030
1030
1031
1031
1032
1032
1033
1033
1034
1034
1035
1035
1036
1036
1037
1037
1038
1038
1039
1039
1040
1040
1041
1041
1042
1042
1043
1043
1044
1044
1045
1045
1046
1046
1047
1047
1048
1048
1049
1049
1050
1050
1051
1051
1052
1052
1053
1053
1054
1054
1055
1055
1056
1056
1057
1057
1058
1058
1059
1059
1060
1060
1061
1061
1062
1062
1063
1063
1064
1064
1065
1065
1066
1066
1067
1067
1068
1068
1069
1069
1070
1070
1071
1071
1072
1072
1073
1073
1074
1074
1075
1075
1076
1076
1077
1077
1078
1078
1079
1079
1080
1080
1081
1081
1082
1082
1083
1083
1084
1084
1085
1085
1086
1086
1087
1087
1088
1088
1089
1089
1090
1090
1091
1091
1092
1092
1093
1093
1094
1094
1095
1095
1096
1096
1097
1097
1098
1098
1099
1099
1100
1100
1101
1101
1102
1102
1103
1103
1104
1104
1105
1105
1106
1106
1107
1107
1108
1108
1109
1109
1110
1110
1111
1111
1112
1112
1113
1113
1114
1114
1115
1115
1116
1116
1117
1117
1118
1118
1119
1119
1120
1120
1121
1121
1122
1122
1123
1123
1124
1124
1125
1125
1126
1126
1127
1127
1128
1128
1129
1129
1130
1130
1131
1131
1132
1132
1133
1133
1134
1134
1135
1135
1136
1136
1137
1137
1138
1138
1139
1139
1140
1140
1141
1141
1142
1142
1143
1143
1144
1144
1145
1145
1146
1146
1147
1147
1148
1148
1149
1149
1150
1150
1151
1151
1152
1152
1153
1153
1154
1154
1155
1155
1156
1156
1157
1157
1158
1158
1159
1159
1160
1160
1161
1161
1162
1162
1163
1163
1164
1164
1165
1165
1166
1166
1167
1167
1168
1168
1169
1169
1170
1170
1171
1171
1172
1172
1173
1173
1174
1174
1175
1175
1176
1176
1177
1177
1178
1178
1179
1179
1180
1180
1181
1181
1182
1182
1183
1183
1184
1184
1185
1185
1186
1186
1187
1187
1188
1188
1189
1189
1190
1190
1191
1191
1192
1192
1193
1193
1194
1194
1195
1195
1196
1196
1197
1197
1198
1198
1199
1199
1200
1200
1201
1201
1202
1202
1203
1203
1204
1204
1205
1205
1206
1206
1207
1207
1208
1208
1209
1209
1210
1210
1211
1211
1212
1212
1213
1213
1214
1214
1215
1215
1216
1216
1217
1217
1218
1218
1219
1219
1220
1220
1221
1221
1222
1222
1223
1223
1224
1224
1225
1225
1226
1226
1227
1227
1228
1228
1229
1229
1230
1230
1231
1231
1232
1232
1233
1233
1234
1234
1235
1235
1236
1236
1237
1237
1238
1238
1239
1239
1240
1240
1241
1241
1242
1242
1243
1243
1244
1244
1245
1245
1246
1246
1247
1247
1248
1248
1249
1249
1250
1250
1251
1251
1252
1252
1253
1253
1254
1254
1255
1255
1256
1256
1257
1257
1258
1258
1259
1259
1260
1260
1261
1261
1262
1262
1263
1263
1264
1264
1265
1265
1266
1266
1267
1267
1268
1268
1269
1269
1270
1270
1271
1271
1272
1272
1273
1273
1274
1274
1275
1275
1276
1276
1277
1277
1278
1278
1279
1279
1280
1280
1281
1281
1282
1282
1283
1283
1284
1284
1285
1285
1286
1286
1287
1287
1288
1288
1289
1289
1290
1290
1291
1291
1292
1292
1293
1293
1294
1294
1295
1295
1296
1296
1297
1297
1298
1298
1299
1299
1300
1300
1301
1301
1302
1302
1303
1303
1304
1304
1305
1305
1306
1306
1307
1307
1308
1308
1309
1309
1310
1310
1311
1311
1312
1312
1313
1313
1314
1314
1315
1315
1316
1316
1317
1317
1318
1318
1319
1319
1320
1320
1321
1321
1322
1322
1323
1323
1324
1324
1325
1325
1326
1326
1327
1327
1328
1328
1329
1329
1330
1330
1331
1331
1332
1332
1333
1333
1334
1334
1335
1335
1336
1336
1337
1337
1338
1338
1339
1339
1340
1340
1341
1341
1342
1342
1343
1343
1344
1344
1345
1345
1346
1346
1347
1347
1348
1348
1349
1349
1350
1350
1351
1351
1352
1352
1353
1353
1354
1354
1355
1355
1356
1356
1357
1357
1358
1358
1359
1359
1360
1360
1361
1361
1362
1362
1363
1363
1364
1364
1365
1365
1366
1366
1367
1367
1368
1368
1369
1369
1370
1370
1371
1371
1372
1372
1373
1373
1374
1374
1375
1375
1376
1376
1377
1377
1378
1378
1379
1379
1380
1380
1381
1381
1382
1382
1383
1383
1384
1384
1385
1385
1386
1386
1387
1387
1388
1388
1389
1389
1390
1390
1391
1391
1392
1392
1393
1393
1394
1394
1395
1395
1396
1396
1397
1397
1398
1398
1399
1399
1400
1400
1401
1401
1402
1402
1403
1403
1404
1404
1405
1405
1406
1406
1407
1407
1408
1408
1409
1409
1410
1410
1411
1411
1412
1412
1413
1413
1414
1414
1415
1415
1416
1416
1417
1417
1418
1418
1419
1419
1420
1420
1421
1421
1422
1422
1423
1423
1424
1424
1425
1425
1426
1426
1427
1427
1428
1428
1429
1429
1430
1430
1431
1431
1432
1432
1433
1433
1434
1434
1435
1435
1436
1436
1437
1437
1438
1438
1439
1439
1440
1440
1441
1441
1442
1442
1443
1443
1444
1444
1445
1445
1446
1446
1447
1447
1448
1448
1449
1449
1450
1450
1451
1451
1452
1452
1453
1453
1454
1454
1455
1455
1456
1456
1457
1457
1458
1458
1459
1459
1460
1460
1461
1461
1462
1462
1463
1463
1464
1464
1465
1465
1466
1466
1467
1467
1468
1468
1469
1469
1470
1470
1471
1471
1472
1472
1473
1473
1474
1474
1475
1475
1476
1476
1477
1477
1478
1478
1479
1479
1480
1480
1481
1481
1482
1482
1483
1483
1484
1484
1485
1485
1486
1486
1487
1487
1488
1488
1489
1489
1490
1490
1491
1491
1492
1492
1493
1493
1494
1494
1495
1495
1496
1496
1497
1497
1498
1498
1499
1499
1500
1500
1501
1501
1502
1502
1503
1503
1504
1504
1505
1505
1506
1506
1507
1507
1508
1508
1509
1509
1510
1510
1511
1511
1512
1512
1513
1513
1514
1514
1515
1515
1516
1516
1517
1517
1518
1518
1519
1519
1520
1520
1521
1521
1522
1522
1523
1523
1524
1524
1525
1525
1526
1526
1527
1527
1528
1528
1529
1529
1530
1530
1531
1531
1532
1532
1533
1533
1534
1534
1535
1535
1536
1536
1537
1537
1538
1538
1539
1539
1540
1540
1541
1541
1542
1542
1543
1543
1544
1544
1545
1545
1546
1546
1547
1547
1548
1548
1549
1549
1550
1550
1551
1551
1552
1552
1553
1553
1554
1554
1555
1555
1556
1556
1557
1557
1558
1558
1559
1559
1560
156
```

4.5 Appendix: Example Program to Control LEDs with the Joystick

chapter-2/joystick-control

5. Connecting the Board to the Network via WIFI

In this section, we will establish the board's connection to the internet using the integrated WiFi module through socket communication using a TCP protocol. This communication will be very useful for the next section, where we will integrate our project with the ThingSpeak cloud server.

5.1 Data Transmission Standards

The connected device to be developed must be able to communicate with the Cloud (remote server) via a telecommunications network. These data will then be accessible via the Cloud for further processing by remote users.

There are several solutions for transmitting data from the STM32 board:

- **Sigfox:** Sigfox is a telecommunications operator for the Internet of Things. Communications between connected objects and the Cloud via this network are unidirectional, with low data rates and very infrequent transmissions (140 messages per day). These specificities/limitations are compatible with the operating criteria of most connected objects. However, Sigfox is a paid service that only provides access to its network under a subscription.
- **LoRa:** LoRa is another LPWAN (Low Power Wide Area Network) solution. Its communication protocol is similar to that of Sigfox except that communication is bidirectional. The data rate is higher, and the number of messages per day is not limited. The major difference between Sigfox and LoRa is that LoRa offers its services freely (free of charge).
- **WiFi:** The third solution, used in this project, involves using the WiFi module of the STM32 board. In this project, the connected object is designed to transmit data from its sensors (STM32 board) using the router present in the room as a WiFi access point or possibly your smartphone. This solution does not have the advantages of LoRa and Sigfox (long range), but it is straightforward to implement with STM32 boards.


The limitation imposed by the WiFi network (range: about twenty meters) is not to be taken into account in your proposal for a connected object. It is essential to propose a functional version of your solution (proof of concept) as well as a visual exploitation (graphical, data analysis, statistics) of the data transmitted by the STM32 board.

5.2 Compilation and Launch


The following steps describe how to set up a communication routine from the board to an HTTP server via a WiFi network. To start:

1. Launch the *MBed* application.
2. Define a new project (menu File, New program).
3. Choose the template `mbed-os-example-sockets` from the dropdown menu.
4. Rename your program if desired (Program Name).
5. You can use

the *MBed* environment from an existing project as shown in the following example, which saves about 1GB per project.

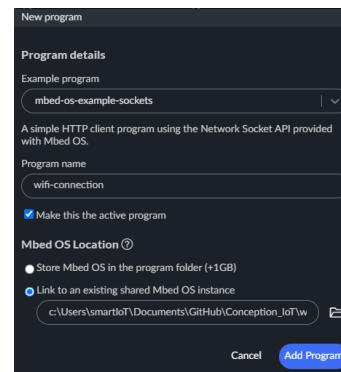

The created project structure is shown in the next figure. It includes the subfolder **COMPONENT_ism43362** (driver for the WiFi chip on the STM32 board).

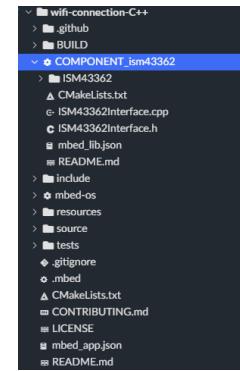

The **mbed_app.json** file (in the project's root) is essential for WiFi communication. This file contains the connection parameters. The WiFi SSID and the associated PASSWORD are available in the project rooms (see the label on the WiFi routers) or you can use your own routed connection from your phone. You need to modify the values of the fields `nsapi.default-wifi-ssid` and `nsapi.default-wifi-password` by entering the name of your network and the associated password. This allows the STM32 board to connect to the internet via the WiFi network available exclusively for the IoT project.

```

{
    "config": {
        "help": "The demo will try to connect to this web address on port 80 (or port 443 when using ssl).",
        "target_ip": "192.168.1.100",
        "port": 80,
        "https": false,
        "https_ca_file": "cert.pem",
        "https_ca_password": "123456",
        "https_reuse_sessions": false,
        "https_max_sessions": 10,
        "https_max_thread_stack_size": 4096
    },
    "target_overrides": {},
    "target_defaults": {
        "nsapi.default-wifi-ssid": "WIFI SSID",
        "nsapi.default-wifi-password": "WIFI PASSWORD",
        "target_mcu": "DISCO-LATITUDE-IOT-AI-B-L475E-IOT-01A",
        "target_mcu_friendly_name": "DISCO-LATITUDE-IOT-AI-B-L475E-IOT-01A",
        "target_mcu_nano": true,
        "target_mcu_nano_friendly_name": "DISCO-LATITUDE-IOT-AI-B-L475E-IOT-01A",
        "target_mcu_nano_ip": "192.168.1.100",
        "target_mcu_nano_port": 80,
        "target_mcu_nano_https": false,
        "target_mcu_nano_https_port": 443,
        "target_mcu_nano_https_ca_file": "cert.pem",
        "target_mcu_nano_https_ca_password": "123456",
        "target_mcu_nano_https_reuse_sessions": false,
        "target_mcu_nano_https_max_sessions": 10
    }
}

```

 chapter-2/wifi-connection-C++/source/main.cpp

You can compile the code as provided and verify that the connection is successful. The window at the bottom of the application should return the following messages:

```

Starting socket demo
3 networks available:
Network: dlink-CC88 secured: WPA2 BSSID: 18:f7:63:cc:88 RSSI: -60 Ch: 11
Network: Innov+ secured: WPA2 BSSID: EC:8:68:ee:a4c RSSI: -89 Ch: 11
Network: Innov+ Guest secured: WPA2 BSSID: EC:8:eB:62:a4d RSSI: -87 Ch: 11

Connecting to the network...
IP address: 192.168.0.171
Netmask: 255.255.255.0
Gateway: 192.168.0.1

Resolve hostname ifconfig.io
ifconfig.io address is 172.64.139.14
Opening connection to remote port 80

Sending message:
GET / HTTP/1.1
Host: ifconfig.io
Connection: close

sent 56 bytes
Complete message sent
received 100 bytes:
HTTP/1.1 200 OK

Demo concluded successfully

```

As you can see, the code is written in C++ with embedded methods, which makes the code not very easy to understand. We will replace the code with its version written in C.

 chapter-2/wifi-connection-C/source/main.cpp

5.3 General Code Routines (To Be Reused Everywhere)

Here are the details of the new code for understanding. It includes several "standard" routines and application programs.

Inclusion of Necessary Headers

First, include the necessary headers for using *MBed* and WiFi, define a few constants, and declare three global variables which are objects defining the network to use, the address of the site to be addressed, and the socket which is the communication buffer with the site.

```

1 #include "mbed.h"
2 #include "wifi_helper.h"
3
4 static constexpr size_t MAX_NUMBER_OF_ACCESS_POINTS = 10;
5 static constexpr size_t MAX_MESSAGE_RECEIVED_LENGTH = 100;
6 static constexpr size_t REMOTE_PORT = 80; // standard HTTP port
7
8 NetworkInterface *net;
9 SocketAddress address;
10 TCPSocket socket;

```

WiFi Scan Routine

This first routine scans all available WiFi networks. It returns the number of available networks as well as the information related to each network. This routine is optional.

```

1 void wifi_scan() {
2     WiFiInterface *wifi = net->wifiInterface();
3     WiFiAccessPoint ap[MAX_NUMBER_OF_ACCESS_POINTS];
4     /* scan call returns number of access points found */
5     int result = wifi->scan(ap, MAX_NUMBER_OF_ACCESS_POINTS);
6     if (result <= 0) {
7         printf("WiFiInterface::scan() failed with return value: %d\r\n",
8             result);
9         return;
10    }
11    printf("%d networks available:\r\n", result);
12    for (int i = 0; i < result; i++) {
13        printf("Network: %s secured: %s BSSID: %hhX:%hhX:%hhX:%hhX:%hhX:%hhX:
14            RSSI: %hd Ch: %hd\r\n",
15            ap[i].get_ssid(), get_security_string(ap[i].get_security()),
16            ap[i].get_bssid()[0], ap[i].get_bssid()[1], ap[i].get_bssid()
17                [2],
18            ap[i].get_bssid()[3], ap[i].get_bssid()[4], ap[i].get_bssid()
19                [5],

```

```

16         ap[i].get_rssi(), ap[i].get_channel());
17     }
18     printf("\r\n");
19 }

```

Resolve Hostname Routine

The following routine resolves a network name, i.e., retrieves the IP address from the site's name. The address is directly placed in the global variable `address`.

```

1 bool resolve_hostname(char *hostname) {
2     /* get the host address */
3     printf("\nResolve hostname %s\r\n", hostname);
4     nsapi_size_or_error_t result = net->gethostbyname(hostname, &address);
5     if (result != 0) {
6         printf("Error! gethostbyname(%s) returned: %d\r\n", hostname,
7               result);
8         return false;
9     }
10    printf("%s address is %s\r\n", hostname, (address.get_ip_address() ?
11        address.get_ip_address() : "None"));
12    return true;
13 }

```

Print Network Info Routine

This routine returns information about the network to which you will connect. To use this routine, you must have previously defined the address using `resolve_hostname`.

```

1 void print_network_info() {
2     /* print the network info */
3     SocketAddress a;
4     net->get_ip_address(&a);
5     printf("IP address: %s\r\n", a.get_ip_address() ? a.get_ip_address() :
6           "None");
7     net->get_netmask(&a);
8     printf("Netmask: %s\r\n", a.get_ip_address() ? a.get_ip_address() :
9           "None");
10    net->get_gateway(&a);
11    printf("Gateway: %s\r\n", a.get_ip_address() ? a.get_ip_address() :
12        "None");
13 }

```

5.4 The Application

The proposed application in this example is divided into three parts: two routines for making requests and reading from a site, and a main program that chains all the operations together.

Sending an HTTP Request:

The first routine sends an HTTP request.

```

1 bool send_http_request() {
2     /* loop until whole request sent */
3     const char buffer[] = "GET / HTTP/1.1\r\n"
4                               "Host: ifconfig.io\r\n"
5                               "Connection: close\r\n"
6                               "\r\n";
7     nsapi_size_t bytes_to_send = strlen(buffer);
8     nsapi_size_or_error_t bytes_sent = 0;
9
10    printf("\r\nSending message: \r\n%s", buffer);
11    while (bytes_to_send) {
12        bytes_sent = socket.send(buffer + bytes_sent, bytes_to_send);
13        if (bytes_sent < 0) {
14            printf("Error! socket.send() returned: %d\r\n", bytes_sent);
15        }
16    }
17 }

```

```

15         return false;
16     } else {
17         printf("sent %d bytes\r\n", bytes_sent);
18     }
19     bytes_to_send -= bytes_sent;
20 }
21 printf("Complete message sent\r\n");
22 return true;

```

Receiving the HTTP Response:

The following routine receives the response.

```

1  bool receive_http_response() {
2      char buffer[MAX_MESSAGE_RECEIVED_LENGTH];
3      int remaining_bytes = MAX_MESSAGE_RECEIVED_LENGTH;
4      int received_bytes = 0;
5      /* loop until there is nothing received or we've ran out of buffer
6       * space */
7      nsapi_size_or_error_t result = remaining_bytes;
8      while (result > 0 && remaining_bytes > 0) {
9          result = socket.recv(buffer + received_bytes, remaining_bytes);
10         if (result < 0) {
11             printf("Error! socket.recv() returned: %d\r\n", result);
12             return false;
13         }
14         received_bytes += result;
15         remaining_bytes -= result;
16     }
17     /* the message is likely larger but we only want the HTTP response code
18      */
19     printf("received %d bytes:\r\n%.*s\r\n\r\n", received_bytes, strstr(
20         buffer, "\n") - buffer, buffer);
21     return true;
22 }

```

5.5 General Part of main.cpp

The beginning is relatively general as it performs network connection operations.

```

1  int main() {
2      printf("\r\nStarting socket demo\r\n\r\n");
3      // Get the default network interface instance
4      net = NetworkInterface::get_default_instance();
5      if (!net) {
6          printf("Error! No network interface found.\r\n");
7          return -1;
8      }
9
10     // If a WiFi interface is available, perform a quick network scan
11     // to display visible access points
12     // Comment out the code if it blocks at this step
13     if (net->wifiInterface()) {
14         wifi_scan();
15     }
16
17     // Connect to the network
18     printf("Connecting to the network... \r\n");
19     nsapi_size_or_error_t result = net->connect();
20     if (result != 0) {
21         printf("Error! net->connect() returned: %d\r\n", result);
22         return -1;
23     }
24
25     // Display network information (IP address, netmask, and gateway)
26     print_network_info();
27 }

```

```

28     // Check if the host can be found on the network
29     char host[] = "ifconfig.io";
30     if (!resolve_hostname(host)) {
31         return -1;
32     }
33
34     // Open the socket to allocate necessary resources
35     result = socket.open(net);
36     if (result != 0) {
37         printf("Error! socket.open() returned: %d\r\n", result);
38         return -1;
39     }
40
41     // Set the port to use for the connection
42     address.set_port(REMOTE_PORT);
43
44     // Now we need to open a connection via a socket
45     printf("Opening connection to remote port %d\r\n", REMOTE_PORT);
46     result = socket.connect(address);
47     if (result != 0) {
48         printf("Error! socket.connect() returned: %d\r\n", result);
49         return -1;
50     }
51 }
```

5.6 Specific Part of main.cpp

This last part is specific to the application. Here we call the two routines `send_http_request` and `receive_http_response`.

```

1  // Now we can send a request and receive an HTTP response
2  if (!send_http_request()) {
3      return -1;
4  }
5  if (!receive_http_response()) {
6      return -1;
7  }
8  // End of demonstration
9  printf("Demo concluded successfully \r\n");
10 return 0;
11 }
```

After compiling your `main.cpp`, download the executable of the program into the program memory space of your STM32 board. You can view the result printed by `printf` using the communication window of *MBed Studio*, which will show either the transfers made or the characteristics of your TCP-IP link (IP address, MAC, gateway).

6. Getting Started with ThingSpeak

In this final step, we will update our previous code to establish communication with ThingSpeak, allowing us to remotely visualize the sensor data graphically, thus opening up new possibilities for your projects.

6.1 Setting Up a Data Collection Server (Cloud)

There are several IoT platforms dedicated to data collection. The most popular ones are Google Cloud IoT Core, Amazon AWS IoT Core, and IBM Watson IoT Platform. Access to these platforms' services is paid, and the free offers they provide are limited in time. These three solutions are easy to implement and adopted by a large community, and they have abundant literature of usage examples.

The ThingSpeak platform by MathWorks and Ubidots are alternatives to the first three. The capabilities offered by these two solutions are sufficient for the scale of your project. The

following describes the setup of the ThingSpeak solution.

ThingSpeak is an open data platform for the Internet of Things. Your device or application can communicate with ThingSpeak using a RESTful API (Fig. 10). You can either keep your data private or make it public. Moreover, you can use ThingSpeak to analyze and act on your data. ThingSpeak provides an online text editor for analyzing and visualizing data using MATLAB (also by MathWorks). You can also perform actions such as running regularly scheduled MATLAB code or sending a tweet when your data exceeds a defined threshold. The platform's advantages lie in performing more complex operations on datasets (via MATLAB tools) and more advanced customization of visualized graphs. Using such a platform can be relevant if you want to perform complex processing of received raw data, and this for free.

At the heart of ThingSpeak is a time-series database. ThingSpeak provides users with free storage of time-series data in channels. Each channel can include up to eight data fields.


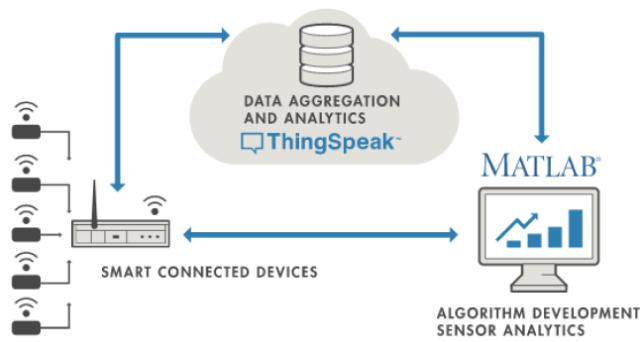


Figure 10: Description of the communication structure via ThingSpeak.


To use ThingSpeak, follow these steps:

1. Go to the website: <https://thingspeak.com/>
2. Create an account (it's the same account as MATLAB if you have one).
3. After creating the account, create a Channel (click New Channel) in the Channels/My Channels menu. This will store your transmitted data.

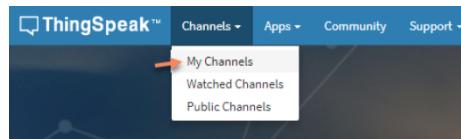

4. Specify your Channel attributes:

- Name: StmWifi (in the chosen example below)
- Fill in the Field fields with the names of the variables used (e.g., CaptX, CaptY, etc.), field1: CaptX, field2: CaptY, among others according to your sensors/application.
- Specify if your Channel is public or private (data confidentiality).
- Save your Channel by clicking Save Channel.

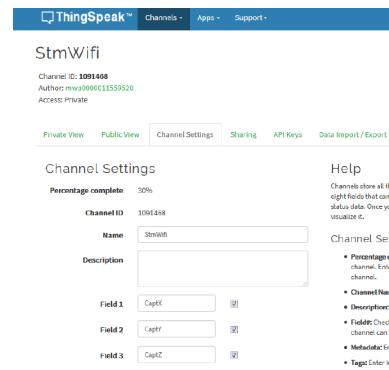

5. Identify your API Key (API keys menu of your channel). This key is necessary for any communication with the configured Channel on the ThingSpeak platform. The Write API Key will send information from the STM32 board to the channel, and the Read API Key will retrieve data/instructions to the board. These keys are uniquely associated with the connected object you created on the ThingSpeak platform.



6. The configuration of your ThingSpeak storage channel (Cloud) is complete. The next steps continue on *MBed OS* to create your program that will run on the STM32 board.

6.2 Creating the Main Communication File

In Chapter 3, you created a project allowing the board to connect to the WIFI network. You will start from this project and complete it. The following describes the steps necessary to develop a communication routine with ThingSpeak via a Wifi network.

You will modify the `main.cpp` file as follows:

At the beginning of the project, add:

- The read and write access keys to your ThingSpeak channel.
- Analog inputs `analog_value0` and `analog_value1`.
- Buffers for communication (character arrays).
- Variables that contain sensor data (here potentiometers).

```

1 NetworkInterface *net;
2 SocketAddress address;
3 TCPSocket socket;
4
5 #define thingspeak_APIkey_write "GS80MF8P8K3S5DD4" // put your channel's
6   write API key
7 #define thingspeak_APIkey_read "QEM41UTCNZQ03MOE" // put your channel's
   read API key

```

```

8     AnalogIn analog_value0(A0);
9     AnalogIn analog_value1(A1);
10
11    nsapi_error_t response;
12
13    char sbuffer[256];
14    char message[64];
15    float captX;
16    float captY;
17    float captZ;

```

The following part of main.cpp does not change. Resume from the moment of defining the site's address as follows:

```

1   char hostname[] = "api.thingspeak.com";
2   if (!resolve_hostname(hostname)) {
3       return -1;
4   }
5   address.set_port(REMOTE_PORT);

```

Then enter an infinite loop. Start by opening a socket and connecting to the ThingSpeak site address:

```

1   while (true) {
2       // We now need to open a connection to a socket
3       result = socket.open(net);
4       if (result != 0) {
5           printf("Error! socket.open() returned: %d\r\n", result);
6           return -1;
7       }
8       printf("\r\n\r\nOpening connection to remote port %d\r\n", REMOTE_PORT)
9       ;
10      result = socket.connect(address);
11      if (result != 0) {
12          printf("Error! socket.connect() returned: %d\r\n", result);
13          return -1;
14      }

```

Read the value provided by the sensors:

```

1   captX = analog_value0.read();
2   captY = analog_value1.read();
3   captZ = 0;

```

Create a message from the previous data to send to ThingSpeak:

```

1   // message to be transmitted (sensor data)
2   sprintf(message, "{\"field1\": %0.2f, \"field2\": %0.2f, \"field3\": %0.2
   f}", captX, captY, captZ);
3   printf("Message = %s\r\n", message);
4   // Data transmission phase to ThingSpeak.com
5   sprintf(sbuffer, "GET /update?api_key=%s HTTP/1.1\r\nHost: api.thingspeak
   .com\r\nContent-Type: application/json\r\nContent-Length: %d\r\n\r\n%s
   ", thingspeak_APIkey_write, (int)strlen(message), message);
6   printf("HTTP command %s\r\n", sbuffer);

```

Then verify that the request was received successfully:

```

1   printf("Sending HTTP request to thingspeak.com...\r\n");
2   nsapi_size_t size = strlen(sbuffer);
3   response = 0;
4   while (size) {
5       response = socket.send(sbuffer + response, size);
6       if (response < 0) {
7           printf("Error sending data: %d\r\n", response);
8           socket.close();

```

```

9         return -1;
10    } else {
11        size -= response;
12    }
13}
14printf("request sent to thingspeak.com...\n");

```

Next, wait to receive the response from the ThingSpeak site and display the received response:

```

1 // Receive a simple HTTP response and print out the response line
2 char rbuffer[64];
3 response = socket.recv(rbuffer, sizeof rbuffer);
4 if (response < 0) {
5     printf("Error receiving data: %d\n", response);
6 } else {
7     printf("recv %d [%.*s]\n", response, strstr(rbuffer, "\r\n") -
8         rbuffer, rbuffer);
}

```

Finally, close the socket and sleep for 5 seconds:

```

1 // Close the socket to return its memory and bring down the network
2     interface
3     socket.close();
4     ThisThread::sleep_for(5000ms); // wait for 5 seconds
5 }
6 net->disconnect();
7
8 return 0;
}

```

You can now compile your code and execute it. You can view the result printed by `printf` in the communication window, either the transfers made or the characteristics of your TCP-IP link (IP address, MAC, gateway).


```

Opening connection to remote port 80
Message = {"field1": 0.22, "field2": 0.26, "field3": 0.00}
HTTP command GET /update?api_key=GS80MF8P8K3S5DD4 HTTP/1.1
Host: api.thingspeak.com
Content-Type: application/json
Content-Length: 48

{"field1": 0.22, "field2": 0.26, "field3": 0.00}
Sending HTTP request to thingspeak.com...
request sent to thingspeak.com...
recv 64 [HTTP/1.1 200 OK]
[]

```

Furthermore, your data can be directly viewed through the ThingSpeak interface.

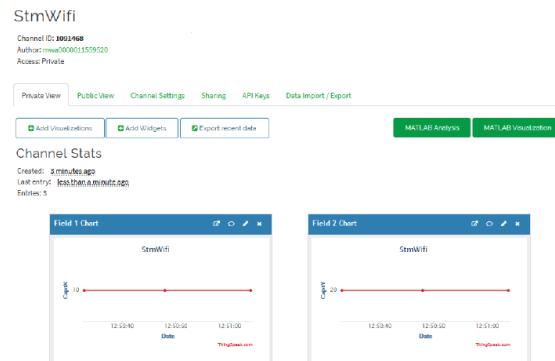

For advanced data processing, you will find a set of tools in the MATLAB Analysis and

MATLAB Visualization categories. Before going further in your project, modify the API to retrieve data from ThingSpeak to the STM32 board.

 [chapter-2/cloud-connection/source/main.cpp](#)

Chapter 3: Introduction to STM32CubeIDE


The integrated development environment (IDE) developed by STMicroelectronics previously consisted of several separate software tools, such as *STM32CubeIDE* for writing code, *STM32CubeMX* for configuring the microcontroller, and *STM32CubeProgrammer* for programming and debugging it. Today, all these tools are integrated into *STM32CubeIDE*, simplifying the product line and creating a single tool capable of performing all the necessary tasks to develop your project.

In this section, we will discuss the basic configurations of a project using *STM32CubeIDE*, as it has a completely different interface from *MBed OS*. Additionally, we will use the second board mentioned earlier, the B-U585I-IOT02A, to prepare for the following chapters where we will need a board with greater processing power and memory. We will initially demonstrate a simple project and then create a TCP communication protocol with the ThingSpeak server.


1. The Basics of STM32CubeIDE

For this first example, we will simply make an LED blink. Although simple, this example will be very useful for any other project configuration you might undertake. Follow these steps:


1. Download and install the latest version of the software (install directly on your C: drive, before the users folder to avoid path issues in your projects): [STM32CubeIDE Download](#).
2. Open *STM32CubeIDE*. A window will appear for you to choose your workspace directory. Just click **Launch** to use the default.
3. Create a new project via **File -> New -> STM32 Project**.

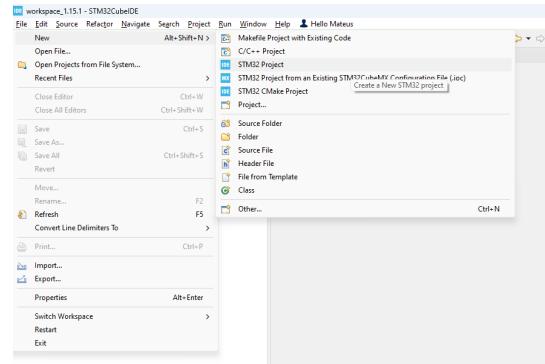


4. A new window will appear for you to name your project and choose some other options. Name it as you wish and leave the rest as default, especially the choice of the C language.

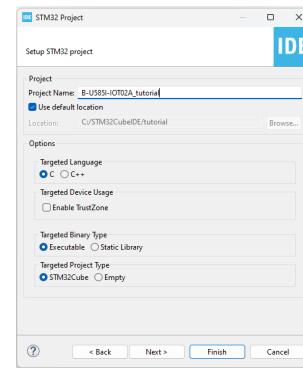

5. Next, we need to select whether we are configuring only a microcontroller or an STMicroelectronics board that already has some peripherals. Since we are working with the B-U585I-IOT02A, we will select it in the **Board Selector** and search for its part number. After clicking **Finish**, you will be asked if you would like to initialize the peripherals of your board. Click **Yes** to pre-configure the various modules connected to the microcontroller's pins, making our work easier as we won't have to define them one by one.

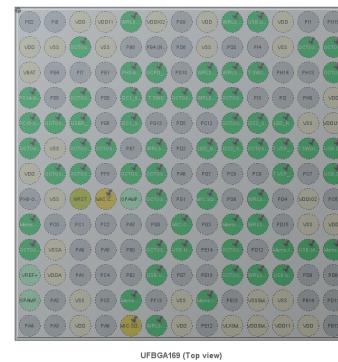

6. You will then see your development environment, with the central window being the **STM32CubeMX** showing your microcontroller chip and its pins.

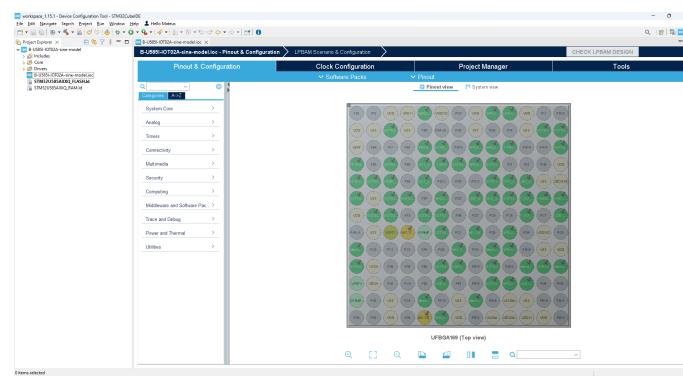

As stated by STMicroelectronics, “*STM32CubeMX* is a graphical tool that allows a very easy configuration of STM32 microcontrollers and microprocessors, as well as the generation of the corresponding initialization C code for the Arm® Cortex®-M core or a partial Linux® Device Tree for Arm® Cortex®-A core, through a step-by-step process.”


This software is used to graphically configure pins, timers, clocks, connection types, communication protocols, and pre-installed packages, among many other functions found on the left

side of the window, as shown in the image below.

Categories A-Z
System Core >
Analog >
Timers >
Connectivity >
Multimedia >
Security >
Computing >
Middleware and Software Pac... >
Trace and Debug >
Power and Thermal >
Utilities >

After this pre-configuration, it is possible to generate partially written code containing the initializations for all selected peripherals, defined pins, and necessary libraries, making the creation of your projects much easier as you won't need to write each line manually and can focus on the main part of your code.

When we created our project, all peripherals were initialized, which is why some pins are already pre-configured (green pins).

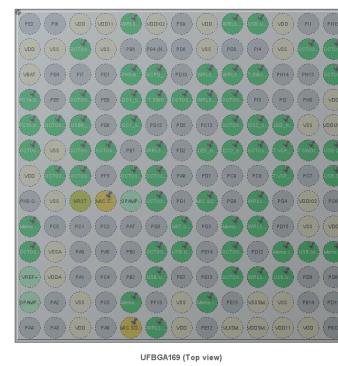


UFPGA169 (Top view)

Now, let's start configuring our microcontroller so we can use what we define here in our code.

1. For our first example of blinking an LED present on the board, we would define one of the microcontroller pins as output and name it to make it easier to read in our code. However, since we initialized these components, the LED is already configured on pin PH6 (left-click on the pin to access these definitions), as well as its label (right-click on the pin and select **Enter User Label**), which you can change to whatever name you want.



- Now we will configure the clock of our microcontroller, which will be used by many of its tools. To do this, select the top **Clock Configuration** tab. The large amount of information in this window may seem overwhelming initially, but we will only modify a few parameters. First, select the High-Speed Internal Clock (HSI) in the PLL Source Mux, set HCLK (MHz) to the maximum allowed (160 MHz), press Enter, and wait for the software to find the best solution for your configuration, which should look similar to the values on the right in the photo below (red box 4).

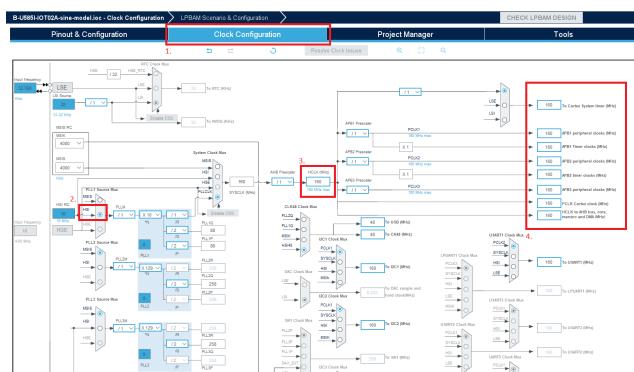

- After this, we can save our project with **Ctrl + S** or **File -> Save**, and a window will appear asking if you would like to generate the automatic code for your configurations. Click **Yes**. If this window does not appear, you can also click on the **Device Configuration Tool Code Generation** item in the toolbar at the top of the screen.

The *STM32CubeIDE* can auto-generate parts of your code based on the configuration you did previously in *STM32CubeMX*, such as if a pin is an output or input, the type of communication used, and many other parameters. The generated code includes various comments defining the safe zones for users to write their code, which are delimited by **USER CODE BEGIN** and **USER CODE END**, as shown in the image below where these areas were highlighted. If the user writes outside these zones, regenerating the code will retain only the lines within the safe zones, and the rest will be deleted. Therefore, always write within the designated areas, which is not difficult as there are multiple such areas in different parts of the code.

```

19 /* Includes -----
20 #include "main.h"
21
22 // Danger zone. Don't write anything here
23
24/* Private includes -----
25 /* USER CODE BEGIN Includes */
26
27 // Safe zone. You can write your includes or anything you want here
28
29 /* USER CODE END Includes */
30
31 // Danger zone. Don't write anything here
32
33/* Private typedef -----
34 /* USER CODE BEGIN PTD */
35
36 // Safe zone. You can write your private typedef or anything you want here
37
38 /* USER CODE END PTD */

```

Now, just add the necessary code in these safe zones. To make the LED blink, place the following lines inside the loop of the while present in `main()`:

```

1  /* Infinite loop */
2  /* USER CODE BEGIN WHILE */
3  while (1)
4  {
5      /* USER CODE END WHILE */
6      HAL_GPIO_TogglePin(LED_RED_GPIO_Port, LED_RED_Pin);

```

```

7     HAL_Delay(1000);
8     /* USER CODE BEGIN 3 */
9 }
10 /* USER CODE END 3 */

```

Finally, build your project in **Project -> Build Project** and then upload it to the board. Connect the board to your computer and then go to **Run -> Run** and observe the red LED blinking on your board. You can also implement the green LED in your project, as it is already configured.

As mentioned earlier, *STM32CubeIDE* is not very “beginner-friendly” due to the numerous functions, configurations, and parameters without simplified explanations. However, it is a powerful tool that allows full control over the microcontroller used, without needing to work directly with registers, and can speed up the coding process due to the automatic code generation.

For more in-depth information and a simpler, straightforward language, I strongly recommend Mitch Davis’s YouTube channel, especially the video [STM32 Guide #2: Registers + HAL \(Blink example\)](#), along with other videos in the same series.

You can also access the [STM32CubeIDE Documentation](#) for more technical details about the software.

Here is the folder of this project:

 chapter-3/B-U585I-IOT02A_blink_led

2. Timer and Trigger Management in STM32CubeIDE Projects

In embedded systems, especially when working with microcontrollers like the STM32, understanding timers and triggers is crucial. Timers are integral components that allow microcontrollers to perform operations at precise intervals, which is essential for tasks such as creating delays, measuring time intervals, generating PWM signals, and managing time-sensitive events.

2.1 Understanding STM32 Timers and Triggers

Timers:

Timers in microcontrollers are essentially counters that increment or decrement at a specific frequency, derived from the system clock. The STM32 microcontrollers feature multiple timers, each with unique capabilities and configurations. The key parameters and features of timers include:

1. **Counter Mode:** Timers can operate in different modes such as up-counting, down-counting, or center-aligned mode. In up-counting mode, the timer counts from 0 to a predefined value, while in down-counting, it counts down to 0. Center-aligned mode combines both, which is useful for PWM generation.
2. **Prescaler:** The prescaler divides the system clock to slow down the timer frequency. This allows for more extended timing intervals and precise control over the timer’s operation.
3. **Auto-Reload Register (ARR):** This register determines the period of the timer. When the counter reaches the value in the ARR, it resets to 0 (or the predefined start value), triggering an event if configured.
4. **Interrupts:** Timers can generate interrupts when they reach specific values, such as the overflow or underflow points. These interrupts can be used to execute specific functions at regular intervals, essential for time-critical applications.

Triggers:

Triggers are signals or events that cause the timer to start, stop, reset, or capture the current counter value. In the STM32 microcontrollers, various trigger sources can be used to control timers:

1. **Internal Triggers:** These are signals generated within the microcontroller, such as other timers or specific events from peripherals like ADCs or DACs. For instance, Timer 1 can trigger Timer 2, creating synchronized events between different timers.
2. **External Triggers:** These come from external pins or hardware events outside the microcontroller. An external button press, for instance, can start or reset a timer.
3. **Software Triggers:** The timer can also be controlled programmatically through software commands. This is useful for precise control over the timing without relying on external events.

Practical Applications:

- **Delay Generation:** Timers can create precise delays by configuring the counter and using interrupts to execute code at set intervals.
- **PWM Generation:** Timers are often used to generate PWM signals for motor control, LED dimming, and communication protocols.
- **Event Timing:** Timers can measure the time between events, which is crucial in applications requiring precise time measurements, such as pulse width measurement.
- **Periodic Task Execution:** Using timer interrupts, tasks can be executed periodically, essential for real-time operating systems and other time-critical applications.

To grasp the fundamentals of STM32 timers and their configurations, refer to the following resources:


- [Getting Started with STM32 and Nucleo Part 6: Timers and Timer Interrupts](#)
- [STM32 Timers Tutorial - Deep Blue Embedded](#)

2.2 Configuring STM32 Timers in STM32CubeMX

STM32CubeMX is a graphical tool that simplifies configuring STM32 microcontrollers, including timers. Follow these steps to configure timers for your project:

Step-by-Step Configuration:


1. **Open STM32CubeMX:** Launch *STM32CubeMX* and start a new project or open an existing one.
2. **Select Timer Peripheral:** Navigate to the “Timers” tab and choose the timer peripheral you intend to configure (e.g., TIM6).
3. **Configure Timer Parameters:**
 - **Clock Source:** Select the source for the timer clock (e.g., internal clock, external clock).
 - **Prescaler:** Set the prescaler value to adjust the timer's counting frequency.
 - **Mode and Configuration:** Choose the desired operating mode (e.g., PWM Generation, Capture/Compare).

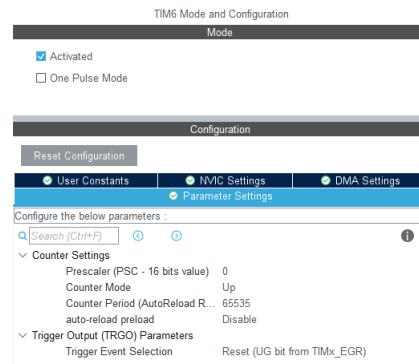

4. **Pinout and Configuration:** Assign pins associated with timer functions (e.g., PWM output pins).
5. **Generate Code:** Once configurations are complete, click **Project**, then **Generate Code** to generate initialization code based on your settings.

2.3 PWM Signal Generation Example

Pulse Width Modulation (PWM) signals are a fundamental feature in microcontroller applications, particularly when precise control over power delivery or signal generation is required. PWM signals are essentially digital signals that alternate between on and off states at a high frequency. The key parameter in a PWM signal is the duty cycle, which represents the proportion of time the signal is high (on) compared to the total period of the cycle.

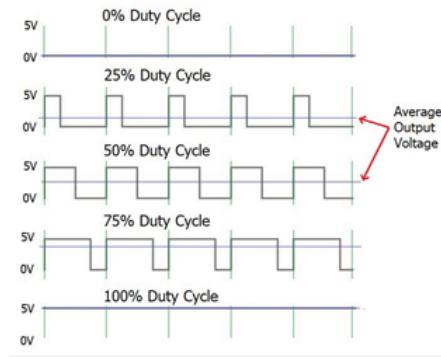

PWM Configuration Steps:

Configuring PWM signals on STM32 microcontrollers using STM32CubeMX is a straightforward process. First, you need to select the appropriate timer that will generate the PWM signals. STM32 microcontrollers typically come with several timers, each capable of generating multiple PWM signals (you must see in the datasheet which pin can be configured as PWM generator, because this can change from each MCU).

Once you have selected the timer, the next step is to configure the PWM channels. In STM32CubeMX, navigate to the timer configuration settings and enable the PWM mode for the desired channels. Here, you can specify the frequency of the PWM signal by setting the timer's prescaler and auto-reload register (ARR) values. The frequency is determined by the formula:

$$\text{PWM Frequency} = \frac{\text{Timer Clock}}{(\text{Prescaler} + 1) \times (\text{ARR} + 1)}$$


After setting the frequency, you can configure the duty cycle for each PWM channel. The duty cycle is set by adjusting the compare register (CCR) value for each channel. The duty cycle percentage is calculated as follows:

$$\text{Duty Cycle (\%)} = \left(\frac{\text{Compare Value}}{\text{ARR}} \right) \times 100$$


For example, if the ARR is set to 999 and the compare value is set to 499, the duty cycle will be 50%.

Here is a simple configuration of a Timer as a PWM generator:

- Configure TIM3 or another suitable timer to operate in PWM mode with CH1 (and also CH2 in the configuration below).

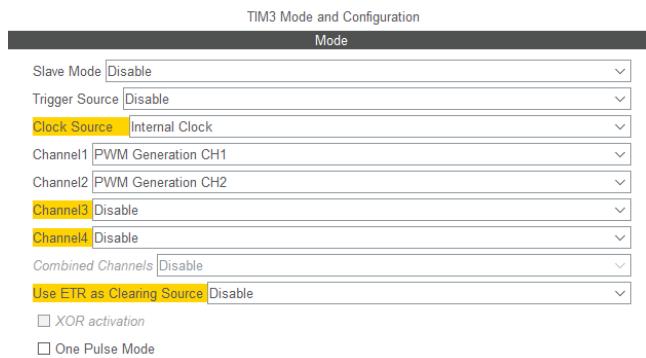

- In Configuration, set the parameters you need for your application.

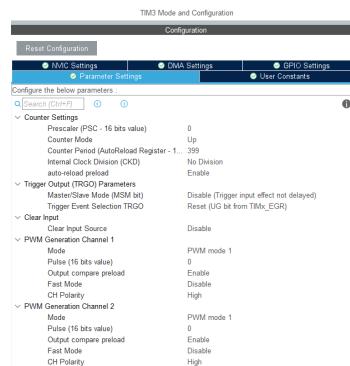


- Generate initialization code and integrate it into your project.

For a detailed walkthrough of configuring and using PWM with STM32 timers, follow this example:

- [STM32 PWM Example - Deep Blue Embedded](#)

2.4 Handling PWM Signals with Deadtimes

Deadtimes are essential in many applications involving switching devices, such as in PWM generation for motor control or power inverters. Deadtime refers to a brief delay introduced between the turning off of one transistor and the turning on of another in switching circuits. This delay prevents two switches from being on simultaneously, which could lead to a direct short circuit through the power supply, potentially damaging the components or reducing their lifespan due to excessive current.

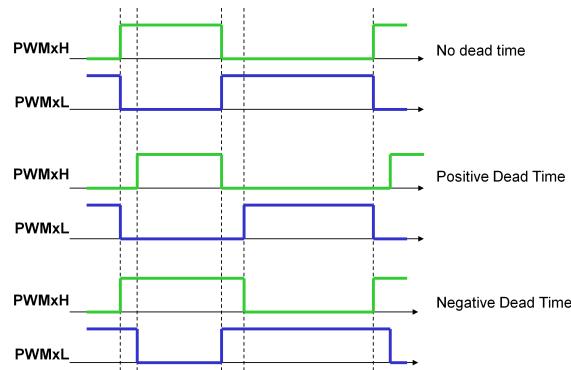

Configuring Deadtimes:

- In *STM32CubeMX*, navigate to the timer configuration.
- Locate the deadtime settings under PWM Generation mode.
- Set appropriate deadtime values to ensure safe operation of your PWM-driven systems.

You can also see this tutorial from STMicroelectronics on how to configure deadtimes in your projects using a complementary PWM mode:

- [Hands-On with STM32 Timers: Dead-time Insertion in Complementary PWM Output](#)

3. Connecting to ThingSpeak

In this section, we will demonstrate an application where a TCP/IP protocol is implemented between the board, which contains an integrated WiFi module, and the ThingSpeak server. This enables online data visualization and processing using MATLAB, similar to how it was used in section 6 of Chapter 2.

We will start with a project created by STMicroelectronics available on the following GitHub link: <https://github.com/STMicroelectronics/STM32CubeU5>.

In the mentioned repository, you will find the Readme which outlines the correct method for downloading the file. If this procedure is not followed correctly, you will not be able to build your project due to version and file location issues. Following the procedure, you should clone the repository using the following command in the terminal within your *STM32CubeIDE* project folder. Choose the location carefully, as projects created with *STM32CubeIDE* cannot simply be copied, pasted, or moved due to the need for correctly defined file paths:

```
1 git clone --recursive https://github.com/STMicroelectronics/STM32CubeU5.
git
```

Additionally, we must use the most updated firmware version available at the moment, which for me is v1.5.0. This can be verified in the [Release Notes for STM32CubeU5 Firmware Package](#). Replace X.Y.Z with your version and run this command inside the STM32CubeU5 folder you just cloned:

```
1 git checkout vX.Y.Z # Specify the targeted vX.Y.Z version
```

In the STM32CubeU5 repository, there are examples and demonstration projects using all U5 series boards developed by STMicroelectronics, applying various libraries and integrated modules of the boards. One of these projects uses the MXChip WiFi module on the B-U585I-IOT02A for TCP/IP communication with a server.

We will use this base project, modifying the server to ThingSpeak and sending a fixed value that can be visualized on the website. The project is located in the following path in the folder

where you downloaded it: STM32CubeU5/Projects/B-U585I-IOT02A/Applications/NetX Duo/Nx_UDP_Echo_Client.

We will not provide the complete project due to the mentioned issue of file path incompatibility, but we will include the files that will be modified in the following folder:

chapter-3/STM32CubeU5

3.1 Updating the WiFi Module Firmware

Before starting the project, you need to update the firmware of the EMW3080 module, the MXChip WiFi module on our board, to version 2.3.4 found here: [setup/en.x-wifi-emw3080b.zip](#).

Download the file and follow these steps:

1. Extract the file.
2. Navigate to en.x-wifi-emw3080b\V2.3.4\SPI\EMW3080update_B-U585I-IOT02A-RevC_V2.3.4_SPI.bin.
3. Connect your B-U585I-IOT02A board to your computer via USB.
4. Drag the file to the disk drive that appears on your computer upon connecting the board. In my case, it is DIS_U585AI.
5. Open a serial terminal, such as *PuTTY* or the *MBed* terminal used earlier, with the following settings: baud rate 115200 bits/s, 8-bit data, no parity, 1 stop bit, no flow control (some programs only require the baud rate, like *MBed*).
6. Restart the board by pressing the black button and monitor the terminal to see if the firmware enters boot mode.
7. You will see a message similar to the one below (if you don't see it, reinitialize your terminal and after do the same to the board). Simply press the blue user button on the board and wait for the update to apply. It might take a while to initialize, so be patient.



```
>_ B-U585I-IOT02A x Baud rate 115200 v 🗑️
#####
##### Welcome to EMW3080 firmware update utility 1.1.0 for board RevB or RevC #####
#####
STM32> Configured for MXCHIP embedded FW ST-EMW3080B V2.3.4 SPI.CTA.BIN 0x8000234 / 686672 bytes
STM32> Push the user button (Blue) to program the EMW3080 device or enter command
STM32> MCU system clock 160 MHz, Uart Baud rate 321600, Software emulated USART bit duration 173 cycles

" help"      print this message
" boot"      boot EMW3080 (needed before using mx command)
" mx"        mx [cmd]: send command to mxchip device (cmd which requires modem protocol can't be used)
" flash"     flash mxchip firmware (same as pushing the blue button)
" check"    check mxchip firmware
STM32>
```

Now, your module's firmware is updated, and you can proceed with the tutorial.

3.2 Understanding the Base Project and Its Configurations

Before modifying the original project for our application, let's first understand how it works. We can add the project to our *STM32CubeIDE* by navigating to Projects/B-U585I-IOT02A/Applications/NetXDuo/Nx_UDP_Echo_Client/STM32CubeIDE and double-clicking the .cproject file or by going to *STM32CubeIDE*, selecting **File -> Open project from file system**, navigating to the directory containing the .cproject file, and clicking **Finish**.

The Nx_TCP_Echo_Client application serves as a practical example of utilizing the Azure RTOS NetX/NetXDuo stack to create a TCP client that communicates with a remote server. This example is structured to help developers understand the implementation of TCP/IP communication in an embedded system using STM32 microcontrollers.

Overview of the Project:

By opening the .ioc file, which is the *STM32CubeMX* configuration file for graphical pin and peripheral configuration, or simply examining the files in the project folders, you will notice the use of two main packages. These packages bring various functionalities and libraries to

the project, enabling the implementation of diverse applications. The packages used here are *ThreadX* and *NetXDuo*, where the latter depends on the former to function properly.

ThreadX is a real-time operating system (RTOS) designed for embedded systems. It provides essential services such as thread management, inter-thread communication, and synchronization, ensuring efficient task execution and resource management.

NetX/NetXDuo is a high-performance TCP/IP network stack tailored for *ThreadX*. It facilitates robust network communication in embedded applications, supporting both IPv4 and IPv6 protocols. *NetXDuo* extends the capabilities of *NetX* with enhanced features.

This project integrates *ThreadX* and *NetX/NetXDuo* to create a TCP echo client. It demonstrates how these components can be effectively implemented to develop sophisticated networked applications on STM32 microcontrollers. The objective is to implement a TCP client that sends messages to a server and receives corresponding responses, which are then printed on a terminal.

The main codes for this application that we will analyze are the ones present in:

- Nx_TCP_Echo_Client/Core/Inc/app_threadx.h
- Nx_TCP_Echo_Client/NetXDuo/App/app_netxduo.c

As you can see, all the implemented code will be done outside of `main.c` since we will be working with threads. The code for the threads can be implemented in `app_threadx.c` or `app_netxduo.c`. This is evident from the image below, where once the code reaches `main()`, the function `MX_ThreadX_Init()` is called, and the scheduler takes control from there, so the code never reaches the `while` loop.

```

139  /* Initialize all configured peripherals */
140  MX_GPIO_Init();
141  MX_ICACHE_Init();
142  MX_SPI2_Init();
143  MX_USART1_UART_Init();
144  /* USER CODE BEGIN 2 */
145
146  /* USER CODE END 2 */
147
148  MX_ThreadX_Init();
149
150  /* We should never get here as control is now taken by the scheduler */
151
152  /* Infinite loop */
153  /* USER CODE BEGIN WHILE */
154  while (1)
155  {
156      /* USER CODE END WHILE */
157
158      /* USER CODE BEGIN 3 */
159  }
160  /* USER CODE END 3 */
161 }
```

Therefore, if you want to create your own application after this tutorial, you should implement it within one of the already created threads or create your own, taking into account the communication and synchronization between the threads. Also, we suggest that you use this project as a base for your own, especially if you plan to use the TCP protocol in your program. Start with this project and add your libraries and code, because there is a significant dependency on files, libraries, and drivers to work with this WiFi module.

Initialization and Thread Creation:

The application's main entry point is the `tx_application_define()` function, which *ThreadX* calls during kernel start-up. This function is responsible for creating all the necessary *NetX* resources and initializing the system. The sequence of initialization includes creating a packet pool, setting up an IP instance, enabling various protocols (ARP, ICMP, UDP, and TCP), and creating a DHCP client.

In the provided codes, the `MX_ThreadX_Init()` function starts the *ThreadX* kernel by calling `tx_kernel_enter()`, initiating the kernel operations. Then, `MX_NetXDuo_Init()` handles the initialization of *NetX* resources.

```

1 void MX_ThreadX_Init(void) {
2     tx_kernel_enter();
3 }
```

In `MX_NetXDuo_Init()`, memory for various components is allocated, and the system is initialized. For instance, the packet pool is created using `nx_packet_pool_create()`, and the IP instance is created with `nx_ip_create()`.

```

1 ret = nx_packet_pool_create(&AppPool, "Main Packet Pool", PAYLOAD_SIZE,
2     pointer, NX_PACKET_POOL_SIZE);
3 ret = nx_ip_create(&IpInstance, "Main Ip instance", NULL_ADDRESS,
4     NULL_ADDRESS, &AppPool, nx_driver_emw3080_entry, pointer, 2 *
5     DEFAULT_MEMORY_SIZE, DEFAULT_PRIORITY);
```

Thread Execution:

Two threads are created: `AppMainThread` and `AppTCPThread`, both having the same priority. `AppMainThread` starts automatically (`TX_AUTO_START`), while `AppTCPThread` is started later (`TX_DONT_START`).

```

1 ret = tx_thread_create(&AppMainThread, "App Main thread",
2     App_Main_Thread_Entry, 0, pointer, 2 * DEFAULT_MEMORY_SIZE,
3     DEFAULT_PRIORITY, DEFAULT_PRIORITY, TX_NO_TIME_SLICE, TX_AUTO_START);
4 ret = tx_thread_create(&AppTCPThread, "App TCP Thread",
5     App_TCP_Thread_Entry, 0, pointer, 2 * DEFAULT_MEMORY_SIZE,
6     DEFAULT_PRIORITY, DEFAULT_PRIORITY, TX_NO_TIME_SLICE, TX_DONT_START);
```

`AppMainThread` is responsible for starting the DHCP client, waiting for the IP address resolution, and then resuming `AppTCPThread`.

```

1 static VOID App_Main_Thread_Entry(ULONG thread_input) {
2     nx_ip_address_change_notify(&IpInstance,
3         ip_address_change_notify_callback, NULL);
4     nx_dhcp_start(&DHCPClient);
5     tx_semaphore_get(&Semaphore, TX_WAIT_FOREVER);
6     tx_thread_resume(&AppTCPThread);
7     tx_thread_relinquish();
```

`AppTCPThread` handles the TCP communication. It creates a TCP socket, connects to a remote server, sends a series of messages, and receives responses. Upon successful communication, it prints the responses to the terminal and toggles a green LED to indicate success.

```

1 static VOID App_TCP_Thread_Entry(ULONG thread_input) {
2     nx_tcp_socket_create(&IpInstance, &TCPSocket, "TCP Server Socket",
3         NX_IP_NORMAL, NX_FRAGMENT_OKAY, NX_IP_TIME_TO_LIVE, WINDOW_SIZE,
4         NX_NULL, NX_NULL);
5     nx_tcp_client_socket_bind(&TCPSocket, DEFAULT_PORT, NX_WAIT_FOREVER);
6     nx_tcp_client_socket_connect(&TCPSocket, TCP_SERVER_ADDRESS,
7         TCP_SERVER_PORT, NX_WAIT_FOREVER);
8     while(count++ < MAX_PACKET_COUNT) {
9         // Packet allocation and sending
10        nx_packet_allocate(&AppPool, &data_packet, NX_TCP_PACKET,
11            TX_WAIT_FOREVER);
12        nx_packet_data_append(data_packet, (VOID *)DEFAULT_MESSAGE, sizeof(
13            DEFAULT_MESSAGE), &AppPool, TX_WAIT_FOREVER);
14        nx_tcp_socket_send(&TCPSocket, data_packet, DEFAULT_TIMEOUT);
15        // Receiving response
16        nx_tcp_socket_receive(&TCPSocket, &server_packet, DEFAULT_TIMEOUT);
17        nx_packet_data_retrieve(server_packet, data_buffer, &bytes_read);
18        PRINT_DATA(source_ip_address, source_port, data_buffer);
19        nx_packet_release(server_packet);
20        HAL_GPIO_TogglePin(LED_GREEN_GPIO_Port, LED_GREEN_Pin);
21    }
```

```

17     // Cleanup
18     nx_tcp_socket_disconnect(&TCPSocket, DEFAULT_TIMEOUT);
19     nx_tcp_client_socket_unbind(&TCPSocket);
20     nx_tcp_socket_delete(&TCPSocket);
21 }
```

3.3 Implementing Communication with ThingSpeak

Based on the code examples shown earlier, we will now set up our own communication with the ThingSpeak server by primarily modifying the mentioned files: `app_threadx.c` and `app_netxduo.c`. Additionally, some changes will be required in other files. To access these files, it's easier to use your computer's file explorer rather than *STM32CubeIDE*'s, as it may not display all files present within folders.

But before making the modifications mentioned later, I recommend building your project and checking for any errors related to library path issues, for example. To do this, go to **Project** -> **Build Project** and wait for the process to complete. At the end, you should see a message indicating that your build encountered 0 errors. If not, delete the repository and redo the cloning procedure mentioned in section 3.

After certifying that everything is working, the first step is to add your WiFi SSID and password so the module can connect to the internet. Navigate to `Nx_TCP_Echo_Client/Core/Inc/m_x_wifi_conf.h` and modify the following lines by adding your network information:

```

1 #define WIFI_SSID           "YOUR_SSID"
2 #define WIFI_PASSWORD        "YOUR_PASSWORD"
```

You can connect using a network created by your smartphone or a router, as long as it's not an enterprise network requiring additional information beyond network and password, such as Eduroam.

Next, define the ThingSpeak server information and the data you want to send. First, create a new channel on the ThingSpeak website as described in section 6 of Chapter 2, and note down your Write API key. Then, modify the file located at `Nx_TCP_Echo_Client/NetXDuo/App/app_netxduo.h`:

```

1 #define PAYLOAD_SIZE          1544
2 #define NX_PACKET_POOL_SIZE   (( PAYLOAD_SIZE + sizeof(NX_PACKET)) *
3                                10)
4 #define WINDOW_SIZE           512
5 #define DEFAULT_MEMORY_SIZE    1024
6 #define DEFAULT_PRIORITY       10
7
8 #define NULL_ADDRESS           0
9
10 #define DEFAULT_PORT          6000
11 #define TCP_SERVER_PORT        80 // Port 80 for HTTP
12 #define TCP_SERVER_ADDRESS      IP_ADDRESS(184, 106, 153, 149) // 
13                                         ThingSpeak server IP
14
15 #define DEFAULT_TIMEOUT        10 * NX_IP_PERIODIC_RATE
16 #define THINGSPEAK_API_KEY      "Q7G630MFJK1H2T5W" // Write key
17 #define THINGSPEAK_FIELD_VALUE 100 // Value we want to send
```

In this code snippet, we added the ThingSpeak server information such as port, server IP, and our Write API key. Additionally, we defined a value (`THINGSPEAK_FIELD_VALUE`) to send to the server, which in this case is 100 but could represent a value read from a sensor, for example.

Now, we proceed to `app_netxduo.c`, where we will handle communication with the server. Since we are using the TCP protocol, we won't need to modify thread creation or DHCP client

initialization. Therefore, we will only adjust App_TCP_Thread_Entry() while explaining each part of what this thread will do. A better way to see the code is in this path:

 chapter-3/STM32CubeU5/app_netxduo.c

```

1  static VOID App_TCP_Thread_Entry(ULONG thread_input)
2  {
3      while(1){
4          UINT ret;
5
6          ULONG bytes_read;
7          UCHAR data_buffer[512];
8
9          ULONG source_ip_address;
10         UINT source_port;
11
12         NX_PACKET *server_packet;
13         NX_PACKET *data_packet;

```

- **While Loop:** The function starts with an infinite while loop (`while(1)`) to continuously execute its tasks.

- **Variable Declarations:** Several variables are declared:

- `ret`: Used to store the return value of various function calls for error handling.
- `bytes_read`: Stores the number of bytes read from the server response.
- `data_buffer`: Buffer to hold the data received from the server.
- `source_ip_address` and `source_port`: Variables to store the IP address and port of the server.
- `server_packet` and `data_packet`: Pointers to NX_PACKET structures used for sending and receiving data over the network.

```

1  /* create the TCP socket */
2  ret = nx_tcp_socket_create(&IpInstance, &TCPSocket, "TCP Server Socket",
3                           NX_IP_NORMAL, NX_FRAGMENT_OKAY,
4                           NX_IP_TIME_TO_LIVE, WINDOW_SIZE, NX_NULL,
5                           NX_NULL);
6  if (ret != NX_SUCCESS)
7  {
8      Error_Handler();
9  }
10
11
12  /* bind the client socket for the DEFAULT_PORT */
13  ret = nx_tcp_client_socket_bind(&TCPSocket, DEFAULT_PORT,
14                                 NX_WAIT_FOREVER);
15
16
17  /* connect to the remote server on the specified port */
18  ret = nx_tcp_client_socket_connect(&TCPSocket, TCP_SERVER_ADDRESS,
19                                   TCP_SERVER_PORT, NX_WAIT_FOREVER);
20
21
22  if (ret != NX_SUCCESS)
23  {
24      Error_Handler();
25  }

```

- **TCP Socket Creation and Connection:**

- `nx_tcp_socket_create`: Creates a TCP socket (TCPSocket) for communication.
- `nx_tcp_client_socket_bind`: Binds the TCP client socket to `DEFAULT_PORT`.
- `nx_tcp_client_socket_connect`: Connects the TCP client socket to `TCP_SERVER_ADDRESS` on `TCP_SERVER_PORT`.

- **Error Handling:** Checks if each operation (`nx_tcp_socket_create`, `nx_tcp_client_socket_bind`, `nx_tcp_client_socket_connect`) succeeds (`ret == NX_SUCCESS`). If any operation fails, the `Error_Handler()` function is called to manage the error appropriately.

```

1   while(1)
2   {
3       TX_MEMSET(data_buffer, '\0', sizeof(data_buffer));
4
5       /* Create the HTTP GET request */
6       char http_request[256];
7       sprintf(http_request, sizeof(http_request),
8               "GET /update?api_key=%s&field1=%d HTTP/1.1\r\nHost: api.
9               thingspeak.com\r\nConnection: close\r\n\r\n");
10      THINGSPEAK_API_KEY, THINGSPEAK_FIELD_VALUE);
11
12      /* allocate the packet to send over the TCP socket */
13      ret = nx_packet_allocate(&AppPool, &data_packet, NX_TCP_PACKET,
14                              TX_WAIT_FOREVER);
15
16      if (ret != NX_SUCCESS)
17      {
18          break;
19      }
20
21      /* append the message to send into the packet */
22      ret = nx_packet_data_append(data_packet, (VOID *)http_request, strlen
23                                  (http_request), &AppPool, TX_WAIT_FOREVER);
24
25      if (ret != NX_SUCCESS)
26      {
27          nx_packet_release(data_packet);
28          break;
29      }
30
31      /* send the packet over the TCP socket */
32      ret = nx_tcp_socket_send(&TCPSocket, data_packet, DEFAULT_TIMEOUT);
33
34      if (ret != NX_SUCCESS)
35      {
36          break;
37      }
38
39      /* wait for the server response */
40      ret = nx_tcp_socket_receive(&TCPSocket, &server_packet,
41                                 DEFAULT_TIMEOUT);
42
43      if (ret == NX_SUCCESS)
44      {
45          /* get the server IP address and port */
46          nx_udp_source_extract(server_packet, &source_ip_address, &
47                                 source_port);
48
49          /* retrieve the data sent by the server */
50          nx_packet_data_retrieve(server_packet, data_buffer, &bytes_read);
51
52          /* print the received data */
53          PRINT_DATA(source_ip_address, source_port, data_buffer);
54
55          /* release the server packet */
56          nx_packet_release(server_packet);
57
58          /* toggle the green led on success */
59          HAL_GPIO_TogglePin(LED_GREEN_GPIO_Port, LED_GREEN_Pin);
60      }
61      else
62      {
63          /* no message received exit the loop */
64          break;
65      }
66  }
```

```

60     }
61 }
```

- **Data Transmission Loop:**

- **Packet Allocation and HTTP Request Creation:**

- * `nx_packet_allocate`: Allocates a packet (`data_packet`) to send over the TCP socket.
 - * Constructs an HTTP GET request (`http_request`) with the ThingSpeak API key (`THINGSPEAK_API_KEY`) and field value (`THINGSPEAK_FIELD_VALUE`).

- **Data Transmission:**

- * `nx_packet_data_append`: Appends the HTTP request message to `data_packet`.
 - * `nx_tcp_socket_send`: Sends `data_packet` over `TCPSocket` to the ThingSpeak server.

- **Response Handling:**

- * `nx_tcp_socket_receive`: Waits for a response from the server (`server_packet`).
 - * If a response (`NX_SUCCESS`) is received:
 - Extracts server IP address and port (`nx_udp_source_extract`).
 - Retrieves and prints the data received from the server (`nx_packet_data_retrieve`, `PRINT_DATA`).
 - Releases the server packet (`nx_packet_release`).
 - Toggles a green LED (`HAL_GPIO_TogglePin(LED_GREEN_GPIO_Port, LED_GREEN_Pin)`).
 - * If no response is received (`ret != NX_SUCCESS`), exits the transmission loop.

```

1  /* release the allocated packets */
2  nx_packet_release(server_packet);
3
4  /* disconnect the socket */
5  nx_tcp_socket_disconnect(&TCPsocket, DEFAULT_TIMEOUT);
6
7  /* unbind the socket */
8  nx_tcp_client_socket_unbind(&TCPsocket);
9
10 /* delete the socket */
11 nx_tcp_socket_delete(&TCPsocket);
12
13 /* print test summary on the UART */
14 printf("\n-----\n\tFINISHED SENDING DATA\n-----\n");
15
16 /* sleep for 4000 clock ticks */
17 tx_thread_sleep(4000);
18 }
19 }
```


- **Cleanup and Sleep:**

- Releases allocated packets (`nx_packet_release`).
 - Disconnects (`nx_tcp_socket_disconnect`), unbinds (`nx_tcp_client_socket_unbind`), and deletes (`nx_tcp_socket_delete`) the TCP socket.
 - Prints a test summary on UART indicating data transmission completion.
 - Sleeps for 4000 clock ticks (`tx_thread_sleep(4000)`) before restarting the loop for continuous communication with ThingSpeak.

This function continuously sends HTTP GET requests to the ThingSpeak server, retrieves responses, and handles them appropriately, ensuring reliable communication using TCP/IP. It includes error handling and operates periodically with a sleep interval of 4000 clock ticks. In my case, a sleep of 4000 was sufficient for the server to receive all packets. If this number were smaller, data transmission would be faster, but the server might not handle the influx and fail to update its database.

This implementation provides a straightforward approach for such communication logic, suitable for small-scale applications like ours.

With these modifications made, simply build the project via **Project -> Build Project** and run it in debug mode via **Run -> Debug**. You can monitor the entire initialization, transmission, and reception process in a terminal, as shown below, where the terminal output precedes the result on the ThingSpeak website.

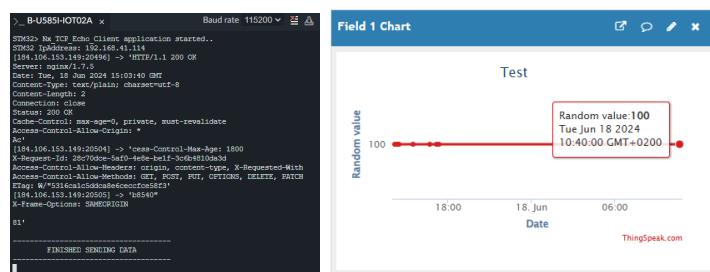

Chapter 4: Integrating AI into Edge Devices

1. Overview of Embedded AI

Embedded AI refers to the integration of artificial intelligence capabilities into devices or systems, often known as edge applications. This enables tasks involving machine learning to be performed locally, without the need for external computational resources such as cloud services.

The primary advantages of this approach include:

- **Reduced Latency:** Due to the proximity of the processing unit to the task.
- **Low Bandwidth Usage:** Minimal data transmission requirements.
- **Low Power Consumption:** Optimized for energy efficiency.
- **Network Independence:** Operates without constant internet connectivity.
- **High Performance:** Capable of handling demanding tasks efficiently.

Devices with embedded AI are becoming increasingly common and diverse. Examples include smart cameras that can process images in real-time, voice assistants that understand and respond to commands without delay, industrial robots that adapt to their environments, autonomous vehicles that navigate without human intervention, and various IoT devices that perform complex tasks independently. These systems use AI algorithms to enhance their capabilities, making them smarter and more efficient.

In this chapter, we will introduce the fundamental concepts of edge AI using microcontrollers. This knowledge will enable you to integrate your own models into the topics discussed in previous chapters, allowing you to create a complete network. With this approach, you can:

- **Build Custom Data Acquisition Systems:** Use sensors to gather data in real-time.
- **Analyze Data Locally:** Implement your own neural networks on microcontrollers to process and analyze data on-site.

- **Automate Device Control:** Use the analysis results to trigger actions in other devices and components.
- **Cloud Integration for Monitoring:** Connect to the cloud only to remotely monitor and visualize the collected data and analysis results.

To better understand embedded AI and the usage of *STM32CubeIDE* for this application, which, as mentioned earlier, can be somewhat complex for new users, we will implement a very simple neural network (NN) model that has been previously developed. Therefore, we will not delve into the concepts of developing your own NN and will mainly focus on the software usage. However, the model used, developed in Google Colab, is present in the following path:

 [chapter-4/tflite_sinewave_training.ipynb](#)

The developed model is capable of approximating the sine value of a given number using a cloud of random points without using trigonometric operations. As we will see at the end of this tutorial, the obtained value will not be exact, as this method is inefficient for determining the sine of a number. However, it will be very useful for you to easily understand the implementation of AI in microcontrollers.

This tutorial is based on the material developed by DigiKey and is available at: [TinyML: Getting Started with STM32 X-CUBE-AI](#)

2. Exporting the Model


The first step is to export your model in the .tflite format to be used in our application. This type of file is generated through the TensorFlow Lite (TFLite) toolkit, an open-source library developed by Google for deploying machine learning models to edge devices.

TensorFlow Lite is a lightweight version of TensorFlow designed for mobile and embedded devices. It enables the deployment of machine learning models on resource-constrained platforms like smartphones, microcontrollers, and IoT devices. TFLite models are optimized for low latency and low power consumption. You can convert TensorFlow models to TFLite format using the TFLite Converter, which applies optimizations such as quantization.


Quantization is a technique used in machine learning and digital signal processing to reduce the precision of the numbers representing a model, typically from floating-point to integer values. This process helps to decrease the model size, reduce memory usage, and improve computational efficiency, particularly important for deploying models on resource-constrained devices like microcontrollers and mobile phones.

So, we need to follow these steps to have our model in .tflite format:


1. First, we will import our *tflite_sinewave_training.ipynb* file into the [Google Colab](#) environment via **File -> Upload Notebook**.

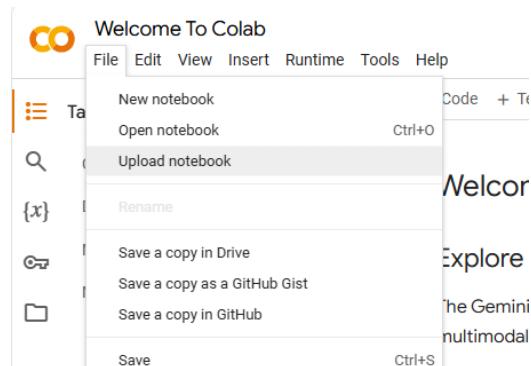

2. Check the code if you are interested in how to do the conversion to a .tflite file. Then, run all the cells in **Runtime -> Run All**.

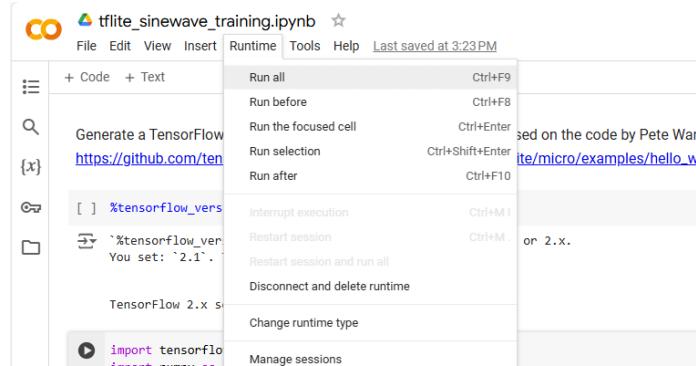

3. After the execution is complete, download the sine_model.tflite file.

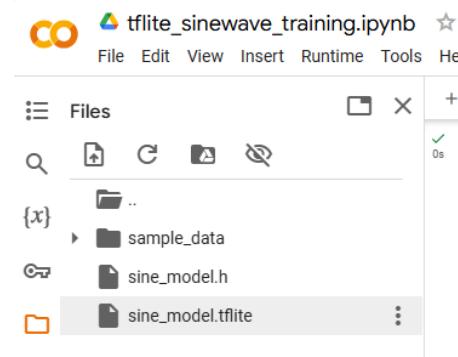

The same file is also available at:


 [chapter-4/sine_model.tflite](#)

3. Installing the X-Cube-AI Package


X-CUBE-AI is an STM32Cube Expansion Package, part of the STM32Cube.AI ecosystem. With this package, we can implement functionalities for the automatic conversion of pretrained artificial intelligence algorithms, including neural network and classical machine learning models, into our C code as optimized libraries to be implemented on the microcontroller.

To do this, follow these steps:


1. Open *STM32CubeIDE*.
2. Log in with your myST account. Create if you don't have one.

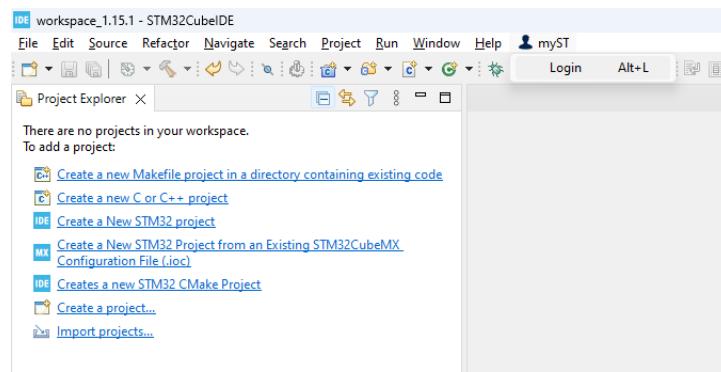


3. Go to Help -> Manage Embedded Software Packages.

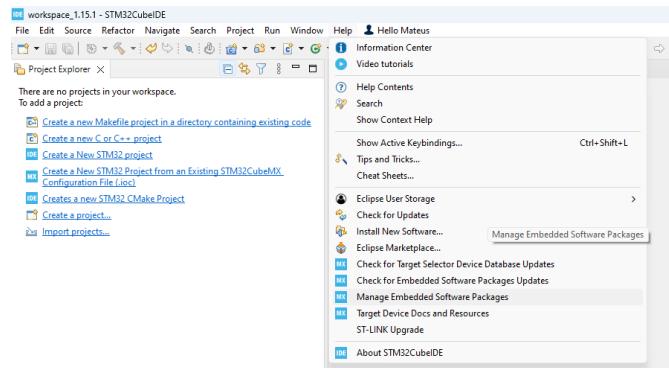

4. Under STMicroelectronics, search for the X-Cube-AI package.

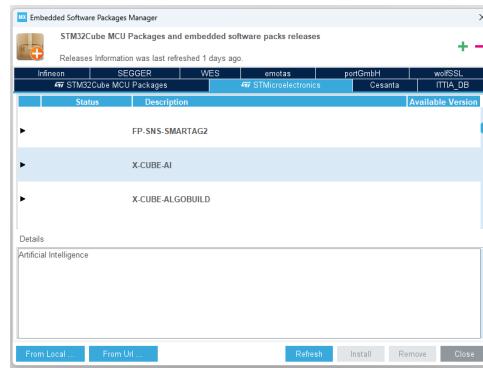


5. Install version 5.2.0 by clicking Install. Do not use another version, as the implementation of the package libraries may differ from what is shown here.

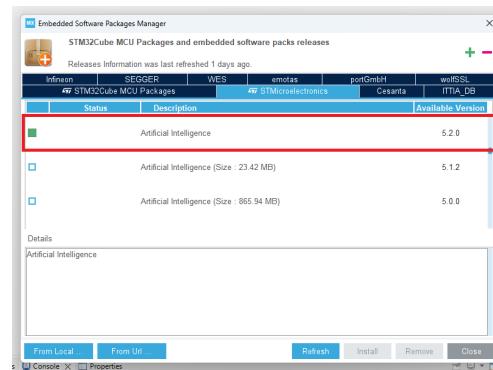


4. Project Initialization

Now we will start our project as the same way we did before in Chapter 3:


1. Click on **File -> New -> STM32 Project.**

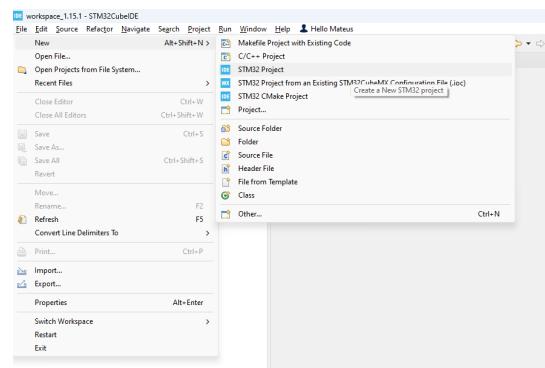


2. Select the **Board Selector** tab and search for B-U585I-IOT02A, click on it and then click **Next**.

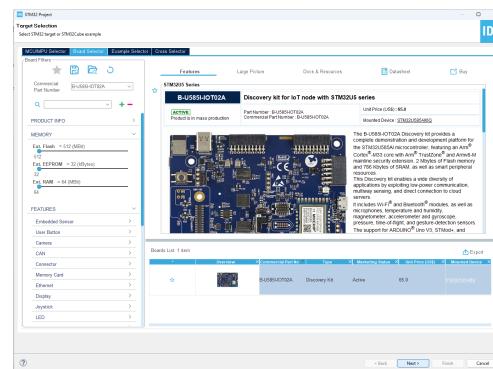

3. Choose a name for your project and leave the default settings as shown in the image, then select **Finish**. If asked to initialize all peripherals, click **Yes** to already pre-configure your microcontroller pins and functionalities.

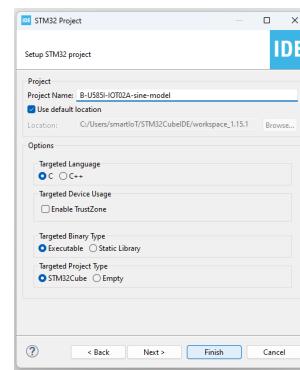

4. You will then have *STM32CubeMX* interface.

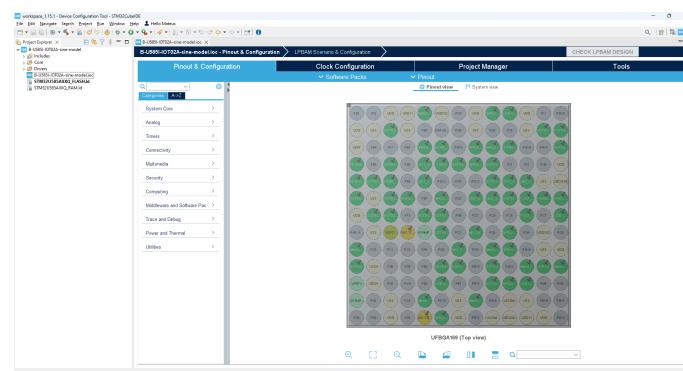


5. Project Configuration

Having covered the basics of the software from the previous chapter and the recommended videos, we can now proceed with configuring our project.


For this tutorial, we will not use any pins as input or output. We will use serial communication to print information on the terminal and verify the operation of our code. Normally, it would be necessary to configure one of the UART ports for serial communication, but this has already been initialized and is connected through the micro-USB ST-Link for a direct connection to the computer using a baud rate of 115200 Bits/s.

Follow these steps to configure our project:


1. In the Timers tab, activate TIM16 so that it ticks every microsecond. To do this, select TIM16, check Activated in **Mode**, and in the **Configuration** tab, set the Prescaler to meet our requirement of ticking every microsecond (160-1=159 for a system clock of 160 MHz) and set the AutoReload register to its maximum (65535 for a 16-bit timer). For a better understanding of how timers work, see section 2 of Chapter 3.

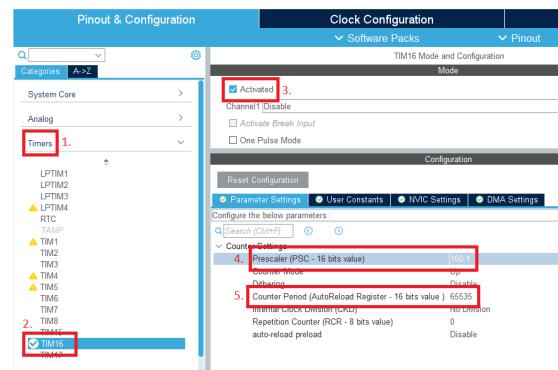

2. Next, we will add the X-CUBE-AI package to the project. Click on **Software Packs** and then on **Select Components**, and a new window will appear. Search for the X-CUBE-AI package and, as mentioned earlier during its installation, choose version 5.2.0 and activate the Core. If the installed version does not appear, remove and reinstall it using the same method described in section 3, save the project, choose not to generate the code, restart the software, and see if the correct version appears.

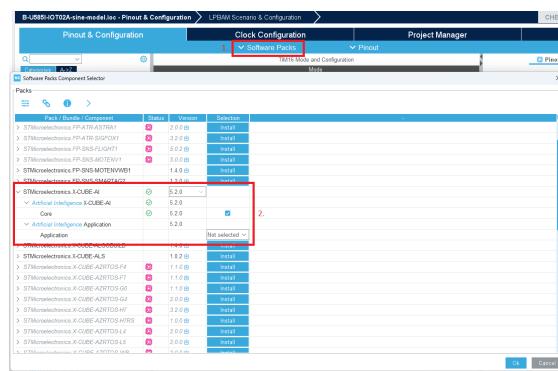

3. Now let's configure the X-CUBE-AI package. Select the **Middleware and Software Packs** tab and click on X-CUBE-AI. Activate the package in **Mode**, and in **Configuration**, click on **Add network** and add the model in .tflite format generated through Colab with the name that will be used by its functions in the code you will write later.

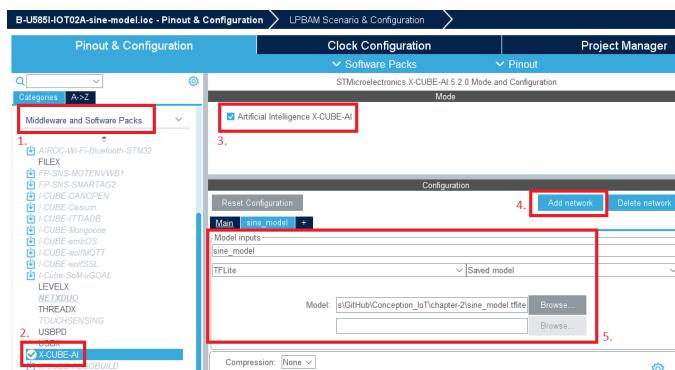


4. After configuring the model, we can compress it to fit in our microcontroller. As previously mentioned, the memory required to run a given model may exceed the available memory on the microcontroller. However, since our example is very small, it will not require this configuration. We can then analyze the model and verify that everything is correct by


clicking on **Analyze**, which will show some parameters about the model, such as its complexity and the necessary Flash and RAM memory sizes for its implementation. The **Show graph** option will display a graphical view of your model. The desktop and target validation options can be used to validate the application of your model but will not be covered at this time.



- Now we will configure the clock of our microcontroller the same way we did in Chapter 3. To do this, select the top **Clock Configuration** tab. Select the High Speed Internal Clock (HSI) in the PLL Source Mux, set HCLK (MHz) to the maximum allowed (160 MHz), press Enter, and wait for the software to find the best solution for your configuration, which should look similar to the values on the right in the photo below (red box 4).

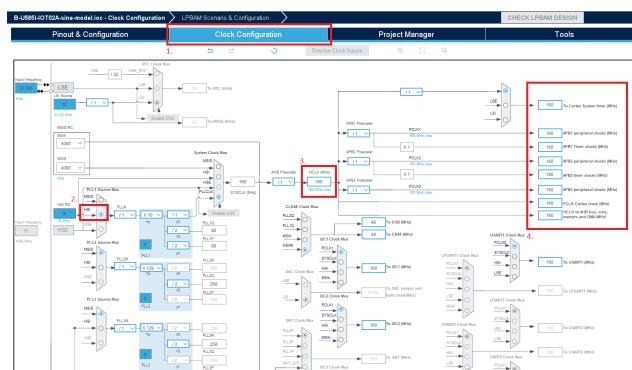

- The final configuration step is the **Project Manager**. Select the top tab with the same name and then **Code Generator**, click on Add necessary library files as referenced in the toolchain project configuration file, and uncheck the option Delete previously generated files when not re-generated. Save the project and select to generate code in the window that appears.

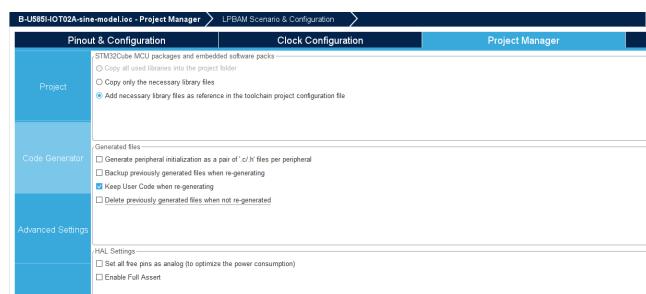

- Now, your project is configured, and your initial code is generated. Ensure that you have the X-CUBE-AI and Middlewares folders in your **Project Explorer** on the left. If these folders are missing, you may have incorrectly configured the required version of X-CUBE-AI or selected the wrong options in the **Project Manager**.

If these folders are not present, follow these troubleshooting steps:

- **Reinstall X-CUBE-AI:** Go back to the **Manage Embedded Software Packages** under **Help** and ensure that version 5.2.0 of X-CUBE-AI is installed. If not, reinstall it as described in section 3.
- **Verify Project Manager Settings:** Double-check the settings in the **Project Manager** to ensure all necessary options are selected. Specifically, make sure Add necessary library files as referenced in the toolchain project configuration file is checked, and Delete previously generated files when not re-generated is unchecked. If you continue with the problem, you can try to choose the other options in this same tab in the packages and embedded software packs and generated files sections.
- **Generate Code Again:** Save your project and regenerate the code. Ensure no errors are present during the generation process.

By following these steps, you should have your project correctly set up with all necessary libraries and configurations, allowing you to proceed with developing your embedded AI application on the *STM32CubeIDE*.

6. Writing the Code

After configuring the project and generating the code, we move on to developing our programming logic. The complete code is available in the provided folder, but don't just copy and paste it completely, because the generated code can change based on the microprocessor, your project configuration, or even the IDE and package versions used. Therefore, only copy and paste within the safe zones mentioned earlier.

 chapter-4/B-U585I-IOT02A-sine-model/Core/Src/main.c

Including Libraries:

The first step is to add the necessary headers.

```

1  /* Private includes
2   *-----*/
3  /* USER CODE BEGIN Includes */
4  #include <stdio.h>
5
6  #include "ai_datatypesDefines.h"
7  #include "ai_platform.h"
8  #include "sine_model.h"
9  #include "sine_model_data.h"
/* USER CODE END Includes */

```

- **stdio.h:** Standard C library for using the `printf` command.
- **sine_model.h:** Contains the main functions we will use in our code. You can access them by hovering over the include and clicking while holding the CTRL key.
- **sine_model_data.h:** Represents our neural network in byte format.

The remaining libraries are generated by X-CUBE-AI and include functions we will use to integrate our model into the code.

Note that `sine_model.h` and `sine_model_data.h` use the same name given to the model during the X-CUBE-AI configuration. If you named it differently, you must use that name here and in other functions below.

Global Variables and Initializations:

After the includes, we declare global variables and initialize some structures critical for the neural network operation on the STM32 microcontroller.

```

1  /* USER CODE BEGIN 1 */

```

```

2   char buf[50];
3   int buf_len = 0;
4   ai_error ai_err;
5   ai_i32 nbatch;
6   uint32_t timestamp;
7   float y_val;
8
9   // Chunk of memory used to hold intermediate values for neural network
10  AI_ALIGNED(4) ai_u8 activations[AI_SINE_MODEL_DATA_ACTIVATIONS_SIZE];
11
12  // Buffers used to store input and output tensors
13  AI_ALIGNED(4) ai_i8 in_data[AI_SINE_MODEL_IN_1_SIZE_BYTES];
14  AI_ALIGNED(4) ai_i8 out_data[AI_SINE_MODEL_OUT_1_SIZE_BYTES];
15
16  // Pointer to our model
17  ai_handle sine_model = AI_HANDLE_NULL;
18
19  // Initialize wrapper structs that hold pointers to data and info about
20  // the
21  // data (tensor height, width, channels)
22  ai_buffer ai_input[AI_SINE_MODEL_IN_NUM] = AI_SINE_MODEL_IN;
23  ai_buffer ai_output[AI_SINE_MODEL_OUT_NUM] = AI_SINE_MODEL_OUT;
24
25  // Set working memory and get weights/biases from model
26  ai_network_params ai_params = {
27    AI_SINE_MODEL_DATA_WEIGHTS(ai_sine_model_data_weights_get()),
28    AI_SINE_MODEL_DATA_ACTIVATIONS(activations)
29  };
30
31  // Set pointers wrapper structs to our data buffers
32  ai_input[0].n_batches = 1;
33  ai_input[0].data = AI_HANDLE_PTR(in_data);
34  ai_output[0].n_batches = 1;
35  ai_output[0].data = AI_HANDLE_PTR(out_data);
/* USER CODE END 1 */

```

- **Memory Buffers:** activations, in_data, and out_data are memory buffers that store intermediate data, inputs, and outputs of the neural network, respectively.
- **Model Pointer:** sine_model is a pointer that will reference the neural network instance.
- **Input and Output Structures:** ai_input and ai_output are structures that hold pointers to the input and output data, as well as information about tensor dimensions.
- **Network Parameters:** ai_params contains the weights, biases, and activations of the neural network, essential for initializing the model.
- **Buffer Configuration:** The lines defining ai_input[0].n_batches and ai_output[0].n_batches configure these buffers to receive one batch of data.

Neural Network Initialization:

Next, we initialize the timer and set up the neural network:

```

1  /* USER CODE BEGIN 2 */
2  // Start timer/counter
3  HAL_TIM_Base_Start(&htim16);
4
5  // Greetings!
6  buf_len = sprintf(buf, "\r\n\r\nSTM32 X-Cube-AI test\r\n");
7  HAL_UART_Transmit(&huart1, (uint8_t *)buf, buf_len, 100);
8
9  // Create instance of neural network
10 ai_err = ai_sine_model_create(&sine_model, AI_SINE_MODEL_DATA_CONFIG);
11 if (ai_err.type != AI_ERROR_NONE)
12 {
13     buf_len = sprintf(buf, "Error: could not create NN instance\r\n");
14     HAL_UART_Transmit(&huart1, (uint8_t *)buf, buf_len, 100);
15     while(1);
16 }
17

```

```

18 // Initialize neural network
19 if (!ai_sine_model_init(sine_model, &ai_params))
20 {
21     buf_len = sprintf(buf, "Error: could not initialize NN\r\n");
22     HAL_UART_Transmit(&huart1, (uint8_t *)buf, buf_len, 100);
23     while(1);
24 }
25 /* USER CODE END 2 */

```

- **Timer Initialization:** HAL_TIM_Base_Start(&htim16) starts a timer used to measure the neural network inference time.
- **Welcome Message:** sprintf and HAL_UART_Transmit send an initial message via UART, confirming that the system is operational.
- **Neural Network Instance Creation:** ai_sine_model_create creates an instance of the neural network. If an error occurs, an error message is transmitted, and the system enters an infinite loop.
- **Neural Network Initialization:** ai_sine_model_init initializes the neural network with the parameters defined earlier. If initialization fails, an error message is transmitted, and the system enters an infinite loop.

Main Loop:

Finally, we have the main loop of the code, where inference is continuously performed:

```

1  /* Infinite loop */
2  /* USER CODE BEGIN WHILE */
3  while (1)
4  {
5      // Fill input buffer (use test value)
6      for (uint32_t i = 0; i < AI_SINE_MODEL_IN_1_SIZE; i++)
7      {
8          ((ai_float *)in_data)[i] = (ai_float)2.0f;
9      }
10
11     // Get current timestamp
12     timestamp = htim16.Instance->CNT;
13
14     // Perform inference
15     nbatch = ai_sine_model_run(sine_model, &ai_input[0], &ai_output[0]);
16     if (nbatch != 1) {
17         buf_len = sprintf(buf, "Error: could not run inference\r\n");
18         HAL_UART_Transmit(&huart1, (uint8_t *)buf, buf_len, 100);
19     }
20
21     // Read output (predicted y) of neural network
22     y_val = ((float *)out_data)[0];
23
24     // Print output of neural network along with inference time (
25     // microseconds)
26     buf_len = sprintf(buf,
27                         "Output: %f | Duration: %lu\r\n",
28                         y_val,
29                         htim16.Instance->CNT - timestamp);
30     HAL_UART_Transmit(&huart1, (uint8_t *)buf, buf_len, 100);
31
32     // Wait before doing it again
33     HAL_Delay(500);
34
35 /* USER CODE END WHILE */

```


- **Fill Input Buffer:** The for loop fills the input buffer in_data with a test value (2.0f) for inference.
- **Timestamp:** timestamp stores the current timer value before inference to measure execution time.

- **Inference:** `ai_sine_model_run` performs the neural network inference. If it returns a value other than 1, it indicates an error.
 - **Read Result:** `y_val` stores the output value of the neural network.
 - **Send Result:** `sprintf` and `HAL_UART_Transmit` send the result and inference time via UART.
 - **Delay:** `HAL_Delay(500)` creates a 500 ms pause before the next inference.

Handling Float in printf

You will notice an error when adding the line to print the output of the neural network along with the inference time. In *STM32CubeIDE*, the `printf` function does not support float values by default. To fix this, we need to change the project settings.

Go to **Project -> Properties -> C/C++ Build -> Settings**, select the **Configuration** **Debug** and in **MCU GCC Linker -> Miscellaneous**, add **-u_printf_float** in **Other flags**. Repeat this for the Release **Configuration**. Finally, click **Apply** and **Close** and save your program.

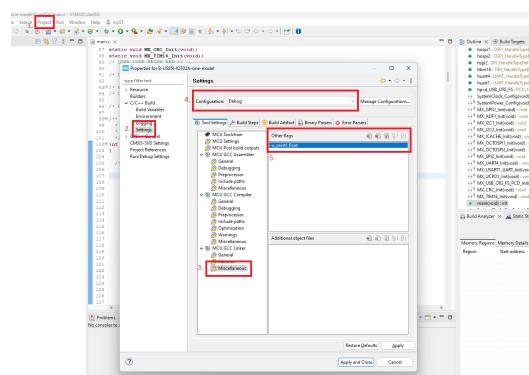


Now, in **Project -> Build Project**, you can compile your code and see if there are any errors. With these steps, your code is ready to run the neural network on the STM32 microcontroller, allowing you to observe the outputs and performance metrics via UART. This code will infer the $\sin(2.0)$ in radians and provide the approximate value based on the results obtained during the model training.

7. Debugging and Uploading to STM32

To ensure that our code functions correctly and everything is as expected, we will run it in Debug mode. Follow these steps:

1. Navigate to **Run -> Debug**.
 2. In the **Confirm Perspective Switch** window that appears, press **Switch**.
 3. Finally, click **Resume** in the top toolbar (or press F8).

Next, open a serial terminal to observe your code running on the microcontroller. While I will use the terminal in *Mbed Studio*, you may prefer a dedicated terminal application such as PuTTY. Select the correct port and set the baud rate to 115200 Bits/s. You should see an output similar to the image below:

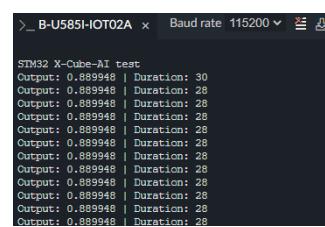

As shown in the example, my model inferred an output of 0.8899 for $\sin(2.0)$, which is relatively close to the actual value of 0.9093. This result is acceptable for demonstrating the procedure, but the training could be improved to enhance the accuracy of the inference.

We can also run our code in **Release** mode on our microcontroller. This mode excludes certain files used by the **Debug** mode and employs a different compiler optimizer, reducing the code size and potentially improving inference time. To do this:

1. Stop the **Debug** mode if it is still running by clicking the **Terminate** button in the superior toolbar.
2. Navigate to **Project -> Build Configurations -> Set Active -> Release**.
3. Click **Run -> Run Configurations**. In that window, in the left pane, click on the **New Launch Configuration button**, which should create a new configuration named `project_name Release`.
4. In the Main tab, select **Search Project** and select your `project_name/Release/project_name.elf` file from the bottom pane. Click **OK**. Select **Release** for your **Build Configuration**. Click **Apply** and **Run**.
5. Check your terminal output.

In my case, the differences were minimal (only 1 microsecond faster inference time), but depending on the size of your code, functionalities, and the microcontroller used, the impact may be more significant.

References

- STMicroelectronics. *B-L475E-IOT01A - STM32L4 Discovery kit IoT node*. <https://www.st.com/en/evaluation-tools/b-l475e-iot01a.html>
- STMicroelectronics. *STM32L475RC Datasheet Ultra-low-power Arm® Cortex®-M4 32-bit MCU+FPU*. <https://www.st.com/resource/en/datasheet/stm32l475rc.pdf>
- STMicroelectronics. *B-U585I-IOT02A Discovery kit for IoT node with STM32U5 series*. <https://www.st.com/en/evaluation-tools/b-u585i-iot02a.html>
- Arm. *MBed OS Official Website*. <https://os.mbed.com/>
- STMicroelectronics. *STM32CubeIDE Integrated Development Environment for STM32*. <https://www.st.com/en/development-tools/stm32cubeide.html>
- STMicroelectronics. *STSW-LINK009 USB Driver*. <https://www.st.com/en/development-tools/stsw-link009.html>
- PuTTY. *PuTTY - Terminal Emulator*. <https://www.putty.org/>
- STMicroelectronics. *STM32Cube MCU Package for STM32U5 series*. <https://www.st.com/en/embedded-software/stm32cubeu5.html#overview>
- STMicroelectronics. *STM32CubeMX Tool - STM32Cube initialization code generator*. <https://www.st.com/en/development-tools/stm32cubemx.html>
- STMicroelectronics. *STM32CubeProgrammer Tool - STM32CubeProgrammer software for all STM32*. <https://www.st.com/en/development-tools/stm32cubeprog.html>
- STMicroelectronics. *Release Notes for STM32CubeU5 Firmware Package*. https://htmlpreview.github.io/?https://github.com/STMicroelectronics/STM32CubeU5/blob/master/Release_Notes.html
- STMicroelectronics. *STM32Cube MCU Package for STM32U5 series*. <https://github.com/STMicroelectronics/STM32CubeU5/tree/main>
- Mitch Davis. *STM32 Guide #2: Registers + HAL (Blink example)*. <https://www.youtube.com/watch?v=Hffw-m9fuxc&list=WL&index=30>



Deep Blue Embedded. *STM32 Timers Tutorial | Hardware Timers Explained*. <https://deepbluembedded.com/stm32-timers-tutorial-hardware-timers-explained/>

DigiKey. *Getting Started with STM32 and Nucleo Part 6: Timers and Timer Interrupts | Digi-Key Electronics*. <https://youtu.be/VfbW6nfG4kw?si=4GEUskWYxO0k2GLK>

Deep Blue Embedded. *STM32 PWM Example – Timer PWM Mode Tutorial*. <https://deepbluembedded.com/stm32-pwm-example-timer-pwm-mode-tutorial/>

STMicroelectronics. *Hands-On with STM32 Timers: Dead-time Insertion in Complementary PWM Output*. <https://www.youtube.com/watch?v=rDaC2N-33Oo>

DigiKey. *TinyML: Getting Started with STM32 X-CUBE-AI*. <https://www.digikey.fr/en/maker/projects/tinyml-getting-started-with-stm32-x-cube-ai/f94e1c8bfc1e4b6291d0f672d780d2c0>

TensorFlow. *TensorFlow Lite Official Website*. <https://www.tensorflow.org/lite>

STMicroelectronics. *X-CUBE-AI - AI expansion pack for STM32CubeMX*. <https://www.st.com/en/embedded-software/x-cube-ai.html#get-software>