




Acceleration/Fire

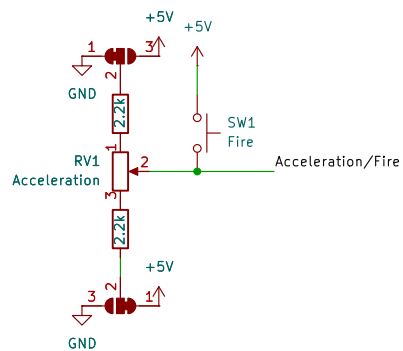

Angle

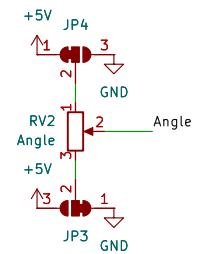

Cable

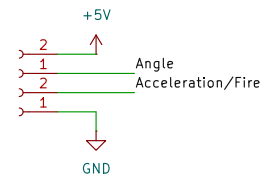

Note:
By changing the jumpers on the potentiometers
you can change the direction of the input.
This may be helpful if you install the joystick in a different orientation.

Sheet: /
File: controller.kicad_sch

Title: Joystick Controller

Size: A4 Date: 2026-04-27

KiCad E.D.A. 10.0.0

Rev: 1.0.0

Id: 1/1