Lab - Investigate BIOS or UEFI Settings

Introduction

In this lab, you will boot the computer, explore the firmware setup utility program, and change the boot order sequence.

Recommended Equipment

- Computer with or without operating system
- Motherboard manual

Instructions

Part 1: Enter BIOS or UEFI.

Step 1: Power on the computer.

a. Plug the power supply cable into an AC wall outlet.

b. If there is a power switch on the power supply, set the switch to “1” or “on”.

c. Turn on the computer with the power button on the front panel.

Note: If the computer beeps more than once, or if the power does not come on, notify your instructor.

Step 2: Enter the firmware setup program.

During POST, press the firmware setup key or key combination. The firmware setup utility program screen will appear.

Questions:

What is the key or combination of keys used to enter the firmware setup utility program?

F2, F10, or F11

Who manufactures the BIOS or UEFI system for your computer?

Lenovo

What is the BIOS or UEFI version?

JHET56WW(1.56)


© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

Part 2: Explore the Settings.

Step 1: List the main menu options.

Question:

List the main menu options and describe what is monitored in each menu?

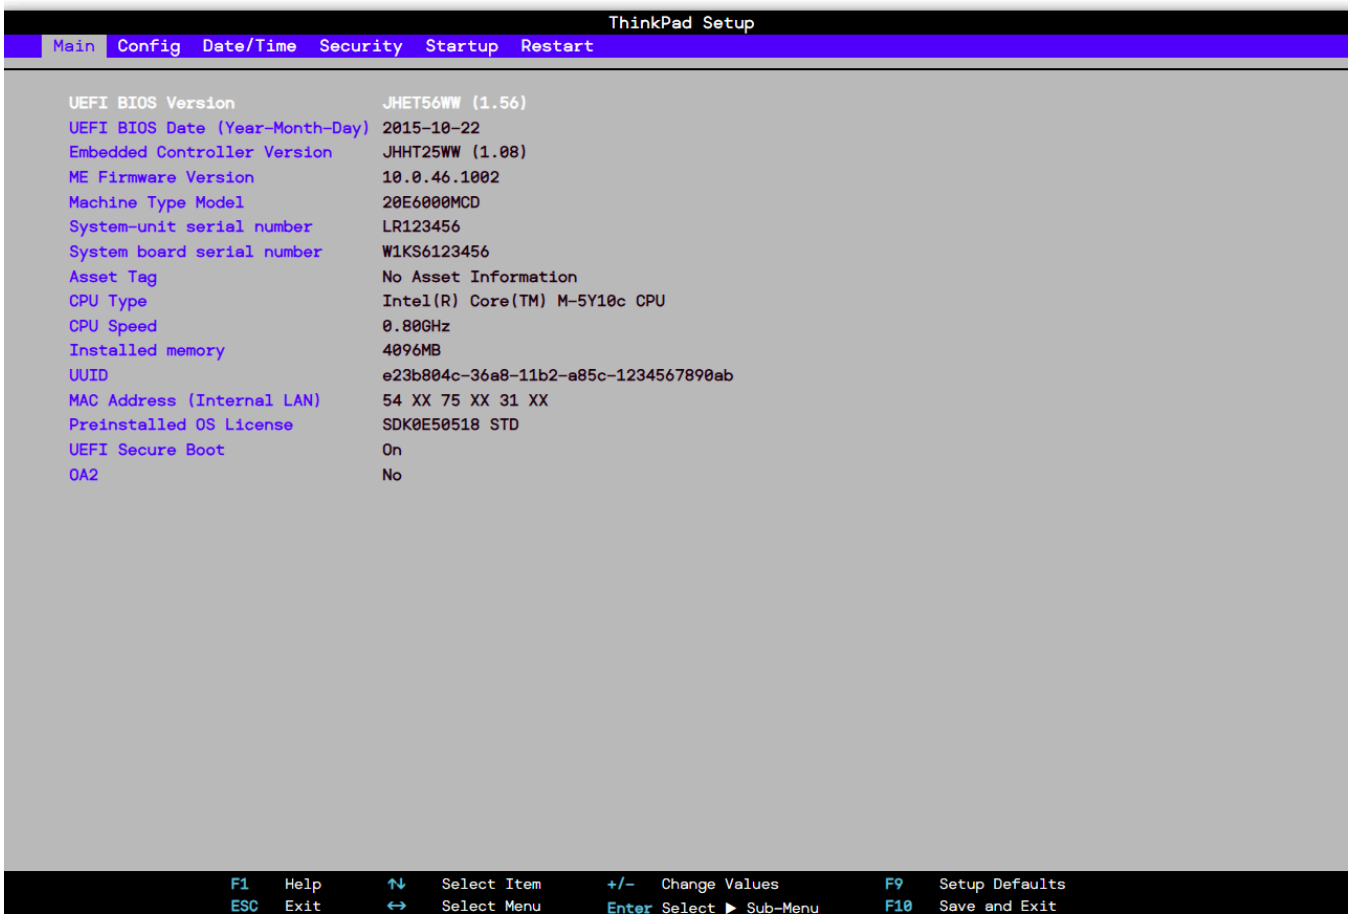

Main menu shows bios version and date, embedded controller version, firmware version, machine type model, system unit and system board number, asset tag, cpu type, cpu speed, installed memory, uuid, mac address, preinstalled os license, uefi secure boot, and oa2.

Step 2: Find the security settings.


Navigate through each screen to find the security settings.

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

Question:

What security settings and features are available?

The security settings have the admin password, user password, hdd password, set master,

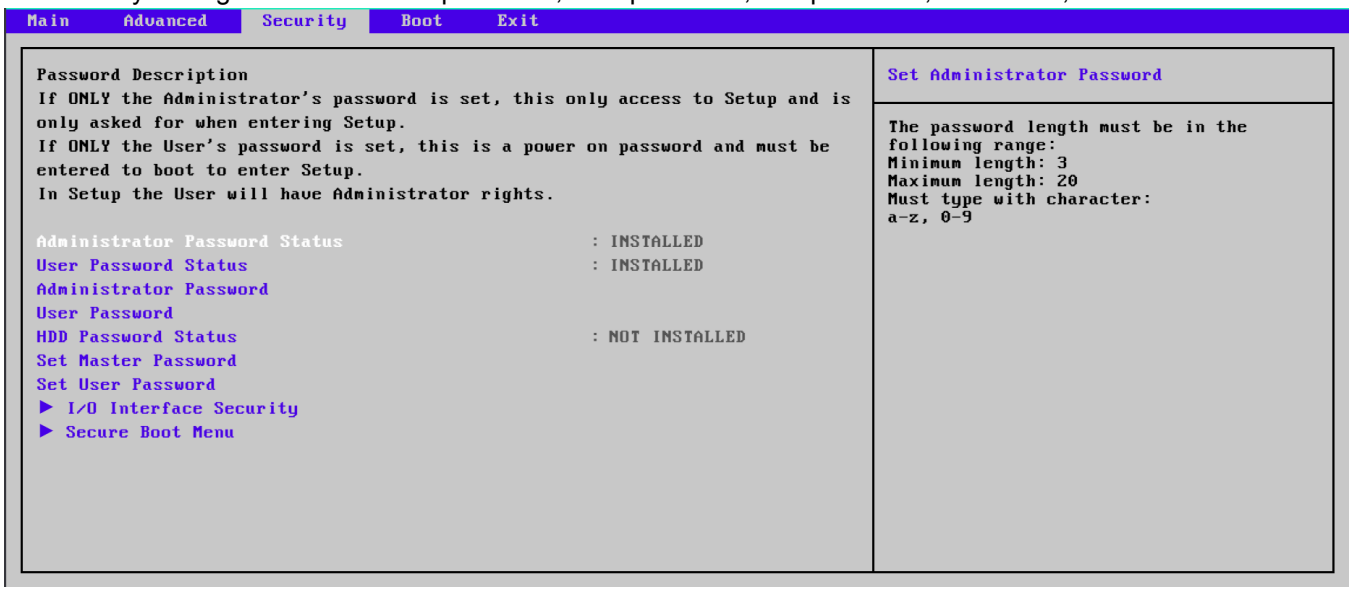


Step 3: Find the CPU settings.

Navigate through each screen to find the CPU settings.

Questions:

What is the CPU speed? **0.80Ghz**

What other information is listed for the CPU?

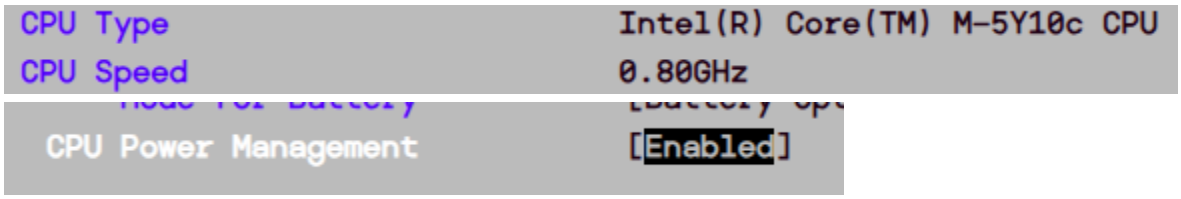


Step 4: Find the RAM settings.

Navigate through each screen to find the RAM settings.

Questions:

What is the RAM speed?

It is set at 4800mhz

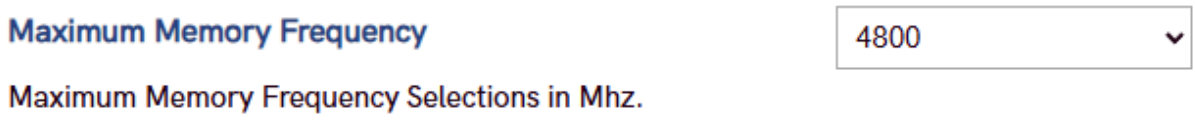

What other information is listed for the RAM?

8gb ram

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

www.netacad.com




Type your answers here.

Step 5: Find the hard drive settings.

Navigate through each screen to find the hard drive settings.

Questions:

What information is listed for the hard drive?

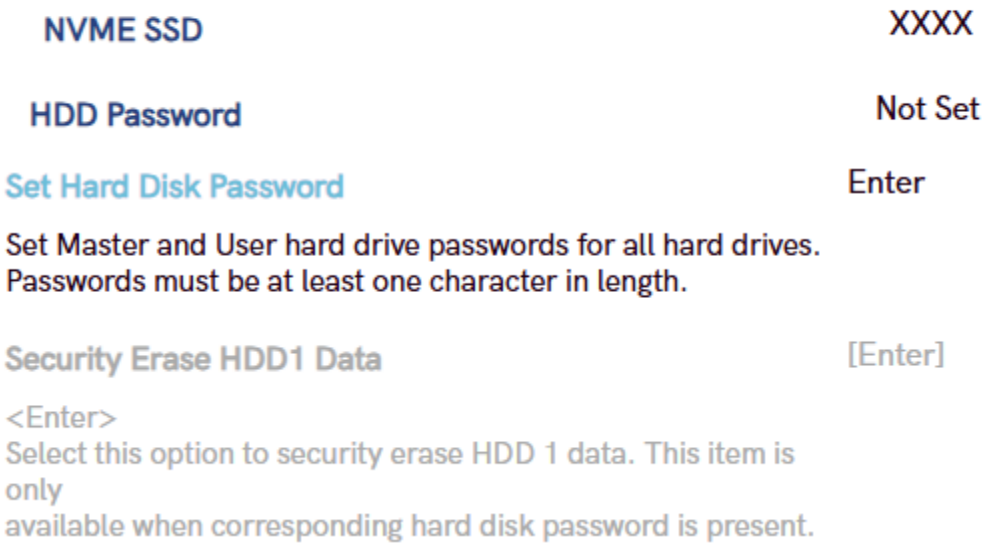

Step 6: Find the boot order sequence.

Navigate through each screen to find the boot order sequence.

Questions:

What is the first boot device in the boot order sequence?


Windows boot manager

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

www.netacad.com

How many additional devices can be assigned in the boot order sequence?

6

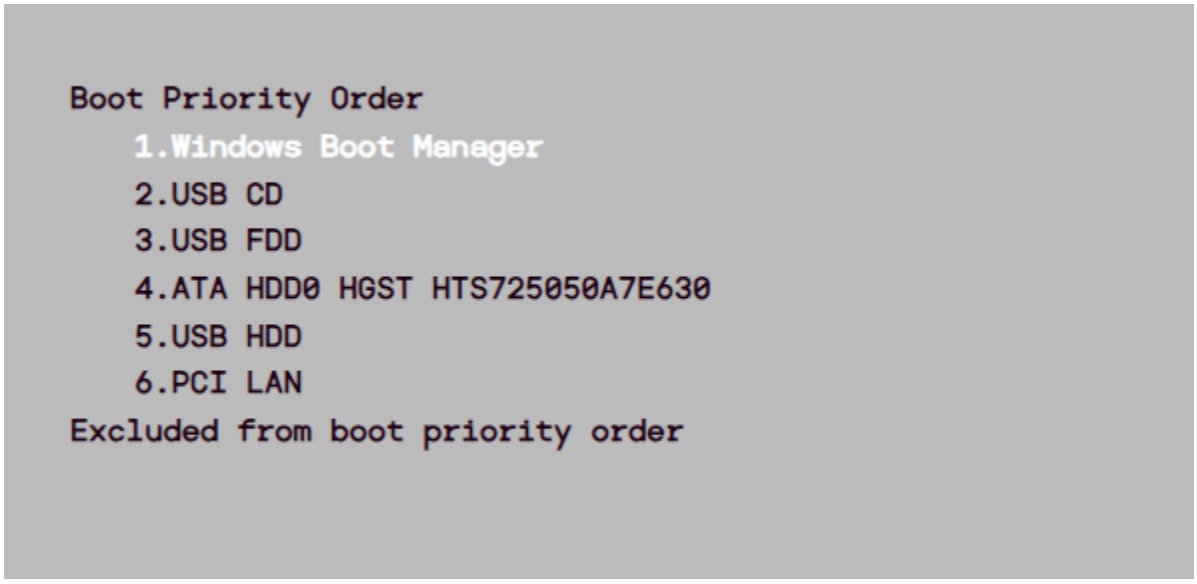

Step 7: Set the device boot order settings.

a. Ensure that the first boot order device is the optical drive.

b. Ensure that the second boot order device is the hard disk drive.

Questions:

Why would you change the first boot device to the optical drive?

You change the first boot device to the optical drive to install a new operating system from a CD/DVD, run diagnostic or recovery tools, or fix a broken computer

What happens when the computer boots and the optical drive does not contain bootable media?

The computer skips the optical drive and checks the next device in the system boot order, such as the internal hard drive or solid-state drive.

Step 8: Find the power management setup or ACPI screen.


Navigate through each screen to find the power management setup screen, or ACPI screen.

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

Question:

What power management settings are available?

Intel ® SpeedStep Technology, mode for ac, mode for battery, cpu power management, disable built-in battery

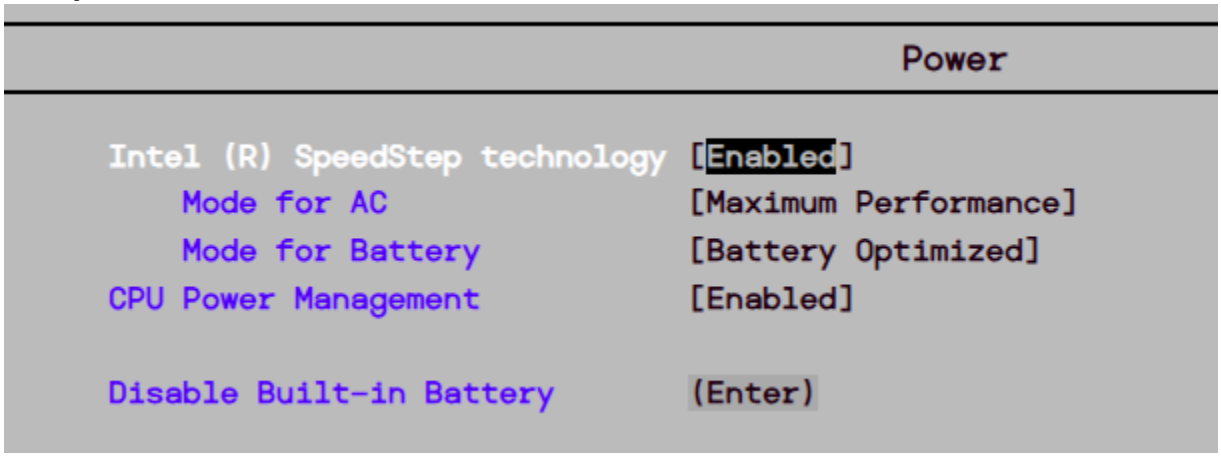


Step 9: Find the PnP settings.

Navigate through each screen to find the PnP settings.

Question:

What PnP settings are available?

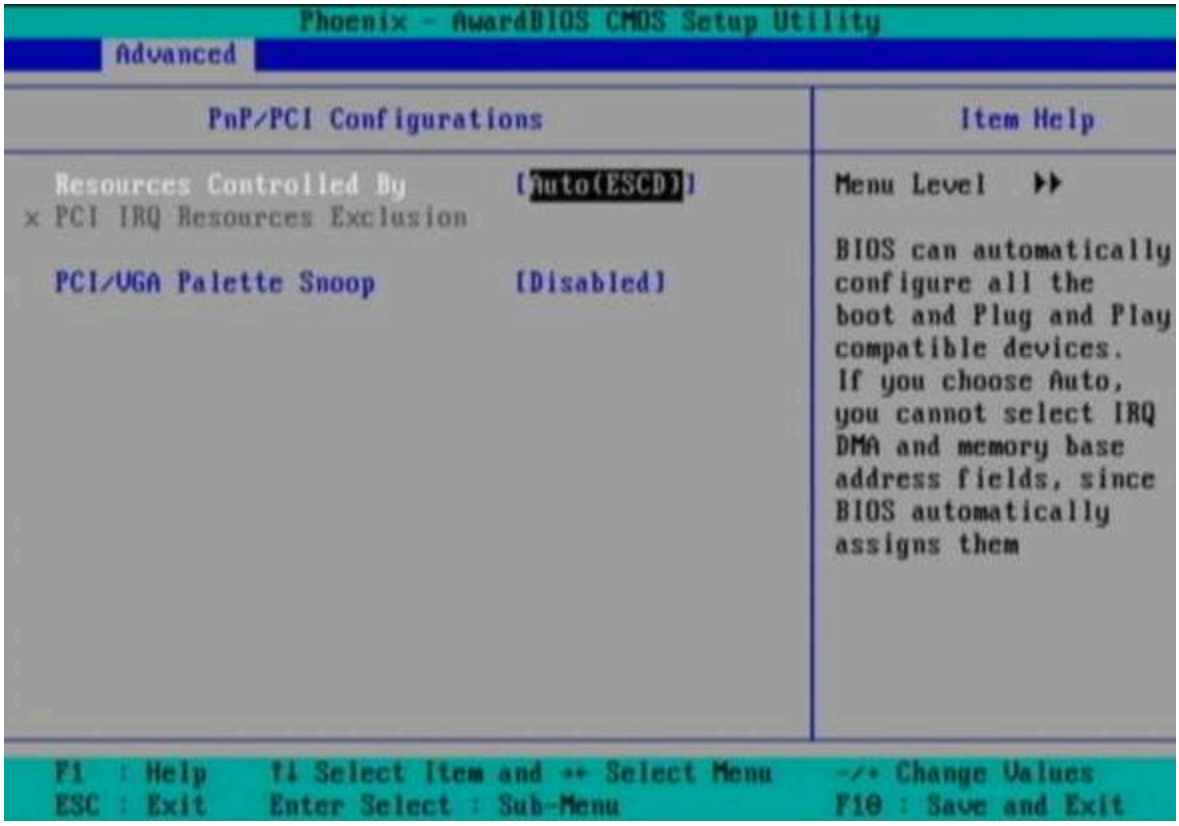

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

www.netacad.com


Step 10: Find the splash screen settings.

Navigate through each screen to find the splash screen settings.

Question:

What splash screen settings are available?

F2 set up utility and, **esc** - boot menu

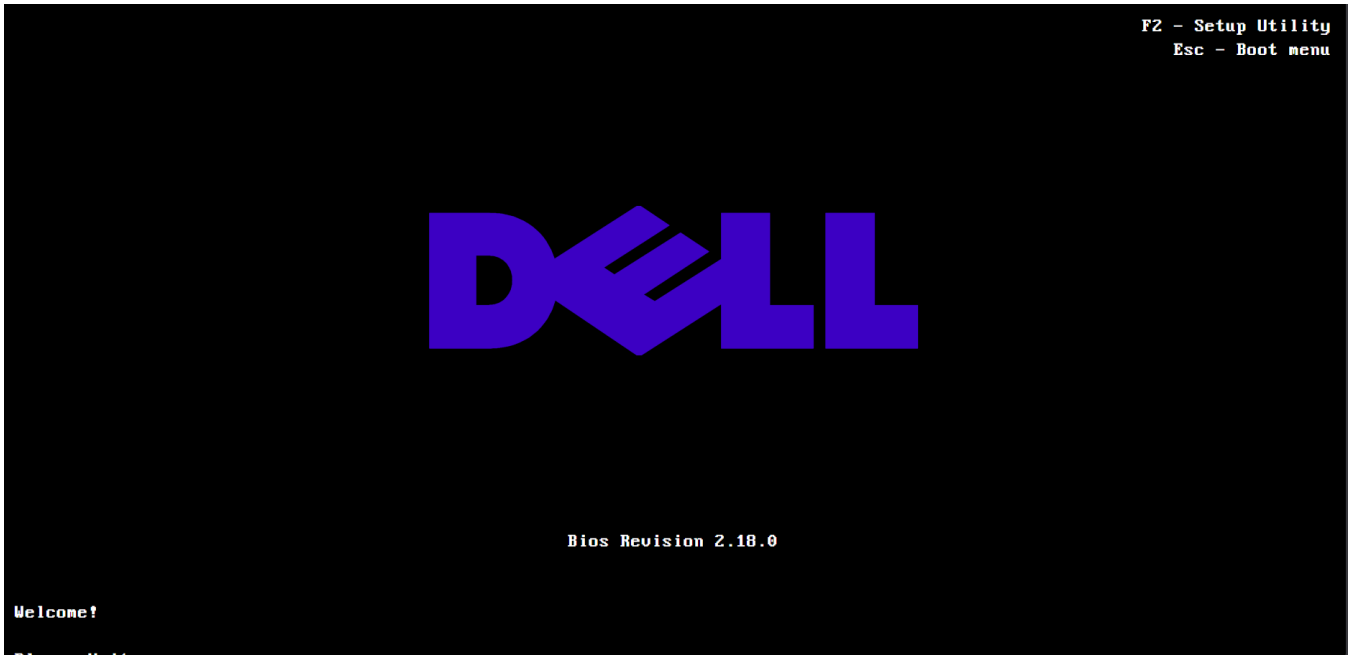

Step 11: Save and exit the setup utility program.

Save the new BIOS/UEFI settings and exit the setup utility program. The computer should restart automatically.

Note: An error message stating that an OS cannot be found (or a similar error) will appear on the screen after the computer boots. An operating system must now be installed to prevent this error. It is safe to turn off the computer at this time.

This lab is complete. Please have the instructor verify your work.

End of Document

Website Simulator Used:
https://download.lenovo.com/bsco/index.html#/textsimulator/ThinkPad%2011e%20(20E6%2020E8)

© 2015 - 2019 Cisco and/or its affiliates. All rights reserved. Cisco Public

www.netacad.com