
For products with serial number 2125-61001 and later.

Complete User Manual

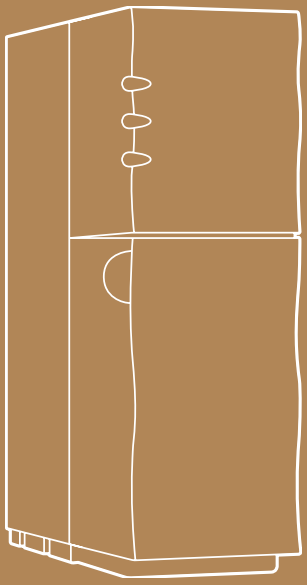

Bluewater Spirit

Water purifier

Bluewater



Contents

Introduction	**05**
About this manual	05
Limited warranty	05
Environment information	05
Recycle / Disposal	05
Symbols	05
Safety instructions	06
Safety information	06-07
Product Overview	**08**
Models	08
Spirit outside	08
Spirit inside and replacement components	08
Control Panel	09
Data Plate	10
Move the water purifier	10
System overview	**11**
System description	11
Intended use	11
Leak protection system	12
Low pressure protection	12
Water production	12
Automatic Flush	13
Installation	**14-23**
Unpack Spirit	15
Position Spirit	15
Install purified water faucet	16
Install inlet water connection	17
Install drain water connection	17
Connect the water purifier	18
Commissioning Flush Spirit	19-22
Do a check for leaks	23
Maintenance	**24**
Each month	24-25
Each 4-6 months	26-31
Each year	32
Other: Put into storage, Reinstall after storage	33-40
Technical information	**41**
Technical data	41
Requirements for inlet water to water purifier	41
Troubleshooting	**42-44**
How to solve simple problems	42

Introduction

About this manual

This manual contains complete user instructions for the Spirit. It provides the necessary instructions to safely install, operate, maintain, and troubleshoot this device.

Original language

The original language of this instruction is English.

Printing options

This manual may be printed double sided on US Letter, A4, or A5 booklet.

Limited warranty

Refer to www.bluewatergroup.com/warranty for more information on Limited warranty.

Environment information

The water purifier is more efficient when purifying a larger amount of water at a time. Example: Filling several one litre containers is more efficient per litre than just filling one litre at each use.

80% of the water purifier components and packaging are labeled to help you recycle and discard correctly.

Recycle / Disposal

Contact your Bluewater dealer before disposing of the water purifier, as it can be refurbished and has many recyclable components. If disposing, disconnect the plug from the electrical supply and cut the electrical cord at the point where it enters the appliance. Make sure that children do not play with the leftover electrical cord.

For information on filter recycling or disposal, contact your Bluewater dealer.

Appliances bearing this symbol must be deposited at the designated local reception point for the disposal of electrical and electronic equipment. This product may not be disposed of using the normal household refuse collection processes.

Symbols

The following symbols can be found on the water purifier:

Symbol	Description	Symbol	Description
C US	The WQA Gold Seal is proof that the water purifier has been independently tested and is certified against NSF/ANSI 58 and CSA Standard B483.1. It has also been tested and certified against NSF/ANSI 372.	c ETL LISTED US Intertek	The ETL Listed Mark is proof that the device has been independently tested and meets the applicable published standard.

© Bluewater Group 2025

Safety instructions

Before you install or operate the device, you must read the safety information. Obey the instructions in this manual to prevent injuries, or damage to the equipment. This manual contains CAUTIONS and NOTES that are applicable for the safe operation of the device.

A CAUTION symbol identifies conditions that can cause injury, or damage to the equipment.
DO NOT USE Spirit unless all cautionary conditions listed below have been understood and met.

A NOTE symbol identifies important information for trouble free and optimal use of the water purifier.

Safety information

Installation of the water purifier must comply with all applicable local regulations and plumbing codes. Contact your Bluewater dealer if you have questions. Bluewater, as the manufacturer, has no responsibility for water purifier installations.

Be aware! If the SERVICE light is On or Flashing when the purified water faucet is turned on, do not use or drink the water. Let the water run until the SERVICE light goes out. If the SERVICE light is still On after 120 seconds, see “Troubleshooting” on page 42.

This appliance can be used by children who are more than 8 years old. It can also be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction about the use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

We recommend only approved technicians, distributors or Bluewater service personnel perform installations, servicing and repairs on the water purifier. If not performed adequately, this can make it operate incorrectly, and lead to injury and damage not covered by warranty.

Only authorized technicians, distributors, or dealers approved by Bluewater can repair or modify parts of the water purifier. If not performed adequately, this can make it operate incorrectly, and lead to injury and damage not covered by warranty.

Spirit is a reverse osmosis system. It contains a replaceable membrane that is very important for effective reduction of total dissolved solids (TDS). Replace this membrane regularly.
Test the purified water periodically using a TDS/Conductivity tester at least one time every year to make sure that Spirit performs correctly. For options, contact your Bluewater dealer. If there is any indication that the purified water tastes, smells bad, is cloudy, or there is a presence of particles, do not drink.

Only use original replacement cartridges and parts from Bluewater. For the spare parts catalogue, see www.bluewatergroup.com. For purchase information, contact your Bluewater dealer.

The inlet water supply must meet the requirements stated in “REQUIREMENTS FOR INLET WATER to water purifier” on page 41.

Do not put or store objects on top of the water purifier. Do not put the water purifier in water.

Connect the water purifier to an earthed/grounded electrical supply. Use a plug that is easy to access after installation. Only an approved electrician must do permanent wiring on the system. Incorrect installation can lead to damage or make the water purifier dangerous to use.

Do not use the power cord if there are visible signs of damage on it. If the power cord is damaged, a qualified electrician must replace it to prevent danger.

Do not use Spirit without the filter. This can cause damage to the system. The filter can be removed when Spirit is cleaned or put into storage

If the water purifier is disconnected from water and electricity for >5 days, store it as described in this Complete User manual. See “Put into storage” on page 36.

Contact your Bluewater dealer for advice before relocating Spirit to another geographical location or changing the source of the inlet water supply. See “Move the water purifier” on page 10.

© Bluewater Group 2025

Product Overview

Models

Model	Description
Spirit 300Cp	Controlled by pressure (Cp) model is compatible with faucets and appliances approved for use with Reverse Osmosis purified water.

Spirit outside

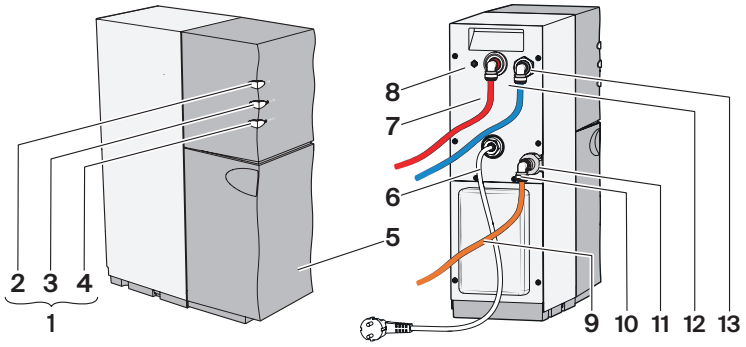


Figure 1. Spirit outside

Pos	Description	Pos	Description
1	Control panel	8	Bluewater LED faucet connection
2	ON light	9	Inlet water tube and fittings
3	FILTER light	10	Inlet Grid Filter
4	SERVICE light	11	Inlet water connection
5	Front cover	12	Purified water hose
6	Power cord	13	Purified water connection
7	Drain water tube		

Spirit inside and replacement components

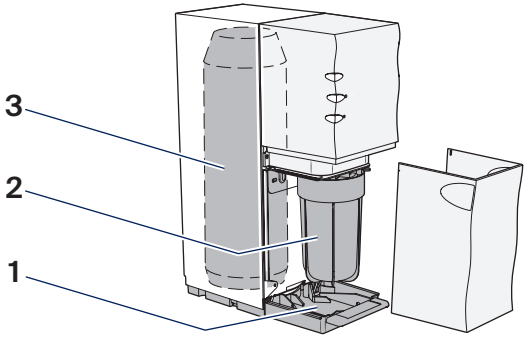


Figure 2. Spirit inside

Pos	Description	Part number
1	Base plate	1607472
2	Prefilter, Sediment 10 µm, Carbon fiber	919260005
3	Reverse osmosis membrane	
	Membrane service kit, type HR (High Rejection)	155007301-SP
	Membrane service kit, type HF (High Flow) Discontinued	See Above 155007301-SP

Control panel

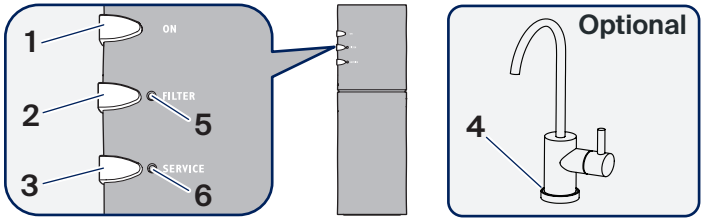


Figure 3. Control panel

Pos	Light/Button	Description	
1	ON light	On:	The water purifier is connected and operates correctly.
		Flashes:	The water purifier is busy flushing the membrane.
		Flashes quickly:	See troubleshooting page 42.
2	FILTER light	Off:	Filter and inlet water pressure OK.
		Flashes slowly:	Water quality is decreased.*
		Flashes quickly:	See troubleshooting page 42.
		On:	
3	SERVICE light	Off:	Water quality is OK.
		Flashes slowly:	Water quality is decreased.
		Flashes quickly:	See troubleshooting page 42.
		On:	Water quality is not OK. Do not drink.*.
			*If SERVICE light is On or Flashing, let the water run up to 120 seconds until the SERVICE light goes out. If the water purifier stops or Flashing continues, see “Troubleshooting” page 42.
4	Bluewater LED faucet lights (Optional)	Blue:	Water quality is OK.
		Orange:	The water is not yet ready to drink. This can take up to 120 seconds.
		Blue flashes:	The water purifier is busy flushing the membrane.
		Flashes orange:	The water purifier needs attention. Look at the Control panel.
5	FILTER Button		
6	SERVICE Button		

For more information about combinations of lights that Flash or are On, see “Troubleshooting” on page 42.

© Bluewater Group 2025

Data plate

The data plate is located behind the filter.
If you need service support, be sure to have the following data plate information available when calling your Bluewater dealer:

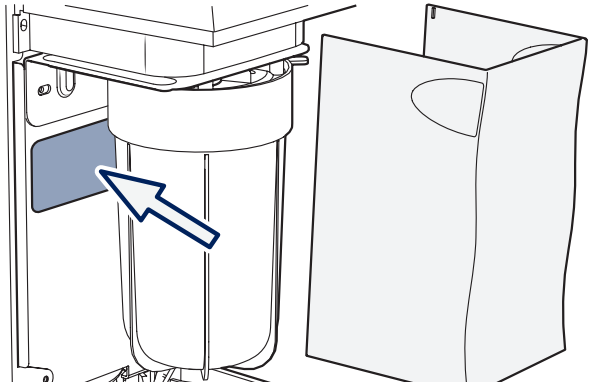


Figure 4. Data plate

Move the water purifier

Always transport the water purifier upright. Install according to “Installation” on page 14.

Put the water purifier into storage using the preserving agent if Spirit is disconnected from the water or electricity for >5 days. See “Put into storage” on page 36.

Contact your Bluewater dealer for advice before relocating Spirit to another geographical location or changing the source of the inlet water supply.

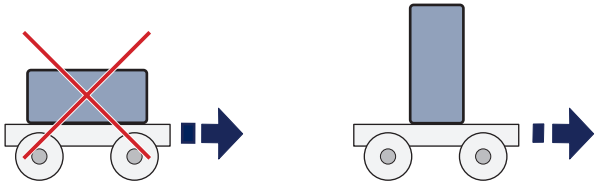


Figure 5. Move the water purifier

System overview

System description

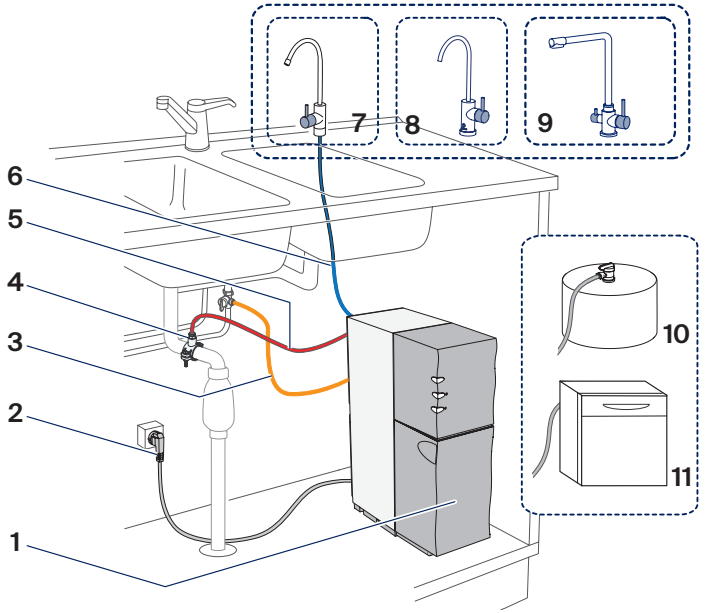


Figure 6. System overview, an example of a Spirit installation

Pos	Description	Pos	Description
1	Water purifier	4	Drain saddle connection
2	Power cord	5	Drain water tube, installed with an air gap
3	Inlet water tube	6	Purified water tube
Pos	**Accessories**	**Description**	
7	Standard RO faucet	Approved for use with Reverse Osmosis purified water.	
8	Bluewater LED faucet (optional)	LED indicates service and purified water quality notifications.	
9	Bluewater Triflow faucet	Provides purified water in addition to hot and cold non purified water.	
10	Storage tank	Use only tanks approved for use with Reverse Osmosis purified water.	
11	Appliance	Dishwasher, coffee machine, ice maker, refrigerator, etc. Appliances must be approved for use with Reverse Osmosis purified water.	

Intended use

The Spirit water purifier is intended to produce purified water only for home environment and household use. Any other purpose shall be considered as unintended use and will automatically void your warranty, unless the application is approved, installed, and monitored by a Bluewater authorized distributor or dealer.

© Bluewater Group 2025

Leak protection system

A sensor at the bottom of the water purifier senses water leaks. If there is a leak, the inlet water supply is stopped. The water purifier cannot be started again until the leak has been repaired.

Low pressure protection

If Spirit stops because of low inlet water pressure, the cause of the low inlet water pressure must be resolved.

Low pressure restart function

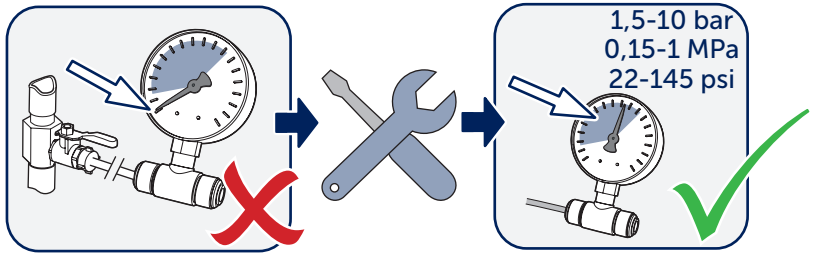


Figure 7. Low pressure restart function

The low pressure restart is a function to ensure maximum availability of inlet supply water.

If Spirit has stopped due to low inlet water pressure, Spirit attempts to restart automatically and continues restart attempts every 5 minutes, for up to 10 times. If the low inlet pressure problem is not resolved by the 10th restart attempt, Spirit will stop.

Once the low inlet pressure has been resolved, Spirit can be restarted manually by pressing the SERVICE Button for 5 seconds.

Water production

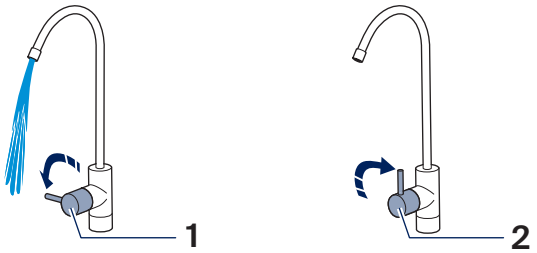


Figure 8. Purified water production on/off

Be aware! If the SERVICE light is On or Flashing when the purified water faucet is turned on, do not use or drink the water. Let the water run until the SERVICE light goes out. If the SERVICE light is still On after 120 seconds, see “Troubleshooting” on page 42.

Automatic flush

The length of each of these three flushes is 2.5 minutes.

An automatic flush will be performed if one of the conditions below is met:

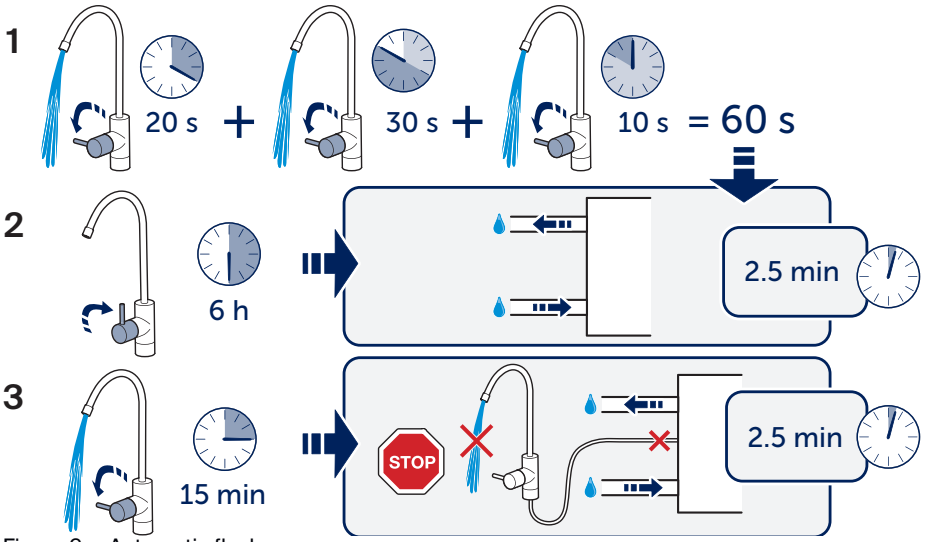


Figure 9. Automatic flush

Pos	Description
1	Automatic Flush takes place after purified water has been produced for a total of 60 seconds and the purified water faucet is turned off.
2	Automatic Flush takes place every 6 hours, while the Spirit is in standby mode.
3	Automatic Flush takes place after purified water has been produced for a total of 15 minutes. This flush cannot be interrupted. Purified water will be available after this flush completes.

© Bluewater Group 2025

Installation

We recommend only approved technicians, distributors, or Bluewater service personnel perform the installation of the water purifier. Contact your Bluewater dealer if you have questions.

Installation of the water purifier must comply with all applicable local plumbing codes and regulations. Plumbing must be done by an approved plumber. Contact your Bluewater dealer if you have questions. Bluewater, as the manufacturer, has no responsibility for water purifier installations.

Only connect the water purifier to the cold water supply. The inlet water must be of sufficient quality and meet the requirements for inlet water. See “REQUIREMENTS FOR INLET WATER to water purifier” on page 41.

Install the water purifier in a vertical position on a horizontal surface. Make sure that hoses, tubing, and electrical cords can move freely when the water purifier is installed.

Spirit must supply purified water directly to a faucet or storage tank designed for reverse osmosis purified water. The purified water must not travel through any non approved pipes or faucets because this can cause corrosion damage.

The first time Spirit is connected to water and power, the INSTALLER MUST initiate “Commissioning flush” on page 19.
This 36 minute flush is a VERY IMPORTANT flush and must be allowed to continue to completion. Keep Spirit connected to power, with the purified water faucet open for the entire time. Do not interrupt this flush. Do not drink the water until this flush is complete.

Use the hose and tubing set that is supplied with the water purifier. Do not reuse old hose and tubing sets.

Unpack Spirit

Warning! Discard the packing material. It can cause injury to children if they play with it.

80% of the water purifier components and packaging are labeled to help you recycle and discard correctly

Make sure that Spirit shows no signs of damage, and that no accessories are missing.
Contact your Bluewater dealer about missing parts, damage, and other problems. Contact the shipping company immediately if Spirit was damaged during transport.

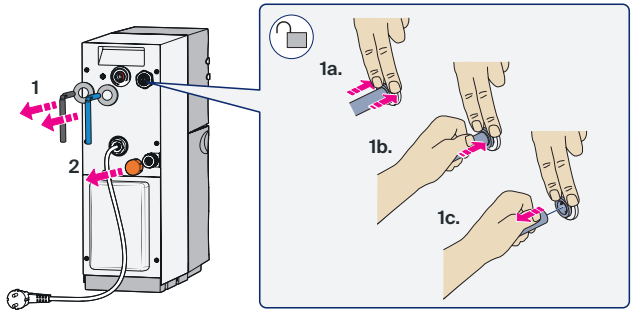


Figure 10. Unpack Spirit

Position Spirit

Put Spirit in a vertical position, on a horizontal surface below the kitchen sink. Make sure that the surface can support the water purifier.

Spirit near the cold water supply, the drain, and an earthed/grounded electrical supply.

- Make sure that it is easy to see the Control panel.
- Make sure that the front cover can be opened to access the filter.
- Hoses, tubing, and electrical cords can go in all directions from their connection points. Make sure that nothing can impede their free movement, or crush or damage them.


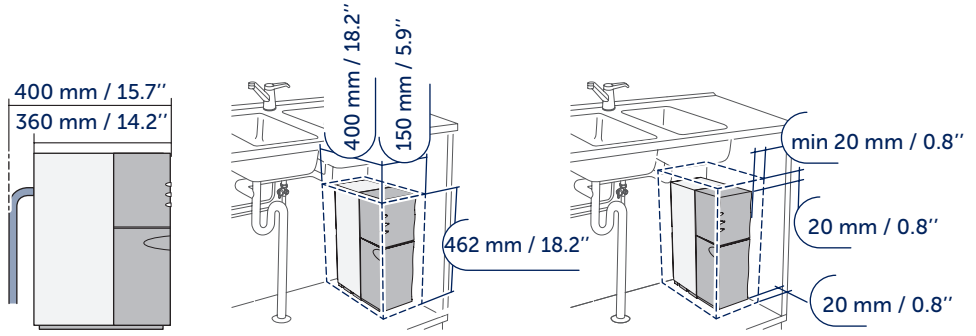


Figure 11. Position Spirit under the kitchen sink

© Bluewater Group 2025

Install purified water faucet

In certain applications, the faucet may be replaced with a shutoff valve for supplying purified water to a storage tank or appliance. Shutoff valves, tubing, piping, storage tanks, and appliances must be approved for use with reverse osmosis purified water.

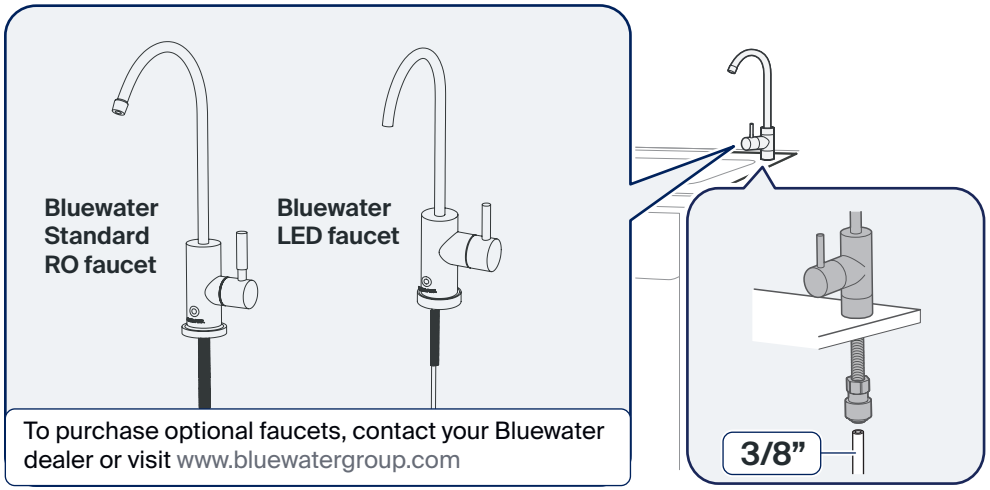

Install the faucet according to the manufacturer’s instructions.

Figure 12. Install purified water faucet

Install inlet supply water connection

Only connect the water purifier to the cold water supply. The water must be of sufficient quality and meet the requirements for inlet water. See “REQUIREMENTS FOR INLET WATER to water purifier” on page 41.

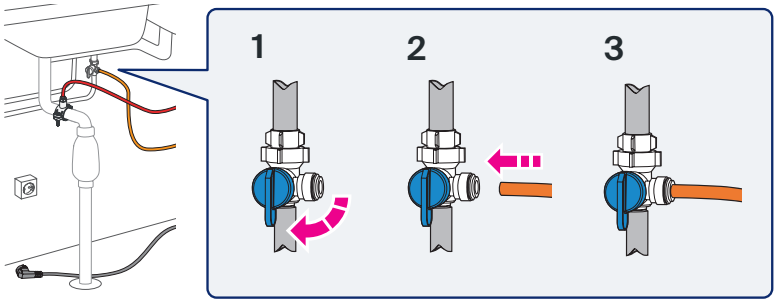


Figure 13. Install inlet supply connection

Install drain water connection

Install the drain water tubing with an air gap.

The flushed water goes through the drain water hose to the drain water outlet. The drain hose or tube length should not exceed a maximum of four meters, and the internal diameter of the drain hose or tubing should not be reduced.

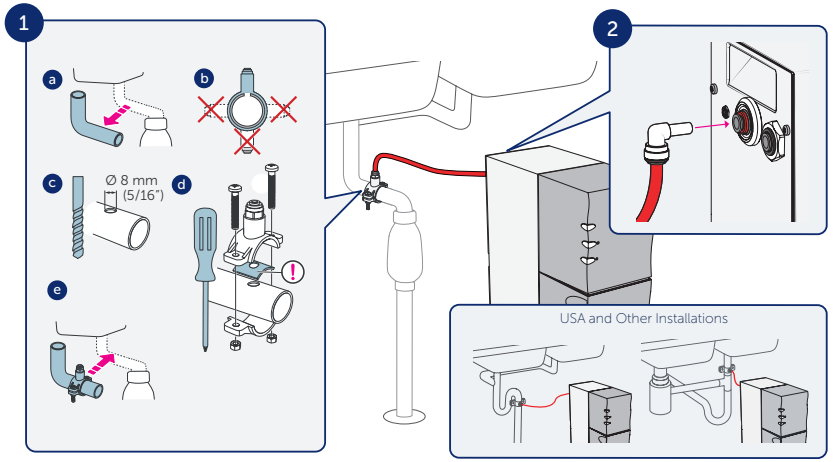


Figure 14. Install drain water connection

© Bluewater Group 2025

Connect the water purifier

During the initial setup, ONLY connect the water purifier to a faucet or shutoff valve. DO NOT connect the water purifier to storage tanks, appliances, or any other drinking water equipment until after the “Commissioning flush” procedure has been completed.

DO NOT connect the water purifier to electrical power at this time.

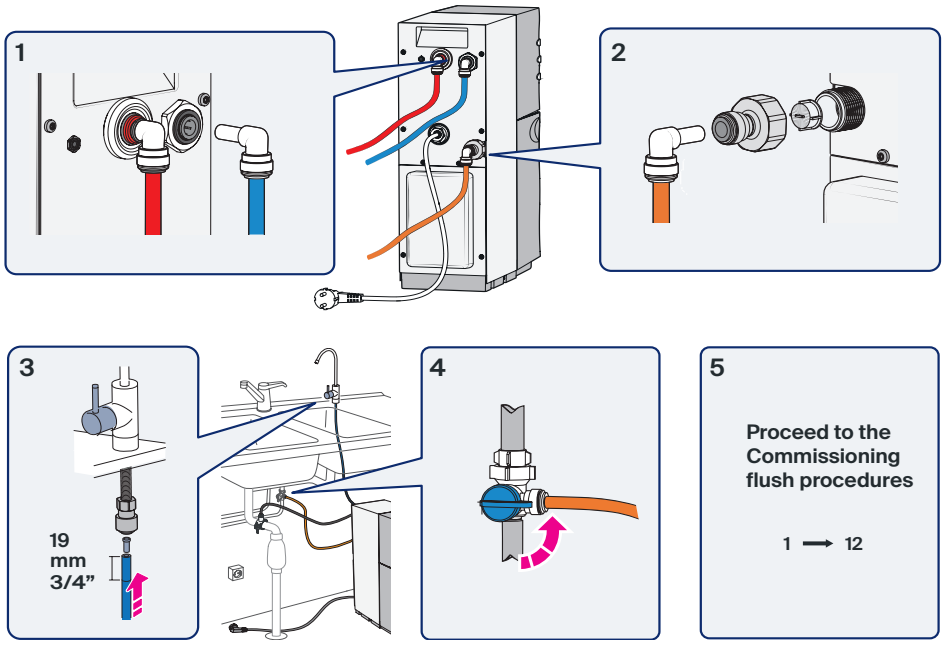


Figure 15. Connect the water purifier

Before connecting Spirit to any drinking water storage tanks, appliances, or equipment, the INSTALLER MUST initiate a first time “Commissioning flush”.

DO NOT use or drink the water until the 36 minutes “Commissioning flush” has been completed.

STOP

“Commissioning flush” must be initiated before completing the installation!

Commissioning flush

A “Commissioning flush” MUST be performed when the water purifier is first installed, whenever a reverse osmosis membrane is replaced, whenever Spirit has been relocated to another geographical location, or a different inlet water supply source is used, when reinstalled after storage, or when disinfected or descaled.

This VERY IMPORTANT 36 minute “Commissioning flush” must be allowed to continue to completion.

DO NOT DRINK or use the water until this flush is completed.

Spirit MUST NOT be connected to any water storage tanks, appliances, or any other drinking water equipment during this flush. All drinking water equipment must be disconnected, except a faucet or shutoff valve, until the “Commissioning flush” is completed.

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.

In case of problems or errors during the flush, see “Troubleshooting” on page 42.

If Spirit is unplugged or power is disrupted during the “Commissioning flush” cycle, the “Commissioning flush” will automatically start again from the beginning when the power is restored and run for 36 minutes.

The water purifier should always be flushed after the following procedures:

- When Spirit is installed for the first time.
- When Spirit has been disinfected. See “Use disinfectant to clean the system” on page 33.
- When Spirit has been descaled. See “Descale” on page 28.
- When Spirit is installed again after storage/freeze protection.

See “Reinstall after storage” on page 38.

- When Spirit has had the Reverse Osmosis membrane replaced. Contact your Bluewater dealer.
- When Spirit has been relocated to another geographical location or a different inlet water supply source is used.


© Bluewater Group 2025

“Commissioning flush” instructions, proceed with steps 1-12 as follows:


1
Start with Spirit disconnected from electrical power. Red through steps, 2-12 steps, before beginning.

2
Turn on purified water faucet.


3
Turn on the inlet supply water.

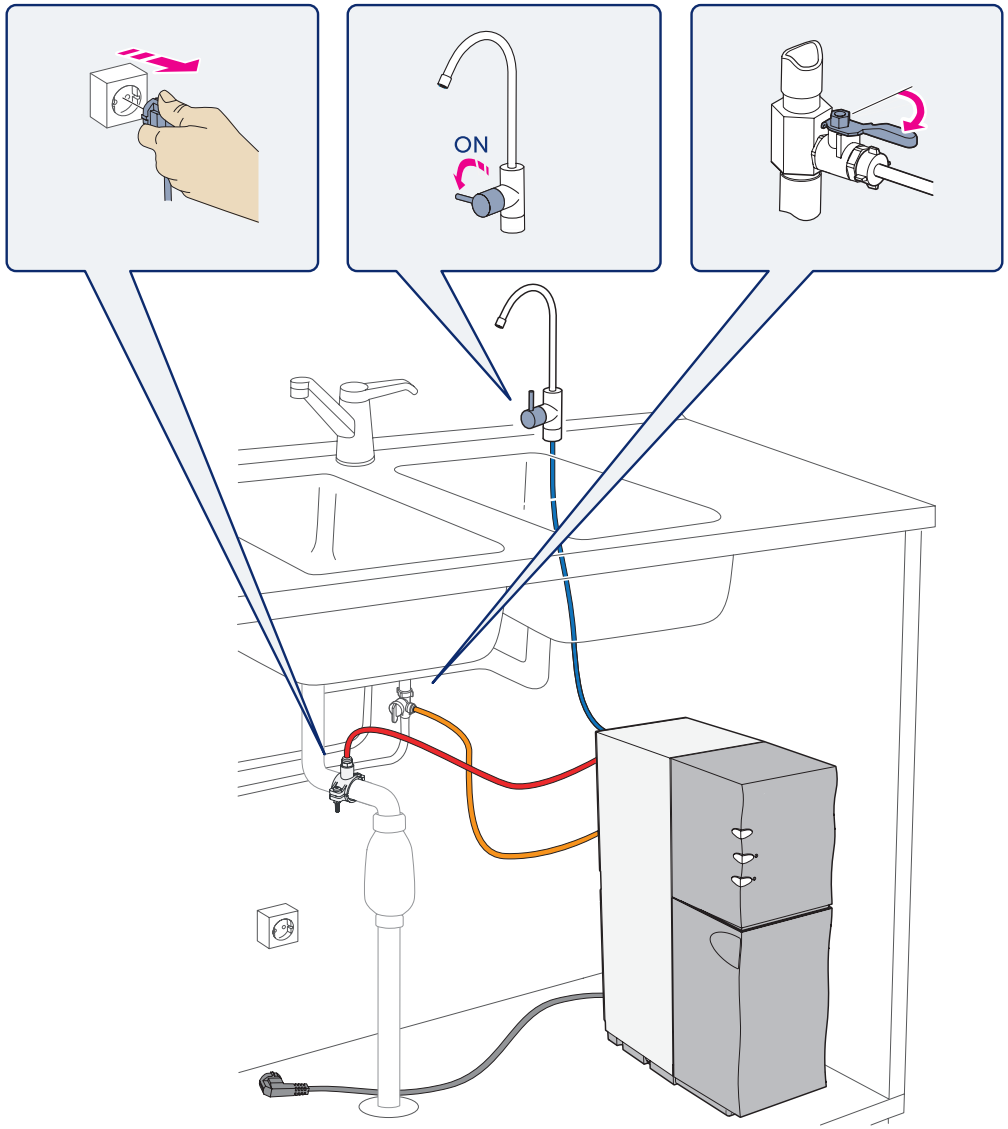


4
Plug in the Spirit

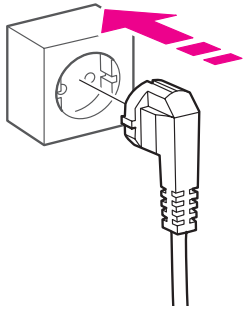

5
Press and hold the SERVICE button for 10 seconds.

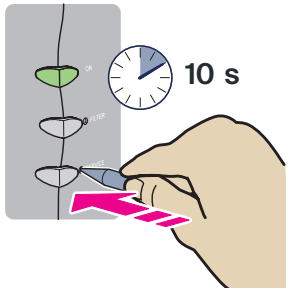


6
When the SERVICE light appears,Release the SERVICE button.

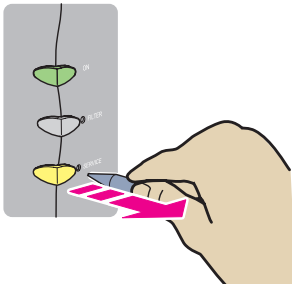

7
When this light sequence appears, the Commissioning flush has begun.


Open the purified water faucet.

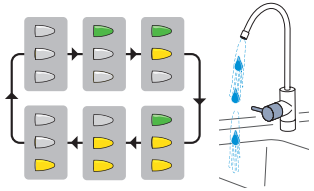

8
The Commissioning flush will run for 36 minutes.


DO NOT DRINK!

DO NOT UNPLUG THE SPIRIT!

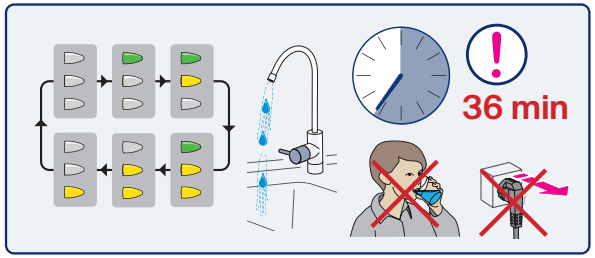

9
When all three lights begin flashing, the 36 minute flush cycle has ended.

Turn OFF the purified water faucet.

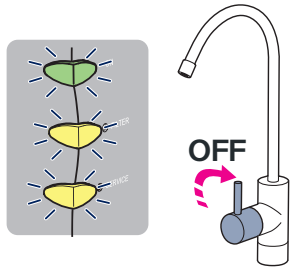

10
Press and release the SERVICE button.

The Commissioning flush is complete.

Proceed to Steps 11 and 12.

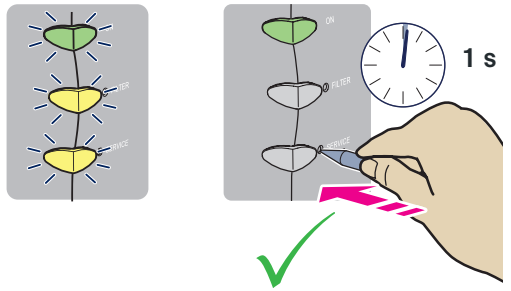



Figure 16. Commissioning flush


© Bluewater Group 2025


In case of a leak or if Spirit must be left unattended, stop the flush and follow the EMERGENCY STOP procedure and restart procedure below.


“Commissioning Flush” Emergency Stop

To STOP the “Commissioning flush”:

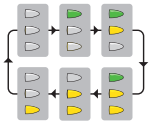

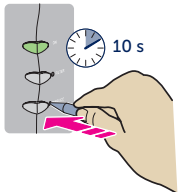

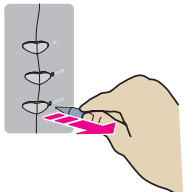



a. Press and hold the SERVICE Button for 10 seconds.

b. When all lights go off, release the Button.


c. When green ON light appears, the flush has stopped

d. Turn off the purified water faucet annd unplug the Spirit from power to prevent ues!

e. DO NOT use or drink the water until the flush has been restarted and completed.

To restart the 36 minute “Commissioning flush”, go back to step 1.

11 Drinking water equipment such as reverse osmosis approved storage tanks and appliances can now be connected to the water purifier.

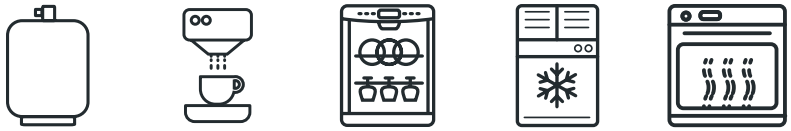

Bluewater recommends any newly connected drinking water equipment and tubing be thoroughly rinsed with the purified water before using.

12 Do a check for leaks

Check all hose, tubing, valve, faucet, and drinking water equipment connections. If there are any leaks, see “Repair leaks” on page 25.


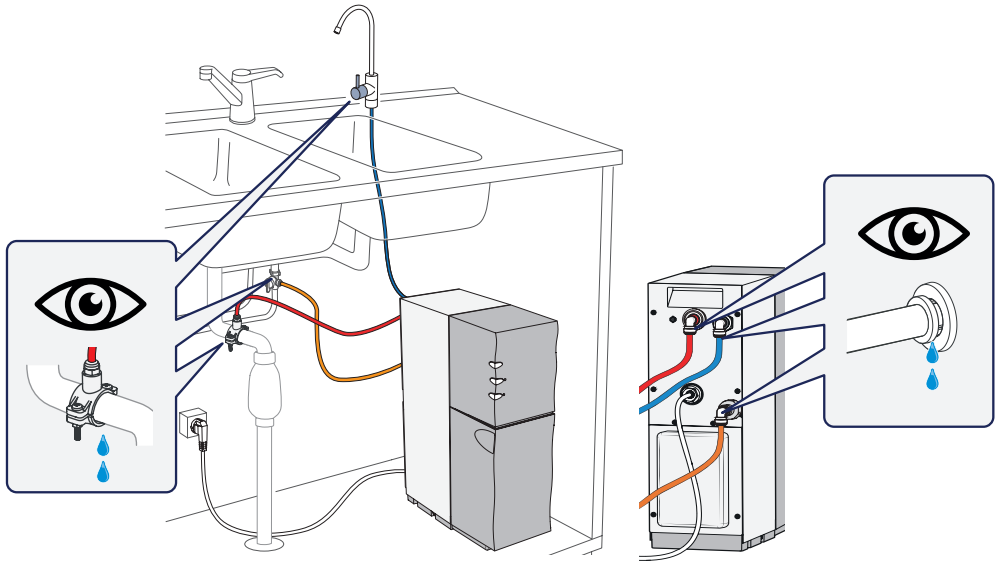


Figure 17. Check for leaks

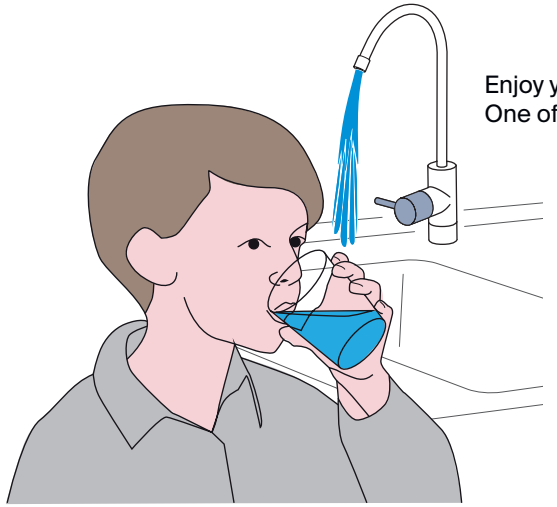

Enjoy your Bluewater Spirit!
One of the best water purifiers in the world!

© Bluewater Group 2025

Maintenance

Daily maintenance: Check indicator lights

Step	Action
1	Check the FILTER and SERVICE lights. If either or both lights are On or Flashing, see “Troubleshooting” on page 42.

Weekly maintenance: Clean the water purifier

Do not use chemicals to clean the surface. Alcohol, petrol, organic and inorganic acids, strong basic chemicals (such as concentrated dishwashing detergent) will cause damage to the surface.

Do not use hard, sharp, or abrasive tools to clean the water purifier.

Step	Action
1	Clean the outer surface with a soft, moist cloth and a weak soap solution to remove dust, stains, and dirt.
2	Dry with a soft dry cloth.

Regular maintenance

Regular maintenance is important for correct function and long term operation. We recommend only authorized technicians, distributors, or dealers approved by Bluewater perform maintenance and repairs.

If the inlet supply water or purified water quality changes, see “Test the water” on page 32 and contact your Bluewater dealer.

Regular maintenance is important for correct function and long term operation. We recommend only authorized technicians, distributors, or dealers approved by Bluewater perform maintenance and repairs.

The inlet supply water quality controls the maintenance frequency. If the inlet supply water is of low quality, do maintenance more frequently. See “REQUIREMENTS FOR INLET WATER to water purifier” on page 41.

Frequency	Description
1 month	Check connections for leaks page 23.
	Wipe off condensation from the base plate, page ??.
4-6 months*	Replace the filter every 4–6 months or as indicated by the FILTER light, page 26.
6 months*	Descale, page 28.
6-12 months*	Clean Inlet Grid Filter, page 31.
1 year	Test the purified water every year using a TDS/Conductivity tester, page 32. If the purified water is not clean, do not drink it. Contact your Bluewater dealer.
3–5 years*	Replace reverse osmosis membrane. Contact your Bluewater dealer.
*Frequency depending on inlet water quality and usage.	

Weekly maintenance: Clean the water purifier

Do a check for leaks. See “Do a check for leaks” on page 23.

Repair leaks

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.

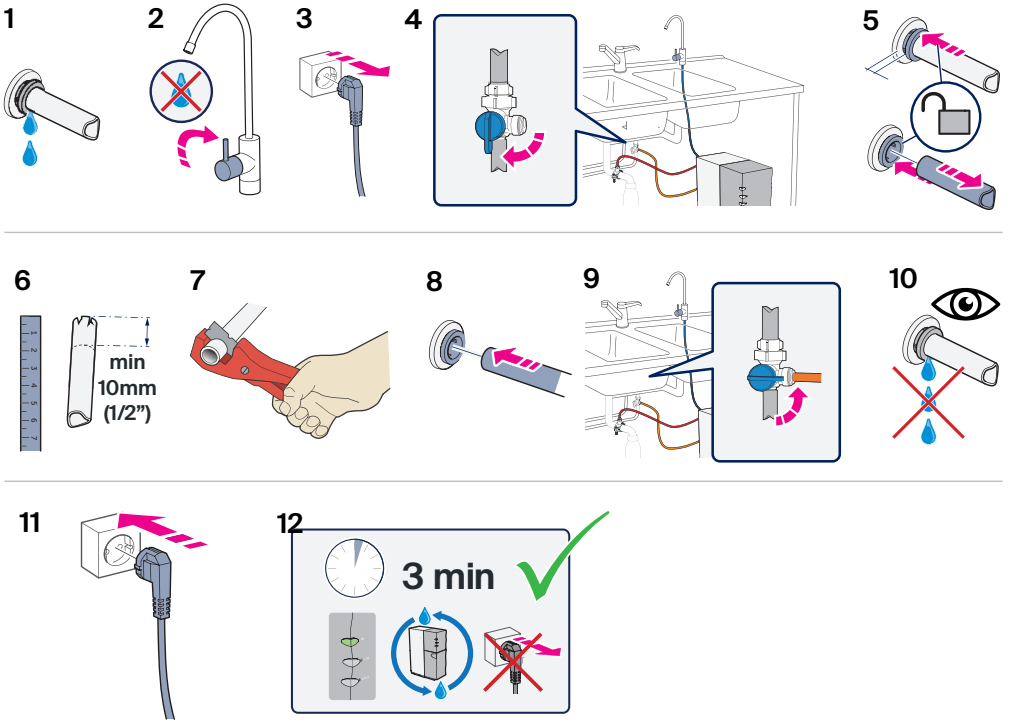


Figure 18. Repair leaks

© Bluewater Group 2025

Wipe off condensation from base plate

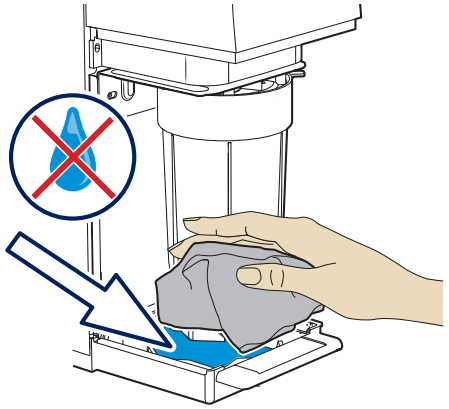


Figure 19. Wipe off condensation from base plate


Each 4-6 months

Replace filter

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.

Replace the filter every 4–6 months or as indicated by the FILTER light.

To order filters, contact your Bluewater dealer.

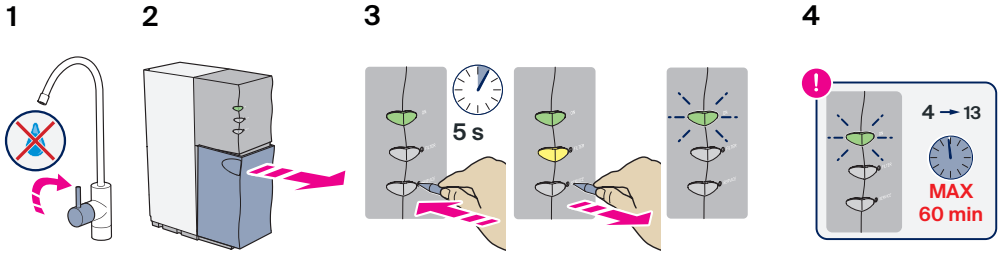

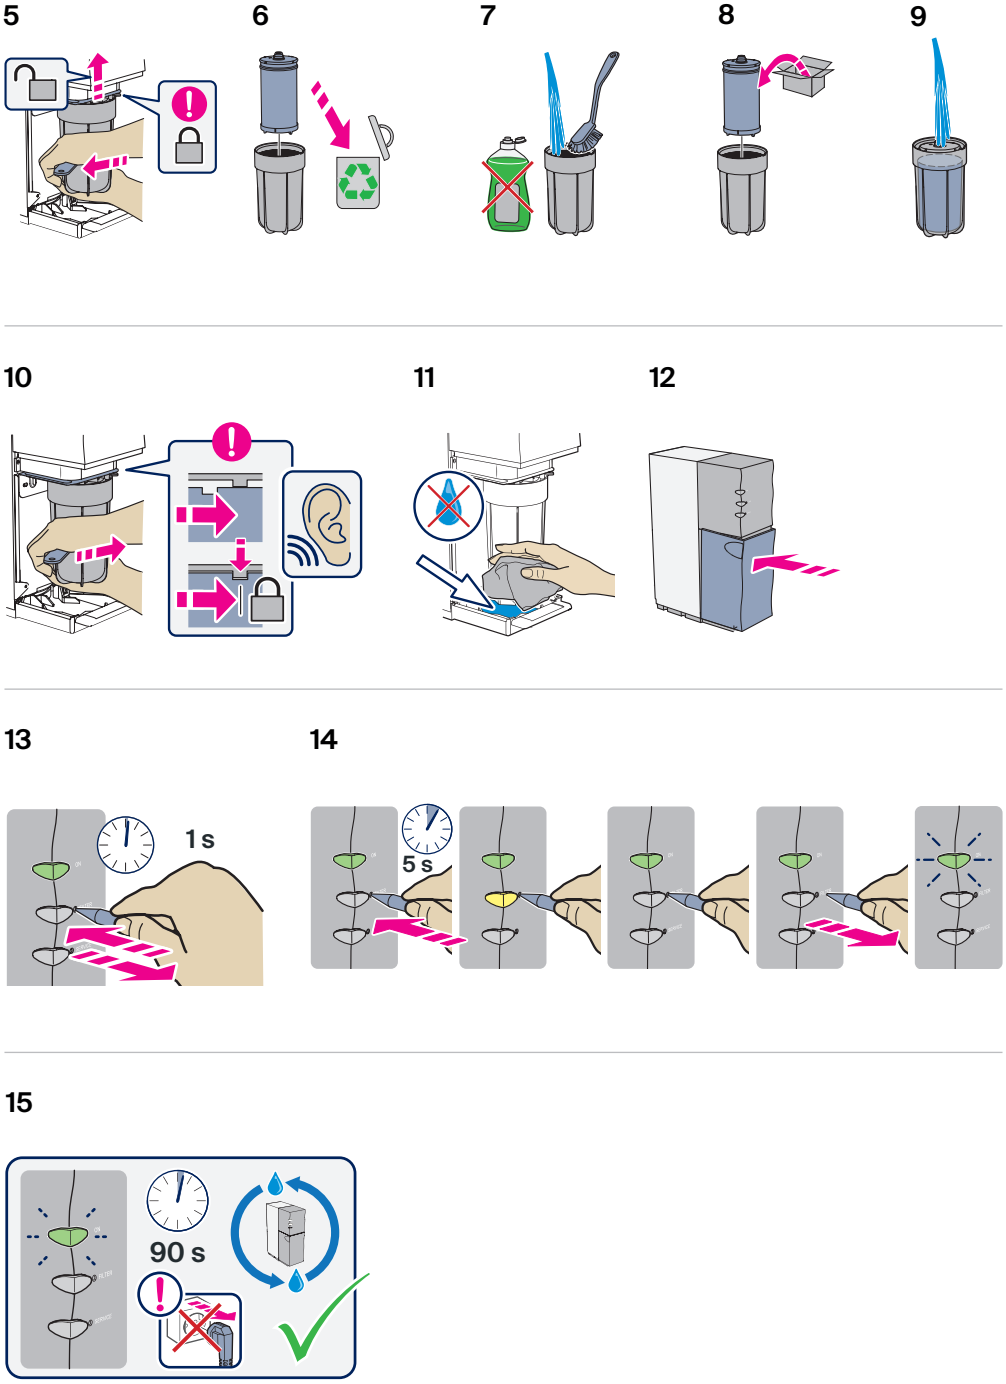


Figure 20. Replace filter

© Bluewater Group 2025

Each 4-6 months

Descale

The descaling product can cause skin irritation. Keep the descaling product out of the reach of children.

When handling the descaling product, wear protective gloves and eye protection. Wash hands after using.

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.


To order the descaling product, contact your Bluewater dealer.

TDescaling frequency depends on the quality of the inlet supply water and usage! To extend the water purifier lifetime: Descale Spirit at 6 month intervals or when the purified water flow has decreased.


If Spirit has been descaled and the filter has been replaced, but the purified water flow cannot be restored, contact your Bluewater dealer.

The “Descale” process takes approximately 10 hours. Do not use the water purifier during this time.


1




2

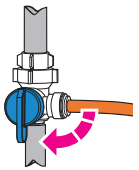


3

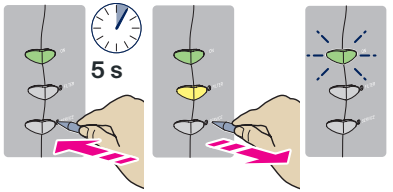


4

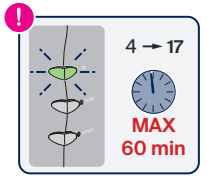


5

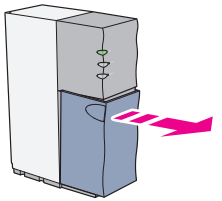


6

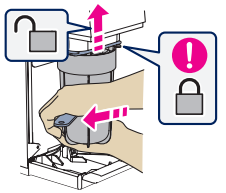


7

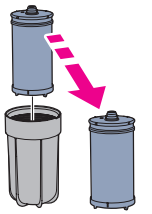

8

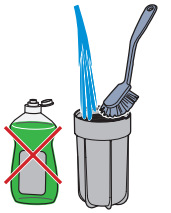


9

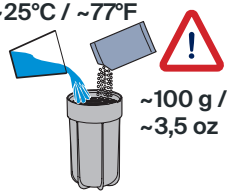


10




11

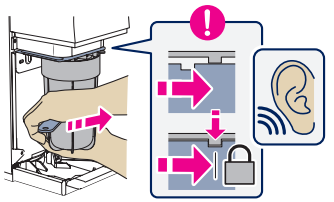


12

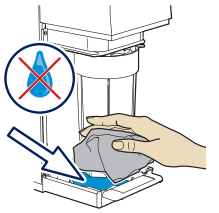


13

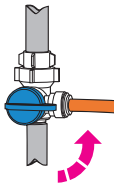


14

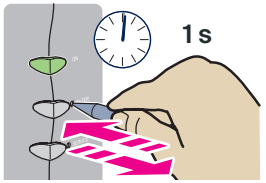

15

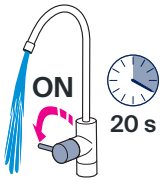


16

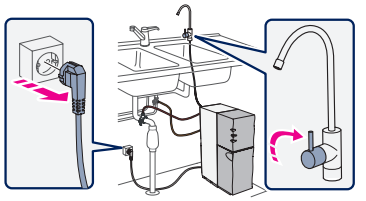


17


18




19

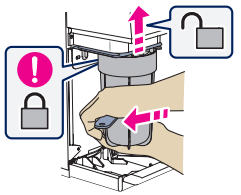

20

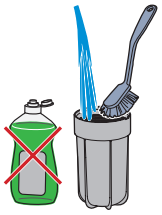

21

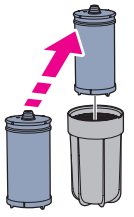


22




© Bluewater Group 2025


23

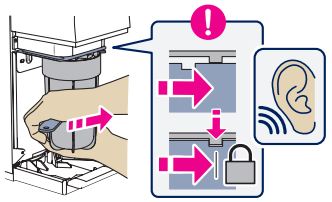

24

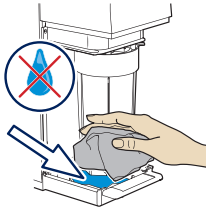


25

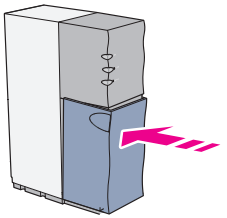


26




27




28

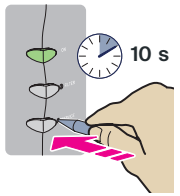


29

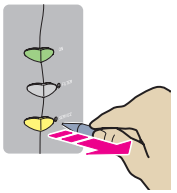

30

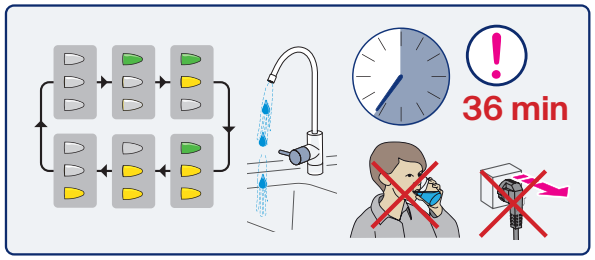

31

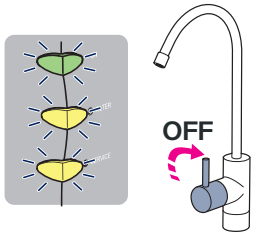

32

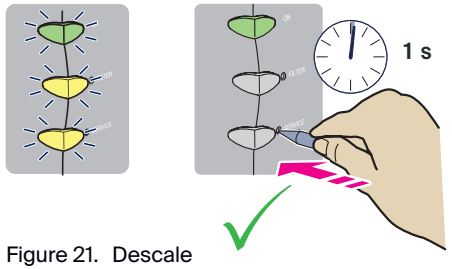


Figure 21. Descale

Each 4-6 months


Clean the inlet grid filter

The Inlet Grid Filter is in the inlet water connection and catches larger particles. If the purified water flow has decreased or if Spirit becomes noisy, the Inlet Grid Filter may be blocked.


For more information about a blocked Inlet Grid Filter, see “Troubleshooting” on page 42.

Cleaning frequency depends on the quality of the inlet supply water.


1

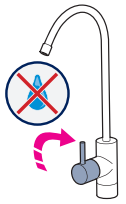


2

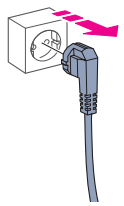


3

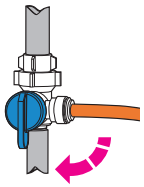


4 5

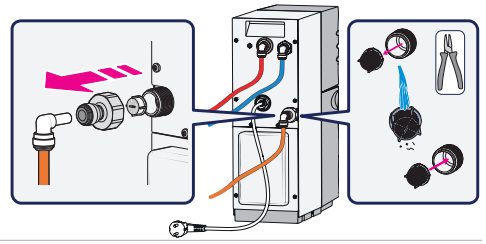

6

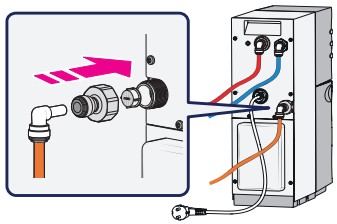

7

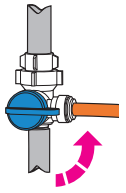

8

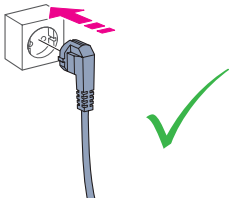


Figure 22. Clean the inlet Grid Filter

© Bluewater Group 2025

Each year

Test the water

Test the purified water periodically using a TDS/Conductivity tester at least one time every year to make sure that Spirit performs correctly. For options, contact your Bluewater dealer.

If there is any indication that the purified water tastes or smells bad, is cloudy, or there is a presence of particles, do not drink. See “Use disinfectant to clean the system” on page 33 and contact your Bluewater dealer.

Make sure inlet supply water meets requirements. See “REQUIREMENTS FOR INLET WATER to water purifier” on page 41.

Other

Use disinfectant to clean the system

Disinfectant product can be harmful. Keep the disinfectant product out of the reach of children.

If handling the disinfectant product, wear protective gloves and eye protection. Wash hands after using.

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.

Sodium hypochlorite (NaClO) or household chlorine bleach MUST NOT CONTAIN added color, fragrance, sudsing/foaming agents, or surfactants. Contact your Bluewater dealer for help finding the correct product. personnel perform servicing and repairs on the water purifier.


Use 25ml (1 oz) of a 3.5% sodium hypochlorite (NaClO) solution, as shown in the illustration below.

Household chlorine bleach contains sodium hypochlorite in various percentages, typically from 3 to 7.5%. Household chlorine bleach can be used in place of the 3.5% sodium hypochlorite solution if the amount of household bleach is adjusted to meet the 3.5% NaClO per 25ml (1 oz) dosage. For example: If the household bleach contains 7% sodium hypochlorite, then half the amount of the household bleach would be needed (12.5ml or 0.5 oz) to meet the dosage requirement. Contact your Bluewater dealer for advice.


Disinfect the water purifier if the water tastes or smells bad.

© Bluewater Group 2025


1




2

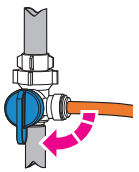


3

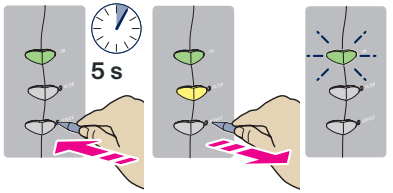


4

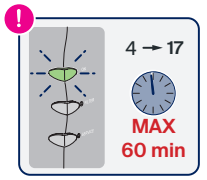


5

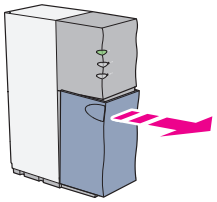


6

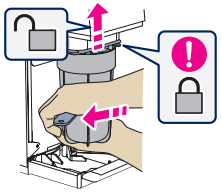


7

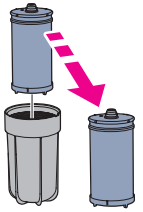


8

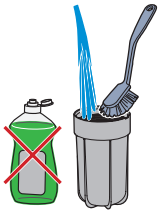


9

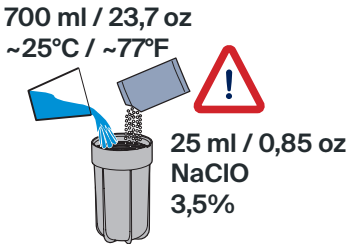


10

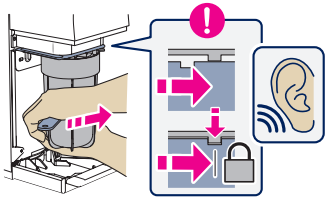


11

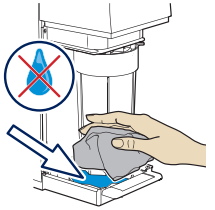


12

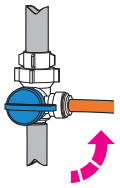


13

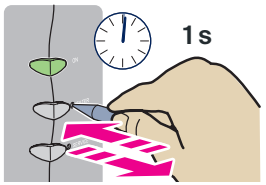

14

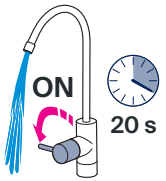


15 16

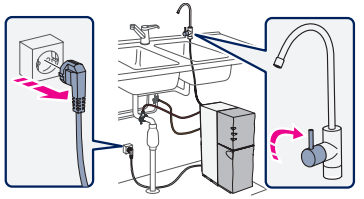


18




19

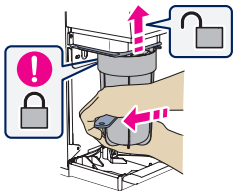

20

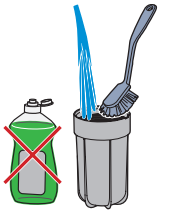


21

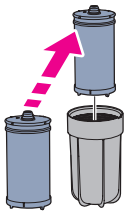


22




23

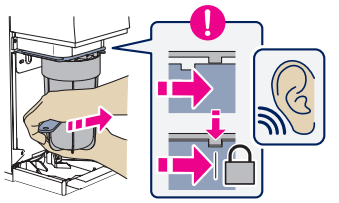

24

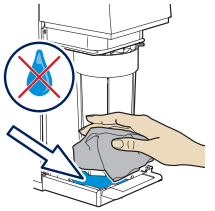


25

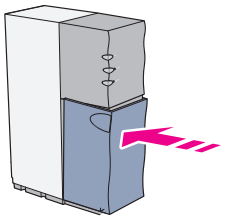


26




27




28

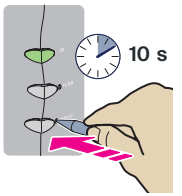


29

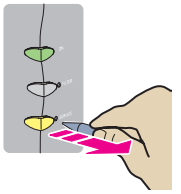

30

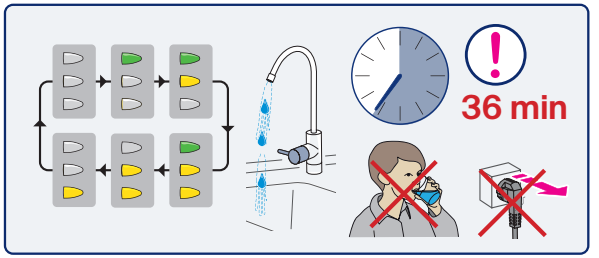


31

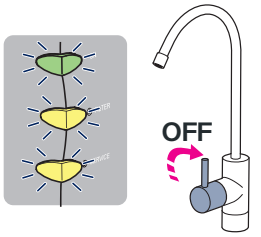

© Bluewater Group 2025

32

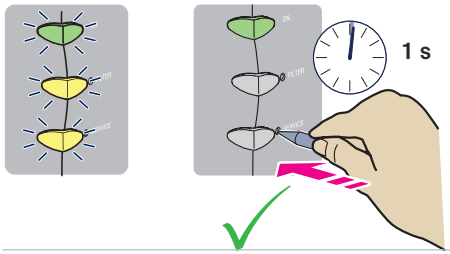

Other

Put into storage

We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.


Put the water purifier into storage using the preserving agent if Spirit is disconnected from the water or electricity for >5 days. As long as Spirit remains connected to water and electricity, it can be left unused with the purified water faucet off for an extended period of time. If Spirit will not be used for 4 or more months, Bluewater recommends that the water purifier be put into storage using the preserving agent.

Preserving agent can cause skin irritation. Keep the preserving agent out of the reach of children.


When handling the preserving agent, wear protective gloves and eye protection. Wash hands after using.

To order the preserving agent, contact your Bluewater dealer.


1




2

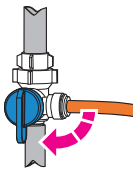


3

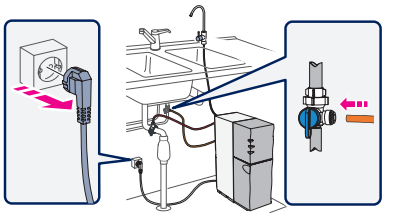


4

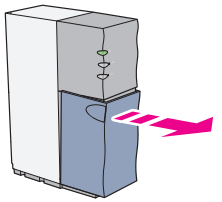

5

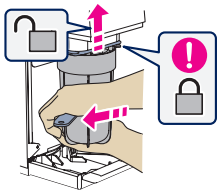


6

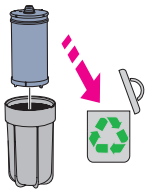


7



8

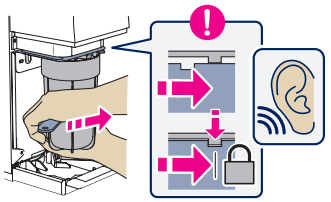


9

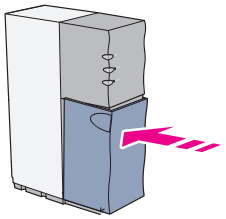


10




11

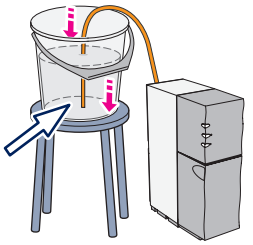


12

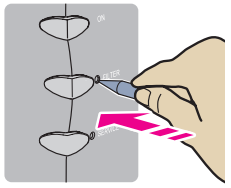

13




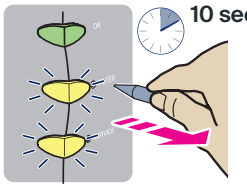

14




15

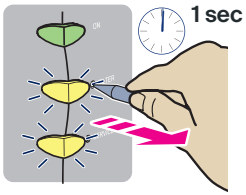


© Bluewater Group 2025


16

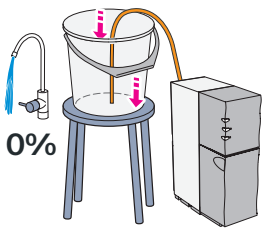

17

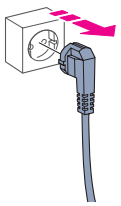

18

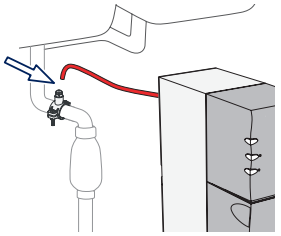

Other

Reinstall after storage


Preserving agent can cause skin irritation. Keep the preserving agent out of the reach of children.

When handling the preserving agent, wear protective gloves and eye protection. Wash hands after using


We recommend only approved technicians, distributors, or Bluewater service personnel perform servicing and repairs on the water purifier.

For more information on installation procedures, see “Installation” on page 14.


1

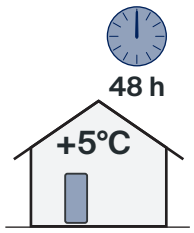


2

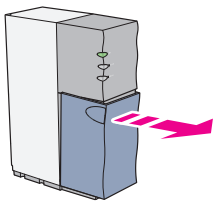


3

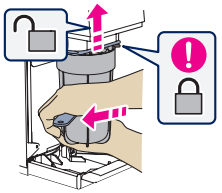

4

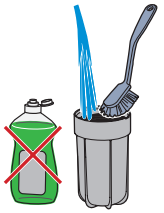


5

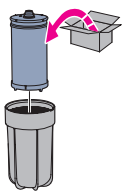


6




7

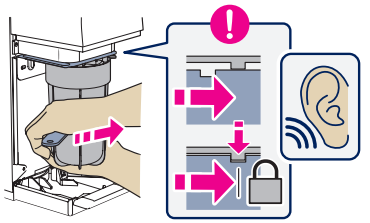


8

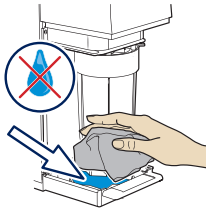


9

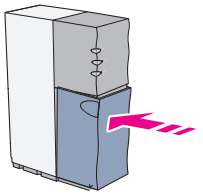

10

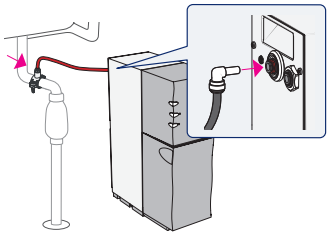


11

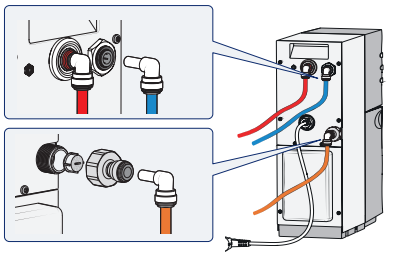


12

13

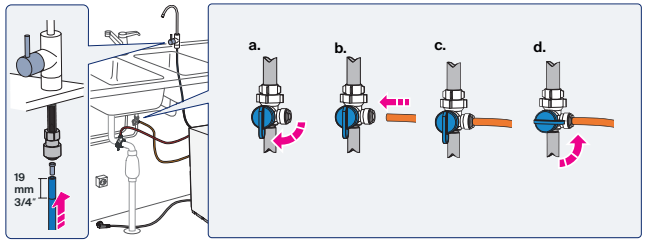


14




15




16



17

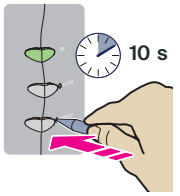


18

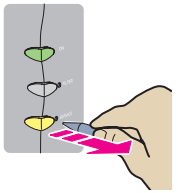


© Bluewater Group 2025


19

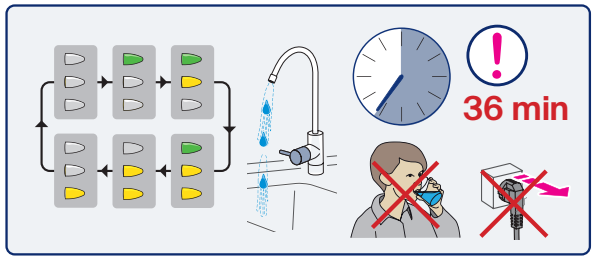


20

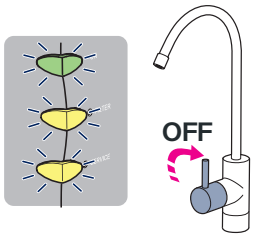

21

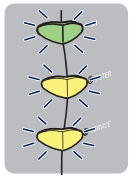


22

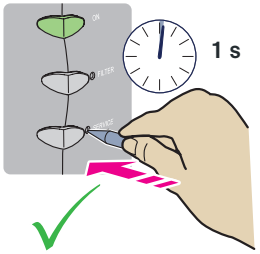

Do a check for leaks

Check all hose, tubing, valve, faucet, and drinking water equipment connections. If there are any leaks, see “Repair leaks” on page 25.

23

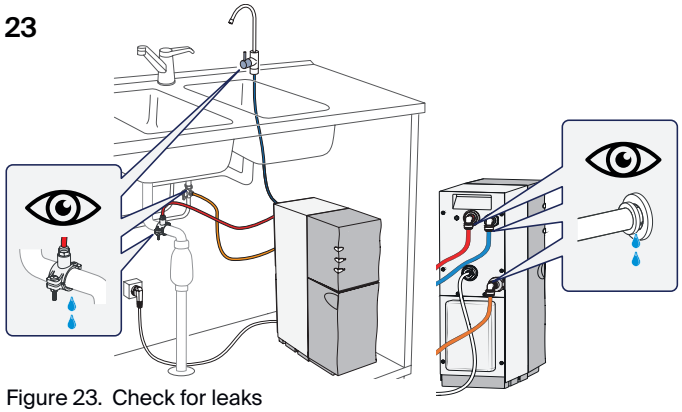

24



Figure 23. Check for leaks

Steps 15-22 briefly cover the Commissioning flush procedures. For complete instructions, see “Commissioning flush” on page 19.

Technical information

Technical data

Parameter	
Size W×D×H [mm (inches)]	150×360×462 (5.9×14.3×18.2)
Weight [kg (lbs)]	15 (33)
Power supply, earthed/grounded Power supply, earthed/grounded, US	220-240V, 50/60 Hz, 10A, 120V, 60 Hz, 10A
Power (US) [W (Amps)]	350 (3A)
Faucet with water quality indicator light	Optional
Compatible with household appliances	✓
On/off [bar (psi)]	3/4 (43.5/58)
Operation sequence (production/flush) [min]	15/2.5
Prefiltration	10 µm Sediment Activated Carbon

REQUIREMENTS FOR INLET WATER to water purifier

Do not use with inlet supply water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Only connect to the cold water supply. The temperature limits are in the table below.

If the inlet supply water quality changes, contact your Bluewater dealer.


For more detailed technical information, see www.bluewatergroup.com.

Description	
Temperature [°C (°F)]	2–35 (36–95)
Inlet water flowing pressure [kPa (bar) (psi)]	200 –1000 kPa (2 –10 bar) (29–145 psi)
TDS/PPM (Total Dissolved Solids) [mg/l = ppm]	< 1200
Inlet water flow [l/min (gal/min)]	> 6 (1.6)
Conductivity µS/cm @ 25°C (77°F)	< 1600
Hardness [°dH (grains per gallon)]	< 10 °dH (< 10.4 gpg)
Turbidity (FNU)	<0.5 FNU
Iron Fe(II) / Fe(III) (mg/l)	< 0.5
pH	6 - 9
Manganese (Mn2+)	<0.3 mg/l
Chlorine (Cl2)	<1.0 mg/l

© Bluewater Group 2025

Troubleshooting

How to solve simple problems

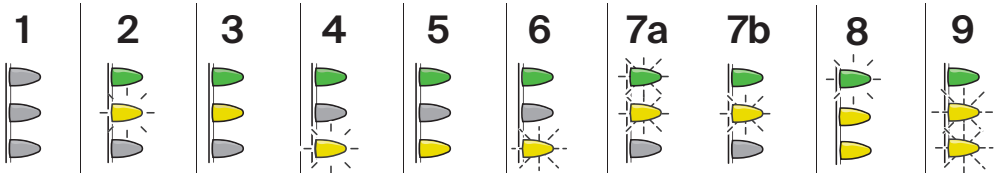


If Spirit stops because of an emergency, do one of the following to restart the water purifier. Disconnect the water purifier from power and connect it again, or, if the SERVICE light is On or Flashing, press and hold the SERVICE Button for 5 seconds. If the FILTER light is On or Flashing, press and hold the FILTER Button for 5 seconds. If both lights are On or Flashing, press and hold the FILTER Button for 5 seconds. If this problem continues, contact your Bluewater dealer.

	Symptom	Cause	Solution
1	The ON light is not on.	The water purifier is not connected to power.	Connect the water purifier to power.
2	The FILTER light is Flashing slowly.	The filter must be replaced.	See “Replace filter” on page 26.
3	The FILTER light is ON.	The filter replacement time has lapsed. The filter should be replaced.	See “Replace filter” on page 26.
4	The SERVICE light is Flashing slowly after 30 seconds.* *It is normal for the SERVICE light to Flash slowly for the first 30 seconds each time the purified water faucet is turned on.	If the SERVICE light continues Flashing slowly beyond 30 seconds, this indicates that the purified water quality has decreased. The purified water is still safe to drink.	Contact your Bluewater dealer to replace the RO membrane.
5	The SERVICE light is ON.	The water quality is initially decreased during purification. Do not drink the water yet.	Wait for up to 120 seconds for the SERVICE light to go off before drinking. If the water purifier stops, contact your Bluewater dealer. If the SERVICE light changes and begins Flashing slowly, refer to condition 4 above and contact your Bluewater dealer.
		The water purifier has stopped. A recent filter replacement may have introduced air into the system, causing a sensor malfunction.	Disconnect the water purifier from power. Reconnect it. Let the water purifier do the automatic flush.
		The water purifier has stopped. The purified water quality has become too low.	Contact your Bluewater dealer to replace the RO membrane.
6	The SERVICE light is Flashing quickly	The inlet water or purified water quality sensors are not functioning correctly.	Wait for up to 120 seconds for the SERVICE light to go off before drinking. If the water purifier stops or continues Flashing, contact your Bluewater dealer.
7a	The ON light and the FILTER light are Flashing quickly.	The low inlet water pressure restart function is active.	See “Low pressure restart function” on page 10. For possible causes, see section 7b below.
7b	The water purifier makes noise, or the FILTER light is Flashing quickly while the ON light is On. This is due to low inlet water pressure.	The Inlet Grid Filter is blocked.	See “Clean the Inlet Grid Filter” on page 31.
		The filter is blocked.	See “Replace filter” on page 26.
		The inlet pressure was lower than 1.5 bar (22 psi) during operation.	If the water purifier stops, contact your Bluewater dealer.
8	The ON light is Flashing slowly. The FILTER light and SERVICE light are On.	The faucet is not completely closed.	Close the faucet.
		There is a small leakage inside or outside the water purifier.	Disconnect the water purifier from power. See “Check for leaks” on page 23 and “Repair leaks” on page 25.
9	The FILTER light and the SERVICE light are Flashing quickly.	The leakage overflow protection system is activated.	Disconnect the water purifier from power and clean the base plate. If the overflow protection is activated again, contact your Bluewater dealer.
	The flow rate from the purified water faucet is low.	The water purifier needs to be descaled.	See “Descale” on page ??.
		The purified water tubing has been sharply bent or blocked.	Make sure that there are no sharp bends in the purified water tubing and that it can move freely.
	Water does not flow from the purified water faucet.	The inlet water shut-off valve is closed.	Open the inlet water shut-off valve.
	The water from the water purifier smells bad.	Possible Microbial (bacterial) growth in the water purifier due to the water purifier not being used for a long period of time.	See “Use disinfectant to clean the system” on page ??.

© Bluewater Group 2025

Trouble during the Commissioning flush

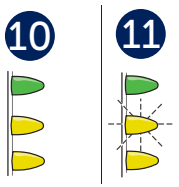

	Symptom	Cause	Solution
10	The ON light, FILTER light, and SERVICE light are on..	The faucet is closed.	Open the inlet water supply valve, then press the FILTER Button for 3 seconds..
11	The FILTER light is flashing quickly, and both the ON light and SERVICE light are on.	The inlet water supply is closed.	Open the inlet and press the Filter button for 3 seconds.
		The Inlet Grid Filter is blocked.	See “Clean the Inlet Grid Filter” on page ??..
		The filter is blocked.	See “Replace filter” on page 26.
		The inlet supply water pressure is lower than 1.5 bar during operation.	Contact your Bluewater dealer.

© Bluewater Group 2025

ENG: The installation must comply with applicable local plumbing codes and regulations.

FR: L'installation doit respecter les normes et réglementations de plomberie locales applicables

ES: La instalación de fontanería debe cumplir con la reglamentación y las normativas locales.

PT: A instalação deve cumprir as normas e os regulamentos de canalização locais aplicáveis.

IT: L'installazione deve rispettare i codici e le regolamentazioni idrauliche locali vigenti.

DE: Die Installation muss die örtlichen Vorschriften und Richtlinien für Wasser bzw. Sanitäranlagen erfüllen.

PL: Muszą być spełnione obowiązujące przepisy i regulacje dotyczące instalacji wodociągowej.

RU: Установка должна соответствовать действующим местным санитарным нормам и правилам.

SE: Installationen måste uppfylla gällande VVS-regler och -förordningar.

FI: Asennus on tehtävä sovellettavien paikallisten LVI-sääntöjen ja -määräysten mukaisesti.

NO: Installasjonen må utføres i henhold til gjeldende praksis og bestemmelser for rørleggerarbeid.

DK: Installationen skal overholde de gældende lokale regler og forskrifter for VVS-installationer.

ZH: 必须按照适用的当地管道标准和法规进行安装.

AR: يجب ان يتوافق التركيب مع قوانين ومعايير السباكة المحلية المعمول به

Bluewater is a world leading water purification company. Headquartered in Stockholm, Sweden, the company helps people and businesses globally enjoy the health and wellbeing benefits of cleaner, healthier tap water.

Bluewater innovates, makes, and sells compact water purifiers that harness the company's patented reverse osmosis technology to remove virtually all pollutants from tap water, including lead, bacteria, pesticides, medical residues, chlorine, and limescale.

Please visit us at bluewatergroup.com

BLUEWATER

Danderydsgatan 11
SE-114 26 Stockholm
Sweden
E: info@bluewatergroup.com

bluewatergroup.com

Document No 822901750 Revision 2219 © Bluewater Group 2025