
Shop Learn

Blog Forums IO

Adafruit Powerboost 1000C

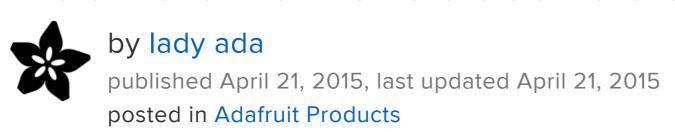

Overview

▲ Download

X

X

— 0

Sign In

Pinouts

LIVE! AdaBox

Intermediate Product guide

Assembly F.A.Q. Downloads Single page Feedback? Corrections?


Primary Products



PowerBoost 1000 Charger -Rechargeable 5V Lipo USB Boost @


view all

\$19.95 Add to Cart

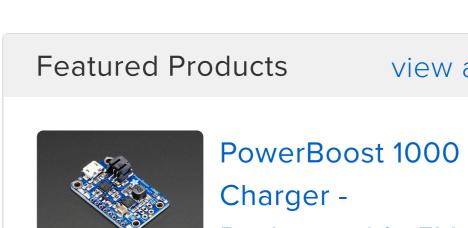

Rechargeable 5V Lipo USB Boost @ \$19.95

Add to Cart

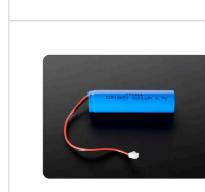

Cylindrical Battery -3.7v 2200mAh \$9.95 Add to Cart


Lithium Ion




4400mAh Out of Stock



Pack - 3.7V 6600mAh \$24.50 Add to Cart

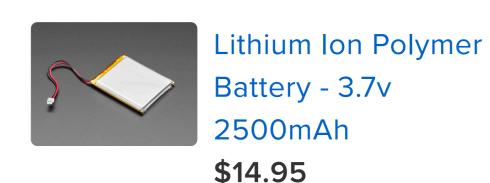

Battery - 3.7v 2500mAh \$14.95 Add to Cart

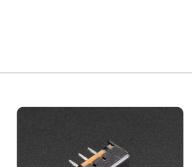

Breadboardfriendly SPDT Slide Switch \$0.95




5V 2.5A Switching Power Supply with **20AWG MicroUSB** Cable Out of Stock

Add to Cart

Pinouts

Playground

For many people, the PowerBoost 500C can be used with just the microUSB charge input, battery plug and power outputs. However, we have a couple handy breakouts so lets get started!

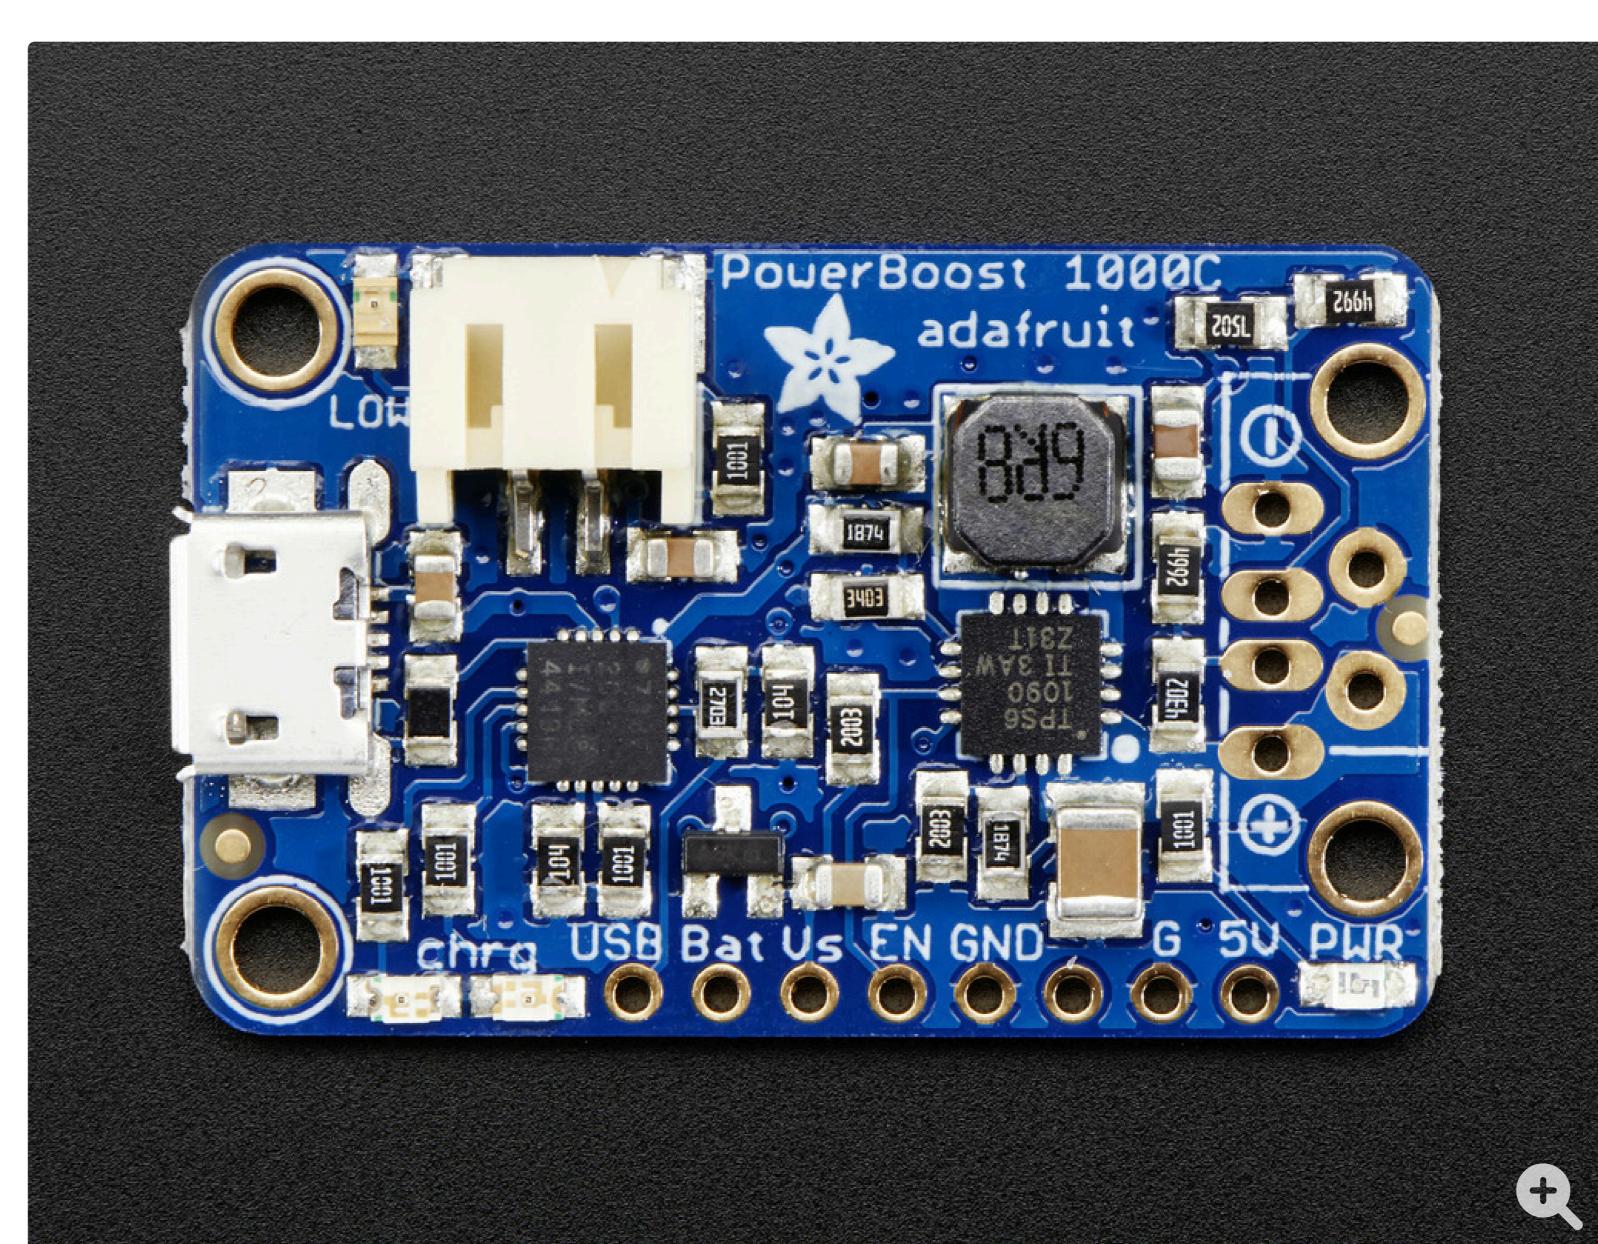

Power Pins

There's three power voltages, the USB input for charging the battery (4.75-5.25V whatever is coming out of the USB port), the battery itself (3-4.2V) and the output (5-5.2V)

- USB this is the micro USB 5V power pin. It's the pin that is used to charge the battery, NOT the output power! You can use this if you want to grab power from the microUSB port when it is plugged in
- BAT this is the battery input, connected directly to the JST connector. For most Lithium batteries, this will range from 3.0V when near-dead to 4.2V when fully-charged. Higher voltages will let you draw more current and in general, are more efficient. Try to keep the wires going to this pin nice and short - 3" or less is best!
- VS this is the load shared output from the battery charger. When there is 5V coming in from the micro-B USB power plug, this pin will have approx 5V on it (less a little due to the internal resistance of the charger chip's MOSFET). When there's no USB charging, the Vs pin will be the same voltage as the Bat pin.
- GND this is the power ground. This boost converter is not 'isolated' the ground input is the same as the ground output • 5V - this is the boosted output. When the board is running, the voltage will be 5.2V approximately. It may dip
- down to 5V as the current draw starts to go up (over 500mA). When the board is disabled, this output is 'floating' but you should still try not to apply a voltage to it while the board is disabled. There's a blue LED connected to this pin which will let you know when there's power output

Control Pins

There's two 'control' pins.

- EN this is the 'enable' pin. By default it is pulled 'high' to VS. To turn off the booster, connect this pin to ground. The switch can be as small as you like, it is just a signal. Contrast this to an inline power switch which would have to be able to handle up to 2A of current! When the chip is disabled the output is completely disconnected from the input.
- LBO not a leveraged buy out! this is the Low Battery Output. By default it is pulled high to BAT but when the charger detects a low voltage (under 3.2V) the pin will drop down to 0V. You can use this to signal when its time to shut down or alert the user that the battery is low. There is also a red LED connected to this pin.

Please note - you cannot connect these together to 'auto shut off' when the battery is low.



The LBO output is pulled up to Vin, and is not suitable for direct connection to 3.3V logic GPIO!


full)

 LEDs There are **four** onboard LEDs.

- The Blue LED sits next to the USB connector socket, and indicates the 5V output power state.
- The Red LED is next to the battery JST port and indicates when the battery voltage is below 3.2VDC (Low **Battery Output)**
- The Yellow LED is next to the microUSB connector and indicates when the battery is being charged • The Green LED is also next to the microUSB connector and indicates when the battery is done charging (all

Battery and USB connection

You can connect a battery to the breakout strip or to the JST connector. All of Adafruit batteries come with JST cables that will plug in nicely so we strongly suggest that. Watch the polarity of the cable!

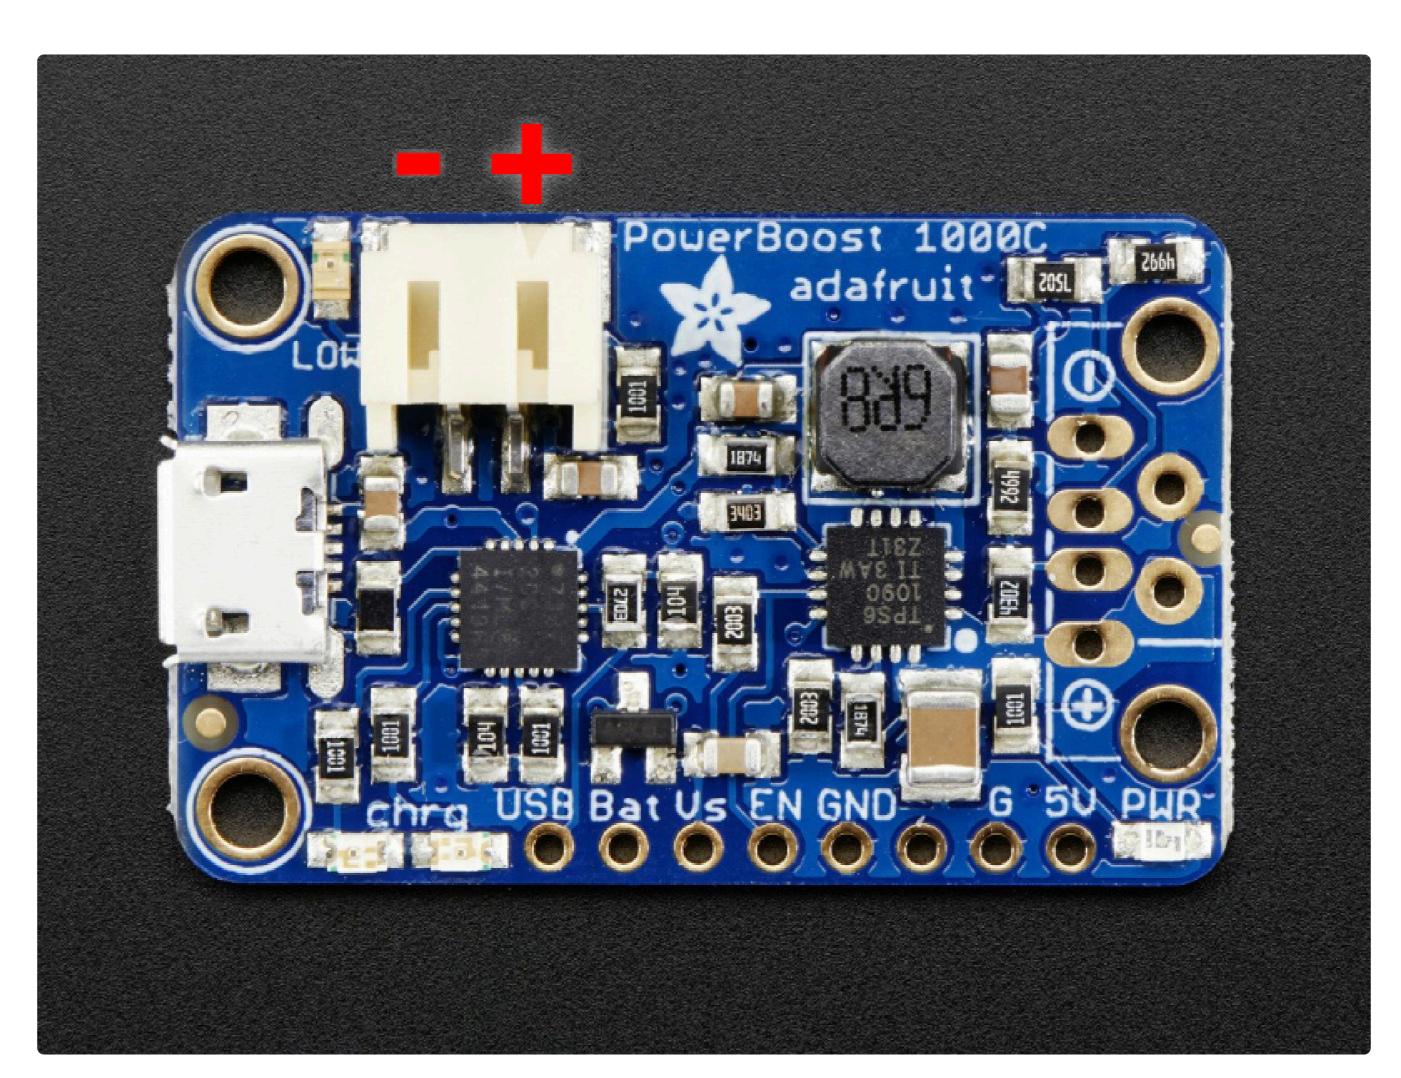

The USB connector can be soldered on to create a portable 'USB power pack'. The two data lines on USB have resistor dividers that match Apple charger values for 1A charge rate so that you can plug any iOS device in to charge. 99% of other phones, devices and tables are totally cool with these resistors as well. You can always short the D+ and D- lines if you happen to have a phone that wants shorted data lines.

If you don't want a USB connector attached, there are two holes that are designed for a 3.5mm spaced terminal block (not included)




Some third-party LiPo cells have JST connectors wired opposite from the standard. Connecting these to the PowerBoost will damage your PowerBoost. Double check the polarity before connecting.

Text editor powered by tinymce.

Assembly >

Related Guides

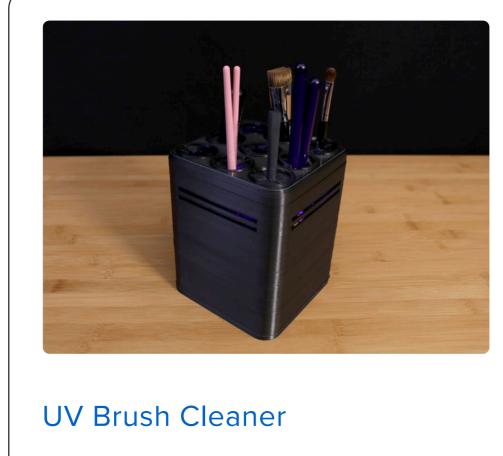

By Ruiz Brothers Beginner



Overview


10" Raspberry Pi Desktop

By Ruiz Brothers Intermediate



Mini Raspberry Pi Handheld Notebook

By Ruiz Brothers ****140 Intermediate

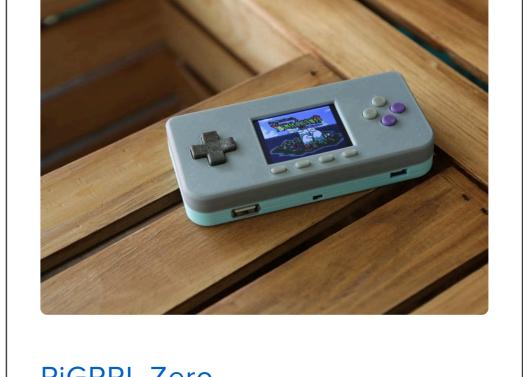

PiGRRL Zero

By Ruiz Brothers ****275 Intermediate

About Us Contact Us Tech Support Press **Forums Educators FAQs Distributors** Shipping & Jobs Returns Gift Cards

"I would rather entertain and hope that people learned something than educate people and hope they were entertained"

Walt Disney

Freebies

Terms of

Service

Website

Privacy & Legal

Accessibility

