Your Kindle apps

Apps, Home Assistant, To Do, Notes, Crosswords, Wikipedia, Syncthing, SSH and the Web server for KOReader

A user guide

Contents

Getting started 7

Finding your way around 8

Opening the apps 9

The sleep screen 9

Updating the plugins 10

Apps (the launcher) 11

Opening Apps 11

The top of the screen 12

The tiles 14

The Battery screen 16

The Gestures screen 17

Settings 18

The Apps sleep screen 20

Gestures on the launcher 21

Home Assistant 22

Opening it and signing in 22

The title bar 23

Home 23

Tiles: tap and hold 25

Rooms 26

The other screens 27
Cameras and Send to Notes 29
The dashboard 30
Routines 32
Alerts 32
Settings 34

To Do 37

Opening it and signing in 37
Home 38
Lists and tasks 39
Adding a task 40
A task's page 42
Today, Agenda, Starred, Calendar, Search 43
Split view 44
Syncing 44
The sleep screen 45
Settings 45

Notes 47

Getting started 47
The notebook list 48
Writing 52
The lasso 58
Shapes and snapping 59
Text, pictures, tape and links 60

Tidy handwriting 60
Zoom window 62
Pages 63
Orientation and two pages side by side 66
Quick note 68
Writing on a book's pages 69
PDFs as notebooks 69
AI features 69
OneNote 71
Export 74
Open on the web page 74
Settings 74
Gestures 77

Crosswords 78
Getting crosswords 79
Solving 83
The answers page 93
The puzzle list 94
Importing puzzles 95
Crossword settings 96
Crosswords on the web page 97

Wikipedia 99
Opening Wikipedia 99
The front page 99

While Wikipedia downloads 103
Reading an article 104
Settings 107
On the web page 109

Syncthing 110
Opening it 111
Setting it up 111
The app 112
The menu 115
On the web page 116
Good to know 116

SSH 117
Opening it 118
Adding a host 118
Trusting a host 118
A host's page 119
Running a command 121
Commands 122
Long-press menus 123
Live session 125
Run on several hosts 127
Keys 127
Dark mode 129
On the web page 129

Good to know 130

Web server 131

Starting it 131

The page 132

Home 134

Files 135

Reading 139

Apps 141

Home Assistant 142

To Do 143

KOReader 145

System 146

Notes, Crosswords, Wikipedia, Syncthing and SSH 148

Credits 149

Getting started

This guide covers these plugins for KOReader on a Kindle Scribe:

- **Apps**: a launcher with big tiles for everything else, the weather, what's next and your recent books.
- **Home Assistant**: your lights, locks, thermostat, cameras and more, plus a nightstand dashboard.
- **To Do**: your Microsoft To Do lists and tasks, also when Wi-Fi is off.
- **Notes**: handwritten notebooks for the pen.
- **Crosswords**: puzzle books in Notes, from several newspapers, solved with the pen.
- **Wikipedia**: look up and read Wikipedia articles, and save them to read offline.
- **Syncthing**: keeps folders on the Kindle in sync with your computer or phone over Wi-Fi.
- **SSH**: run commands on your other devices (a PC, a NAS, a Raspberry Pi) and read what they print, or open a live session.
- **Web server**: a web page on the Kindle for your phone or computer, to manage all of the above with a keyboard.

Smaller things the plugins add, and where to find them:

- **Reading time and statistics**: the launcher's **Reading time** tile, and the web page's **Reading** tab (today, days in a row, each book; fix or delete a reading session; progress sync).
- **Battery**: the launcher's **Battery** tile, and the **Battery** card on the web page's **System** tab: how fast it goes awake and asleep, and what is on that uses power.
- **KOReader's own settings**: the launcher's **KOReader settings** tile, and the web page's **KOReader** tab (folders, when the Kindle sleeps, and KOReader's whole menu).
- **Restart KOReader**: the launcher's ⋮ menu (or a tile you can show).

- **When something goes wrong**: the web page's **System** tab: crashes and freezes (**Problems**), memory, a network check, when the Kindle slept and woke, detailed logging, and a diagnostics file to send. The launcher also says when KOReader crashed or froze the last time.
- **Files and books from a browser**: the web page's **Files** tab: upload (or get a file from a link), search every folder, favorites and collections, a book's details and its highlights.

Each chapter starts with how to open the app and then goes screen by screen. Names in **bold** are what you see on the Kindle's screen.

Finding your way around

All the apps follow the same habits:

- **‹** at the top left goes back. On the first screen it closes the app.
- ⋮ at the top right has the app's menu: usually the light, night mode, a screen refresh and the app's own actions. **Open on the web page** starts the web server and shows a QR code: scan it with your phone to open the same place there (in a To Do list, that list), handy for typing a lot.
- The **gear** opens the app's settings.
- Long screens turn pages instead of scrolling: swipe left or right, or tap the arrows next to the page number.
- **Hold** something (a tile, a task, a notebook, a book) for more choices.
- The clock and battery are at the top of each app's screen (each app's settings can turn them off).

> Your KOReader gestures still work inside these apps: two-finger swipes, edge swipes, multiswipes and pinches. Only the gestures that make sense there run (the light, night mode, a refresh, Wi-Fi, a screenshot and the apps' own actions).

Opening the apps

There are three ways:

- **The launcher**: open **Apps** and tap a tile. It can open by itself when KOReader starts (Apps settings > **Open at startup**).
- **KOReader's menu**: the **Tools** tab (the wrench) has **Apps**, **Home Assistant**, **To Do**, **Notes**, **Wikipedia** and **Web server**; **Syncthing** and **SSH** are under **Settings (gear) > Network**.
- **A gesture**: KOReader's **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General**. Each app has its actions there, such as **Apps**, **Home Assistant dashboard**, **To Do: add a task** or **Notes: today's page**.

The sleep screen

When the Kindle sleeps, it can show one of the apps instead of KOReader's own sleep screen. Choose in Apps settings, To Do settings or Home Assistant settings (it is the same setting everywhere):

- **To Do tasks**: today's date with overdue tasks, today's and what's next.
- **Home Assistant**: a summary of the home.
- **Apps summary**: the date, battery, weather, what's next and today's tasks.
- **KOReader's own**: KOReader's usual sleep screen.

Sleep screen updates (Off, every 15 or 30 minutes, every hour) wakes the Kindle briefly to draw the sleep screen again, so the time and tasks stay current. Each wake uses a little battery.

Home Assistant can also add **Sleep screen alerts** to any of these sleep screens: a box at the bottom listing a door left unlocked, a leak or a temperature you chose.

> KOReader can only draw the sleep screen when Amazon's lock-screen ads ("special offers") are off. With ads on, the setting says so.

Updating the plugins

New versions come as one file, **kindle-plugins.zip**. To install it:

1. On the Kindle, start the web server: **Tools > Web server > Start web server**.
2. On your phone or computer, open the address it shows.
3. On the **Home** tab, under **Update plugins**, tap **Install a zip...** and pick kindle-plugins.zip.


KOReader restarts with the new versions. Your settings, sign-ins and notebooks stay as they are.

If an update causes a problem, you can go back to the version before it:

- In Apps settings, tap **Undo a plugin update**.
- Or in KOReader's menu: **Tools > Web server > Undo a plugin update**.
- Or on the web page's Home tab: **Go back**.

Apps (the launcher)

Apps is a full screen of big tiles, one for each app and for anything else you pin there. Each tile has a line saying what is going on in it, such as "2 today · 1 overdue" on To Do or "6 on · All doors locked" on Home Assistant. Tap a tile to open it. The app opens on top of the launcher, so closing the app brings you back.

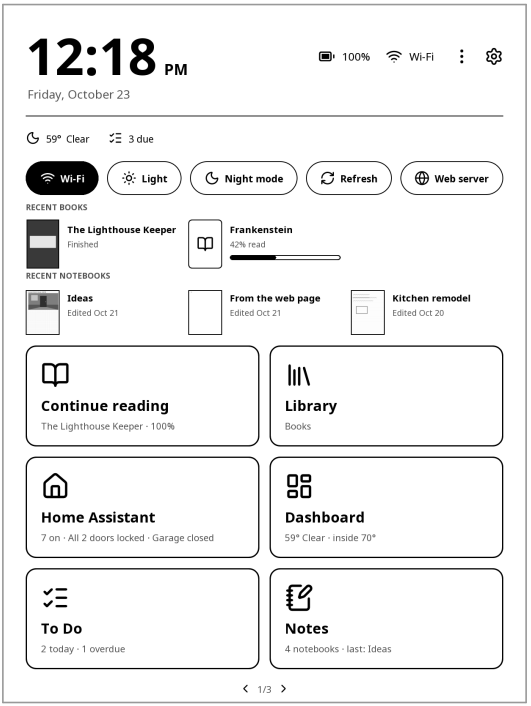

The launcher: clock, the At a glance line, quick buttons, recent books and tiles

Opening Apps

- **KOReader's menu**: **Tools > Apps**.
- **A gesture**: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Apps**.

- **At startup**: Apps settings > **Open at startup** opens it each time KOReader starts.

Opening Apps when it is already showing just refreshes it.

To leave Apps, open **Library** or a book, or tap **Exit KOReader**. Back also closes it.

The top of the screen

- **The clock** and the date. The clock updates every minute while the launcher is showing. Settings has a **24-hour clock** option.
- **The battery**, filled to its charge (a lightning bolt while charging), and its percentage.
- **Wi-Fi**: on or **Off**.
- ⋮ has **Open on the web page**, **Restart KOReader** (after asking), **Help**, **Light** (on a Kindle with a front light), **Night mode** and **Refresh screen**.
- **The gear** opens the launcher's settings.

At a glance

The line under the clock shows three things when they are available. Tap any of them to go there.

- **The weather** from Home Assistant: the temperature, the conditions and today's high and low, such as "59° Clear · 64° / 48°". Tap it for Home Assistant's Weather screen.
- **What's next** (the clock icon): your next Home Assistant calendar event, or else the next To Do reminder in the next day and a half, with its time. Tap it for To Do's Today.
- **Tasks due** from To Do: "3 due" (overdue tasks count too) or "Nothing due". Tap it for To Do's Today.

Turn the line off in settings: **At a glance**.

Quick settings buttons

A row of buttons under the clock:

- **Wi-Fi**: turns Wi-Fi on or off. Filled black when on.

- **Light**: KOReader's front light dialog (only on a Kindle with a front light).
- **Night mode**: white text on black. Filled when on.
- **Refresh**: a full, flashing refresh that clears e-ink ghosting.
- **Web server**: starts or stops the web server. Filled when it is running. Off by default.

Settings > **Quick settings** opens a list: **Quick settings: On** (or **Off**) turns the whole row on or off, and a tick shows each button (**Refresh** is called **Refresh screen** there). While a button shows, the tile with the same name leaves the main page, so you don't have both.

> Turned on its side, the launcher puts the At a glance line and the buttons on one line.

Recent books

RECENT BOOKS shows the last books you read (three across, five on its side), with the cover when KOReader has one, the title and how far you are: a progress bar and "42% read", **Finished** or **Not started**.

- **Tap** a book to open it.
- **Hold** a book for:
  - **Open**
  - **Mark as finished** (or **Mark as reading**)
  - **Remove from history**
  - **Open its folder** (the library, at the book's folder)

Turn the row off in settings: **Recent books**.

Recent notebooks and crosswords

With Notes installed, two more rows can show under the books:

- **RECENT NOTEBOOKS**: the notebooks you used last, with their first page and when they were edited. A locked notebook shows a lock instead of its page. Tap one to open it; hold it for **Open**, **Add to Apps** or **Remove from recent**.
- **RECENT CROSSWORDS**: the puzzles you worked on last, with the grid as you've filled it so far, and "23 of 78 clues" with a bar (or **New** or **Done**). Tap

one to go straight to that puzzle; hold it for **Open** or **Remove from recent**.

Remove from recent takes a notebook or crossword off its row until you write in it again (or solve more clues). To bring one back sooner, open settings > **Removed from recent** (it shows only once something has been removed, with how many) and pick it, or **Show all**.

Turn each row off in settings: **Recent notebooks** and **Recent crosswords**. Rows that fit together share a line (one book beside two notebooks, say), to leave room for tiles. **Recent items** > **One row** shows just the newest book, notebook and crossword side by side, in a single row. The **Small** clock and the **Compact** layout give more room too.

The tiles

- **Continue reading**: the last book and how far in. Tap to open it.
- **Library**: KOReader's file browser.
- **Reading time**: how long you've read today and how many days in a row you've read, such as "25 min today · 4 days in a row". Tap to open your last book. It uses KOReader's reading statistics, so the Reading statistics plugin must be on.
- **Home Assistant** and **Dashboard**: see the Home Assistant chapter.
- **To Do**: "2 today · 1 overdue", or what's coming this week.
- **Notes**: how many notebooks, and the last one you wrote in.
- **Today's crossword**: the newest crossword from the source you used last, and whether it is new, started or done. Tap to open it (it is downloaded first when needed).
- **Wikipedia**: how many articles are saved and the last one read. Tap to open Wikipedia.
- **Syncthing**: "On · Up to date", "On · Syncing · 3 files left" or "Off". Tap to open Syncthing.
- **SSH**: how many hosts are saved, such as "3 hosts". Tap to open SSH.
- **Web server**: "On" and its address, or "Off · Tap to start".
- **Gestures**: what each KOReader gesture does (see below).

- **Battery**: the battery level and how fast it's going, such as "71% · 3.0% an hour awake", or "71% · Charging". Tap for the Battery screen (see below).
- **KOReader settings**: KOReader's own menu, opened at its Settings (gear) tab: Device (including **Autosuspend timeout**), Screen, Network, Taps and gestures and the rest.
- **Wi-Fi**: on, off or connected. Tap to switch.
- **Light** and **Night mode**: as the quick buttons.
- **Exit KOReader**: back to the Kindle's home screen, after asking.
- **Restart KOReader**: closes KOReader and opens it again, after asking. Hidden to start with; show it in Settings (the eye) if you want a tile. It's always in the ⋮ menu too.

A tile only shows when its app is installed. More tiles than fit turn pages: swipe left or right, or tap the arrows at the bottom.

If KOReader crashed or stopped answering the last time it ran, the launcher says so (with the time) the first time it opens. The web page's **System** tab (**Problems**) has the details.

Holding a tile

Hold any tile for:

- **Move earlier** and **Move later**
- **Move to a group...**
- **Hide** (or **Remove** for a shortcut)
- **Settings**

Groups

A group is a tile that opens a page of its own, like a folder on a phone.

1. Hold a tile and choose **Move to a group...**.
2. Choose **New group...** and give it a name, or pick an existing group.
3. The group's tile shows a folder and how many tiles are in it. Tap it to open its page.

To leave a group's page, tap its name at the top, press Back, or swipe right on its first page. To take a tile out of a group, hold it and choose **Move to a group... >**

Main page. Hold a group's tile to **Rename group** or **Delete group** (its tiles go back to the main page).

Shortcuts

A shortcut is a tile that goes straight to one place. In Apps settings, at the end of the tile list, tap **Add shortcut**:

- **Home Assistant screen or room**: Home, the Dashboard, any of its screens (Security, Climate, Weather…) or a room. Its line shows that place's summary, such as "Inside 70° · 40%".
- **To Do view or list**: Today, Agenda, Starred, Calendar, Search, or one of your lists.
- **Notebook**: a Notes notebook, with when it was last edited.
- **Notes folder**: a folder of notebooks.
- **Crossword**: one newspaper's newest crossword.
- **KOReader action**: anything a gesture can do that needs no setting, such as **Calibre: Connect** or **Push progress from this device**. Pick a group (General, Device, Screen and lights, File browser, Book) and then the action. It runs when you tap the tile, just like the gesture. Book actions need a book open.

Home Assistant, To Do and Notes can add shortcuts themselves: their ⋮ menu has **Add to Apps** on the screen you're looking at.

To remove a shortcut, hold it and choose **Remove**, or tap its **x** in settings.

The Battery screen

The **Battery** tile opens KOReader's own battery statistics, shown plainly. It needs KOReader's **Battery statistics** plugin, which is on unless you've turned it off:


- The level, and about how long it will last awake at the rate you've been using it.
- **SINCE THE LAST CHARGE**: how much went while **Awake** and while **Asleep**, how long each, and how much an hour; **In all** for both.
- **THE LAST CHARGE**: how much it charged, in how long.

- **ON NOW**: what is on that uses power: Wi-Fi, the front light, the web server, Syncthing, the Home Assistant dashboard keeping the screen on, anything keeping the Kindle awake.
- **Reset statistics** starts counting again.

KOReader can only tell awake from asleep, not which app used what. To see what costs most, reset, use the Kindle one way for a while (say Syncthing on, or the web server running), and look again.

The Gestures screen

The **Gestures** tile lists every KOReader gesture that does something, with what it does, in KOReader's own words. For example, "⇐ → Folder shortcuts" under **TWO-FINGER SWIPE**. It's handy for finding a gesture that fires by accident.

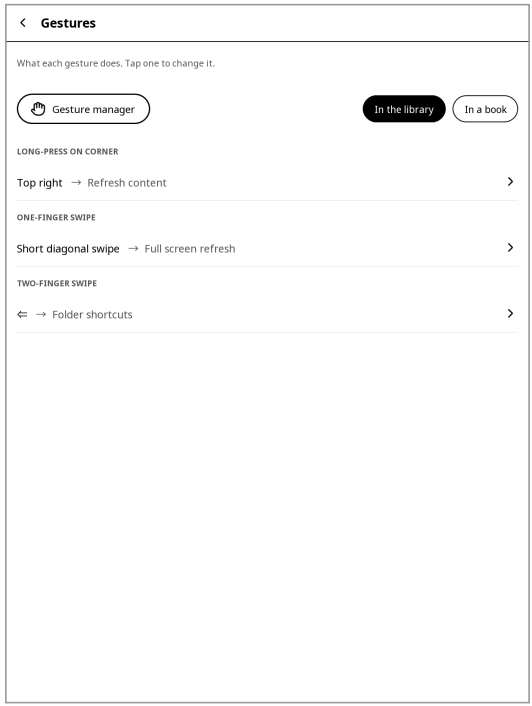

The Gestures screen


- **In the library** and **In a book** switch between the two sets of gestures.

- **Tap a gesture** to change it in KOReader's own menu for it: choose another action, **Pass through** (do nothing here) or **Nothing**. Changes take effect at once.
- **Gesture manager** opens KOReader's whole gesture menu, to set up new gestures.

You can only change the set you are in: the library's while in the library, a book's while reading. The other set is shown for reference.

Settings

Tap the gear.

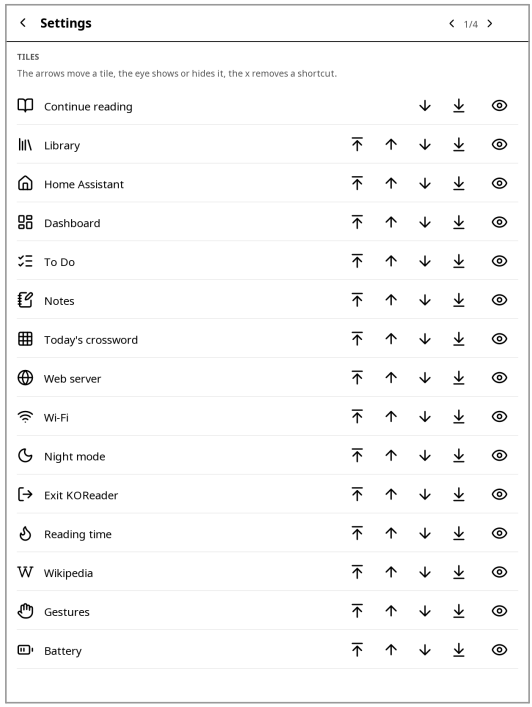

Apps settings


Tiles

Every tile is listed, hidden ones greyed and grouped ones with their group's name.

- **The arrows** move a tile to the top, up one, down one or to the bottom.
- **The eye** shows or hides it.
- **The x** removes a shortcut or deletes a group.
- **Undo** at the top puts back the last move (tap again for the one before).
- **Add shortcut** is at the end of the list.

Display

- **Layout**: **Tiles** (outlined), **Bold tiles** (filled black), **Compact** (small tiles, just the icon and name, so many fit on a page), **List** (a row each; two columns on its side) or **Icons** (like a phone; smaller when that fits two rows).
- **Clock**: **Large**, or **Small** (the time and date on one line, leaving more room for tiles). On its side the clock is always the one-line kind.
- **Recent items**: **Separate rows** (books, notebooks and crosswords each in a row, sharing lines when they fit) or **One row** (the newest of each).
- **Columns**: 1, 2 or 3 tiles across (two more when turned on its side).
- **Dark mode**: a black launcher.
- **24-hour clock**.
- **At a glance**, **Quick settings** and **Recent books**: the three rows under the clock.
- **Night mode**, **Light** and **Refresh screen**: KOReader's own.
- **Sleep screen** and **Sleep screen updates**: see "The sleep screen" in Getting started.
- **Undo a plugin update**: lists the plugins that have an earlier version, each as "name (before <date>)". Pick one and confirm with **Go back**; KOReader restarts. With none to undo it says "No plugin has an earlier version to go back to."

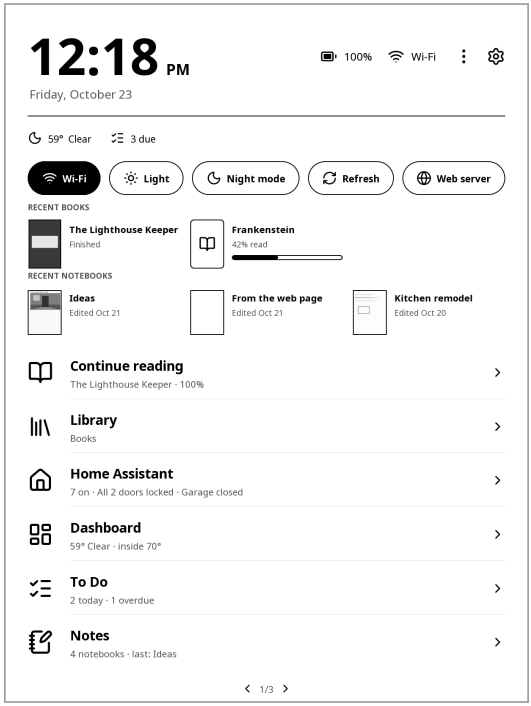

The List layout

Start

- **Open at startup**: Apps opens when KOReader starts.

Wi-Fi

- **Turn off when idle**: **Off**, or after 5, 15 or 30 minutes with no network use. Downloads, syncing and Home Assistant's updates count as use. It never turns Wi-Fi off while the web server is on, and time asleep doesn't count. A notice says when it happens.

The Apps sleep screen

With **Sleep screen** set to **Apps summary**, the sleeping Kindle shows:

- The date, "Sleeping since 3:05 PM" and the battery (with the charging sign on the charger).
- The weather with today's high and low.

- **NEXT**: the next event or reminder.
- **TODAY**: today's and overdue tasks, with boxes.

Gestures on the launcher


- **Swipe** left or right to turn pages (also up or down).
- **Swipe diagonally** for a full refresh.
- Your own KOReader gestures that aren't taps work here too, for the light, night mode, a refresh, Wi-Fi, a screenshot and the apps.

Tips

- Hold anything that has no menu of its own and it acts like a tap.
- The screen flashes clean every few changes and whenever you come back from another app or a dialog.
- Shortcuts to a To Do list or a Home Assistant room show that place's own line, so the launcher becomes a small dashboard.

Home Assistant

Control your home from the Kindle: lights, switches, fans, the thermostat, locks, the garage, vacuums, speakers and TVs, cameras, scenes and scripts, room by room. A dashboard turns the Kindle into a nightstand display.

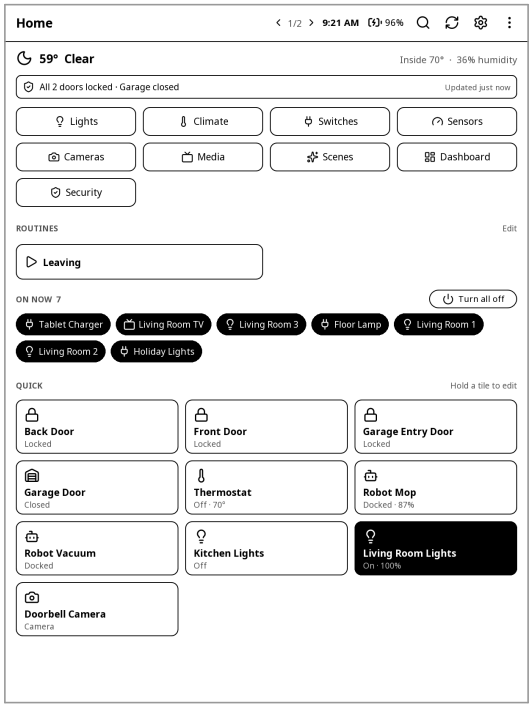

Home

Opening it and signing in

Open it from the launcher's **Home Assistant** or **Dashboard** tile, **Tools > Home Assistant**, or a gesture (**General > Home Assistant** or **Home Assistant dashboard**).

The first time, **Connect to Home Assistant** asks how to sign in:

- **Sign in with username and password**, as in the phone app:

1. **Internal URL**: the address at home, such as `http://homeassistant.local:8123`.
2. **External URL (optional)**: the address away from home, if you have one.
3. Your **Username** and **Password**, then **Sign in**.
4. If your account has two-step sign-in, a **Two-factor code** box asks for the code from your authenticator app.

- **Use a long-lived token**: make one in Home Assistant (your profile > Security), then **Load from file** (copy it to the Kindle first) or **Enter manually**.

The internal address is tried first, then the external one; the one that answered is tried first next time. "Connected to Home Assistant" says it worked.

> Home Assistant keeps working without Wi-Fi: the last states are kept, so the screens open at once. It updates every minute while it's open and the Kindle is online. It never turns Wi-Fi on by itself; tapping refresh or a device does (KOReader asks).

The title bar

- **‹** goes back. On Home there is none.
- **The page number** with arrows, on long screens. Tap either side to turn the page, or swipe.
- **The clock and battery** (Settings > **Clock and battery** turns them off).
- ⁝: **Open on the web page** (a QR code for the web page's Home Assistant tab), **Add to Apps** (puts this screen on the launcher; on screens that can be a tile, not on Search, Settings or Routines), **Light**, **Night mode**, **Refresh screen**. On Cameras and Security it also has **Reorder or hide cameras**.
- On Home: **the gear** (Settings), **refresh**, **search** and **the bell** with a count when Home Assistant has notifications.

Home

Home is made of sections. Settings > **Home sections** reorders or hides them.

Weather and status bar

- **The weather**: the temperature and conditions. Tap it for the Dashboard.
- **Inside**: the temperature and humidity inside.
- **The status bar** turns dark with a warning when something needs attention:
  - an unlocked lock
  - the garage open, and for how long
  - a door or window open, and for how long
  - a leak, smoke, gas or carbon monoxide
  - a device problem
  - a battery under 20%
- Otherwise it is light with a shield: "All 3 doors locked · Garage closed", or "All clear".
- Its right end says when Home Assistant last answered: "Updated 2 min ago", "Updating..." or "Update failed".

Shortcuts

A row of buttons for whole kinds of things. **Lights**, **Climate**, **Switches**, **Sensors**, **Cameras**, **Media**, **Scenes**, **Dashboard** and **Security** show to start with. **Doors**, **Vacuums**, **Weather**, **Activity**, **Batteries** and **3D printer** can be added in Settings > **Shortcuts**. Hold a shortcut for **Open** or **Add to Apps**.

Routines

Your routines as play buttons (see Routines below). Tap one to run it, hold it to change it. **Edit** opens the Routines screen.

On now

Everything that is on: lights, switches, fans, players. Tap one to turn it off, hold it for its controls. **Turn all off** turns them all off.

Quick

Your Quick tiles: the things you use most. To start with, the locks, covers, thermostats, vacuums and each room's lights. To add one, hold any device and choose **Quick & dashboard > Add to Quick**.

Rooms

Each room with a summary such as "2 on · closed · locked · 70°". Tap a room to open it. Rooms follow Home Assistant's floors unless you order them yourself (Settings > **Rooms**). Devices without a room are under **Everything Else**.

Tiles: tap and hold

Tap a tile for the obvious thing:

- **Lights, switches, fans**: on or off.
- **Locks**: lock or unlock.
- **Covers and the garage**: open or close.
- **Scenes**: turn on. **Scripts**: run.
- **Buttons** (a button device): press it. One named like cancel, stop, reboot, shutdown or restart asks first.
- **Cameras**: take a new picture.
- **Thermostats, players, vacuums and sensors**: open their controls.

The new state shows at once; Home Assistant's real one follows a moment later.

Some taps ask first: **Unlock** a lock, **Open** or **Close** the garage, **Run** a script. Each can be turned off in Settings > **CONFIRM**.

Hold any tile for its controls, which slide up from the bottom:

- **Lights**: brightness in steps; colors (**Red**, **Orange**, **Yellow**, **Green**, **Cyan**, **Blue**, **Purple**, **Pink**, **Warm white**, **Cool white**) or **Warm**, **Neutral** and **Cool** white.
- **Fans**: **SPEED**, **PRESET** and **Oscillate**.
- **Thermostats**: **MODE** (Heat, Cool, Heat/Cool, Off…), the set temperature with big − and + (both **HEAT TO** and **COOL TO** in Heat/Cool), and **FAN**.
- **Covers**: **Open**, **Stop**, **Close** and **POSITION**.
- **Locks**: one big **Lock** or **Unlock**.
- **Vacuums**: **Start**, **Pause** and **Return to dock**.
- **Players**: previous, play/pause, next, mute, volume and **Source**, with what's playing.


- **On and off**: lights, switches, fans and players have an on/off switch at the top right. A TV that Home Assistant can't wake says so: it can turn it on only once Wake-on-LAN or a turn-on automation is set up for it.
- **Cameras**: **Open full screen**, and **PLACEHOLDER IMAGE**: the drawing shown until the picture arrives (**Automatic**, **Doorway**, **Garage**, **Room**, **3D printer**).
- **Sensors with a number**: a bar graph of the **LAST 24 HOURS** with its highest and lowest.

At the bottom of every sheet:

- **Quick & dashboard**: add it to or remove it from Home's Quick tiles, or the dashboard (scenes and scripts become the dashboard's scene buttons).
- **Hide**: takes it off the screens. Settings > **Devices** brings it back.

Rooms

A room's screen shows its temperature and humidity, how much is on (with **All off**), then its devices by kind: **LIGHTS**, **SWITCHES**, **CLIMATE**, **DOORS**, **MEDIA**, **CLEANING**, **CAMERAS**, **SCENES & SCRIPTS** and **SENSORS**. Cameras show their picture: tap to refresh, hold for full screen. The grip icon at the top reorders or hides the room's devices.

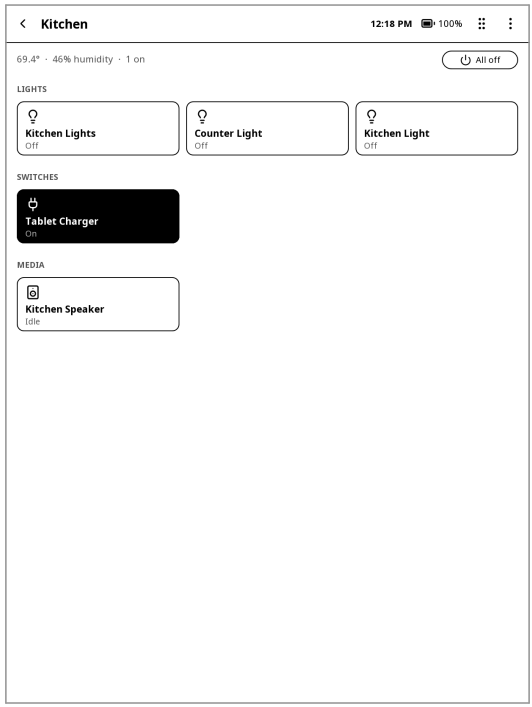


A room

The other screens

- **Lights**, **Switches**, **Sensors**, **Doors**, **Vacuums**: everything of that kind, by room. Lights and Switches have **Turn all off**.
- **Climate**: a card for each thermostat with the temperature now, what it is doing, and – and + for the set point; then **FANS** and each room's temperature and humidity.
- **Cameras**: every camera's picture. Tap one for a new picture, hold for full screen. Refresh at the top updates them all.
- **Media**: each playing speaker or TV with its controls, then the others.
- **Scenes & scripts**: each with **Run**.
- **Security**: the status bar, **LOCKS & DOORS** (with **Lock all** when something is unlocked), the security cameras, and door, window, motion, smoke and leak sensors.


- **Weather**: now (temperature, humidity, wind, inside), **NEXT HOURS** with the chance of rain, and **NEXT DAYS** with highs and lows.
- **Activity**: what changed, newest first.
- **Batteries**: every battery, lowest first, bold under 20%.
- **3D printer**: its camera, the print's progress, file, time left and layer; **TEMPERATURES** (nozzle and bed); **CONTROLS**, named as the printer names them (such as **Pause**, **Resume**, **Cancel** or **Stop**); and **DETAILS**.
- **Search** (the magnifier on Home): find a device by name, room or id.
- **Notifications** (the bell): Home Assistant's notifications, each with **Dismiss**, and **Dismiss all**.

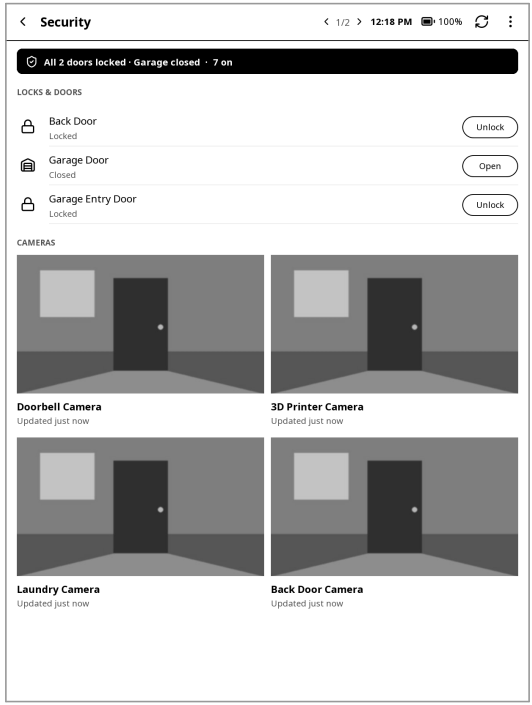

Security

Cameras and Send to Notes

A camera's full-screen view shows its newest picture. Tap it, or refresh, for a new one. While a picture loads, a drawing stands in (a doorway, a garage, a room or a 3D printer). Pictures are dithered for e-ink and never stretched.

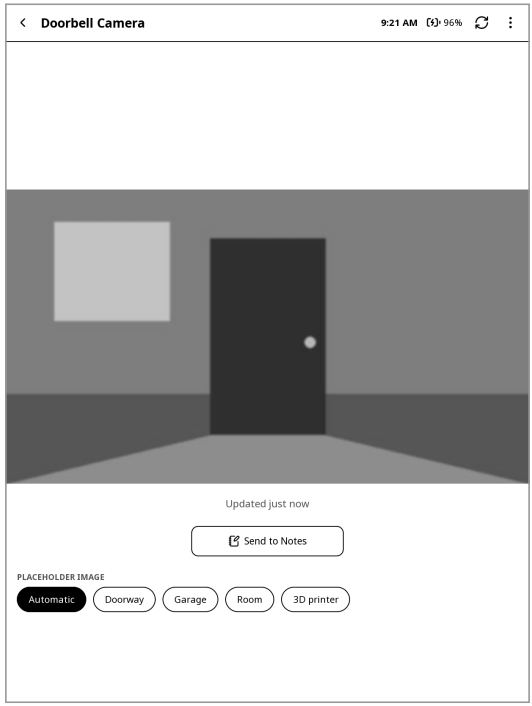

A camera, with Send to Notes


Send to Notes (when Notes is installed) puts the picture as a new page in a notebook:

1. Tap **Send to Notes** under the picture.
2. Pick the notebook.
3. Notes adds a page with the picture and its camera and time above it, such as "Front door · 3:42 PM". A notice says where it went.

The dashboard

For the nightstand or a wall: open it with the **Dashboard** tile, a shortcut, a gesture or as the start screen. **Settings > DASHBOARD > Style** picks one of five looks:

- **Clock and info**: a big clock and date, the weather with tomorrow's, and the sections below.
- **Security**: up to four cameras, the status bar, and the locks and doors with their buttons.
- **Info cards**: big numbers for the weather, inside, doors, locks, the garage, lights on, vacuums and the lowest battery.
- **Camera**: one big picture.
- **Clock only**: a huge clock, the date, the weather and the status bar.

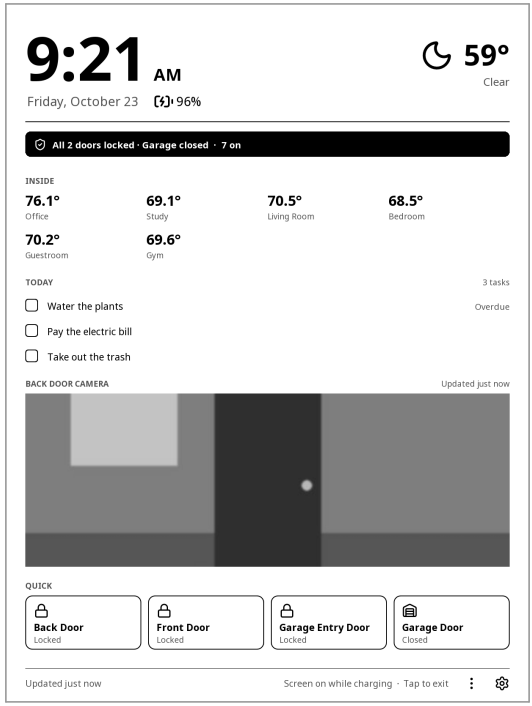

The dashboard (Clock and info)

Clock and info sections

Settings > DASHBOARD > Sections orders or hides them:

- **Status bar**: what needs attention, and how many things are on.
- **Room temperatures**.
- **Next up**: the next calendar event, or a To Do reminder in the next day and a half.
- **Now playing**: what a speaker or TV is playing, with buttons.
- **Today's tasks**: To Do's tasks due today. Tick the box to complete one; tap its text to open it.
- **Scenes and routines**: buttons for your routines and chosen scenes.
- **24-hour graph**: a sensor's last day (Settings > **Graph** picks which).
- **Camera**: fills the rest of the screen. Tap to refresh, hold for full screen.
- **Quick tiles**: the dashboard's own Quick tiles.

Today's tasks, Scenes and routines, and the 24-hour graph are off to start with. A section that doesn't fit is left out.

Using the dashboard

- **Tap the clock** to leave the dashboard. **Tap the weather** for the Weather screen.
- The bottom line shows when it last updated ("Updated 2 min ago"), whether the screen stays on ("Screen on while charging", "Screen always on" or "Normal sleep"), and **Tap to exit**. ⋮ and the gear are at the bottom right.
- The Kindle's battery shows next to the date in the **Clock and info**, **Info cards** and **Clock** styles (Settings > **Clock and battery** covers only the other screens' title bar).
- **Update interval**: how often it updates (every 1 to 30 minutes; 5 to start with). Pictures are taken again at each update, rotating through the cameras unless **Camera** picks one.
- **Keep screen on**: **While charging** (to start with), **Always** or **Never**.
- **Auto brightness**: on a Kindle with a light sensor, the front light follows the room's light while the dashboard shows.

- **Doorbell alerts**: when the doorbell rings or sees motion (**Ring and motion**, **Ring only** or **Off**), its camera fills the screen for a minute, updating every few seconds, then the dashboard comes back.

Routines

A routine runs several things in one tap, such as "Leaving": lights off, lock the door, close the garage. Routines are kept on the Kindle.

1. Settings > **Routines**, then **New routine**, and give it a name.
2. **Add step**: pick a device, then what it should do (**Turn on**, **Turn off**, **Lock**, **Unlock**, **Open**, **Close**, **Run**, **Start**, **Return to dock**, **Pause**).
3. Add as many steps as you like. Tap a step to remove it.
4. **Run now** tries it. **Rename** and **Delete** are there too.

Routines show on Home (tap to run, hold to edit) and in the dashboard's Scenes section. A routine that unlocks a door, opens the garage or runs a script asks first, like those taps do. When it finishes, a notice says it's done, or how many steps didn't work.


Alerts

Wake alerts

When the Kindle wakes, Home Assistant checks the house. If a lock is unlocked, the garage is open, or a door or window is open, a box lists them with a **Security** button. Settings > **Wake alerts** turns this off.

Sleep screen alerts

Chosen things are shown at the bottom of any sleep screen when they need attention.

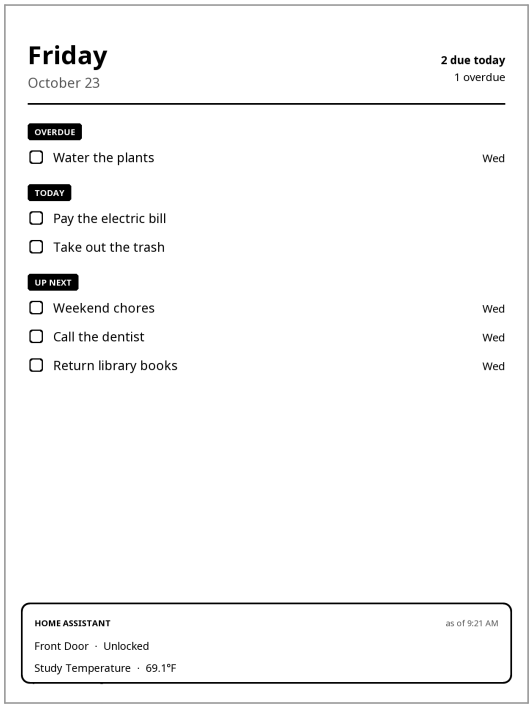

Sleep screen alerts

1. Settings > **Sleep screen alerts**.
2. Tap the eye next to each one to show: locks, doors and covers, sensors such as leaks and motion, and sensors with a number such as a temperature. The arrows order them.

When the Kindle sleeps, a box titled **HOME ASSISTANT** lists:

- a lock that is unlocked
- a door or cover that is open
- a sensor that is on (a leak, motion)
- each number sensor with its value, always

It shows "as of" the time of the last update. Nothing is shown when all is well.

The Home Assistant sleep screen

With **Sleep screen** set to **Home Assistant**, the sleeping Kindle shows:

- the date and when it went to sleep
- the weather
- the status bar
- notifications
- the inside temperatures
- your Quick tiles' states

Settings

Tap the gear on Home.

Display

- **Start screen**: **Home** or **Dashboard**.
- **Layout**: **Cards**, **Big tiles**, **List** (a switch or button on each row, such as **Unlock** or **Start**) or **Minimal**.
- **Dark mode**: **Off**, **On** or **Dashboard only**. Camera pictures stay as they are.
- **Clock and battery** and **24-hour clock**.
- **Night mode**, **Light** and **Refresh screen**: KOReader's own.
- **Sleep screen** and **Sleep screen updates**.

Home

- **Home sections**, **Shortcuts**, **Quick tiles**, **Rooms**, **Cameras**, **Security cameras** and **Sleep screen alerts**: each opens a list to order (see below).
- **Routines**.
- **Weather**: **Auto**, or which weather service to use when Home Assistant has more than one. It is used by Home, the dashboard, the Weather screen and the launcher.
- **Wake alerts**.
- **Devices**: which devices show at all. Tap a device to show or hide it; **All**, **Shown** and **Hidden** filter the list, and search finds one. Settings that are

switches on a device (its LED, motion detection, firmware updates) are hidden to start with.

Dashboard

- **Style**, **Camera** (**Rotate through all**, **None** or one camera), **Sections**, **Quick tiles**, **Scenes**, **Graph**, **Auto brightness**, **Doorbell alerts**, **Update interval** and **Keep screen on**, as described under The dashboard.

Confirm

- **Unlock doors**, **Open or close garage** and **Run scripts**: whether these ask first.

Connection

- **Update interval**: every 1, 2, 5 or 10 minutes, or **Manual only**.
- **Internal URL** and **External URL**.
- **Account**: signed in, using a token, or **Sign in**. **Sign out** also removes the Kindle's sign-in from Home Assistant.
- **Long-lived token**.

Ordering lists

The lists in Settings (Home sections, Shortcuts, Rooms, Cameras and the others) all work the same way:

1. Tap a row to select it. Four arrows appear: to the top, up, down, to the bottom.
2. **The eye** shows or hides it. Lists you add to (Quick tiles, the dashboard's tiles and scenes) have ✕ to remove one instead.
3. **Undo** at the top puts back the last move, one at a time.


Tips

- Your KOReader gestures for the light, warmth, refresh, night mode, Wi-Fi and a screenshot, and the other apps' actions (Apps, Notes, To Do, Web server, Wikipedia, Syncthing, SSH), work on Home Assistant's screens too.
- Swipe right on the first page of a screen to go back.
- A diagonal swipe flashes the screen clean.

- Hidden a device by mistake? Settings > **Devices > Hidden**, and tap it.
- On its side, every screen uses the extra room: more tiles across, and the dashboard's camera on the right.

To Do

Your Microsoft To Do lists on the Kindle: Today, an Agenda, Starred, a calendar and every list. Everything works without Wi-Fi; your changes are sent to To Do the next time it syncs.

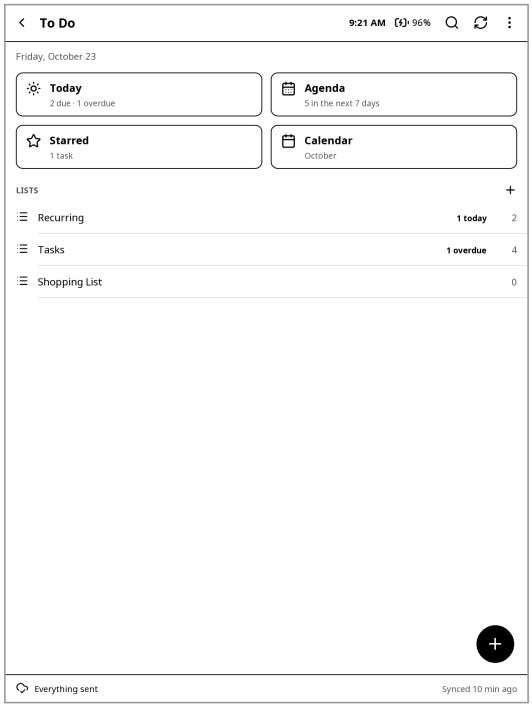

To Do's Home

Opening it and signing in

Open it from the launcher's **To Do** tile, **Tools > To Do**, or a gesture: **To Do**, **To Do: Today**, **New To Do task** (adds a task from anywhere) or **To Do: sync**.

The first time:

1. Tap **Sign in to Microsoft To Do**.
2. The Kindle shows a web address and a short code. On your phone or computer, open the address (or scan **QR code**) and enter the code, then sign

in to Microsoft there. Your password never goes through the Kindle.

3. "Signed in to To Do", and the first sync starts.

The code box closes only with **Cancel**. If Wi-Fi drops while you sign in, it stops with "Lost the connection to Microsoft. Check Wi-Fi and try signing in again."; a code left too long says "The code ran out. Try signing in again."

> To Do needs an **App ID**: the ID of an app you register (free) at entra.microsoft.com: for personal Microsoft accounts, **Allow public client flows** set to **Yes**, and the delegated **Tasks.ReadWrite** permission (add **Notes.ReadWrite** too if Notes will share it for OneNote). Set it in Settings > **App ID**, or on the web page, before signing in; if it's missing, the sign-in says so.

Home

- **The tiles**: **Today** (due today and overdue), **Agenda** (the next 7 days), **Starred**, **Calendar** (this month), and **Search** (off to start with; turn it on in Settings). Tap one to open it; hold one for **Open** or **Add to Apps**.
- **LISTS**: every list with its open tasks, and in bold how many are overdue or due today. The pinned list comes first. **+** next to LISTS makes a new list.
- **The round +** at the bottom right adds a task to your default list.
- **The bar at the bottom** says how many changes wait to be sent and when it last synced, such as "Everything sent · Synced 5 min ago". Tap it for the Sync screen.
- At the top: ⋮ (Settings, **Open on the web page**, Light, Night mode, Refresh screen), **sync** and **search**. **Open on the web page** starts the web server and shows a QR code for the web page's To Do tab.

Holding a list

Hold a list on Home for:


- **Open** and **New task**
- **Pin to top**
- **Add to Apps**
- **Set as default list**

- **Hide list**: hidden lists stay out of Today, the Agenda, the calendar and the sleep screen
- **Rename** and **Delete list**

A deleted list waits under **Deleted lists** on Home until the next sync, so **Put back** can undo it.

Lists and tasks

A list shows its tasks grouped **OVERDUE**, **TODAY**, **UPCOMING** and **NO DUE DATE** (or as one list: ⋮ **> Group by due date**). Starred tasks come first within each day (**Starred first**).

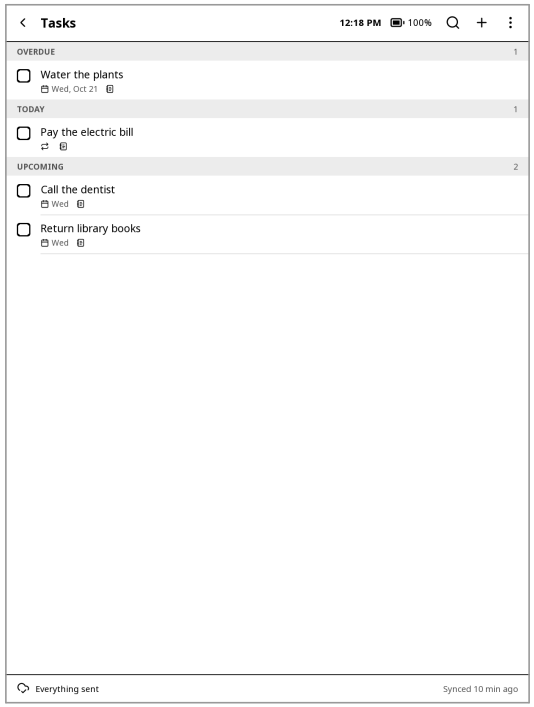

A list

A list's (or a view's) ⋮ has **Starred first: On/Off**, **Group by due date: On/Off** (in a list), **List options…** (as holding the list), **Sync now**, **Open on the web page** (a QR code for this list on the web page), **Refresh screen** and **Settings**. On a task's page, ⋮ opens the task's quick actions.

Each task shows its due day, reminder time, repeat, steps ("2/5"), a notes mark, and a star.

- **Tap the box** to tick a task off. "Done: ..." confirms it. It stays crossed out until the next sync; tap again before then to undo.
- **Tap the star** to star or unstar it.
- **Tap the task** to open it (or its quick actions; see **Tap action** in Settings).
- **Hold the task** for quick actions:
  - **Done** / **Not done**
  - **Star**
  - **Due today**
  - **Tomorrow**
  - **Pick a date...**, or **Skip to current** for a repeating task
  - **Postpone...**: by 1, 2, 3, 7, 14 or 30 days, or a date
  - **Move to list**
  - **Delete**
  - **Open**

A deleted task waits under **Deleted** at the end of its list until the next sync, with **Put back**.

Adding a task

Tap **+** (on Home, in a list or in a view). The **Add to** box opens with the keyboard:

- **List**: which list it goes in.
- **Today**, **Tomorrow** or **Pick date**: when it's due. Tap again to clear.
- **Reminder**: a time on the due day.
- **Repeat**: **Daily**, **Weekdays**, **Weekly on (day)**, **Every 2 weeks**, **Monthly on day (n)** or **Yearly**.
- **Star**.
- **Write it**: write the task by hand in Notes instead of typing. Notes reads your writing, and any date or time you write becomes the due date and reminder.
- **Add**.


Adding from Today makes it due today; adding from Starred stars it; holding a day in the calendar makes it due that day.

Dates in plain words

Type the date and time with the task, and To Do understands them:

- "Pay rent Friday 9am"
- "Call the vet tomorrow at 3:30pm"
- "Dentist on Oct 24"
- "Water the plants in 3 days"

Before adding, it shows what it understood: "Pay rent", **Due Fri, Oct 23 · Reminder 9 AM**. Tap **Add**, or **Keep as typed** if it guessed wrong (for example a task really called "Sun lamp").

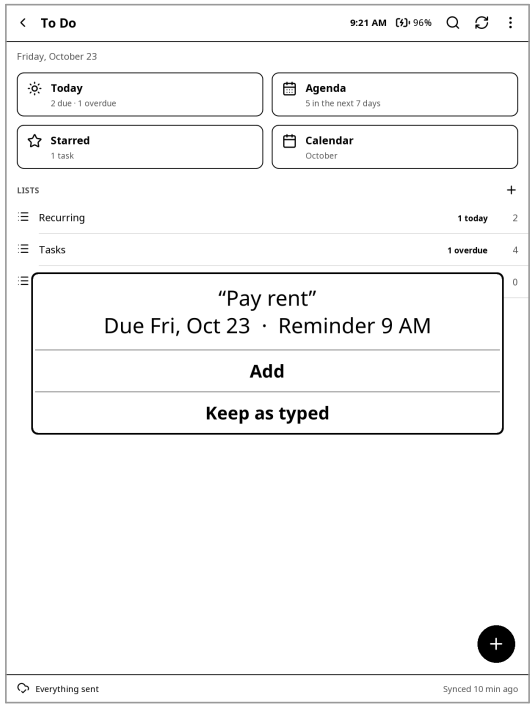


What To Do understood

It understands:

- **Days**: today, tonight, tomorrow, the days of the week (Mon or Monday, this Friday, next Friday, on Friday).
- **Later**: next week (the start of next week), in 3 days, in 2 weeks.
- **Dates**: 10/24, 10/24/2026, Oct 24, October 24th, 24 Oct, Oct 24, 2026. A date that has passed means next year.
- **Times**: 9am, 9:30pm, 9 a.m., noon, midnight, or "at 17:30".
- A time alone means today, or tomorrow once that time has passed.

The same works when you rename a task: **Rename and set date** or **Keep as typed**.

A task's page

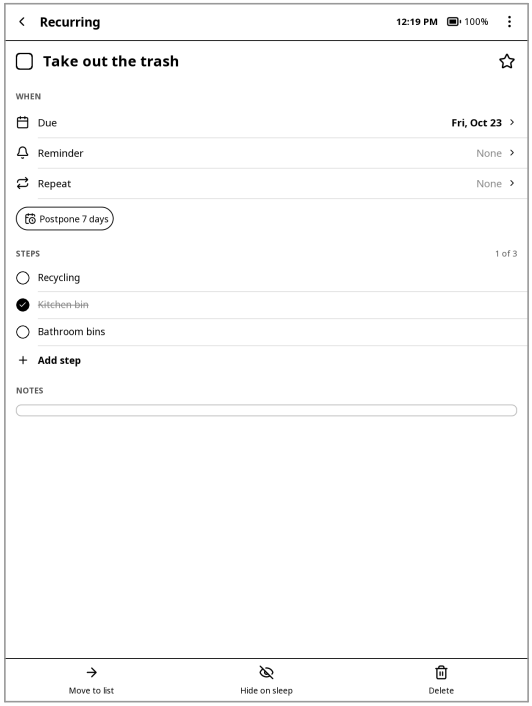

A task's page

- **The box** ticks it off; **the star** stars it.
- **The title**: tap to rename it.

- **Due**: **Today**, **Tomorrow**, **Next week**, **Pick a date…** or **No due date**. Changing the due date moves the reminder with it. Hold to clear.
- **Reminder**: a time on the due day, or **Another day…**, or **No reminder**. Reminders ring on your phone (To Do keeps them), and also on the Kindle while KOReader is open (Settings > **Reminder alerts**).
- **Repeat**: the presets, or **Custom…** (every 1 to 99 days, weeks, months or years), or **Remove repeat**.
- **Skip to current** (a repeating task): moves it to the first day it falls on from today.
- **Postpone**: by your usual number of days. Hold it to choose.
- **Due today**.
- **Remove repeat**: it stops repeating, its due date is cleared, and a note with the old date is added.
- **Open in Notes**: when the task was made from a Notes page, this goes back to that page.
- **STEPS**: tap a step's circle to tick it; tap the step to rename or delete it; **Add step**.
- **NOTES**: tap to read and edit the task's notes.
- At the bottom: **Move to list**, **Hide on sleep** (keeps this task off the sleep screen) and **Delete**.

Today, Agenda, Starred, Calendar, Search

- **Today**: what's overdue and what's due today.
- **Agenda**: overdue, today, then each of the next 6 days, by reminder time.
- **Starred**: starred tasks from every list.
- **Calendar**: the month, with a dot for each task due that day (a hollow dot is overdue). Repeating tasks show on the days they will fall on; tasks that repeat every day or two are listed once instead. Tap a day for its tasks; hold a day to add a task due then. Swipe or use the arrows for other months.
- **Search**: titles, notes and steps in every list, including done tasks.

Split view

Turned on its side, To Do can show a column on the left with Home's tiles and lists, and the open list or view on the right (Settings > **Split view (landscape)**). Tap something in the column to open it on the right.

Syncing

Every change shows at once on the Kindle and waits to be sent. Syncing sends the waiting changes, in order, then downloads everything. It runs in the background, so you can keep reading and tapping while it works; changes you make meanwhile go in the next sync.

- **Sync**: the sync icon, the Sync screen, or the gesture. KOReader asks to turn Wi-Fi on if it's off. "Syncing To Do..." shows while it works.
- **Background sync**: every 15, 30 (to start with), 60 or 120 minutes while KOReader is open and Wi-Fi is already on, and when Wi-Fi comes on if the last sync is older than that or changes are waiting. It never turns Wi-Fi on.
- **Sync changes immediately**: when Wi-Fi is on, changes go a few seconds after you make them.
- A sync asked for while another runs follows it. One that gets no answer for 5 minutes stops with "To Do took too long to answer"; your changes stay waiting for the next.

The **Sync screen** (tap the bar at the bottom) lists the **CHANGES TO SEND**, and has:

- **Sync now**
- **Download only**: downloads without sending.
- **Preview changes**: says what To Do has new, changed or done since the last sync, without changing anything.
- **Reset to To Do**: throws away the Kindle's unsent changes and downloads To Do's copy again.
- **Catch up overdue repeats**: moves every overdue repeating task to its next day from today, after showing where each goes.

If To Do refuses a change (say, a task already deleted on your phone), it's left out and listed, not retried forever.

The sleep screen

With **Sleep screen** set to **To Do tasks**, the sleeping Kindle shows the day and date, how many are due and overdue, and the tasks. **Sleep screen content** chooses:

- **Today + Up next**: overdue, today and the next days.
- **Today**: overdue and today.
- **Starred**.
- **Pinned list**.

Done tasks, tasks hidden on sleep and hidden lists are left out.

Settings

⋮ **> Settings** on Home.

Home

- **Home tiles** and **Lists**: order them and choose which show. Tap one, then the arrows (to top, up, down, to bottom); the eye shows or hides it; **Undo** puts back the last move.
- **Show hidden lists**, **Pinned list** and **Default list**.

Tasks

- **Starred on top**.
- **Group by due date**.
- **Tap action**: **Open task** or **Quick actions**.
- **Postpone by**: the usual number of days (1 to 60).
- **Confirm before deleting**.
- **Reminder alerts**: reminders pop up on the Kindle while KOReader is open, with **Done** and **Open**. Ones missed in the last two hours (while asleep) show when it wakes.

Display

- **Night mode**, **Light** and **Refresh screen**.
- **Full refresh**: how often the screen flashes clean (every 6 or 3 changes, every change, or never).
- **Clock and battery**, **Split view (landscape)** and **24-hour clock**.
- **Week starts on**: **Sunday** or **Monday** (also where "next week" starts).

Sync, sleep screen and account

- **Background sync**, **Sync changes immediately** and **Download only**.
- **Sleep screen**, **Sleep screen content** and **Sleep screen updates**.
- **Sign out** (also removes the tasks kept on the Kindle and any unsent changes) and **App ID**.

Tips

- The **Flagged emails** list from Outlook shows in Starred and its own list, but stays out of Today, the Agenda and the calendar.
- Hold a Home tile and choose **Add to Apps** to put Today or a list on the launcher, with its own count.
- The web page's To Do tab has the same lists with a keyboard, plus CSV import and export.
- Your KOReader gestures for the light, warmth, refresh, night mode, Wi-Fi and a screenshot, and the other apps' actions (Apps, Notes, Home Assistant, Web server, Wikipedia, Syncthing, SSH), work on To Do's screens too. Library and book actions don't.

Notes

Notes turns the Kindle Scribe into a handwritten notebook. You write with the pen on ruled, grid, dotted or blank pages (or on the pages of a PDF), keep notebooks in folders, search them, tidy your handwriting, send them to OneNote, turn them into typed text with AI, and solve crosswords from newspapers.

Notes reads the pen directly, so a hand resting on the screen doesn't write or turn pages. Fingers only work the buttons and menus; the pen writes.

Crosswords and puzzle books have their own chapter.

Getting started

Opening Notes

- From the Apps launcher, tap the **Notes** tile.
- Or open KOReader's menu and choose **Tools > Notes**.
- Or set a gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Notes**.

Notes opens on the notebook list. If **Open the last notebook when Notes opens** is on (Settings > Notebook list), the notebook you used last opens straight away.

Making a notebook

1. Tap **+ New notebook** at the top of the list.
2. Type a name, or leave it blank to name it by the date and time (for example "Oct 21, 2:47 PM").
3. Tap the template you want: **Blank**, **Narrow**, **Wide**, **Grid** or **Dots**. The other templates (checklist, tasks, Cornell notes, week planner, music staves and more) can be picked later from the page's menu.

Other choices in the same box:

- **From PDF...** makes a notebook from a PDF on the Kindle: each PDF page becomes a page you can write on.

- **Your template…** starts the notebook with one of your own templates.

A new notebook goes into the folder you have open. Portrait or landscape follows the way the Kindle is held.

Naming notebooks

- To rename a notebook, hold it in the list and tap **Rename**, or use ⋯ **> Rename notebook** inside it.
- **Suggest name** in the Rename box asks the AI to read the first written page and suggest a short name.
- **Suggest names (AI)** (Settings > New notebooks): when you close a notebook still named by its date, the AI reads its first page and offers a name a moment later (you can carry on meanwhile). Tap **Rename** to take it or **Keep** to leave it.
- **Add the date to names** (Settings > New notebooks): **Before the name** gives "Oct 21 – Meeting", **After the name** gives "Meeting – Oct 21". It applies to names you type for new notebooks, and when a notebook still named by date gets its first real name.

Saving and closing

Notes saves as you write; there is no Save button to remember. To leave a notebook, tap the top button on the toolbar (the open book).

If you'd rather decide each time, set **When closing** (Settings > Writing) to **Ask**. Closing a notebook you changed then offers **Save**, **Rename…**, **Don't save** (puts it back as it was when you opened it; a brand-new notebook is removed) or **Cancel**.


A notebook reopens at the page you left it on, and its undo steps are kept while KOReader is running (for the last two notebooks you closed).

The notebook list

Covers or a list

The notebook list shows each notebook's first page as a cover, with folders as tiles. To see a plain list instead, go to **Settings > Notebook list > Show**

notebooks as and pick **List**.

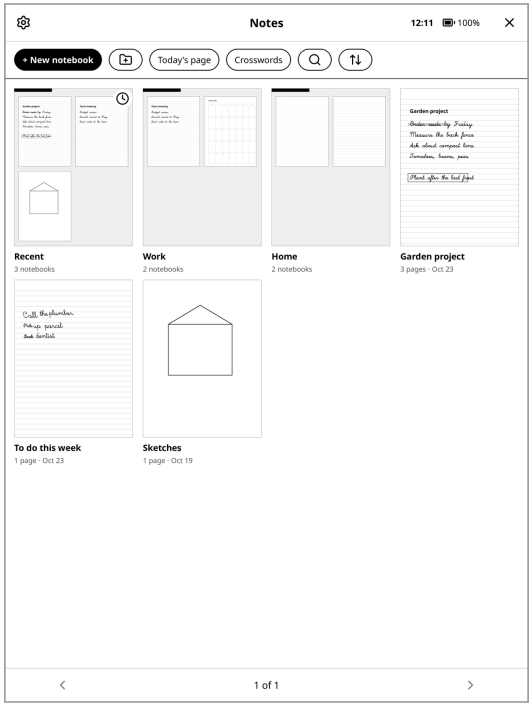

The notebook list: the buttons along the top, the Recent folder, folders and notebooks

The buttons along the top are:

- **+ New notebook**
- New folder (folder icon)
- **Today's page** (at the top level)
- **Crosswords** (see the Crosswords chapter)
- **OneNote** (when you're signed in to OneNote)
- Search (magnifier icon, at the top level)
- Sort (up-and-down arrows icon)

If they don't all fit, the rest go behind **More...**. The cog at the top left opens Notes' settings, and the time and battery show at the top right.

Tap a notebook to open it. Hold a notebook for its options: **Rename**, **Duplicate**, **Move to...**, **Pin to top**, **Lock...**, **Send to OneNote now**, **Add to Apps** (a tile for it

on the Apps launcher), **Select** and **Delete**.

Sort

Tap the Sort button at the top of the list and pick **Name**, **Date created**, **Date modified** or **My order**. Folders are sorted the same way: by name, by when the folder was made, or by its most recently changed notebook (for My order, folders stay in name order).

- **My order** is your own order: **Settings > Notebook list > Reorder notebooks...** lets you move notebooks up and down. If you haven't made an order yet, picking My order opens it.
- **Default sort** (Settings > Notebook list) is the sort Notes starts with. **Last used** keeps whatever you picked last; or choose one sort to always start with.

Folders

- Tap the New folder button and type a name. Folders can hold other folders.
- Tap a folder to open it; tap **‹** at the top to go back up. New notebooks go into the folder you have open.
- Hold a folder to rename, move or delete it, or to choose its **Cover...**: Automatic (the notebooks changed last inside it), a plain folder, an icon (house, briefcase, school, travel and others) or one of its notebooks.
- Deleting a folder asks whether its notebooks are deleted too or moved up a level.

Selecting several

Hold a notebook or folder and tap **Select**. Tick the ones you want, then tap the "selected: what to do..." row at the top to move, duplicate, send to OneNote or delete them together. **Done selecting** goes back to the normal list.

Pinned and recent notebooks

- **Pin to top** (hold a notebook) keeps it at the top of its folder.
- The notebooks you opened last are in a **Recent** folder, first in the list. Its cover shows them; tap it to see them, and **‹ Notes** to go back. **Recent notebooks** (Settings > Notebook list) chooses **As a folder**, **At the top** (above the other notebooks) or **Off**.

Locked notebooks

Hold a notebook and tap **Lock…** to set a PIN (**Remove lock** takes it off). Notes asks for the PIN when the notebook is opened, but not again for two minutes. A locked notebook shows a lock instead of its cover. It is left out of search, OneNote's automatic sending and the web page. A forgotten PIN can't be recovered.

Trash

Deleting a notebook moves it to the trash, which is at the end of the notebook list. Tap a notebook there to restore it (it goes back to its folder) or delete it for good; **Empty trash** deletes them all. Notebooks in the trash are deleted for good after 30 days.

Search

Tap the Search button and type a word. Notes finds it in:

- typed text (text boxes and text downloaded from OneNote) and notebook names, straight away;
- handwriting that has been read by the AI (with ⋯ **> Convert page to text**, or from an earlier search).

Tap a result to open that page. If some pages haven't been read yet, the last row offers to read them with AI. Locked notebooks are never searched.



Search results: a notebook's name, typed text on a page, and pages not read yet

Today's page

Tap **Today's page** to open today's page in a notebook called **Journal**. The first time, Notes makes the Journal; each day gets a new page with the date at the top. You can also give it a gesture: **General > Notes: today's page**.

Writing

The toolbar

The toolbar runs down the left edge (or the right: **Settings > Toolbar > Side**). From the top:

- the open book: back to the notebook list;
- **Pen**, **Highlighter**, **Eraser**, **Lasso**;
- **Add** (Shapes, Text and Insert, in one button);
- **Zoom window**;

- **Undo** and **Redo**;
- **Tidy** (tidy handwriting);
- any action buttons you added (**Refresh screen** is there to start with);
- your favorite pens;
- the time and battery;
- page up, the page number, page down;
- all pages (the grid button), **+** (add a page) and ⋯ (the menu);
- the bottom button folds the toolbar into a small tab on the edge. Tap the tab to bring it back.



A page being written on, with the toolbar on the left

Tap a tool to use it, and tap it again for its panel (tips, sizes and options). Tapping anywhere outside a panel closes it.


Toolbar groups

A group is one toolbar button that opens a short list. **Add** holds Shapes, Text and Insert; **Tidy** holds the tidying actions. The group's button shows the tool you're using from it. To change a tool's options, tap the group and then tap that tool again in the list.

To change the groups, go to **Settings > Toolbar > Groups...**, pick a group, and tap **Remove** or **Add** beside each tool or action. Anything taken out of a group gets its own toolbar button again.

Your own toolbar

Settings > Toolbar > Toolbar buttons... lists everything the toolbar can show: the tools, the Add and Tidy groups, and the actions from the ⋯ menu (**Send to OneNote**, **Ask AI**, **Convert page to text**, **Add page to To Do**, **Bookmark page**, **Date and time**, **Export**, **Light**, **Night mode**, **Refresh screen**, **Settings** and others).

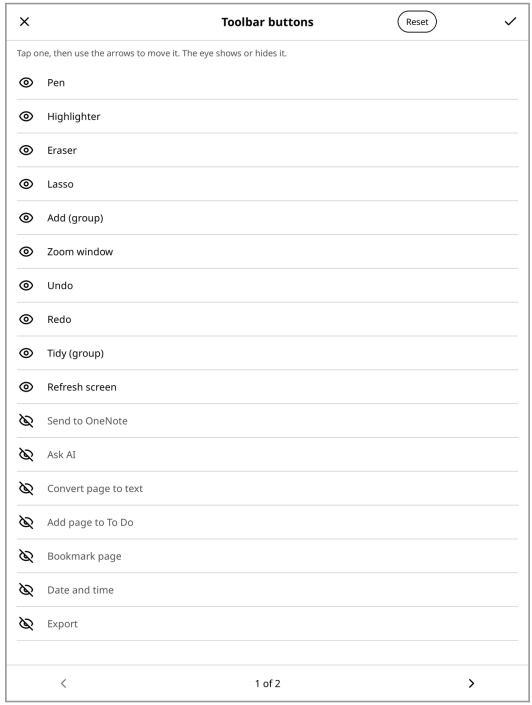

Toolbar buttons: the eye shows or hides a button, the arrows move it

1. Tap a button's name, then use the arrows to move it to the top, up, down or to the bottom.
2. Tap the eye beside a button to show or hide it.
3. Tap ✓ to keep the changes, or ✕ to leave the toolbar as it was. Undo takes back the last change, and **Reset** puts back the toolbar as it was to start with.


Hidden tools are not lost: they are at the top of the ⋯ menu, under the page templates. The actions are in the ⋯ menu anyway.

- **All pages button** and **Add page button** (Settings > Toolbar) take those two off the bottom of the toolbar; they are then in the ⋯ menu too.
- **Groups…** changes what is in the Add and Tidy groups.
- **Start with toolbar hidden** opens notebooks with the toolbar folded.

Pen

Tap **Pen**, then tap it again for its panel:

- **Tips**: **Ballpoint**, **Fineliner** (an even line), **Fountain** and **Brush** (the line widens as you press; the brush more strongly), **Calligraphy** (a slanted nib: thick and thin by direction), **Marker**, **Pencil**, **Mech. pencil** (grey lines) and **Shader** (a wide soft grey that goes under the ink).
- **Shade**: **Black**, **Dark grey** or **Light grey**. For the pencils: **Normal**, **Darker** or **Lighter**.
- **Size**: five sizes, with a sample stroke below.
- **Add to favorites (toolbar)** puts this pen (tip, size and shade) on the toolbar, up to three. Tap a favorite to write with it. Clear them in Settings > Writing > **Favorite pens**.

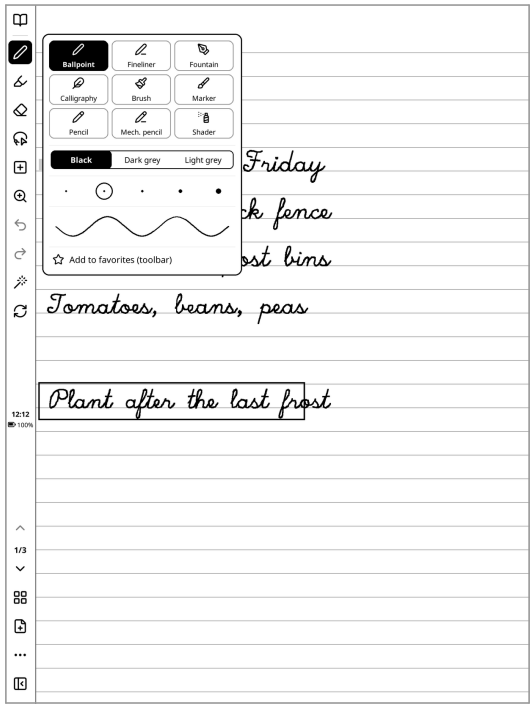

The pen's panel: tips, shade, size and a sample stroke

Starting pen (Settings > Writing) chooses whether notebooks open with the pen you used last or one of your favorites.

Pen pressure

The line follows how hard you press. **Pen pressure** in Settings > Writing sets how hard you need to press: **Soft** (a light touch already writes wide), **Normal** or **Firm** (press harder for a wide line). ⋯ **> Pen pressure** turns pressure off for one notebook, so every line is the same width.

Highlighter

Five widths of grey, drawn under the ink so writing stays readable. Tap **Highlighter** again to pick a width.

Eraser

Tap **Eraser** again for its panel:

- five sizes (pressing harder erases a bigger spot);
- **Partial** (only the ink under the eraser) or **Whole stroke** (any stroke it touches goes);
- **Highlighter only**: only highlighting is erased; ink, text boxes and pictures stay;
- **Clear page**.

The pen's eraser end, or its side button, erases whatever tool is picked. The eraser also removes text boxes, pictures and tape it passes over; one Undo brings them back.

Undo and redo

- Tap **Undo** or **Redo** on the toolbar.
- Tap the screen with two fingers to undo; hold two fingers to redo. (Turn this off in Settings > Writing > **Two-finger tap to undo (hold to redo)**.)
- **Undo history**: hold **Undo** on the toolbar to see the last steps (writing, erasing, highlighting and so on), each with its page and how long ago. Tap one to go back to just before it. Redo brings the steps back.

Turning pages

- The arrows on the toolbar turn pages; **+** adds a page after this one.
- Swipe up with a finger for the next page and down for the page before. **Turn pages with a finger** (Settings > Writing) switches this to left and right swipes, or turns it off.
- Swipes are ignored while the pen is near the screen and for a moment after, so a resting palm doesn't turn the page.

Pen side button


Pen side button (Settings > Writing) chooses what holding the side button does: **Eraser**, **Lasso**, **Highlighter**, **Ruler (straight lines)** or **Nothing**.

Tips

- Stroke smoothing (Settings > Writing) evens out shaky lines: **Light** for handwriting, **Strong** for drawings and long curves.
- If the screen keeps faint marks from earlier writing, tap **Refresh screen**; **Full refresh** (Settings > Screen) sets how often Notes clears them by itself.

The lasso

Tap **Lasso** and circle ink, text boxes, pictures or tape with the pen to select them.

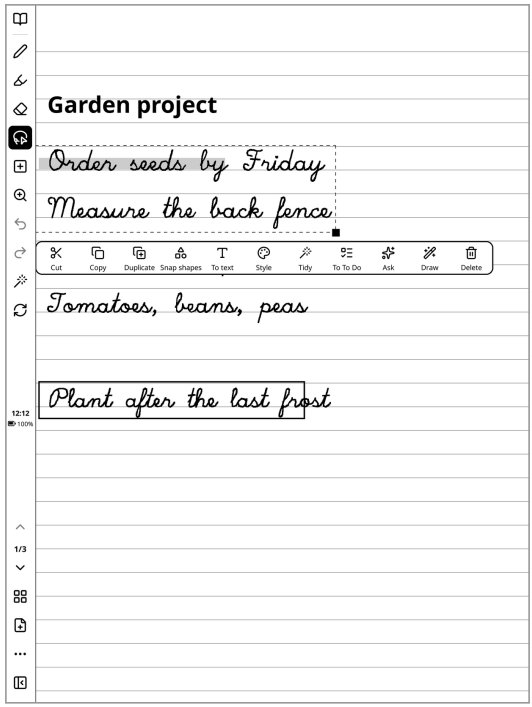

Two lines selected with the lasso, and the bar under them

- Drag inside the selection to move it; drag the square at its corner to resize it.
- The bar under the selection has:
  - **Cut**, **Copy** and **Duplicate**;
  - **Snap shapes**: rough lines, circles and boxes become clean ones;

  - **To text**: reads the handwriting with AI. The text can be copied, saved, or put back with **Replace handwriting** (the typed text goes where the writing was);
  - **Style**: change the selected ink's pen, thickness, shade or line;
  - **Tidy**: tidy the handwriting in the selection (see Tidy handwriting);
  - **To To Do**: add the to-do items in the selection to To Do;
  - **Ask**: ask the AI about the selection;
  - **Draw**: have the AI redraw it or draw next to it;
  - **Delete**.
- With something cut or copied, tap the page with the lasso and tap **Paste**.

Shapes and snapping

Shapes

Open **Add > Shapes** and pick a line, arrow, rectangle, ellipse, triangle, diamond, star or table (set its rows and columns in the panel). Drag from corner to corner with the pen; the shape uses the pen's tip and size. In the same panel, **Fill** (none, light or dark grey) and **Line** (solid, dashed or dotted).

Shapes are ordinary ink: the eraser and lasso work on them.

Snapping your own drawing

Draw a rough line, circle, ellipse, rectangle or triangle and hold the pen still at the end for half a second: it becomes a clean shape. One Undo brings your own drawing back.

- **Shape recognition (hold the pen)** (Settings > Shapes) turns this on or off.
- **Snap lines to 0°, 45°, 90°** makes lines that are nearly level, upright or diagonal exactly so.
- **Snap line ends to ink** joins the ends of lines and arrows to ink nearby.
- With the pen side button set to **Ruler (straight lines)**, holding the button while you draw makes straight lines.

Text, pictures, tape and links

Text boxes

Open **Add > Text** and tap the page to type a text box (drag across the page first to set its width). The panel sets the size (four sizes), bold or italic, sans or serif, and left, centre or right alignment for new boxes. Tap a text box to edit or delete it. You can write over text boxes; move or resize them with the lasso.

Pictures

Add > Insert > Picture... puts a picture from the Kindle in the middle of the page, selected so you can move or resize it. A photo larger than the screen is made screen-sized when it's added, so pages with photos stay quick to draw.

Tape (for studying)

Add > Insert > Tape: drag over something to hide it under grey tape. Tap the tape to lift it, and tap again to put it back. The Insert panel can also lift or put back all the tape on the page at once.

Links between pages

Add > Insert > Link to a page... puts an underlined link on the page, to a page in this notebook or another one. Tap the link to go there; move it with the lasso.

A page that other pages link to gets ⋯ **> Linked from**, which lists those pages; tap one to go there.

Date and time

Date and time (⋯ > Date and time, or a toolbar button from Settings > Toolbar > Toolbar buttons...): tap where it goes, and a stamp like "Wed, Oct 21 · 3:42 PM" is typed there.

Tidy handwriting

Tidy straightens your writing without changing your letters. Use it on the whole page from the **Tidy** button (or ⋯ **> Tidy handwriting**), or on part of a page by selecting it with the lasso and tapping **Tidy**.

The Tidy button's list has:

- **Tidy handwriting**: all four of the steps below at once.
- **Level lines**: takes out the tilt and drift of each line and sits its words on the ruled line.
- **Upright letters**: takes out the slant.
- **Even size**: brings words that are much bigger or smaller than the rest of the line closer to its size.
- **Even spacing**: makes the gaps between words even.

Highlighting, shapes and large drawings are left as they are. One Undo puts everything back.



Before: words of different sizes, leaning and spaced unevenly




After Tidy handwriting (the Tidy list is open)

Tips

- Tidy works best on ruled pages, where it can set writing on the lines.
- Try **Level lines** and **Upright letters** first: they make the biggest difference and change your writing the least.

Zoom window

Tap **Zoom window** to write large in a strip at the bottom of the screen; your writing lands small in the dashed box on the page.

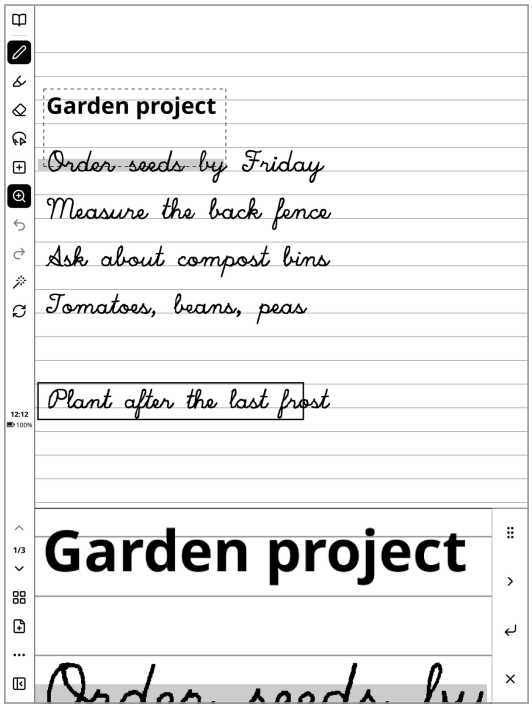

The zoom window: write in the strip at the bottom; it lands in the dashed box

- Writing near the end of the strip moves the box on along the line.
- The strip's buttons move the box on, start the next line, or close the zoom.
- Tap the page to move the box there.
- Drag the strip's grip (top of its buttons) with the pen or a finger to move the strip up or down the screen; it stays where you put it.

Many people's handwriting is much neater this way.

Pages

All pages

Tap the page number, or the grid button, to see every page as a thumbnail.

- Tap a page to go there.
- Hold a page to bookmark, copy, move or delete it.

- ★ **Bookmarked** shows only bookmarked pages; ⋯ **> Bookmark page** marks the page you're on (★ by its number).
- **Select** ticks several pages to bookmark, move, copy, move to another notebook or delete them together.
- ⋯ **> Reorder pages** moves pages up and down.
- Deleted pages are kept for 30 days: **Deleted (n)** in the page list restores them, or deletes them for good.

Page templates

The top of the ⋯ menu shows the page templates: **Blank**, **Narrow** ruled, **Margin** (ruled with a margin), **Wide** ruled, **Grid**, **Dots**, **Isometric** dots, **Hexagons**, **Checklist**, **Tasks** (tasks and subtasks), **Cornell** notes, **Week** planner, **Month** calendar and **Music** staves.



The ⋯ menu: the page templates, then the page's and the notebook's actions

Tap **All pages** beside the title to switch to **This page**, so a template applies only to the page you're on. **Template lines** (Settings > Screen) makes template lines

Light, **Medium** or **Dark**.

Your own templates

Under **Your templates** in the ⋯ menu, tap **+** to save this page (with its writing) or a picture as a template. Tap a template to use it; tap it again to delete it. **+ New notebook > Your template...** starts a notebook with one.


Checklists and tasks

On the **Checklist** and **Tasks** templates, tap a printed box (pen or finger) to tick it, and again to untick it. A mark drawn over an empty box (a tick, a cross) becomes a tick too. On the Tasks template, writing that starts indented makes that line a subtask, and its box moves in.

A checklist page added to To Do (⋯ **> Add page to To Do**) stays linked: ticking a box on the page ticks the task in To Do, and a task ticked in To Do is ticked on the page.

Month calendar and the Journal

On a **Month** calendar page, tap a day's number to open that day's page in the Journal notebook (made if it isn't there yet, and placed among the other days in date order). Days that already have a Journal page show their number in black.

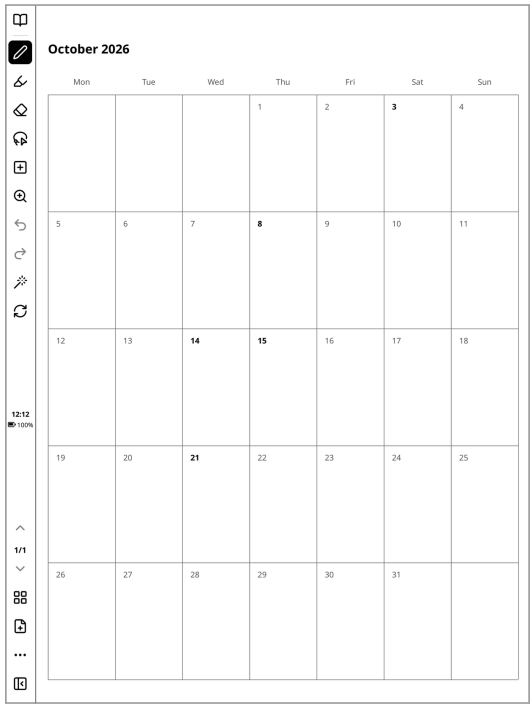

A month calendar page: days with a Journal page are in black

Page header

Page header (date and page number) (Settings > Screen) shows the page's date and number in small type at the top right of each page.

Orientation and two pages side by side


Portrait and landscape

A notebook is portrait or landscape. New notebooks follow the way the Kindle is held. ⋯ **> Page orientation** changes it: **Portrait**, **Landscape**, **Inverted portrait** or **Inverted landscape**. The writing stays where it is. Opening a notebook turns the Kindle to match, and closing it turns the Kindle back.

Two pages side by side

⋯ **> Two pages side by side** shows a portrait notebook two pages at a time, with the Kindle on its side, like an open notebook: pages 1–2, then 3–4, and so on. The arrows turn two pages at a time.

- Turning the Kindle on its side does the same, and turning it back upright shows one page. **Two pages when turned on its side** (Settings > Writing) turns this off.
- The pen, highlighter and eraser work on either page. For the lasso, text and the other tools, turn **Two pages side by side** off.

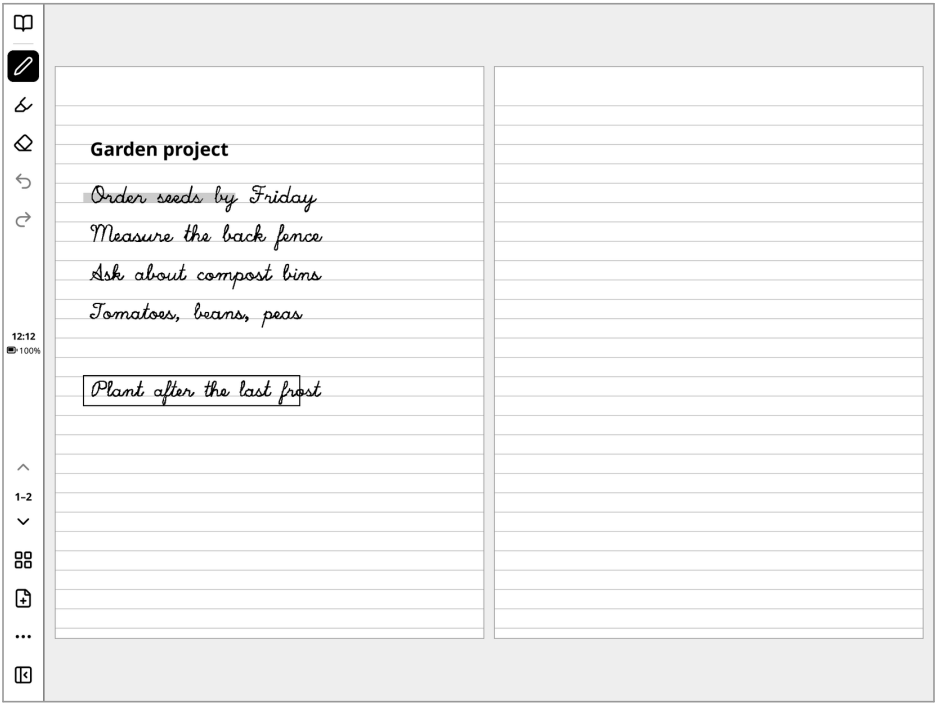


Two pages side by side with the Kindle on its side

Quick note

Set a gesture to **General > Notes: quick note** (Settings > Taps and gestures > Gesture manager). From anywhere (a book, a menu, To Do) the gesture opens a writing pad over the lower part of the screen, with what you were looking at faded above it.

- Write with the pen, highlighter, eraser and lasso; Undo and Redo work as usual.
- Tap ✓ at the top of the toolbar (or use the gesture again) when you're done. What you wrote goes on a new page of the **Inbox** notebook, with the date and time at the top.
- If you didn't write anything, nothing is kept.

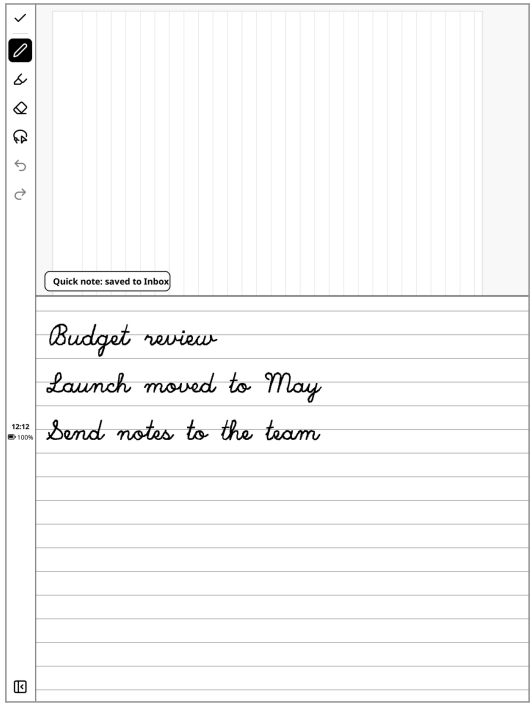

A quick note over the notebook list

Writing on a book's pages

You can write on the pages of PDFs and other fixed-page books while reading them in KOReader.

1. Open the book and go to the page.
2. Tap **Write on this page** in the reader's menu (Tools), or use a gesture set to **Notes: write on this page**.
3. Write with the pen; the eraser, lasso and zoom work too. The toolbar's arrows turn the book's pages.
4. Tap the top button (or use the gesture again) to go back to reading.

The writing is kept with the book and stays in place when you zoom in or out. It shows whenever that page does, in page or continuous view.

PDFs as notebooks

+ New notebook > From PDF... picks a PDF on the Kindle (copy it over by USB first, anywhere on the Kindle). Each PDF page becomes a page you can write on. Pages you add are blank paper. Landscape PDFs make a landscape notebook.

⋯ **> Export... > The PDF with my writing added (annotations)** saves a copy of the PDF with your writing as PDF annotations, which other PDF apps show and can edit.

The PDF page fills the screen, so the toolbar may cover a little of its left edge; fold the toolbar to see all of it.

AI features

Several features use AI to read your handwriting or answer questions: Convert page to text, To text, search of handwriting, Ask AI, Make PDF, Draw, Add to To Do, Suggest name and Check my answers (crosswords).

Setting up AI

Go to **Settings > Integrations > AI (Claude or local AI)...**.

- **Claude**: enter a **Claude API key** from platform.claude.com. Claude Max and Team plans include monthly API credits (claude.ai > Settings > Billing).

Claude model picks the model; Sonnet and Haiku cost less.

- **Local AI**: your own AI on your network, for example Gemma on Ollama. Under **Local AI (Ollama)...**, set the **Address at home (Ollama)**: the computer running Ollama and its port, for example http://192.168.1.50:11434 (Ollama has to accept connections from the network), and optionally a **Pangolin AI gateway address** and **Pangolin key** for when the Kindle is away from home. **Model** lists your models (pick one that reads pictures). **Test it** says which address answered.
- **Which AI does each job**: reading handwriting, search and To Do; Ask and Make PDF; drawing. Each can use Claude or Local AI.

AI at the top of Notes' settings switches every job at once with one tap: **Claude**, **Local AI**, or **Mixed** (some of each).

Convert page to text

⋯ **> Convert page to text** reads the page's handwriting. The text can be copied or saved as a file. Pages that have been read are remembered, so search finds their words afterwards. Use the lasso's **To text** for part of a page.

Ask AI and Make PDF

⋯ **> Ask AI...** (or the lasso's **Ask** for a selection): type a request, pick one of the examples or your last five requests, or tap **Write it** to write it by hand in a strip at the bottom of the page.

- **Ask** shows the answer, to copy or save.
- **Make PDF** has the AI rewrite the note as a clean document (headings, lists, checkboxes, bold and italics) and saves it as a PDF, which you can open or write on as a new notebook.

Draw with AI

Select with the lasso and tap **Draw**: for example "Redraw this neatly", "Make this a flowchart" or "Turn this into a table". **Replace** swaps your drawing for the AI's; **Beside** puts it next to yours. Lasso an empty area for **Draw here**. The result is ordinary ink and text boxes that you can erase, move or undo.

Add to To Do

⋯ **> Add page to To Do** (or the lasso's **To To Do**) reads the to-do items on the page and shows them before they're added. On the checklist and tasks templates, a printed box starts a task and an indented box a subtask; ticked boxes are added as done.

- Tap the list name to choose which To Do list they go into.
- Tap a task to tick or untick it and its steps, or to set its due date and reminder.
- Dates written beside a task are read too: "Fri" or "10/30" is the due date, "9am" a reminder, "Fri 9am" both, "remind Mon 7pm" only a reminder. Turn this off with **Dates written beside tasks (To Do)** in the AI settings.

You need the To Do plugin, signed in.

OneNote

Signing in

Notes signs in to OneNote with a Microsoft app ID. If the To Do plugin is set up, Notes uses the same one, and there is nothing to do. Otherwise, make one once (it's free):

1. On a computer, sign in at entra.microsoft.com with your Microsoft account and open **App registrations > New registration**.
2. Give it any name, choose **Personal Microsoft accounts only** (or any account type that includes yours), and register it.
3. Under **Authentication**, set **Allow public client flows** to **Yes** and save.
4. Under **API permissions**, add Microsoft Graph's delegated permission **Notes.ReadWrite** (and **Tasks.ReadWrite** if To Do will use the same app ID).
5. Copy the **Application (client) ID** from the app's Overview page.

Then on the Kindle:

1. Go to **Settings > Integrations > OneNote…**, tap **App ID** and enter the ID (leave it empty to use the To Do plugin's).
2. Tap **Sign in**. On a phone or computer, open the address shown and enter the code (or scan the QR code).


3. Pick the OneNote notebook to send to, or make a new one.

Sending notebooks to OneNote

- ⋯ **> Send to OneNote** sends the notebook you're in. Hold a notebook in the list for **Send to OneNote now**, or use **Send all now** in the OneNote settings.
- Sending happens in the background: you can keep writing or reading, and a notice says when it's done (for example "OneNote: 2 new, 1 changed, 0 removed").
- Each notebook becomes a OneNote section, and each page a OneNote page holding the page as a picture (OneNote can search handwriting in pictures). Changed pages are updated and deleted pages removed; nothing comes back from OneNote.
- **Send automatically** sends a notebook when you close it, and everything when Wi-Fi comes on (Notes never turns Wi-Fi on itself).
- **Notebooks sent: Ones I pick** sends only the notebooks you mark: hold a notebook in the list and tap **Sent to OneNote by itself** to switch it.
- **Typed text of each page (read by AI)** adds the page's text under each page sent.

Reading OneNote

Once signed in, tap **OneNote** in the notebook list (or **Browse OneNote…** in the OneNote settings) to see your OneNote notebooks, sections and pages.

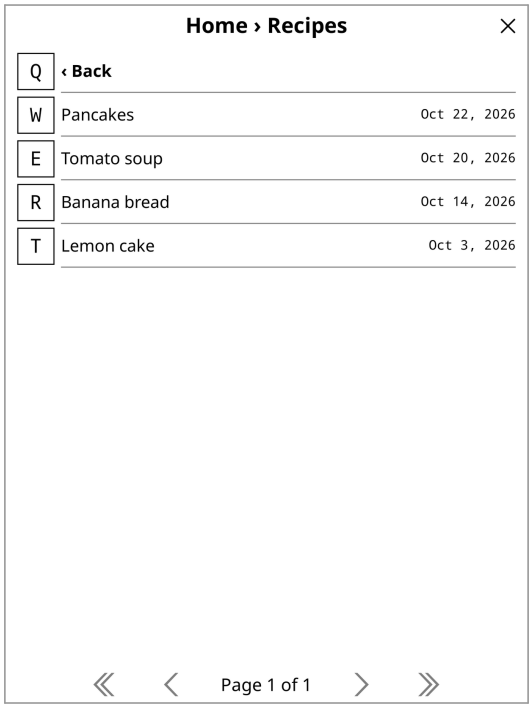

The pages of a OneNote section

- **Open** shows a page to read: typed text, lists, tables and pictures.
- **Download to edit** copies a page into Notes, into a notebook named after the OneNote notebook: handwriting as ink, typed text as text boxes and pictures as pictures. OneNote isn't changed.
- A page you've downloaded before shows "In Notes" and **Open copy in Notes**.

Replace in OneNote

On a page downloaded from OneNote, ⋯ **> Replace in OneNote** puts your edited version back in OneNote in place of the original page, in the same section. OneNote doesn't let apps add handwriting, so your pages go in as pictures (you can still write over them in OneNote). Notes asks before replacing.

Export

⋯ **> Export...** offers:

- **This page as a picture (PNG)** or **All pages as pictures (PNG)**;
- **The notebook as a PDF** (each page as a picture);
- **The PDF with my writing added (annotations)**, for a notebook made from a PDF;
- **This page as text (AI)** or **The notebook as text (AI)** (pages read before aren't read again).


Exports are saved in the **notes/export** folder inside the koreader folder on the Kindle.

Open on the web page

With the Web server plugin installed, ⋯ **> Open on the web page** in a notebook shows a QR code. Scan it with your phone's camera and that notebook opens on the web page, where you can look through its pages and download them. From the notebook list, the same is the first row of Notes' settings (the cog), and opens the Notes page. The web server is started if it isn't running.

Settings

Open the settings with the cog in the notebook list, or ⋯ **> Settings** in a notebook. Settings with more than two choices open a list to pick from. At the top, **AI** switches all AI jobs between Claude, Local AI and Mixed.

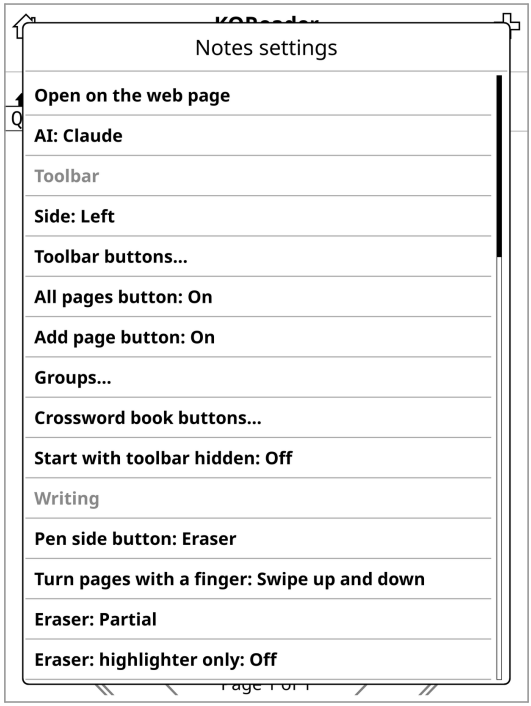

Notes settings

Toolbar

- **Side**: left or right edge.
- **Toolbar buttons...**: the order of the buttons, which ones show (the eye) and Reset.
- **Groups...**: what's in the Add and Tidy groups.
- **All pages button** and **Add page button**.
- **Start with toolbar hidden**.
- **Crossword book buttons...**: the buttons on a crossword book's toolbar (see the Crosswords chapter).

Writing

- **Pen side button**: Eraser, Lasso, Highlighter, Ruler (straight lines) or Nothing.
- **Turn pages with a finger**: Swipe up and down, Swipe left and right, or Off.
- **Eraser**: Partial or Whole stroke. **Eraser: highlighter only**.

- **Pen pressure**: Soft, Normal or Firm.
- **Two pages when turned on its side**.
- **Stroke smoothing**: Off, Light or Strong.
- **Starting pen**: Last used, or one of your favorites. **Favorite pens** (tap to clear).
- **Two-finger tap to undo (hold to redo)**.
- **When closing**: Save automatically, or Ask.

Shapes

- **Shape recognition (hold the pen)**.
- **Snap lines to 0°, 45°, 90°**.
- **Snap line ends to ink**.

New notebooks

- **Template**: the template for new notebooks.
- **Pen pressure**: on or off for new notebooks.
- **Add the date to names**: Off, Before the name or After the name.
- **Suggest names (AI)**.

Notebook list

- **Sort by** and **Default sort**.
- **Reorder notebooks...** (My order).
- **Show notebooks as**: Covers or List.
- **Recent notebooks**: As a folder, At the top or Off.
- **Open the last notebook when Notes opens**.

Screen

- **Light...** (KOReader's brightness and warmth) and **Night mode**.
- **Full refresh**: Every 6 pauses, Every 3 pauses, Every pause or Never.
- **Template lines**: Light, Medium or Dark.
- **Clock and battery** on Notes' screens.
- **Page header (date and page number)**.

- **KOReader gestures (two fingers, edge swipes)**.

Integrations

- **OneNote…**: sign in, pick a notebook, sending options, Browse OneNote….
- **AI (Claude or local AI)…**: keys, local AI addresses and which AI does each job.

Gestures

KOReader gestures in Notes

The gestures you set up in KOReader's Gesture manager also work inside Notes, as long as they can't be a resting palm: two-finger taps and swipes, pinch, spread, rotate, edge swipes and multiswipes. For example, an edge swipe can change the light or open a QuickMenu. One-finger taps and swipes on the page don't trigger them. Turn this off with **KOReader gestures** in Settings > Screen.

Notes actions for gestures

In **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General**:


- **Notes**: open Notes.
- **Notes: today's page**.
- **Notes: quick note**.
- **Today's crossword**.
- **Notes: write on this page** (in the reader, for PDFs and other fixed-page books).

Crosswords

Notes can download crosswords from five newspapers, lay them out for the Kindle and let you solve them with the pen, just as on paper. You can also import a PDF of puzzles, or a crossword file, and write on it the same way.

Everything starts from the **Crosswords** button at the top of the Notes list, beside **+ New notebook**. It has:

- **Get a crossword...**: download a puzzle.
- **Today's crossword**: open (or download) today's puzzle from your usual source. The button shows the source and whether you've started it.
- **Import a puzzle book (PDF, .puz, .ipuz)...**: add puzzles from a file on the Kindle.
- **Stats**: how many you've done and how fast.
- **Crossword settings...**: everything in "Crossword settings" below.
- **Open on the web page**: a QR code that opens the web page's Crosswords tab on your phone (when the Web page plugin is installed).

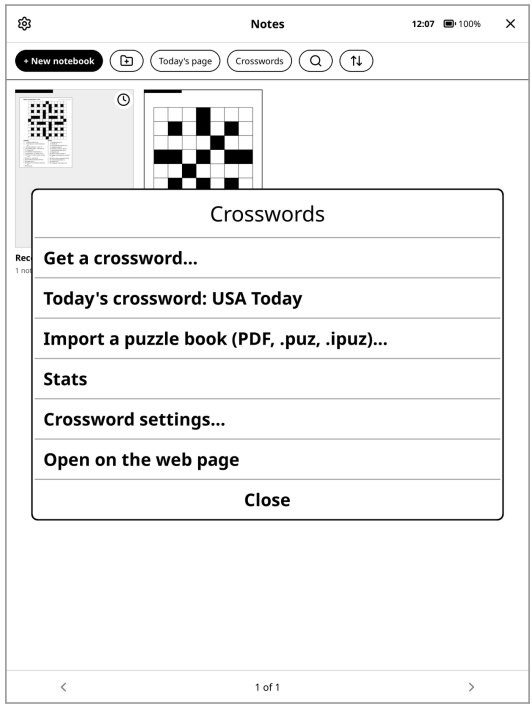

The Crosswords button's menu

Getting crosswords

The sources

- **The Guardian**, in four kinds:
  - **Quick**: short, plain clues. Back to 2001.
  - **Cryptic**: the classic cryptic.
  - **Quiptic**: an easier cryptic, good for learning.
  - **Prize**: a harder cryptic whose answers come out a week later (see "Prize answers" below).
- **USA Today**: daily, back to 2010.
- **Universal**: daily, back to 2019.
- **Washington Post (Sundays)**: the big 21 × 21 Sunday puzzle, with its circled squares. Back to May 2025.

- **New Yorker (weekdays)**: back to 2018.

The crosswords are for your own use.

Get a crossword

1. Turn on Wi-Fi.
2. Tap **Crosswords**, then **Get a crossword…** (or, inside a crossword book, tap ⋯ and **Get a crossword…**).
3. Tap a source. For The Guardian, tap the kind too.
4. Tap a day. The latest five are listed first, with **Today** marked.
   - **Older** and **Newer** step back and forth through the years, five at a time.
   - **Random** picks a puzzle from any year that isn't in your book yet.
   - **Get the last 7 days** downloads every puzzle from the last week that you don't have yet. Use it before a trip without Wi-Fi.



Get a crossword: pick the source, then the day

A message such as **Getting the crossword for Wed 21 Oct from USA Today...** shows while the Kindle downloads it, and the puzzle opens as soon as it's in. If it's already in your book, Notes just opens it, with your writing as you left it.

> Downloads run in the background, so a slow or patchy Wi-Fi connection never freezes the Kindle. Tap the message to stop waiting: the puzzle then isn't opened. A download that gets no answer gives up after a minute or two.

Each source has its own book: "Guardian crosswords", "USA Today crosswords" and so on. They live in the **Crosswords** folder, each in a folder of its own with a crossword cover.

Get new ones automatically

Notes can fetch new puzzles for you.

1. Tap **Crosswords**, then **Crossword settings...**.
2. Tap **Get new ones automatically**.
3. Tick the sources you want (Guardian Quick, Guardian Cryptic, Guardian Quiptic, Guardian Prize, USA Today, Universal, Washington Post, New Yorker).

When you open Notes and Wi-Fi is already on, puzzles from the last 3 days that aren't in your books are added, at most once an hour. This happens quietly in the background while you carry on, and a notice such as "Added 3 new crosswords" says when they're in. Notes never turns Wi-Fi on for this. With Guardian Prize ticked, Prize puzzles also get their answers once they're out. A book you have open at the time is left alone until the next try.

Today's crossword

Today's crossword opens the newest puzzle from one source: the one in your book if you have it, otherwise it downloads it in the background and opens it (KOReader asks to turn on Wi-Fi if needed). If today's isn't out yet, you get the one before.

Pick the source in **Crossword settings... > Today's crossword**, or leave it on **The one last opened** to follow whichever source you used last in Get a crossword.

You can open it three ways:

- **Crosswords > Today's crossword** in Notes.
- A gesture: in KOReader, go to **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Today's crossword**.
- A tile in the Apps launcher (with the Apps plugin installed): **Add shortcut > Crossword**, then pick the source. Each source can have its own tile, and the tile shows whether today's puzzle is started or done.

Recent crosswords on the Apps launcher

With the Apps launcher plugin installed, the launcher has a **RECENT CROSSWORDS** row, under RECENT BOOKS and RECENT NOTEBOOKS, with the puzzles you opened or wrote in most recently: up to 3 cards, or 5 with the Kindle on its side. It covers every crossword book, imported puzzles and PDF puzzle books, but not hidden puzzles or locked notebooks.


- Each card shows a small picture of the grid as you've written it so far, the puzzle's name, and how far you've got: "23 of 78 clues" with a progress bar, or **New**, **Started** or **Done** (always one of these for a PDF puzzle book). The picture is redrawn a moment after you close a puzzle, so it can take a refresh of the launcher to catch up.
- Tap a card to open that puzzle. A locked notebook asks for its PIN first.
- Hold a card for **Open** or **Remove from recent**. A removed card stays off the row until you work on that puzzle again (its state or ticked clues change).
- The row starts empty after updating and fills as you open puzzles.
- To turn it off, open the Apps settings (the gear) and set **DISPLAY > Recent crosswords** to **Off**, or use the web page's Apps tab: **Display > Recent crosswords**. It's on to start with.

Prize answers

The Guardian Prize answers are published a week after the puzzle. Get the same puzzle again after that (or have Guardian Prize ticked in Get new ones automatically) and its answers page is added. Your writing stays.

Solving

Write the letters in the squares with the pen, as on paper. The toolbar down the left has the pen (tap it again for its tips and sizes), eraser, lasso, zoom, Undo, Redo and **Done** (the ✓). Under them are the buttons you've pinned: **Hint**, **Check my answers** and **Refresh screen** to start with. At the bottom are the page arrows, the puzzle list, ⋯ and the button that folds the toolbar away.

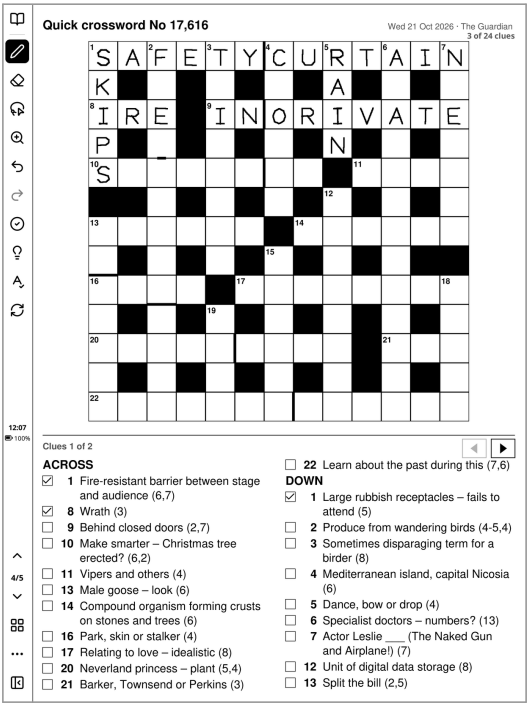

A crossword being solved: letters written in the squares, finished clues ticked, "3 of 24 clues" at the top

Your toolbar buttons

Anything in a crossword book's ⋯ menu can go on the toolbar: Hint, Check my answers, Get a crossword, Page orientation, Open on the web page, Ask AI, Export, Hide page, Rename notebook, Pen pressure, Light, Night mode, Refresh screen and Settings.

1. Tap **Crosswords**, then **Crossword settings…**, then **Toolbar buttons** (or, in a crossword book, ⋯ **> Settings > Toolbar > Crossword book buttons…**).

2. Tick the ones you want. They go under the tools, in the same order as in ⋯.
3. Tap **Done**.

The more you pin, the closer together the buttons sit, so they all fit.

Two-finger tap is Undo and two-finger hold is Redo, as in any notebook.


Tick boxes, clue numbers and the clue arrows all work with a finger, even while you hold the pen near the screen. Finger taps are only ignored while the pen is writing and for a moment after, so a palm resting on the page doesn't tick or turn anything.

Tapping a clue number

Tap a clue's number (in the clue list) with the pen or a finger, and its squares are outlined in the grid, with the clue itself outlined too. If the clue is on another clue page, Notes goes back to the grid's page first.

Tap a number in the grid, and the clues that start in that square are outlined: the Across one and the Down one.

- If one of those clues is on another clue page, it's pinned in a small card just below where you tapped (or above, near the bottom of the page) so you can read it.
  - Drag the card out of the way with the pen or a finger. When you let go, the screen is cleaned up where it moved.
  - Tap its **X** to close it. Otherwise it stays while you work.
- The outline goes away with your next pen stroke, or a finger tap anywhere else.
- The tap doesn't leave a dot.

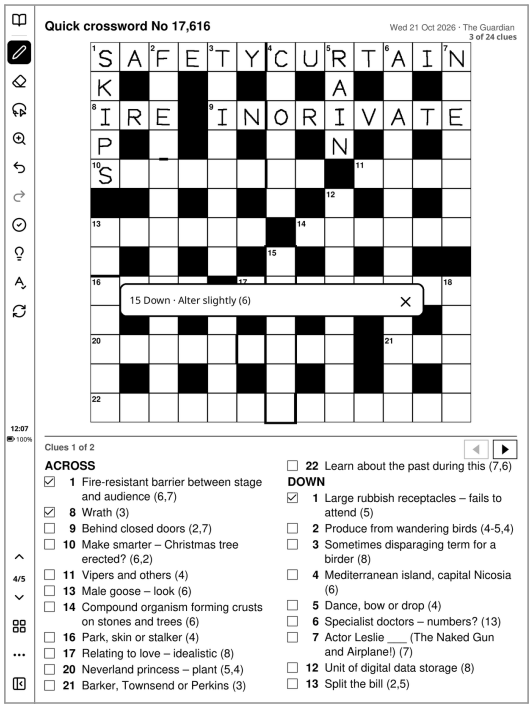

A number tapped in the grid: its clue from the next clue page, pinned by the tap

To turn this off, set **Crossword settings… > Tap a number to find it** to **Off**.

Ticking clues

With **Clue boxes** on (it is to start with), each clue has a small box in front of it.

- Tap the box with the pen or a finger to tick it. Tap again to untick it.
- Or draw a small tick or cross in it: it becomes a neat tick (a mark in a ticked box unticks it).
- Draw a line through several boxes, as if crossing clues out, and they're all ticked.
- Rub a tick out with the eraser to untick it.


The top of the page shows how many are done, such as "23 of 78 clues", and the puzzle list shows it too.

More clues than fit

When the clues don't all fit under the grid (on big puzzles, or with Large clues), the grid stays where it is and only the clues turn.

- A bar above the clues says "Clues 1 of 2", with ◀ and ▶ arrows. Tap them with the pen or a finger.
- The toolbar's up and down arrows turn the clues too.
- Or swipe across the clues with a finger: left or up for the next clues, right or down to go back.

Only the clue part of the screen changes. What you write in the grid shows on every clue page. Anything you write beside the clues stays on that clue page.

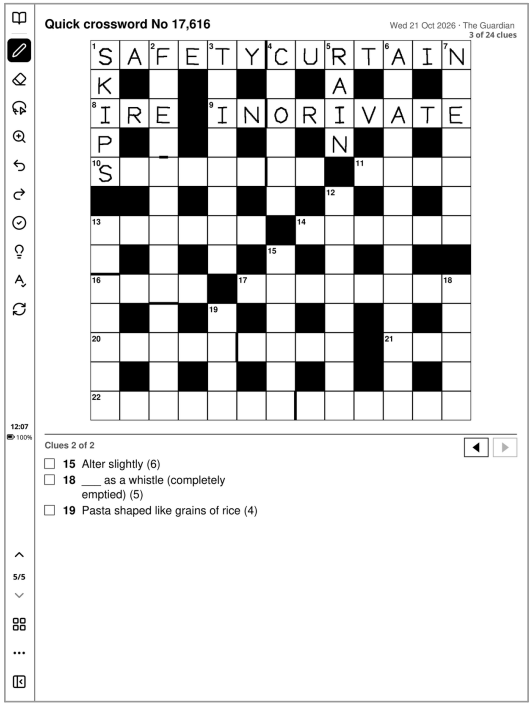


The second clue page: the same grid and writing, the rest of the clues below, "Clues 2 of 2"


Hints

Tap **Hint** (the lightbulb) on the toolbar, or ··· **> Hint**, and pick one:


- **Reveal a letter**: then tap a square. Its letter appears in grey, with a small mark in the square's corner so you can tell it was revealed.
- **Reveal a word**: then tap a clue, or a square of the word. The whole answer appears in grey, each square marked.
- **Check a word**: then tap a clue or a square. Only that word is checked: the AI reads your letters and puts a dot in each square that looks wrong, without showing the right letter.
- **Ask AI for a hint**: then tap a clue or a square. **Asking the AI for a hint…** shows while it thinks (tap it to give up), then a short nudge, never the answer, appears in a card by the clue. Drag it out of the way, or tap its **X** to close it.
- **Show the answers page**: opens the puzzle's hidden answers page.

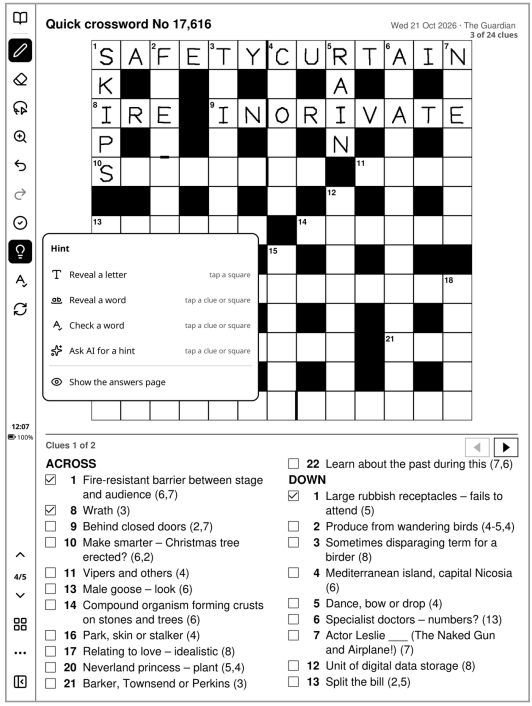

The Hint menu beside the toolbar

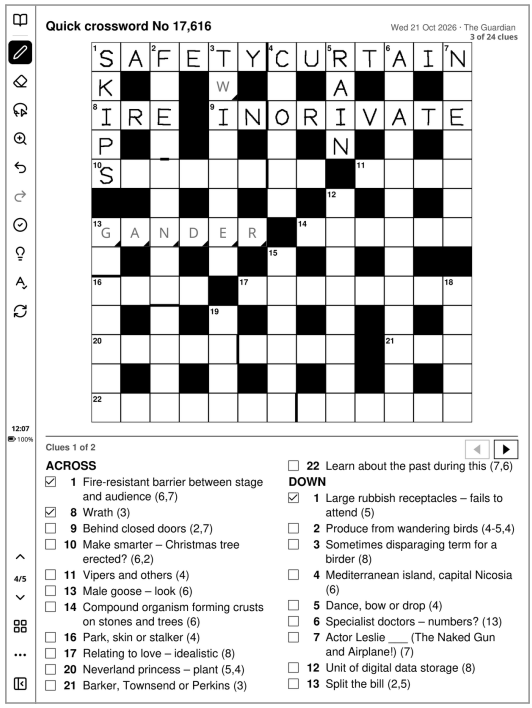

A revealed word and a revealed letter, in grey with a mark in each square's corner

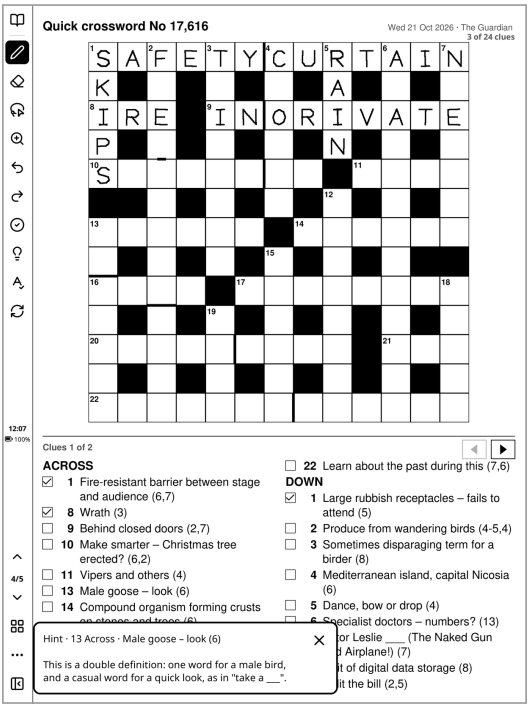

A hint from the AI, pinned by its clue

While a hint waits for your tap, a bar at the bottom says what to tap, with **Cancel**. Tapping a square where an Across and a Down word cross asks **Which word?**.

- Undo takes revealed letters out again.
- The puzzle list counts the hints you used, such as "Done · 14 min · 2 hints".
- If the AI's hint gives the answer away, Notes asks it again; if it still does, the hint isn't shown.

Check a word and Ask AI for a hint need an AI set up first: see "Setting up the AI" below. Claude's hints are noticeably better than a small local AI's for cryptic clues.

Answer

To see a whole answer without the Hint button:


1. Pick the lasso.
2. Draw around a clue, or some squares in the grid.
3. Tap **Answer** (beside **Ask**, below what you circled).

The answer shows, or "No answer yet" for a Prize puzzle whose answers aren't out. Tap **Show in the grid** to put it in its squares, in grey and marked as revealed. Undo takes it out again.

Check my answers

Notes can read what you wrote and tell you which squares look wrong, without giving the right letters away.

1. Tap **Check my answers** on the toolbar (or ⋯ **> Check my answers**).
2. A picture of the grid goes to the AI that reads handwriting (see "Setting up the AI" below).
3. **Checking your answers…** shows while the AI reads the grid (tap it to give up). Then each square that looks wrong gets a small dot, and a line at the bottom says how many, such as "2 squares look wrong (dotted) · 41 filled".
4. Clues whose squares are all right are ticked for you.
5. Tap **Clear dots** when you're done with them.

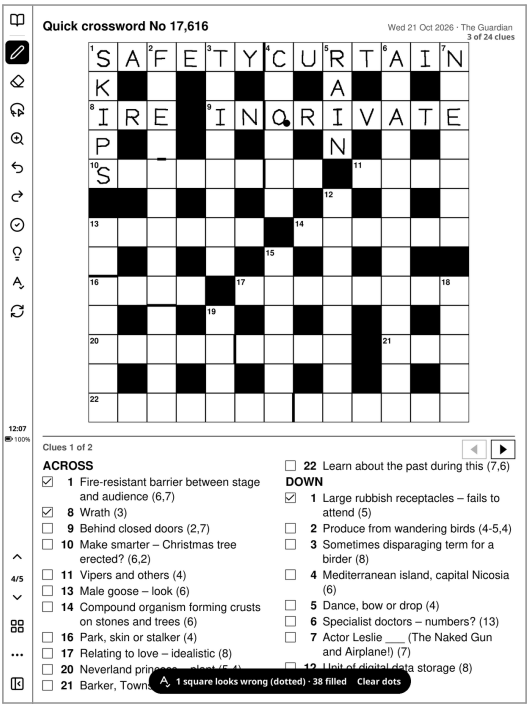

Check my answers: a dot in the square that looks wrong, and how many at the bottom

To check one word, use **Hint > Check a word**. To check some squares, circle them with the lasso and tap **Check**.

If the grid changed while it was being checked (you turned the page, or wrote or erased in it), no dots go on it; Notes says "The grid changed while it was being checked. Check again."

> Claude reads handwriting much more reliably than a small local AI. If many rows come back "not read", write the letters a little larger, or switch reading handwriting to Claude.

Setting up the AI

Check my answers, Check a word, Ask AI for a hint and Ask all need an AI. Notes can use Claude (from Anthropic, over the internet) or an AI you run on your own computer, such as Gemma on Ollama. Without one set up, these features ask you to set one up when you use them.

1. In Notes, tap the gear for **Settings**, then **Integrations > AI (Claude or local AI)...**.
2. For **Claude**: get an API key at platform.claude.com (sign in, then create a key under API keys) and enter it as the **Claude API key**. Claude Max and Team plans include monthly API credits (claude.ai > Settings > Billing); otherwise you pay per use, which for crosswords is a few cents at most.
3. For a **local AI**: under **Local AI (Ollama)...**, enter the **Address at home (Ollama)**, the computer running Ollama and its port (for example http://192.168.1.50:11434; Ollama must be set to accept connections from your network). Pick a **Model** that can read pictures, and tap **Test it**.
4. Choose which AI does each job. Check my answers and Check a word use the one for **reading handwriting**; Ask AI for a hint and Ask use the one for **Ask and Make PDF**.

The Notes chapter's "Setting up AI" section has more detail, including using a local AI away from home.

Ask AI anything

For a question of your own, circle a clue (or part of the grid) with the lasso and tap **Ask**. That part of the page, print and your writing, goes to the AI with your question. ⋯ **> Ask AI...** asks about the whole page.

Zoom

Tap the zoom button and drag a box around the grid with the pen. The zoom then shows that area as large as it fits, on every page of the book. Write while zoomed and the letters land small in the squares, so you can write big. The page arrows keep the zoom. **Change area** draws a new box; tap the zoom button again for the whole page.

The timer and Done


With **Timer** on, each puzzle times itself while it's open and you're writing on it. A pause of more than 3 minutes counts as 3, so leaving it open doesn't add up.

When you finish, tap **Done** (the ✓ on the toolbar). The timer stops and the puzzle list shows "Done · 14 min". Tap ✓ again to mark it not done.

Landscape

Turn the Kindle on its side (or tap ··· **> Page orientation**) and each puzzle is laid out sideways: the grid on the left, the clues beside it.

- What you wrote in the grid comes with you, in the same squares.
- Writing elsewhere on the page stays with the way you wrote it.
- Done, the timer and the ticks are shared between the two.
- **Page orientation** also offers **Inverted portrait** and **Inverted landscape**.

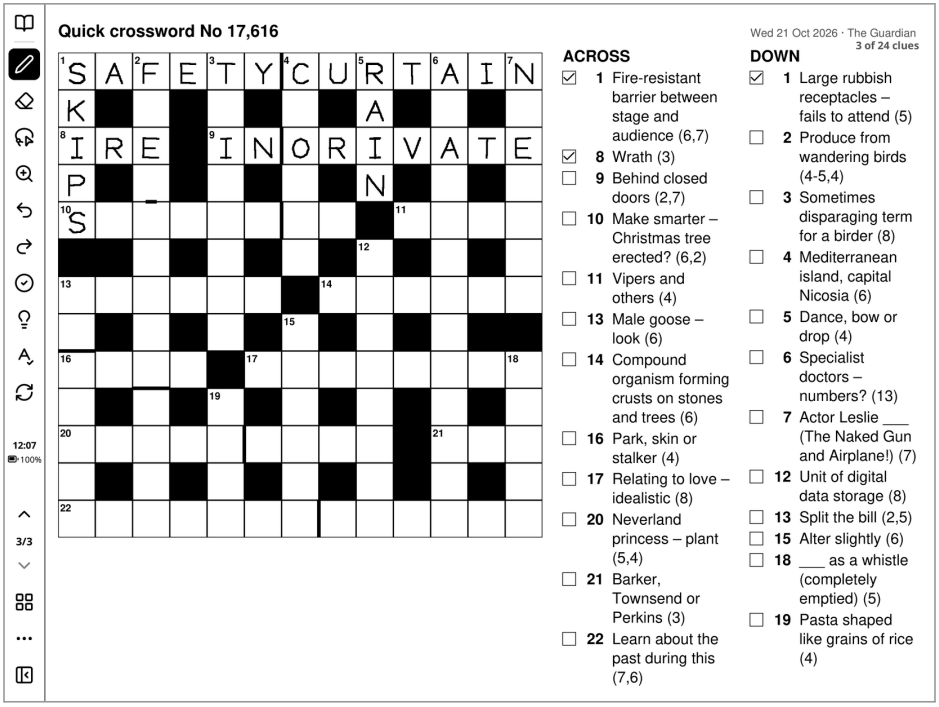

The same puzzle on its side


The answers page

Every downloaded puzzle has an answers page right after it, hidden so you don't turn to it by accident. To see it, tap **Hint > Show the answers page**, or open the puzzle list, tap **Hidden**, then the answers page.

The puzzle list

Tap the grid button on the toolbar to see the book's puzzles.

- Each puzzle is listed once, named by its day, with its state: not started, "Started · 6 min so far" or "Done · 14 min", and how many clues are ticked.
- **Newest first** switches to oldest first.
- **Next unstarted** opens the newest puzzle you haven't started.
- Filter with **All**, **Not started**, **Started**, **Done** and **Hidden**.
- **Stats** shows your streak of days in a row with one done, this week's and this month's count, and for each source how many you've done, with the average and best time.

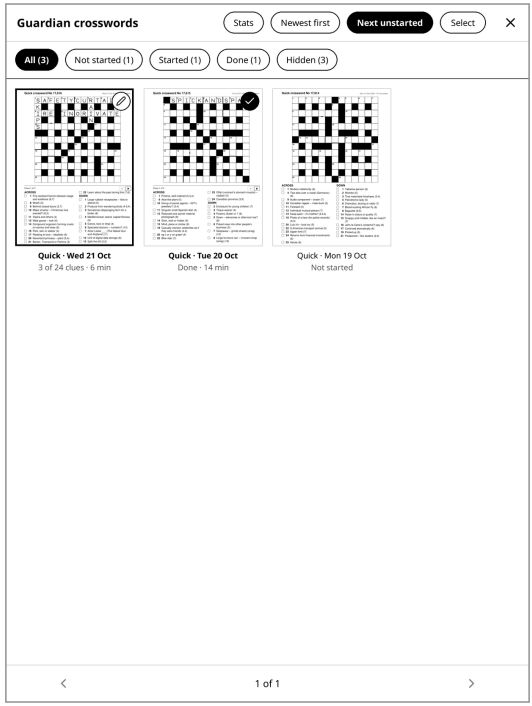

The puzzle list: each puzzle's day, state and time

Hold a puzzle for more:

- **Mark as done** or **Mark as not done**.
- **Hide page** or **Show page**.

- **Clear writing**: rub out everything you wrote on it (after asking).
- **Remove puzzle**: takes its pages, its answers and your writing out of the book, after asking.

Select lets you tick several and mark them done, hide them or clear them together.

To hide the page you're on without opening the list, tap ⋯ **> Hide page**. The page arrows pass hidden pages by.

Finished puzzles

Crossword settings… > Finished puzzles decides what happens to puzzles marked done:

- **Keep**: they stay as they are.
- **Hide after 7 days**: a week after you finish, they move to Hidden. Your writing is kept.
- **Remove after 30 days**: a month after you finish, they're removed from the book.

Importing puzzles

A PDF of puzzles

Any PDF works: a puzzle magazine, a scanned book, a printout, with crosswords, sudoku or word searches. Nothing is read from the pages, so scanned pages work too.

1. Copy the PDF to the Kindle (over USB, or with the web page's Files tab).
2. Tap **Crosswords**, then **Import a puzzle book (PDF, .puz, .ipuz)…**.
3. Pick the PDF.

It becomes a puzzle book in the **Crosswords** folder, each page ready to write on. Done, Hidden, the puzzle list, zoom and Ask AI all work. Answer, Check my answers, clue boxes and tapping numbers need a downloaded or imported crossword, because Notes can't read the puzzle out of a PDF's pages.

Hide a magazine's solution pages (hold the page in the puzzle list > **Hide page**) and the page arrows pass them by.

A .puz or .ipuz file

These are the standard crossword file formats many puzzle sites offer.

1. Copy the file to the Kindle.
2. Tap **Crosswords**, then **Import a puzzle book (PDF, .puz, .ipuz)...**.
3. Pick the file.


It's laid out just like a downloaded crossword and goes into the **Imported crosswords** book, with an answers page when the file includes the answers. Every crossword feature works on it, except that a file with scrambled answers has no Answer or Check my answers.

Crossword settings

Tap **Crosswords**, then **Crossword settings...**.

- **Today's crossword**: the source that Today's crossword, the gesture and the Apps tile open.
- **Get new ones automatically**: the sources to fetch for you (see above).
- **Clue size**: **Normal** or **Large**. Large clues that don't fit carry on to more clue pages; the grid stays put.
- **Clue boxes**: the tick box before each clue. **On** to start with.
- **Tap a number to find it**: tapping numbers to outline clues and squares. **On** to start with.
- **Timer**: times each puzzle. **On** to start with.
- **Finished puzzles**: **Keep**, **Hide after 7 days** or **Remove after 30 days**.
- **Toolbar buttons**: which of the ⋯ menu's items go on the toolbar (see "Your toolbar buttons").
- **Check my answers**: which AI checks the grid (Claude or your local AI). Tap it to change it (it opens **Settings > Integrations > AI (Claude or local AI)...**).

When you change Clue size or Clue boxes, your crossword books are laid out again the next time you open them. Your writing is kept.

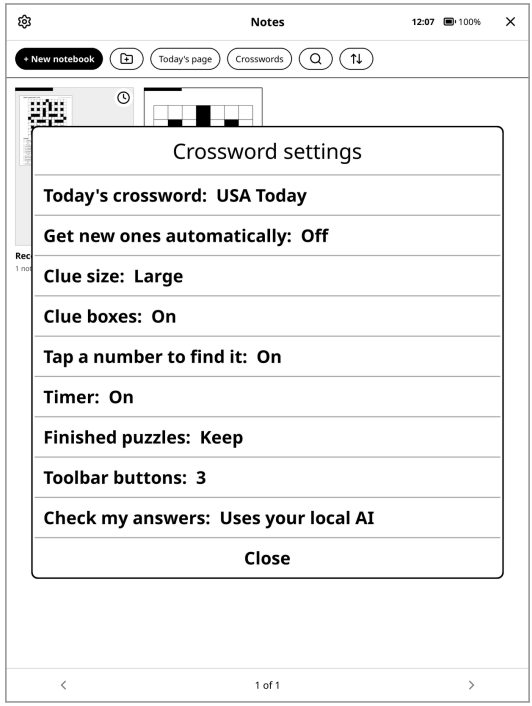

Crossword settings


Crosswords on the web page

With the Web page plugin running, the **Crosswords** tab in your browser lets you manage crosswords from a computer or phone. The Kindle does the downloading, so it needs to be on Wi-Fi.

- Your crossword books, with each puzzle's day, state and time.
  - **Open on Kindle** opens that puzzle on the Kindle.
  - **Remove** takes it out of the book.
- **Get crosswords**: pick a source (and for The Guardian, the kind), tick the days you want (**Older ›** and **‹ Newer** move through them), then tap the **Get** button. Days already in the book say "(in the book)". The Kindle downloads them in the background: the button says "Getting 3..." until they're in, then a

message says how many were added. For The Guardian, the list of days can take a moment to appear while the Kindle fetches it.

- **Import PDF, .puz or .ipuz**: upload a file from your computer. A PDF becomes a puzzle book; a .puz or .ipuz goes into Imported crosswords.
- **Crossword settings**: the same settings as on the Kindle.

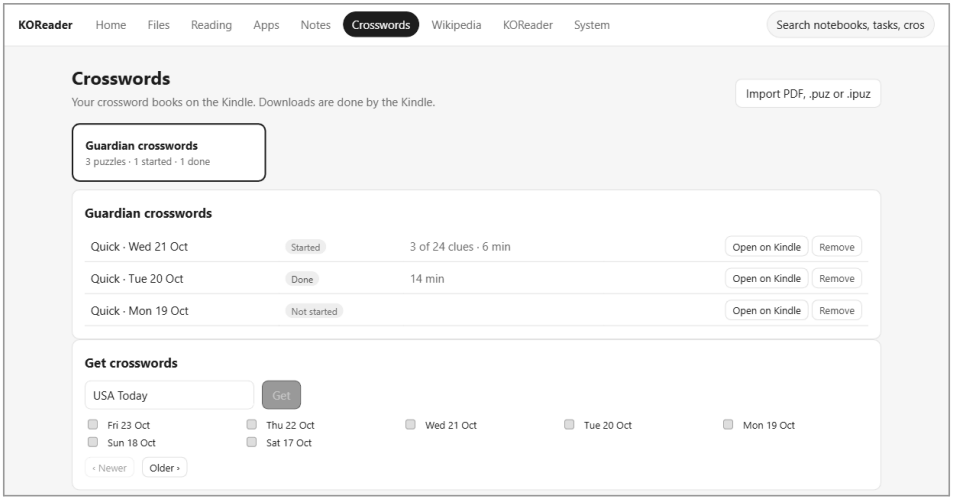

The web page's Crosswords tab

To open it on your phone straight from the Kindle, tap **Open on the web page**: in a crossword book it's in ⋯, and it's also in the **Crosswords** button's menu. The Kindle starts the web page if it isn't running and shows a QR code. Scan it with your phone's camera and the Crosswords tab opens there, at the book and puzzle you were on.

A book that's open on the Kindle can't be changed from the web page. Close it on the Kindle first.

Wikipedia


Search and read Wikipedia on the Kindle, and save articles to read without Wi-Fi. Articles open in KOReader's reader, so your font, size, margins, highlights and the dictionary all work.

Opening Wikipedia


- **Tools > Wikipedia** in KOReader's menu.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Wikipedia**.
- The **Wikipedia** tile on the Apps launcher.
- An article you read before, from **Continue reading**, the launcher's recent books, KOReader's history or the **Wikipedia** folder in the Library: it opens with the Wikipedia toolbar too.

The front page

- The **search box** at the top: type a few words and tap **Search**. Tap a result to read it.
- **Random** opens a random article.
- **EN** at the top right is the language; tap it to choose another. The gear opens the settings.
- The back arrow at the top left closes Wikipedia and goes back to where you were: the Apps launcher if you opened Wikipedia from it (or opened an article from Continue reading or a recent list), the book you were reading, or the Library.
- Swipe left or right (or tap the arrows at the bottom) when a list has more than one page.

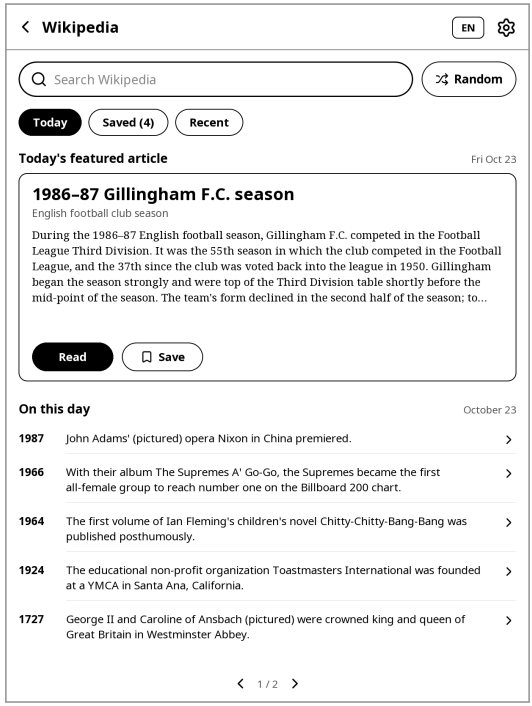

The front page: Today, with the featured article and On this day

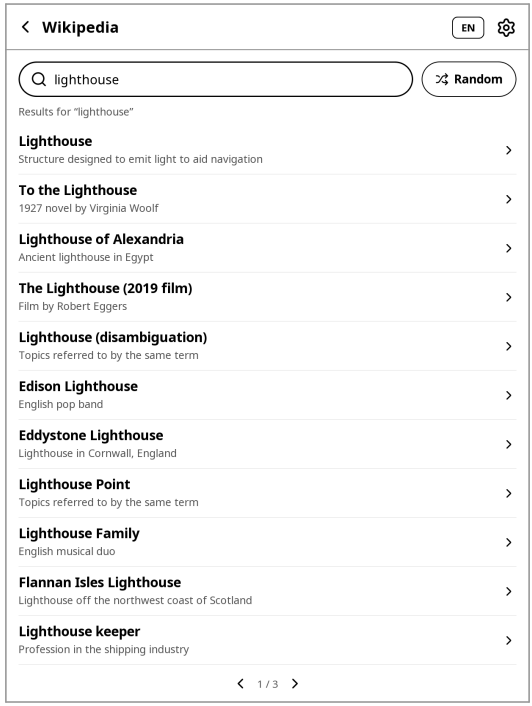

Search results


Today

- **Today's featured article**: tap **Read** to open it, or **Save** to keep it on the Kindle without opening it.
- **On this day**: events from this date in history. Tap one to read its article; when an event mentions several articles, choose one. **All events** lists the rest.
- **In the news** and **Most read yesterday** can be added in the settings.
- Today needs Wi-Fi the first time each day (**Loading today's articles...** shows meanwhile); after that it shows without Wi-Fi until midnight.
- Without Wi-Fi, Today shows **Turn on Wi-Fi** and your saved articles.

Saved

- Every article saved on the Kindle, with its size and when it was saved. Saved articles open without Wi-Fi.
- **Newest first** at the top right switches to **By title**.


- Hold an article for **Open**, **Update** (download the latest version), **Open on the web page** and **Remove**.
- **Select** at the bottom picks several articles to remove at once.
- Saved articles are EPUB files in the **Wikipedia** folder, so they also show in the Library.

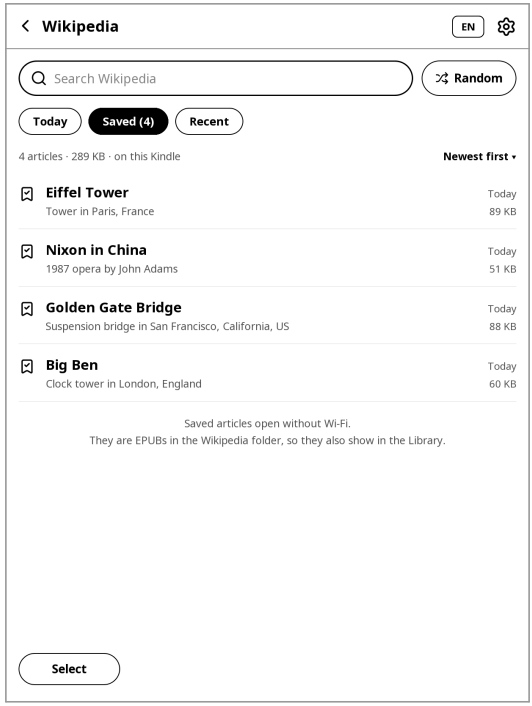

Saved articles

Recent

- Every article you opened, by day, with the page you got to. The bookmark marks the saved ones.
- Tap one to open it again. Articles that aren't saved may need Wi-Fi again.
- Hold one for **Remove from Recent**; **Clear recent** at the bottom clears the list.

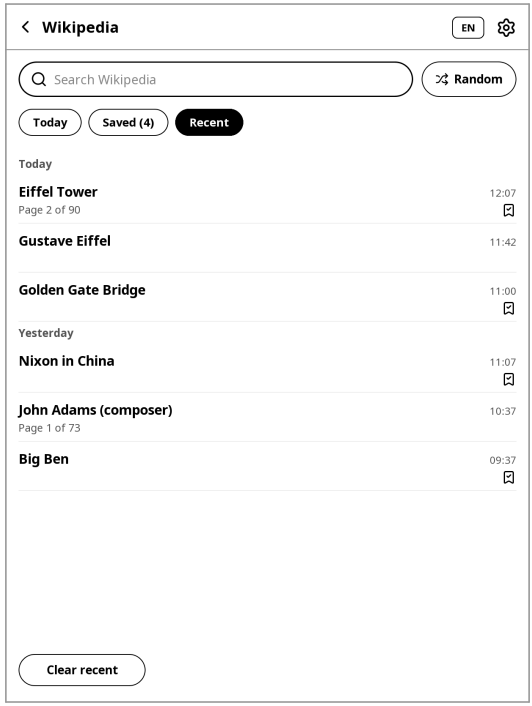

Recent articles, by day

While Wikipedia downloads

- Searching, opening, saving and updating articles, previews and languages download in the background, with a message such as **Opening…**, **Searching…** or **Downloading “Nixon in China”…**. The Kindle keeps responding meanwhile.
- Tap the message to stop. A download that is stopped leaves nothing half-saved.
- With Wi-Fi off, KOReader asks to turn it on first.

Reading an article

An article opens like a book, with the Wikipedia toolbar in place of KOReader's status bar. Tap or swipe to turn pages as in any book.

Your reading settings (font, size, zoom, margins, spacing) carry from one article to the next: change them in one article and the next one you open looks the same.



Top floor	276 m (906 ft)[2]
Technical details	
Floor count	4 (3 accessible, 1 residual)[3]
Lifts/elevators	8[4]
Design and construction	
Architect	Stephen Sauvestre
Structural engineer	Maurice Koechlin Émile Nouguier
Main contractor	Compagnie des Etablissements Eiffel
Website	
	toureiffel.paris
Monument historique	
Official name	Tour Eiffel
Type	Classé
Designated	1964
References	
I. ^*"Eiffel Tower". Emporis. Archived from the original on 22 April 2016.*	
UNESCO World Heritage Site	
Part of	Paris, Banks of the Seine
Criteria	Cultural: i, ii, iv
Reference	600
Inscription	1991 (15th Session)

The **Eiffel Tower** (/ˈaɪfəl/ ⓘ *EYE-fəl*; French: *Tour Eiffel* [tuʁ ɛfɛl] ⓘ) is a lattice tower on the Champ de Mars in Paris, France. It is named after the engineer Gustave Eiffel, whose company designed and built the tower from 1887 to 1889.


Locally nicknamed "*La dame de fer*" (French for "Iron Lady") for its use of wrought iron, it was constructed as the centrepiece of the 1889 World's Fair, and to crown the centennial anniversary of the French Revolution. Although initially criticised by

An article with the toolbar on the left: the summary box, then the article


The toolbar

- **Home** (the house): the front page. The article stays open underneath.
- **Back** (the arrow): the article you came from, on the page you left, or the front page.
- **Search**: search Wikipedia for another article.
- **Contents**: the article's sections. The section you are in is marked; tap a section to go there. Tap outside the panel to close it.

- **Save** (the bookmark): keeps the article on the Kindle. It fills in when the article is saved; tap it again to remove the article from the Kindle (you keep reading it).
- **Language**: the same article in another language.
- **Text** (the T): KOReader's font, size and margin settings.
- At the bottom (or right, with the toolbar at the top): page up, the page you are on, page down.
- **More** (the three dots): **Update** (download the article again: its latest version, with or without images as the **Images** setting is now; you stay on the same page), **Open on the web page**, **Wikipedia settings**, **KOReader menu** and **Close Wikipedia** (back to where you were, as the front page's back arrow).
- **Hide toolbar**: gives the page the whole screen. A small tab in the top left corner brings the toolbar back.

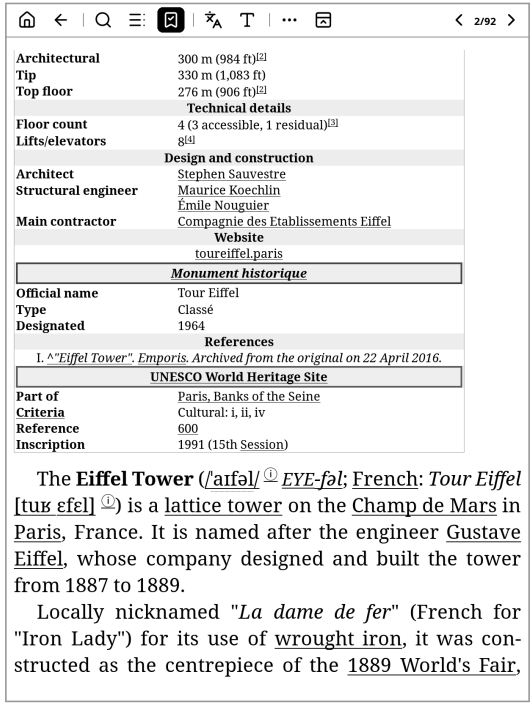


The toolbar across the top (Settings > Toolbar > Top)

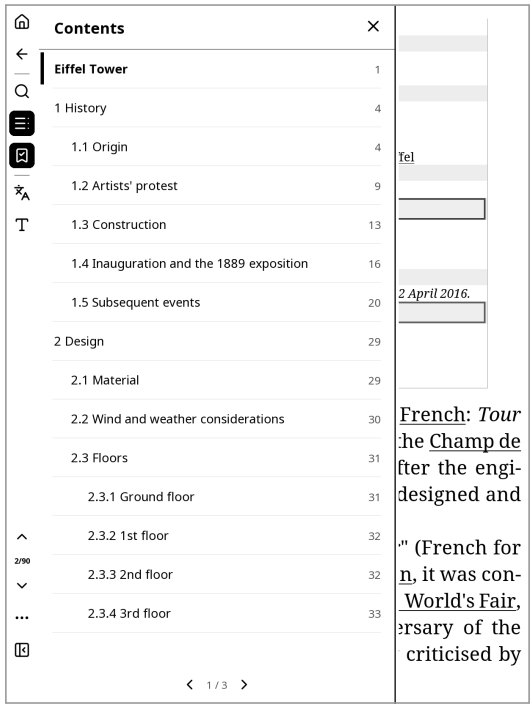

Contents: the article's sections, the one you are in marked

Links and sources

- Underlined words are links to other articles. Tap one to see a short preview, then **Open** to read it or **Save** to keep it for later. A link to an article you have saved opens straight away, without Wi-Fi.
- The small numbers in brackets are the article's sources. Tap one to see that source at the bottom of the page without losing your place.

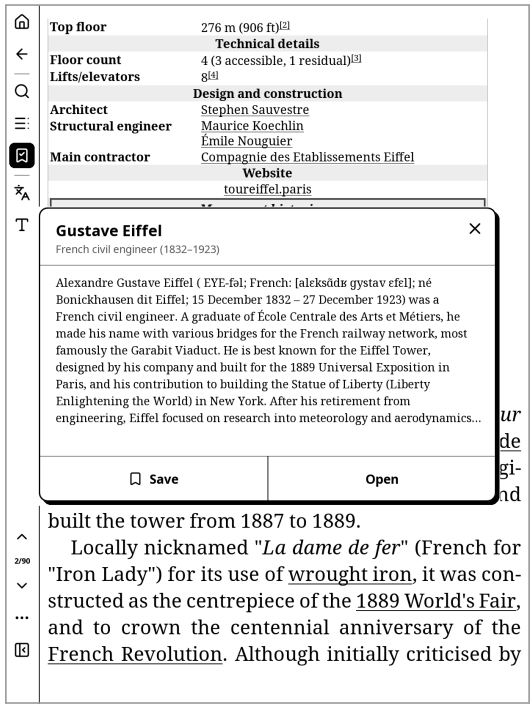

A link's preview, with Save and Open

- The full list of sources is at the end of the article, under **References** in **Contents**.
- Each article starts with Wikipedia's summary box (born, died, location and so on) when the article has one, then its sections one after another.


Settings

Tap the gear on the front page, or **More > Wikipedia settings** while reading.

- **Language**: which Wikipedia to use. Search, articles and **Random** work in every language; Today's featured article and On this day only in the languages Wikipedia publishes them in. **Other...** takes any language code, such as **fr** for fr.wikipedia.org.
- **Images**: off by default. With images on, articles take longer to download and saved files are bigger. Turning it on doesn't change articles already on the Kindle: an unsaved one you read before is downloaded again with its images

when you open it (with Wi-Fi), and **Update** (in **More** while reading, or by holding a saved article) adds them to any article. Hold a picture to see it full screen.

- **Toolbar**: **Left** (like Notes) or **Top**.
- **Tap a link**: **Preview** shows a short preview first; **Open** opens the article straight away.
- **Save to**: the folder for saved articles (the **Wikipedia** folder in the Library at first).
- **Front page**: which sections Today shows.
- **Keep recent**: how many articles the Recent list keeps.
- **Clear recent**: empties the Recent list.
- **Open on the web page**: shows a QR code for the web page's Wikipedia tab.

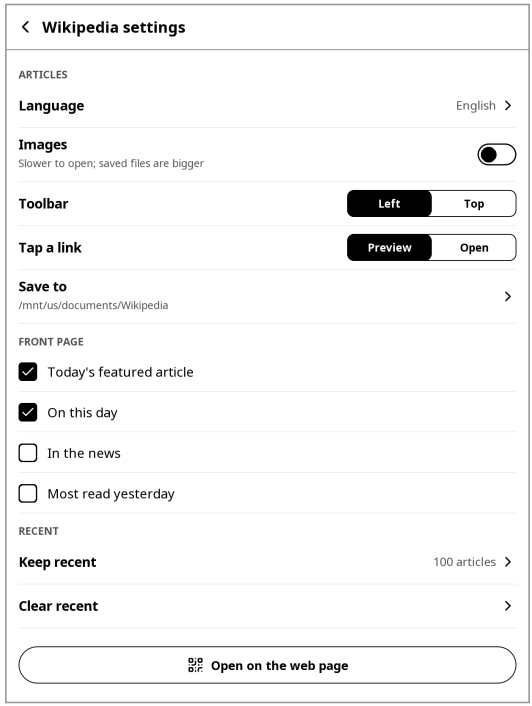


Wikipedia settings

On the web page

The web page's **Wikipedia** tab (with the web server on):

- **Saved on this Kindle**: each saved article with **Download EPUB** (to read it on your computer or phone) and **Remove**.
- **Save an article to this Kindle**: search Wikipedia from your phone or computer (the search goes straight to Wikipedia from your browser) and tap **Save**. The button shows **Saving…** while the Kindle downloads the article over its own Wi-Fi, in the background, so you can keep using the Kindle; then it shows under **Saved** on the Kindle and on the page.
- **Recent on this Kindle**: what you read lately, with **Read on wikipedia.org** and **Save to Kindle**.

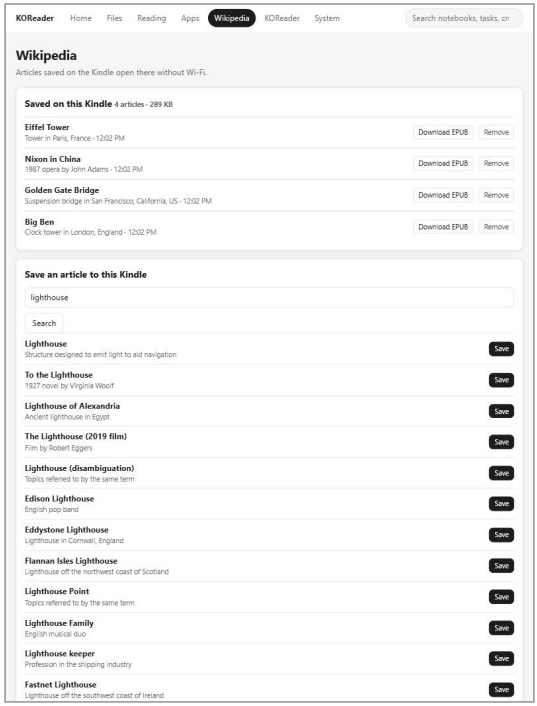


The web page's Wikipedia tab: saved articles, and an article searched to save

Syncthing

Syncthing keeps folders on the Kindle in sync with your computer or phone, directly over Wi-Fi: no account and no cloud. Put a book or a PDF in a shared folder on your computer and it shows up on the Kindle a few seconds later; change something on the Kindle and it goes back the other way.

This plugin is based on **koreader-syncthing** by jasonchoimtt (github.com/jasonchoimtt/koreader-syncthing, AGPL-3.0), with its own app, a launcher tile and a web page tab added. Syncthing itself is made by the Syncthing project (syncthing.net).

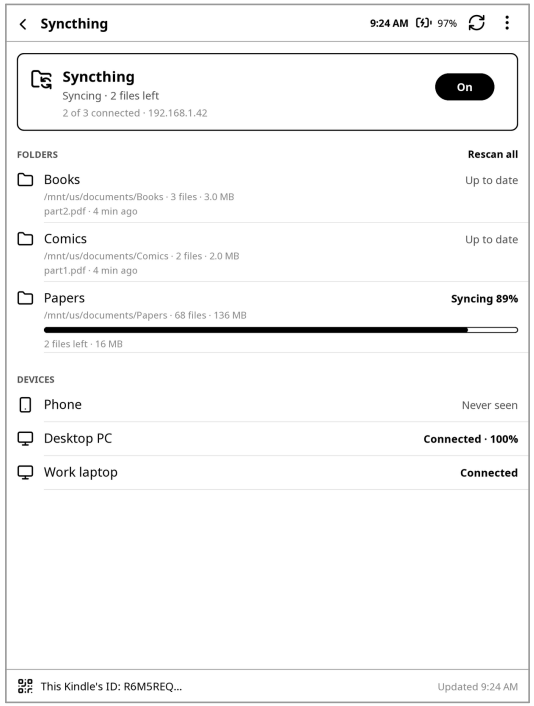

The Syncthing app, with a folder syncing

Opening it

- The **Syncthing** tile on the Apps launcher. Its line says what Syncthing is doing: **On · Up to date**, **On · Syncing · 3 files left**, or **Off**.
- **Settings (gear) > Network > Syncthing** in KOReader's menu.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Syncthing** (opens the app) or **Turn Syncthing on or off**.


The back arrow at the top left closes the app. ↻ reads the status again (it also does that by itself every few seconds while the app is open).

Setting it up

You need Syncthing on the other device too: **syncthing.net** for a computer, or Syncthing-Fork on Android.

1. Tap **Off** at the top right of the Syncthing box to turn it **On**. The first start takes a few seconds (**Starting…**).
2. Tap **This Kindle's ID** at the bottom. The Kindle shows its ID as a QR code.
3. In Syncthing on your computer or phone, choose **Add Remote Device** and scan the code or type the ID.
4. On the Kindle, the computer shows up under **Requests**: "Desktop PC wants to connect". Tap **Accept** and give it a name (it suggests the computer's own name).
5. On the computer, share a folder with the Kindle (in the folder's **Sharing** tab, tick the Kindle).
6. On the Kindle, the folder shows up under **Requests**: "Desktop PC shares “Papers”". Tap **Accept** and check where it goes. It starts in your home folder (for example `/mnt/us/documents/Papers`), so it shows in the Library. Tap **Add**.

The folder syncs straight away.

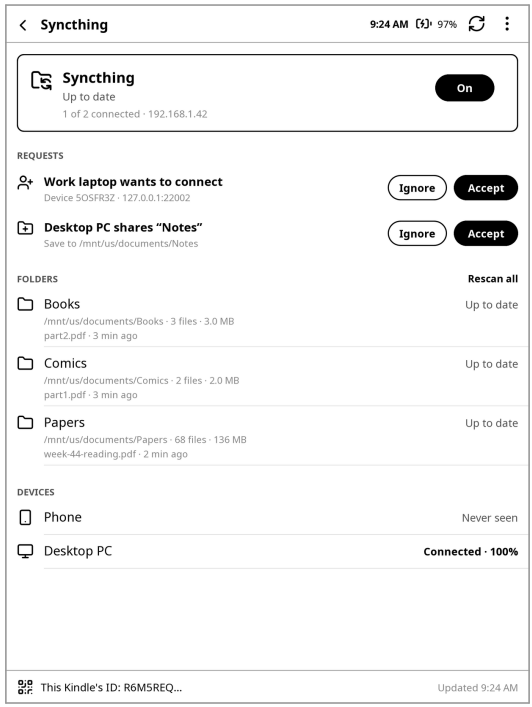

Requests: a new device and a shared folder

Ignore on a request means Syncthing won't ask about that device or folder again. To change your mind later, use Syncthing's own web page (see the menu below).

The app


- **The Syncthing box**: what Syncthing is doing ("Up to date", "Syncing · 2 files left", "Scanning Books", "Errors in Papers", "No devices connected"), how many devices are connected, and the Kindle's address on the Wi-Fi. **On** / **Off** starts or stops it.
- **REQUESTS**: only when a device wants to connect or shares a folder (see above).
- **FOLDERS**: each folder with its state: **Up to date**, **Syncing 42%** (with a progress bar and what's left), **Scanning**, **Paused**, or **Out of sync** (some files couldn't be synced: see **Details**). Under the name: where it is, how many files

and how big, and the last file that changed. **Rescan all** looks for changes in every folder now (Syncthing also does that by itself every hour, and sooner for changes made on the Kindle).

- **DEVICES**: your other devices: **Connected** (with how much of what you share it has, such as "Connected · 100%"), **Paused**, or when it was last seen.
- **At the bottom**: **This Kindle's ID**, and when the status was last read. A long list turns pages: swipe, or tap the arrows at the bottom.

When Syncthing is off, the folders and devices still show, so you can see what will sync.

Tapping a folder

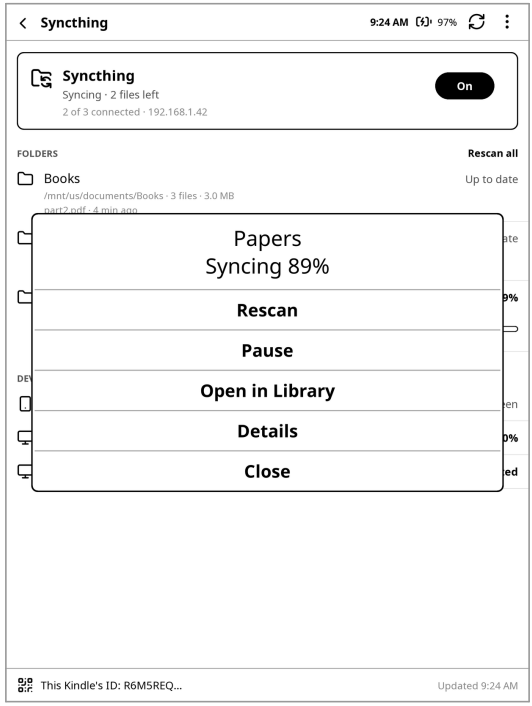

A folder's menu


- **Rescan**: look for changes in this folder now.
- **Pause** / **Resume**: stop syncing this folder for now.
- **Open in Library**: the folder in KOReader's file browser.

- **Details**: where it is, its files and size on the Kindle and in all, errors, when it was last scanned, the devices it's shared with, and its folder ID.

Tapping a device

- **Pause** / **Resume**: stop syncing with this device for now.
- **Details**: its device ID, its address and Syncthing version while connected, what it still needs, and when it was last seen.


This Kindle's ID

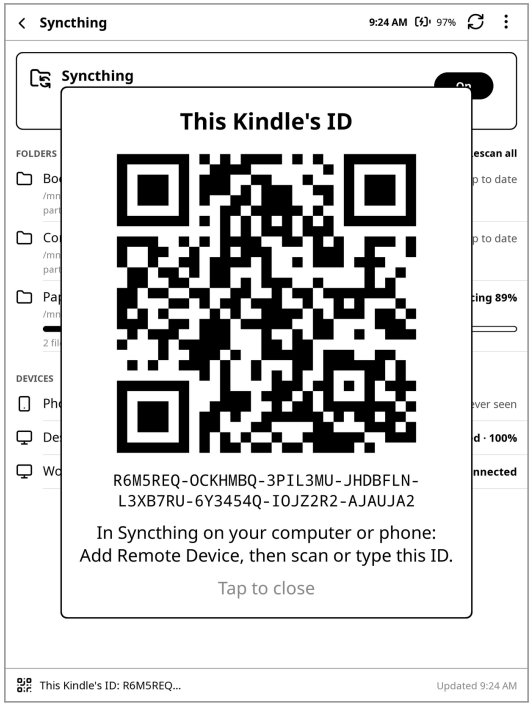

This Kindle's ID

The QR code and the full ID, to add the Kindle from Syncthing on another device. Tap anywhere to close it.

The menu

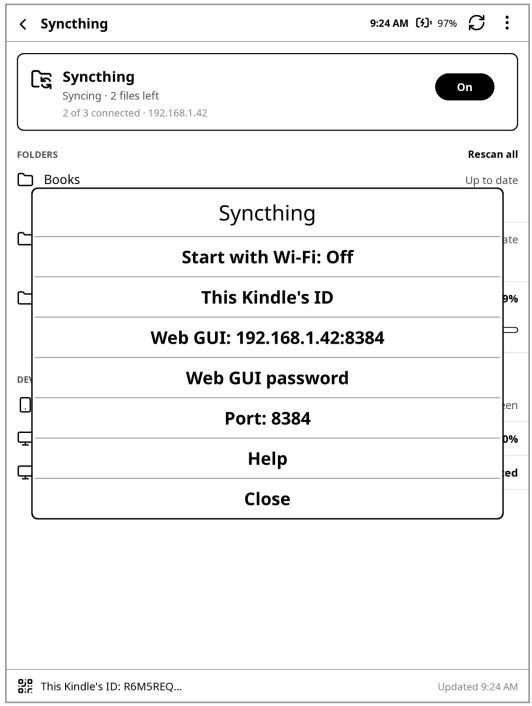

The menu

- **Start with Wi-Fi**: when on, Syncthing starts by itself whenever the Kindle's Wi-Fi connects, and stops before Wi-Fi goes off. If you turn Syncthing off by hand, it stays off until Wi-Fi connects again.
- **This Kindle's ID**: as at the bottom of the screen.
- **Web GUI**: the address of Syncthing's own web page (such as `192.168.1.42:8384`), for settings that aren't in the app: folder types (Send Only, Receive Only), ignore patterns, versioning, ignored devices and folders, and more. Open it in a browser on the same Wi-Fi. The user name is `syncthing`; set a password first.
- **Web GUI password**: sets that password (Syncthing must be on).
- **Port**: the web GUI's port, 8384 unless something else uses it. Change it while Syncthing is off.
- **Help**: a short version of the setup above.

On the web page

The web page (see the Web server chapter) has a **Syncthing** tab with the same things, handy with a keyboard:

- **Turn on** / **Turn off**, **Rescan all**, and **Start with Wi-Fi**.
- **This Kindle's ID** with **Copy**, to paste into Syncthing on your computer.
- **Requests** with **Accept** (a name for a device; for a folder, where it goes on the Kindle) and **Ignore**.
- **Folders** with their state and a progress bar while syncing, **Rescan** and **Pause** / **Resume**.
- **Devices** with their state and **Pause** / **Resume**.
- A link to Syncthing's own web page.

While Syncthing is on, the tab updates itself every 5 seconds.


Good to know

- **Nothing syncs while the Kindle sleeps**: Wi-Fi is off then. Leave the Kindle awake (on the launcher or in a book) with Wi-Fi on while a big folder syncs.
- **Battery**: Syncthing uses some battery while it runs. **Start with Wi-Fi** keeps it off whenever Wi-Fi is off.
- **Leaving KOReader** doesn't stop Syncthing. Turn it off first if you don't want it running behind the Kindle's own home screen.
- **Same Wi-Fi**: the Kindle finds your devices on the same Wi-Fi by itself. Elsewhere it can still connect through Syncthing's relays, more slowly.
- **Files open in KOReader**: if a book changes on the computer while it is open on the Kindle, close and open it again to see the new version.
- This Syncthing app took the place of the earlier Syncthing plugin: the Kindle kept its device ID, its folders and its devices.

SSH

SSH connects the Kindle to your other devices (a PC, a NAS, a Raspberry Pi) so you can run commands on them and read what they print. Save a device once, with a key or a password, then run a saved command with one tap, type your own, or open a live session.

It uses KOReader's own SSH program (`dbclient`, which comes with KOReader for Kindle). Everything is kept on the Kindle in KOReader's settings folder (`koreader/settings/sshclient`).

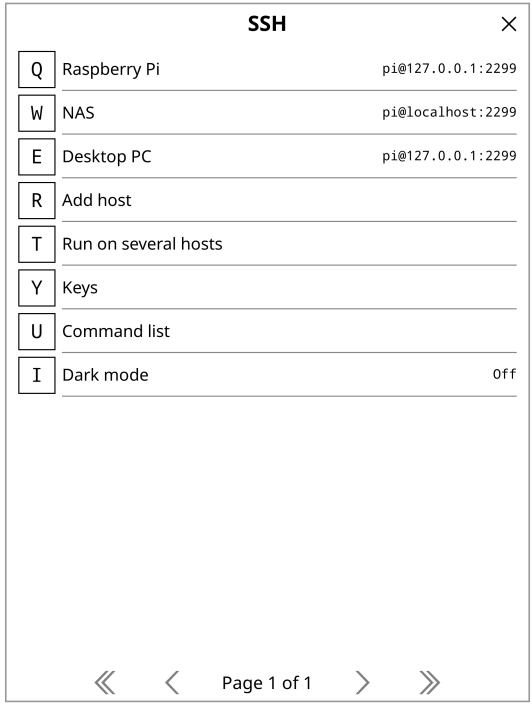

SSH: the saved hosts

Opening it

- The **SSH** tile on the Apps launcher. Its line says how many hosts are saved.
- **Settings (gear) > Network > SSH** in KOReader's menu.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > SSH** (opens it) or **SSH: run a saved command** (pick which; it runs straight away and shows the output).

The × at the top right closes a page.

Adding a host


1. Tap **Add host**.
2. Fill in **Name** (anything, for example "Raspberry Pi"), **Address** (its IP address or name, for example `192.168.1.20` or `nas.local`), **User** (your user name on that device) and **Port** (22 unless you changed it). Tap **Next**.
3. Choose how to sign in:
   - **Key**: a key on the Kindle (see Keys below). The safest choice, and you never type a password.
   - **Password**: saved on the Kindle, in KOReader's settings folder.
   - **Ask for password**: the Kindle asks every time you connect.

The device needs an SSH server: on Linux and a Raspberry Pi it is usually there (`sudo apt install openssh-server`); on Windows, add **OpenSSH Server** in **Settings > System > Optional features**; on a Mac, turn on **Remote Login** in **System Settings > General > Sharing**.

You can also add and edit hosts on the web page (see below), which is easier with a computer keyboard.

Trusting a host

The first time the Kindle connects to a host, it shows the host's key fingerprint and asks **Trust this host?** Tap **Trust**. The Kindle remembers the key, and next time it connects without asking.

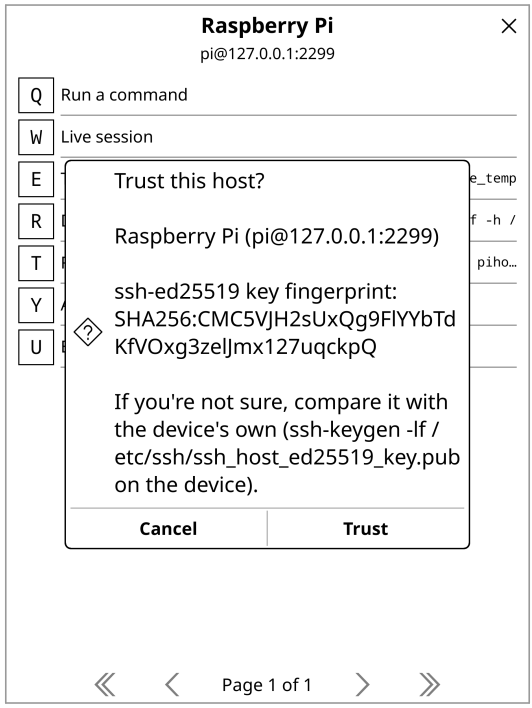


Trust this host?

If a host's key changes later (it was reinstalled, or got a new address), the Kindle says **The host key of … has changed** and doesn't connect. If you know why it changed, tap **Trust new key**. If you don't, tap **Cancel**: someone could be pretending to be your device.

Edit host > Forget host key removes a saved key, so the Kindle asks again next time.

A host's page

Tap a host to open its page.

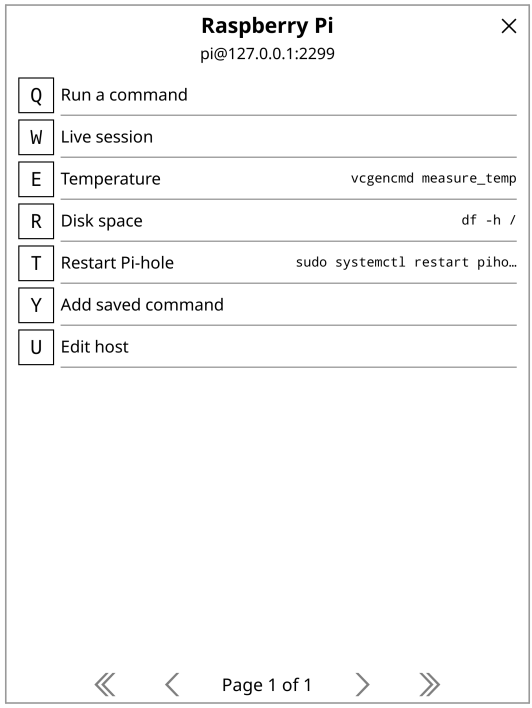


A host's page

- **Run a command**: type a command and tap **Run**. **Commands** pastes one from your lists (see below), and **Save** keeps the command on this host for one-tap use.
- **Live session**: an interactive shell on the device (see below).
- The host's **saved commands**: tap one to run it.
- **Recent commands**: the last 10 commands you ran on this host. Tap to run again.
- **Add saved command** and **Edit host** (name, address, user, port, sign-in, password, **Forget host key**, **Delete host**).

Running a command

While a command runs, the Kindle shows **Running on …**; tap the message to stop it. Commands stop by themselves after 5 minutes. The Kindle keeps working meanwhile: the connection runs in the background.

The output opens in a page with a monospace font. Colour codes are removed. If the command failed, the end says why: **Exit status 1**, **Can't sign in** (check the user name, password or key), or **Can't connect** (check the address, and that the device is on).

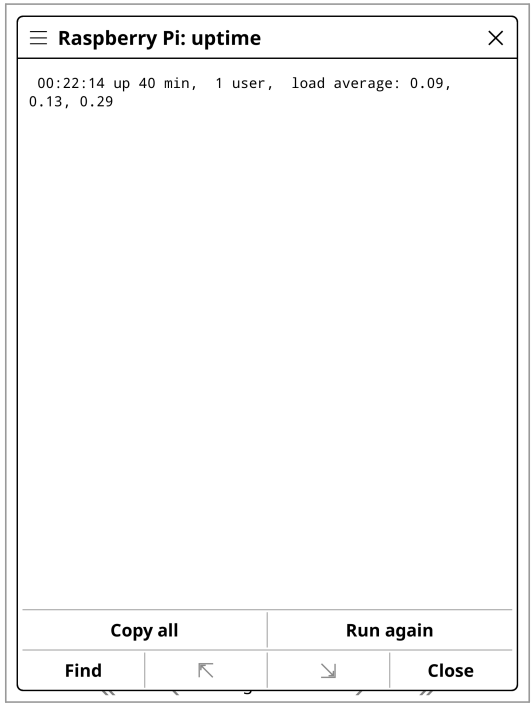


The output of a command

- **Copy all** copies the whole output to KOReader's clipboard.
- Long-press a word to copy it, or long-press and drag to copy a part.
- **Run again** runs the same command again.
- **Find** searches the output; ⇱ and ⇲ jump to the top and bottom.

Commands that use `sudo` usually ask for a password, which a command run this way can't answer. Use them in a live session, or set up passwordless sudo on the device.

Commands

Commands in the command box (and in a live session) lists, in order:

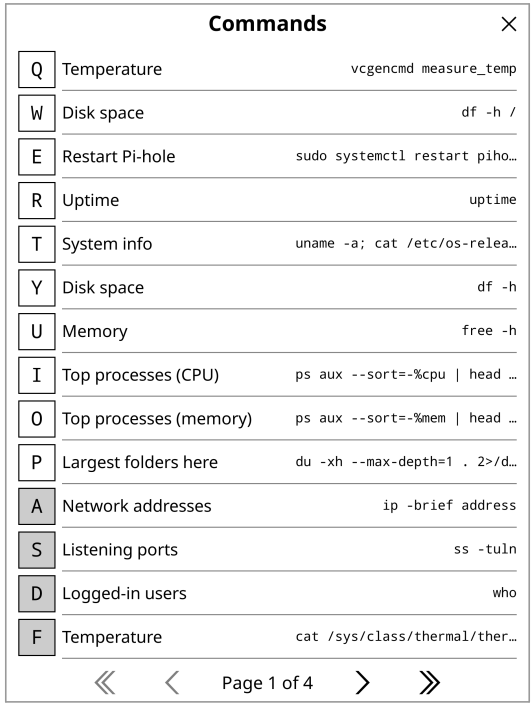

Commands to paste

- **Paste**: what's on KOReader's clipboard (from **Copy text**, **Copy all** or elsewhere in KOReader).
- This host's saved commands, then its recent commands.
- The **Command list**: commands for any host.

Tapping one pastes it where you type, so you can change it before you run it.

The command list


Command list (on the SSH page) comes with over 50 built-in commands:

- **Any Linux**: Uptime, System info, Disk space, Memory, Top processes (CPU and memory), Largest folders here, Network addresses, Listening ports, Logged-in users, Temperature, Failed services, Service status, Restart a service, Recent errors, Restart, Shut down.
- **Docker** (containers, disk use, Compose status and update) and **ZFS** (pool status and space, for TrueNAS and others).
- **Debian/Ubuntu**, **Fedora/RHEL**, **Arch**, **openSUSE** and **Alpine**: updates, upgrade, clean up, and "restart needed?".
- **Flatpak** and **Snap** updates, **Raspberry Pi** temperature and throttling.
- **Windows** (system info, running programs, disk space, restart, shut down) and **macOS** (updates, battery).

Tap a command to edit it. **Add command** adds your own. **Restore built-in commands** puts back any built-in ones you deleted.


Long-press menus

Long-press almost anything for more:

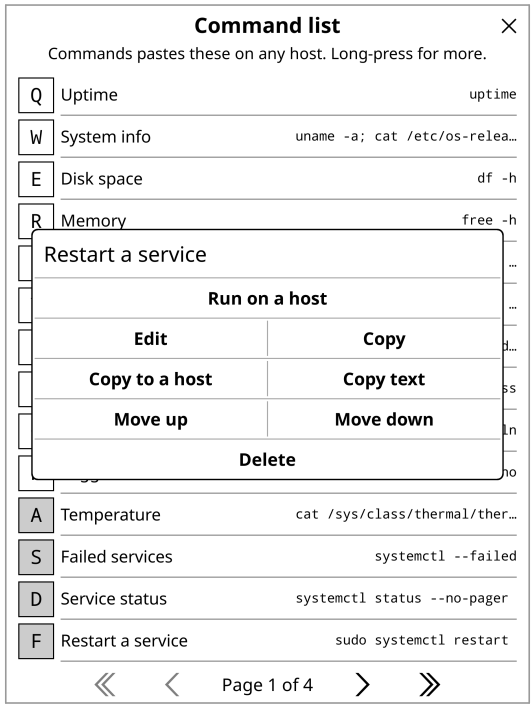

Long-press on a command


- **A command** (in a host's saved commands, or in the command list): **Run** and **Edit and run** (opens it in the command box) on a host's command, **Run on a host** (choose the host; it opens in its command box) on the command list's, then **Edit**, **Copy** (a copy below it, to change first), **Copy to a host** (into a host's saved commands, to change first), **Copy text**, **Move up**, **Move down**, **Delete**.
- **A host** (on the SSH page): **Run a command**, **Live session**, **Edit host**, **Copy host** (a copy with its saved commands, opened to change), **Copy address**, **Move up**, **Move down**, **Delete host**.
- **A recent command**: **Run**, **Edit and run**, **Save as command**, **Copy text**, **Remove from recent**.
- **A key**: **Show public key**, **Copy public key**, **Rename**, **Delete**.

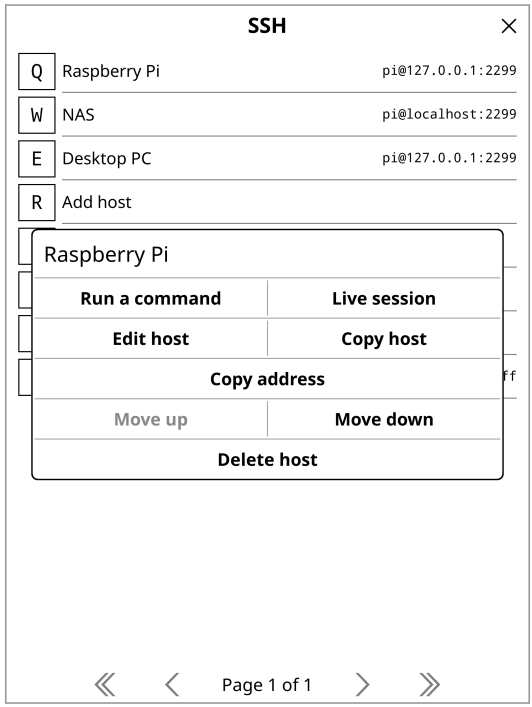

Long-press on a host

Live session

Live session opens a shell on the device, like a terminal on a computer. Type with KOReader's keyboard; Enter sends the line.

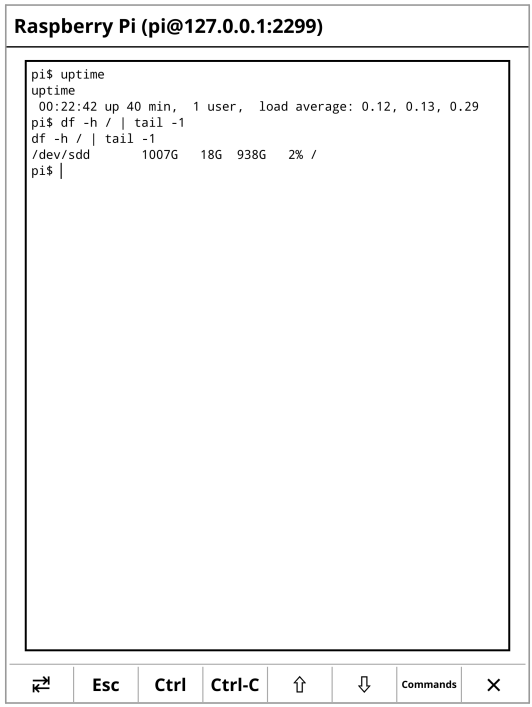


A live session

- ↹ (Tab, to complete names), **Esc**, **Ctrl** (then a letter, for example Ctrl then D), **Ctrl-C** (stops what's running).
- ⇧ and ⇩ move up and down the screen; hold them to scroll.
- **Commands** pastes a command (or the clipboard).
- Long-press the screen for KOReader's clipboard menu: **Copy all**, **Copy line**, **Copy word**, **Select** (tap the start and the end) and **Paste**.
- ✕ asks **Disconnect?** (the keyboard hides while it asks, and comes back on **Cancel**). Typing `exit` also ends the session (**[Session ended]**).

Programs that draw the whole screen (top, nano, htop) don't draw well on the Kindle: it is a simple terminal. Use `top -bn1 | head -20` instead of `top`, for example.

Run on several hosts


Run on several hosts (on the SSH page): tick the hosts (✓), tap **Run a command**, and type or paste the command. It runs on all of them at once, and the output page has a part for each host.

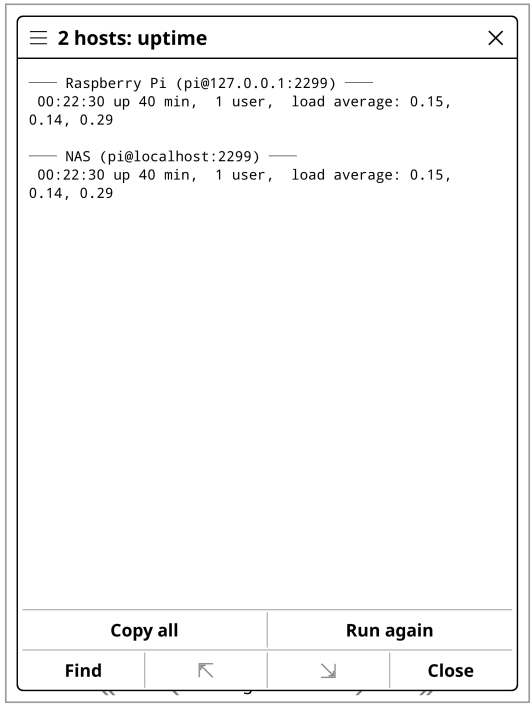

One command on two hosts

Keys

A key lets the Kindle sign in without a password. **Keys** (on the SSH page) lists them.

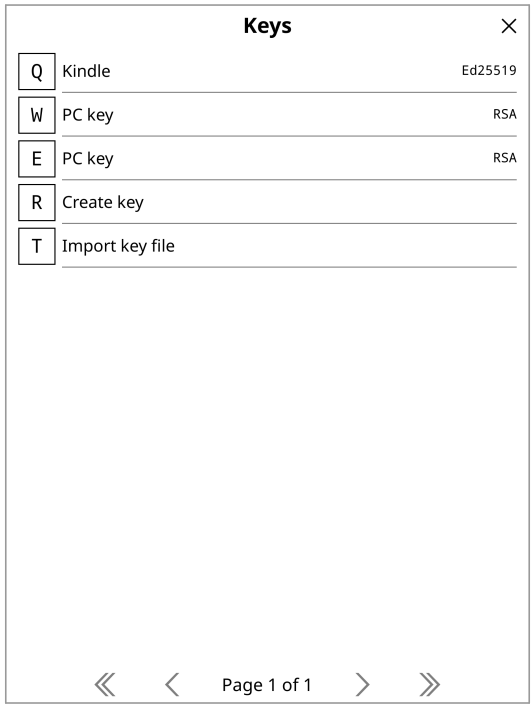

Keys

- **Create key** makes a new Ed25519 key on the Kindle. The page that opens shows its **public key** (one line starting with `ssh-ed25519`).
- **Import key file** uses a key you already have: copy the private key file (for example `id_ed25519` from your computer's `.ssh` folder) to the Kindle over USB, then pick it. The Kindle keeps its own copy and offers to delete the file you copied. Ed25519, RSA and ECDSA keys work. A key with a passphrase doesn't: remove the passphrase from a copy first (`ssh-keygen -p -N "" -f copy` on the computer).

To use a key with a device, add its public key to `~/.ssh/authorized_keys` on that device. The easiest way is the web page: **Copy public key**, then on the device run `nano ~/.ssh/authorized_keys`, paste it on a new line, and save. Each key's public key is also in `koreader/settings/sshclient/keys/<key>.pub`. On Windows, use `C:\Users\<you>\.ssh\authorized_keys`, or `C:\ProgramData\ssh\administrators_authorized_keys` for an administrator.



A key's public key

Dark mode

Dark mode (at the bottom of the SSH page) shows SSH white on black. It applies while SSH is open (the list, output pages and live sessions), and the screen goes back to normal when you close SSH. If KOReader's Night mode is already on, nothing changes.

On the web page

The web page (Web server) has an **SSH** tab, handy for setting things up with a computer keyboard:

- **Hosts**: **Add host** and **Edit** (name, address, user, port, sign in with a key, a saved password, or asking each time; **Forget host key**, **Delete host**). A saved password is sent to the Kindle but never shown again. **Commands** edits a host's saved commands: **Add command**, **Add from command list** (a copy to

change), ⧉ (copy), ↑ ↓ (move) and ✕ (remove).

- **Keys**: **Upload key file** (a private key from the computer), **Paste key** (paste the private key's text, including its BEGIN and END lines), **Create key** (made on the Kindle; its public key is copied for you), **Show** (the public key, hidden until you ask), **Copy public key**, **Rename**, **Delete**. Private keys are never shown or sent to the page.
- **Command list**: edit, copy, reorder and remove commands, **Save**, and **Restore built-in commands**.

Commands run on the Kindle, not from the web page.

Good to know

- The Kindle needs Wi-Fi to connect; it turns Wi-Fi on if it's off. Devices at home are reached on your home Wi-Fi; outside, only devices you can reach from the internet (for example over a VPN).
- Nothing runs while the Kindle sleeps.
- Passwords and private keys stay on the Kindle, in `koreader/settings/sshclient`. Anyone with your Kindle and a USB cable can read them, so prefer keys, and use a key just for the Kindle that you can remove from `authorized_keys` if you lose it.

Web server

The web server puts a web page on the Kindle that you open on a phone or computer on the same Wi-Fi. It manages everything in this guide with a keyboard and a big screen: files, the launcher, Home Assistant, To Do, Notes and crosswords, plus updates and backups.

Starting it

1. On the Kindle: **Tools > Web server > Start web server**, the launcher's **Web server** tile or quick button, or a gesture (**General > Toggle web server**).
2. KOReader asks to turn Wi-Fi on if it's off.
3. The Kindle shows the address, such as `http://192.168.1.50:8080`. Type it in your phone or computer's browser, or tap **QR code** and scan it with your phone (the box also has **Stop** and **Close**).

Or from an app: ⋮ **> Open on the web page** in To Do, Notes, the crosswords, Home Assistant, Apps and Wikipedia starts the web server if needed and shows a QR code that opens that same place on the web page (after signing in, if there's a password).

The page works while the web server runs and the Kindle is awake.

The **Tools > Web server** menu:

- **Start web server** / **Stop web server**. While it runs, the menu's own name shows the address: **Web server: http://...**.
- **Show address**: the address and QR code again.
- **Keep Kindle awake while running**: on to start with, so it doesn't go to sleep while you use the page. If you put the Kindle to sleep yourself (the power button or the cover), the web server stops; when it wakes, a note says so. Start it again when you need it.
- **Stop after 30 minutes of inactivity**: on to start with; stops by itself when no browser has used it for half an hour.
- **Password: On / Off**: set a password (4 characters or more). Browsers then ask for it. **Remove password** takes it off.

- **Undo a plugin update**: go back to a plugin's version before its last update.
- **Port**: 8080 to start with.

It also stops when Wi-Fi is turned off.

> Anyone on your Wi-Fi can open the page while the web server runs, unless you set a password. The connection isn't encrypted, so start it when you need it and stop it after.


The page

Tabs along the top: **Home**, **Files**, **Reading**, **Apps**, **Home Assistant**, **To Do**, **Notes**, **Crosswords**, **Wikipedia**, **Syncthing**, **SSH**, **KOReader** and **System**. A tab is greyed out when its app isn't installed. The page follows your phone or computer's light or dark mode. Lists you can order have the same controls everywhere: drag the ⠿ handle, or ⤒ (to the top), ↑, ↓ and ⤓ (to the bottom), and ↶ **Undo**.

Signing in, and the page as an app

With a password set, the page asks for it once per browser. Leave **Stay signed in** ticked and that browser stays signed in for 90 days, even after KOReader restarts or the plugins update. Changing the password signs every browser out.

To keep the page on your phone like an app, open it and use **Add to Home Screen** (Safari's share menu, or Chrome's ⋮ menu). It gets its own Kindle icon and opens full screen.

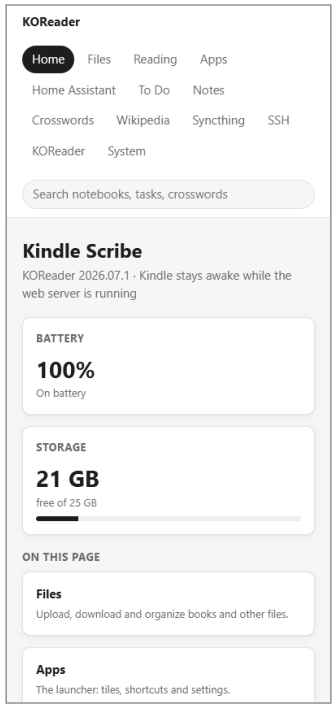

The page on a phone

Keyboard shortcuts

On a computer:

- **/** jumps to the search box.
- **1** to **9** open the first nine tabs that are on (greyed ones skipped), in order.
- **Esc** closes a box, or leaves a text field.
- **?** lists the shortcuts.

Search


The search box at the top right searches everything at once. Type at least two letters and press Enter:

- **Notebooks**: their names, typed text and handwriting. Each result says the page, and whether it was found in handwriting or in the name.
- **To Do**: task titles, notes and steps (not tasks marked private).

- **Crosswords**: puzzle names and clues, such as "12 Across: ...".

Tap a result to open it: a notebook in the Notes tab, a task's list in the To Do tab.

Home

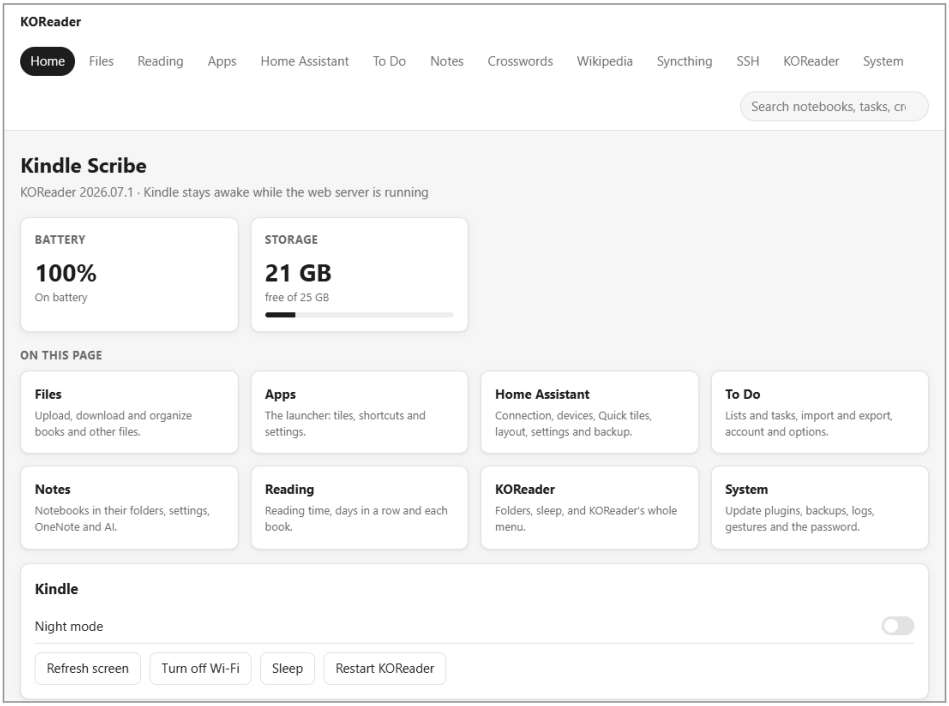

Home


- **The Kindle**: its model, KOReader's version, the **Battery** and the **Storage** left.
- **On this page**: a card for each tab.
- **Kindle**: the Kindle's own controls:
  - **Light** (a slider and on or off) and **Warmth**.
  - **Night mode**.
  - **Refresh screen**.
  - **Turn off Wi-Fi** (the page stops working until Wi-Fi is back).
  - **Sleep**.
  - **Restart KOReader**.

- **Kindle screen**: **Show the screen** shows exactly what the Kindle shows right now, such as the dashboard. It's also a remote:
  - Click the picture to tap the Kindle at that spot (or choose **Click holds** to hold there instead).
  - **Swipe left**, **Swipe right**, **Swipe up** and **Swipe down** swipe across the Kindle; swipe left turns to the next page in a book.
  - **Live** takes a new picture every few seconds.
- **Send to the Kindle**: type something and send it as a task to a To Do list (the first line is the title, the rest its notes), or as **Notes: a new page**.
- **Sleep screen**: which app draws the sleep screen, and **Sleep screen updates**.

Updating plugins, backups and the password are on the **System** tab.

Files

The Kindle's storage. It opens in the folder you looked at last (the documents folder the first time).

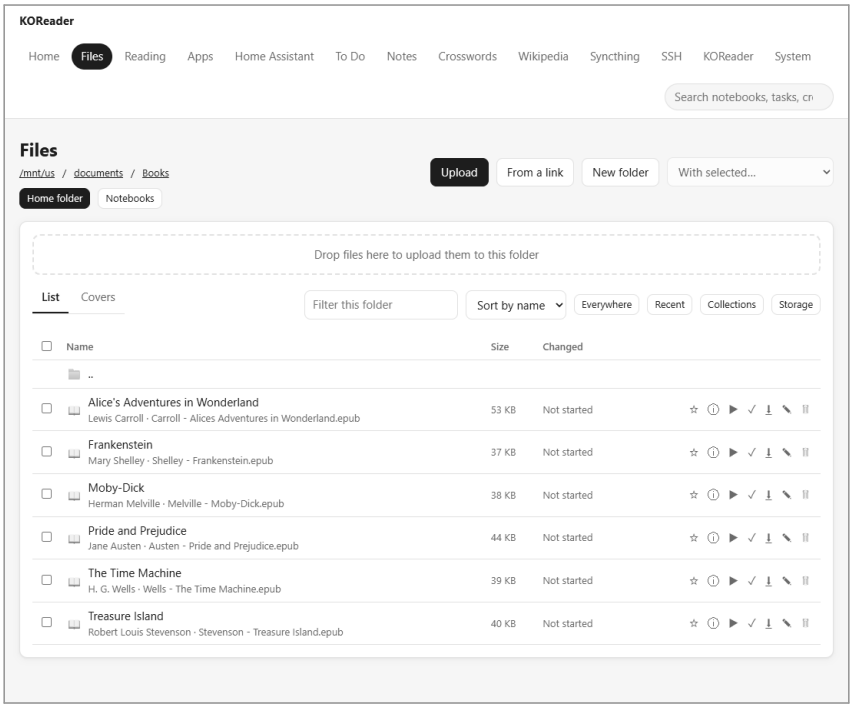


Files, as a list


- **Home folder** and your favorite folders, under the folder's name: a click goes straight there. The Home folder is the one set in KOReader (or on the KOReader tab). Favorite files follow, marked ★: a click opens the file's folder with that file picked out.
- ☆ **Favorites**: the star beside a folder or file adds it to your favorites (★); click again to take it off. A favorite folder is a KOReader folder shortcut, and a favorite file goes in KOReader's **Favorites** collection, so they show on the Kindle too, and stars set on the Kindle show here.
- **List** or **Covers**: the list shows names, sizes and dates; **Covers** shows each book's cover, title, author and how far you've read, like a bookshelf. Titles and covers come from KOReader; for a book it hasn't read yet, they appear a few seconds after you open the folder.
- **Sort by** name (or title), date or size, and **Filter this folder** to find a book by its name, title or author.

- **Everywhere** (or Enter in the filter box) searches every folder by name, title and author. A result opens its folder with the file picked out. ← **Back to this folder** returns to the list.
- **Recent**: the newest files in every folder, such as what you just uploaded.
- **Collections**: KOReader's collections, as on the Kindle, each with its files (× takes one out).
- **Storage**: the free space, and the biggest folders and files.
- **Upload to Home folder** sends books straight to the Home folder, from any folder; **Upload here** (or dropping files on the page) puts them in the folder you're in. Several files at once; a file with the same name is replaced.
- **From a link**: paste a web link to a book (or any file) and the Kindle downloads it into this folder, in the background. The page says when it's saved.
- **New folder**.
- Click a name to open it (pictures, PDFs and text open in the browser; other files download).
- Each file has **Download**, **Rename** and **Delete**. Books also have:
  - ▶ **Open on the Kindle**: the Kindle opens the book straight away.
  - ✓ **Mark as finished** (or ↺ **Mark as reading**), as KOReader's own.
  - ⓘ **Details**: the cover, title, author, series, how far you've read, your reading time and when you last read it, pages, language and the description. From there: **Open on the Kindle**, **Highlights and notes**, **Collections…** and **Rename from details** (renames the file "Title – Author").
  - **Highlights and notes**: every highlight and note, chapter by chapter, with **Download as Markdown** or **Download as text**.
- **Drag** files onto a folder, a folder name in the path at the top, or **..** to move them there. Ticked files move together.
- Tick several and use **With selected…**: **Download** (one zip), **Move…**, **Mark as finished**, **Mark as reading**, **Add to a collection…** (ticks for each collection, or name a new one), **Rename from book details** (shows the new names first) or **Delete**.

The Kindle's library updates by itself after each change.

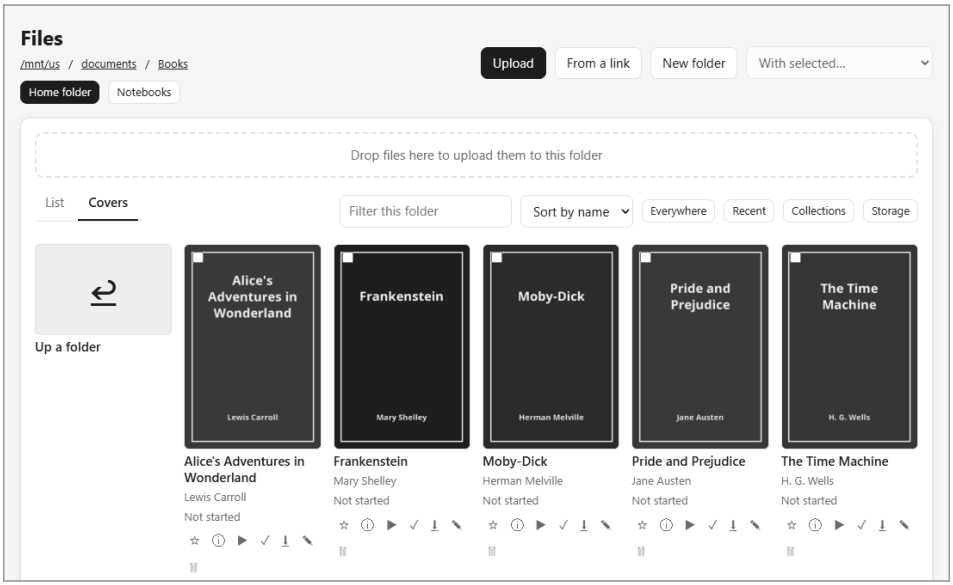


Files, as Covers

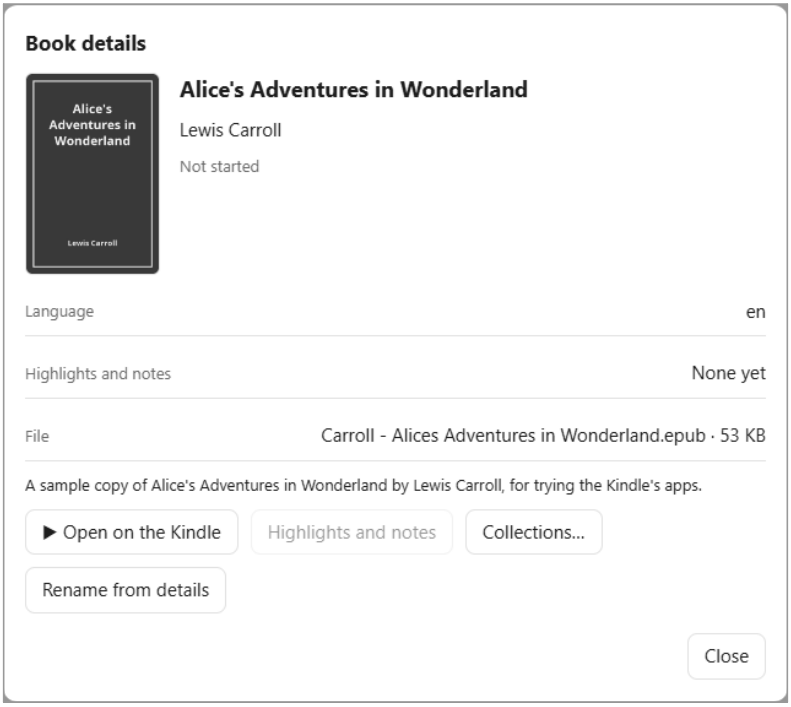

A book's details

Reading

From KOReader's reading statistics (the Reading statistics plugin must be on):

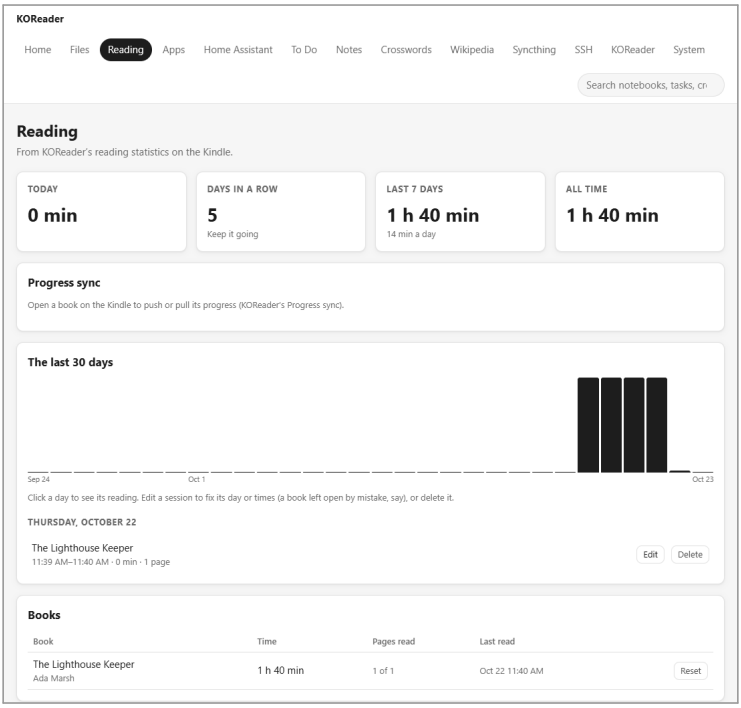


Reading

- **Today**: how long you've read today.
- **Days in a row**: your reading streak.
- **Last 7 days** and **All time**.
- **Progress sync**: for the book open on the Kindle, **Push progress from this device** and **Pull progress from other devices** (KOReader's Progress sync, such as with a CrossInk reader), and **Auto sync**. The messages show on the Kindle.
- **The last 30 days**: a bar for each day (point at one for its date and time). Click a day to see its reading, book by book, with times. Each has:
  - **Edit**: change its day, start or end. Moving keeps it as it was; an earlier end cuts the time after it (a book left open by mistake becomes the minutes you really read); a later end stretches each page's time to fit. It can't overlap other reading.
  - **Delete**: takes it out of the statistics.

- **Books**: each book you've read, with the time spent, the pages read and when you last read it. **Reset** takes all of a book's reading out of the statistics.

> On the Kindle, KOReader's **Tools > Reading statistics > Settings** has **Max read time per page**: a page left open longer than that counts only that long, so a book left open overnight doesn't add hours.

Apps

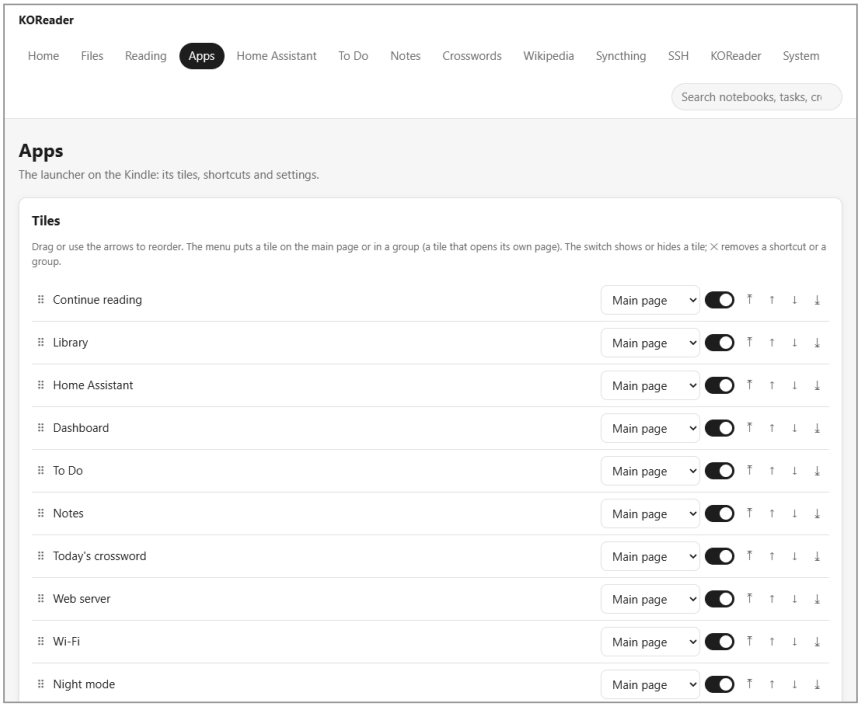

The launcher's tiles


- **Tiles**: their order, and for each, **Main page** or a group, and a switch to show or hide it. Shortcuts have × to remove them; groups can be renamed or deleted.
- **Add shortcut**: a Home Assistant screen or room, a To Do view or list, a notebook, a Notes folder, or a KOReader action.

- **Display**: **Layout** (**Tiles**, **Bold tiles**, **Compact**, **List**, **Icons**), **Columns**, **Clock** (**Large** or **Small**), **Dark mode**, **24-hour clock**, **At a glance**, **Quick settings** and a switch for each quick button (**Button: Wi-Fi**, **Light**, **Night mode**, **Refresh screen**, **Web server**; the Web server button is off to start with), **Recent books**, **Recent notebooks**, **Recent crosswords** and **Recent items** (**Separate rows** or **One row**).
- **Start**: **Open at startup**.
- **Wi-Fi**: **Turn off when idle**.

Home Assistant

Inner tabs:


- **Connection**: the **Internal URL** and **External URL**; **Sign in with Home Assistant** (its own sign-in page, two-step codes included); or a pasted long-lived token.
- **Devices**: every device by room, with search and **All**, **Shown** and **Hidden** filters. Each has a box for whether it shows on the Kindle and a ★ to make it a Quick tile. **Show all** and **Hide all** act on what the filter shows.
- **Order**: Home's sections, the shortcuts, Quick tiles, rooms, the dashboard's sections, tiles and scenes, cameras, security cameras and **Sleep screen alerts** (**Add…** to pick one).
- **Routines**: make and change routines with a keyboard: a name, then steps (a device and what to do), **Run**, **Delete**.
- **Settings**: the same as on the Kindle: display (with **Clock and battery** and **Start screen**), dashboard (with **Doorbell alerts**: **Ring and motion**, **Ring only** or **Off**), **Weather**, **Wake alerts**, what asks first, camera placeholders and the update interval.
- **Backup**: **Export** saves the Home Assistant settings (not the sign-in) to a file; **Import** puts them back.

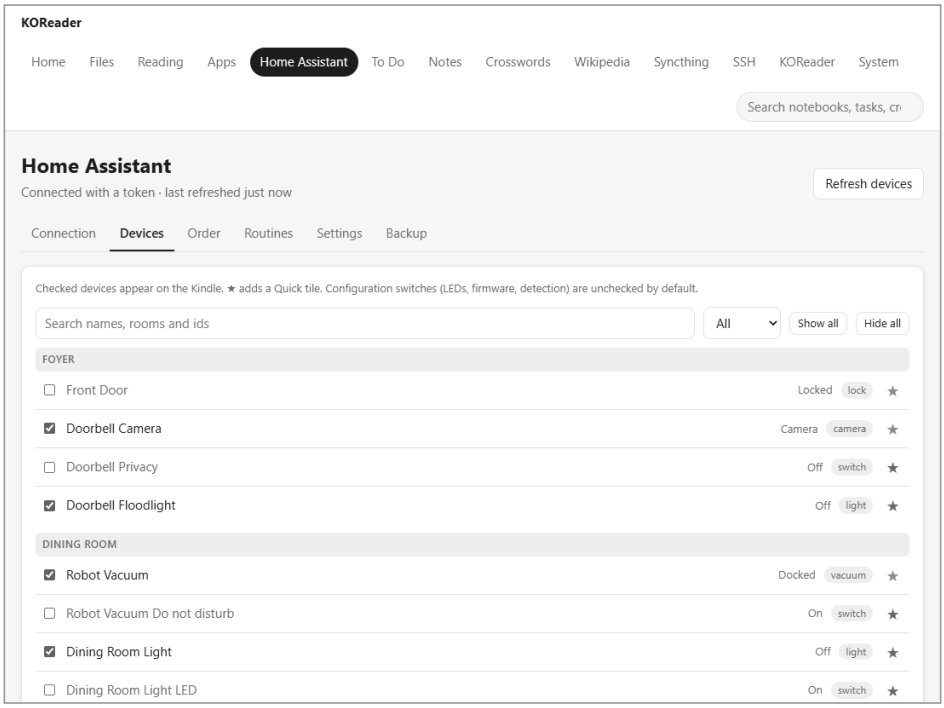

Home Assistant's Devices

To Do

The top says when it last synced and how many changes are waiting; **Sync now** and **Download only** are there.

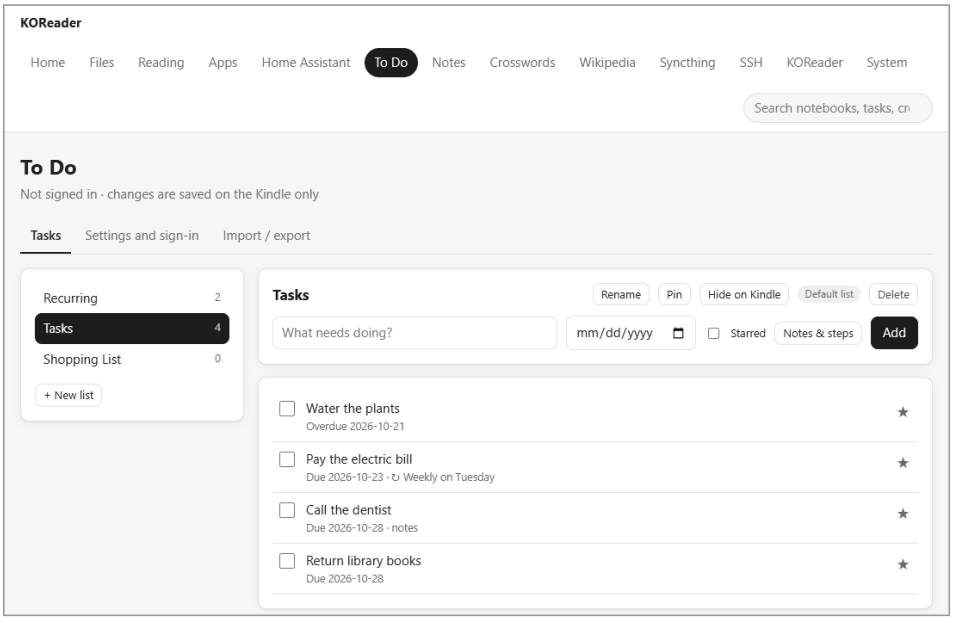

To Do


- **Tasks**: your lists on the left (with **+ New list**, and **Rename**, **Pin**, **Hide on Kindle**, **Make default**, **Delete** for the open list). Add a task with its due date, **Starred**, and **Notes & steps**. Dates in plain words work here too: type "Pay rent Friday 9am" and the page shows what it understood before adding (**Add** or **Keep as typed**). Drag a task onto another list on the left to move it there. Tick tasks off, star them, or click one to change its title, due date, list, notes, steps and **Private** (hidden on the sleep screen and Home, and from search). **Show completed** and **Put back** for deleted ones. A repeating task shows its repeat (↻) with **Skip to current** and **Remove repeat**; repeats are set on the Kindle.
- **Settings and sign-in**: most of the Kindle's settings (the Home tiles' and lists' order, the pinned and default list, full refresh and the sleep screen's content stay on the Kindle; **Sleep screen** here is a switch, and **Postpone by** offers 1, 2, 3, 7 or 14 days), the **App ID**, and **Sign in**: the page shows the code to enter, and updates by itself when you're done.
- **Import / export**: **Export CSV** saves every task to a spreadsheet file; **Import CSV** adds tasks from one (**Download template** shows the columns: List, Title,

Due, Starred, Notes, Steps).

KOReader

KOReader's own settings, without leaving the launcher on the Kindle:

- **Folders**: the **Home** folder, the **Download folder**, the **Screenshot folder** and the other folders KOReader and its plugins keep. **Change…** opens a folder picker. **Lock home folder** keeps the library from going above the home folder.
- **Folder shortcuts**: your saved folders. **Add shortcut…** picks a folder and names it; each has **Rename** and **Remove**.
- **Sleep**: **Autosuspend**, how long the Kindle waits with nothing happening before it goes to sleep (from 5 minutes to 2 hours, or never).
- **KOReader's menu**: the same menu as on the Kindle, with its tabs (**Settings**, **Tools**, **Main** and the rest), live from KOReader. While a book is open it's the book's menu, with its own settings.
  - Switches (☐ and ☑) and choices (○ and ◉) change right from the page.
  - Tap a name with **›** to open that part of the menu; the line at the top shows where you are.
  - ⋯ does what holding the item on the Kindle does.
  - A choice that opens a dialog (a list, a slider, a time) opens it on the Kindle. The page then shows the Kindle's screen, so you can finish it with the remote.

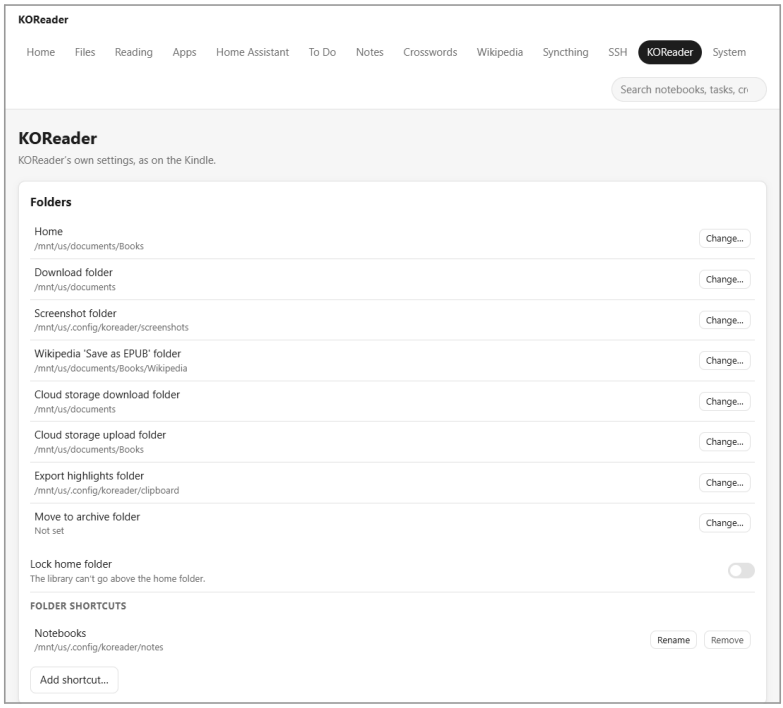


KOReader's folders

System

- **Problems**: KOReader's crashes and freezes, read from its log, newest first. Tap one for the details. **Stopped without closing** usually means it froze and you restarted the Kindle by holding the power button. A freeze that it recovers from ("KOReader stopped answering") is only noticed while the web server runs. When KOReader ended badly, the launcher also says so the next time you open it.
- **What's installed**: each plugin's version (the date it was made) and **What changed** in its latest updates.
- **Update plugins**: **Install a zip...** installs new versions of the plugins (see Getting started). Everything in the zip is checked first; if anything is wrong, nothing changes. Under **Earlier versions kept**, **Go back** puts a plugin back as it was before its update.

- **Battery**: the level, and KOReader's battery statistics since the last charge (awake, asleep, the last charge, each with how much an hour), what is on now that uses power, and **Reset statistics**. The same as the launcher's Battery screen.
- **Health**: KOReader's memory and the Kindle's free memory, how long KOReader and the Kindle have been running, and:
  - **Detailed logging**: KOReader writes much more to its log, for tracking down a problem. It turns itself off after a day.
  - **Download a diagnostics file**: one zip with the logs, versions, problems, sleep history, memory, battery and network, to send when something goes wrong. No passwords, keys or sign-ins.
- **Network**: Wi-Fi, its signal and the Kindle's address. **Check** tries Home Assistant, Microsoft (To Do and OneNote), Wikipedia and the internet, and says which answer and how fast.
- **Sleep and wake**: each time the Kindle slept and woke (and when KOReader started), how long, and the battery at each end. A Kindle that never sleeps, or keeps waking, shows here.
- **Backup**: **Download backup** saves one zip with the settings of To Do, Notes, Home Assistant, Apps and your KOReader gestures, and all your notebooks (not Wikipedia's, Syncthing's or SSH's settings: SSH hosts and keys aren't in it). **Include keys and sign-ins** adds the sign-ins too (keep that file private). **Restore from a backup…** puts one back; KOReader restarts.
- **Automatic backups**: **Weekly backup** saves a backup on the Kindle once a week (settings and notebooks, without sign-ins), keeping the last 2, 4 or 8. **Back up now** makes one straight away; each has **Download** and **Delete**.
- **Logs**: KOReader's own log and the sleep screen updates' log. **Show the end** shows the latest lines; **Download** saves the whole file. Handy when something goes wrong, or to check that sleep screen updates are working.
- **Gestures**: what each KOReader gesture does, in the library and in a book, the same as the launcher's Gestures screen. To look at only: gestures are changed on the Kindle.
- **Password**: set, change or remove the page's password, and **Sign out**.

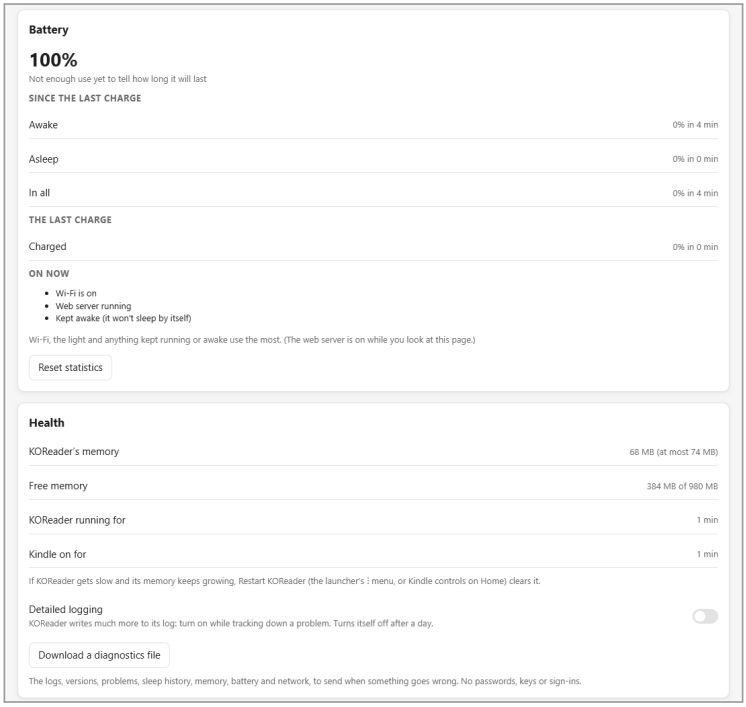

Battery and Health on the System tab

Notes, Crosswords, Wikipedia, Syncthing and SSH

The **Notes**, **Crosswords**, **Wikipedia**, **Syncthing** and **SSH** tabs are covered in their own chapters.

Tips

- Bookmark the address on your phone: it stays the same as long as the Kindle gets the same address from your router.
- Updating plugins, restoring a backup and **Restart KOReader** restart KOReader, which stops the web server. Start it again to keep using the page.
- A password signs out every browser when you change it.
- An upload that stops getting through (a phone gone to sleep, say) is stopped with "Upload failed: the Kindle stopped responding"; upload it again.

Credits

These plugins are built on other people's work. Thank you to:

- **KOReader** (koreader.rocks, AGPL-3.0): the e-book reader these plugins run in, made by the KOReader community. Its own code does much of the work underneath: the screens and menus, gestures, reading statistics, Wikipedia's article download and the SSH client.
- **koreader-syncthing** by jasonchoimtt (github.com/jasonchoimtt/koreader-syncthing, AGPL-3.0): the Syncthing plugin is based on it.
- **Syncthing** (syncthing.net, MPL-2.0): the program that does the syncing, made by the Syncthing project.
- **Dropbear** (matt.ucc.asn.au/dropbear): the SSH client that comes with KOReader, which the SSH plugin uses.
- **Lucide** (lucide.dev, ISC licence): the icons in every plugin.
- **Noto Sans** (SIL Open Font License) and **Droid Sans Mono** (Apache License 2.0): the fonts in this guide, with symbols from Microsoft's **Segoe UI Symbol**.
- **Wikipedia** and its editors: articles are Wikipedia's, under CC BY-SA.
- The crosswords' publishers: puzzles are downloaded from their own websites and belong to them.

Home Assistant, Microsoft To Do, OneNote, Ollama and Claude are their makers' products; these plugins only connect to them.