Your Kindle apps

The launcher, Home Assistant, To Do, Notes, Crosswords, Wikipedia, Syncthing, SSH and the Web server for KOReader

A user guide

Contents

Getting started 9

Finding your way around 10

Opening the apps 17

The sleep screen 17

Updating the plugins 19

Setting up the services 20

Before you start 20

Microsoft (To Do and OneNote) 20

Home Assistant 22

AI (Notes and Crosswords) 22

Syncthing 23

SSH 24

Weather 24

Updates 24

Library 24

Wikipedia and Crosswords 25

If you skip it 25

The launcher 27

Opening the launcher 27

The top of the screen 28

The tiles 32
Weather 36
Reading statistics 37
Fonts 40
The Battery screen 42
The Gestures screen 43
Search 44
The control center and Recent apps 45
Settings 46
In a book and in the library 54
The launcher's sleep screens 55
Set up your Kindle 56
Gestures on the launcher 59

Library 61
Opening the Library 61
Home 61
Books 62
A book's page 68
Folders 75
Servers and catalogs 80
Search 84
Settings 85
Where it comes from 86

AI 87

Opening the AI settings 87
The AI services 88
Checking a service 91
Which AI does each job 91
What each feature sends (Advanced) 92
Handwriting recognition 93
On the web page 94
Without the launcher 94

Home Assistant 95

Opening it and signing in 95
The title bar 96
Home 97
Tiles: tap and hold 99
Rooms 100
The other screens 101
Cameras and Send to Notes 103
The dashboard 104
Routines 106
Alerts 106
Settings 108

To Do 112

Lists on this Kindle 112
Opening it and signing in 114
Home 114

Lists and tasks 115
Adding a task 117
A task's page 120
Today, Agenda, Starred, Calendar, Search 121
Split view 121
Syncing 121
The sleep screen 122
Settings 123

Notes 125

Getting started 125
The notebook list 127
Writing 131
The lasso 136
Shapes and snapping 138
Text, pictures, tape and links 138
Tidy handwriting 139
Zoom window 141
Pages 142
Orientation and two pages side by side 145
Quick note 147
Writing on a book's pages 148
PDFs as notebooks 149
AI features 149
OneNote 151

Export 154
Open on the web page 154
Settings 154
Gestures 157

Crosswords 159
Getting crosswords 160
Solving 164
The answers page 176
The puzzle list 176
Importing puzzles 178
Crossword settings 179
Crosswords on the web page 181

Wikipedia 183
Opening Wikipedia 183
The front page 183
While Wikipedia downloads 187
Reading an article 188
Settings 192
On the web page 194

Syncthing 196
Opening it 197
Setting it up 198
The app 199

The menu 202
On the web page 203
Good to know 204

SSH 205

Opening it 206
Adding a host 207
Trusting a host 208
The SSH page 209
A host's page 210
Stats and alerts 213
Quick commands 214
Docker 216
Services 217
Files 217
Wake on LAN 218
History 219
SSH settings 220
Running a command 220
Commands 222
Long-press menus 225
Live session 227
Run on several hosts 231
AI help 232
Keys 234

On the web page 236
Good to know 237

Web server 238

Starting it 238
The page 240
Home 242
Dashboard 243
Files 244
Reading 251
Launcher 252
Home Assistant 254
To Do 255
Fonts 257
KOReader 258
System 260
Notes, Crosswords, Wikipedia, Syncthing and SSH 262

Credits 264

Getting started

This guide covers these plugins for KOReader on a Kindle Scribe:

- **The launcher**: big tiles for everything else, the weather (with or without Home Assistant: a free forecast, US alerts, 24 hours and 7 days), reading statistics, what's next and your recent books; also the shared pieces every app uses (the bar at the top, notifications, settings, search).
- **Home Assistant**: your lights, locks, thermostat, cameras and more, plus a nightstand dashboard.
- **To Do**: your Microsoft To Do lists and tasks, also when Wi-Fi is off, or lists kept on the Kindle with no account.
- **Notes**: handwritten notebooks for the pen.
- **Crosswords**: puzzle books from several newspapers, solved with the pen. Its own app, but it needs Notes (it draws with Notes' pen and pages).
- **Wikipedia**: look up and read Wikipedia articles, and save them to read offline.
- **Syncthing**: keeps folders on the Kindle in sync with your computer or phone over Wi-Fi.
- **SSH**: run commands on your other devices (a PC, a NAS, a Raspberry Pi) and read what they print, or open a live session.
- **Web server**: a web page on the Kindle for your phone or computer, to manage all of the above with a keyboard.

Smaller things the plugins add, and where to find them:

- **Reading time and statistics**: the launcher's **Reading statistics** tile (every book's statistics and the calendar), and the web page's **Reading** tab (today, days in a row, each book; fix or delete a reading session; progress sync).
- **Battery**: the launcher's **Battery** screen (**Settings > Battery**, search, or a tile you can show), the control center (see below), and the **Battery** card on the web page's **System** tab: how fast it goes awake and asleep, and what is on that uses power.


- **Fonts**: the launcher's **Fonts** tile: your fonts drawn in their own typefaces, **Get more fonts** (any Google Fonts family, or a suggested reading font with one tap), and the font settings. The web page's **Fonts** tab has the same.
- **Quick buttons**: buttons under the launcher's clock and in the control center in every app (Wi-Fi, a new task, a Home Assistant light with − and +, your book and many more). See the launcher chapter.
- **KOReader's own settings**: **Settings > KOReader**, the launcher's **KOReader settings** tile (one you can show), and the web page's **KOReader** tab (folders, the common settings and KOReader's whole menu).
- **Restart KOReader**: the launcher's ⋮ menu (or a tile you can show).
- **When something goes wrong**: the web page's **System** tab: crashes and freezes (**Problems**), memory, a network check, when the Kindle slept and woke, detailed logging, and a diagnostics file to send. The launcher also says when KOReader crashed or froze the last time.
- **Files and books from a browser**: the web page's **Files** tab: upload (or get a file from a link), search every folder, favorites and collections, a book's details and its highlights.
- **Arranging things on a big screen**: the web page draws the launcher's tiles, the quick buttons, Home Assistant's Home, the widgets sleep screen, To Do's Home tiles and Notes' toolbar as they look on the Kindle, to drag into order.

Each chapter starts with how to open the app and then goes screen by screen. Names in **bold** are what you see on the Kindle's screen.

Finding your way around

All the apps work the same way, so what you learn in one works in the others.

The bar at the top

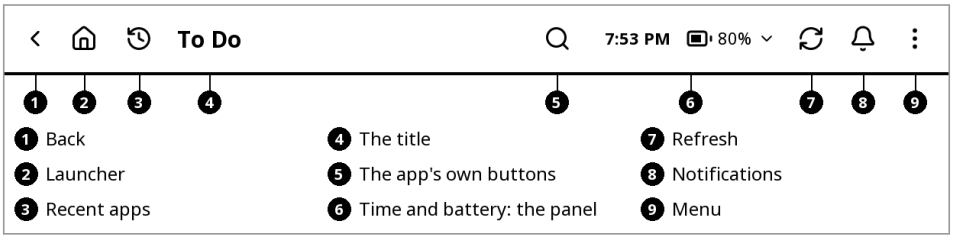


The title bar every app shares

Every app's screens have the same bar:

- **‹** goes back one screen. On an app's first screen it goes back to the launcher.
- **The house** always goes to the launcher.
- **Recent apps** (a clock with an arrow, next to the house) shows the apps you opened lately as cards, then your recent books, notebooks and crosswords. Tap one to go straight there; an app that is still open comes back as you left it. It's also in ⋮ **> Recent apps**.
- The screen's **title**, and on long screens the page number with arrows: tap an arrow for the next or previous page.
- At the right: the app's own buttons (search, **+** and so on), then **the time and battery** with a small ▾, **refresh**, **the bell** and ⋮.
- **Refresh** gets the app's latest (Home Assistant's states, a To Do sync) and flashes the screen clean.
- ⋮ has the app's own actions, **Recent apps**, the light, **Night mode**, **Refresh screen**, and **Settings** last. **Open on the web page** (in most apps) starts the web server and shows a QR code: scan it with your phone to open the same place there, handy for typing a lot.

The control center

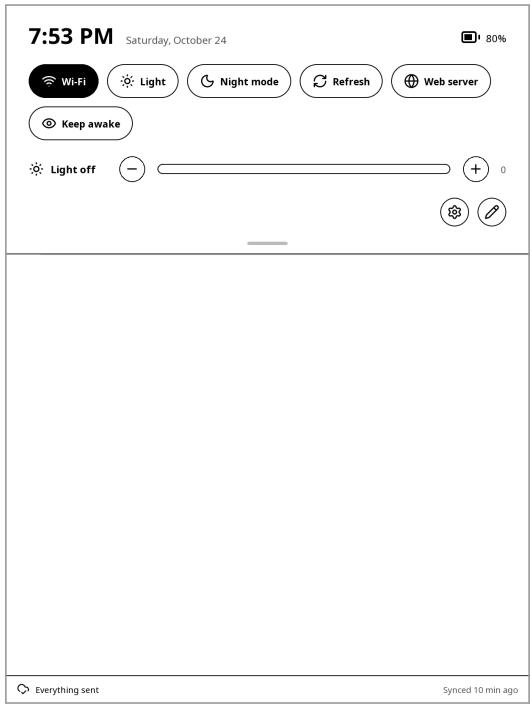

The panel under the time and battery

Tap **the time and battery** (the ▾ says you can) in any app's bar for the control center, a panel that drops down from the top:


- The time, the date and the battery; tap the battery for the Battery screen.
- Your **quick buttons** (see the launcher chapter), then **Wi-Fi**, **Night mode**, **Refresh**, **Web server** and **Keep awake** (the Kindle doesn't go to sleep until you turn it off again) when they aren't among them. Black means on. Tap does the quick thing; hold opens what's behind it. A group drops its buttons down; with lots of buttons there are pages.
- **Light**, and **Warmth** on a Kindle that has it: **–** and **+**, or tap a spot on the bar.
- The cog (**Settings**), the pencil (change your quick buttons), and over a book or the library **KOReader menu**.

Tap below it, or swipe up, to close it. On the launcher, tap its battery and Wi-Fi.

Going back and turning pages

- **Swipe in from the left edge** to go back: start the swipe in the leftmost tenth of the screen. It works on every screen of every app, and in a book (back to the launcher or the library, wherever you opened it) or the library (up a folder) while the title bar is on (see below).
- Other swipes turn pages: **left** is the next page, **right** the one before. On the first page, a swipe right does nothing.
- A **diagonal swipe** flashes the screen clean.
- **Hold** something (a tile, a task, a notebook, a book) for more choices.
- Your own KOReader gestures still work inside the apps (two-finger swipes, the edge swipes along the sides, multiswipes, pinches), for what makes sense there: the light, night mode, a refresh, Wi-Fi, a screenshot and the apps' own actions. The pen in Notes and Crosswords is never affected.


In a book and in the library

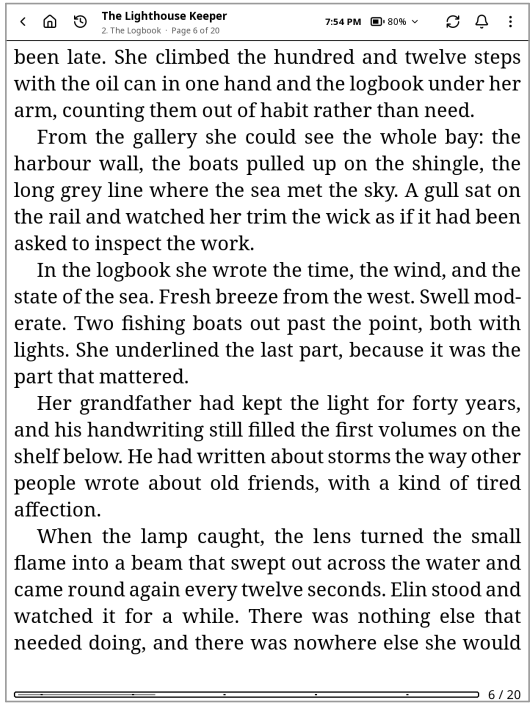

The title bar in a book

Tap the top of a book's page (where KOReader opens its menu) and the same bar shows over the page: ‹ back to where you opened the book (the launcher or the library), **the house**, **Recent apps**, the book's title with its chapter and page, the time and battery (the control center), **refresh**, **the bell** and ⋮. ⋮ has **KOReader menu** (KOReader's whole menu, as before), **Table of contents**, **Bookmarks**, **Go to page**, **Search** and **Text and layout**. A tap anywhere else closes the bar; swiping down from the top still opens KOReader's menu. The library has the same bar, titled **Library** (‹ goes up a folder). The first book you open shows a short tip about it. Settings > **Launcher** > **Title bar in books** and **Title bar in the library** turn it off.

Notifications

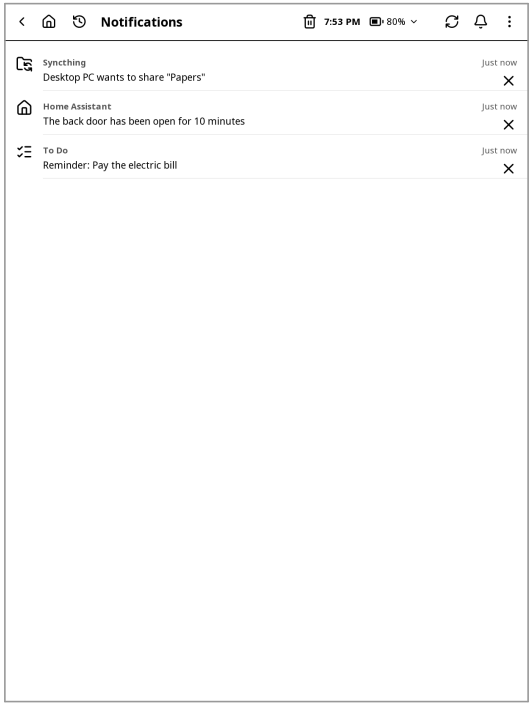


Notifications

The bell opens **Notifications**: one list for every app, newest first: To Do's reminders and sync problems, Home Assistant's notifications, Syncthing's requests, finished SSH commands, saved Wikipedia articles, new crosswords.

The number on the bell is how many are new.

- Tap one to open it where it belongs (that also takes it off the list). A To Do reminder brings its pop-up back instead (**Snooze**, **Open**, **Done**), over the list; hold it to open the task.
- ✕ at its right takes one off without opening it; **the bin** at the top clears them all.
- They clean up after themselves: a To Do reminder goes when its task is done, deleted or moved to another day or time; a Home Assistant notification goes when it's dismissed there; a request goes once you've answered it.

Settings, search and setting up

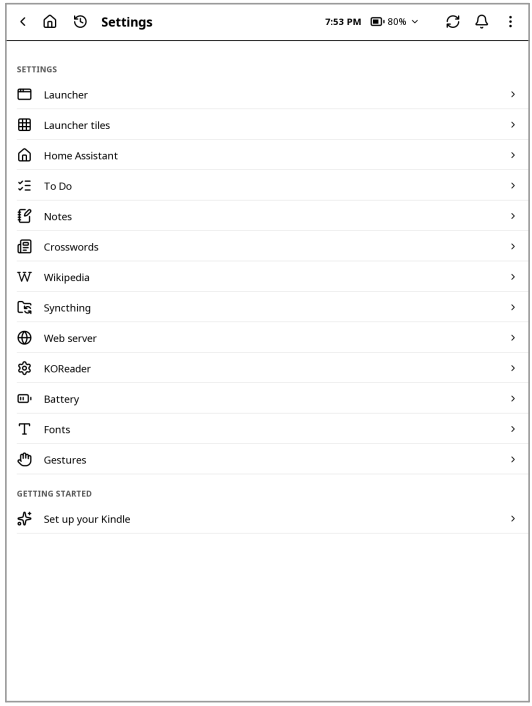

Settings for every app

- **One Settings for everything**: on the launcher, ⋮ **> Settings** lists every app (**Launcher**, **Edit home screen**, **AI**, **Microsoft**, **Fonts**, **Gestures**, **Battery**, **Home Assistant**, **To Do**, **Notes**, **Crosswords**, **Wikipedia**, **Syncthing**, **Web server**, **KOReader**); each row opens that app's own settings or screen. Each

app's own ⋮ **> Settings** opens its settings too. SSH has no settings; its dark terminal is the moon/sun key in a live session.

- Settings look the same in every app: full pages of rows in sections, a value or a switch at the right; tap a row to change it.
- **Search everything**: the magnifying glass at the top of the launcher finds books (by title, author or file name), notebooks, tasks, crosswords, saved Wikipedia articles, Home Assistant's devices, the launcher's apps and Settings pages, each setting by its name (type "labels" for **Button labels**, "port" for the web server's **Port**), and more, grouped by app. Tap one to open it; a setting opens its settings page at that row.
- **Set up your Kindle**: on the first start, while nothing is set up yet, a short walkthrough helps with Wi-Fi, Home Assistant, the weather, your Microsoft account (To Do and OneNote), the AI, Syncthing, your launcher and the web page's password. Each step says what you get if you skip it, and some have a **How to…** page with a QR code of this guide. **Skip** is on every step, and **Don't show again** on the first page. Run it again any time from **Settings > Set up your Kindle**.

Pop-ups, Undo and Night mode

- Menus, questions ("Unlock the door?"), messages, short notices ("Saved") and "please wait" boxes look the same in every app: a white box with a black border.
- **Undo**: after you delete something (a task, a list, a notebook, a shortcut, a routine, a host…), a bar at the bottom says what went, with **Undo** for a few seconds. Deletes that can't be undone still ask first.
- **Night mode** is KOReader's own, one setting for every app and for books: the control center, the launcher's quick button or ⋮ **> Night mode**.
- **The clock** is one setting too: **24-hour clock** in the launcher's settings (KOReader's own **Time and date** setting) changes it in every app and in books. The time and battery are always in the bar, since tapping them opens the control center.
- When a menu or box closes, the screen under it flashes clean, so nothing of it stays behind.

Hold the text in a box you type in for **Paste** (what you copied: from a book, the SSH terminal or another box), **Copy all** and **Clear**.

Opening the apps


There are three ways:

- **The launcher**: open it and tap a tile. It can open by itself when KOReader starts (Settings > **Launcher** > **Open at startup**).
- **KOReader's menu**: the **Tools** tab (the wrench) has **Launcher**, **Home Assistant**, **To Do**, **Notes**, **Crosswords**, **Wikipedia** and **Web server**; **Syncthing** and **SSH** are under **Settings (gear) > Network**.
- **A gesture**: KOReader's **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General**. Each app has its actions there, such as **Launcher**, **Home Assistant dashboard**, **To Do: add a task** or **Notes: today's page**.

The sleep screen

When the Kindle sleeps, it can show one of the apps instead of KOReader's own sleep screen. Choose in **Settings > Launcher > Sleep** (Home Assistant's and To Do's settings open it there too):

- **Widgets**: the parts you pick (Settings > **Launcher** > **Widgets**): the clock, the book you're reading (its cover and how far), To Do's today, Home Assistant's alerts and the latest notifications. Each part says how old its information is.
- **Summary**: the date, battery, weather, what's next and today's tasks.
- **To Do tasks**: today's date with overdue tasks, today's and what's next.
- **Home Assistant**: a summary of the home.
- **KOReader's own**: KOReader's usual sleep screen.

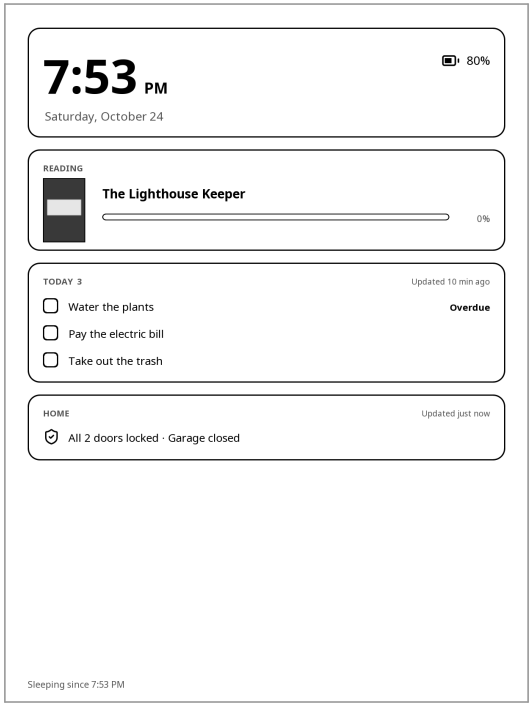

The Widgets sleep screen

Sleep screen updates (Off, every 15 or 30 minutes, every hour) wakes the Kindle briefly to draw the sleep screen again, so the time and tasks stay current. Each wake uses a little battery.

Home Assistant can also add **Sleep screen alerts** to any of these sleep screens: a box at the bottom listing a door left unlocked, a leak or a temperature you chose.

> KOReader can only draw the sleep screen when Amazon's lock-screen ads ("special offers") are off. With ads on, the setting says so.

Updating the plugins

New versions come as one file, **kindle-plugins.zip**, on the Releases page of github.com/Mcp20091/kindle-koreader-apps. The easiest way: in Settings > **Updates** (at the top), tap **Check for updates**, then **Update** (it also tells you by itself, once a day on Wi-Fi). Or download the zip to your phone or computer, then:

1. On the Kindle, start the web server: **Tools > Web server > Start web server** (or **Web server** in the control center).
2. On your phone or computer, open the address it shows.
3. On the **System** tab, under **Update plugins**, tap **Install a zip...** and pick kindle-plugins.zip.

KOReader restarts with the new versions. Your settings, sign-ins and notebooks stay as they are.

If an update causes a problem, you can go back to the version before it:

- In Settings > **Launcher**, tap **Undo a plugin update**.
- Or in KOReader's menu: **Tools > Web server > Undo a plugin update**.
- Or on the web page's **System** tab: **Go back**.

Setting up the services

Most of the apps work straight away. A few connect to something else, and need a one-time setup first: a Microsoft app ID for To Do and OneNote, your Home Assistant's address, and a key for the AI features. This chapter gathers what each one needs and where to get it, and what you get without it (**If you skip it**, at the end). **Settings > Set up your Kindle** (on the launcher, ⋮ **> Settings**) walks through the same steps on the Kindle, and you can skip any of them: each step says what skipping it means, and the last page lists what was skipped.

Before you start

- **A jailbroken Kindle Scribe with KOReader.** The jailbreak wizard at kindlemodding.org (kindlemodding.org/jailbreak-wizard.html) finds the right jailbreak for your Kindle and its software version, and links to installing KOReader. These apps aren't made by or affiliated with kindlemodding.org or the KOReader project, and jailbreaking is at your own risk.
- **The plugins.** Download **kindle-plugins.zip** from the Releases page of github.com/Mcp20091/kindle-koreader-apps, unzip it, and copy the plugin folders into KOReader's `plugins` folder on the Kindle (`koreader/plugins/`, over USB), then restart KOReader. You can leave out apps you don't want (Crosswords needs Notes). Later versions come the same way, and install from the web page without the USB cable (see Updating the plugins in Getting started).
- Wi-Fi on the Kindle, for everything in this chapter.

Microsoft (To Do and OneNote)

To Do and Notes' OneNote sync use Microsoft's own services, and Microsoft needs to know which app is asking. You make that app once, for free, and get an **App ID**. The Kindle has one Microsoft account for both: one App ID and one sign-in, in the launcher's **Settings > Microsoft**.

You can skip this for To Do: without signing in it keeps lists on the Kindle only, and you can move them to Microsoft To Do later.

You need a Microsoft directory (a "tenant"). Registering an app happens in a Microsoft Entra directory. A work or school account already has one. A personal Microsoft account (Outlook.com, Hotmail, Xbox, or a personal Microsoft 365 subscription) usually doesn't: create a free Azure account with that personal account at azure.microsoft.com/free first, which sets one up for you. Microsoft asks for a phone number and a card to check who you are, and registering an app doesn't cost anything.

Make the app:

1. Sign in at portal.azure.com (or entra.microsoft.com) and open **App registrations** (search for it at the top), then **New registration**.
2. **Name**: anything, such as "Kindle".
3. **Supported account types**: choose **Accounts in any organizational directory and personal Microsoft accounts**, so both a personal and a work account can sign in. (**Personal Microsoft accounts only** works too, for a personal account.) This can't be changed later.
4. **Redirect URI**: leave it empty. Then tap **Register**.
5. Under **Authentication**, set **Allow public client flows** to **Yes**, and **Save**. (The Kindle signs in with a code you type on your phone or computer, which needs this.)
6. Under **API permissions**, tap **Add a permission > Microsoft Graph > Delegated permissions**, and add **Tasks.ReadWrite** (for To Do) and **Notes.ReadWrite** (for OneNote). With a personal account there's nothing to approve here: you agree when you sign in.
7. On the app's **Overview** page, copy the **Application (client) ID**. That's the App ID.

Use it:

- In the launcher's **Settings > Microsoft** (or **Set up your Kindle > Microsoft**, or the **Microsoft account** card on the web page's To Do or Notes tab), enter the **App ID**, then **Sign in**: the Kindle shows a code; enter it at the address it shows, on your phone or computer. One sign-in covers To Do and OneNote.

- The page then shows **Signed in as** and your account, and under **USED BY** whether each app is **Allowed**. An app added later, or a sign-in from before both used it, says **Sign in again to allow**: signing in once more covers it.
- To Do's and OneNote's own settings have a **Microsoft account** row that opens the same page.

Renaming the app later is fine. Deleting it, or turning off **Allow public client flows**, stops the sign-in.

Home Assistant

Nothing needs changing in Home Assistant. The Kindle only needs to reach it:

- **Internal URL**: the address on your home Wi-Fi, such as `http://homeassistant.local:8123` or `http://192.168.1.50:8123`.
- **External URL (optional)**: an address that works away from home, such as a Home Assistant Cloud (Nabu Casa) address or your own. An address behind a sign-in page of its own (a proxy that asks for a password before Home Assistant) won't work.

Then sign in, one of two ways:

- **Sign in with Home Assistant**: its own sign-in page, with two-step codes if you use them. The Kindle then shows up in Home Assistant under your profile > **Security** (where you can remove it).
- **A long-lived access token**: in Home Assistant, open your profile > **Security** > **Long-lived access tokens** > **Create token**, and copy it. Paste it on the web page's Home Assistant tab (easiest), or copy it to the Kindle as a text file and use **Load from file**.

The Kindle sees what your Home Assistant user can see. To show fewer devices, hide them in the app (**Devices**) rather than in Home Assistant.

AI (Notes and Crosswords)

Reading handwriting, Ask, Make PDF, drawing help and the crossword hints and checks use an AI. Pick one in the launcher's **Settings > AI** (Notes' and Crosswords' **AI settings** rows open it too), under **AI services**; every app uses the same. Each needs a key or an address:

- **Claude**: an API key from platform.claude.com (an Anthropic account with API credit).
- **Gemini**: a key from aistudio.google.com. Gemini Flash and Flash-Lite have a free tier.
- **OpenRouter**: a key from openrouter.ai. **openrouter/free** picks a free model; others are paid.
- **Groq**: a key from console.groq.com.
- **Local AI (Ollama)**: your own computer running Ollama with a model that reads pictures. Ollama has to accept connections from the network (set `OLLAMA_HOST=0.0.0.0` on that computer). Enter its address and port as the **Internal URL**, such as `http://192.168.1.50:11434`. To use it away from home too, add an **External URL** (and an **API key** if it needs one); the AI chapter says what works there.
- **Custom**: any other service with an OpenAI-compatible API: its address, key and model.

On free tiers, the service may use what you send to improve its products. Keep private pages on Claude, a paid tier, or a local AI. The AI chapter has the details.

Syncthing

The Syncthing app runs the Syncthing program, which comes with the release zip (the `syncthing` file in `syncthing.koplugin`, the Kindle's ARM build exactly as the Syncthing project releases it). Nothing to get.

If you installed from the project's files instead of the zip, get it once: on a computer, run `syncthing.koplugin/tools/fetch-syncthing.sh`. It downloads the Syncthing release for the Kindle (ARM) and puts the `syncthing` program in the plugin's folder; then copy `syncthing.koplugin` to the Kindle, as with the other plugins.

Then pair it with Syncthing on your computer or phone: see the Syncthing chapter (Setting it up).

SSH

The SSH app needs nothing on the Kindle. The device you connect to needs an SSH server (most Linux machines and a Raspberry Pi have one; on Windows, add **OpenSSH Server** in Settings > System > Optional features; on a Mac, turn on **Remote Login**). For signing in with a key instead of a password, add the Kindle's public key to that device: see the SSH chapter (Keys).

Weather

Nothing to sign up for. Without Home Assistant, the launcher's **Weather** tile uses Open-Meteo, a free forecast that needs no account or key: tap the tile (or Settings > Launcher > WEATHER > **Place**), type your town or city and pick it from the matches. In the US, weather alerts come from the National Weather Service, also free. Both need Wi-Fi to update; the last forecast stays for when it's off. With Home Assistant, its weather is used instead (Settings > Launcher > WEATHER > **Weather from** to choose).

Updates

Nothing to sign up for. Set up your Kindle has an **Updates** step right after Wi-Fi: it says where updates are (Settings > **Updates**, at the top of Settings), looks for a new version (tap it to see what's new and update) and lists the optional apps, extra apps you can add such as FlashForge, each with **Install**. **Check automatically** is there too.

Library

Nothing to sign up for. Set up your Kindle asks once how to browse your books: **The Library** (covers, what you're reading, authors, collections and folders, in the apps' design) or **KOReader's file browser** as KOReader has it. Change it later in Library settings > **Browse books with**. Covers and titles come from KOReader's Cover browser plugin and reading time from its Reading statistics plugin, so leave those two on.

Wikipedia and Crosswords

Nothing to set up: Wikipedia and the crossword sources are free and need no account. Crosswords needs the Notes plugin installed.

If you skip it

Every service is optional, and each app only needs its own, so any mix works. Without one:


- **Updates**: nothing changes; Settings > Updates checks any time, and with **Check automatically** on a notification says when there's a new version.
- **Wi-Fi**: reading, Notes, the crosswords you already have, reading statistics and lists on this Kindle all work. Syncing, downloads, Home Assistant and the AI wait until Wi-Fi is on.
- **Home Assistant**: its tile opens the sign-in. The **Dashboard** tile stays hidden until it's set up, and the launcher's weather can come from Open-Meteo instead. Nothing else needs it.
- **Microsoft (To Do)**: To Do works on its own with lists kept on this Kindle: due dates, reminders, repeats, steps, the sleep screen, the launcher's tile and At a glance. Only syncing with Microsoft To Do needs the App ID and sign-in; sign in later and you can move those lists to To Do.
- **Microsoft (OneNote)**: Notes works fully; only sending to and getting from OneNote needs it.
- **AI**: Notes and Crosswords work fully without it, and their AI buttons and menu items are left out until a service is set up (**Settings > AI** shows which services are set up, and Notes' and Crosswords' **AI settings** rows lead there). Search still finds typed text and handwriting already read.
- **Weather**: with neither Home Assistant nor a place set, At a glance and the sleep screen leave the weather out, and the Weather tile asks for your town.
- **Library**: the Library is used to browse books; Library settings > **Browse books with** switches to KOReader's file browser.
- **Syncthing**: nothing else needs it. Copy books over USB or with the web page instead.
- **SSH**: nothing else needs it.

- **The web page's password**: the page still works, but anyone on your Wi-Fi can open it while the web server runs. Start it only when you need it, or set a password.

A fresh install with nothing set up starts without errors: each app shows what it needs, in plain words, the first time you open it.

The launcher

The launcher is a full screen of big tiles, one for each app and for anything else you pin there. Each tile has a line saying what is going on in it, such as "2 today · 1 overdue" on To Do or "6 on · All doors locked" on Home Assistant. Tap a tile to open it. The app opens on top of the launcher, so closing the app brings you back.

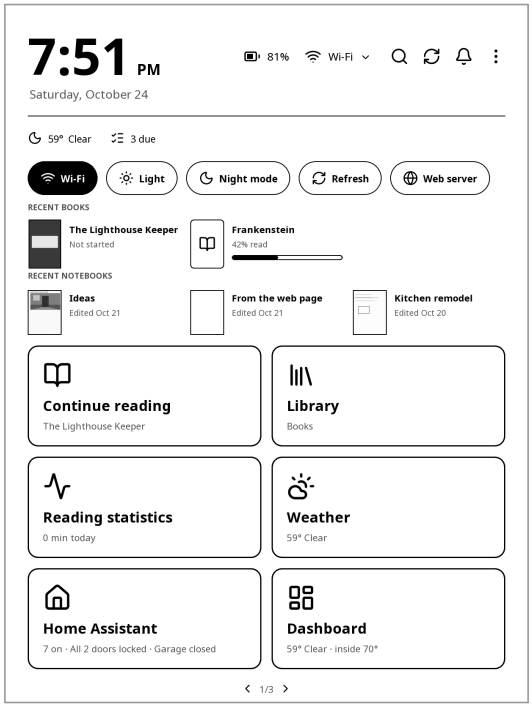

The launcher: clock, the At a glance line, quick buttons, recent books and tiles

Opening the launcher

- **KOReader's menu**: **Tools > Launcher**.
- **A gesture**: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Launcher**.

- **At startup**: Settings > **Launcher** > **Open at startup** opens it each time KOReader starts.

Opening the launcher when it is already showing just refreshes it.

To leave the launcher, open **Library** or a book, or tap **Exit KOReader**. Back also closes it.

The top of the screen

- **The clock** and the date. The clock updates every minute while the launcher is showing. **24-hour clock** in the launcher's settings sets it for every app.
- **The battery**, filled to its charge (a lightning bolt while charging), and its percentage.
- **Wi-Fi**: on or **Off**. Tap the battery and Wi-Fi (the ▾) for the control center.
- **Search**: books, notebooks, tasks, Home Assistant's devices and more (see "Search").
- **Refresh**: the tiles' lines worked out again, and the screen flashed clean.
- **The bell**: Notifications from every app (see Finding your way around), with how many are new.
- ⋮ has **Open on the web page**, **Restart KOReader** (after asking), **Help**, **Light** (on a Kindle with a front light), **Night mode**, **Refresh screen** and **Settings** (every app's).

At a glance

The line under the clock shows three things when they are available. Tap any of them to go there.


- **The weather**: the temperature, the conditions and today's high and low, such as "59° Clear · 64° / 48°", from Home Assistant or from Open-Meteo (free, no account; see **Weather** below). A weather alert shows instead of the conditions. Tap it for the weather screen.
- **What's next** (the clock icon): your next Home Assistant calendar event, or else the next To Do reminder in the next day and a half, with its time. Tap it for To Do's Today.

- **Tasks due** from To Do: "3 due" (overdue tasks count too) or "Nothing due". Tap it for To Do's Today.

Turn the line off in settings: **At a glance**.

Quick buttons

Buttons under the clock, two rows at most: what doesn't fit is under **More** ▾, which opens the control center with every button. **Tap** a button for the quick thing; **hold** it for what's behind it. A switch is filled black when it's on.

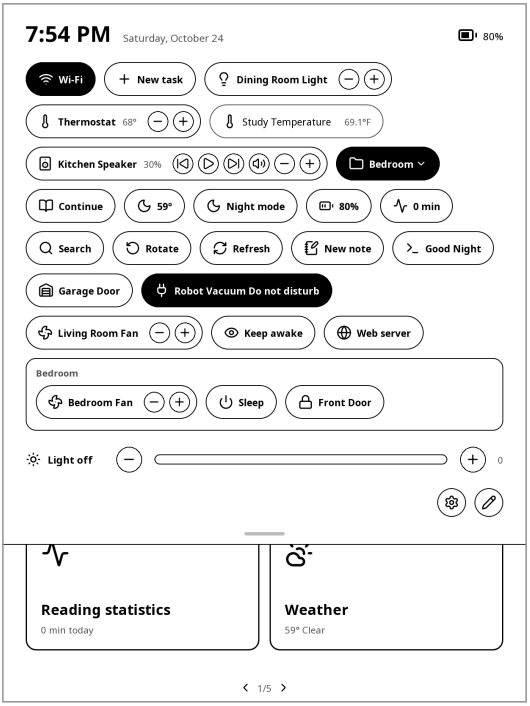

Quick buttons, and the control center with a group dropped down

The buttons you can have:

- **Wi-Fi**: on or off. Hold: the networks.
- **Light**: on or off. Hold: brightness and warmth.
- **Night mode**: on or off. Hold: KOReader's settings.
- **Refresh**: a full refresh that clears e-ink ghosting. Hold: how often books do one.

- **Web server**: turns it on or off. Hold: its address and QR code. While it's on, a globe shows by the clock and Notifications has its address.
- **Keep awake**: on or off. Hold: Sleep after.
- **New task**: To Do's add dialog. Hold: To Do.
- **New note**: a quick note in Notes. Hold: your notebooks.
- **Continue reading**: your last book. Hold: the Library.
- **Weather**: shows the temperature; tap for the Weather screen. Hold: change the place.
- **Search**, **Sleep** (hold: Sleep after), **Rotate** (hold: rotation), **Battery** (shows the level; tap for the Battery screen) and **Reading statistics** (today's reading time; tap for Reading statistics, hold for the calendar).
- **Shortcuts**, as in Add shortcut: a Home Assistant screen or room, a To Do view or list (hold: a new task in it), a notebook, a Notes folder, a crossword source or a KOReader action.
- **Home Assistant devices** (picked by room): a light or fan with − and **+** (brightness or speed; tap the name to switch it), the thermostat's set point with − and **+**, a speaker or TV with ⏮ ⏯ ⏭, mute and the volume, switches, locks, the garage, scripts and scenes (asked first where Home Assistant's own tiles ask), and sensors as a reading. Hold any of them for the device in Home Assistant.
- **From the other apps**: **Syncthing** (on or off; hold: the app), a saved **SSH command** (tap runs it; hold: its host), **Sync To Do** (how many changes wait; hold: the Sync screen) and **Refresh Home Assistant** (hold: Home Assistant). They're under **Add a button** when those apps are installed.
- **Groups**: one button that drops its own buttons down in the control center (hold to rename it, change its icon or edit the buttons).

Settings > **Quick buttons** (or **Edit quick buttons** on a group's hold, or the pencil in the control center) lists them: **Show on the home screen** turns the rows under the clock on or off. The list is in sections, so you can see where each button shows: **ON THE HOME SCREEN** (the ones that fit in the two rows, which depends on how long their names are), **ONLY IN THE CONTROL CENTER** (the rest, under **More**), and **ALWAYS IN THE CONTROL CENTER** (Wi-Fi, Night mode, Refresh, Web server and Keep awake when they aren't among yours; tap one to

add it and place it yourself). Each button's ⋮ has **Move to top**, **Move up**, **Move down**, **Move to bottom**, **Move to a group…** (or **Out of the group**) and **Remove** (with Undo), and **Add a button** adds a built-in, a shortcut or a new group. The web page's Launcher tab has the same sections, drawn as on the Kindle, with drag and drop between them. While Wi-Fi, Light, Night mode or Web server is a button, its tile leaves the main page, so you don't have both.

> Turned on its side, the launcher puts the At a glance line and the buttons on one line.

Recent books

RECENT BOOKS shows the last books you read (three across, five on its side), with the cover when KOReader has one, the title and how far you are: a progress bar and "42% read", **Finished** or **Not started**.

- **Tap** a book to open it.
- **Hold** a book for:
  - **Open**
  - **Book details** (its page in the Library, when the Library is installed)
  - **Mark as finished** (or **Mark as reading**)
  - **Remove from history**
  - **Open its folder** (the Library, at the book's folder)

Turn the row off in settings: **Recent books**.

Recent notebooks and crosswords

With Notes installed, two more rows can show under the books:

- **RECENT NOTEBOOKS**: the notebooks you used last, with their first page and when they were edited. A locked notebook shows a lock instead of its page. Tap one to open it; hold it for **Open**, **Add to launcher** or **Remove from recent**.
- **RECENT CROSSWORDS**: the puzzles you worked on last, with the grid as you've filled it so far, and "23 of 78 clues" with a bar (or **New** or **Done**). Tap one to go straight to that puzzle; hold it for **Open** or **Remove from recent**.

Remove from recent takes a notebook or crossword off its row until you write in it again (or solve more clues). To bring one back sooner, open settings > **Removed from recent** (it shows only once something has been removed, with how many) and pick it, or **Show all**.

Turn each row off in settings: **Recent notebooks** and **Recent crosswords**. Rows that fit together share a line (one book beside two notebooks, say), to leave room for tiles. **Recent items** > **One row** shows just the newest book, notebook and crossword side by side, in a single row. The **Small** clock and the **Compact** layout give more room too.

The tiles

- **Continue reading**: the last book and how far in. Tap to open it.
- **Library**: your books and folders (see the Library chapter). Without the Library app, or with Library settings > **Browse books with** set to KOReader's file browser, it opens KOReader's file browser.
- **Reading statistics**: how long you've read today and how many days in a row you've read, such as "25 min today · 4 days in a row". Tap it for your reading statistics (see below). It uses KOReader's reading statistics, so the Reading statistics plugin must be on.
- **Home Assistant** and **Dashboard**: see the Home Assistant chapter. The Dashboard tile shows once Home Assistant is set up (it's Home Assistant's screen).
- **To Do**: "2 today · 1 overdue", or what's coming this week.
- **Notes**: how many notebooks, and the last one you wrote in.
- **Crosswords**: today's crossword and whether it is new, started or done. Tap to open your puzzle books (see the Crosswords chapter).
- **Wikipedia**: how many articles are saved and the last one read. Tap to open Wikipedia.
- **Syncthing**: "On · Up to date", "On · Syncing · 3 files left" or "Off". Tap to open Syncthing.
- **SSH**: how many hosts are saved, such as "3 hosts". Tap to open SSH.
- **Web server**: "On" and its address, or "Off · Tap to start".

- **Fonts**: your fonts, getting more, and the font settings (see below). Its line says the font new books open in.
- **Gestures**: what each KOReader gesture does (see below).
- **Battery**: the battery level and how fast it's going, such as "71% · 3.0% an hour awake", or "71% · Charging". Tap for the Battery screen (see below).
- **Settings**: the launcher's Settings list, every app's settings (the same as ⋮ **> Settings**).
- **KOReader settings**: KOReader's own menu, opened at its Settings (gear) tab: Device (including **Autosuspend timeout**), Screen, Network, Taps and gestures and the rest.

On a new install, **Gestures**, **Battery** and **KOReader settings** start hidden: they're set up once or looked at now and then, and each is also in **Settings** and in search. Show any of them in **Edit home screen**. A launcher set up before keeps them as they were.

- **Wi-Fi**: on, off or connected. Tap to switch.
- **Light** and **Night mode**: as the quick buttons.
- **Exit KOReader**: back to the Kindle's home screen, after asking.
- **Restart KOReader**: closes KOReader and opens it again, after asking. Hidden to start with; show it in Settings (the eye) if you want a tile. It's always in the ⋮ menu too.

A tile only shows when its app is installed. More tiles than fit turn pages: swipe left or right, or tap the arrows at the bottom.

If KOReader crashed or stopped answering the last time it ran, the launcher says so (with the time) the first time it opens. The web page's **System** tab (**Problems**) has the details.

Holding a tile

Hold any tile for:

- **Move up** and **Move down**
- **Move to a group...**
- **Hide** (or **Remove** for a shortcut)
- **Edit home screen** (the list of every tile, below)

Groups

A group is a tile that opens a page of its own, like a folder on a phone.

1. Hold a tile and choose **Move to a group...**.
2. Choose **New group...** and give it a name, or pick an existing group.
3. The group's tile shows a folder (or the icon you picked) and how many tiles are in it. Tap it to open its page.

To leave a group's page, tap its name at the top, press Back, or swipe in from the left edge. To take a tile out of a group, hold it and choose **Move to a group... > Main page**. Hold a group's tile to **Rename group**, **Sort...** (**Custom**, the order you put them in, or **A–Z**, by name, which stays sorted as you add tiles), **Change icon** (pick one from the grid; the folder is the first) or **Delete group** (its tiles go back to the main page).

Suggested groups (in **Move to a group...**, at the end of **Edit home screen**, and in Set up your Kindle > Your home screen) offers ready-made groups: **Settings** (Fonts, Gestures, Battery, KOReader settings, Restart KOReader), **Reading** (Library, Reading statistics, Wikipedia), **Home** (Home Assistant, Dashboard, Weather), **Writing** (Notes, Crosswords), **Tools** (SSH, Syncthing, Web server) and **Device** (Wi-Fi, Light, Night mode, Exit KOReader). Each lists only the apps you have that aren't in a group yet, and shows when at least two are left. Tap one, then **Make group**; hidden tiles in it show again, and the group starts sorted **A–Z**.



Picking a group's icon

Shortcuts

A shortcut is a tile that goes straight to one place. In Settings > **Edit home screen**, at the end of the list, tap **Add shortcut**:

- **Home Assistant screen or room**: Home, the Dashboard, any of its screens (Security, Climate, Weather…) or a room. Its line shows that place's summary, such as "Inside 70° · 40%".
- **To Do view or list**: Today, Agenda, Starred, Calendar, Search, or one of your lists.
- **Notebook**: a Notes notebook, with when it was last edited.
- **Notes folder**: a folder of notebooks.
- **Crossword**: one newspaper's newest crossword.
- **KOReader action**: anything a gesture can do that needs no setting, such as **Calibre: Connect** or **Push progress from this device**. Pick a group (General,

Device, Screen and lights, File browser, Book) and then the action. It runs when you tap the tile, just like the gesture. Book actions need a book open.

Home Assistant, To Do and Notes can add shortcuts themselves: their ⋮ menu has **Add to launcher** on the screen you're looking at.


To remove a shortcut, hold it and choose **Remove**, or tap its **x** in settings.

Weather

The **Weather** tile works with or without Home Assistant. With Home Assistant's weather it opens Home Assistant's Weather screen. Without it, it uses **Open-Meteo**, a free forecast that needs no account or key: the first tap asks for your town or city (type it, then pick the right one from the matches), and the forecast loads over Wi-Fi.

- **Now**: the temperature, the conditions, today's high and low, what it feels like, the chance of rain today, the wind and the humidity.
- **ALERTS** (in the US): warnings, watches and advisories from the National Weather Service, such as a Wind Advisory and until when. Tap one for the whole text and what to do.
- **NEXT 24 HOURS**: each hour's conditions, temperature and chance of rain.
- **NEXT 7 DAYS**: each day's conditions, chance of rain, and high and low.

It updates every 30 minutes while Wi-Fi is on and something shows it (the tile, At a glance, the widgets sleep screen), and keeps the last forecast for when Wi-Fi is off. ⟳ in the title bar loads it again.

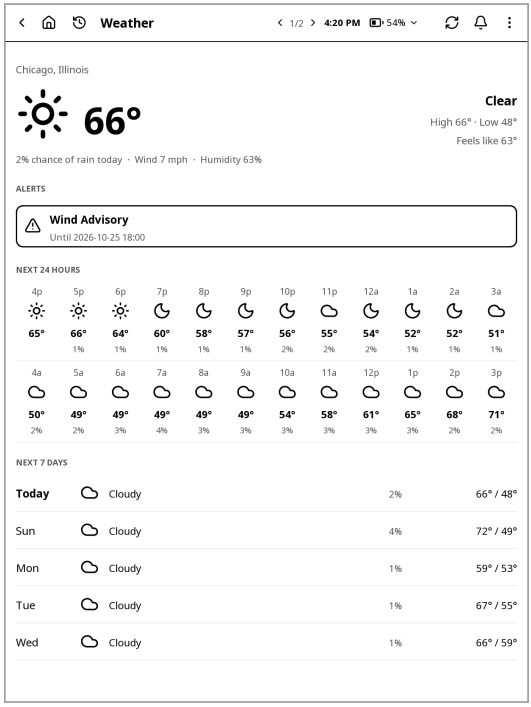

Weather

Settings > Launcher > **WEATHER**:

- **Weather from**: **Automatic** (Home Assistant's when it has weather, else Open-Meteo once a place is set), **Home Assistant**, **Open-Meteo (free)** or **Off**.
- **Place**: the town or city for Open-Meteo.
- **Units**: °F or °C (°F to start with in the US).

Reading statistics


Tap the **Reading statistics** tile. At the top:

- **Today**, **Last 7 days** and **Last 30 days**: your reading time.
- **In a row**: the days you've read in a row (today counts once you read; until then it counts from yesterday). **Longest streak**: the most days in a row ever.
- **In all**: your reading time in every book.
- **Calendar**: KOReader's calendar of what you read each day.

- **Wikipedia not counted** (tap to switch to **Wikipedia counted**): Wikipedia's articles are left out of the times, streaks and books unless you count them. OneNote pages you open from Notes are never counted. (KOReader's own calendar still shows everything.)

WHEN YOU READ shows your reading by hour of the day ("Mostly 9 PM to 11 PM") and by day of the week ("Most on Saturday").


BOOKS lists every book you've read, last read first: its time, how far along you are, the time left at your own pace in that book, and when you last read it. A finished book says **Finished**.

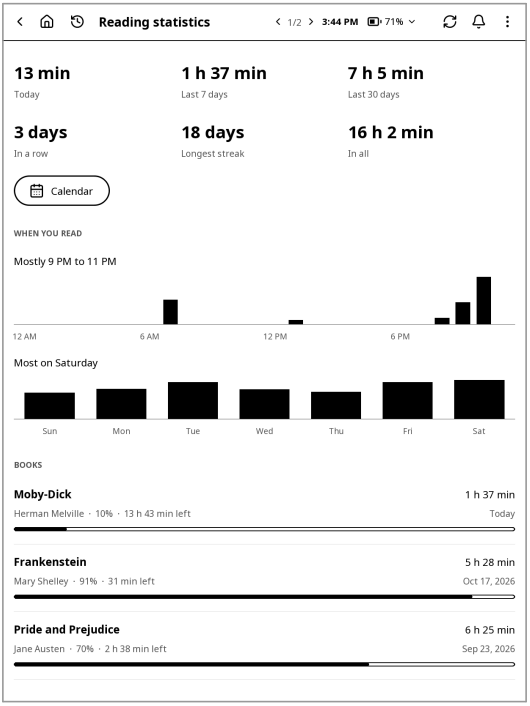

Reading statistics

Tap a book for its own page: how far along (percent and page), **About … left**, the time reading it, your pace (pages an hour), the days you read it (tap for the list, with each day's time), the average a day, when you started and last read it, pages read, highlights and notes, and when you read it by hour. With the Library app, **Book details** at the top opens the book's page in the Library (its

status, collections, what the book says about itself, its file, and Continue).

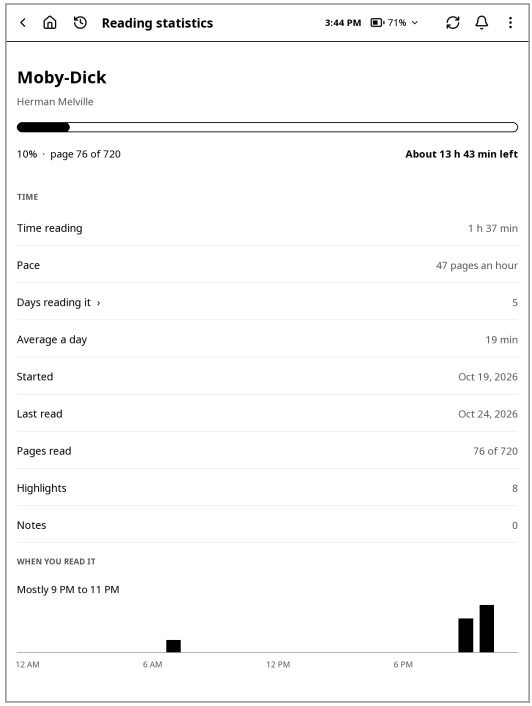

One book's reading statistics


The time left is the pages still to go times your average time per page in that book so far, so it gets better as you read. Everything here comes from KOReader's reading statistics.

Fixing reading sessions

A book's page ends with **SESSIONS**: each time you read it, newest first, with the day, start and end, minutes and pages. Tap one:

- **Edit**: change its **Day**, **Start** or **End** (KOReader's pickers), then **Save**. The menu shows the new length and the old one. Moving keeps it as it was; an earlier end cuts the time after it (a book left open by mistake becomes the minutes you really read); a later end stretches each page's time to fit. It can't overlap other reading.
- **Delete**: takes it out of the statistics.

Reset statistics at the bottom takes all of the book's reading out, after asking. Each of these offers **Undo** for a few seconds. The web page's Reading tab does the same with the same code.

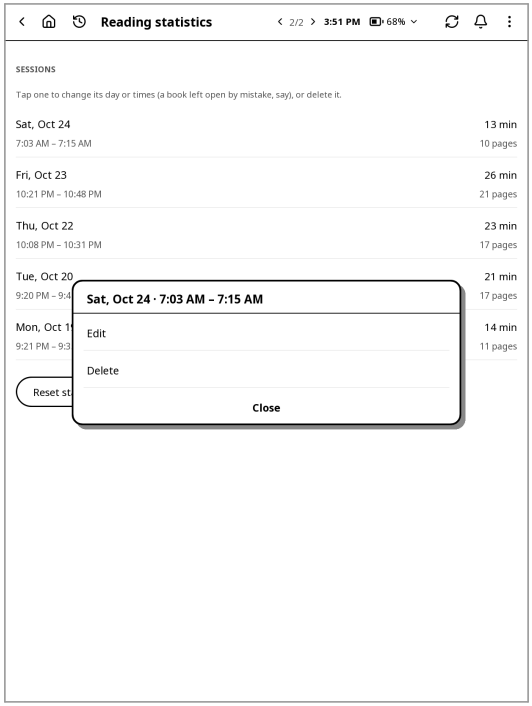

A book's sessions


Fonts

The **Fonts** tile (also in **Settings** and search) has everything about the fonts books use:


- **Get more fonts** at the top opens the **Get fonts** page, with free fonts from Google Fonts over Wi-Fi:
  - The box at the top: type any Google Fonts family's name (such as Lora or Source Serif 4) and tap **Get**.
  - **SUGGESTIONS**: good reading fonts, each with what it's like: Literata (made for e-books), Merriweather, Lora, EB Garamond, Crimson Pro, Source Serif 4, Alegreya, Bitter, Atkinson Hyperlegible (made for low

vision) and Lexend. **Get** next to one gets it.
  - The Kindle downloads the family's regular, bold and italic styles in the background, and says when it has them.
- **YOUR FONTS**: every font KOReader can use, each name drawn in its own typeface. The one new books open in says **Default**, and ones you added say **Added**. Tap a font for **Set as default for new books**, or **Remove** for one you added (with **Undo**; KOReader's own fonts stay).
- **FONT SETTINGS**: the font size for new books, the fallback font, more fallback fonts, the book's own fonts, the font weight, hinting and kerning, as in KOReader's own menus.

Books see added or removed fonts after KOReader restarts: a box at the top says so, with **Restart**.

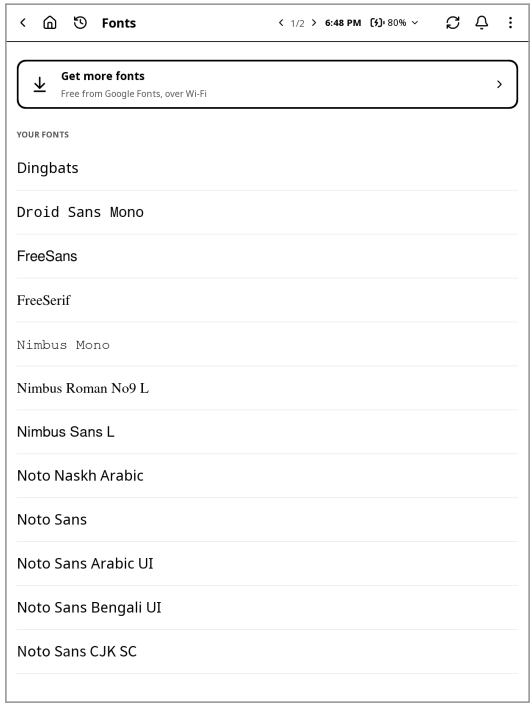

Fonts

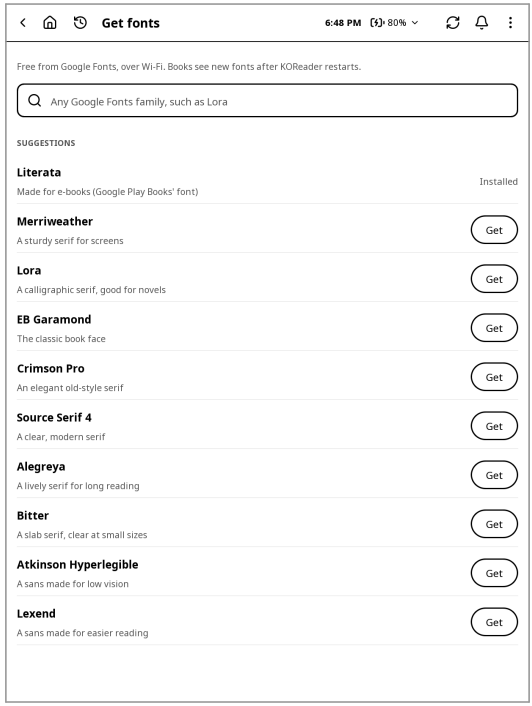

Get fonts: any family by name, or a suggestion

The Battery screen


The **Battery** tile opens KOReader's own battery statistics, shown plainly. It needs KOReader's **Battery statistics** plugin, which is on unless you've turned it off:

- The level, and about how long it will last awake at the rate you've been using it.
- **SINCE THE LAST CHARGE**: how much went while **Awake** and while **Asleep**, how long each, and how much an hour; **In all** for both.
- **THE LAST CHARGE**: how much it charged, in how long.
- **ON NOW**: what is on that uses power: Wi-Fi, the front light, the web server, Syncthing, the Home Assistant dashboard keeping the screen on, anything keeping the Kindle awake.
- **Reset statistics** starts counting again.

KOReader can only tell awake from asleep, not which app used what. To see what costs most, reset, use the Kindle one way for a while (say Syncthing on, or the web server running), and look again.

The Gestures screen

The **Gestures** tile lists every KOReader gesture that does something, with what it does, in KOReader's own words. For example, "⇐ → Folder shortcuts" under **TWO-FINGER SWIPE**. It's handy for finding a gesture that fires by accident.

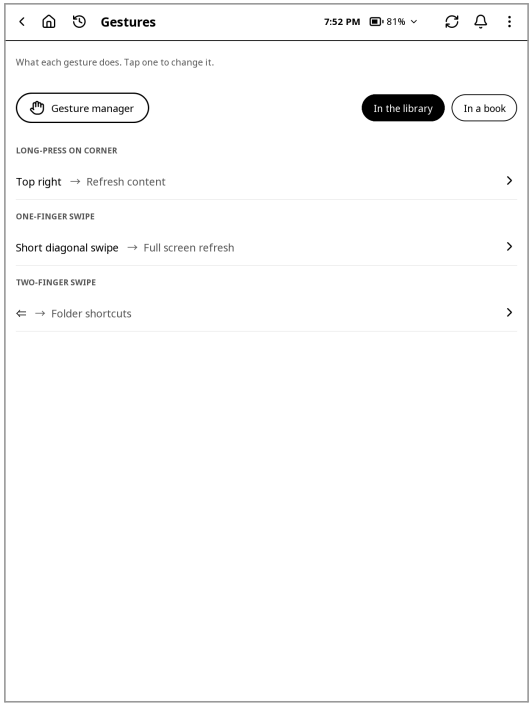

The Gestures screen

- **In the library** and **In a book** switch between the two sets of gestures.
- **Tap a gesture** to change it in KOReader's own menu for it: choose another action, **Pass through** (do nothing here) or **Nothing**. Changes take effect at once.
- **Gesture manager** opens KOReader's whole gesture menu, to set up new gestures.


You can only change the set you are in: the library's while in the library, a book's while reading. The other set is shown for reference.

Search

Tap the magnifying glass at the top of the launcher and type a word. The results come grouped by app, the books a moment after the rest (they're looked for in the background, so the screen never waits):

- **Books**: titles and authors KOReader knows (from the covers it has read), and file names under the home folder.
- **Notebooks**, **To Do** tasks, **Home Assistant** devices (by name or room), crosswords, saved Wikipedia articles, Syncthing folders and SSH hosts.
- **Apps and settings**: every app and screen of the launcher by name (hidden tiles too, such as Battery or Gestures), and every page in Settings.


Tap one to open it: a book opens, a task opens in To Do, a device opens its room. The magnifying glass on the results searches again.

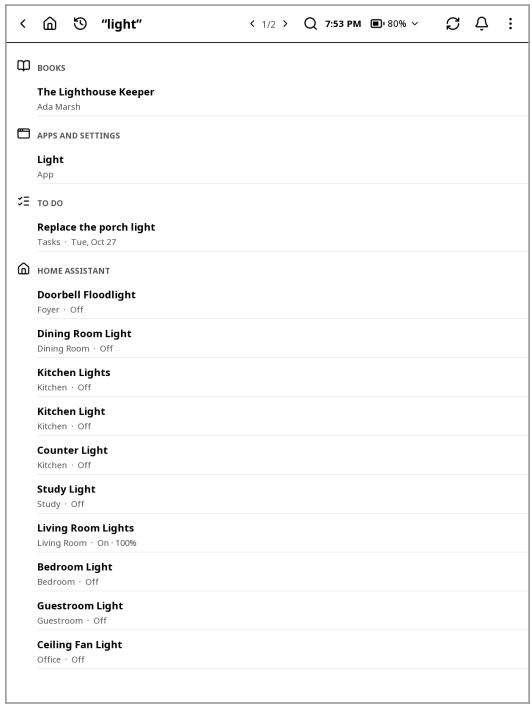

Search from the launcher

The control center and Recent apps

Both are part of every app's bar; see "Finding your way around" in Getting started. On the launcher, tap the battery and Wi-Fi (or **More** ▾ under the clock) for the control center; Recent apps is in ⋮. The control center has every quick button in every app (Wi-Fi, Night mode, Refresh, Web server and Keep awake are always there), with a group's buttons dropped down when you tap it, pages when there are more than fit, the pencil to change them, and the light and warmth.

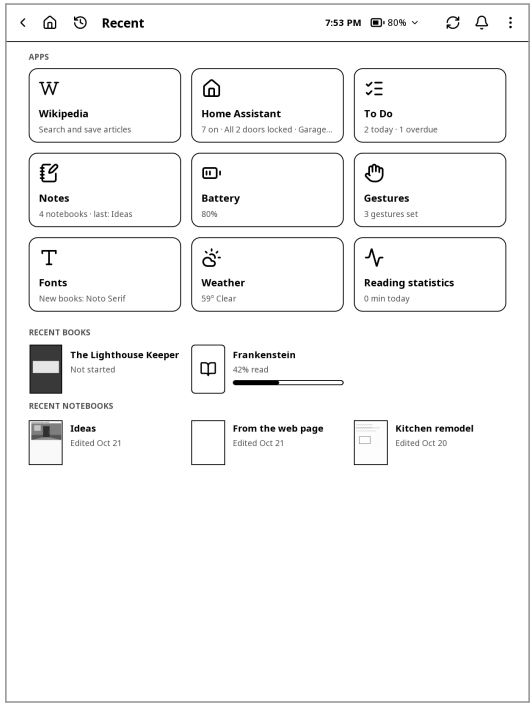

Recent apps

Settings

⋮ **> Settings** lists every app's settings in one place (see Getting started), in groups to start with: **Getting started** (**Updates**, **Set up your Kindle**), **Settings** (Launcher, Edit home screen, Fonts, Gestures, Battery, KOReader), **Accounts** (AI, Microsoft), **Reading**, **Home**, **Writing** and **Tools**, the same as the home screen's suggested groups. An app installed later goes under **Other** until you place it.


Hold a row for **Move up**, **Move down**, **Move to a group...** (or **New group...**) and **Hide**; hold a group's name to **Rename**, move or **Delete** it (its rows go to **Other**), or make a **New group...**. At the end, under **THIS LIST**: **Layout** (**Groups**, or **One list** without headings) and **Reset this list** (back to the suggested groups, nothing hidden). A hidden row is still found by search, marked **hidden from Settings**: hold it there and choose **Show in Settings**; the list says how many are hidden.

Updates has its own page: **Check for updates**, **Update from**, **Install a version**, **Optional apps**, **Check automatically** and **Undo a plugin update** (see "Updates" below); on the list it shows the version installed, or **Update available**. **Web server** there opens its settings as a page: on or off, its address, **Keep the Kindle awake while on**, **Stop after 30 minutes unused**, the **Port**, the **Password** and **Undo a plugin update**. **KOReader** opens KOReader's most-used settings on one page (see "KOReader settings" below).

KOReader settings


KOReader's own settings, the same ones as in KOReader's menu, so a change here shows there too and takes effect at once:

- **Sleep after**: how long the Kindle waits, untouched, before it goes to sleep (also in the launcher's Sleep section).
- **Full refresh**: while reading, how often the page flashes clean: **Never**, **Every page**, every 6, 12 or 22 pages, or **Every chapter**.
- **Rotation**: **Auto-rotate** (the Kindle turns the screen as you turn it), or locked to **Portrait** or **Landscape** in books and the library alike.
- **Page turn tap zones**: **Default**, **Left / right**, **Top / bottom** or **Bottom / top**.
- **Invert page turns**: swaps the next and previous sides, for left-handed reading or right-to-left books. It's the default for new books and changes the open one; a book you've set yourself keeps its own.
- **Font for new books** and **Font size for new books**: what a book you haven't opened before starts with. Books you've already opened keep their own. To add fonts, or for the fallback fonts and the rest, use the **Fonts** screen (see "Fonts") or the web page's **Fonts** tab.
- **Status bar in books**: on or off. **Status bar items** opens KOReader's own Status bar menu while a book is open.
- **Progress sync**: KOReader's automatic progress sync, when its Progress sync plugin is on. It needs a sync account (KOReader's menu > **Tools** > **Progress sync**).
- **Open KOReader's full menu**: everything else, at its Settings tab.

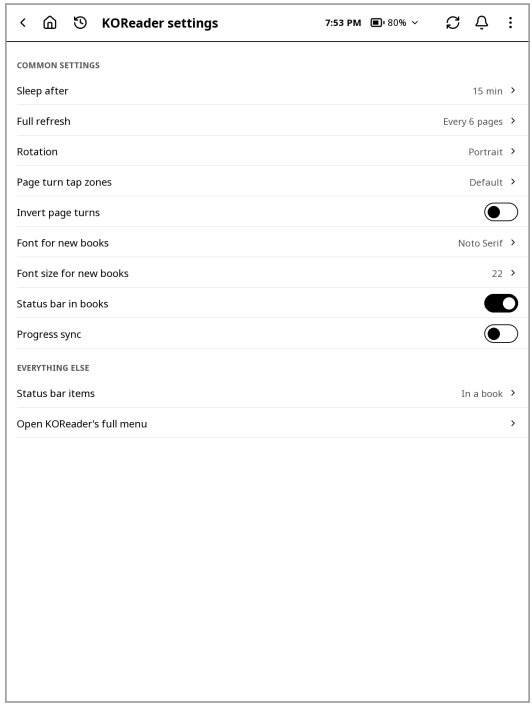

KOReader settings: the common settings

The launcher has these rows there: **Edit home screen** (which tiles show and in what order, groups and shortcuts), **Launcher** (everything else, below), and its screens **Fonts**, **Gestures** and **Battery** (Back returns to the list). Long screens have pages; swipe or tap the arrows next to the page number.

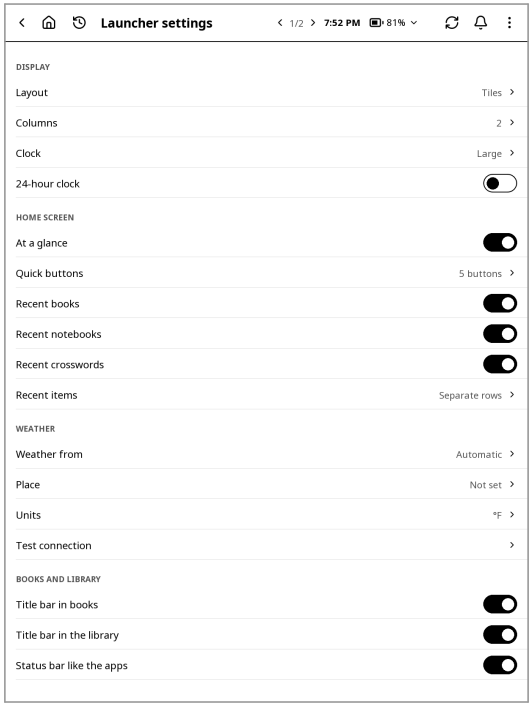

The launcher's settings

Edit home screen

Every tile is listed, hidden ones greyed and grouped ones with their group's name.

- **The arrows** move a tile to the top, up one, down one or to the bottom.
- **The eye** shows or hides it.
- **The x** removes a shortcut or deletes a group.
- **Undo** at the top puts back the last move (tap again for the one before).
- **Add shortcut** is at the end of the list, then **Suggested groups**.
- **Saved home screen** keeps a copy of the tiles' order, shortcuts, hidden tiles and groups: **Save the home screen now**, and later **Put back the saved one** (with Undo). Backups keep it too, along with the home screen itself.

The web page's Launcher tab has the same, drawn as the home screen: drag tiles into order, into a group or to Hidden.


Display

- **Layout**: **Tiles** (outlined), **Bold tiles** (filled black), **Compact** (small tiles, just the icon and name, so many fit on a page), **List** (a row each; two columns on its side) or **Icons** (like a phone; smaller when that fits two rows).
- **Clock**: **Large**, or **Small** (the time and date on one line, leaving more room for tiles). On its side the clock is always the one-line kind.
- **Recent items**: **Separate rows** (books, notebooks and crosswords each in a row, sharing lines when they fit) or **One row** (the newest of each).
- **Columns**: 1, 2 or 3 tiles across (two more when turned on its side).
- **24-hour clock**: KOReader's own setting (the same as in its **Time and date** menu), so every clock follows it: the launcher, every app's bar, a book's status bar and the sleep screens.
- **Button labels**: the buttons in every app's pop-ups and text boxes (Cancel, Save, Search…) show an icon over a word; off, just the icon, in smaller squares. Its page has the switch for every app, then each app on its own: **Default** (as for every app), **On** or **Off**.

For a dark screen, use **Night mode** (the quick button, the control center or ⋮): KOReader's own, for every app.

Home screen

- **At a glance**, **Quick buttons** and **Recent books**: the three rows under the clock.
- **Recent notebooks**, **Recent crosswords**, **Removed from recent** and **Recent items**.

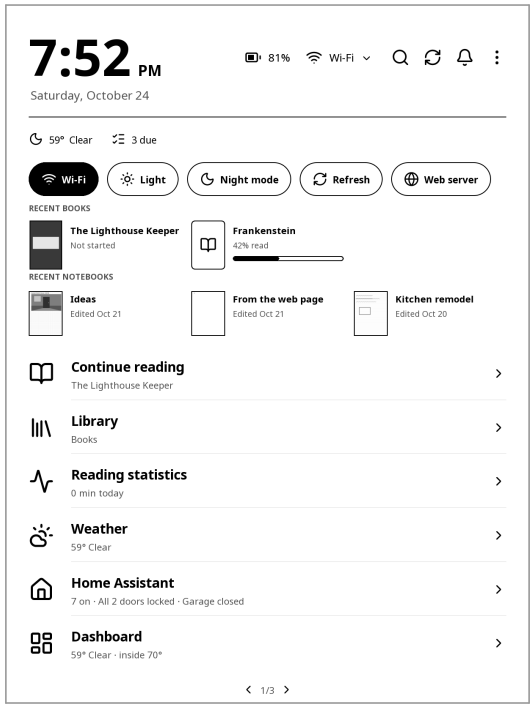

The List layout

Weather

- **Weather from**, **Place** and **Units**: see "Weather" above.
- **Test connection**: tries Open-Meteo for your place and, in the US, the weather alerts.

Books and library

- **Title bar in books** and **Title bar in the library**: what a tap at the top of a book or of the library shows (see "In a book and in the library"). Both are on to start with; off, the tap opens KOReader's menu as before.
- **Status bar like the apps**: a book's status bar (at the bottom) with the apps' clock ("11:48 PM", or 24-hour), the items set apart with "·", and the apps' font, at the size set in KOReader. On to start with; off, KOReader's own.

Sleep

- **Sleep after**: how long the Kindle waits, untouched, before it goes to sleep: 5, 10, 15 or 30 minutes, 1 or 2 hours. It's KOReader's own sleep timer, so it's the same setting as in KOReader's menu and on the web page's KOReader tab. To keep the Kindle awake for a while, use **Keep awake** in the control center.
- **Sleep screen** and **Sleep screen updates**: see "The sleep screen" in Getting started. They're only here: Home Assistant's and To Do's settings open this section. **Widgets** is one of the choices (see below).
- **Widgets** (with the Widgets sleep screen): which parts show. Tap one to turn it on or off. Their order is set on the web page's Launcher tab.

Start

- **Open at startup**: the launcher opens when KOReader starts.

Wi-Fi

- **Turn off when idle**: **Off**, or after 5, 15 or 30 minutes with no network use. Downloads, syncing and Home Assistant's updates count as use. It never turns Wi-Fi off while the web server is on, and time asleep doesn't count. A notice says when it happens.
- **Connection check**: tests your internet connection and every app that's set up, the same way each app's own **Test connection** does. Under **WHAT TO TEST** every one is ticked to start with; untick the ones you don't want (**Select all** or **Select none** at the right), then **Test selected**. Each address shows **Works** and how long it took, or what went wrong in plain words with the exact error under it. What doesn't work also goes in KOReader's log and the web page's diagnostics file.

Updates

Settings > **Updates**:

- **Check for updates**: shows the version installed. Tap it to look for a newer release; when there is one, you see its notes and **Update**, which downloads it, checks it, installs it and offers to restart KOReader. If anything goes wrong, nothing changes. When you're up to date it offers **Reinstall**, to install the same version again.

- **Update from**: where updates come from, as owner/repo on GitHub (this project's own, github.com/Mcp20091/kindle-koreader-apps, to start with). Change it to follow a fork; leave it empty to go back.
- **Install a version**: the releases to pick from, the installed one and the latest marked, then the repo's branches (**Branch: main**, ...). Picking an older release goes back to it. A branch installs the code as it is on it now (not a release, so it may not be finished); after that, **Check for updates** and the daily check look for newer commits on that branch instead of releases, until you install a release again.

While an update installs, a pop-up says how far it is: **Downloading... 40%** (or how many MB, for a branch), then **Checking the update: notes (5 of 10)** and **Installing notes (5 of 10)**, a plugin at a time. The Kindle keeps answering meanwhile, so there's no need to restart it.

- **Optional apps**: extra apps you can add (FlashForge, for a FlashForge 3D printer; Pangolin, for a Pangolin server), kept out of the main install. The list comes from where your updates come from (the latest release, or the branch you installed): each app with **installed** or **not installed**. Tap one to **Install** it, or to **Update** or **Remove** it. Once installed, an optional app is updated along with the rest. Removing one keeps it under **Undo a plugin update**, which can bring it back. KOReader restarts after each.
- **Check automatically**: on to start with. Once a day, only while the Kindle is already on Wi-Fi, a notification says when there's a newer release; tap it to see what's new and update. Until it's installed, the launcher's **Settings** tile says **Update available**.

After an update, its notes show once when KOReader starts again (**What's new in ...**).


- **Undo a plugin update**: lists the plugins that have an earlier version, each as "name (before <date>)". Pick one and confirm with **Go back**; KOReader restarts. With none to undo it says "No plugin has an earlier version to go back to."

In a book and in the library

Tap the top of a book's page (where KOReader opens its menu) and the same bar as in the apps shows over the top of the page:

- **‹** goes back to where you opened the book: the launcher (or Recent apps or search) or the library. **The house** goes to the launcher (the book stays open: **Continue reading** comes back to it).
- **The book's title**, with the chapter and "Page 41 of 230" under it.
- **The clock and battery**, **refresh** (flashes the page clean), **the bell** (Notifications) and ⋮.
- ⋮ has **KOReader menu** (KOReader's whole menu, as the tap used to open), **Table of contents**, **Bookmarks**, **Go to page**, **Search**, **Text and layout** (the font, margins and the rest at the bottom), **Light**, **Night mode**, **Refresh screen** and **Settings** (KOReader's menu at its settings).
- A tap anywhere else closes the bar. Swiping down from the top still opens KOReader's menu. Tap the time and battery for the control center.
- A swipe in from the left edge of the page goes back the same way (in the library, up a folder). Other swipes turn pages as before.
- The first book you open shows a tip once: "Tap the top of the page for the apps bar".

In KOReader's file browser the bar is the same, titled **File browser** (**Library** without the Library app) with the folder under it: **‹** goes up a folder, and ⋮ has **KOReader menu**, **Home folder**, **Library** and the rest. With the Library app, Back from a book goes to the Library instead (see its chapter).

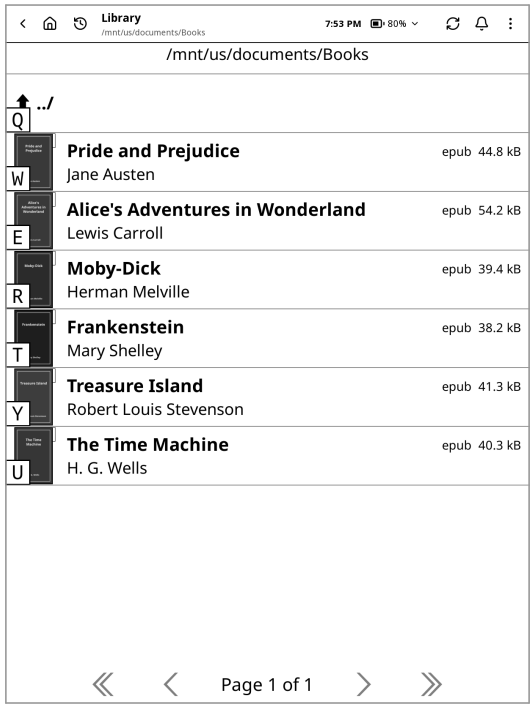

The library with the title bar

Settings > **Launcher** > **Title bar in books** and **Title bar in the library** turn it off.

The launcher's sleep screens

With **Sleep screen** set to **Summary**, the sleeping Kindle shows:

- The date, "Sleeping since 3:05 PM" and the battery (with the charging sign on the charger).
- The weather with today's high and low.
- **NEXT**: the next event or reminder.
- **TODAY**: today's and overdue tasks, with boxes.

With **Widgets** it shows the parts you pick (Settings > **Launcher** > **Widgets**), each in a box:


- **Clock**: the time, the date and the battery.
- **Current book**: its cover, title and how far you are.

- **To Do today**: today's and overdue tasks.
- **Home Assistant alerts**: whether the doors are locked and the garage shut, and the alerts you chose in Home Assistant's settings.
- **Latest notifications**: the newest four.

Each part uses what the Kindle already has (nothing is fetched as it goes to sleep) and says how old it is, such as "Updated 5 min ago".


Set up your Kindle

On the first start, while nothing is set up yet, a walkthrough shows: **Wi-Fi**, **Home Assistant** (sign in), **Weather** (your town, when Home Assistant doesn't give the weather), **Microsoft** (the App ID and one sign-in for To Do and OneNote), **AI** (a service's key or your local AI's address), **Syncthing** (pairing with your computer or phone), **Your home screen** (its settings right on the page, each with a line saying what it is: **Tiles** (which show; **Gestures**, **Battery** and **KOReader settings** start hidden), **Layout** and **Recent items** (picked from small pictures of your home screen drawn each way), **Suggested groups** and **Quick buttons**), **Getting around** (two pages: the top bar, button by button, and what holding and swiping do) and **The web page** (what it's for, with a picture: updates, books and fonts, arranging the home screen, typing with a keyboard; and its password), and last **More to explore**: what needs nothing set up, among what you have (Notes, Crosswords, Wikipedia, Reading statistics, Fonts and Search). Each step says whether it's done and has a button to do it, and **If you skip it** says what you get without it (To Do, for one, keeps lists on this Kindle). **Skip** goes on without it, and **Back** returns to the step before. The last page lists each step as **Done** or **Not set up**, with what a skipped one means when there's room. The first page has **Skip** and **Don't show again**. Run it again any time from **Settings > Set up your Kindle**: once it's been finished or turned off, it opens on that list. Tap a step to set it up or change it (**Done** brings you back to the list), or **Start over**. **Read the user guide** on that page shows a QR code of this guide online and downloads its PDF to the Kindle (with your books), then opens it.

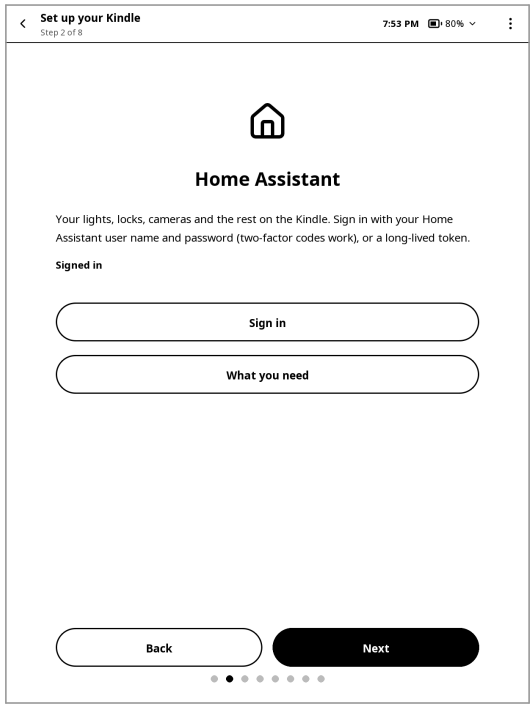


Set up your Kindle

A step that needs something from another website has a **How to...** button (To Do's is **How to get an App ID**): the steps in short, and a QR code that opens the full steps in this guide on your phone. To Do's step can also be skipped for good: To Do works without an account, with lists kept on the Kindle.

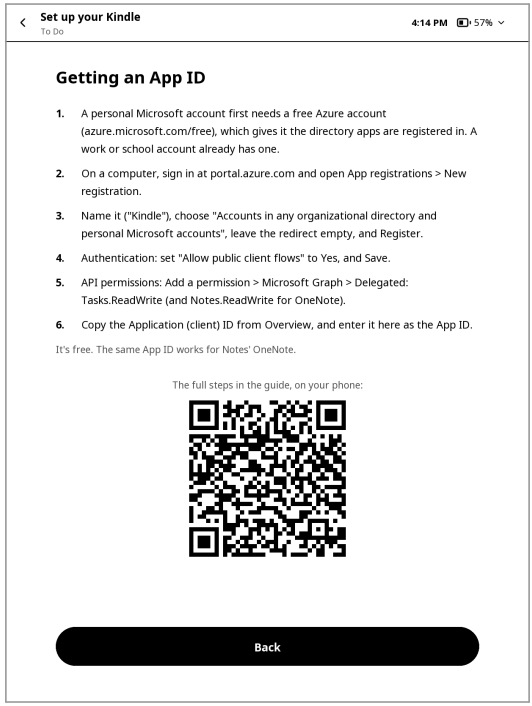

How to get an App ID

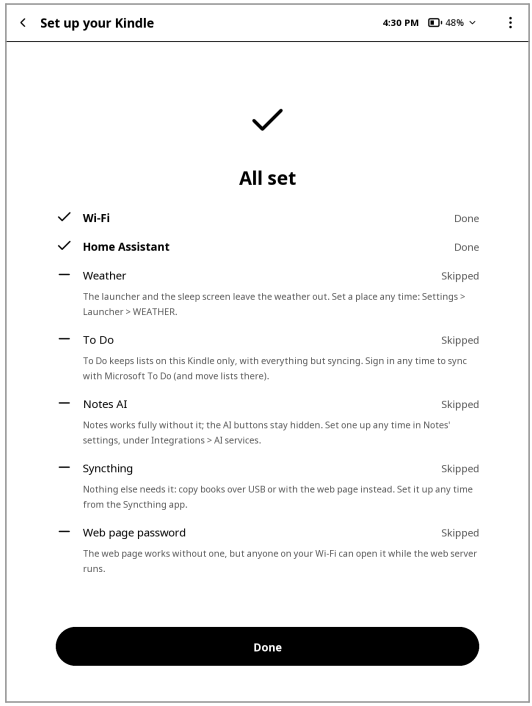


The last page: what was done and what skipping means

Gestures on the launcher

- **Swipe** left or right to turn pages (also up or down).
- **Swipe in from the left edge** to go back (from Settings, Gestures, Battery, a group or a search); other swipes right turn back a page.
- **Swipe diagonally** for a full refresh.
- Your own KOReader gestures that aren't taps work here too, for the light, night mode, a refresh, Wi-Fi, a screenshot and the apps.

Tips

- Hold anything that has no menu of its own and it acts like a tap.
- Removing a shortcut or group, or hiding a tile (hold it), shows **Undo** for a few seconds.

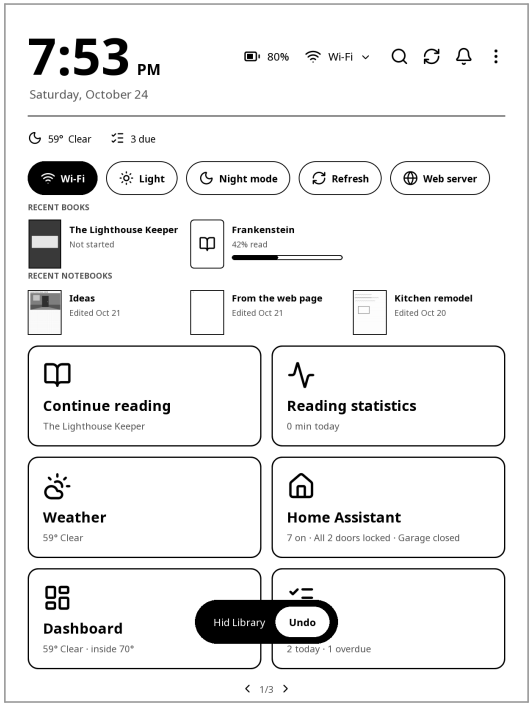

Undo after hiding a tile

- The screen flashes clean every few changes and whenever you come back from another app or a dialog.
- Shortcuts to a To Do list or a Home Assistant room show that place's own line, so the launcher becomes a small dashboard.

Library

Your books and folders in one place, drawn like the other apps: covers or a list, what you're reading, authors, series and collections, and your folders with Move, Copy, Rename and Delete. Books open in KOReader's reader as always, and Back from a book comes back here. It uses KOReader's own records, so your progress, highlights, history and collections are the same as in KOReader and on the web page.

Opening the Library

- The **Library** tile on the launcher.
- Back from a book (its ‹, or a swipe in from the left edge): the Library, where you left it.
- **Hold** a book in the launcher's **RECENT BOOKS** for **Book details** or **Open its folder**; hold the **Continue** quick button.
- In Reading statistics, a book's **Book details**.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Library**.

KOReader's own file browser is still there: ⋮ **> KOReader file browser** opens it (the Library steps aside until you next open a book). To use it all the time, set Library settings > **Browse books with** to **KOReader's file browser**; Set up your Kindle asks the same once.


Without the launcher, the Library still works; the house, the bell and Recent apps are left out of its title bar.

Home

The chips across the top switch between **Home**, **All**, **Reading**, **To read**, **Finished**, **Authors**, **Collections** and **Folders**. Home has:

- **CONTINUE READING**: the last book, how far you are and the time left at your pace. Tap it (or **Continue**) to read on; hold it for its menu.

- **RECENT**: the books before it. Tap a cover for the book's page; **See all** lists every book you've read, newest first.
- **BOOKS**: **Reading**, **To read** (never opened), **Finished**, **On hold**, **Authors**, **Series** and **Collections**, each with how many and the first titles.
- **FOLDERS**: the Home folder and your favorite folders.

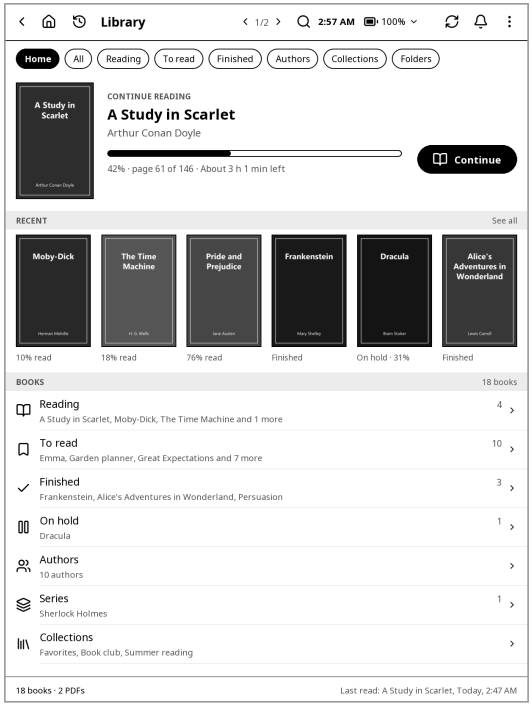

Home

Books


All, **Reading**, **To read** and **Finished** show their books as covers (five across) or a list. A book being read shows a progress bar; the others say **To read**, **Finished** or **On hold**.

- **Tap** a book for its page; **hold** it for its menu (below).
- The **list or grid** button in the title bar switches between a list and covers, for every page.

- The **sort** button (the up and down arrows) has **Sort by** (Recently read, Recently added, Title, Author, Progress, File name, Size) and **Group by** (None, Author, Series, Status, Format, Language, Folder). Each page keeps its own.
- Grouped, each group has a grey heading with how many. Tap the heading for **Select these**, **Make a collection** (from the group, named after it) and the author's or series' own page.
- Swipe left or right, or tap **‹ 1/2 ›** in the title bar, to turn pages.




All books as covers

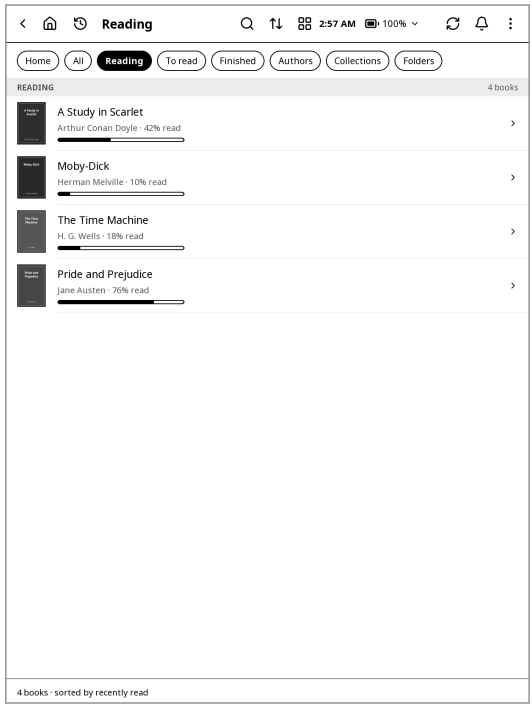

Reading, as a list




All books grouped by author

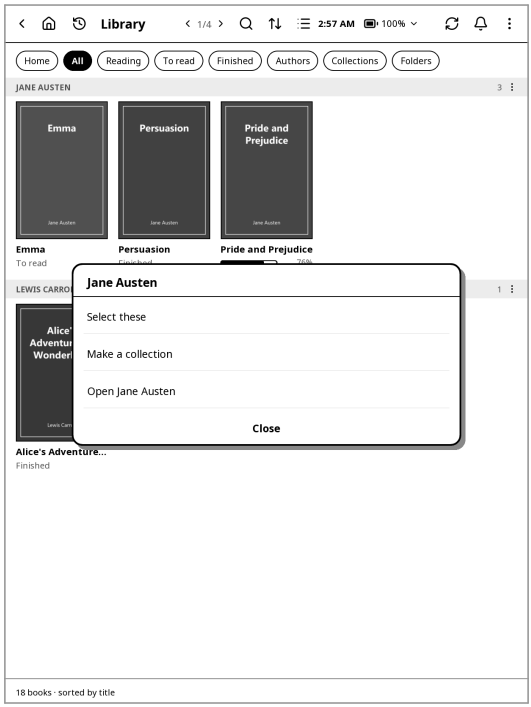


A group's heading tapped

Authors, series and collections

- **Authors**: every author, by last name, with how many books and where you are with them. Tap one for their books.
- **Series** (on Home): every series; a series' page lists its books in order.
- **Collections**: KOReader's collections, Favorites first. Tap one for its books; **+** makes a new one; hold one to **Rename** or **Delete** it (with Undo). Favorites can't be renamed or deleted.

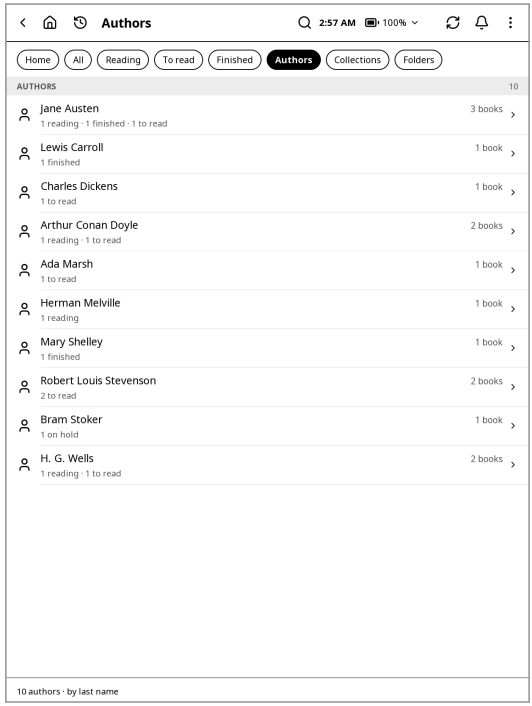
Authors
2:57 AM
100%
Home
All
Reading
To read
Finished
Authors
Collections
Folders
AUTHORS
10
Jane Austen
1 reading · 1 finished · 1 to read
3 books
Lewis Carroll
1 finished
1 book
Charles Dickens
1 to read
1 book
Arthur Conan Doyle
1 reading · 1 to read
2 books
Ada Marsh
1 to read
1 book
Herman Melville
1 reading
1 book
Mary Shelley
1 finished
1 book
Robert Louis Stevenson
2 to read
2 books
Bram Stoker
1 on hold
1 book
H. G. Wells
1 reading · 1 to read
2 books
10 authors · by last name

Authors

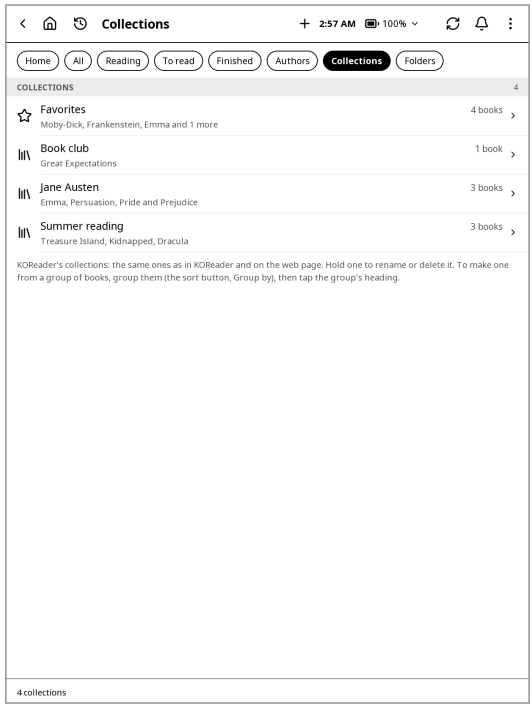

Collections


A book's page

Tap a book anywhere for its page:


- The cover, title, author and series, the format, size and pages, how far you are and the time left at your pace.
- Its status: **Reading**, **On hold** or **Finished**, a tap each (**To read** shows while the book has never been opened). The star in the title bar adds it to Favorites.
- **READING**: first read, last read, time reading, days reading it, pace, pages read, and highlights and notes. **Time reading** and **Days reading it** open the book's Reading statistics; **Highlights and notes** lists them, with the chapter and page.
- **BOOK**: what the book says about itself: series, authors, when it was published, publisher, language, pages, print length, subjects and ISBN. A row shows only when the book has it. A book with few details: **More > Find**

details online (below).


- On page 2: the **DESCRIPTION**, and the **FILE**: name, format, size, when it was added, its folder and its collections (tap for the folder, or to change the collections).
- The buttons: **Delete**, **Rename**, **Move to**, **More** and **Continue** (**Open** for a book not started).

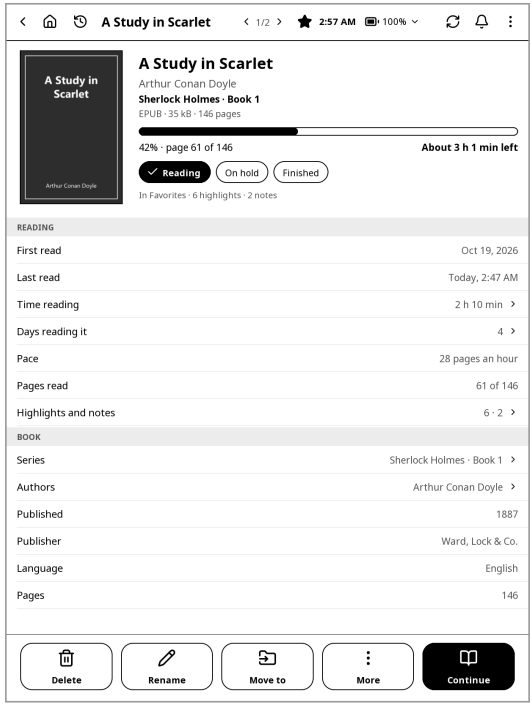

A book's page

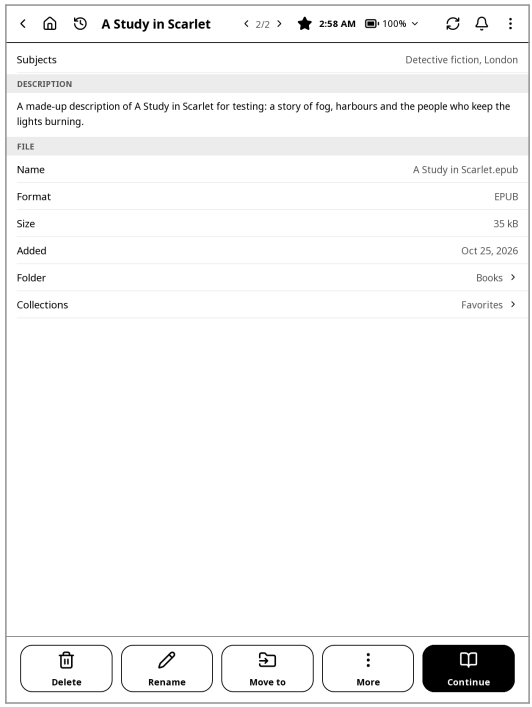

Page 2: the description and the file

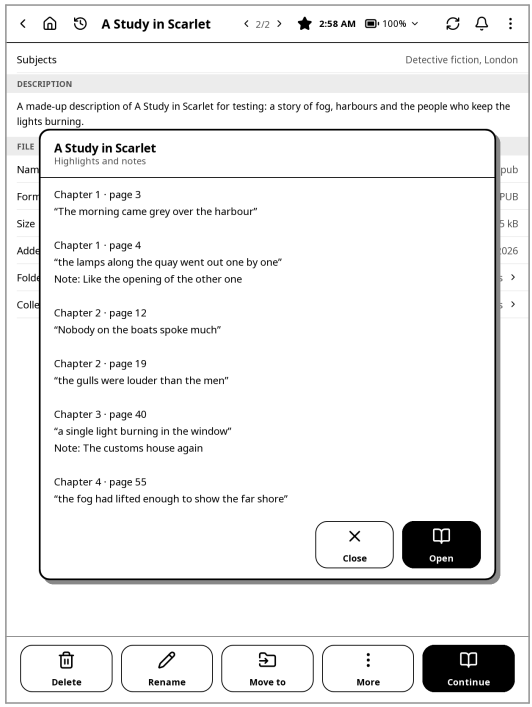


Highlights and notes

A book's menu

Hold a book (or tap **More** on its page):

- **Open**, **Book details**, **Status…**, **Add to Favorites** (or **Remove from Favorites**), **Add to a collection…** and **Find details online** (below).
- **Write on it in Notes** (PDFs, with Notes installed): a notebook made from the PDF, to write on.
- **Open its folder**, **Move to…**, **Copy to…**, **Rename** and **Delete**.
- **Reset reading progress…** (on the page's **More**): the book starts from the beginning again, its highlights and notes kept. It asks first.

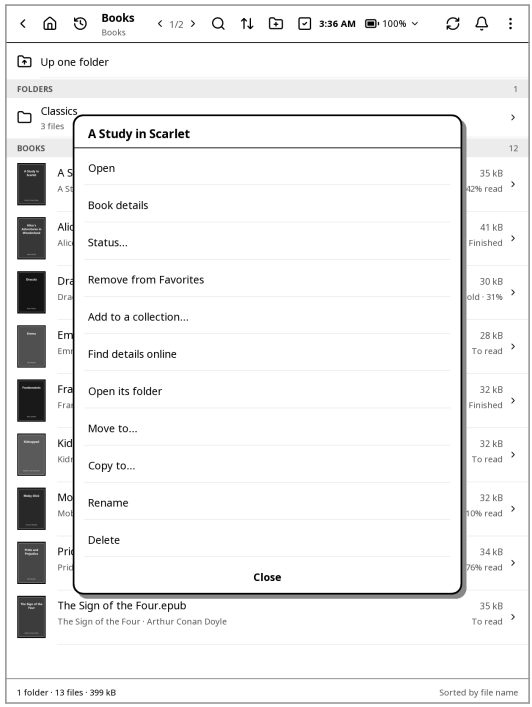

A book's menu

Find details online


Many books come with only a title and an author. **Find details online** (in a book's **More**, or hold the book) looks it up in **Open Library**, and in **Google Books** when Open Library has nothing. Both are free and need no account. It looks the book up by its ISBN when it has one, otherwise by its title and author. If Wi-Fi is off, KOReader asks to turn it on first.

- **Details found**: the cover found next to the book's own, then each detail found (series, published, publisher, print length, subjects, language, description) with what the book has under it. Details the book doesn't have are ticked; details it has something else for are not. Tap a row, or the cover, to tick or untick it.
- **Save** saves only what's ticked, with **Undo** at the bottom for a few seconds. **Cancel** (or Back) leaves the book as it was.


- **Other matches**: the other books found, each with its author, year, publisher and where it was found. Tap one to see its details. When a search finds several and none has the book's exact title, this list comes first.
- **Search again**: a box with the title and author to change, or type an ISBN.
- **Nothing found** offers **Search again**. **Couldn't connect** means neither site answered: check Wi-Fi and **Try again**.

The details are saved where KOReader keeps its own **Set custom metadata** (Book information), so KOReader's Book information, the Cover browser and the Library all show them. Published, publisher and print length are kept in the same place, but only the Library shows them. To go back to the book's own details later, use Book information's **Reset** in KOReader.


For several books: **Select** them, then **More > Find details online**. Each book is shown first, one at a time, with **Skip** (leave this one as it is) and **Stop**. At the end, **Undo** puts back every book saved.

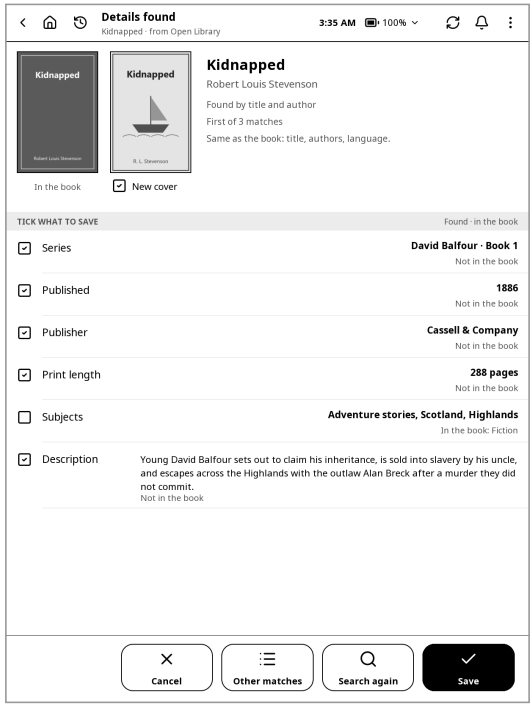

Find details online: what was found

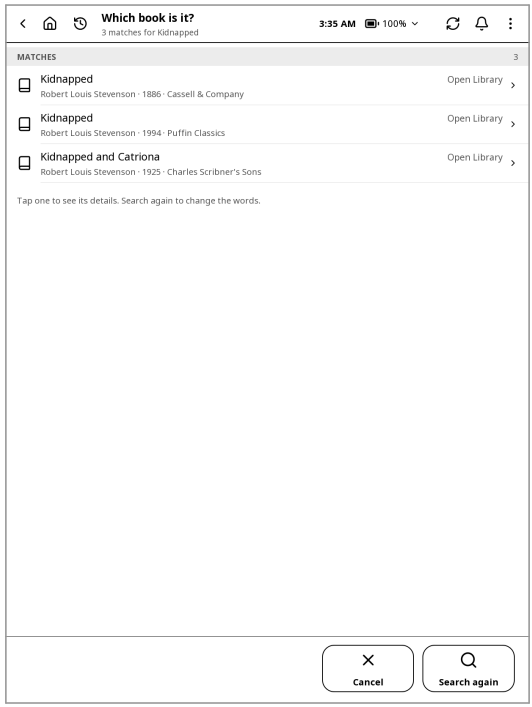

Other matches

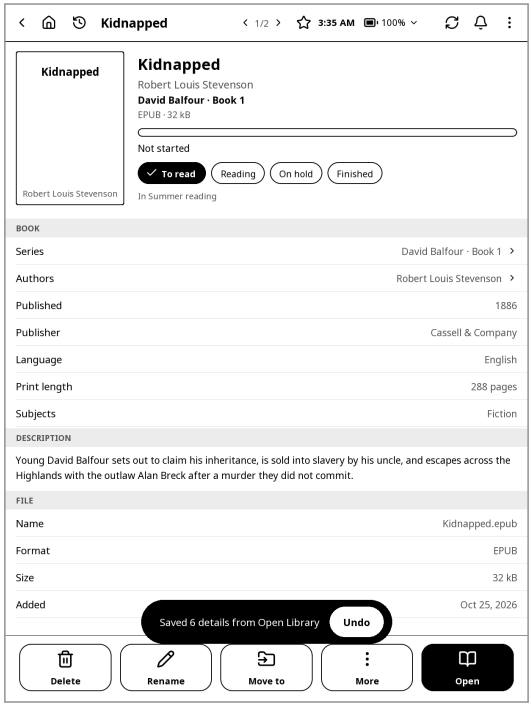


Saved, with Undo

Folders

Folders opens the Home folder: **Up one folder**, then its folders, its books (the file name, the title and author, the size and how far read) and other files. With **Lock home folder** on (KOReader's setting), it and the folder picker don't go above the Home folder.


- **Tap** a folder to open it; a book to open it in the reader; another file for its menu.
- **Hold** a folder for **Open**, **Add to favorite folders**, **Move to…**, **Copy to…**, **Rename**, **Set as Home folder** and **Delete**.
- In the title bar: **Search**, **sort**, **New folder** and **Select**.

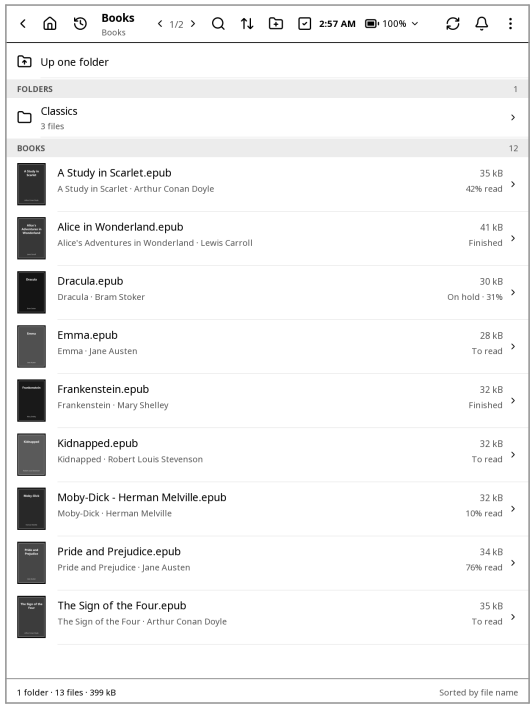


Folders

Select, Move to and Copy to

- **Select** (the tick in the title bar, or ⋮ **> Select** on any page of books) puts a box by each folder and book. Tick them, then a button at the bottom: **Delete**, **Status** (Reading, On hold, Finished, or Reset reading progress), **Collection** (into one, a new one, or out of one they're all in), **More** (**Copy to…** and **Find details online**) or **Move to**. The tick in the title bar selects all, or none. Back leaves Select.
- **Move to** and **Copy to** open a folder picker: open folders, then **Move here** (or **Copy here**). **New folder** makes one there first.
- A book's progress, highlights, history and collections go with it, as in KOReader's file browser. A copy keeps its own; a name that's taken gets " (2)".

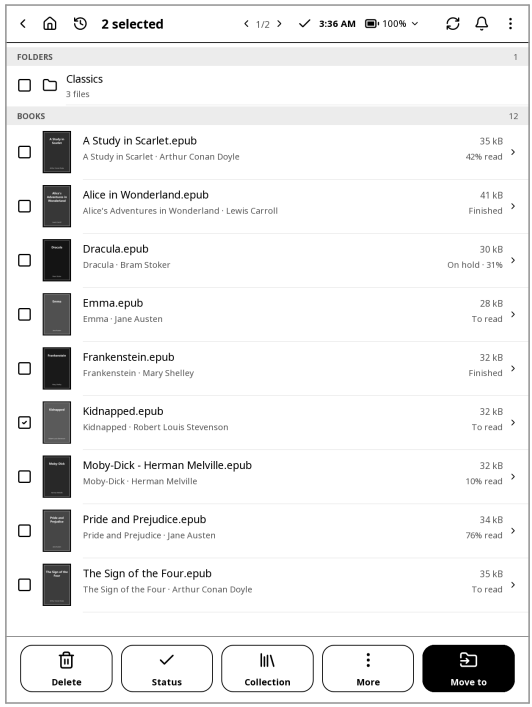
2 selected
1/2
3:36 AM
100%
FOLDERS
1
Classics
3 files
BOOKS
12
A Study in Scarlet.epub
A Study in Scarlet · Arthur Conan Doyle
35 kB
42% read
Alice in Wonderland.epub
Alice's Adventures in Wonderland · Lewis Carroll
41 kB
Finished
Dracula.epub
Dracula · Bram Stoker
30 kB
On hold · 31%
Emma.epub
Emma · Jane Austen
28 kB
To read
Frankenstein.epub
Frankenstein · Mary Shelley
32 kB
Finished
Kidnapped.epub
Kidnapped · Robert Louis Stevenson
32 kB
To read
Moby-Dick - Herman Melville.epub
Moby-Dick · Herman Melville
32 kB
10% read
Pride and Prejudice.epub
Pride and Prejudice · Jane Austen
34 kB
76% read
The Sign of the Four.epub
The Sign of the Four · Arthur Conan Doyle
35 kB
To read
Delete
Status
Collection
More
Move to


Select

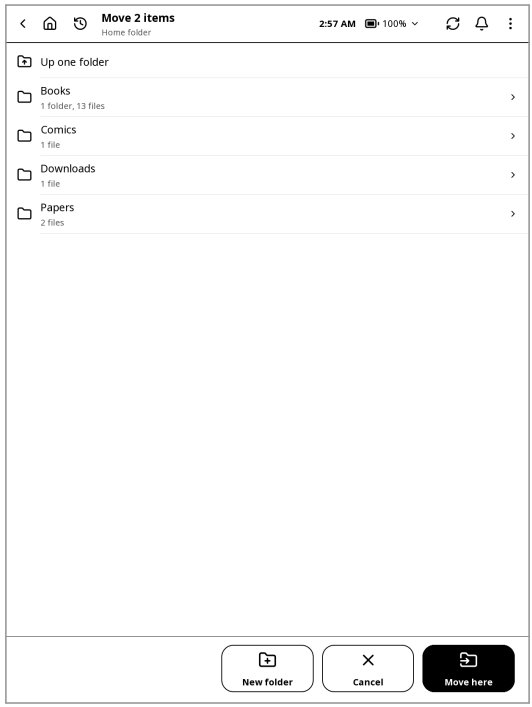

Move to

Delete and Undo


Delete is at once, with **Undo** at the bottom for a few seconds. Undo puts everything back where it was, with its progress and collections. Without the launcher, Delete asks first instead.

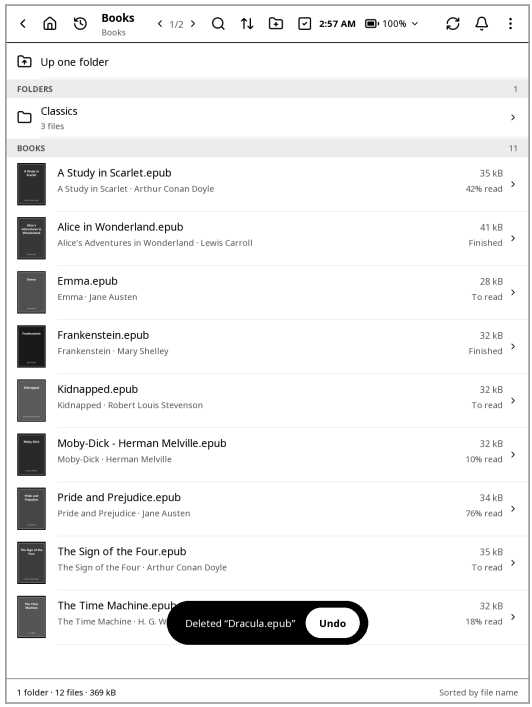

Deleted, with Undo

Rename

Rename opens a box with the name (and the pen, to write it). For a book, **FROM THE BOOK** offers names from its title and author, such as "Moby-Dick – Herman Melville.epub".

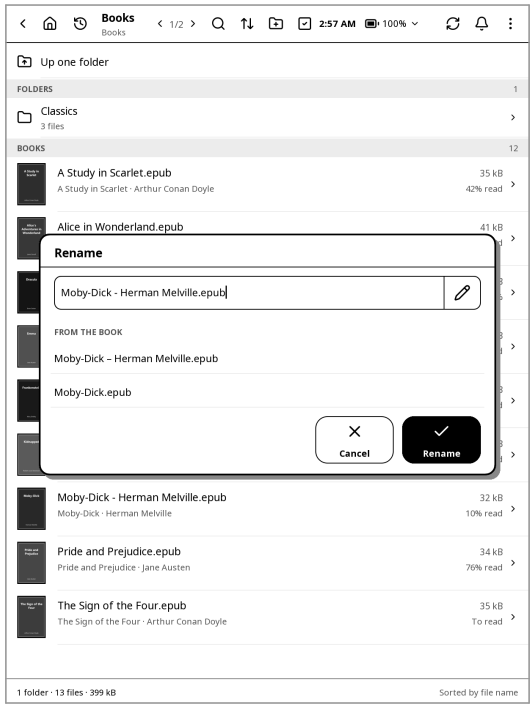

Rename


Servers and catalogs

Folders starts with **SERVERS AND CATALOGS** (Home has it too, under Folders): your FTP and WebDAV servers (a NAS, a computer) and **Catalogs**, the online OPDS catalogs. Standard Ebooks, Project Gutenberg, Feedbooks, ManyBooks, Internet Archive and OAPEN are there to start with. They're the same lists as KOReader's own Cloud storage and OPDS catalog.


- **Add a server**: Type (FTP or WebDAV), Name, Address, Port, User, Password and Starting folder. **Test** says what it found; **Save** keeps it. Hold a server for **Edit** and **Delete**.
- **Tap a book** on a server or in a catalog to download it to the download folder and open it. **On this Kindle** means it's already there. **Hold** it for **Download**, **Copy to…** (another folder), and in a catalog **Download as…** (another format) and **About this book**. **Select** on a server downloads several books at once.

- **Copy to…** and **Move to…** on the Kindle list the servers at the top of the Home folder, so books can go onto a server too (Move deletes them here, with Undo).
- In a catalog: its sections, **Load more** at the end of a long list, and the magnifier to search it. **+** in Catalogs adds one (a Calibre server, for example).
- **Library settings > Download folder**: where downloads go (Downloads in the Home folder to start with).
- On the web page: **Files > Servers and catalogs** has the same lists, with Test, and the download folder.


FTP is plain FTP (no FTPS or SFTP), and there's no SMB.

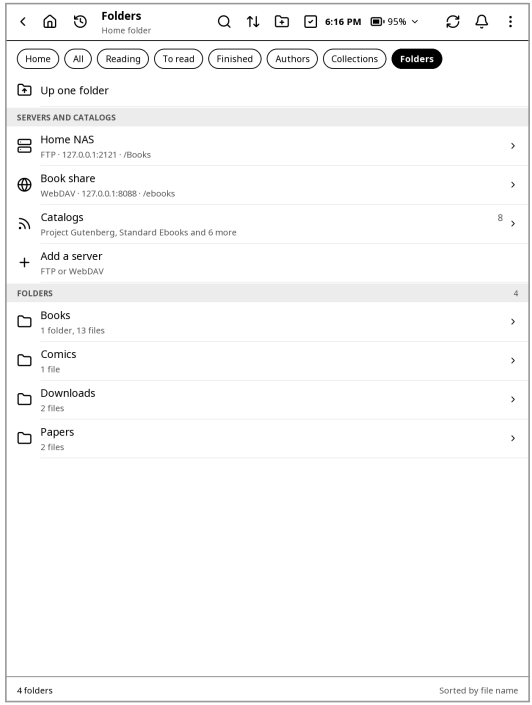


Servers and catalogs in Folders

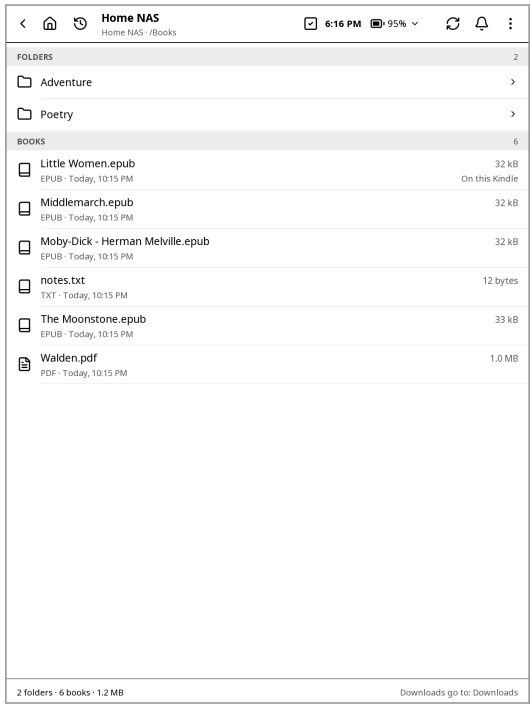

A server's folder

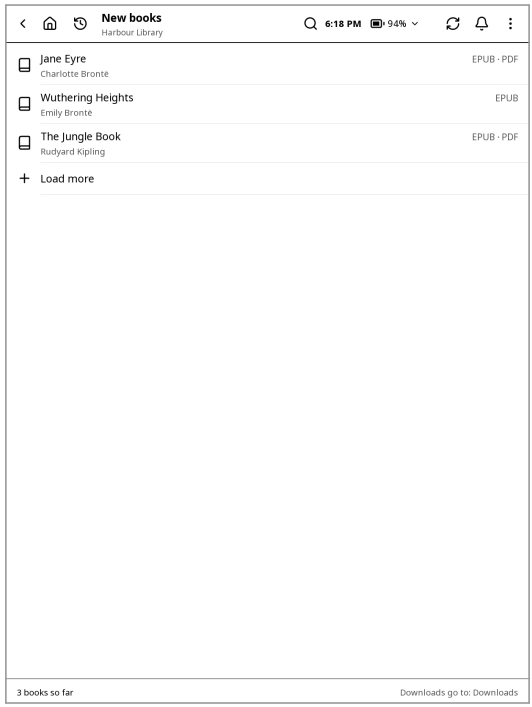
New books
Harbour Library
6:18 PM
94%
Jane Eyre
Charlotte Brontë
EPUB · PDF
Wuthering Heights
Emily Brontë
EPUB
The Jungle Book
Rudyard Kipling
EPUB · PDF
Load more
3 books so far
Downloads go to: Downloads

A catalog

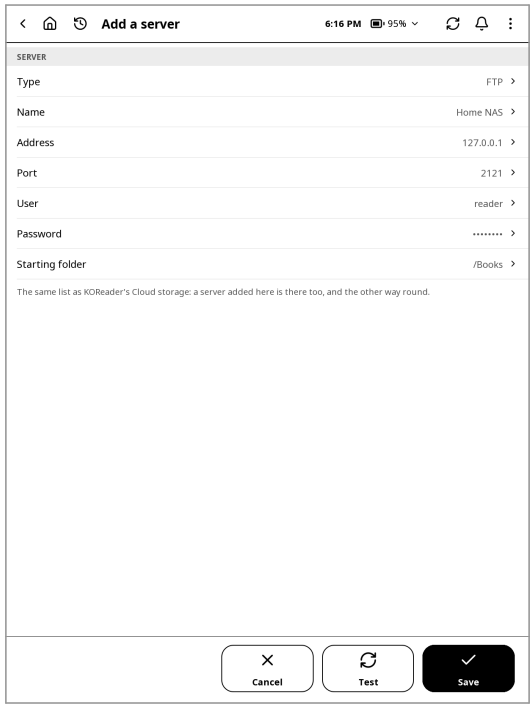


Add a server

Search

The magnifier searches titles, authors, series and file names (books), authors, collections, and other files and folders by name. Tap a result to open it.

The launcher's search finds books too, and the Library adds its authors, series and collections there.

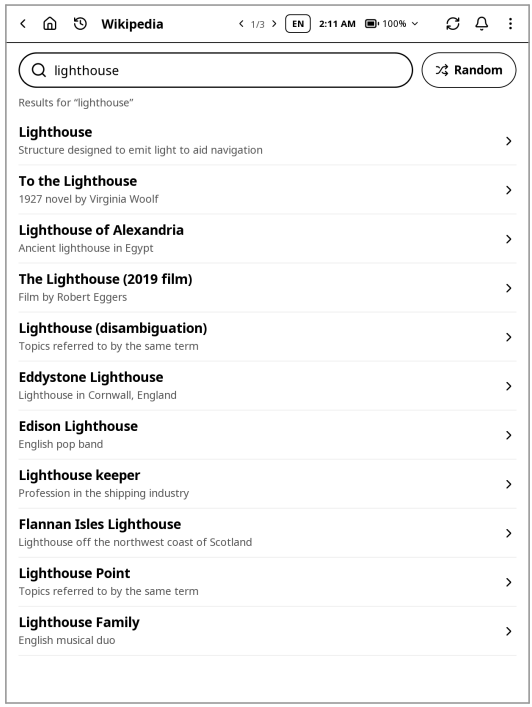


Search results

Settings

⋮ **> Settings**, or the launcher's **Settings > Library**:

- **Show books as**: **Covers** or **List**.
- **Open on**: **Home**, or **Where you left off**.
- **Show hidden files**: names starting with a dot, in Folders.
- **Home folder**: KOReader's Home folder. To change it, hold a folder in Folders, then **Set as Home folder**.
- **Browse books with**: **Library**, or **KOReader's file browser** (what Back from a book and the launcher's Library tile open).

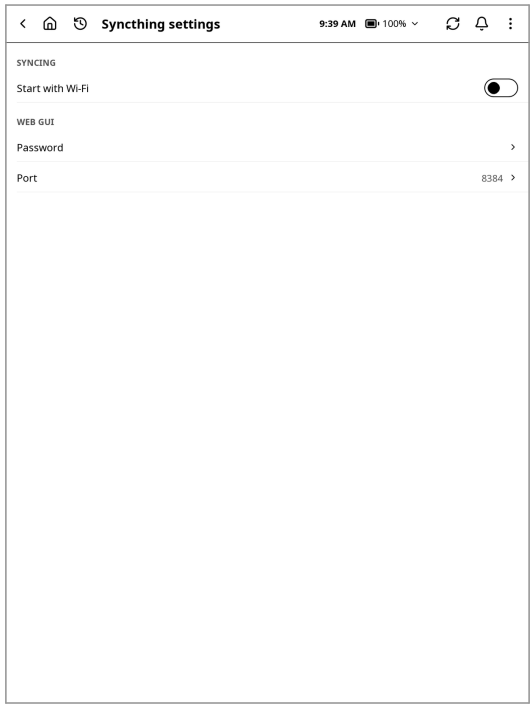

Library settings


Where it comes from

- Covers, titles, authors, series and descriptions: KOReader's **Cover browser** plugin, which reads each book once in the background (books it hasn't read yet show a plain cover with the title until then). Leave it on in KOReader's plugins.
- Status and progress: each book's KOReader settings. History: KOReader's history. Collections and favorite folders: KOReader's own.
- Reading time, first read, days and pace: KOReader's **Reading statistics** plugin.
- Publisher, date, subjects and ISBN: the EPUB itself, or what **Find details online** saved for it (from Open Library or Google Books).

AI

Some apps use an AI. Notes reads your handwriting (Convert page to text, search, Add to To Do, Suggest name), answers Ask, makes PDFs and helps you draw. Crosswords gives hints and checks your answers. The AI services are set up once, in the launcher's **Settings > AI**, and every app uses them.

Until a service is set up, the apps leave their AI out: no AI buttons or menu items show. Once any service is set up, they all appear.

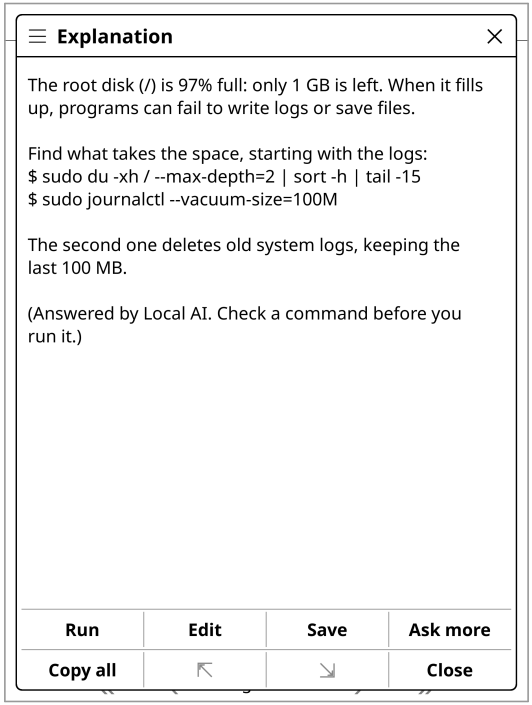

Settings > AI: which AI does each job, and the AI services

Opening the AI settings


- On the launcher: ⋮ **> Settings > AI**.
- From an app: Notes' **Settings > Integrations > AI settings...**, or Crosswords' settings. Back returns to the app.

- The first time, **Set up your Kindle** has an **AI** step that opens the same page.

The AI services

Every service is in one list, under **AI services**. Tap one to set it up. Each keeps its own key and model, so you can switch between them without setting them up again.

- **Claude**: tap **Claude API key** and enter a key from platform.claude.com. Claude Max and Team plans include monthly API credits (claude.ai > Settings > Billing). **Claude model** picks the model; Sonnet and Haiku cost less.
- **Gemini**: an API key from aistudio.google.com and a model. Gemini Flash and Flash-Lite can be used free.
- **OpenRouter**: a key from openrouter.ai and a model. **openrouter/free** uses whichever free model is available; other models are paid.
- **Groq**: a key from console.groq.com and a model.
- **Local AI**: your own AI, for example Gemma on Ollama or a model in LM Studio. It has two addresses, as Home Assistant does:
  - **Internal URL**: your AI on the home network: the computer running it and its port, for example http://192.168.1.50:11434 (it has to accept connections from the network). Used whenever the Kindle can reach it.
  - **External URL** (optional): an address that reaches your AI from anywhere, used when the Internal URL can't be reached. With **API key (optional)**, sent as a Bearer token.
  - **Model** lists your AI's models. **Thinking** makes some models slower but sometimes better.
- **Custom**: any service that works like OpenAI's chat API: its address, key and model.

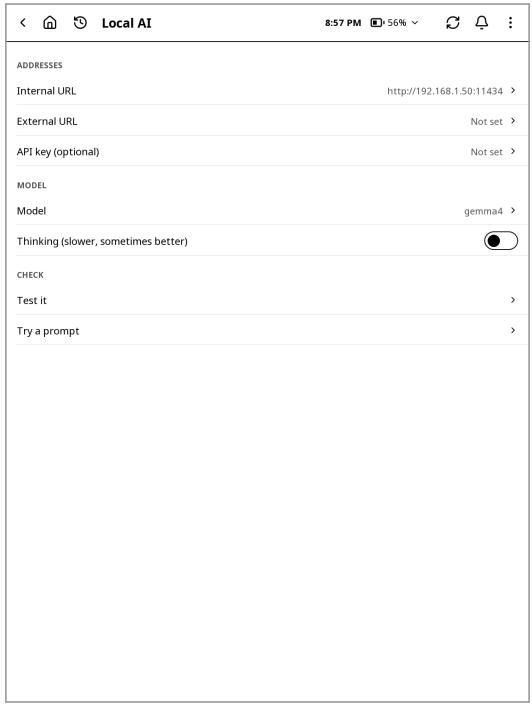

A service's page: Local AI's addresses, model, Test it and Try a prompt

The External URL

The External URL works with anything that answers OpenAI-style requests, with an optional Bearer key, for example:


- an AI gateway in front of your AI (such as Pangolin's, LiteLLM or Open WebUI), with its key;
- a reverse proxy (such as nginx, Caddy or Traefik) that checks a key;
- Tailscale or another VPN to your home network (no key needed).

A proxy that asks for a sign-in in a browser first (a login page, as with Pangolin's or Authelia's sign-in, or Cloudflare Access) won't work: the Kindle can't sign in there. The same goes for Home Assistant's External URL.

For every service, pick a model that reads pictures: Notes and Crosswords send pages as pictures.

Model (on Claude's, Gemini's, OpenRouter's, Groq's and Custom's pages) asks the service for the models it has now, with your key, so new ones show up without an update. The ones marked **recommended** are known to read pictures and come first; then the newest first (up to 40), and **Type a model…** for any other. A model the service doesn't say reads pictures is marked **may not read pictures**; OpenRouter's list leaves those out. Without Wi-Fi or a key, you get the recommended ones. On the web page's AI tab, **Load models** fills each service's model box the same way.

AI for this: hold a button that uses AI (Ask, a hint, Write a command…), or the pen in a text box, for a short menu: **Service** picks which service does that job, and **Model** loads that service's models (as above) and picks one for this job only, or **The service's** to go back to the one set on its page. For Claude, Groq and OpenRouter it also shows **Usage** (as on their pages). **AI settings…** opens the AI page.

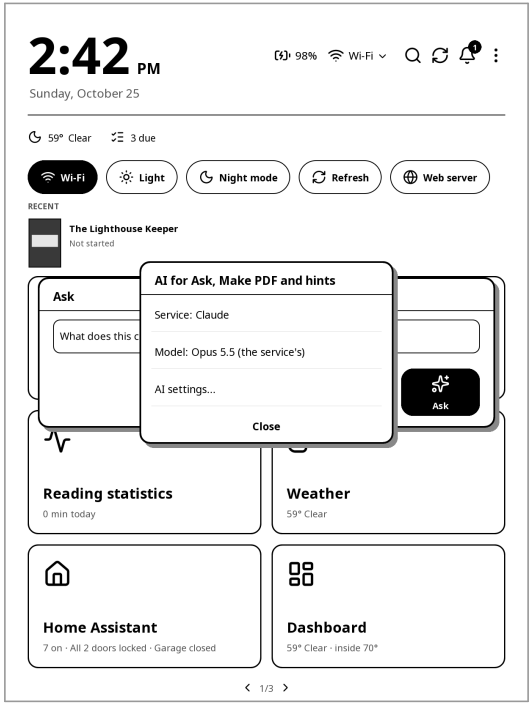

AI for this: a hold on Ask, the AI and model that do that job

Usage (on Claude's, Groq's and OpenRouter's pages, and on the web page's AI tab) shows what's left until the service's limits reset, for the services that say. Claude and Groq send their limits with each answer, so it shows the requests and tokens left as of the last answer (after Try a prompt or any AI feature), with when they reset. OpenRouter is asked when you tap it: what you've used today and this month, your key's limit and what's left of it, and your credit. Gemini and your local AI don't say, so they have no Usage.

No paid key? Get a free Gemini key at aistudio.google.com. On free tiers, the service may use what you send to improve its products, so keep private pages on Claude, a paid tier or your local AI.

Checking a service

- **Test it** (on a service's page) asks a short question, to check the address, key and model. For your local AI it says which address answered: the Internal URL or the External URL.
- **Try a prompt** (on a service's page) sends one real request: a small built-in picture of three handwritten lines, with the instructions Read handwriting uses. It shows the reply, how long it took and which model answered, so you can see whether a model reads pictures, how well and how fast, and compare services. On a paid service it costs a little, so it only runs when you tap it.
- **Test connection** (on the AI page) checks every service you've set up at once, for free: a key checked or the models listed, never a question. Your local AI's Internal URL and External URL are checked separately. It is also in **Settings > Launcher > Connection check**, as **AI**.

Which AI does each job


Each job can use a different service: reading handwriting, search and To Do; Ask, Make PDF and crossword hints; drawing. Tap a job to pick its service. For example, free Gemini for reading handwriting and Claude for Ask. Picking a service that isn't set up yet opens its page.

Notes' **Settings > Integrations > AI** puts all of Notes' jobs on one service. It shows **Mixed** when they use different ones.

What each feature sends (Advanced)

Advanced lists every AI feature of the apps installed: Notes' **Read handwriting**, **Ask**, **Make PDF** and **Drawing help**, and Crosswords' **Crossword hints** and **Crossword checks**. For each:

- **Instructions**: how the AI should do it, in your words, for example "keep my line breaks" or "write in British English". **Reset to default** puts back the original. The form of the answer a feature needs (Make PDF's document, a drawing's format, a check's list of answers) is added after your words and can't be changed, so editing can't break the feature.
- **How much is sent** (Notes' features): **This page**, **This page and the one before** (for context), or for Ask and Make PDF **The whole notebook (up to 10 pages)**.
- **Preview what's sent**: the exact instructions, and **Pictures** for the pages that would go with them (from the notebook you opened last). This is what leaves the Kindle.

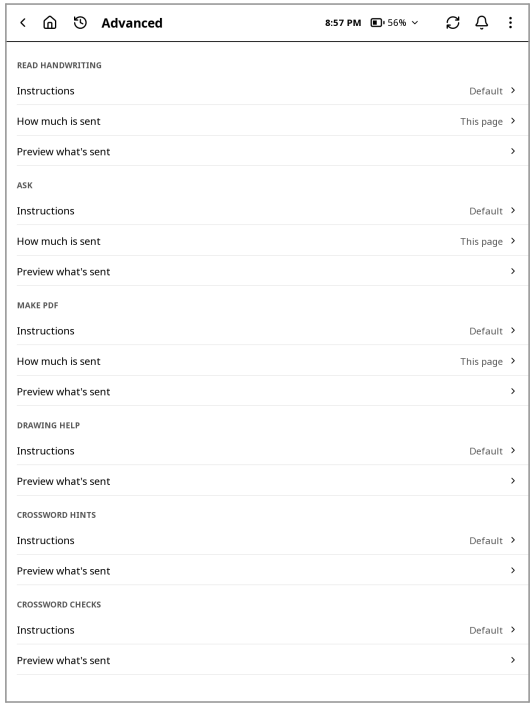

Advanced: each feature's instructions, how much is sent and a preview

Handwriting recognition

Where the apps ask you to type, you can write instead: tap the pen at the end of the box (**Write it** in To Do's new task), write in the strip at the bottom of the screen with the pen, and tap **Done**. The AI that reads handwriting (Settings > AI > Which AI does each job) turns it into text and puts it in the box, where you can still change it. **Clear** starts again; **Cancel** leaves the box as it was. The box's own buttons and text still work while the strip is up; closing the box closes the strip too. Drag the bar at the top of the strip to move it up or down; it stays there next time. Holding **Done** (with a finger) picks the AI and model that read your writing.

It's there when an AI service is set up, in:

- Notes: the new notebook's name, Rename, the folder names, Search notebooks, a template's name, a new OneNote notebook or section, and Ask

AI and Draw with AI.

- To Do: a new task (a date or time written with it becomes its due date or reminder), renaming a task, a list or a step, a new step or list, and Search tasks.
- The launcher: Search, a group's or shortcut's name, your town for the weather, and a font family on Get fonts.
- Home Assistant: Search devices.
- SSH: the command box (Run a command, editing a command), the names of hosts, saved commands and keys, Write a command with AI, Ask more, and the live session's Ask AI.

Boxes that need an exact value (addresses, keys, tokens, the App ID, codes) keep the keyboard only.

What it's told to do is **Handwriting input** in Advanced.

On the web page


The web page's **AI** tab has the same: which AI does each job, each service's key, model or addresses, **Try a prompt** on each service set up, **Test connection**, and an **Advanced** card with each feature's instructions, how much is sent and the preview with its pictures. Keys typed there are stored only on the Kindle; the page never shows them again.

Without the launcher

The AI settings are the launcher's. Without the launcher, the apps have no AI.

Home Assistant

Control your home from the Kindle: lights, switches, fans, the thermostat, locks, the garage, vacuums, speakers and TVs, cameras, scenes and scripts, room by room. A dashboard turns the Kindle into a nightstand display.

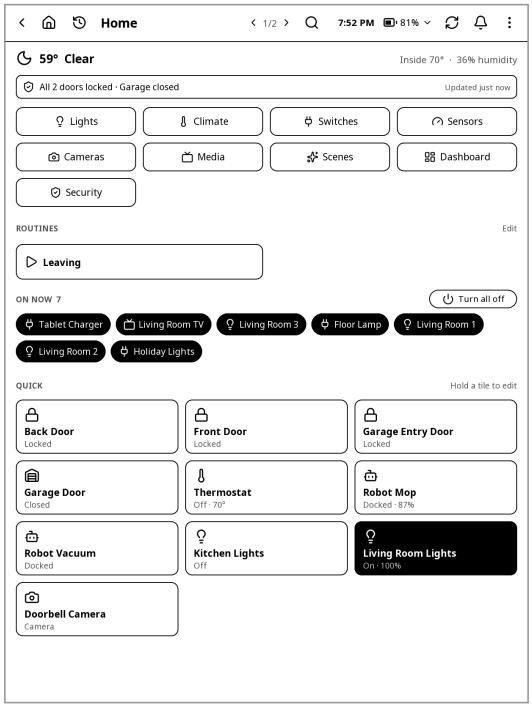

Home

Opening it and signing in

Open it from the launcher's **Home Assistant** or **Dashboard** tile, **Tools > Home Assistant**, or a gesture (**General > Home Assistant** or **Home Assistant dashboard**). The **Dashboard** tile shows once you're signed in.

Any device can also be one of the launcher's quick buttons, under the clock and in the control center in every app: a light with – and +, the thermostat, a speaker's controls, a sensor's reading (see the launcher chapter, Quick buttons).

Without Home Assistant, nothing else is affected: the other apps don't need it, and the launcher's weather can come from Open-Meteo instead (see the launcher chapter, Weather).

The first time, **Connect to Home Assistant** asks how to sign in:

- **Sign in with username and password**, as in the phone app, one step at a time (**Next**, and **Back** to change an earlier step):
  1. **Internal URL**: the address at home, such as `http://homeassistant.local:8123`. Turn on **External URL** under it if you also have an address that works from anywhere; it becomes its own step.
  2. Your **User name**.
  3. Your **Password**, then **Sign in**.
  4. If your account has two-step sign-in, a **Two-factor code** box asks for the code from your authenticator app.
- **Use a long-lived token**: make one in Home Assistant (your profile > Security), then **Load from file** (copy it to the Kindle first) or **Enter manually**.

The internal address is tried first, then the external one; the one that answered is tried first next time. "Connected to Home Assistant" says it worked.

> Home Assistant keeps working without Wi-Fi: the last states are kept, so the screens open at once. It updates every minute while it's open and the Kindle is online. It never turns Wi-Fi on by itself; tapping refresh or a device does (KOReader asks).

The title bar

The bar every app has (see "Finding your way around" in Getting started). In Home Assistant:

- **‹** on the screen Home Assistant opened on goes back to the launcher.
- The screen's own buttons, such as **search** on Home and **refresh** on Cameras.
- **The time and battery** (the control center).
- **Refresh**: the states again from Home Assistant, and the screen flashed clean.

- **The bell**: Home Assistant's notifications are in the shared list; tapping one opens Home Assistant's own **Notifications** screen, where **Dismiss** removes it from Home Assistant (and from the list).
- ⋮: **Open on the web page** (a QR code for the web page's Home Assistant tab), **Add to launcher** (puts this screen on the launcher; on screens that can be a tile, not on Search, Settings or Routines), **Home Assistant notifications**, **Recent apps**, **Light**, **Night mode**, **Refresh screen** and **Settings**. On Cameras and Security it also has **Reorder or hide cameras**.

Home

Home is made of sections. Settings > **Home sections** reorders or hides them.

Weather and status bar

- **The weather**: the temperature and conditions. Tap it for the Dashboard.
- **Inside**: the temperature and humidity inside.
- **The status bar** turns dark with a warning when something needs attention:
  - an unlocked lock
  - the garage open, and for how long
  - a door or window open, and for how long
  - a leak, smoke, gas or carbon monoxide
  - a device problem
  - a battery under 20%
- Otherwise it is light with a shield: "All 3 doors locked · Garage closed", or "All clear".
- Its right end says when Home Assistant last answered: "Updated 2 min ago", "Updating…" or "Update failed".

Shortcuts

A row of buttons for whole kinds of things. **Lights**, **Climate**, **Switches**, **Sensors**, **Cameras**, **Media**, **Scenes**, **Dashboard** and **Security** show to start with. **Doors**, **Vacuums**, **Weather**, **Activity**, **Batteries** and **3D printer** can be added in Settings > **Shortcuts**. Hold a shortcut for **Open** or **Add to launcher**.


Routines

Your routines as play buttons (see Routines below). Tap one to run it, hold it to change it. **Edit** opens the Routines screen.

On now

Everything that is on: lights, switches, fans, players. Tap one to turn it off, hold it for its controls. **Turn all off** turns them all off.

Something you turn off here stays in On now for a few minutes, drawn as off (white), so a tap turns it straight back on if it was a mistake. Settings > **Keep turned off in On now** sets how long (**Off**, 1, 3, 5 or 10 minutes; 3 to start with).

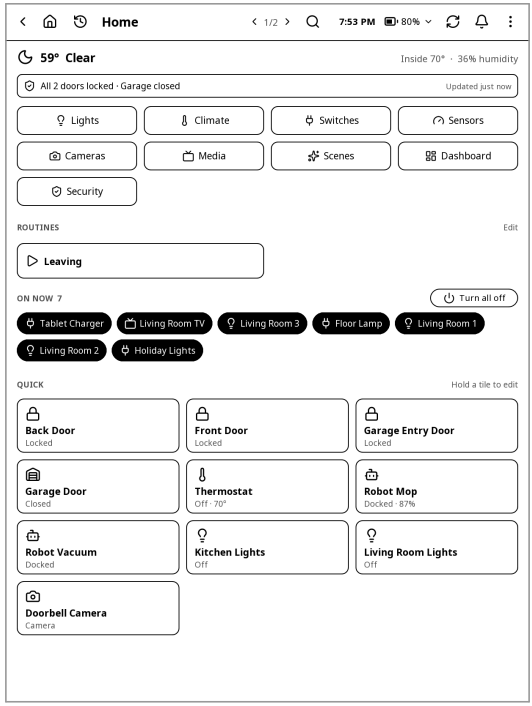

On now, with a light just turned off

Quick

Your Quick tiles: the things you use most. To start with, the locks, covers, thermostats, vacuums and each room's lights. To add one, hold any device and choose **Quick & dashboard > Add to Quick**.

Rooms

Each room with a summary such as "2 on · closed · locked · 70°". Tap a room to open it. Rooms follow Home Assistant's floors unless you order them yourself (Settings > **Rooms**). Devices without a room are under **Everything Else**.

Tiles: tap and hold

Tap a tile for the obvious thing:

- **Lights, switches, fans**: on or off.
- **Locks**: lock or unlock.
- **Covers and the garage**: open or close.
- **Scenes**: turn on. **Scripts**: run.
- **Buttons** (a button device): press it. One named like cancel, stop, reboot, shutdown or restart asks first.
- **Cameras**: take a new picture.
- **Thermostats, players, vacuums and sensors**: open their controls.

The new state shows at once; Home Assistant's real one follows a moment later.

Some taps ask first: **Unlock** a lock, **Open** or **Close** the garage, **Run** a script. Each can be turned off in Settings > **CONFIRM**.

Hold any tile for its controls, which slide up from the bottom:

- **Lights**: brightness in steps; colors (**Red**, **Orange**, **Yellow**, **Green**, **Cyan**, **Blue**, **Purple**, **Pink**, **Warm white**, **Cool white**) or **Warm**, **Neutral** and **Cool** white.
- **Fans**: **SPEED**, **PRESET** and **Oscillate**.
- **Thermostats**: **MODE** (Heat, Cool, Heat/Cool, Off…), the set temperature with big − and + (both **HEAT TO** and **COOL TO** in Heat/Cool), and **FAN**.
- **Covers**: **Open**, **Stop**, **Close** and **POSITION**.
- **Locks**: one big **Lock** or **Unlock**.
- **Vacuums**: **Start**, **Pause** and **Return to dock**.
- **Players**: previous, play/pause, next, mute, volume and **Source**, with what's playing.


- **On and off**: lights, switches, fans and players have an on/off switch at the top right. A TV that Home Assistant can't wake says so: it can turn it on only once Wake-on-LAN or a turn-on automation is set up for it.
- **Cameras**: **Open full screen**, and **PLACEHOLDER IMAGE**: the drawing shown until the picture arrives (**Automatic**, **Doorway**, **Garage**, **Room**, **3D printer**).
- **Sensors with a number**: a bar graph of the **LAST 24 HOURS** with its highest and lowest.

At the bottom of every sheet:

- **Quick & dashboard**: add it to or remove it from Home's Quick tiles, or the dashboard (scenes and scripts become the dashboard's scene buttons).
- **Hide**: takes it off the screens. Settings > **Devices** brings it back.

Rooms

A room's screen shows its temperature and humidity, how much is on (with **All off**), then its devices by kind: **LIGHTS**, **SWITCHES**, **CLIMATE**, **DOORS**, **MEDIA**, **CLEANING**, **CAMERAS**, **SCENES & SCRIPTS** and **SENSORS**. Cameras show their picture: tap to refresh, hold for full screen. The grip icon at the top reorders or hides the room's devices.

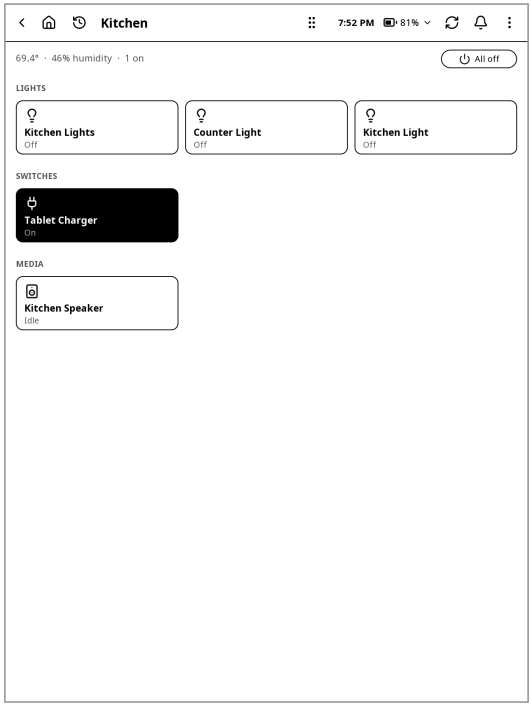


A room

The other screens

- **Lights**, **Switches**, **Sensors**, **Doors**, **Vacuums**: everything of that kind, by room. Lights and Switches have **Turn all off**.
- **Climate**: a card for each thermostat with the temperature now, what it is doing, and – and + for the set point; then **FANS** and each room's temperature and humidity.
- **Cameras**: every camera's picture. Tap one for a new picture, hold for full screen. Refresh at the top updates them all.
- **Media**: each playing speaker or TV with its controls, then the others. With Plex set up in Home Assistant, **PLEX** comes first: who's watching what and where, **Scan clients**, and **Scan a library** (its library sensors when they're turned on in Home Assistant; otherwise type the name once and it's remembered).


- **Scenes & scripts**: each with **Run**.
- **Security**: the status bar, **LOCKS & DOORS** (with **Lock all** when something is unlocked), the security cameras, and door, window, motion, smoke and leak sensors.
- **Weather**: now (temperature, humidity, wind, inside), **NEXT HOURS** with the chance of rain, and **NEXT DAYS** with highs and lows.
- **Activity**: what changed, newest first.
- **Batteries**: every battery, lowest first, bold under 20%.
- **3D printer**: its camera, the print's progress, file, time left and layer; **TEMPERATURES** (nozzle and bed); **CONTROLS**, named as the printer names them (such as **Pause**, **Resume**, **Cancel** or **Stop**); and **DETAILS**.
- **Search** (the magnifier on Home): find a device by name, room or id.
- **Notifications** (the bell): Home Assistant's notifications, each with **Dismiss**, and **Dismiss all**.

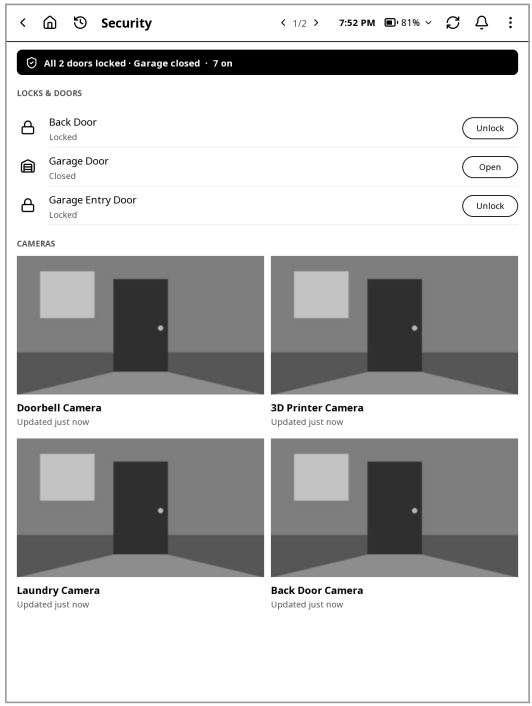

Security

Cameras and Send to Notes

A camera's full-screen view shows its newest picture. Tap it, or refresh, for a new one. While a picture loads, a drawing stands in (a doorway, a garage, a room or a 3D printer). Pictures are dithered for e-ink and never stretched.

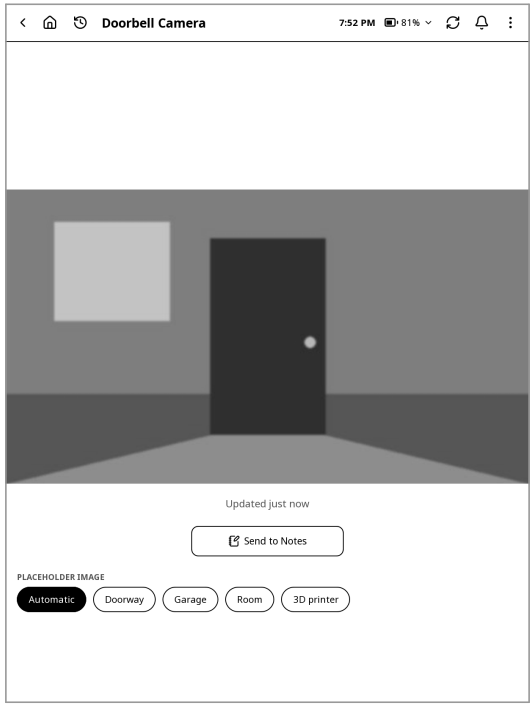

A camera, with Send to Notes


Send to Notes (when Notes is installed) puts the picture as a new page in a notebook:

1. Tap **Send to Notes** under the picture.
2. Pick the notebook.
3. Notes adds a page with the picture and its camera and time above it, such as "Front door · 3:42 PM". A notice says where it went.

The dashboard

For the nightstand or a wall: open it with the **Dashboard** tile, a shortcut, a gesture or as the start screen. **Settings > DASHBOARD > Style** picks one of five looks:

- **Clock and info**: a big clock and date, the weather with tomorrow's, and the sections below.
- **Security**: up to four cameras, the status bar, and the locks and doors with their buttons.
- **Info cards**: big numbers for the weather, inside, doors, locks, the garage, lights on, vacuums and the lowest battery.
- **Camera**: one big picture.
- **Clock only**: a huge clock, the date, the weather and the status bar.

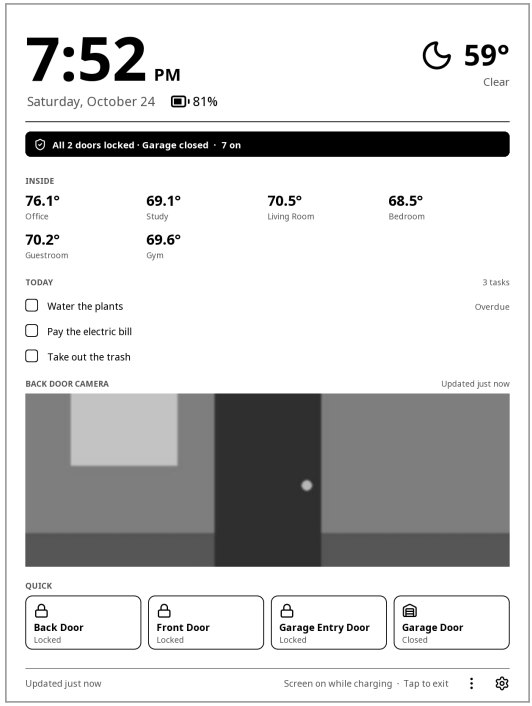

The dashboard (Clock and info)

Clock and info sections

Settings > DASHBOARD > Sections orders or hides them:

- **Status bar**: what needs attention, and how many things are on.
- **Room temperatures**.
- **Next up**: the next calendar event, or a To Do reminder in the next day and a half.
- **Now playing**: what a speaker or TV is playing, with buttons.
- **Today's tasks**: To Do's tasks due today. Tick the box to complete one; tap its text to open it.
- **Scenes and routines**: buttons for your routines and chosen scenes.
- **24-hour graph**: a sensor's last day (Settings > **Graph** picks which).
- **Camera**: fills the rest of the screen. Tap to refresh, hold for full screen.
- **Quick tiles**: the dashboard's own Quick tiles.

Today's tasks, Scenes and routines, and the 24-hour graph are off to start with. A section that doesn't fit is left out.

Using the dashboard

- **Tap the clock** to leave the dashboard. **Tap the weather** for the Weather screen.
- The bottom line shows when it last updated ("Updated 2 min ago"), whether the screen stays on ("Screen on while charging", "Screen always on" or "Normal sleep"), and **Tap to exit**. ⋮ and the gear are at the bottom right.
- The Kindle's battery shows next to the date in the **Clock and info**, **Info cards** and **Clock** styles.
- **Update interval**: how often it updates (every 1 to 30 minutes; 5 to start with). Pictures are taken again at each update, rotating through the cameras unless **Camera** picks one.
- **Keep awake**: **While charging** (to start with), **Always** or **Never**: whether the Kindle stays awake while the dashboard shows.
- **Auto brightness**: on a Kindle with a light sensor, the front light follows the room's light while the dashboard shows.

- **Doorbell alerts**: when the doorbell rings or sees motion (**Ring and motion**, **Ring only** or **Off**), its camera fills the screen for a minute, updating every few seconds, then the dashboard comes back.

Routines

A routine runs several things in one tap, such as "Leaving": lights off, lock the door, close the garage. Routines are kept on the Kindle.

1. Settings > **Routines**, then **New routine**, and give it a name.
2. **Add step**: pick a device, then what it should do (**Turn on**, **Turn off**, **Lock**, **Unlock**, **Open**, **Close**, **Run**, **Start**, **Return to dock**, **Pause**).
3. Add as many steps as you like. Tap a step to remove it.
4. **Run now** tries it. **Rename** and **Delete** are there too (**Undo** for a few seconds after a delete).

Routines show on Home (tap to run, hold to edit) and in the dashboard's Scenes section. A routine that unlocks a door, opens the garage or runs a script asks first, like those taps do. When it finishes, a notice says it's done, or how many steps didn't work.


Alerts

Wake alerts

When the Kindle wakes, Home Assistant checks the house. If a lock is unlocked, the garage is open, or a door or window is open, a box lists them with a **Security** button. Settings > **Wake alerts** turns this off.

Sleep screen alerts

Chosen things are shown at the bottom of any sleep screen when they need attention.

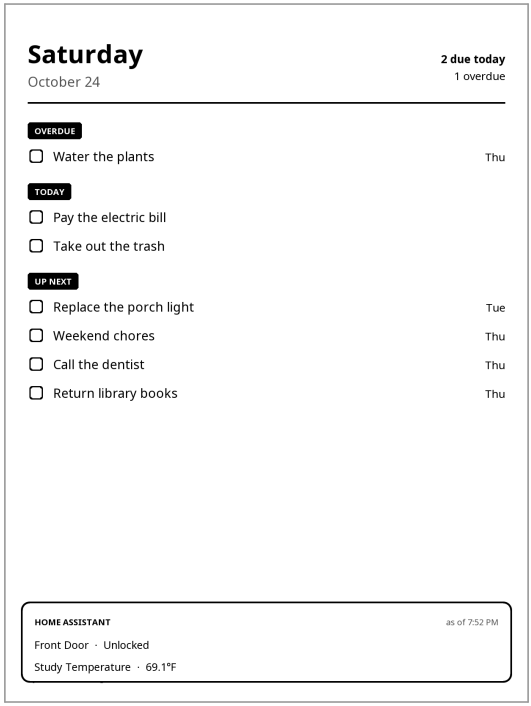

Sleep screen alerts

1. Settings > **Sleep screen alerts**.
2. Tap the eye next to each one to show: locks, doors and covers, sensors such as leaks and motion, and sensors with a number such as a temperature. The arrows order them.

When the Kindle sleeps, a box titled **HOME ASSISTANT** lists:

- a lock that is unlocked
- a door or cover that is open
- a sensor that is on (a leak, motion)
- each number sensor with its value, always

It shows "as of" the time of the last update. Nothing is shown when all is well.


The Home Assistant sleep screen

With **Sleep screen** set to **Home Assistant**, the sleeping Kindle shows:

- the date and when it went to sleep
- the weather
- the status bar
- notifications
- the inside temperatures
- your Quick tiles' states

Settings

⋮ **> Settings** on any screen, or **Settings > Home Assistant** on the launcher. The settings are on full pages; swipe or tap the arrows next to the page number. (The light, night mode and a screen refresh are in ⋮.)

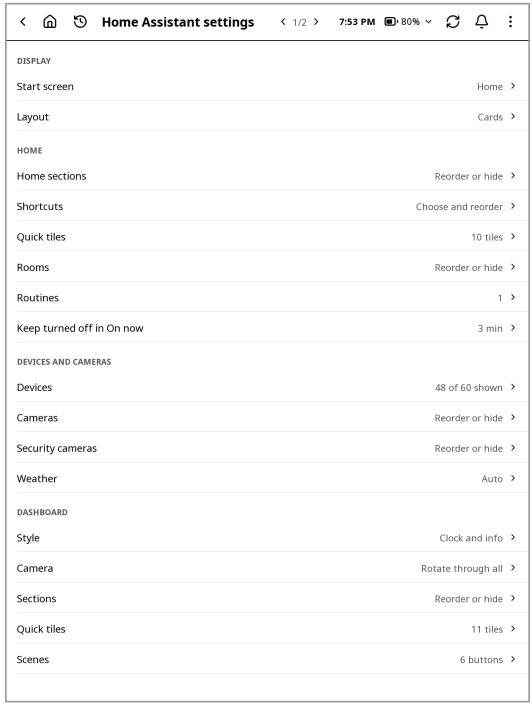

Home Assistant settings

Display

- **Start screen**: **Home** or **Dashboard**.
- **Layout**: **Cards**, **Big tiles**, **List** (a switch or button on each row, such as **Unlock** or **Start**) or **Minimal**.

Home

- **Home sections**, **Shortcuts**, **Quick tiles** and **Rooms**: each opens a list to order (see below).
- **Routines**.
- **Keep turned off in On now** (see On now).

Devices and cameras

- **Devices**: which devices show at all. Tap a device to show or hide it; **All**, **Shown** and **Hidden** filter the list, and search finds one. Settings that are switches on a device (its LED, motion detection, firmware updates) are hidden to start with.
- **Cameras** and **Security cameras**: lists to order (see below).
- **Weather**: **Auto**, or which weather service to use when Home Assistant has more than one. It is used by Home, the dashboard, the Weather screen and the launcher.

Dashboard

- **Style**, **Camera** (**Rotate through all**, **None** or one camera), **Sections**, **Quick tiles**, **Scenes**, **Graph**, **Auto brightness**, **Doorbell alerts**, **Update interval** and **Keep awake**, as described under The dashboard.

Sleep screen

- **Sleep screen**: opens the launcher's settings at **Sleep**, where the sleep screen is chosen for every app.
- **Sleep screen alerts**: a list to order (see below).
- **Wake alerts**.

Confirm

- **Unlock doors**, **Open or close garage** and **Run scripts**: whether these ask first.

Connection

- **Update interval**: every 1, 2, 5 or 10 minutes, or **Manual only**.
- **Internal URL** and **External URL**.
- **Test connection**: tries the **Internal URL** and the **External URL** separately, so you can see which one works: **Works** and how long it took, or what went wrong (no answer, the name couldn't be looked up, a proxy's sign-in page instead of Home Assistant, a sign-in that ran out), with the exact error under it.
- **Account**: signed in, using a token, or **Sign in**. **Sign out** also removes the Kindle's sign-in from Home Assistant.
- **Long-lived token**.

Ordering lists

The lists in Settings (Home sections, Shortcuts, Rooms, Cameras and the others) all work the same way:

1. Tap a row to select it. Four arrows appear: to the top, up, down, to the bottom.
2. **The eye** shows or hides it. Lists you add to (Quick tiles, the dashboard's tiles and scenes) have ✕ to remove one instead.
3. **Undo** at the top puts back the last move, one at a time.

The web page's Home Assistant tab (**Order**) draws Home as it looks, its sections, shortcuts, Quick tiles and rooms, to drag into order or to Hidden.

Tips


- Your KOReader gestures for the light, warmth, refresh, night mode, Wi-Fi and a screenshot, and the other apps' actions (Launcher, Notes, To Do, Web server, Wikipedia, Syncthing, SSH), work on Home Assistant's screens too.
- Swipe in from the left edge to go back (a sheet closes first). Other swipes turn pages. For a dark screen, use KOReader's **Night mode** (⋮ or the control

center).

- A diagonal swipe flashes the screen clean.
- Hidden a device by mistake? Settings > **Devices > Hidden**, and tap it.
- On its side, every screen uses the extra room: more tiles across, and the dashboard's camera on the right.

To Do

Your Microsoft To Do lists on the Kindle: Today, an Agenda, Starred, a calendar and every list. Everything works without Wi-Fi; your changes are sent to To Do the next time it syncs. It also works with no Microsoft account at all, with lists kept on this Kindle (see **Lists on this Kindle** below).

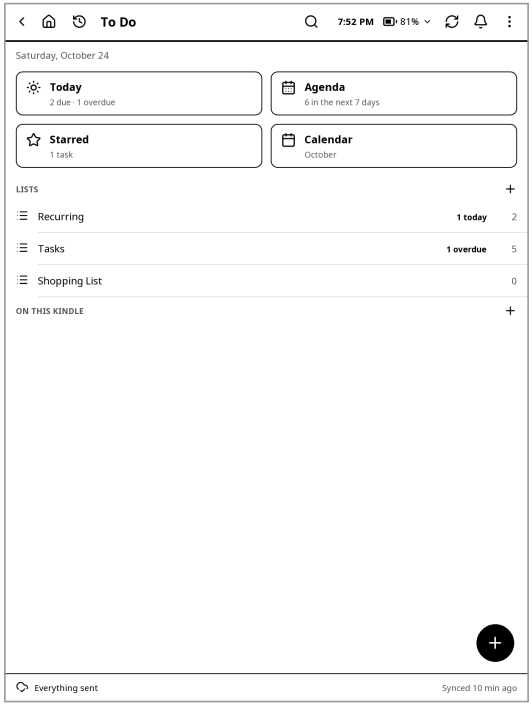

To Do's Home


Lists on this Kindle

Lists that stay on the Kindle and are never sent to Microsoft. They do everything To Do's lists do: due dates, reminders, repeats, stars, steps, notes, the sleep screen, the launcher's tile and At a glance.

- **Without signing in**, To Do opens straight to Home with a list called **Tasks** under **ON THIS KINDLE**. **Sign in to Microsoft To Do** is at the bottom

whenever you want it.

- **Signed in**, your To Do lists are under **LISTS** and the Kindle's under **ON THIS KINDLE**. Each heading's **+** makes a new list there.
- **A repeating task** makes its next one when you tick it off, as To Do does.
- **Ticked-off tasks** show until the end of the day, then leave the list.
- **Deleting** a task or list offers **Undo**; deleted ones also wait under **Deleted** (the last 30) to put back.
- **To Microsoft To Do**: **Move to list** on a task's page moves it into one of your To Do lists (steps, star, dates and repeat go with it). Hold a list > **Move to Microsoft To Do** moves the whole list, after asking.
- **Signing out** keeps the lists on this Kindle.
- **Turn them off** in Settings > **Lists on this Kindle**. They're hidden, not deleted: turn it back on and they're there.

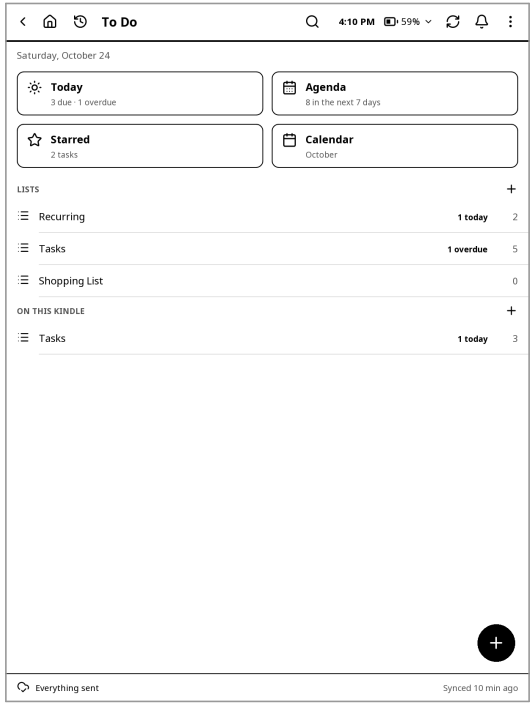

To Do lists and lists on this Kindle

Opening it and signing in

Open it from the launcher's **To Do** tile, **Tools > To Do**, or a gesture: **To Do**, **To Do: Today**, **New To Do task** (adds a task from anywhere) or **To Do: sync**.

The first time:

1. Tap **Sign in to Microsoft To Do** (with the launcher, this is the shared Microsoft account's sign-in, the same as **Settings > Microsoft**).
2. The Kindle shows a web address and a short code. On your phone or computer, open the address (or scan **QR code**) and enter the code, then sign in to Microsoft there. Your password never goes through the Kindle.
3. "Signed in as" and your account, and the first sync starts.

The code box closes only with **Cancel**. If Wi-Fi drops while you sign in, it stops with "Lost the connection to Microsoft. Check Wi-Fi and try signing in again."; a code left too long says "The code ran out. Try signing in again."

> To Do needs an **App ID** from Microsoft before you sign in: a free app you register once (Notes' OneNote can share it). Setting up the services has the steps; on the Kindle, **Set up your Kindle > To Do > How to get an App ID** has them in short, with a QR code of the guide's page for your phone. Set it in the launcher's **Settings > Microsoft** (one App ID for To Do and OneNote), on the web page, or in **Set up your Kindle**; if it's missing, the sign-in says so.

Home

- **The tiles**: **Today** (due today and overdue), **Agenda** (the next 7 days), **Starred**, **Calendar** (this month), and **Search** (off to start with; turn it on in Settings). Tap one to open it; hold one for **Open** or **Add to launcher**.
- **LISTS**: every list with its open tasks, and in bold how many are overdue or due today. The pinned list comes first. **+** next to LISTS makes a new list. **ON THIS KINDLE** below has the lists kept on the Kindle only, with its own **+**.
- **The round +** at the bottom right adds a task to your default list.
- **The bar at the bottom** says how many changes wait to be sent and when it last synced, such as "Everything sent · Synced 5 min ago" ("On this Kindle only" when not signed in). Tap it for the Sync screen.

- At the top, the bar every app has (see "Finding your way around" in Getting started), with **search**, **refresh** (syncs now) and ⋮ (**Sync now**, **Open on the web page**, **Recent apps**, Light, Night mode, Refresh screen and **Settings**). **Open on the web page** starts the web server and shows a QR code for the web page's To Do tab.
- Reminders and sync problems also go to **the bell** (Notifications); tap a reminder there for its pop-up again, or hold it to open its task. A reminder leaves the list once its task is done, deleted or moved to another day or time; a sync problem stays until a sync goes through.

Holding a list


Hold a list on Home for:

- **Open** and **New task**
- **Pin to top**
- **Add to launcher**
- **Set as default list**
- **Hide list**: hidden lists stay out of Today, the Agenda, the calendar and the sleep screen
- **Rename** and **Delete list**

A deleted list goes at once, with **Undo** for a few seconds, and waits under **Deleted lists** on Home until the next sync, so **Put back** can still undo it.

Lists and tasks

A list shows its tasks grouped **OVERDUE**, **TODAY**, **UPCOMING** and **NO DUE DATE** (or as one list: ⋮ **> Group by due date**). Starred tasks come first within each day (**Starred first**).

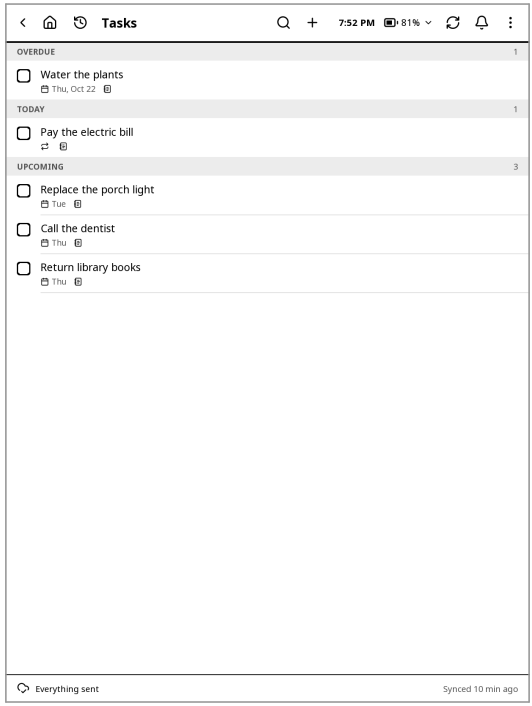

A list


A list's (or a view's) ⋮ has **Starred first: On/Off**, **Group by due date: On/Off** (in a list), **List options…** (as holding the list), **Sync now**, **Open on the web page** (a QR code for this list on the web page), **Refresh screen** and **Settings**. On a task's page, ⋮ opens the task's quick actions.

Each task shows its due day, reminder time, repeat, steps ("2/5"), a notes mark, and a star.

- **Tap the box** to tick a task off. "Done: …" confirms it. It stays crossed out until the next sync; tap again before then to undo.
- **Tap the star** to star or unstar it.
- **Tap the task** to open it (or its quick actions; see **Tap action** in Settings).
- **Hold the task** for quick actions:
  - **Done** / **Not done**
  - **Star**
  - **Due today**

- **Tomorrow**
- **Pick a date…**, or **Skip to current** for a repeating task
- **Postpone…**: by 1, 2, 3, 7, 14 or 30 days, or a date
- **Move to list**
- **Delete**
- **Open**

A deleted task goes at once, with **Undo** for a few seconds, and waits under **Deleted** at the end of its list until the next sync, with **Put back**.

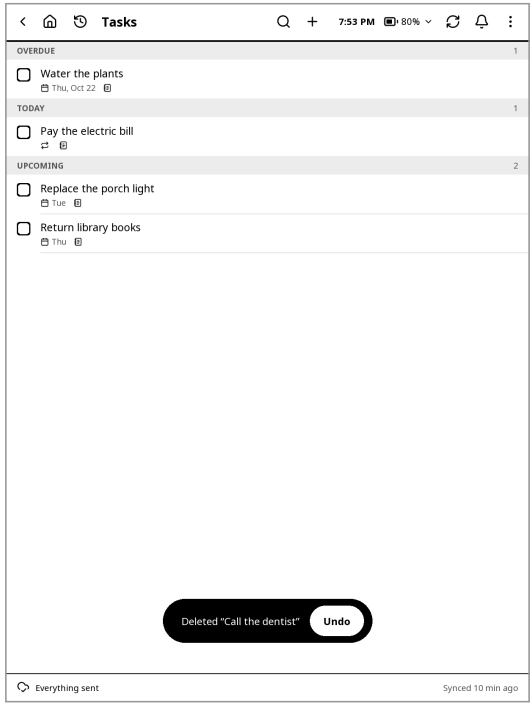

Undo after deleting a task

Adding a task

Tap **+** (on Home, in a list or in a view). The **Add to** box opens with the keyboard. Type the task, or tap the pen at the end of the box to write it by hand. Under it are switches, black when on:

- **Today**, **Tomorrow** or **Pick date**: when it's due. Tap again to clear.

- **Reminder**: a time on the due day.
- **Repeat**: **Daily**, **Weekdays**, **Weekly on (day)**, **Every 2 weeks**, **Monthly on day (n)** or **Yearly**.
- **Star**.
- **List**: which list it goes in.
- **Add** (or the keyboard's Enter), or **Cancel**.

A date or time in what you type or write ("Call the vet Friday 9am") is offered when you tap **Add**, the same as below. Without the launcher, KOReader's own box has the same buttons, and **Write it** when Notes can read handwriting.


Adding from Today makes it due today; adding from Starred stars it; holding a day in the calendar makes it due that day.

Dates in plain words

Type the date and time with the task, and To Do understands them:

- "Pay rent Friday 9am"
- "Call the vet tomorrow at 3:30pm"
- "Dentist on Oct 24"
- "Water the plants in 3 days"

Before adding, it shows what it understood: "Pay rent", **Due Fri, Oct 23 · Reminder 9 AM**. Tap **Add**, or **Keep as typed** if it guessed wrong (for example a task really called "Sun lamp").

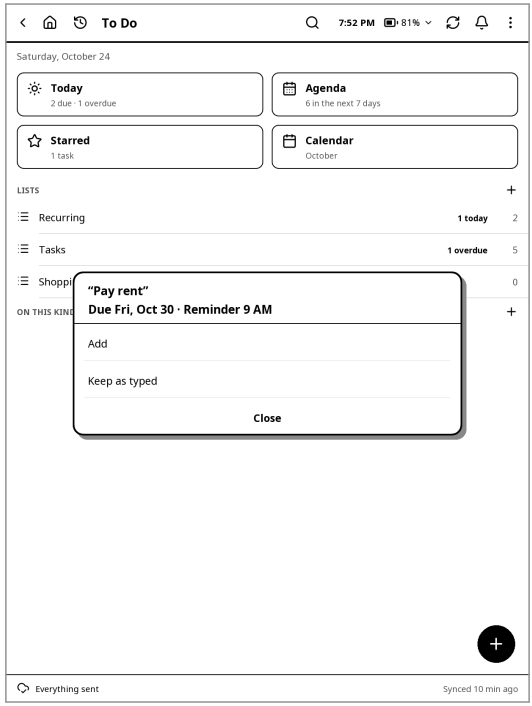


What To Do understood

It understands:

- **Days**: today, tonight, tomorrow, the days of the week (Mon or Monday, this Friday, next Friday, on Friday).
- **Later**: next week (the start of next week), in 3 days, in 2 weeks.
- **Dates**: 10/24, 10/24/2026, Oct 24, October 24th, 24 Oct, Oct 24, 2026. A date that has passed means next year.
- **Times**: 9am, 9:30pm, 9 a.m., noon, midnight, or "at 17:30".
- A time alone means today, or tomorrow once that time has passed.

The same works when you rename a task: **Rename and set date** or **Keep as typed**.

A task's page

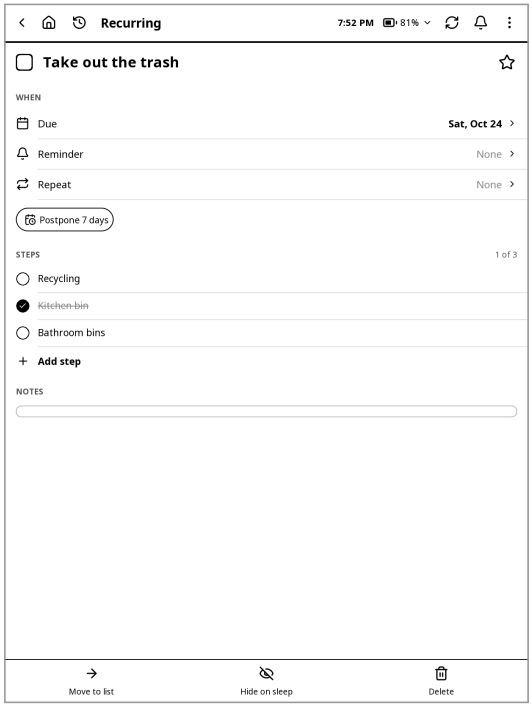

A task's page

- **The box** ticks it off; **the star** stars it.
- **The title**: tap to rename it.
- **Due**: **Today**, **Tomorrow**, **Next week**, **Pick a date…** or **No due date**. Changing the due date moves the reminder with it. Hold to clear.
- **Reminder**: a time on the due day, or **Another day…**, or **No reminder**. Reminders ring on your phone (To Do keeps them), and also on the Kindle while KOReader is open (Settings > **Reminder alerts**).
- **Repeat**: the presets, or **Custom…** (every 1 to 99 days, weeks, months or years), or **Remove repeat**.
- **Skip to current** (a repeating task): moves it to the first day it falls on from today.
- **Postpone**: by your usual number of days. Hold it to choose.

- **Due today**.
- **Remove repeat**: it stops repeating, its due date is cleared, and a note with the old date is added.
- **Open in Notes**: when the task was made from a Notes page, this goes back to that page.
- **STEPS**: tap a step's circle to tick it; tap the step to rename or delete it; **Add step**.
- **NOTES**: tap to read and edit the task's notes.
- At the bottom: **Move to list**, **Hide on sleep** (keeps this task off the sleep screen) and **Delete** (at once, with **Undo** for a few seconds; until the next sync it also waits under Deleted at the end of its list).

Today, Agenda, Starred, Calendar, Search

- **Today**: what's overdue and what's due today.
- **Agenda**: overdue, today, then each of the next 6 days, by reminder time.
- **Starred**: starred tasks from every list.
- **Calendar**: the month, with a dot for each task due that day (a hollow dot is overdue). Repeating tasks show on the days they will fall on; tasks that repeat every day or two are listed once instead. Tap a day for its tasks; hold a day to add a task due then. Swipe or use the arrows for other months.
- **Search**: titles, notes and steps in every list, including done tasks.

Split view

Turned on its side, To Do can show a column on the left with Home's tiles and lists, and the open list or view on the right (Settings > **Split view (landscape)**). Tap something in the column to open it on the right.

Syncing

Every change shows at once on the Kindle and waits to be sent. Syncing sends the waiting changes, in order, then downloads everything. It runs in the background, so you can keep reading and tapping while it works; changes you make meanwhile go in the next sync.

- **Sync**: the sync icon, the Sync screen, the gesture, or the launcher's **Sync To Do** quick button (it shows how many changes wait; hold it for the Sync screen). KOReader asks to turn Wi-Fi on if it's off. "Syncing To Do..." shows while it works.
- **Background sync**: every 15, 30 (to start with), 60 or 120 minutes while KOReader is open and Wi-Fi is already on, and when Wi-Fi comes on if the last sync is older than that or changes are waiting. It never turns Wi-Fi on.
- **Sync changes immediately**: when Wi-Fi is on, changes go a few seconds after you make them. **Send changes** sets how long after your last change: 2, 4 (the usual), 10 or 30 seconds, or a minute. Deleted tasks wait for the next full sync, so you can still put them back.
- A sync asked for while another runs follows it. One that gets no answer for 5 minutes stops with "To Do took too long to answer"; your changes stay waiting for the next.

The **Sync screen** (tap the bar at the bottom) lists the **CHANGES TO SEND**, and has:

- **Sync now**
- **Download only**: downloads without sending.
- **Preview changes**: says what To Do has new, changed or done since the last sync, without changing anything.
- **Reset to To Do**: throws away the Kindle's unsent changes and downloads To Do's copy again.
- **Catch up overdue repeats**: moves every overdue repeating task to its next day from today, after showing where each goes.

If To Do refuses a change (say, a task already deleted on your phone), it's left out and listed, not retried forever.

The sleep screen

With **Sleep screen** set to **To Do tasks**, the sleeping Kindle shows the day and date, how many are due and overdue, and the tasks. **Sleep screen content** chooses:

- **Today + Up next**: overdue, today and the next days.

- **Today**: overdue and today.
- **Starred**.
- **Pinned list**.

Done tasks, tasks hidden on sleep and hidden lists are left out.

Settings

⋮ **> Settings** on any screen (on a task's page: ⋮, then **Settings** at the bottom). The settings are on full pages; swipe or tap the arrows next to the page number.

Display

- **Week starts on**: **Sunday** or **Monday** (also where "next week" starts).
- **Split view (landscape)**.
- **Full refresh**: how often the screen flashes clean (every 6 or 3 changes, every change, or never). It also flashes when rows come or go and after a menu closes.

Home

- **Home tiles** and **Lists**: order them and choose which show. Tap one, then the arrows (to top, up, down, to bottom); the eye shows or hides it; **Undo** puts back the last move. The web page's To Do tab draws the Home tiles to drag into order.
- **Show hidden lists**, **Pinned list** and **Default list**.
- **Lists on this Kindle**: on to start with; off hides them (see "Lists on this Kindle").

Tasks

- **Starred on top**.
- **Group by due date**.
- **Tap action**: **Open task** or **Quick actions**.
- **Postpone by**: the usual number of days (1 to 60).
- **Reminder alerts**: reminders pop up on the Kindle while KOReader is open, with **Snooze**, **Open** and **Done**. **Snooze** brings it back in 15 or 30 minutes, 1 or 3 hours, tomorrow at 9 AM, or **Custom…** (type a number, then **Minutes**,

Hours or **Days**), on the Kindle only (To Do's reminder on your phone stays as it was). A reminder you don't answer stays in Notifications. Ones missed in the last two hours (while asleep) show when it wakes.

Sync, sleep screen and account

- **Background sync**, **Sync changes immediately**, **Send changes** and **Download only**.
- **Sleep screen**: opens the launcher's settings at **Sleep**, where the sleep screen is chosen for every app. **Sleep screen content** (below) stays here.
- **Microsoft account**: who is signed in; tap it for **Settings > Microsoft** (the App ID, **Sign in**, **Sign out**). Signing out there signs out To Do and OneNote, and removes your To Do lists kept on the Kindle and any unsent changes; lists on this Kindle stay. (Without the launcher, To Do has its own **Sign out** and **App ID** here.)
- **Test connection**: tries To Do itself, and says whether it works or what went wrong (such as a sign-in that ran out). The Microsoft account's own **Test connection** tries Microsoft's sign-in.

Tips

- The **Flagged emails** list from Outlook shows in Starred and its own list, but stays out of Today, the Agenda and the calendar.
- Hold a Home tile and choose **Add to launcher** to put Today or a list on the launcher, with its own count.
- The web page's To Do tab has the same lists with a keyboard, plus CSV import and export.
- Swipe in from the left edge to go back; other swipes turn pages (on the calendar, its months).
- Your KOReader gestures for the light, warmth, refresh, night mode, Wi-Fi and a screenshot, and the other apps' actions (Launcher, Notes, Home Assistant, Web server, Wikipedia, Syncthing, SSH), work on To Do's screens too. Library and book actions don't.

Notes

Notes turns the Kindle Scribe into a handwritten notebook. You write with the pen on ruled, grid, dotted or blank pages (or on the pages of a PDF), keep notebooks in folders, search them, tidy your handwriting, send them to OneNote and turn them into typed text with AI.

Notes reads the pen directly, so a hand resting on the screen doesn't write or turn pages. Fingers only work the buttons and menus; the pen writes.

Crossword books are solved in the Crosswords app, which has its own chapter.

Getting started

Opening Notes

- From the launcher, tap the **Notes** tile.
- Or open KOReader's menu and choose **Tools > Notes**.
- Or set a gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Notes**.
- Or search from the launcher: notebooks are found by name (and by words on pages Notes' own search has already looked at). Notes is also in Recent apps once you've used it.

Notes opens on the notebook list. If **Open the last notebook when Notes opens** is on (Settings > Notebook list), the notebook you used last opens straight away.

Making a notebook

1. Tap **+ New notebook** at the top of the list.
2. Type a name (or tap the pen at the end of the box and write it), or leave it blank to name it by the date and time (for example "Oct 21, 2:47 PM").
3. Under **Paper**, tap the one you want: **Blank**, **Narrow**, **Wide**, **Grid** or **Dots** (each drawn as it looks). The other templates (checklist, tasks, Cornell notes, week planner, music staves and more) can be picked later from the page's menu.

4. Tap **Create**.

Other choices in the same box:

- **From a PDF…** makes a notebook from a PDF on the Kindle: each PDF page becomes a page you can write on.
- **Your template…** starts the notebook with one of your own templates.

A new notebook goes into the folder you have open. Portrait or landscape follows the way the Kindle is held.

Naming notebooks

- To rename a notebook, hold it in the list and tap **Rename**, or use ⋯ **> Rename notebook** inside it.
- **Suggest** in the Rename box asks the AI to read the first written page and suggest a short name.
- **Suggest names (AI)** (Settings > New notebooks): when you close a notebook still named by its date, the AI reads its first page and offers a name a moment later (you can carry on meanwhile). Tap **Rename** to take it or **Keep** to leave it.
- **Add the date to names** (Settings > New notebooks): **Before the name** gives "Oct 21 – Meeting", **After the name** gives "Meeting – Oct 21". It applies to names you type for new notebooks, and when a notebook still named by date gets its first real name.

Saving and closing

Notes saves as you write; there is no Save button to remember. To leave a notebook, tap the open book near the top of the toolbar (back to the notebook list), or ⌂ above it (back to the launcher).


If you'd rather decide each time, set **When closing** (Settings > Writing) to **Ask**. Closing a notebook you changed then offers **Save**, **Rename…** or **Don't save** (puts it back as it was when you opened it; a brand-new notebook is removed). **Close** leaves the notebook open.

A notebook reopens at the page you left it on, and its undo steps are kept while KOReader is running (for the last two notebooks you closed).

The notebook list

Covers or a list

The notebook list shows each notebook's first page as a cover, with folders as tiles. To see a plain list instead, go to **Settings > Notebook list > Show notebooks as** and pick **List**.

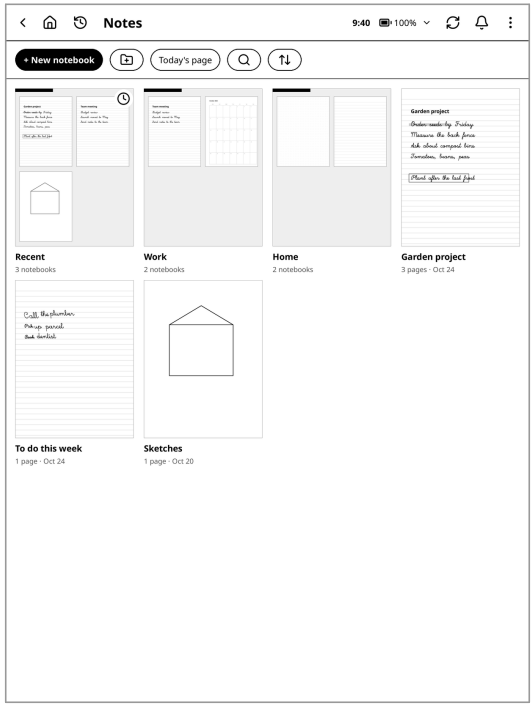

The notebook list: the buttons along the top, the Recent folder, folders and notebooks

The title bar is the same as in the other apps: ‹ (back up a folder, or out of Notes), ⌂ (the launcher), Recent apps, then the folder's name. On the right are the time and battery (tap them, or the ▾ beside them, for the drop-down panel with the light, Wi-Fi and Night mode), ⟳ (refresh the screen), the bell (notifications) and ⋮, which has **Open on the web page**, **Recent apps**, **Light**, **Night mode**, **Refresh screen** and, last, **Settings**.

The buttons under the title bar are:

- **+ New notebook**

- New folder (folder icon)
- **Today's page** (at the top level)
- **Crosswords** (when the Crosswords app is installed; it opens that app)
- **OneNote** (when you're signed in to OneNote)
- Search (magnifier icon, at the top level)
- Sort (up-and-down arrows icon)

If they don't all fit, the rest go behind **More...**. When there are more notebooks than fit, swipe left or right to turn the pages, or tap the arrows by the page number in the title bar. A swipe in from the left edge of the screen goes back, as **‹** does.

Tap a notebook to open it. Hold a notebook for its options: **Rename**, **Duplicate**, **Move to...**, **Pin to top**, **Lock...**, **Send to OneNote now**, **Add to launcher** (a tile for it on the launcher), **Select** and **Delete**.

Sort

Tap the Sort button at the top of the list and pick **Name**, **Date created**, **Date modified** or **My order**. Folders are sorted the same way: by name, by when the folder was made, or by its most recently changed notebook (for My order, folders stay in name order).

- **My order** is your own order: **Settings > Notebook list > Reorder notebooks...** lets you move notebooks up and down. If you haven't made an order yet, picking My order opens it.
- **Default sort** (Settings > Notebook list) is the sort Notes starts with. **Last used** keeps whatever you picked last; or choose one sort to always start with.

Folders

- Tap the New folder button and type a name. Folders can hold other folders.
- Tap a folder to open it; tap **‹** at the top (or swipe in from the left edge) to go back up. New notebooks go into the folder you have open.
- Hold a folder to rename, move or delete it, or to choose its **Cover...**: Automatic (the notebooks changed last inside it), a plain folder, an icon (house, briefcase, school, travel and others) or one of its notebooks.

- Deleting a folder that has notebooks in it asks whether they are deleted too or moved up a level. Tap **Undo** at the bottom of the screen in the next few seconds to put everything back.

Selecting several

Hold a notebook or folder and tap **Select**. Tick the ones you want, then tap the "selected: what to do..." row at the top to move, duplicate, send to OneNote or delete them together. **Done selecting** goes back to the normal list.

Pinned and recent notebooks

- **Pin to top** (hold a notebook) keeps it at the top of its folder.
- The notebooks you opened last are in a **Recent** folder, first in the list. Its cover shows them; tap it to see them, and **‹ Notes** to go back. **Recent notebooks** (Settings > Notebook list) chooses **As a folder**, **At the top** (above the other notebooks) or **Off**.

Locked notebooks

Hold a notebook and tap **Lock...** to set a PIN (**Remove lock** takes it off). Notes asks for the PIN when the notebook is opened, but not again for two minutes. A locked notebook shows a lock instead of its cover. It is left out of search, OneNote's automatic sending and the web page. A forgotten PIN can't be recovered.

Trash

Deleting a notebook (hold it, then **Delete**) moves it to the trash straight away; tap **Undo** at the bottom of the screen in the next few seconds to put it back. The trash is at the end of the notebook list. Tap a notebook there to restore it (it goes back to its folder) or delete it for good; **Empty trash** deletes them all. Deleting for good asks first, and notebooks in the trash are deleted for good after 30 days.

Search


Tap the Search button and type a word. Notes finds it in:

- typed text (text boxes and text downloaded from OneNote) and notebook names, straight away;

- handwriting that has been read by the AI (with ⋯ **> Convert page to text**, or from an earlier search).

Tap a result to open that page. If some pages haven't been read yet, the last row offers to read them with AI. Locked notebooks are never searched.

The launcher's search finds notebooks too: by name, and by words on pages that Notes' search has already looked at.

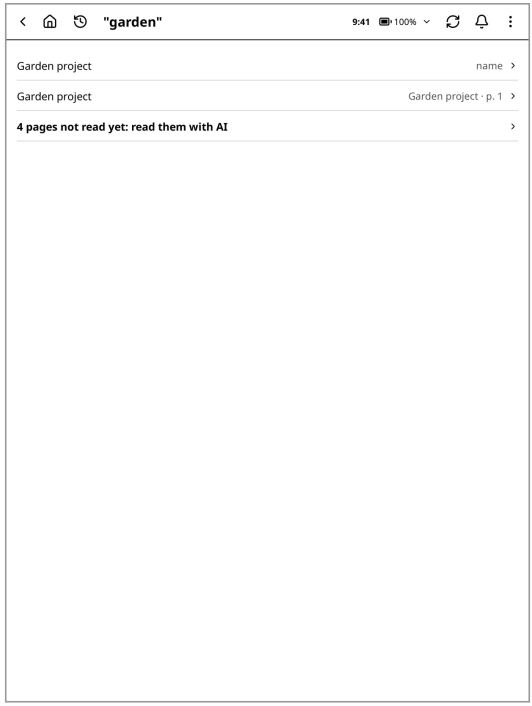

Search results: a notebook's name, typed text on a page, and pages not read yet

Today's page


Tap **Today's page** to open today's page in a notebook called **Journal**. The first time, Notes makes the Journal; each day gets a new page with the date at the top. You can also give it a gesture: **General > Notes: today's page**.

Writing

The toolbar

The toolbar runs down the left edge (or the right: **Settings > Toolbar > Side**). From the top:

- ⌂: the notebook is saved and closed, and the launcher shows;
- the open book: back to the notebook list;
- **Pen**, **Highlighter**, **Eraser**, **Lasso**;
- **Add** (Shapes, Text and Insert, in one button);
- **Zoom window**;
- **Undo** and **Redo**;
- **Tidy** (tidy handwriting);
- any action buttons you added;
- your favorite pens;
- the time and battery;
- page up, the page number, page down;
- all pages (the grid button), **+** (add a page) and ⋯ (the menu);
- the fold button folds the toolbar into a small tab on the edge. Tap the tab to bring it back;
- at the very bottom, always there: ⟳ (refresh the screen), the bell (notifications) and ⚙ (Notes' settings).

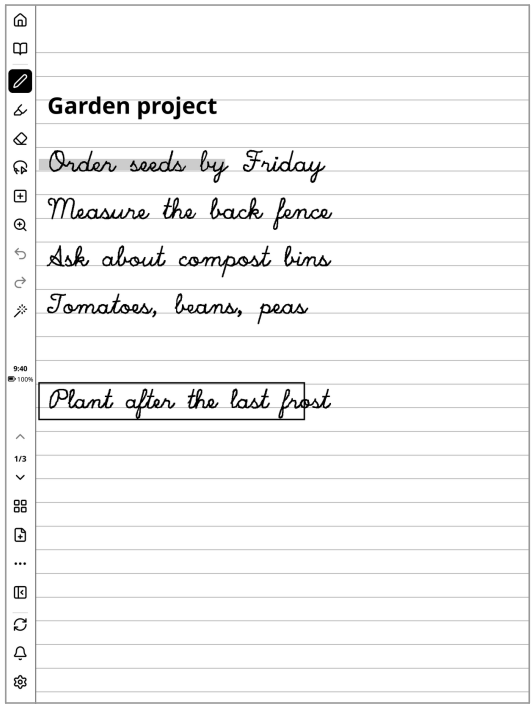

A page being written on, with the toolbar on the left

Tap a tool to use it, and tap it again for its panel (tips, sizes and options). Tapping anywhere outside a panel closes it.

Toolbar groups


A group is one toolbar button that opens a short list. **Add** holds Shapes, Text and Insert; **Tidy** holds the tidying actions. The group's button shows the tool you're using from it. To change a tool's options, tap the group and then tap that tool again in the list.

To change the groups, go to **Settings > Toolbar > Groups...**, pick a group, and tap **Remove** or **Add** beside each tool or action. Anything taken out of a group gets its own toolbar button again.

Your own toolbar

Settings > Toolbar > Toolbar buttons... lists everything the toolbar can show: the tools, the Add and Tidy groups, and the actions from the ··· menu (**Send to**

OneNote, **Ask AI**, **Convert page to text**, **Add page to To Do**, **Bookmark page**, **Date and time**, **Export**, **Light**, **Night mode** and others). Refresh, notifications and Settings are always at the bottom of the toolbar, so they aren't in this list.

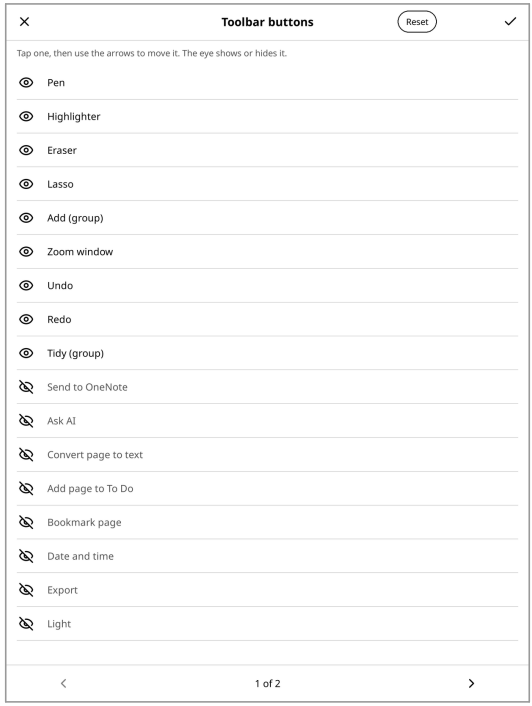

Toolbar buttons: the eye shows or hides a button, the arrows move it

1. Tap a button's name, then use the arrows to move it to the top, up, down or to the bottom.
2. Tap the eye beside a button to show or hide it.
3. Tap ✓ to keep the changes, or ✕ to leave the toolbar as it was. Undo takes back the last change, and **Reset** puts back the toolbar as it was to start with.


Hidden tools are not lost: they are at the top of the ⋯ menu, under the page templates. The actions are in the ⋯ menu anyway.

- **All pages button** and **Add page button** (Settings > Toolbar) take those two off the bottom of the toolbar; they are then in the ⋯ menu too.
- **Groups...** changes what is in the Add and Tidy groups.
- **Start with toolbar hidden** opens notebooks with the toolbar folded.

Pen

Tap **Pen**, then tap it again for its panel:

- **Tips**: **Ballpoint**, **Fineliner** (an even line), **Fountain** and **Brush** (the line widens as you press; the brush more strongly), **Calligraphy** (a slanted nib: thick and thin by direction), **Marker**, **Pencil**, **Mech. pencil** (grey lines) and **Shader** (a wide soft grey that goes under the ink).
- **Shade**: **Black**, **Dark grey** or **Light grey**. For the pencils: **Normal**, **Darker** or **Lighter**.
- **Size**: five sizes, with a sample stroke below.
- **Add to favorites (toolbar)** puts this pen (tip, size and shade) on the toolbar, up to three. Tap a favorite to write with it. Clear them in Settings > Writing > **Favorite pens**.

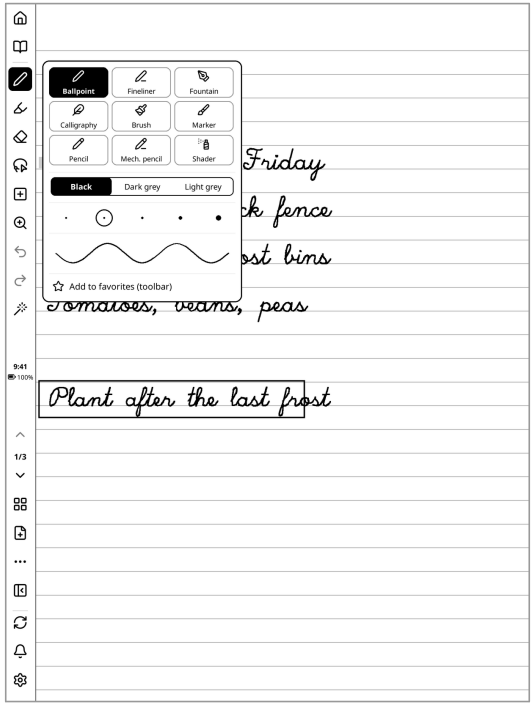

The pen's panel: tips, shade, size and a sample stroke

Starting pen (Settings > Writing) chooses whether notebooks open with the pen you used last or one of your favorites.

Pen pressure

The line follows how hard you press. **Pen pressure** in Settings > Writing sets how hard you need to press: **Soft** (a light touch already writes wide), **Normal** or **Firm** (press harder for a wide line). ··· **> Pen pressure** turns pressure off for one notebook, so every line is the same width.

Highlighter

Five widths of grey, drawn under the ink so writing stays readable. Tap **Highlighter** again to pick a width.

Eraser

Tap **Eraser** again for its panel:

- five sizes (pressing harder erases a bigger spot);
- **Partial** (only the ink under the eraser) or **Whole stroke** (any stroke it touches goes);
- **Highlighter only**: only highlighting is erased; ink, text boxes and pictures stay;
- **Clear page**.

The pen's eraser end, or its side button, erases whatever tool is picked. The eraser also removes text boxes, pictures and tape it passes over; one Undo brings them back.

Undo and redo

- Tap **Undo** or **Redo** on the toolbar.
- Tap the screen with two fingers to undo; hold two fingers to redo. (Turn this off in Settings > Writing > **Two-finger tap to undo (hold to redo)**.)
- **Undo history**: hold **Undo** on the toolbar to see the last steps (writing, erasing, highlighting and so on), each with its page and how long ago. Tap one to go back to just before it. Redo brings the steps back.

Turning pages

- The arrows on the toolbar turn pages; **+** adds a page after this one.

- Swipe up with a finger for the next page and down for the page before. **Turn pages with a finger** (Settings > Writing) switches this to left and right swipes, or turns it off.
- Swipes are ignored while the pen is near the screen and for a moment after, so a resting palm doesn't turn the page.

Pen side button


Pen side button (Settings > Writing) chooses what holding the side button does: **Eraser**, **Lasso**, **Highlighter**, **Ruler (straight lines)** or **Nothing**.

Tips

- Stroke smoothing (Settings > Writing) evens out shaky lines: **Light** for handwriting, **Strong** for drawings and long curves.
- If the screen keeps faint marks from earlier writing, tap ⟳ at the bottom of the toolbar; **Full refresh** (Settings > Display) sets how often Notes clears them by itself.

The lasso

Tap **Lasso** and circle ink, text boxes, pictures or tape with the pen to select them.

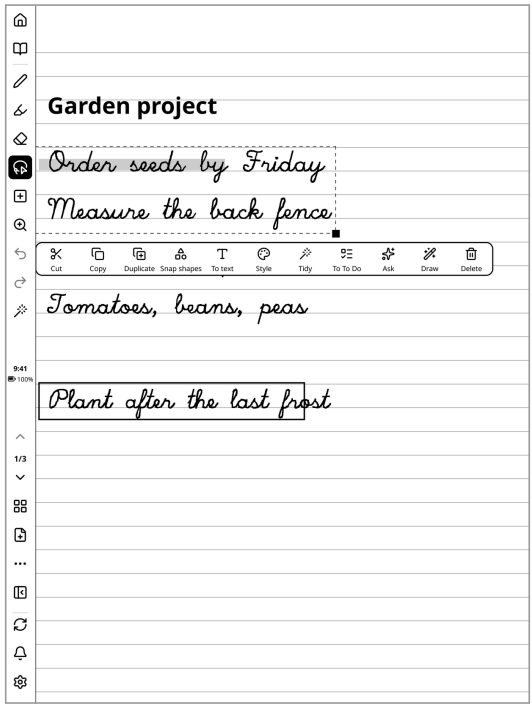

Two lines selected with the lasso, and the bar under them

- Drag inside the selection to move it; drag the square at its corner to resize it.
- The bar under the selection has:
  - **Cut**, **Copy** and **Duplicate**;
  - **Snap shapes**: rough lines, circles and boxes become clean ones;
  - **To text**: reads the handwriting with AI. The text can be copied, saved, or put back with **Replace** (the typed text goes where the writing was);
  - **Style**: change the selected ink's pen, thickness, shade or line;
  - **Tidy**: tidy the handwriting in the selection (see Tidy handwriting);
  - **To To Do**: add the to-do items in the selection to To Do;
  - **Ask**: ask the AI about the selection;
  - **Draw**: have the AI redraw it or draw next to it;
  - **Delete**.
- With something cut or copied, tap the page with the lasso and tap **Paste**. Text copied in another app (a To Do task, an AI answer, SSH) pastes the same

way, as a text box; the typed text of text boxes you cut or copy here pastes in other apps' boxes too (hold the box, **Paste**).

Shapes and snapping

Shapes

Open **Add > Shapes** and pick a line, arrow, rectangle, ellipse, triangle, diamond, star or table (set its rows and columns in the panel). Drag from corner to corner with the pen; the shape uses the pen's tip and size. In the same panel, **Fill** (none, light or dark grey) and **Line** (solid, dashed or dotted).

Shapes are ordinary ink: the eraser and lasso work on them.

Snapping your own drawing

Draw a rough line, circle, ellipse, rectangle or triangle and hold the pen still at the end for half a second: it becomes a clean shape. One Undo brings your own drawing back.

- **Shape recognition (hold the pen)** (Settings > Shapes) turns this on or off.
- **Snap lines to 0°, 45°, 90°** makes lines that are nearly level, upright or diagonal exactly so.
- **Snap line ends to ink** joins the ends of lines and arrows to ink nearby.
- With the pen side button set to **Ruler (straight lines)**, holding the button while you draw makes straight lines.

Text, pictures, tape and links

Text boxes

Open **Add > Text** and tap the page to type a text box (drag across the page first to set its width). The panel sets the size (four sizes), bold or italic, sans or serif, and left, centre or right alignment for new boxes. In the box where you type, **Bold**, **Italic**, **Sans** (or **Serif**) and the alignment under the text switch the style of this one; the pen at the end of the box writes the text by hand. Tap a text box to edit it, or to **Delete** it. You can write over text boxes; move or resize them with the lasso.

Pictures

Add > Insert > Picture... puts a picture from the Kindle in the middle of the page, selected so you can move or resize it. A photo larger than the screen is made screen-sized when it's added, so pages with photos stay quick to draw.

Tape (for studying)

Add > Insert > Tape: drag over something to hide it under grey tape. Tap the tape to lift it, and tap again to put it back. The Insert panel can also lift or put back all the tape on the page at once.

Links between pages

Add > Insert > Link to a page... puts an underlined link on the page, to a page in this notebook or another one. Tap the link to go there; move it with the lasso.

A page that other pages link to gets ⋯ **> Linked from**, which lists those pages; tap one to go there.

Date and time

Date and time (⋯ > Date and time, or a toolbar button from Settings > Toolbar > Toolbar buttons...): tap where it goes, and a stamp like "Wed, Oct 21 · 3:42 PM" is typed there.

Tidy handwriting

Tidy straightens your writing without changing your letters. Use it on the whole page from the **Tidy** button (or ⋯ **> Tidy handwriting**), or on part of a page by selecting it with the lasso and tapping **Tidy**.

The Tidy button's list has:

- **Tidy handwriting**: all four of the steps below at once.
- **Level lines**: takes out the tilt and drift of each line and sits its words on the ruled line.
- **Upright letters**: takes out the slant.
- **Even size**: brings words that are much bigger or smaller than the rest of the line closer to its size.

- **Even spacing**: makes the gaps between words even.

Highlighting, shapes and large drawings are left as they are. One Undo puts everything back.



Before: words of different sizes, leaning and spaced unevenly



After Tidy handwriting (the Tidy list is open)

Tips

- Tidy works best on ruled pages, where it can set writing on the lines.
- Try **Level lines** and **Upright letters** first: they make the biggest difference and change your writing the least.

Zoom window

Tap **Zoom window** to write large in a strip at the bottom of the screen; your writing lands small in the dashed box on the page.



The zoom window: write in the strip at the bottom; it lands in the dashed box

- Writing near the end of the strip moves the box on along the line.
- The strip's buttons move the box on, start the next line, or close the zoom.
- Tap the page to move the box there.
- Drag the strip's grip (top of its buttons) with the pen or a finger to move the strip up or down the screen; it stays where you put it.

Many people's handwriting is much neater this way.

Pages

All pages

Tap the page number, or the grid button, to see every page as a thumbnail.

- Tap a page to go there.
- Hold a page to bookmark, copy, move or delete it.

- The star in the title bar shows only bookmarked pages (tap it again for all); ⋯ **> Bookmark page** marks the page you're on (★ by its number).
- The tick-list button (**Select**) ticks several pages to bookmark, move, copy, move to another notebook or delete them together.
- ⋯ **> Reorder pages** moves pages up and down.
- Deleted pages are kept for 30 days: the bin in the title bar (with how many) restores them, or deletes them for good.
- **‹** goes back to the page; ⌂ to the launcher.

Page templates

The top of the ⋯ menu shows the page templates: **Blank**, **Narrow** ruled, **Margin** (ruled with a margin), **Wide** ruled, **Grid**, **Dots**, **Isometric** dots, **Hexagons**, **Checklist**, **Tasks** (tasks and subtasks), **Cornell** notes, **Week** planner, **Month** calendar and **Music** staves.



The ⋯ menu: the page templates, then the page's and the notebook's actions

Tap **All pages** beside the title to switch to **This page**, so a template applies only to the page you're on. **Template lines** (Settings > Display) makes template lines **Light**, **Medium** or **Dark**.

Your own templates

Under **Your templates** in the ⋯ menu, tap **+** to save this page (with its writing) or a picture as a template. Tap a template to use it; tap it again to delete it. **+ New notebook > Your template...** starts a notebook with one.


Checklists and tasks

On the **Checklist** and **Tasks** templates, tap a printed box (pen or finger) to tick it, and again to untick it. A mark drawn over an empty box (a tick, a cross) becomes a tick too. On the Tasks template, writing that starts indented makes that line a subtask, and its box moves in.

A checklist page added to To Do (⋯ **> Add page to To Do**) stays linked: ticking a box on the page ticks the task in To Do, and a task ticked in To Do is ticked on the page.

Month calendar and the Journal

On a **Month** calendar page, tap a day's number to open that day's page in the Journal notebook (made if it isn't there yet, and placed among the other days in date order). Days that already have a Journal page show their number in black.

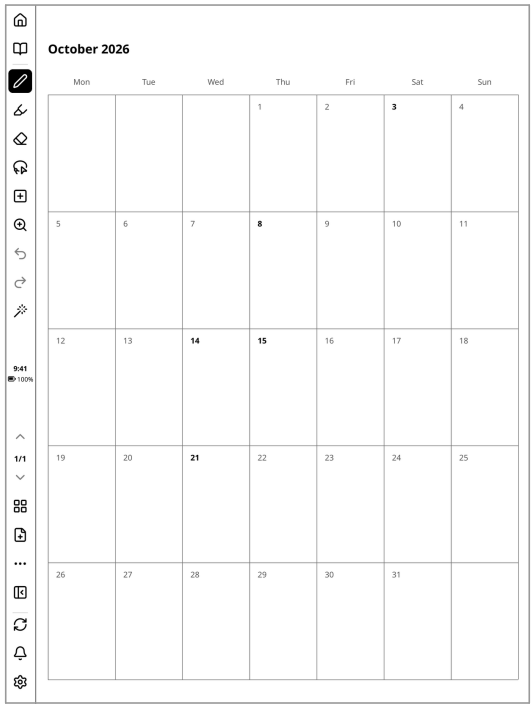

A month calendar page: days with a Journal page are in black

Page header

Page header (date and page number) (Settings > Display) shows the page's date and number in small type at the top right of each page.

Orientation and two pages side by side


Portrait and landscape

A notebook is portrait or landscape. New notebooks follow the way the Kindle is held. ⋯ **> Page orientation** changes it: **Portrait**, **Landscape**, **Inverted portrait** or **Inverted landscape**. The writing stays where it is. Opening a notebook turns the Kindle to match, and closing it turns the Kindle back.

Two pages side by side

⋯ **> Two pages side by side** shows a portrait notebook two pages at a time, with the Kindle on its side, like an open notebook: pages 1–2, then 3–4, and so on. The arrows turn two pages at a time.

- Turning the Kindle on its side does the same, and turning it back upright shows one page. **Two pages when turned on its side** (Settings > Writing) turns this off.
- The pen, highlighter and eraser work on either page. For the lasso, text and the other tools, turn **Two pages side by side** off.

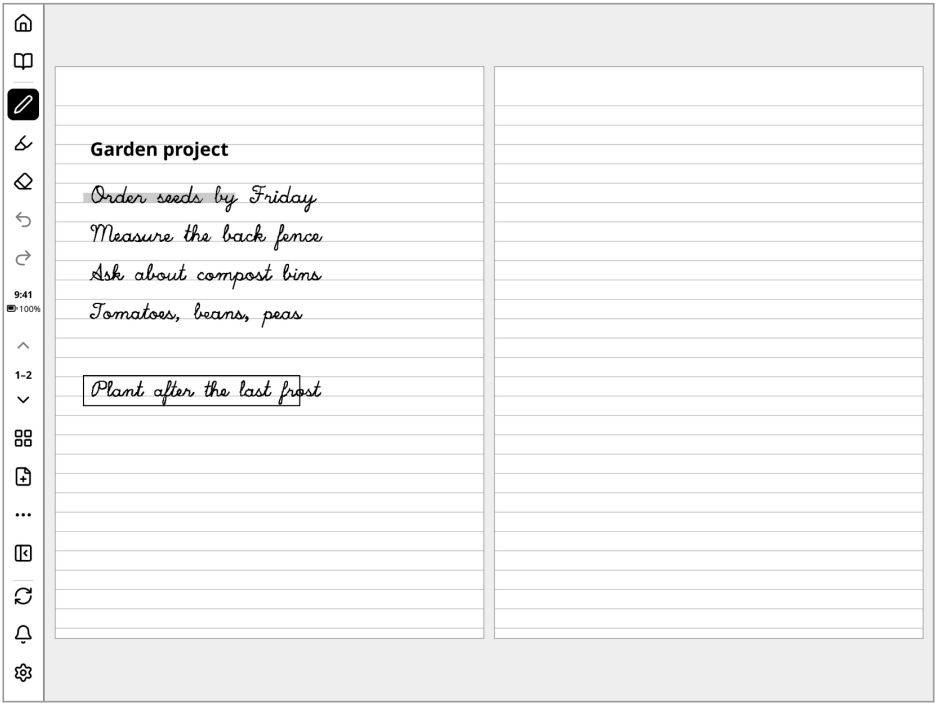


Two pages side by side with the Kindle on its side

Quick note

Set a gesture to **General > Notes: quick note** (Settings > Taps and gestures > Gesture manager). From anywhere (a book, a menu, To Do) the gesture opens a writing pad over the lower part of the screen, with what you were looking at faded above it.

- Write with the pen, highlighter, eraser and lasso; Undo and Redo work as usual, and ⟳ refreshes the screen.
- What you were looking at shows faded above the pad (a picture of it, to write about). Drag the handle on the pad's top edge to make the pad shorter (more of the screen) or taller; it stays there next time. Beside the handle: 👁 **Peek** (the whole screen as it was, until you tap), ↑↓ **Swap** (the pad on top and the picture below, or back; it stays that way next time), 🗑 **Discard** (the note thrown away, after asking) and ✓ **Save**. The toolbar starts folded to a tab at the side; tap it for the pens, the eraser, the lasso, Undo and Redo, which has the same buttons too. Settings > Toolbar > **Quick note buttons by the handle** hides the ones by the handle.
- Tap ✓ at the top of the toolbar (or use the gesture again) when you're done. What you wrote goes on a new page of the **Quick Notes** notebook, with the date and time at the top. (It was called Inbox before; an Inbox from an earlier version is renamed.)
- If you didn't write anything, nothing is kept.

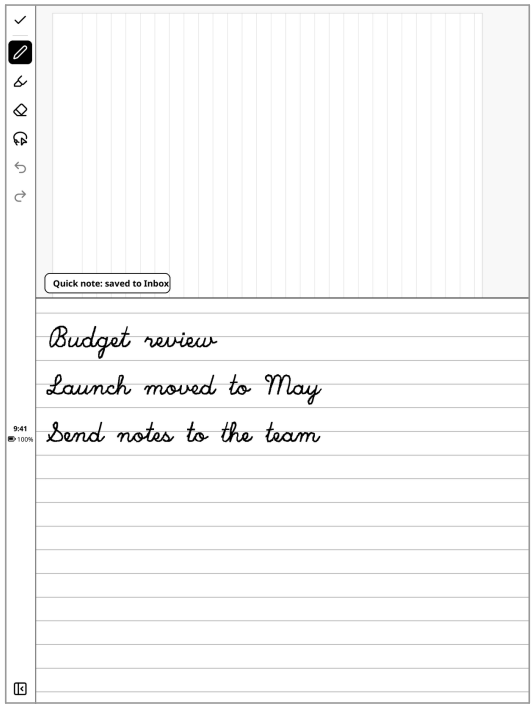

A quick note over the notebook list

Writing on a book's pages

You can write on the pages of PDFs and other fixed-page books while reading them in KOReader.

1. Open the book and go to the page.
2. Tap **Write on this page** in the reader's menu (Tools), or use a gesture set to **Notes: write on this page**.
3. Write with the pen; the eraser, lasso and zoom work too. The toolbar's arrows turn the book's pages.
4. Tap the top button (or use the gesture again) to go back to reading.

The writing is kept with the book and stays in place when you zoom in or out. It shows whenever that page does, in page or continuous view.

PDFs as notebooks

+ New notebook > From a PDF... picks a PDF on the Kindle (copy it over by USB first, anywhere on the Kindle). Each PDF page becomes a page you can write on. Pages you add are blank paper. Landscape PDFs make a landscape notebook.

⋯ **> Export... > The PDF with my writing added (annotations)** saves a copy of the PDF with your writing as PDF annotations, which other PDF apps show and can edit.

The PDF page fills the screen, so the toolbar may cover a little of its left edge; fold the toolbar to see all of it.

AI features

Several features use AI to read your handwriting or answer questions: Convert page to text, To text, search of handwriting, Ask AI, Make PDF, Draw, Add to To Do and Suggest name.

The AI services are set up in the launcher's **Settings > AI**, shared with the Crosswords app: the AI chapter has the details (the services and their keys, which AI does each job, Try a prompt, and what each feature sends). Notes' **Settings > Integrations > AI settings...** opens it.

Until an AI service is set up, Notes leaves these features out: no AI buttons or menu items show, and Notes' settings have one row, **AI services: Not set up**, that opens the AI settings. Once any service is set up, they all appear.

Convert page to text

⋯ **> Convert page to text** reads the page's handwriting. The text can be copied or saved as a file. Pages that have been read are remembered, so search finds their words afterwards. Use the lasso's **To text** for part of a page.

Ask AI and Make PDF

⋯ **> Ask AI...** (or the lasso's **Ask** for a selection): type a request in the box, or tap the pen at its end to write it by hand in a strip at the bottom of the page. Your last five requests and some examples are listed under it; tap one to ask it straight away (**More examples...** shows the rest).

- **Answer** shows the AI's answer. **Copy** and **Save** keep it (Save puts a text file in koreader/notes/export); **Done** closes it.
- **Make PDF** has the AI rewrite the note as a clean document (headings, lists, checkboxes, bold and italics) and saves it as a PDF, which you can open or write on as a new notebook.

Draw with AI

Select with the lasso and tap **Draw**. Type what you want (or tap the pen to write it), or pick an example such as "Redraw this neatly", "Make this a flowchart" or "Turn this into a table". The AI draws simple line art: diagrams, flowcharts, tables, grids, simple charts and sketches, with short labels.

- **Replace** swaps your drawing for the AI's; **Beside** puts the AI's next to yours.
- Lasso an empty area to have it draw something new there, such as a habit tracker or a title box: that box has one button, **Draw**.

The result is ordinary ink and text boxes that you can erase, move or undo.

Add to To Do

⋯ **> Add page to To Do** (or the lasso's **To To Do**) reads the to-do items on the page and shows them before they're added. On the checklist and tasks templates, a printed box starts a task and an indented box a subtask; ticked boxes are added as done.

- Tap the list name to choose which To Do list they go into.
- Tap a task to tick or untick it and its steps, or to set its due date and reminder.
- Dates written beside a task are read too: "Fri" or "10/30" is the due date, "9am" a reminder, "Fri 9am" both, "remind Mon 7pm" only a reminder. Turn this off with **Dates written beside tasks (To Do)** in Notes' **Settings > Integrations**.

You need the To Do plugin, signed in.

OneNote

Signing in

OneNote uses the Kindle's one Microsoft account, the same as To Do: one App ID and one sign-in for both, in the launcher's **Settings > Microsoft** (the setup chapter says how to make the App ID, once, for free). If you already signed in there for To Do, sign in again once so the same sign-in covers OneNote too: **Settings > Microsoft** shows **Sign in again to allow** next to Notes (OneNote) until you do.

Then on the Kindle:

1. Go to Notes' **Settings > Integrations > OneNote...** and tap **Microsoft account**: it opens **Settings > Microsoft**. Tap **Sign in**, then on a phone or computer open the address shown and enter the code (or tap **QR code** and scan it).
2. Back in OneNote's settings, pick the OneNote notebook to send to, or make a new one.

A OneNote sign-in from before this moved to the shared account by itself. Without the launcher, OneNote's settings have their own App ID and sign-in, as before.

Sending notebooks to OneNote

- ⋯ **> Send to OneNote** sends the notebook you're in. Hold a notebook in the list for **Send to OneNote now**, or use **Send all now** in the OneNote settings.
- Sending happens in the background: you can keep writing or reading, and a notice says when it's done (for example "OneNote: 2 new, 1 changed, 0 removed").
- Each notebook becomes a OneNote section, and each page a OneNote page holding the page as a picture (OneNote can search handwriting in pictures). Changed pages are updated and deleted pages removed; nothing comes back from OneNote.
- **Send automatically when Wi-Fi is on** sends a notebook when you close it, and everything when Wi-Fi comes on (Notes never turns Wi-Fi on itself).

- **Notebooks sent: Ones I pick** sends only the notebooks you mark: hold a notebook in the list and tap **Sent to OneNote by itself** to switch it.
- **Typed text of each page (read by AI)** adds the page's text under each page sent.

Choosing where a notebook goes

Notebooks go to the OneNote notebook picked in the OneNote settings, each as a section of its own name. To send one somewhere else, hold it in the notebook list and tap **OneNote: Default…**:


1. Pick a OneNote notebook (or **Default** to go back to the usual one).
2. Pick a section: one already there, **New section…**, or **A section named** after the notebook.

Hold a **folder** to do the same for every notebook in it, including ones added later. A notebook's own choice comes before its folder's. The hold menu shows where each one goes, for example **OneNote: Work › Meetings**.

Notes only changes or removes the pages it sent, so a section you already use keeps your own pages. Pages sent into a shared section are titled with the notebook's name ("Meeting notes – Page 1"). After you change where a notebook goes, it is sent again to the new place; the copy already in OneNote stays where it was.

Reading OneNote

Once signed in, tap **OneNote** in the notebook list (or **Browse OneNote** in the OneNote settings) to see your OneNote notebooks, sections and pages. **‹** goes back up a level.

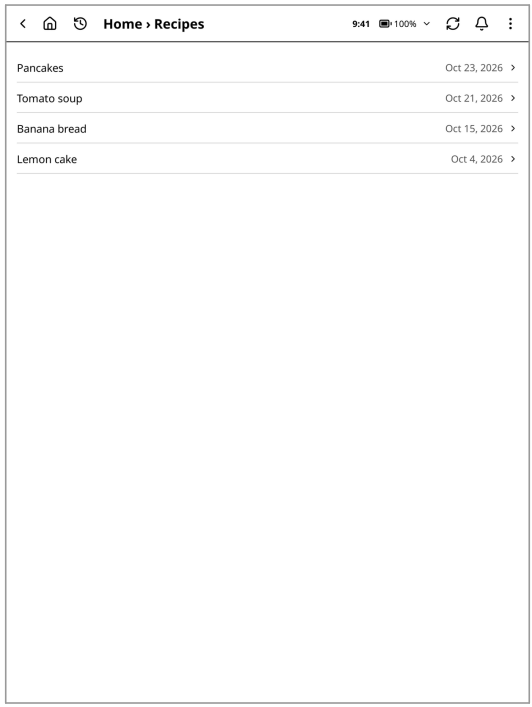

The pages of a OneNote section

- **Open** shows a page to read: typed text, lists, tables and pictures.
- **Download to edit** copies a page into Notes, into a notebook named after the OneNote notebook: handwriting as ink, typed text as text boxes and pictures as pictures. OneNote isn't changed.
- A page you've downloaded before shows "In Notes" and **Open copy in Notes**.

Replace in OneNote

On a page downloaded from OneNote, ⋯ **> Replace in OneNote** puts your edited version back in OneNote in place of the original page, in the same section. OneNote doesn't let apps add handwriting, so your pages go in as pictures (you can still write over them in OneNote). Notes asks before replacing.

Export

⋯ **> Export...** offers:

- **This page as a picture (PNG)** or **All pages as pictures (PNG)**;
- **The notebook as a PDF** (each page as a picture);
- **The PDF with my writing added (annotations)**, for a notebook made from a PDF;
- **This page as text (AI)** or **The notebook as text (AI)** (pages read before aren't read again).


Exports are saved in the **notes/export** folder inside the koreader folder on the Kindle.

Open on the web page

With the Web server plugin installed, ⋯ **> Open on the web page** in a notebook shows a QR code. Scan it with your phone's camera and that notebook opens on the web page, where you can look through its pages and download them. In the notebook list, ⋮ **> Open on the web page** opens the Notes page. The web server is started if it isn't running.

Settings

Open Notes' settings from ⋮ **> Settings** in the notebook list, ⚙ at the bottom of a notebook's toolbar, or the launcher's Settings list. They are full pages, like the other apps' settings: tap a row to switch it on or off or to pick from a list, and swipe left or right (or tap the arrows in the title bar) for the next page.

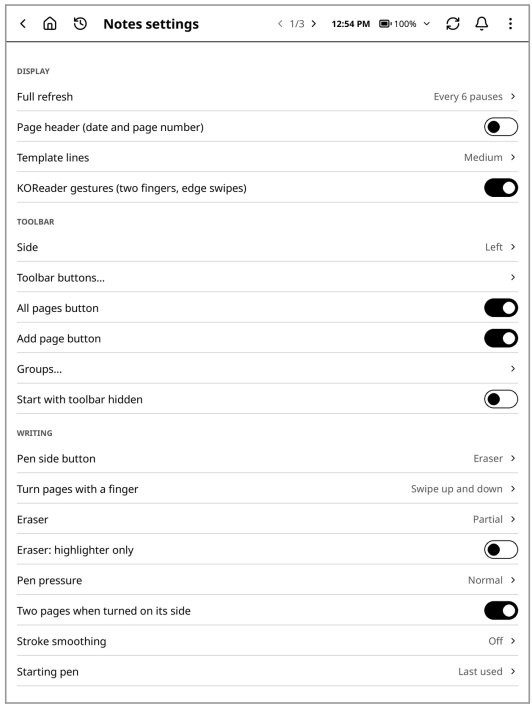

Notes settings

Display

- **Full refresh**: Every 6 pauses, Every 3 pauses, Every pause or Never.
- **Page header (date and page number)**.
- **Template lines**: Light, Medium or Dark.
- **KOReader gestures (two fingers, edge swipes)**.
- **Swipes change the light**: off to start with, so KOReader's brighter, dimmer and warmth swipes along the edge are ignored in notebooks and crosswords (a hand brushing the edge while you write set them off). Turn it on to use them here too.

Light and Night mode are KOReader's own: use the drop-down panel (tap the time and battery) or ⋮. The time and battery always show; whether the time is 12- or 24-hour follows KOReader's own setting (Settings > Time and date).

Toolbar

- **Side**: left or right edge.
- **Toolbar buttons...**: the order of the buttons, which ones show (the eye) and Reset.
- **All pages button** and **Add page button**.
- **Groups...**: what's in the Add and Tidy groups.
- **Start with toolbar hidden**.

Writing

- **Pen side button**: Eraser, Lasso, Highlighter, Ruler (straight lines) or Nothing.
- **Turn pages with a finger**: Swipe up and down, Swipe left and right, or Off.
- **Eraser**: Partial or Whole stroke. **Eraser: highlighter only**.
- **Pen pressure**: Soft, Normal or Firm.
- **Two pages when turned on its side**.
- **Stroke smoothing**: Off, Light or Strong.
- **Starting pen**: Last used, or one of your favorites. **Favorite pens** (tap to clear).
- **Two-finger tap to undo (hold to redo)**.
- **When closing**: Save automatically, or Ask.

Shapes

- **Shape recognition (hold the pen)**.
- **Snap lines to 0°, 45°, 90°**.
- **Snap line ends to ink**.

New notebooks

- **Template**: the template for new notebooks.
- **Pen pressure**: on or off for new notebooks.
- **Add the date to names**: Off, Before the name or After the name.
- **Suggest names (AI)**.

Notebook list

- **Sort by** and **Default sort**.
- **Recent notebooks**: As a folder, At the top or Off.
- **Open the last notebook when Notes opens**.
- **Show notebooks as**: Covers or List.
- **Reorder notebooks...** (My order).

Integrations

- **AI**: all of Notes' AI jobs to one AI, picked from the list.
- **Dates written beside tasks (To Do)**: whether Add to To Do reads dates written beside the tasks.
- **Read all pages now**: reads every page not read yet, so search finds its handwriting.
- **OneNote...**: your Microsoft account (Settings > Microsoft), the OneNote notebook, sending options and Browse OneNote.
- **AI settings...**: the launcher's **Settings > AI** (see the AI chapter).

Gestures

KOReader gestures in Notes

The gestures you set up in KOReader's Gesture manager also work inside Notes, as long as they can't be a resting palm: two-finger taps and swipes, pinch, spread, rotate, edge swipes and multiswipes. For example, an edge swipe can open a QuickMenu. Edge swipes that change the light are left out unless **Swipes change the light** is on in Settings (two-finger ones still work). One-finger taps and swipes on the page don't trigger them. Turn this off with **KOReader gestures** in Settings > Display.

Notes actions for gestures

In **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General**:

- **Notes**: open Notes.
- **Notes: today's page**.

- **Notes: quick note**.
- **Notes: write on this page** (in the reader, for PDFs and other fixed-page books).

Crosswords

Crosswords downloads puzzles from five newspapers, lays them out for the Kindle and lets you solve them with the pen, just as on paper. You can also import a PDF of puzzles, or a crossword file, and write on it the same way.


Crosswords needs the Notes plugin installed: you write with the same pen and tools, and Notes keeps your puzzle books.

Open it from its tile on the launcher (the tile also shows today's puzzle), from **Tools > Crosswords** in KOReader's menu, or with a gesture (**General > Crosswords**). It lists your puzzle books, one per newspaper, plus any you've imported. Tap one to open it, or hold it to rename or delete it (**Undo** puts a deleted book back). Along the top:

- **+ Get a crossword**: download a puzzle.
- **Today's**: open (or download) today's puzzle from your usual source. The button shows the source and whether you've started it.
- **Import**: add puzzles from a PDF, .puz or .ipuz file on the Kindle.
- **Stats**: how many you've done and how fast.
- **Sort**: by name, date created, date changed, or your own order.

The title bar is the same as in the other apps. Its ⋮ has **Open on the web page** (a QR code for the web page's Crosswords tab, when the Web page plugin is installed) and, last, **Settings**. **‹**, or a swipe in from the left edge, goes back to the launcher.

The launcher's search finds your puzzles too, by day ("21 oct"), kind ("quick") or book.

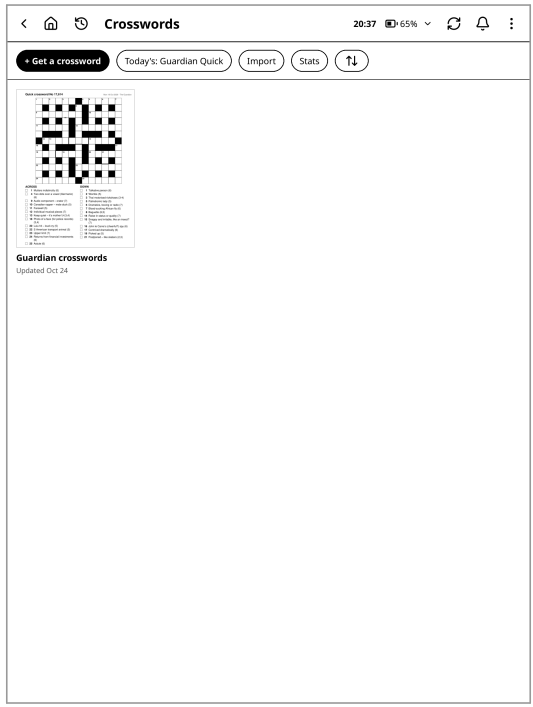

The Crosswords list

Getting crosswords

The sources


- **The Guardian**, in four kinds:
  - **Quick**: short, plain clues. Back to 2001.
  - **Cryptic**: the classic cryptic.
  - **Quiptic**: an easier cryptic, good for learning.
  - **Prize**: a harder cryptic whose answers come out a week later (see "Prize answers" below).
- **USA Today**: daily, back to 2010.
- **Universal**: daily, back to 2019.
- **Washington Post (Sundays)**: the big 21 × 21 Sunday puzzle, with its circled squares. Back to May 2025.

- **New Yorker (weekdays)**: back to 2018.

The crosswords are for your own use.

Get a crossword

1. Turn on Wi-Fi.
2. Tap **+ Get a crossword** (or, inside a crossword book, tap ⋯ and **Get a crossword…**). It opens at the source you used last.
3. To use another, tap **Another source…** at the bottom and pick it (The Guardian's Quick, Cryptic, Quiptic and Prize are listed separately).
4. Tap a day. The latest five are listed first, with **Today** marked.
   - **Older** and **Newer** step back and forth through the years, five at a time.
   - **Random** picks a puzzle from any year that isn't in your book yet.
   - **Get the last 7 days** downloads every puzzle from the last week that you don't have yet. Use it before a trip without Wi-Fi.

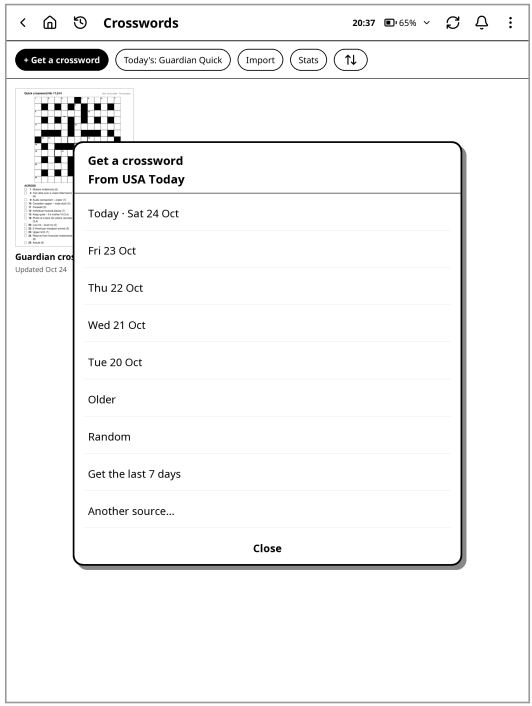

Get a crossword: the latest days from one source, then Older, Random, Get the last 7 days and Another source

A message such as **Getting the crossword for Wed 21 Oct from USA Today…** shows while the Kindle downloads it, and the puzzle opens as soon as it's in. If it's already in your book, it just opens, with your writing as you left it.

> Downloads run in the background, so a slow or patchy Wi-Fi connection never freezes the Kindle. To stop waiting, tap **Cancel** (a tap anywhere else does nothing): the puzzle then isn't opened. A download that gets no answer gives up after a minute or two.

Each source has its own book: "Guardian crosswords", "USA Today crosswords" and so on, all in the Crosswords list.

Get new ones automatically

Crosswords can fetch new puzzles for you.

1. Open Crossword settings (⋮ **> Settings** on the Crosswords list).
2. Tap **Get new ones automatically**.
3. Tick the sources you want (Guardian Quick, Guardian Cryptic, Guardian Quiptic, Guardian Prize, USA Today, Universal, Washington Post, New Yorker).

When you open Crosswords and Wi-Fi is already on, puzzles from the last 3 days that aren't in your books are added, at most once an hour. This happens quietly in the background while you carry on, and a notice such as "Added 3 new crosswords" says when they're in. With the launcher installed, it also goes in your notifications: "3 new crosswords are ready", and tapping it opens the first. It goes away once you open a crossword. It never turns Wi-Fi on for this. With Guardian Prize ticked, Prize puzzles also get their answers once they're out. A book you have open at the time is left alone until the next try.

Today's crossword

Today's crossword opens the newest puzzle from one source: the one in your book if you have it, otherwise it downloads it in the background and opens it (KOReader asks to turn on Wi-Fi if needed). If today's isn't out yet, you get the one before.

Pick the source in **Crossword settings > Today's crossword**, or leave it on **The one last opened** to follow whichever source you used last in Get a crossword.

You can open it three ways:

- **Today's** at the top of the Crosswords list.
- A gesture: in KOReader, go to **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Today's crossword**.
- A shortcut on the launcher for one source: **Add shortcut > Crossword**, then pick the source. Each source can have its own tile, showing whether today's puzzle is started or done.

Recent crosswords on the launcher

The launcher has a **RECENT CROSSWORDS** row, under RECENT BOOKS and RECENT NOTEBOOKS, with the puzzles you opened or wrote in most recently: up to 3 cards, or 5 with the Kindle on its side. It covers every crossword book, imported puzzles and PDF puzzle books, but not hidden puzzles or locked notebooks.


- Each card shows a small picture of the grid as you've written it so far, the puzzle's name, and how far you've got: "23 of 78 clues" with a progress bar, or **New**, **Started** or **Done** (always one of these for a PDF puzzle book). The picture is redrawn a moment after you close a puzzle, so it can take a refresh of the launcher to catch up.
- Tap a card to open that puzzle. A locked notebook asks for its PIN first.
- Hold a card for **Open** or **Remove from recent**. A removed card stays off the row until you work on that puzzle again (its state or ticked clues change).
- The row starts empty after updating and fills as you open puzzles.
- To turn it off, set **Recent crosswords** to **Off** in **Launcher** settings, or in the web page's Launcher tab. It's on to start with.

Prize answers

The Guardian Prize answers are published a week after the puzzle. Get the same puzzle again after that (or have Guardian Prize ticked in Get new ones automatically) and its answers page is added. Your writing stays.

Solving

Write the letters in the squares with the pen, as on paper. The toolbar down the left starts with **Home** (the house, back to the launcher, when it's installed) and the book (closes the puzzle book, back to where you opened it). Then come the pen (tap it again for its tips and sizes), eraser, lasso, zoom, Undo, Redo and **Done** (the ✓), and under them the buttons you've pinned: **Hint** and **Check my answers** to start with. Lower down are the page arrows, the puzzle list, ⋯ and the button that folds the toolbar away, and at the very bottom, always: **Refresh screen**, the **bell** (notifications, with the launcher installed) and **Settings**, which opens Crossword settings.

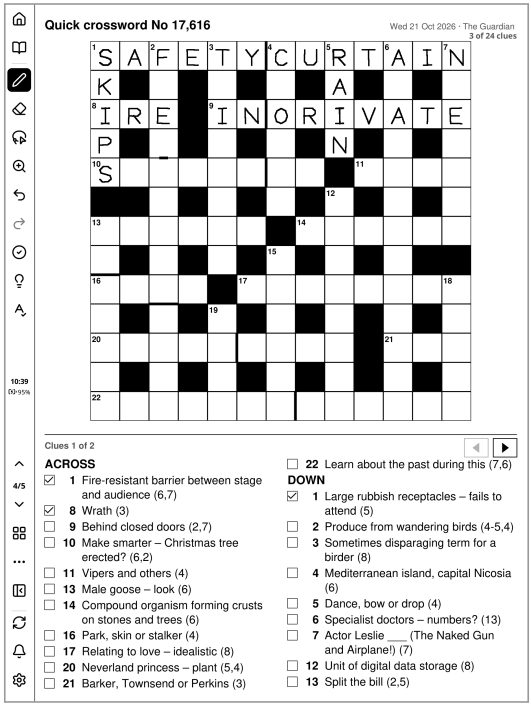

A crossword being solved: letters written in the squares, finished clues ticked, "3 of 24 clues" at the top

Your toolbar buttons

Anything in a crossword book's ⋯ menu can go on the toolbar: Hint, Check my answers, Get a crossword, Page orientation, Open on the web page, Ask AI,

Export, Hide page, Rename notebook, Pen pressure, Light and Night mode. (Refresh screen and Settings are always at the bottom.)

1. Open **Crossword settings** (the toolbar's **Settings** in a crossword book, or ⋮ **>** **Settings** on the Crosswords list), then **Toolbar buttons**.
2. Tick the ones you want. They go under the tools, in the same order as in ⋯.
3. Tap **Done**.

The more you pin, the closer together the buttons sit, so they all fit.

Two-finger tap is Undo and two-finger hold is Redo, as in any notebook.

Tick boxes, clue numbers and the clue arrows all work with a finger, even while you hold the pen near the screen. Finger taps are only ignored while the pen is writing and for a moment after, so a palm resting on the page doesn't tick or turn anything.


Tapping a clue number

Tap a clue's number (in the clue list) with the pen or a finger, and its squares are outlined in the grid, with the clue itself outlined too. If the clue is on another clue page, it goes back to the grid's page first.

Tap a number in the grid, and the clues that start in that square are outlined: the Across one and the Down one.

- The clues are pinned in a card just above where you tapped (below, if there's no room above), just as wide as the clue needs.
  - Its tick box ticks the clue off, just as the box in the clue list does. Once every clue on the card is ticked, the card closes, and **Undo** at the bottom unticks the last one and brings the card back (for 3 seconds; **Crossword settings > Undo after a tick** sets how long, or Off).
  - Drag the card out of the way with the pen or a finger. When you let go, the screen is cleaned up where it moved.
  - To get the card only for clues on another clue page (the ones on the same page are just outlined in the list), set **Crossword settings > Clue card** to **Clues on other pages**.

  - Tap its **X** to close it. Otherwise it stays while you work.
- The outline goes away with your next pen stroke, or a finger tap anywhere else.
- The tap doesn't leave a dot.

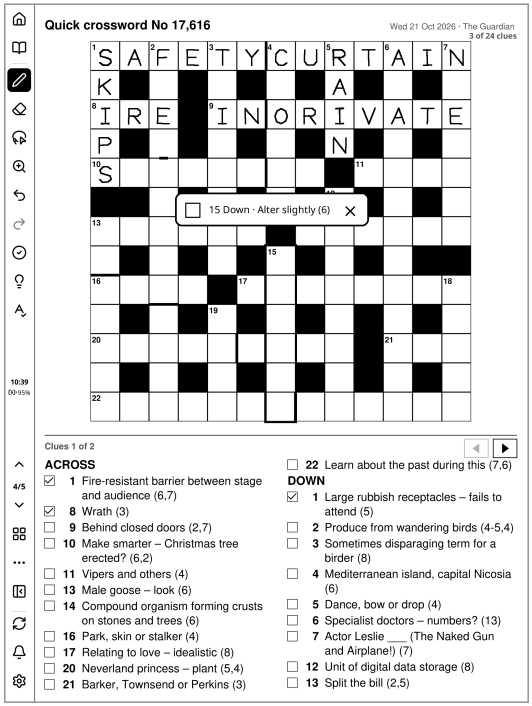

A number tapped in the grid: its clue from the next clue page, pinned by the tap

To turn this off, set **Crossword settings > Tap a number to find it** to **Off**.

Ticking clues

With **Clue boxes** on (it is to start with), each clue has a small box in front of it.

- Tap the box with the pen or a finger to tick it. Tap again to untick it.
- Or draw a small tick or cross in it: it becomes a neat tick (a mark in a ticked box unticks it).
- Draw a line through several boxes, as if crossing clues out, and they're all ticked.
- Rub a tick out with the eraser to untick it.


The top of the page shows how many are done, such as "23 of 78 clues", and the puzzle list shows it too.

More clues than fit

When the clues don't all fit under the grid (on big puzzles, or with Large clues), the grid stays where it is and only the clues turn.

- A bar above the clues says "Clues 1 of 2", with ◀ and ▶ arrows. Tap them with the pen or a finger.
- The toolbar's up and down arrows turn the clues too.
- Or swipe across the clues with a finger: left or up for the next clues, right or down to go back.

Only the clue part of the screen changes. What you write in the grid shows on every clue page. Anything you write beside the clues stays on that clue page.

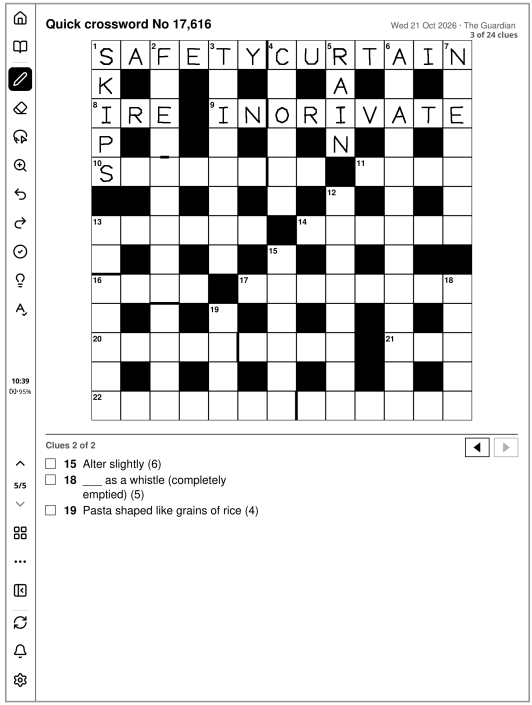


The second clue page: the same grid and writing, the rest of the clues below, "Clues 2 of 2"


Hints

Tap **Hint** (the lightbulb) on the toolbar, or ⋯ **>** **Hint**, and pick one:


- **Reveal a letter**: then tap a square. Its letter appears in grey, with a small mark in the square's corner so you can tell it was revealed.
- **Reveal a word**: then tap a clue, or a square of the word. The whole answer appears in grey, each square marked.
- **Check my answers**: checks the whole grid, as the toolbar's button does.
- **Check a word**: then tap a clue or a square. Only that word is checked: the AI reads your letters and puts a dot in each square that looks wrong, without showing the right letter.
- **Ask AI for a hint**: then tap a clue or a square. **Asking the AI for a hint…** shows while it thinks (tap **Cancel** to give up; a stray tap elsewhere doesn't stop it), then a short nudge, never the answer, appears in a card by the clue. Ask again for the same clue and each hint goes further than the last (for a cryptic clue: first which part is the definition and the kind of wordplay, then how the wordplay works, then the strongest hint short of the answer). Drag the card out of the way, tick the clue off from it, copy the hint with its copy button, or tap its **X** to close it.
- **Show the answers page**: opens the puzzle's hidden answers page.

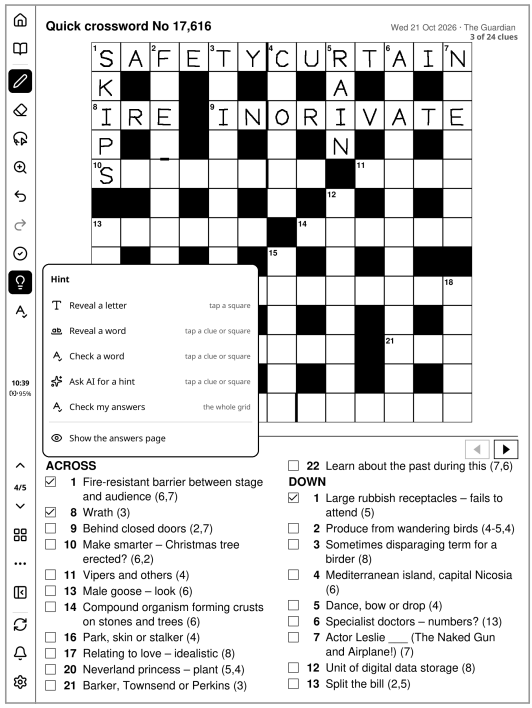

The Hint menu beside the toolbar

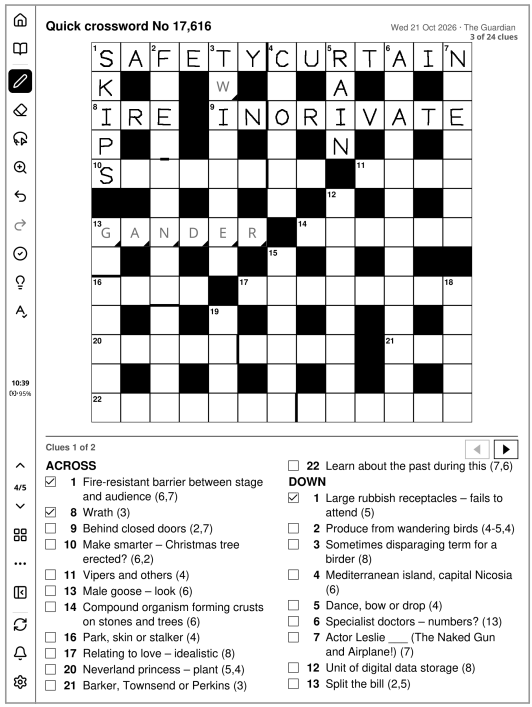

A revealed word and a revealed letter, in grey with a mark in each square's corner

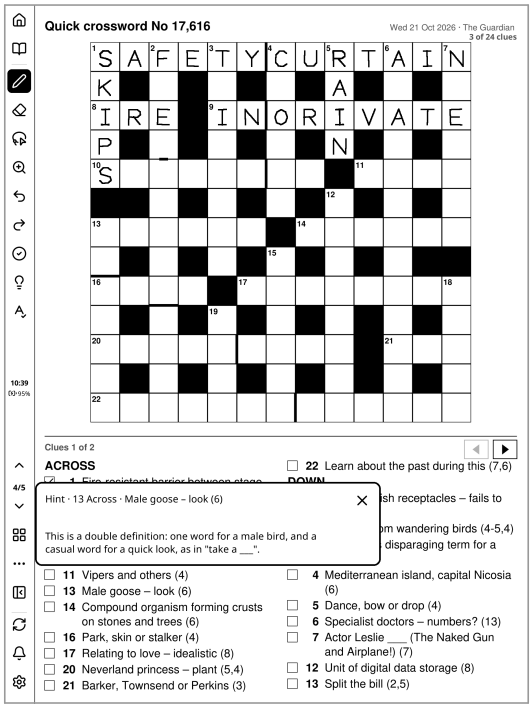

A hint from the AI, pinned by its clue

While a hint waits for your tap, a bar at the bottom says what to tap, with **Cancel**. Tapping a square where an Across and a Down word cross asks **Which word?**.

- Undo takes revealed letters out again.
- The puzzle list counts the hints you used, such as "Done · 14 min · 2 hints".
- If the AI's hint gives the answer away, Crosswords asks it again; if it still does, the hint isn't shown.

Check a word and Ask AI for a hint need an AI set up first: see "Setting up the AI" below. Claude's hints are noticeably better than a small local AI's for cryptic clues.

Answer

To see a whole answer without the Hint button:

1. Pick the lasso.
2. Draw around a clue, or some squares in the grid.
3. Tap **Answer** (beside **Ask**, below what you circled).


The answer shows, or "No answer yet" for a Prize puzzle whose answers aren't out. Tap **Copy** to copy the answers, or **Show in the grid** to put it in its squares, in grey and marked as revealed. Undo takes it out again.

To see just some letters, circle those squares and tap **Reveal** instead: only the squares you circled get their letters, in grey and marked as revealed. Undo takes them out again.

Check my answers

The AI can read what you wrote and tell you which squares look wrong, without giving the right letters away.

1. Tap **Check my answers** on the toolbar (or ⋯ **> Check my answers**).
2. A picture of the grid goes to the AI that reads handwriting (see "Setting up the AI" below).
3. **Checking your answers…** shows while the AI reads the grid (tap **Cancel** to give up; a stray tap elsewhere doesn't stop it). Then each square that looks wrong gets a small dot, and a line at the bottom says how many, such as "2 squares look wrong (dotted) · 41 filled".
4. Clues whose squares are all right are ticked for you.
5. Tap **Clear dots** when you're done with them.

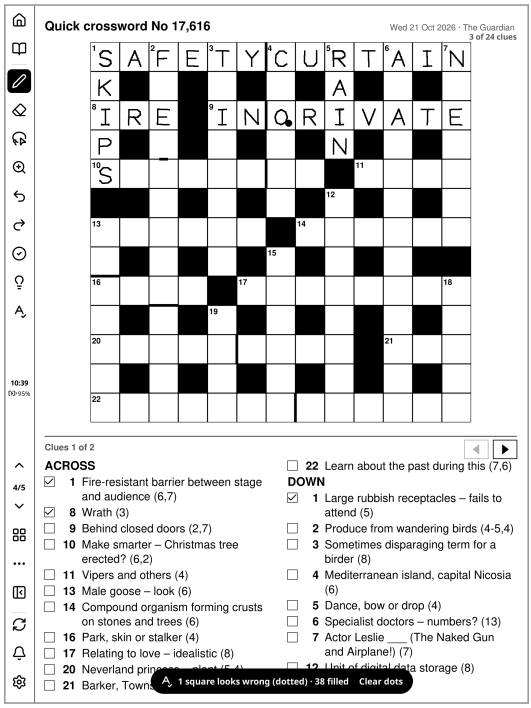

Check my answers: a dot in the square that looks wrong, and how many at the bottom

To check one word, use **Hint > Check a word**. To check some squares, circle them with the lasso and tap **Check**.

If the grid changed while it was being checked (you turned the page, or wrote or erased in it), no dots go on it, and a message says "The grid changed while it was being checked. Check again."

> Claude reads handwriting much more reliably than a small local AI. If many rows come back "not read", write the letters a little larger, or switch reading handwriting to Claude.

Setting up the AI

Check my answers, Check a word, Ask AI for a hint and Ask all need an AI. Crosswords uses the AI services set up in the launcher's **Settings > AI** (shared with Notes and SSH): Claude, Gemini, OpenRouter, Groq, an AI you run on your own computer (Local AI, such as Ollama), or a Custom one. Until one is set up,

they're left out: the Hint menu keeps Reveal a letter, Reveal a word and the answers page, the lasso keeps Answer and Reveal, and Crossword settings shows **AI services: Not set up**. They come back as soon as a service is set up.

1. Open Crossword settings (⋮ **> Settings** on the Crosswords list) and tap **Check my answers** or **Hints from the AI** under **AI**. That opens **Settings > AI**; Back returns to Crosswords.
2. Set up a service under **AI services**: for Claude, its own page takes the API key (from platform.claude.com) and the model; Gemini, OpenRouter and Groq have free tiers, which may answer "too many requests" when used a lot; for Local AI, enter the computer running Ollama and its port (for example http://192.168.1.50:11434) and pick a model that can read pictures.
3. Choose which service does each job. Check my answers and Check a word use the one for **reading handwriting**; Ask AI for a hint and Ask use the one for **Ask and Make PDF**.

To pick the AI and model for one job straight from a crossword, hold an AI button (**Check my answers**, the Hint menu's **Check a word** or **Ask AI for a hint**, or the lasso's **Ask** or **Check**): **AI for this** opens.

To change how the AI is asked, open **Advanced** in the AI settings: **Crossword hints** and **Crossword checks** each have their own wording, which you can edit (**Reset to default** puts it back), and a preview of what's sent. The rule that a hint never gives the answer, and the form a check's reply has to take, always stay.

The AI chapter has more detail, including using a local AI away from home.

Ask AI anything

For a question of your own, circle a clue (or part of the grid) with the lasso and tap **Ask**. That part of the page, print and your writing, goes to the AI with your question. ⋯ **> Ask AI...** asks about the whole page.

Zoom

Tap the zoom button and drag a box around the grid with the pen. The zoom then shows that area as large as it fits, on every page of the book. Write while zoomed and the letters land small in the squares, so you can write big. The page arrows keep the zoom. **Change area** draws a new box; tap the zoom button

again for the whole page.

The timer and Done


With **Timer** on, each puzzle times itself while it's open and you're writing on it. A pause of more than 3 minutes counts as 3, so leaving it open doesn't add up.

When you finish, tap **Done** (the ✓ on the toolbar). The timer stops and the puzzle list shows "Done · 14 min". Tap ✓ again to mark it not done.

Landscape

Turn the Kindle on its side (or tap ⋯ **> Page orientation**) and each puzzle is laid out sideways: the grid on the left, the clues beside it.

- What you wrote in the grid comes with you, in the same squares.
- Writing elsewhere on the page stays with the way you wrote it.
- Done, the timer and the ticks are shared between the two.
- **Page orientation** also offers **Inverted portrait** and **Inverted landscape**.

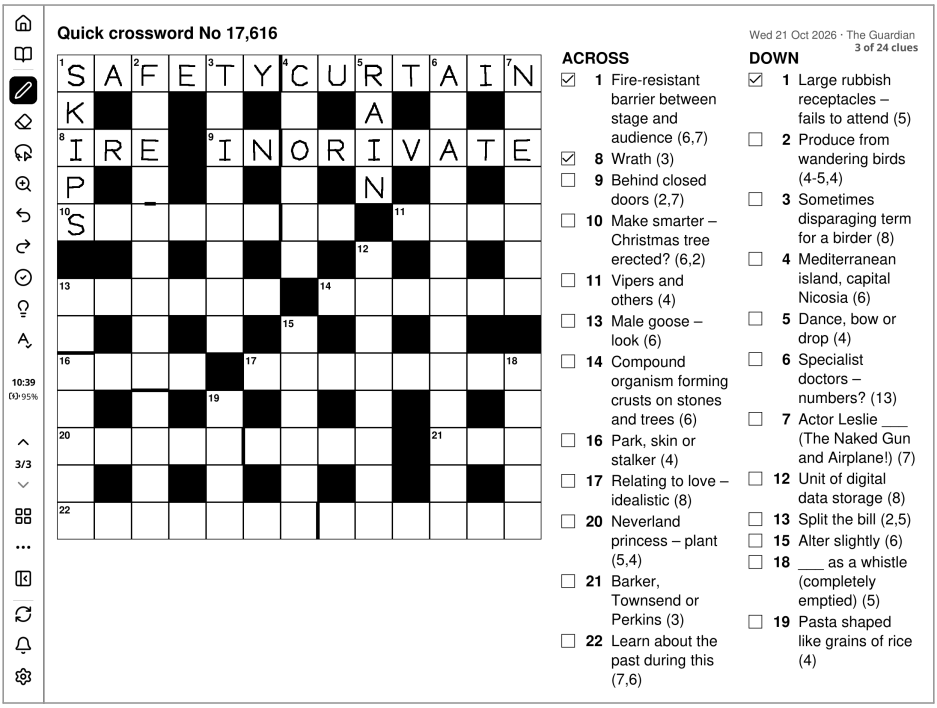

The same puzzle on its side

The answers page


Every downloaded puzzle has an answers page right after it, hidden so you don't turn to it by accident. To see it, tap **Hint > Show the answers page**, or open the puzzle list, tap **Hidden**, then the answers page.

The puzzle list

Tap the grid button on the toolbar to see the book's puzzles.

- Each puzzle is listed once, named by its day, with its state: not started, "Started · 6 min so far" or "Done · 14 min", and how many clues are ticked.
- **Newest first** switches to oldest first.
- **Next unstarted** opens the newest puzzle you haven't started.
- Filter with **All**, **Not started**, **Started**, **Done** and **Hidden**.

- The chart button in the title bar (**Stats**) shows your streak of days in a row with one done, this week's and this month's count, and for each source how many you've done, with the average and best time.

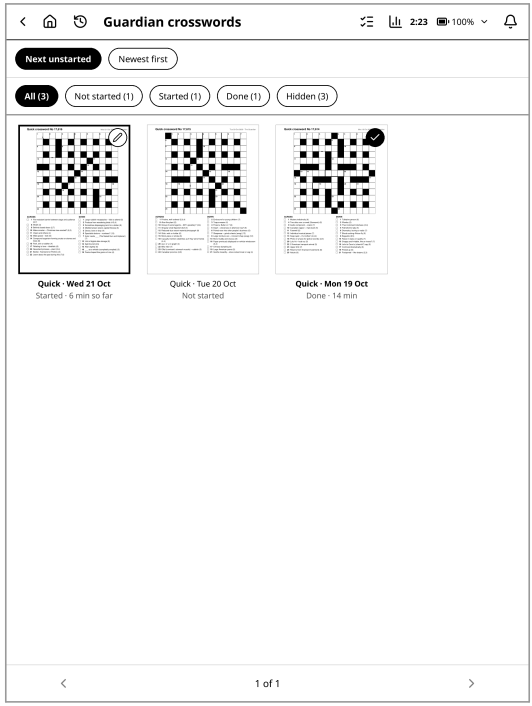

The puzzle list: each puzzle's day, state and time

Hold a puzzle for more:

- **Mark as done** or **Mark as not done**.
- **Hide page** or **Show page**.
- **Clear writing**: rub out everything you wrote on it (after asking).
- **Remove puzzle**: takes its pages, its answers and your writing out of the book. Changed your mind? Tap **Undo** at the bottom of the screen within a few seconds to put it back.

The select button in the title bar (the list with ticks) lets you tick several and mark them done, hide them or clear them together.

To hide the page you're on without opening the list, tap ⋯ **> Hide page**. The page arrows pass hidden pages by.

Finished puzzles

Crossword settings > Finished puzzles decides what happens to puzzles marked done:

- **Keep**: they stay as they are.
- **Hide after 7 days**: a week after you finish, they move to Hidden. Your writing is kept.
- **Remove after 30 days**: a month after you finish, they're removed from the book.

Importing puzzles

A PDF of puzzles

Any PDF works: a puzzle magazine, a scanned book, a printout, with crosswords, sudoku or word searches. Nothing is read from the pages, so scanned pages work too.

1. Copy the PDF to the Kindle (over USB, or with the web page's Files tab).
2. On the Crosswords list, tap **Import**.
3. Pick the PDF.

It becomes a puzzle book in the Crosswords list, each page ready to write on. Done, Hidden, the puzzle list, zoom and Ask AI all work. Answer, Check my answers, clue boxes and tapping numbers need a downloaded or imported crossword, because the Kindle can't read the puzzle out of a PDF's pages.

> Hide a magazine's solution pages (hold the page in the puzzle list > **Hide page**) and the page arrows pass them by.

A .puz or .ipuz file

These are the standard crossword file formats many puzzle sites offer.

1. Copy the file to the Kindle.
2. On the Crosswords list, tap **Import**.
3. Pick the file.

It's laid out just like a downloaded crossword and goes into the **Imported crosswords** book, with an answers page when the file includes the answers. Every crossword feature works on it, except that a file with scrambled answers has no Answer or Check my answers.


Crossword settings

Crosswords has its own settings, full screen like the other apps' settings: tap **Settings** at the bottom of the toolbar in a crossword book, ⋮ **> Settings** on the Crosswords list, or **Crosswords** in the launcher's Settings list. Switches turn things on and off; the others open a list.

- **DISPLAY**
  - **Clue size**: **Normal** or **Large**. Large clues that don't fit carry on to more clue pages; the grid stays put.
  - **Clue boxes**: the tick box before each clue. **On** to start with.
  - **Clue card**: when you tap a number in the grid, a card for **Every clue** (to start with) or for **Clues on other pages** only.
  - **Swipes change the light**: off to start with, so a hand brushing the screen's edge while you solve doesn't change the brightness or warmth (KOReader's light swipes). The same switch as in Notes > Settings.
  - **Notes settings** (at the bottom): crosswords are Notes pages, so the pen, the toolbar, gestures and the rest are set in Notes' settings; this opens them without leaving the puzzle.
  - **Toolbar side**: **Left** or **Right**.
  - **Toolbar buttons**: which of the ⋯ menu's items go on the toolbar (see "Your toolbar buttons").
- **SOLVING**
  - **Tap a number to find it**: tapping numbers to outline clues and squares. **On** to start with.
  - **Timer**: times each puzzle. **On** to start with.
  - **Finished puzzles**: **Keep**, **Hide after 7 days** or **Remove after 30 days**.
- **GETTING CROSSWORDS**

  - **Today's crossword**: the source that Today's crossword, the gesture and the Crosswords tile on the launcher open.
  - **Get new ones automatically**: the sources to fetch for you (see above).
  - **Test connection**: checks that the Kindle reaches each newspaper you get puzzles from (with the launcher installed; also on the web page's Crosswords tab).
- **AI**
  - **Check my answers** and **Hints from the AI**: which AI service each uses. Tap one to change it; it opens the launcher's **Settings > AI**, shared with Notes and SSH. With no service set up, this is one row: **AI services: Not set up**.

When you change Clue size or Clue boxes, your crossword books are laid out again the next time you open them. Your writing is kept.

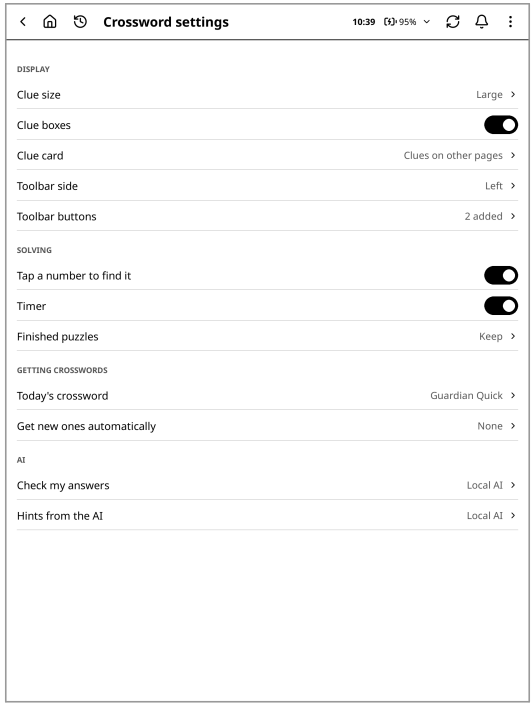


Crossword settings

Crosswords on the web page

With the Web page plugin running, the **Crosswords** tab in your browser lets you manage crosswords from a computer or phone. The Kindle does the downloading, so it needs to be on Wi-Fi.

- Your crossword books, with each puzzle's day, state and time.
  - **Open on Kindle** opens that puzzle on the Kindle.
  - **Remove** takes it out of the book.
- **Get crosswords**: pick a source (and for The Guardian, the kind), tick the days you want (**Older ›** and **‹ Newer** move through them), then tap the **Get** button. Days already in the book say "(in the book)". The Kindle downloads them in the background: the button says "Getting 3…" until they're in, then a message says how many were added. For The Guardian, the list of days can take a moment to appear while the Kindle fetches it.
- **Import PDF, .puz or .ipuz**: upload a file from your computer. A PDF becomes a puzzle book; a .puz or .ipuz goes into Imported crosswords.
- **Crossword settings**: the same settings as on the Kindle.

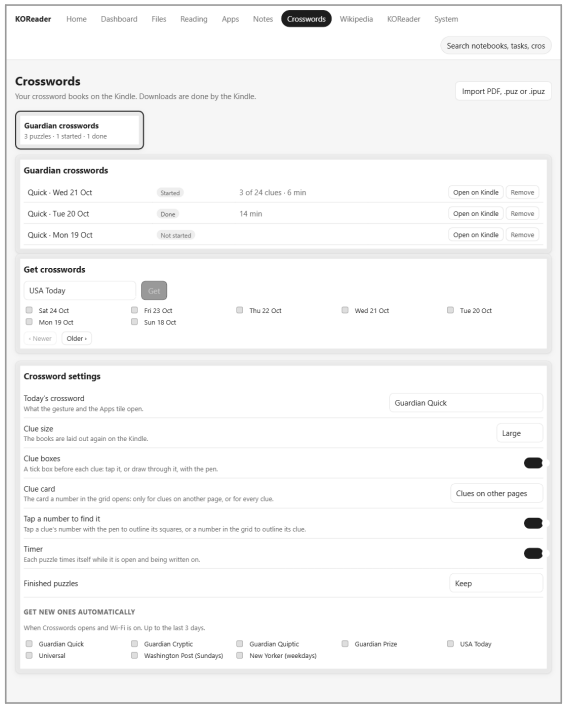

The web page's Crosswords tab

To open it on your phone straight from the Kindle, tap **Open on the web page**: in a crossword book it's in ⋯, and on the Crosswords list it's in ⋮. The Kindle starts the web page if it isn't running and shows a QR code. Scan it with your phone's camera and the Crosswords tab opens there, at the book and puzzle you were on.

> A book that's open on the Kindle can't be changed from the web page. Close it on the Kindle first.

Wikipedia

Search and read Wikipedia on the Kindle, and save articles to read without Wi-Fi. Articles open in KOReader's reader, so your font, size, margins, highlights and the dictionary all work.


Opening Wikipedia

- **Tools > Wikipedia** in KOReader's menu.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Wikipedia**.
- The **Wikipedia** tile on the launcher.
- An article you read before, from **Continue reading**, the launcher's recent books, KOReader's history (unless **Show in recent books** is off in the settings) or the **Wikipedia** folder in the Library: it opens with the Wikipedia toolbar too.


The front page

- The **search box** at the top: type a few words (or write them with the pen) and tap **Search**. Tap a result to read it, or hold it to copy its title and description.
- **Random** opens a random article.
- The title bar is the one every app has. Wikipedia adds **EN**, the language: tap it to choose another. **Refresh** also fetches Today again, and ⋮ has **Open on the web page**.
- An article saved from the web page shows up in **Notifications**; tap it to open the article. It goes from the list once you open or remove the article.
- Swipe in from the left edge to go back, and left or right to turn a list's pages. In an article, the edge swipe goes back to the article before, or the front page.
- Leaving Wikipedia while reading an article goes back to the book you were reading before it, with the launcher on top. Without the launcher there is no house, bell or Recent apps button, and the back arrow on the front page closes Wikipedia.

- The launcher's search finds your saved articles by title.

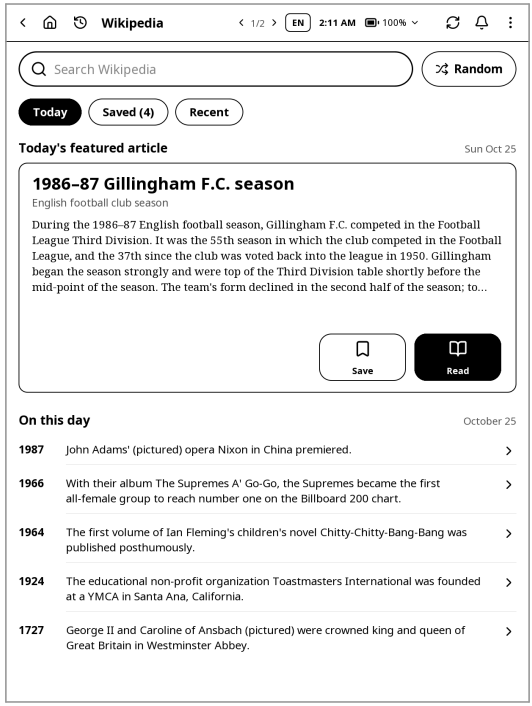

The front page: Today, with the featured article and On this day

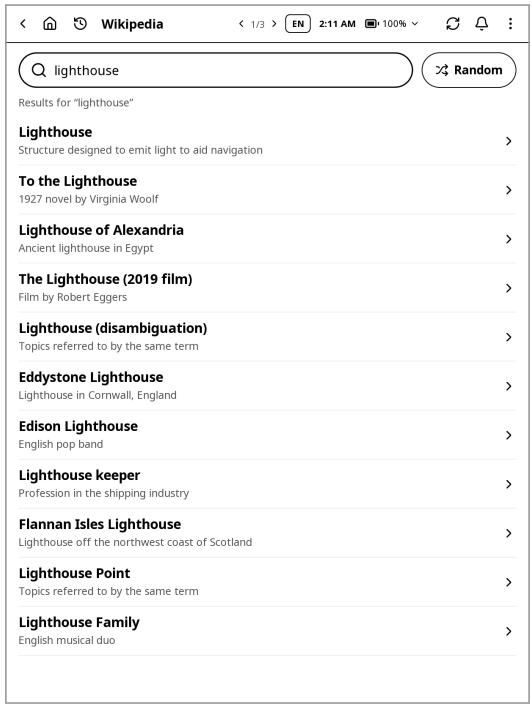

Search results


Today

- **Today's featured article**: tap **Read** to open it, or **Save** to keep it on the Kindle without opening it.
- **On this day**: events from this date in history. Tap one to read its article; when an event mentions several articles, choose one. Hold an event to copy its text. **All events** lists the rest.
- **In the news** and **Most read yesterday** can be added in the settings.
- Today needs Wi-Fi the first time each day (**Loading today's articles...** shows meanwhile); after that it shows without Wi-Fi until midnight.
- Without Wi-Fi, Today shows **Turn on Wi-Fi** and your saved articles.

Saved

- Every article saved on the Kindle, with its size and when it was saved. Saved articles open without Wi-Fi.

- **Newest first** at the top right switches to **By title**.
- Hold an article for **Open**, **Update** (download the latest version), **Open on the web page** and **Remove**.
- **Select** at the bottom picks several articles to remove at once.
- **Remove** takes it off the Kindle at once; **Undo** at the bottom puts it back for a few seconds after.
- Saved articles are EPUB files in the **Wikipedia** folder, so they also show in the Library.

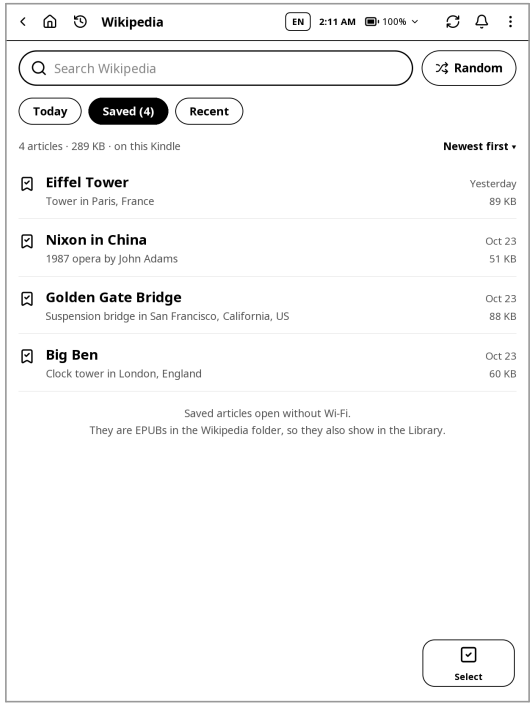


Saved articles

Recent

- Every article you opened, by day, with the page you got to. The bookmark marks the saved ones.
- Tap one to open it again. Articles that aren't saved may need Wi-Fi again.

- Hold one for **Remove from Recent**; **Clear recent** at the bottom clears the list.

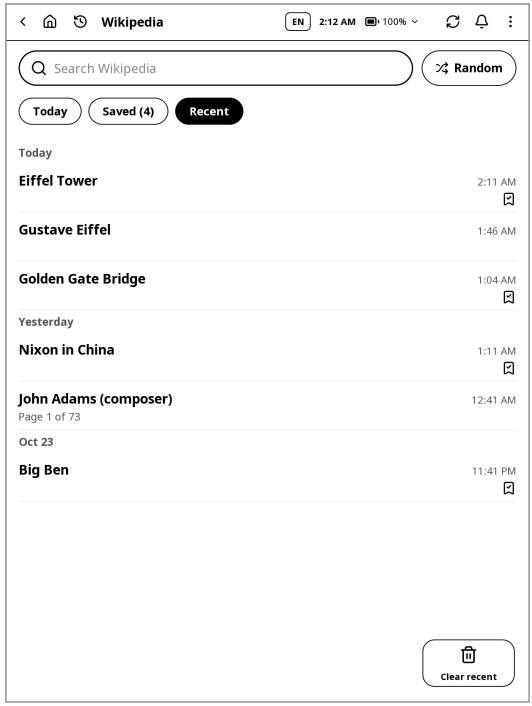

Recent articles, by day


While Wikipedia downloads

- Searching, opening, saving and updating articles, previews and languages download in the background, with a message such as **Opening…**, **Searching…** or **Downloading “Nixon in China”…**. The Kindle keeps responding meanwhile.
- Tap the message to stop (a tap in its first second doesn't count, so the tap that started it can't stop it). A download that is stopped leaves nothing half-saved.
- With Wi-Fi off, KOReader asks to turn it on first.

Reading an article

An article opens like a book, with the Wikipedia toolbar in place of KOReader's status bar. Tap or swipe to turn pages as in any book.

Your reading settings (font, size, zoom, margins, spacing) carry from one article to the next: change them in one article and the next one you open looks the same.

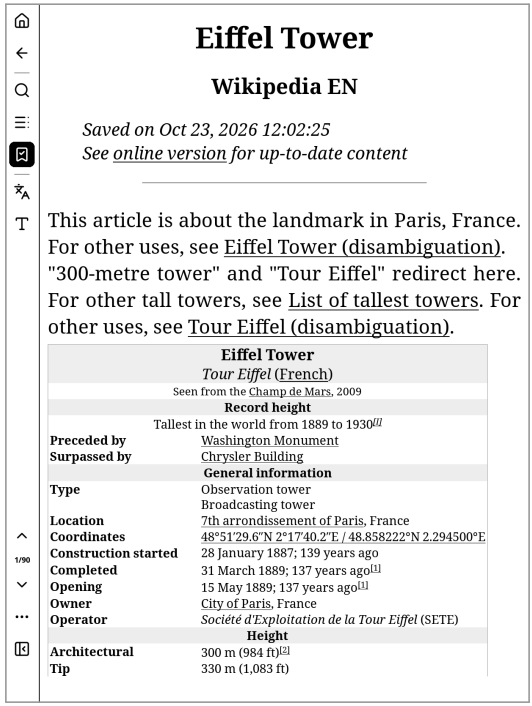


An article with the toolbar on the left: the summary box, then the article

The toolbar


- **Home** (the house): the launcher, as everywhere.
- **Back** (the arrow): the article you came from, on the page you left, or the front page. A swipe in from the left edge does the same.
- **Search**: search Wikipedia for another article.
- **Contents**: the article's sections. The section you are in is marked; tap a section to go there. Tap outside the panel, or swipe in from the left edge, to

close it.

- **Save** (the bookmark): keeps the article on the Kindle. It fills in when the article is saved; tap it again to remove the article from the Kindle (you keep reading it; **Undo** at the bottom puts it back).
- **Language**: the same article in another language, from a list of the languages it's written in.
- **Text** (the T): KOReader's font, size and margin settings.
- At the bottom (or right, with the toolbar at the top): page up, the page you are on, page down.
- **More** (the three dots): **Wikipedia home** (the front page, with the article still open underneath), **Update** (download the article again: its latest version, with or without images as the **Images** setting is now; you stay on the same page), **Open on the web page**, **Wikipedia settings**, **KOReader menu** and **Close Wikipedia** (back to where you were, as the front page's back arrow).
- **Hide toolbar**: gives the page the whole screen. A small tab in the top left corner brings the toolbar back.

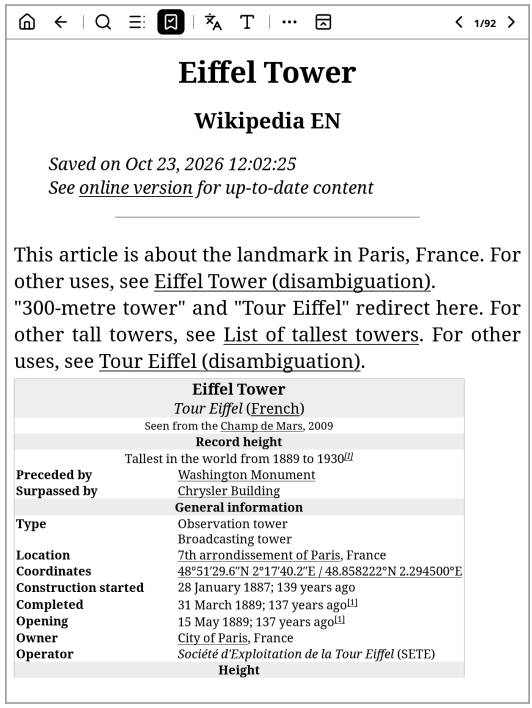


The toolbar across the top (Settings > Toolbar > Top)

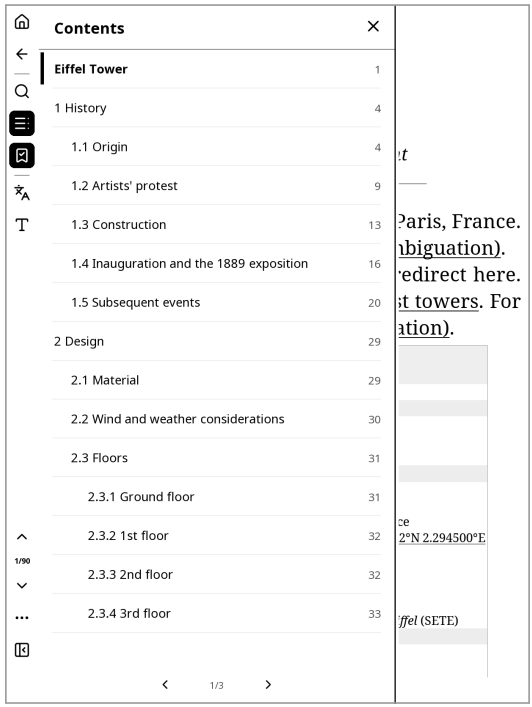

Contents: the article's sections, the one you are in marked

Links and sources

- Underlined words are links to other articles. Tap one to see a short preview, then **Open** to read it, **Save** to keep it for later, or **Copy** to copy the summary. A link to an article you have saved opens straight away, without Wi-Fi.
- The small numbers in brackets are the article's sources. Tap one to see that source at the bottom of the page without losing your place.

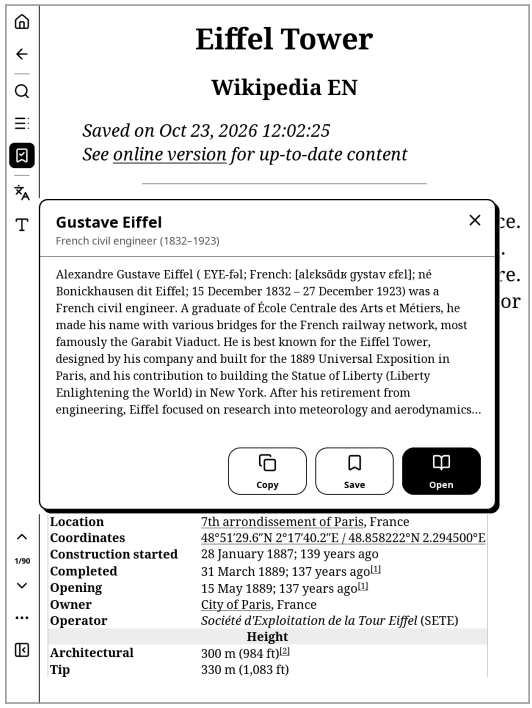

A link's preview, with Save and Open


- The full list of sources is at the end of the article, under **References** in **Contents**.
- Each article starts with Wikipedia's summary box (born, died, location and so on) when the article has one, then its sections one after another.

Settings

The settings are in four sections: **Display**, **Articles**, **Front page** and **Recent**. Open them from ⋮ **> Settings**, **Wikipedia** in the launcher's Settings list, or **More > Wikipedia settings** while reading.

- **Language**: which Wikipedia to use. Search, articles and **Random** work in every language; Today's featured article and On this day only in the languages Wikipedia publishes them in. **Other...** takes any language code, such as **fr** for fr.wikipedia.org.

- **Images**: off by default. With images on, articles take longer to download and saved files are bigger. Turning it on doesn't change articles already on the Kindle: an unsaved one you read before is downloaded again with its images when you open it (with Wi-Fi), and **Update** (in **More** while reading, or by holding a saved article) adds them to any article. Hold a picture to see it full screen.
- **Toolbar**: **Left** (like Notes) or **Top**.
- **Tap a link**: **Preview** shows a short preview first; **Open** opens the article straight away.
- **Save to**: the folder for saved articles (the **Wikipedia** folder in the Library at first). Tap folders to go into them, **Up a folder** to go back up, then **Use this folder**.
- **Front page**: which sections Today shows.
- **Keep recent**: how many articles the Recent list keeps.
- **Clear recent**: empties the Recent list.
- **Show in recent books**: off keeps Wikipedia articles out of the launcher's recent books, **Continue reading** and KOReader's history (Wikipedia's own Recent tab keeps them).
- **Open on the web page**: shows a QR code for the web page's Wikipedia tab.

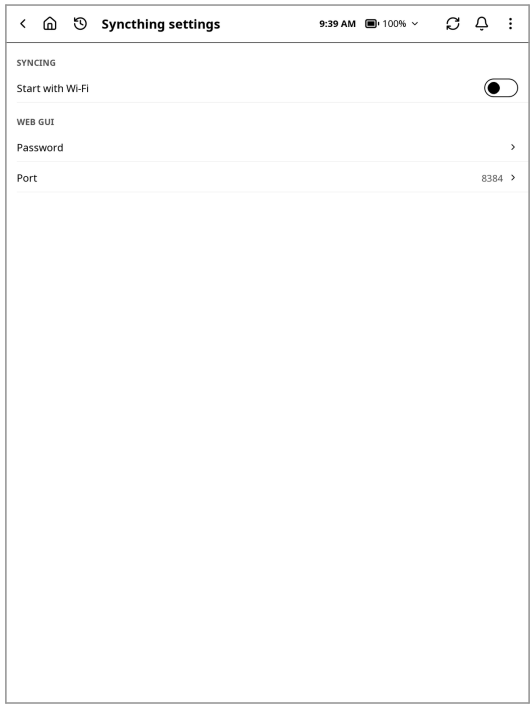


Wikipedia settings

On the web page

The web page's **Wikipedia** tab (with the web server on):

- **Saved on this Kindle**: each saved article with **Download EPUB** (to read it on your computer or phone) and **Remove**.
- **Save an article to this Kindle**: search Wikipedia from your phone or computer (the search goes straight to Wikipedia from your browser) and tap **Save**. The button shows **Saving…** while the Kindle downloads the article over its own Wi-Fi, in the background, so you can keep using the Kindle; then it shows under **Saved** on the Kindle and on the page.
- **Recent on this Kindle**: what you read lately, with **Read on wikipedia.org** and **Save to Kindle**.

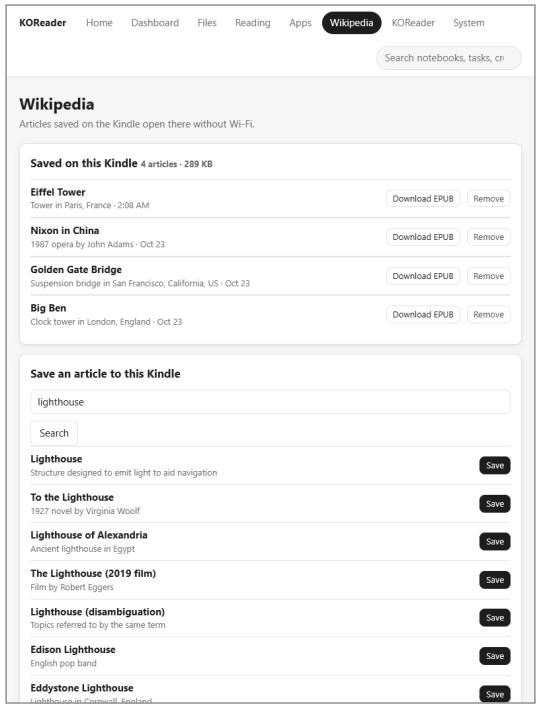


The web page's Wikipedia tab: saved articles, and an article searched to save

Syncthing

Syncthing keeps folders on the Kindle in sync with your computer or phone, directly over Wi-Fi: no account and no cloud. Put a book or a PDF in a shared folder on your computer and it shows up on the Kindle a few seconds later; change something on the Kindle and it goes back the other way.

This plugin is based on **koreader-syncthing** by jasonchoimtt (github.com/jasonchoimtt/koreader-syncthing, AGPL-3.0), with its own app, a launcher tile and a web page tab added. Syncthing itself is made by the Syncthing project (syncthing.net).

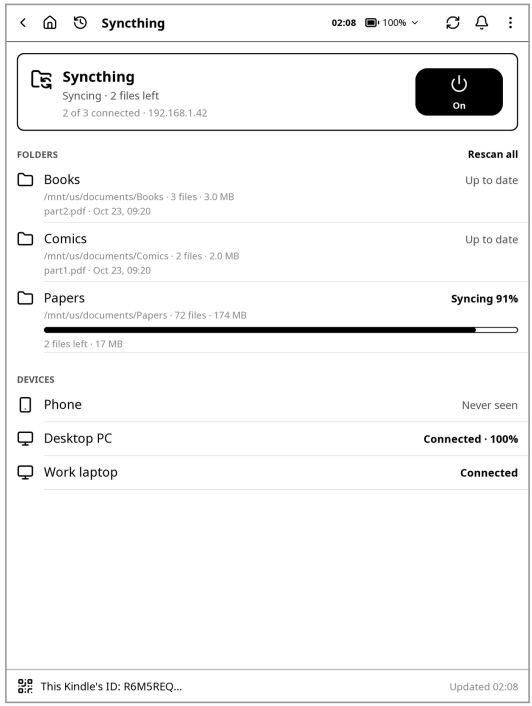

The Syncthing app, with a folder syncing

Opening it

- The **Syncthing** tile on the launcher. Its line says what Syncthing is doing: **On · Up to date**, **On · Syncing · 3 files left**, or **Off**.
- A **Syncthing** quick button on the launcher (add it in **Settings > Launcher > Quick buttons > Add a button > Syncthing...**, or on the web page's Launcher tab): tap it to turn Syncthing on or off (it is black while on), hold it to open the app.
- **Settings (gear) > Network > Syncthing** in KOReader's menu.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > Syncthing** (opens the app) or **Turn Syncthing on or off**.
- The launcher's **recent apps**, its **search** (it finds Syncthing's folders by name or path) and its **Settings** list (**Syncthing** opens Syncthing's settings).
- **Set up your Kindle** in the launcher has a Syncthing step: **Show this Kindle's ID** turns Syncthing on and shows the ID, ready to add from your computer or phone.

The title bar is the same as in the other apps:

- At the left: **‹** goes back (from Syncthing's own page, to the launcher), the house goes to the launcher, and the clock with an arrow shows the recent apps. Then the title.
- At the right: the time and battery (tap them, or the small ▾, for the control center: light, Wi-Fi, night mode and more), ⟳ (reads the status again and redraws the screen; the app also reads it by itself every few seconds while it is open), the bell (notifications, with how many are new) and ⋮.
- When a list has more than one page, **‹ 1/2 ›** shows in the bar; tap its halves to turn pages.

A swipe in from the left edge of the screen goes back, as in the other apps; other swipes turn pages.

New requests and folders with errors also show in the shared notifications (the bell), so you see them from the other apps too. Tap one to open Syncthing; it goes away once the request is accepted or ignored, or the error is fixed.


Setting it up

You need Syncthing on the other device too: **syncthing.net** for a computer, or Syncthing-Fork on Android.

1. Tap the power button (**Off**) at the right of the Syncthing box to turn it **On** (it turns black). The first start takes a few seconds (**Starting…**).
2. Tap **This Kindle's ID** at the bottom. The Kindle shows its ID as a QR code.
3. In Syncthing on your computer or phone, choose **Add Remote Device** and scan the code or type the ID.
4. On the Kindle, the computer shows up under **Requests**: "Desktop PC wants to connect". Tap **Accept** and give it a name (it suggests the computer's own name).
5. On the computer, share a folder with the Kindle (in the folder's **Sharing** tab, tick the Kindle).
6. On the Kindle, the folder shows up under **Requests**: "Desktop PC shares “Papers”". Tap **Accept** and check where it goes. It starts in your home folder (for example `/mnt/us/documents/Papers`), so it shows in the Library. Tap **Add**.

The folder syncs straight away.

Not set up? Nothing else on the Kindle needs Syncthing: it stays off (the tile says **Off**) until you turn it on. Copy books using the web server feature instead; if you prefer a physical connection, exit KOReader and connect your Kindle via USB. **Set up your Kindle** in the launcher can skip this step; set up Syncthing any time later from the app.

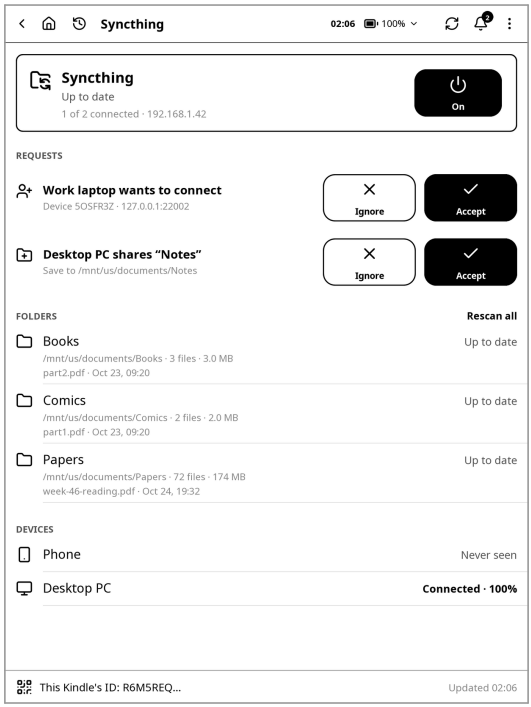

Requests: a new device and a shared folder

Ignore on a request means Syncthing won't ask about that device or folder again. **Undo** at the bottom of the screen takes it back for a few seconds; to change your mind later, use Syncthing's own web page (see the menu below).

The app


- **The Syncthing box**: what Syncthing is doing ("Up to date", "Syncing · 2 files left", "Scanning Books", "Errors in Papers", "No devices connected"), how many devices are connected, and the Kindle's address on the Wi-Fi. The power button (**On** / **Off**) starts or stops it.
- **REQUESTS**: only when a device wants to connect or shares a folder (see above).
- **FOLDERS**: each folder with its state: **Up to date**, **Syncing 42%** (with a progress bar and what's left), **Scanning**, **Paused**, or **Out of sync** (some files couldn't be synced: see **Details**). Under the name: where it is, how many files

and how big, and the last file that changed. **Rescan all** looks for changes in every folder now (Syncthing also does that by itself every hour, and sooner for changes made on the Kindle).

- **DEVICES**: your other devices: **Connected** (with how much of what you share it has, such as "Connected · 100%"), **Paused**, or when it was last seen.
- **At the bottom**: **This Kindle's ID**, and when the status was last read.

When Syncthing is off, the folders and devices still show, so you can see what will sync.

Tapping a folder

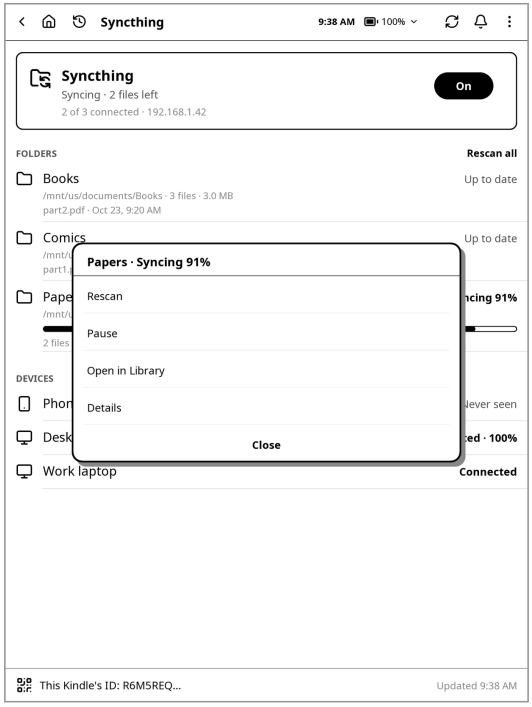

A folder's menu

- **Rescan**: look for changes in this folder now.
- **Pause** / **Resume**: stop syncing this folder for now.
- **Open in Library**: the folder in KOReader's file browser.

- **Details**: where it is, its files and size on the Kindle and in all, errors, when it was last scanned, the devices it's shared with, and its folder ID, with **Copy** (the text), **Open** (in the Library) and **Done**.

Tapping a device

- **Pause** / **Resume**: stop syncing with this device for now.
- **Details**: its device ID, its address and Syncthing version while connected, what it still needs, and when it was last seen, with **Copy** (its device ID), **Pause** (or **Resume**) and **Done**.


This Kindle's ID



This Kindle's ID


The QR code and the full ID, to add the Kindle from Syncthing on another device. **Copy** puts the ID on the clipboard (to paste it in another app on the Kindle); **Done**, or a tap outside the box, closes it.

The menu

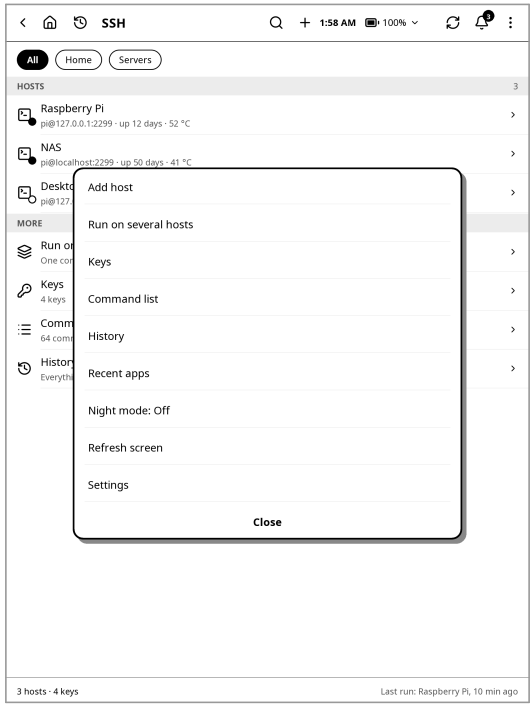

The menu

- **This Kindle's ID**: as at the bottom of the screen.
- **Web GUI**: the address of Syncthing's own web page (such as `192.168.1.42:8384`), for settings that aren't in the app: folder types (Send Only, Receive Only), ignore patterns, versioning, ignored devices and folders, and more. Open it in a browser on the same Wi-Fi. The user name is `syncthing`; set a password first. **Copy** copies the address; **Password** sets the password.
- **Help**: a short version of the setup above, with **Copy** and **Kindle ID** (the QR code).
- **Recent apps**, **Light**, **Night mode** and **Refresh screen**, as in the other apps.
- **Settings**, always last: a full page like the other apps' settings (**‹** goes back to the app). The same page opens from the launcher's **Settings** list, under **Syncthing** (then **‹** goes back there):

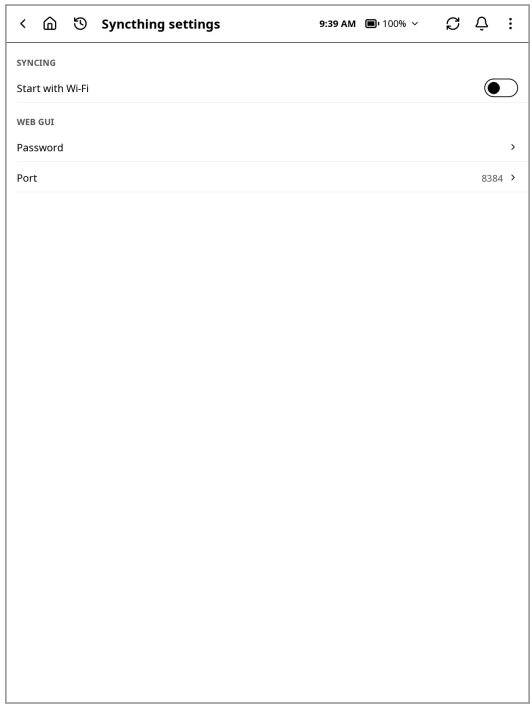

Settings

- **Start with Wi-Fi** (a switch): when on, Syncthing starts by itself whenever the Kindle's Wi-Fi connects, and stops before Wi-Fi goes off. If you turn Syncthing off by hand, it stays off until Wi-Fi connects again.
- **Password** (under WEB GUI): sets that password (Syncthing must be on).
- **Port**: the web GUI's port, 8384 unless something else uses it. Change it while Syncthing is off.

On the web page

The web page (see the Web server chapter) has a **Syncthing** tab with the same things, handy with a keyboard:

- **Turn on** / **Turn off**, **Rescan all**, and **Start with Wi-Fi**.
- **This Kindle's ID** with **Copy**, to paste into Syncthing on your computer.
- **Requests** with **Accept** (a name for a device; for a folder, where it goes on the Kindle) and **Ignore**.

- **Folders** with their state and a progress bar while syncing, **Rescan** and **Pause** / **Resume**.
- **Devices** with their state and **Pause** / **Resume**.
- A link to Syncthing's own web page.

While Syncthing is on, the tab updates itself every 5 seconds. The web page's **Dashboard** tab also shows Syncthing's state and any requests.


Good to know

- **Nothing syncs while the Kindle sleeps**: Wi-Fi is off then. Leave the Kindle awake (on the launcher or in a book) with Wi-Fi on while a big folder syncs.
- **Battery**: Syncthing uses some battery while it runs. **Start with Wi-Fi** keeps it off whenever Wi-Fi is off.
- **Leaving KOReader** doesn't stop Syncthing. Turn it off first if you don't want it running behind the Kindle's own home screen.
- **Same Wi-Fi**: the Kindle finds your devices on the same Wi-Fi by itself. Elsewhere it can still connect through Syncthing's relays, more slowly.
- **Files open in KOReader**: if a book changes on the computer while it is open on the Kindle, close and open it again to see the new version.
- This Syncthing app took the place of the earlier Syncthing plugin: the Kindle kept its device ID, its folders and its devices.

SSH

SSH connects the Kindle to your other devices (a PC, a NAS, a Raspberry Pi) so you can run commands on them and read what they print. Save a device once, with a key or a password, then run a saved command with one tap, type your own, or open a live session.

It uses KOReader's own SSH program (`dbclient`, which comes with KOReader for Kindle). Everything is kept on the Kindle in KOReader's settings folder (`koreader/settings`).

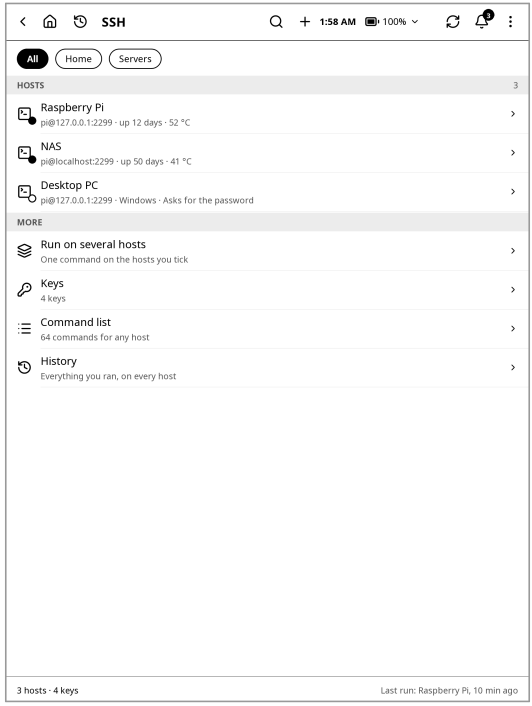


SSH: the saved hosts

Opening it

- The **SSH** tile on the launcher. Its line says how many hosts are saved.
- **Settings (gear) > Network > SSH** in KOReader's menu.
- A quick button on the launcher or in the control center: **Settings > Launcher > Quick buttons > Add a button > SSH commands...**, then a host's saved command (a tap runs it and shows the output) or a host's **Status** (it shows the host's stats, such as "NAS · up 12 days · 71 % disk"; a tap reads them again). A hold opens its host in SSH.
- A gesture: **Settings > Taps and gestures > Gesture manager**, pick a gesture, then **General > SSH** (opens it) or **SSH: run a saved command** (pick which; it runs straight away and shows the output).

SSH's pages have the apps' title bar (‹ Back, ⌂, recent apps, the time and battery, ⟳, 🔔 and ⋮) and a swipe right from the left edge goes back. SSH's own items in ⋮ are **Add host**, **Run on several hosts**, **Keys**, **Command list** and **History**, and **Settings** last. The launcher's search finds your hosts (they open their page) and their saved commands (they open in the host's command box, to check before you run them).

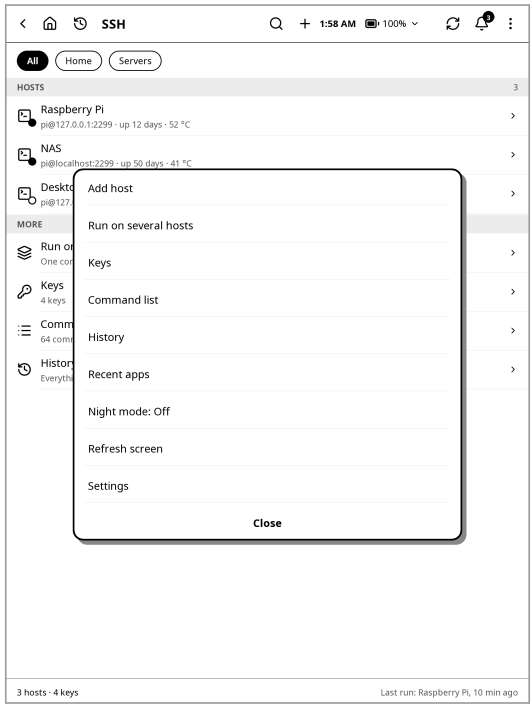

The ⋮ menu

Adding a host

1. Tap **Add host**.
2. Type your user name on the device and its address, as `user@address`: for example `pi@192.168.1.20` or `admin@nas.local`. Add `:port` when it isn't 22 (`admin@nas.local:2222`). **Name** gives it a name of your own (for example "Raspberry Pi"); without one it shows the address. Tap **Next**. (Without the launcher, the Kindle asks for **Name**, **Address**, **User** and **Port** one under the other instead.)
3. Choose how to sign in:
   - **Key**: a key on the Kindle (see Keys below). The safest choice, and you never type a password.
   - **Password**: saved on the Kindle, in KOReader's settings folder.
   - **Ask for password**: the Kindle asks every time you connect.

The device needs an SSH server: on Linux and a Raspberry Pi it is usually there (`sudo apt install openssh-server`); on Windows, add **OpenSSH Server** in **Settings > System > Optional features**; on a Mac, turn on **Remote Login** in **System Settings > General > Sharing**.


You can also add and edit hosts on the web page (see below), which is easier with a computer keyboard.

The host's system

Each host has a **System** (in **Edit host**): Debian/Ubuntu, Raspberry Pi OS, Fedora/RHEL, Arch, openSUSE, Alpine, Other Linux, Windows, macOS, FreeBSD, pfSense, TrueNAS, TrueNAS CORE, Proxmox VE or ReadyNAS OS. It starts as **Detect automatically**: the first time the Kindle connects, it reads `/etc/os-release` on the device (or sees a Mac, Windows, FreeBSD, pfSense, TrueNAS, Proxmox or ReadyNAS) and shows **Auto: Debian/Ubuntu**, for example. Set it by hand when it guesses wrong. **Commands** then shows the commands for that system first (see below).

Trusting a host

The first time the Kindle connects to a host, it shows the host's key fingerprint and asks **Trust this host?** Tap **Trust**. The Kindle remembers the key, and next time it connects without asking.

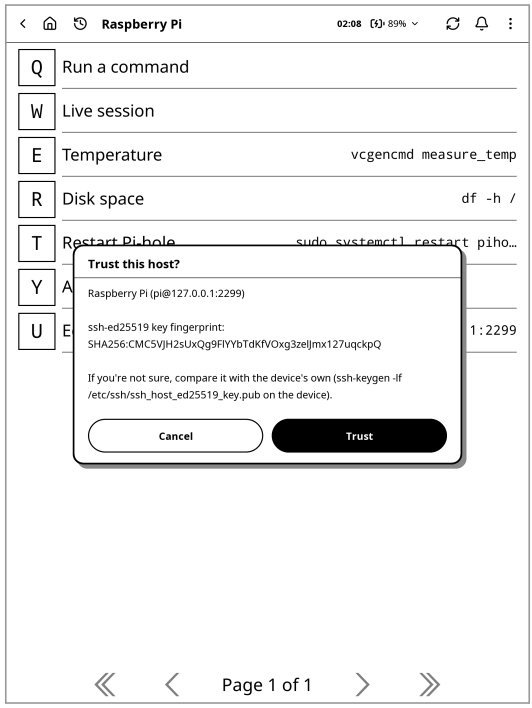

Trust this host?

If a host's key changes later (it was reinstalled, or got a new address), the Kindle says **The host key of … has changed** and doesn't connect. If you know why it changed, tap **Trust new key**. If you don't, tap **Cancel**: someone could be pretending to be your device.

Edit host > Forget host key removes a saved key, so the Kindle asks again next time.

The SSH page


The SSH page lists your hosts. Each one shows a dot when SSH last checked it: filled when the host answered, a ring when it didn't (the check only knocks on its SSH port, without signing in). Its second line has its address and, once its status has been read, two of its stats, such as "up 3 days · 52 °C" (turn that off in **SSH settings**). Below the hosts: **Run on several hosts**, **Keys**, **Command list** and **History**. **+** in the title bar adds a host and 🔍 searches History. The line at the

bottom says how many hosts and keys there are and what ran last.

Groups: give hosts groups (Home, Servers…) in **Edit host > Groups**. The SSH page then shows them as chips at the top: tap one to show only that group's hosts, or **All**. In **Run on several hosts**, a group's chip ticks all its hosts at once.

A host's page

Tap a host to open its page. Its first line is its address, its system, how it signs in, and whether its host key is trusted.

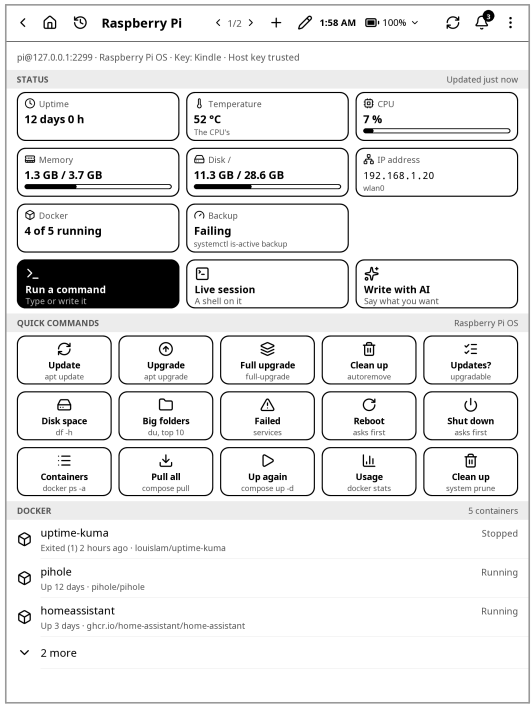

A host's page

- **Status**: tiles with what the host is doing now: uptime, temperature, CPU, memory, disk, IP address, and more if you choose (see **Stats and alerts**). It's read when the page opens (when the Kindle is on Wi-Fi and the host needs nothing asked) and with ⟳. "Updated 2 min ago" says when. A host that asks for its password, or whose host key isn't trusted yet, waits for ⟳. Tap the **Docker** or **Services** tile for their pages.

- **Run a command**, **Live session** and **Write with AI** (with an AI set up).
- **Quick commands**: the usual ones for the host's system, a tap each (see **Quick commands**).
- **Docker**: when the host has Docker, its containers, stopped ones first (see **Docker**).
- **Services**: failed services, and the ones you show here (see **Services**).
- **Your system's own sections**, when the host has them (each can be turned off in **Stats and alerts**):
  - **TrueNAS**: **Alerts**, **Apps** with their version and updates (Update, Get the newer image, Start, Stop, Redeploy, Open a shell, Logs), **VMs and containers** (Start, Stop, Restart; Open a shell in a container), **SMB shares**, **Rsync tasks** (Run now), **Snapshot tasks** (Take a snapshot now) and **Replication** (Run now).
  - **Proxmox**: **VMs and containers** with each one's CPU, memory and disk (Start, Shut down, Reboot, Stop, Back up now, **Open a shell** in a container or a VM's console, **Run a command in it** (a VM needs the QEMU guest agent), **Memory** and **CPU cores**), **Storage**, **Backups**, the **Node** (CPU, memory, version, cluster and quorum) and **Failed tasks**.
  - **ReadyNAS**: its **SMB shares**.
  - **Pools and disks** (ZFS, ReadyNAS volumes, SMART): each pool's health, space and last scrub; each disk's model, size and temperature.
  - **Updates and logs** (Debian, Arch and others): updates waiting (**Update everything**), the package cache (**Empty it**), errors since it started, and the log size (**Remove logs older than 2 weeks**).
  - **Raspberry Pi**: low voltage or throttling, now or since it started, and **Camera**, **I2C**, **SPI**, **SSH**, **VNC** and **Serial port** to turn on or off (raspi-config's own; some after a restart).
  - **pfSense**: firewall states, DHCP leases, gateways, VPNs, each interface's traffic, and **Check for updates**.
  - **3D printer** (Klipper with Moonraker on the printer): the file, progress, nozzle and bed, with **Pause**, **Resume** and **Cancel the print**.
- **Saved commands**: tap one to run it; hold for more. **+** in the title bar adds one.

- **Recent**: the last commands you ran here, with when. **All recent commands** has the last 10.
- **Files** and **Stats and alerts**.
- **Wake**: when the host doesn't answer and its MAC address is known, a **Wake** tile sends Wake on LAN (see **Wake on LAN**).

The pencil in the title bar is **Edit host**: name, address, user, port, system, sign-in and password; **PIN**; **Groups**; **Stats and alerts** and **Quick commands**; **MAC address** and **Wake it now**; **Forget host key** and **Delete host**.

PIN (optional, off until you set one): **Set a PIN** (4 to 8 digits) in **Edit host**. The host then asks for it before its page or a live session opens, and before its saved commands run from a gesture or the launcher; once typed, it's open for 5 minutes. After 5 wrong tries, wait a minute. **Remove PIN** turns it off.

App PIN (also optional): **SSH settings > Set an app PIN** asks for a PIN when SSH opens, and before a host's page, a live session or a command opened from outside it (the launcher, a gesture). Once typed, it's open for 5 minutes. A host with its own PIN asks for that one too. ⋮ **> Lock now** (with any PIN set) asks for them all again at once.


Run a command: type a command and tap **Run**. **Commands** pastes one from your lists (see below), and **Save** keeps the command on this host. With handwriting set up (**Settings > AI**), tap the pen at the end of the box to write the command instead; without the launcher, it's **Write it**. Names and the AI's question boxes have the pen too; addresses, user names, ports and passwords don't, as they need exact values.

Add saved command: the command in the box (or written with the pen), **Name** and **System** to set its name and system (shown under the title), then **Save**. Editing a saved command looks the same, with **Delete**.

Commands with blanks: a command can have blanks in braces, such as `sudo systemctl restart {service}` or `docker logs {container}`. When it runs, SSH asks for each blank, offering what fits from the host: its services, its containers, the compose folder.

Stats and alerts

Stats and alerts (at the bottom of a host's page, or a tap on **STATUS**) chooses what the host shows and when you hear about it.

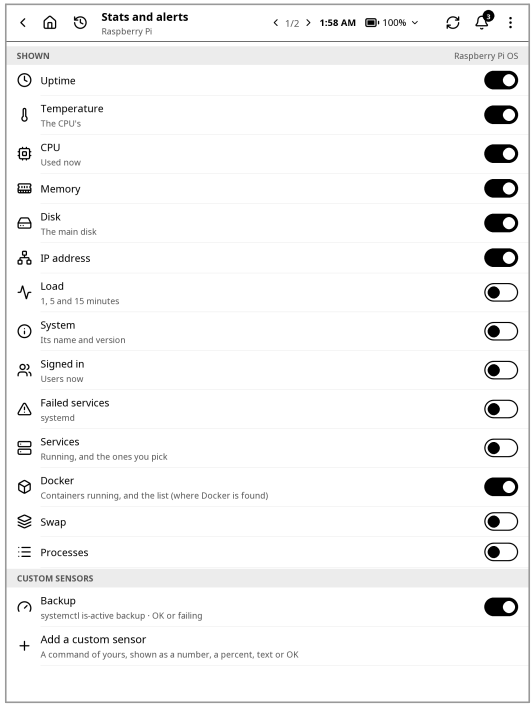

Stats and alerts

- **Shown**: a switch for each stat the host's system can give: Uptime, Temperature, CPU, Memory, Disk, IP address, Load, System, Signed in, Failed services, Services, Docker, Swap, Processes. A PC often has no temperature: a stat on by default that the host can't give is left out; one you turn on shows "Not available".
- **Custom sensors**: **Add a custom sensor**: a name, a command of yours, and what it gives: **A number** (with a unit, such as °C or GB), **A percent** (with a bar), **Text** (its first line), or **OK or failing** (whether the command succeeds). It shows as a tile with the others. Hold one to edit or delete it. (Linux and Mac; not Windows.)

- **Checks**: **Check it**: how often SSH reads this host's status by itself, or **Like every host** (**SSH settings > Check hosts**, every 15 minutes at first). Checks run while the Kindle is awake and already on Wi-Fi; they never turn Wi-Fi on. A host that doesn't answer is tried again at its next check, not sooner; after 3 checks in a row without an answer, its checks pause ("Checks paused" on the SSH page and its page) until you read it yourself (open its page or tap ⟳) and it answers. **Read when its page opens** can be turned off.
- **Alerts**: a notification (🔔) when something needs a look: **Disk full**, **Memory used**, **CPU busy** and **Temperature** over a limit you pick, **A service failed**, **A container stopped**, and limits on your custom sensors. It comes once when it starts and goes when it's over.
- **Custom alerts**: **Add a custom alert**: any stat or custom sensor, a test (**above**, **below**, **is**, **isn't**, **contains**) and a value. For example "IP address isn't 192.168.1.20", "Load (1 minute) above 4" or "Backup is Failing".
- **Docker**: **Compose folder**: the folder with your `docker-compose.yml`, for **Pull all** and **Up again**.

Quick commands

A host's page has the usual commands for its system as buttons. For Debian, Ubuntu and Raspberry Pi OS: **Update** (apt update), **Upgrade**, **Full upgrade**, **Clean up** (autoremove), **Updates?** (what can be upgraded), **Disk space**, **Big folders**, **Failed** (services), **Reboot** and **Shut down**. Arch, Fedora, openSUSE, Alpine, macOS and Windows get their own (pacman and yay, dnf, zypper, apk, Homebrew, winget), and so does FreeBSD (freebsd-update, pkg). With Docker, its own come too.


pfSense: **Updates?** (pfSense-upgrade -c), **Upgrade** (asks first, then runs in a live session, as it takes a while and restarts the firewall), **Firewall** (pfctl -si), **Rules**, **Reload rules**, **Web GUI** (restarts the web interface), **Routes**, **Disk space**, **Ports**, **Top**, **Reboot** and **Shut down**. Sign in as admin (or root): pfSense has no sudo. A live session on pfSense opens its console menu; type 8 for its shell. A command sent to a live session (Upgrade, **Run in a live session**) picks 8 for you.

TrueNAS (SCALE or Community Edition; sign in as admin): **Pools** (zpool status -x), **Pool space**, **Datasets**, **Alerts** (TrueNAS's own, with sudo), then Linux's.

Scrub ({pool}) is in **Choose quick commands**. Updates come from TrueNAS's web page: apt is turned off there. **TrueNAS CORE** (FreeBSD; root) has the same, with FreeBSD's.

Proxmox VE (root): **Update**, **Updates?**, **Upgrade** (apt dist-upgrade, in a live session, as it can ask about config files), **VMs** (qm list), **Containers** (pct list), **Storage**, **Version**, then Linux's without sudo. **Start VM** and **Stop VM** ({vmid}) are in **Choose quick commands**.

ReadyNAS OS (root): **RAID** (/proc/mdstat), **Volumes** (btrfs), **Disk health** (SMART of each disk), then Linux's without sudo. Updates come from its web page.

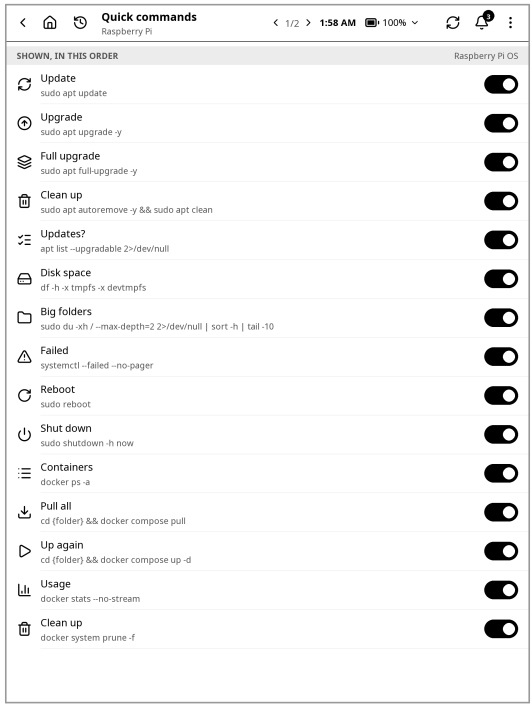


Quick commands

- A tap runs it. One with sudo opens in a live session, where sudo can ask for its password. **Reboot**, **Shut down** and Docker's **Clean up** ask first.
- Hold one for **Run**, **Edit and run**, **Save as command** and **Choose quick commands**.

- **Quick commands** (from a hold, or **Edit host**): tap a row to show or hide it, hold to move it up or down. **New quick command** makes your own: a short name, a command, and an icon. **Add one of your commands** takes one from the host's saved commands or the command list. **Back to the usual ones** undoes your changes.

Docker

When a host has Docker, its page has a **Docker** section: its containers with their state (stopped ones first), and **N more** for the rest. The **Docker** page has them all, with **Containers**, **Pull all**, **Up again**, **Usage** (CPU and memory of each) and **Clean up** (removes stopped containers and unused images).

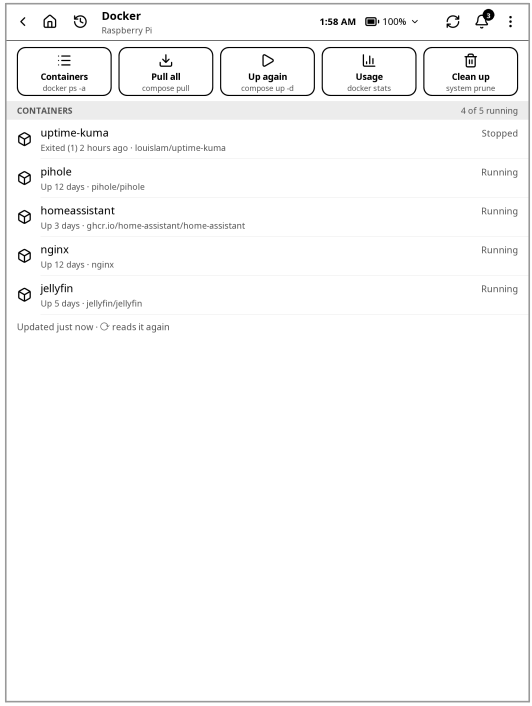

Docker


Tap a container for **Start**, **Restart**, **Stop**, **Logs** (the last 100 lines), **Explain with AI** (it reads the logs) and **Live session in it** (a shell inside the container). When Docker needs sudo on the host, SSH says so, and its commands open in a live session.

Services

On a Linux host with systemd, the **Services** section shows failed services, and the ones you show there. **All services** lists every one, with **All**, **Running** and **Failed** at the top. Tap one for **Start**, **Restart**, **Stop**, **Status**, **Logs** (the last 100 lines) and **Show on the host's page**. Start, Restart and Stop use sudo, so they open in a live session.

Files

Files browses the host's folders, starting in your home folder (⌂ in the title bar goes back there). Tap a folder to open it, **Up one folder** to go back. Tap a file for:

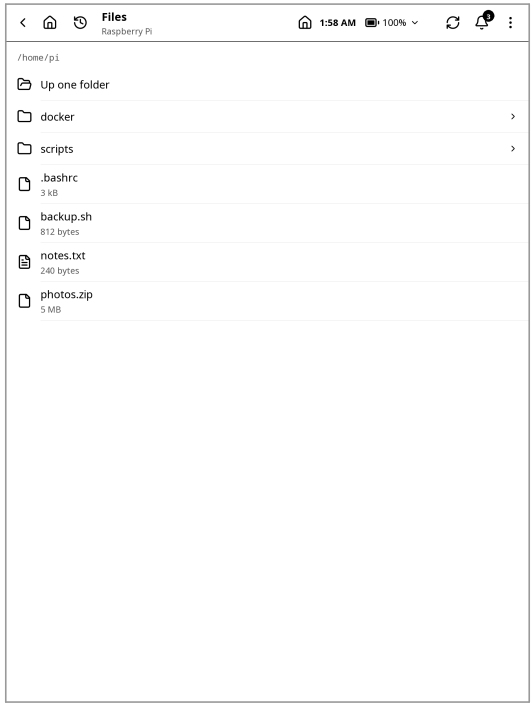


Files

- **Edit**: the file in the Kindle's text editor (up to 1 MB). **Save** writes it back to the host. A file only root can change is saved with sudo: SSH asks for the sudo password (a saved SSH password is filled in), or uses none when sudo allows

it. The editor has the apps' title bar, and **Line**, **Find**, **Keyboard**, **Close** and **Save** at the bottom. Hold the text to **Copy**, **Select** (tap the start, hold the end: then **Copy** or **Delete**) and **Paste**.

- **Read it**: the file (its first 300 KB) in the output page.
- **Copy to the Kindle**: books (EPUB, PDF, MOBI...) go to the Kindle's books folder, other files to its Downloads folder.
- **Explain with AI** (a text file, with an AI set up): its last 300 lines.
- **Copy its path**.

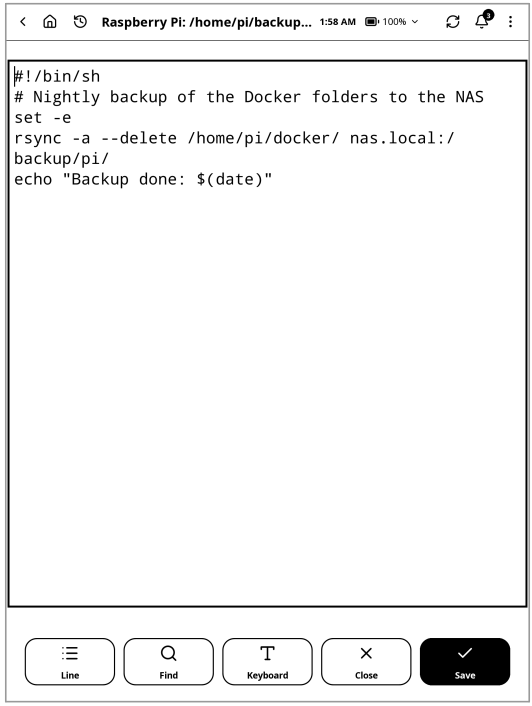


Editing a file

Wake on LAN

A PC or NAS that's off or asleep can be woken from the Kindle, when its network card allows it (Wake on LAN on in its BIOS or settings). SSH reads its MAC address with its status, or you can type it in **Edit host > MAC address**. Then **Wake** (on its page when it doesn't answer, in **Edit host**, or a hold on the host)


sends the wake-up packet on your Wi-Fi.

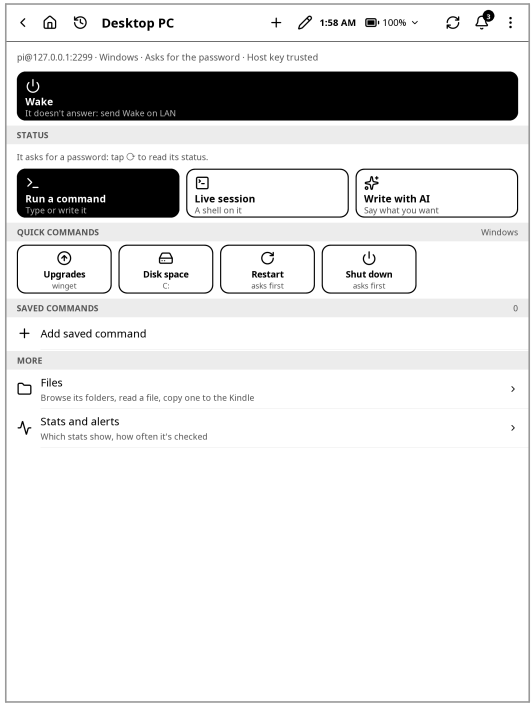

A host that doesn't answer

History

History (on the SSH page, or 🔍) has everything you ran, on every host, newest first, with where and when. 🔍 searches it (a command, or a host's name). Tap one to open it in that host's command box; hold for **Run again**, **Run on another host**, **Save** and **Copy text**.

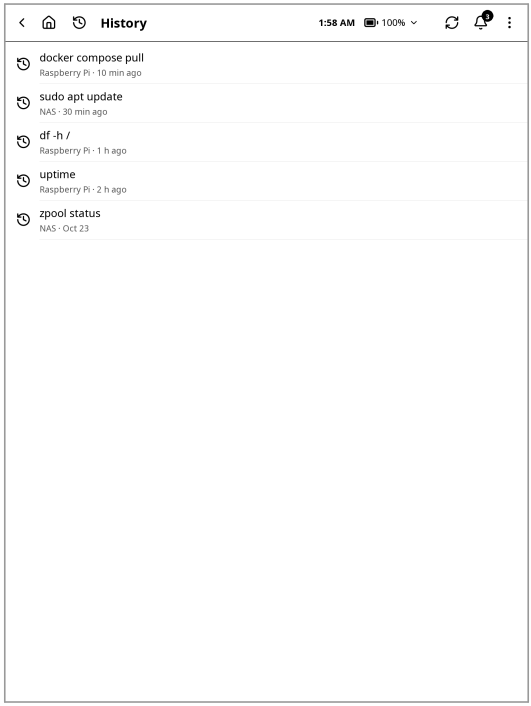

History

SSH settings


⋮ **> Settings** (or the launcher's **Settings > SSH**): **Check hosts** (how often every host's status is read: off, or every 5, 15, 30 or 60 minutes, or every 3 hours), **Stats under each host** on the SSH page, **Dark terminal**, **Text size** (the live session's text, 10 to 24; the next session opens with it), and **AI settings**.

Running a command

While a command runs, the Kindle shows **Running on …**; tap **Stop** to stop it. Commands stop by themselves after 5 minutes. The Kindle keeps working meanwhile: the connection runs in the background.

The output opens in a pop-up over the host's page, in a monospace font whose size follows **SSH settings > Text size**. Drag the pop-up by its title bar; tap ✕ or outside it to close it. Its buttons: **Copy all**, **Explain** and **Summarize** (with an AI

set up), **Run again**, **Live session** (a live session on the same host) and **Full screen** (the output on a full page, with **Find**). Hold a quick command and pick **Run full screen** to go straight to the full page. Output from several hosts at once opens on the full page. Colour codes are removed. If the command failed, the end says why: **Exit status 1**, **Can't sign in** (check the user name, password or key), or **Can't connect** (check the address, and that the device is on).

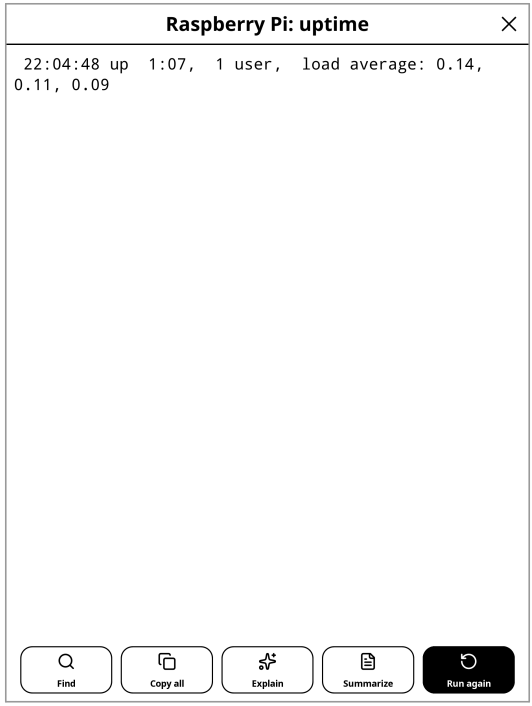

The output of a command

A long output is in pages: swipe, or tap either side of ‹ n/m ›. The buttons at the bottom:

- **Find**: type a word; it shows where it is. **Find** again with the same word goes to the next one.
- **Copy all** copies the whole output to KOReader's clipboard.
- **Explain** and **Summarize** (with an AI set up): see **AI help** below.
- **Run again** runs the same command again.


Long-press a word to copy it, or long-press and drag to copy a part. ✕ or the Back key closes the page. (Without the launcher, the output page is KOReader's, with **Find**, ⇱ and ⇲ to jump to the top and bottom, and **Close**.)

Commands that use `sudo` usually ask for a password, which a command run this way can't answer. Use them in a live session, or set up passwordless sudo on the device. When a run stops because sudo wanted a password, SSH says **sudo needs a password** and offers **Run in a live session**: the same command, typed into a live session, where sudo can ask for it.

A command that takes a minute or more is also kept in **Notifications** (🔔): "Command finished on NAS: sudo apt full-upgrade -y", or "Command failed on …" (one per host: the next one, or opening that host's output, takes it away). Tap it to see the output again.


Commands

Commands in the command box (and in a live session) lists, in order:

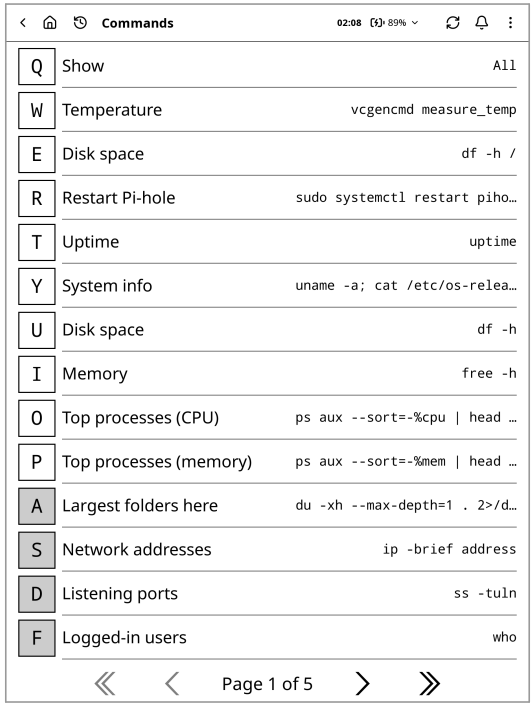

Commands to paste

- **Show**: which of the command list's commands are shown. It starts on the host's system (**This host: Debian/Ubuntu**); tap it for **All**, **Custom** (your own commands) or another system.
- **Paste**: what's on KOReader's clipboard (from **Copy text**, **Copy all** or elsewhere in KOReader).
- This host's saved commands, then its recent commands.
- The **Command list**'s commands that fit (those for the system, for any Linux, and for any system; a Raspberry Pi also gets the Debian ones).

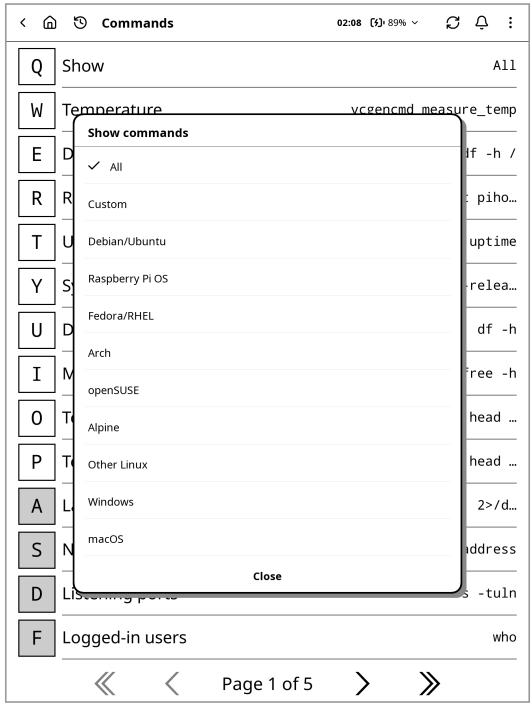

Show: which commands

Tapping one pastes it where you type, so you can change it before you run it.

The command list

Command list (on the SSH page) comes with over 100 built-in commands:

- **Any Linux**: Uptime, System info, Disk space, Memory, Top processes (CPU and memory), Largest folders here, Network addresses, Listening ports, Logged-in users, Temperature, Failed services, Service status, Restart a service, Recent errors, Restart, Shut down.
- **Docker** (containers, disk use, Compose status and update) and **ZFS** (pool status and space, for TrueNAS and others).
- **Debian/Ubuntu**: apt update, updates, update and upgrade, install a package, search packages, clean up, restart needed?
- **Arch**: updates, sync package lists, upgrade, install a package, search packages, package info, explicitly installed, orphan packages, clean package

cache, and with **yay** (the AUR helper): updates, upgrade, search and clean cache.


- **Fedora/RHEL**, **openSUSE** and **Alpine**: updates, upgrade, clean up and (Fedora) restart needed?
- **Flatpak** and **Snap** updates, **Raspberry Pi** temperature and throttling.
- **Windows** (system info, running programs, disk space, restart, shut down) and **macOS** (updates, battery, restart).
- **FreeBSD**: packages to upgrade, upgrade packages, system updates, enabled services, listening ports, memory, restart.
- **TrueNAS**: pool status, datasets, snapshots, alerts, start a scrub; **TrueNAS CORE**: pool status, datasets, alerts.
- **Proxmox**: version, VMs, containers, storage, cluster, start a VM, shut down a VM, update and upgrade.
- **ReadyNAS**: RAID status, volumes, volume space.
- **pfSense**: check for updates, firewall info, firewall rules, states, routes, interfaces, listening ports, reload the firewall rules, restart the web interface, restart.

Each command belongs to a system (or to any Linux, or to any system). **Show** at the top filters the list: **All**, **Custom** (your own) or one system.

Tap a command to edit it: its name, the command, and **System** (which system it's for). **Add command** adds your own; it starts with the system shown. **Restore built-in commands** puts back any built-in ones you deleted.

Long-press menus


Long-press almost anything for more:

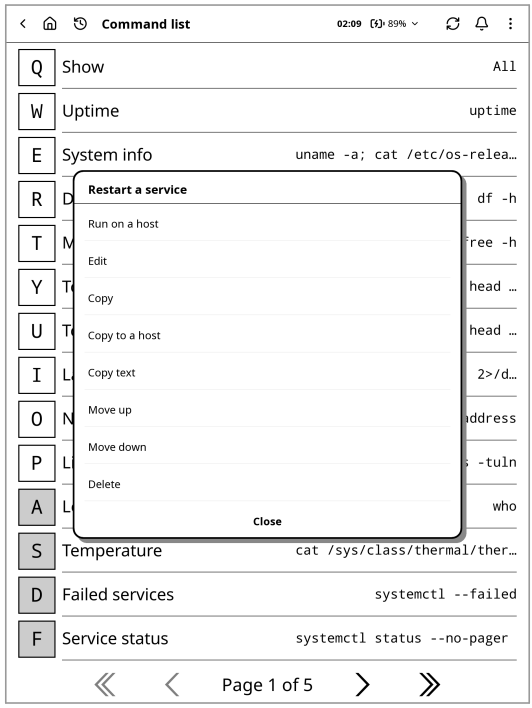

Long-press on a command

- **A command** (in a host's saved commands, or in the command list): **Run** and **Edit and run** (opens it in the command box) on a host's command, **Run on a host** (choose the host; it opens in its command box) on the command list's, then **Edit**, **Copy** (a copy below it, to change first), **Copy to a host** (into a host's saved commands, to change first), **Copy text**, **Move up**, **Move down**, **Delete**.
- **A host** (on the SSH page): **Run a command**, **Live session**, **Wake** (with its MAC address), **Edit host**, **Copy host** (a copy with its saved commands, opened to change), **Copy address**, **Move up**, **Move down**, **Delete host**.
- **A recent command**: **Run**, **Edit and run**, **Save as command**, **Copy text**, **Remove from recent**.
- **A key**: **Show public key**, **Copy public key**, **Rename**, **Delete**.


Deleting a host, a command or a key happens at once, and **Undo** at the bottom of the screen puts it back for a few seconds. (Without the launcher, the Kindle asks **Delete …?** first instead.)

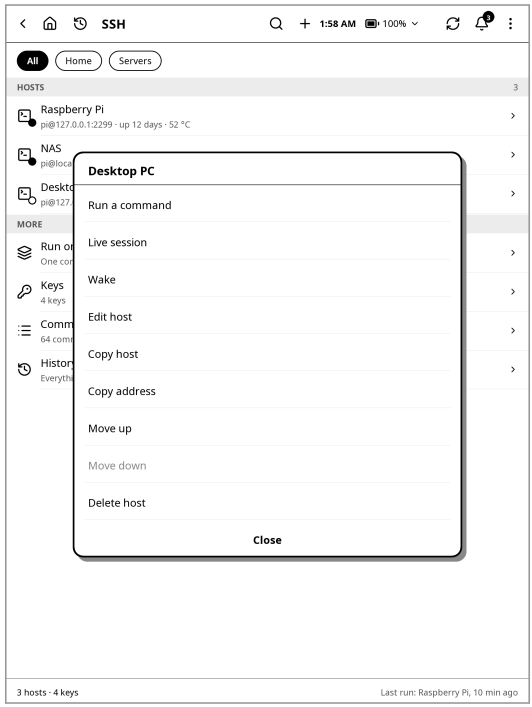

Long-press on a host

Live session

Live session opens a shell on the device, like a terminal on a computer. Type with KOReader's keyboard; Enter sends the line. It has the apps' title bar: ‹ and ⌂ ask **Disconnect?** first.

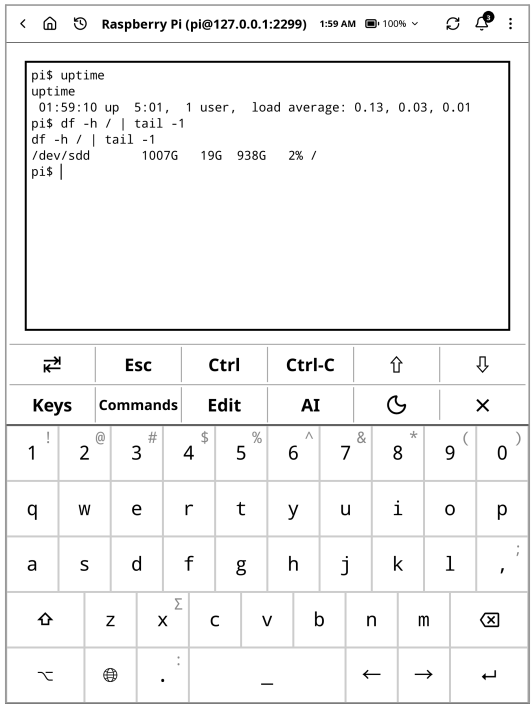

A live session


- ↹ (Tab, to complete names), **Esc**, **Ctrl** (then a letter, for example Ctrl then D; it stays black until the letter, or tap it again to let go), **Ctrl-C** (stops what's running).
- ⇧ and ⇩ move up and down the screen; hold them to scroll.
- **Keys**: keys and combinations by what they do, sent at once: Stop what's running (Ctrl-C), Log out (Ctrl-D), Clear the screen, Search earlier commands, ↑ The command before, ←, →, Start and End of the line, Quit a pager (q), nano's Save, Exit, Find, Cut and Paste, and vi's Save and quit and Quit without saving.
- **Commands** pastes a command (or the clipboard).
- **Edit**: a file's path (or **Files** to find it), then **Edit** opens it in the Kindle's text editor (see **Files**). Back in the session when you close it.
- **AI** (with an AI set up): tap it for the session's AI chat (see below). Hold it for **AI for this**: which AI service, and which of its models, the chat uses.

- The **moon** turns the terminal dark (white on black), and the **sun** turns it light again. The Kindle remembers your choice, and command output pages follow it too. SSH's lists keep the normal look; KOReader's **Night mode** (in ⋮) is the one for everything.
- **Copy text**: hold on a word to select it, or hold and drag over a part. It's copied to KOReader's clipboard at once, and shows with **Paste** (types it at the prompt), **Copy all** (the whole screen), **Done** and, with an AI set up, **Ask AI** (see below). What you copy pastes into the apps' text boxes too: hold the text in a box for **Paste**, **Copy all** and **Clear**.
- ✕ asks **Disconnect?** (the keyboard hides while it asks, and comes back on **Cancel**). Typing `exit` also ends the session (**[Session ended]**).

Programs that draw the whole screen (top, nano, htop) don't draw well on the Kindle: it is a simple terminal. Use `top -bn1 | head -20` instead of `top`, for example, and **Edit** instead of nano (when nano starts anyway, SSH says so; **Keys** has its keys, by name, to save and leave).

The AI chat

With an AI set up, **AI** in a live session opens a chat about the session. Its top shows the session's last lines as they come; below is the conversation. Each question goes with what the terminal shows now and the conversation so far, so "Why did that fail?" or "What next?" works without copying anything. After you run something, the next question sees its output.

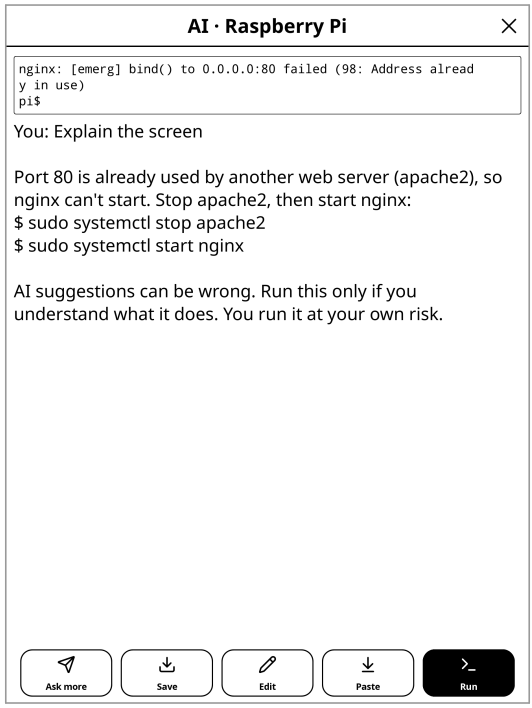

The AI chat in a live session

- To start: **Explain** (what the screen shows, and what to try if something failed), **Summarize**, **How do I…** (a question of your own, such as "How do I check disk space?"), **AI settings** and **Ask AI**.
- **Ask AI** (**Ask more** after an answer): a question of your own. Type it, or tap the pen to write it by hand; the examples fill the box for you. **Answer** sends it.
- Hold any AI button (**Explain**, **Summarize**, **Ask AI**, **Answer**…) for **AI for this**: the service and model for it, with the models loaded from the service.
- **Ask AI on a selection**: select a part of the terminal (an error, a line of output; see **Copy text** above), then **Ask AI**. The question goes with that part first, and only the terminal's last 20 lines around it. Its examples: **What does this mean?**, **Why did this fail?**, **How do I fix it?**. The answer goes into the chat, under "About …".
- Commands the AI suggests show as `$ …`, with:

  - **Run**: asks **Run in this session?** with a reminder that AI suggestions can be wrong, then types the command in with Enter, back in the session. sudo asks for its password there, as usual. Run a command only if you understand what it does; you run it at your own risk.
  - **Paste**: puts the command on the prompt line without pressing Enter. Check it, then press Enter yourself.
  - **Edit**: change the command first, then **Run** or **Paste**.
  - **Save**: keeps it as one of the host's saved commands.


With several commands, each of these asks which one.

- × (or the Back key, or a swipe in from the left edge) goes back to the session; **AI** opens the chat again where it was. A long conversation is in pages: swipe, or tap either side of ‹ n/m ›.

Nothing is typed without your tap, and Enter only with **Run** after you confirm. Passwords, keys and tokens in what the terminal shows are blanked before it's sent. The conversation lasts as long as the session: disconnecting ends it, and nothing of it is kept. How much of the terminal goes with each question (the last 50 lines by default) and the request's wording are in **Settings > AI > Advanced > SSH: Live session chat**.

Run on several hosts

Run on several hosts (on the SSH page): tick the hosts (✓), tap **Run a command**, and type or paste the command. It runs on all of them at once, and the output page has a part for each host.

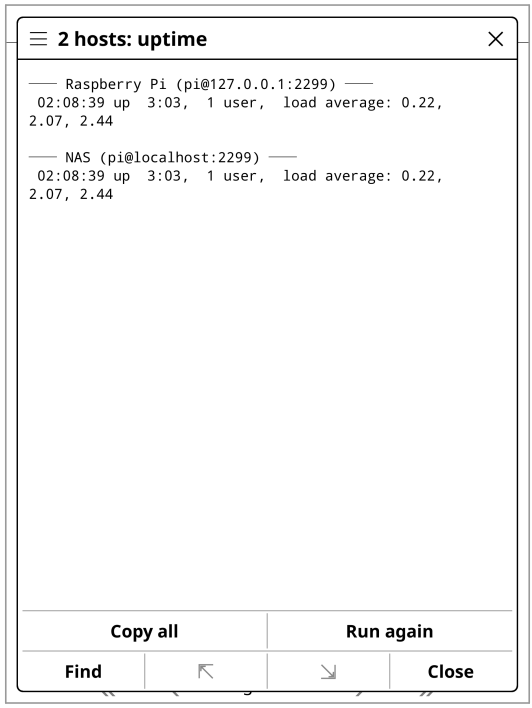


One command on two hosts

AI help

With an AI set up (**Settings > AI**), SSH can explain what a command printed, summarize long output, and write a command from a description. Without one, these buttons don't show.

- On an output page, **Explain** says what the output or error means and what to try next, and **Summarize** cuts long output (logs, `docker ps`, `df -h`) down to what matters.
- On a host's page, **Write with AI**: describe what you want ("How do I check disk space?"). The AI gets the host's system (set by hand, or detected), so the command fits it.
- In a live session, **AI**: a chat that sees what the session shows (see **The AI chat** above).

The answer opens in a page; a long one turns with ‹ › or a swipe. Commands the AI suggests show as $ ..., with:

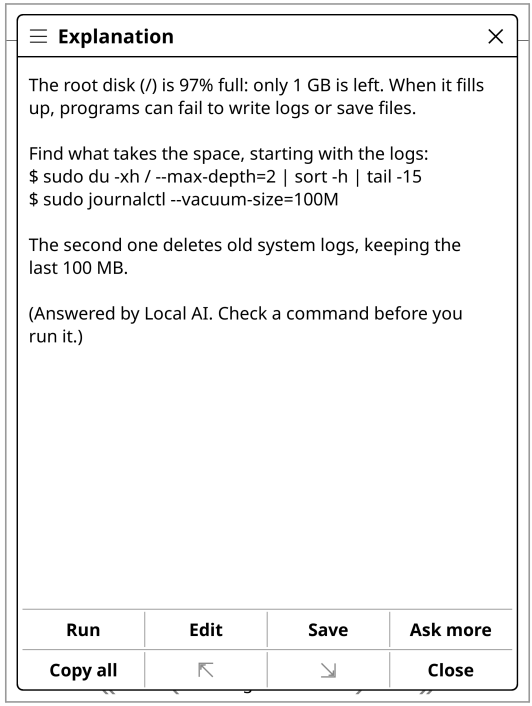

The AI's explanation of df -h


- **Run**: it offers **Run in a live session** (opens one, or uses the open one, and types the command there) and **Run once** (in the background, with the output page; with sudo, only on a device with passwordless sudo, so **Run in a live session** comes first). Each asks first, with a reminder that AI suggestions can be wrong. Run a command only if you understand what it does; you run it at your own risk.
- **Edit**: opens the command in the command box, so you can change it before you run it.
- **Save**: keeps it as a saved command: **On** the host, or **In the command list (every host)**. You can change its name and system first.
- **Ask more**: a follow-up about the same output ("That didn't work; it says ...").

Nothing runs by itself: a command is typed or run only after you tap **Run** and confirm. The AI never types anything itself.

Before anything is sent, SSH blanks what looks like a secret as [hidden]: private keys, passwords and tokens in the output (`password=…`, `API_TOKEN=…`, `Bearer …`), and your saved passwords. Only the last 200 lines are sent by default. To change how much is sent, or the wording of each request, use **Settings > AI > Advanced** (**SSH: Explain output**, **SSH: Summarize output**, **SSH: Write a command**; **Preview** shows what is sent). To choose which AI does it, use **Settings > AI > Which AI does each job > SSH**: your own local AI keeps everything at home, or pick a public one (Claude, Gemini and others).

Keys

A key lets the Kindle sign in without a password. **Keys** (on the SSH page) lists them.

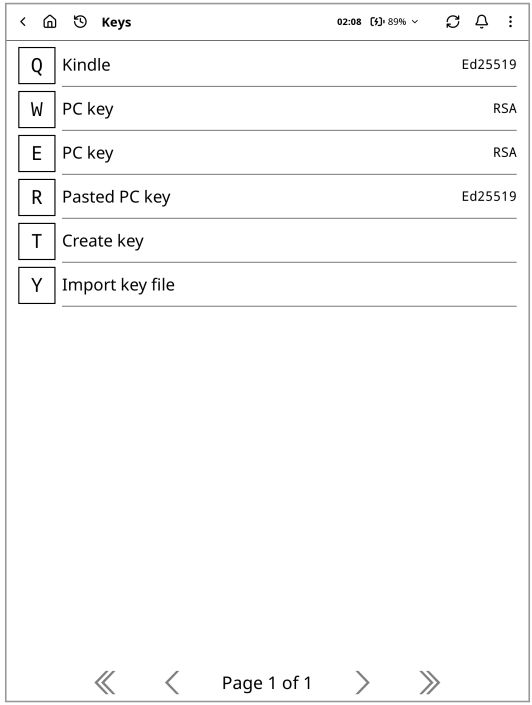

Keys

- **Create key** makes a new Ed25519 key on the Kindle. The page that opens shows its **public key** (one line starting with `ssh-ed25519`).
- **Import key file** uses a key you already have: copy the private key file (for example `id_ed25519` from your computer's `.ssh` folder) to the Kindle over USB, then pick it. The Kindle keeps its own copy and offers to delete the file you copied. Ed25519, RSA and ECDSA keys work. A key with a passphrase doesn't: remove the passphrase from a copy first (`ssh-keygen -p -N "" -f copy` on the computer).

To use a key with a device, add its public key to `~/.ssh/authorized_keys` on that device. The easiest way is the web page: **Copy public key**, then on the device run `nano ~/.ssh/authorized_keys`, paste it on a new line, and save. Each key's public key is also in `koreader/settings/sshclient/keys/<key>.pub`. On Windows, use `C:\Users\<you>\.ssh\authorized_keys`, or `C:\ProgramData\ssh\administrators_authorized_keys` for an administrator.



A key's public key

On the web page

The web page (Web server) has an **SSH** tab, handy for setting things up with a computer keyboard:

- **Hosts**: each with its system ("Debian/Ubuntu (detected)"). **Add host** and **Edit** (name, address, user, port, **System** (Detect automatically, or one), sign in with a key, a saved password, or asking each time; **Forget host key**, **Delete host**). A saved password is sent to the Kindle but never shown again. **Commands** edits a host's saved commands: **Add command**, **Add from command list** (a copy to change), each command's system, ⧉ (copy), ↑ ↓ (move) and × (remove).
- **Keys**: **Upload key file** (a private key from the computer), **Paste key** (paste the private key's text, including its BEGIN and END lines), **Create key** (made on the Kindle; its public key is copied for you), **Show** (the public key, hidden until you ask), **Copy public key**, **Rename**, **Delete**. Private keys are never shown or sent to the page.
- **Import ~/.ssh/config** (under Hosts): paste your computer's `~/.ssh/config` (or a part of it). Each `Host` becomes a host, with its address (`HostName`), user and port; hosts already saved and patterns (`Host *`) are skipped. New hosts sign in with your first key, or ask for a password when there's none. Key files aren't copied: add them under **Keys**.
- **Command list**: **Show** (All, Custom, or one system), then edit, copy, reorder and remove commands and set each one's system, **Save**, and **Restore built-in commands**.
- **AI help** (with an AI set up): paste a command's output, or tap **Use the last output on the Kindle**, then **Explain** or **Summarize**. Or describe a command and tap **Write a command**. Suggested commands have **Copy** and **Save on host** (or **Save in command list**), and **Ask more** asks a follow-up. Secrets are blanked on the Kindle before anything is sent.

Commands run on the Kindle, not from the web page.

Good to know

- The Kindle needs Wi-Fi to connect; it turns Wi-Fi on if it's off. Devices at home are reached on your home Wi-Fi; outside, only devices you can reach from the internet (for example over a VPN).
- Nothing runs while the Kindle sleeps, checks and alerts included.
- The web page's backup has your hosts, commands and trusted host keys. Saved passwords and private keys are in it only when you tick Include keys and sign-ins.
- Passwords and private keys stay on the Kindle, in `koreader/settings`. Anyone with your Kindle and a USB cable can read them, so prefer keys, and use a key just for the Kindle that you can remove from `authorized_keys` if you lose it.

Web server

The web server puts a web page on the Kindle that you open on a phone or computer on the same Wi-Fi. It manages everything in this guide with a keyboard and a big screen: files, the launcher, Home Assistant, To Do, Notes and crosswords, plus updates and backups.

Starting it

1. On the Kindle: **Tools > Web server > Start web server**, the launcher's **Web server** tile or quick button, **Web server** in the control center (tap the time and battery in any app), or a gesture (**General > Toggle web server**).
2. KOReader asks to turn Wi-Fi on if it's off.
3. The Kindle shows the address, such as `http://192.168.1.50:8080`. Type it in your phone or computer's browser, or tap **QR code** and scan it with your phone (the box also has **Stop** and **Close**). The quick button just turns it on or off; hold it for the address.

While it runs, **Notifications** (the bell) has a **Web server** notification at the top with its address (tap it for the address and QR code), and the launcher shows a globe by the clock. Both go when it stops.

Or from an app: ⋮ **> Open on the web page** in To Do, Notes, the crosswords, Home Assistant, the launcher and Wikipedia starts the web server if needed and shows a QR code that opens that same place on the web page (after signing in, if there's a password).

The page works while the web server runs and the Kindle is awake.

The **Tools > Web server** menu (the same settings are in the launcher's **Settings > Web server**, as a settings page):

- **Start web server** / **Stop web server**. While it runs, the menu's own name shows the address: **Web server: http://...**.
- **Show address**: the address and QR code again.
- **Keep Kindle awake while running**: on to start with, so it doesn't go to sleep while you use the page. If you put the Kindle to sleep yourself (the power

button or the cover), the web server stops; when it wakes, a note says so. Start it again when you need it.

- **Stop after 30 minutes of inactivity**: on to start with; stops by itself when no browser has used it for half an hour.
- **HTTPS (encrypted)**: off to start with. On, the page and everything on it (the password too) is encrypted, at **https://...**. An old **http://** address is sent on to it. See [HTTPS](#https).
- **Certificate**: which certificate HTTPS uses and until when. **Use the Kindle's own**, **Use yours** or **Make a new one**.
- **Password: On / Off**: set a password (4 characters or more). Browsers then ask for it. **Remove password** takes it off.
- **Undo a plugin update**: go back to a plugin's version before its last update.
- **Port**: 8080 to start with.

It also stops when Wi-Fi is turned off.

> Anyone on your Wi-Fi can open the page while the web server runs, unless you set a password. Without HTTPS the connection isn't encrypted, so start it when you need it and stop it after.

HTTPS

With **HTTPS** on, the Kindle makes a certificate of its own the first time. No browser knows it, so each one warns once: choose **Advanced > Proceed** (the words vary by browser). After that the page is encrypted. The certificate lasts about a year and the Kindle makes a new one a month before it ends; browsers warn once more then.

To have no warning, use a certificate of yours for a name your network knows (from your own certificate authority, or a service such as Let's Encrypt, for a name your router or DNS points at the Kindle). On the page, **System > HTTPS**: paste the certificate (and its chain, if it has one) and its key, or pick their files, then **Save and apply**. The key must have no passphrase. The Kindle checks that they match and haven't ended before using them, and the address it shows is then at the certificate's name. Do this with the page already on HTTPS (the Kindle's own), so the key doesn't cross your Wi-Fi unencrypted.

Yours is never replaced by the Kindle. If it ends, or can't be read, the web server starts on plain HTTP and the Kindle says why. On the Kindle, **Tools > Web server > HTTPS** turns HTTPS off, and **Certificate** switches back to the Kindle's own. Turned off, the page works over plain HTTP again straight away (browsers aren't told to insist on HTTPS).

Both certificates and their keys go in a backup only with **Include keys and sign-ins** (System > Backup). Without it, a restored Kindle makes a new certificate of its own (browsers warn once more), and yours is pasted again.


The page

Tabs along the top: **Home**, **Dashboard**, **Files**, **Reading**, **Launcher**, **Home Assistant**, **To Do**, **Notes**, **Crosswords**, **Wikipedia**, **Syncthing**, **SSH**, **Fonts**, **KOReader** and **System**. A tab is left out when its app isn't installed, and you can reorder or hide tabs (**System > Tabs**). The page follows your phone or computer's light or dark mode. Lists you can order have the same controls everywhere: drag the ⠿ handle, or ⤒ (to the top), ↑, ↓ and ⤓ (to the bottom), and ↶ **Undo**.

Signing in, and the page as an app

With a password set, the page asks for it once per browser. Leave **Stay signed in** ticked and that browser stays signed in for 90 days, even after KOReader restarts or the plugins update. Changing the password signs every browser out.

To keep the page on your phone like an app, open it and use **Add to Home Screen** (Safari's share menu, or Chrome's ⋮ menu). It gets its own Kindle icon and opens full screen.

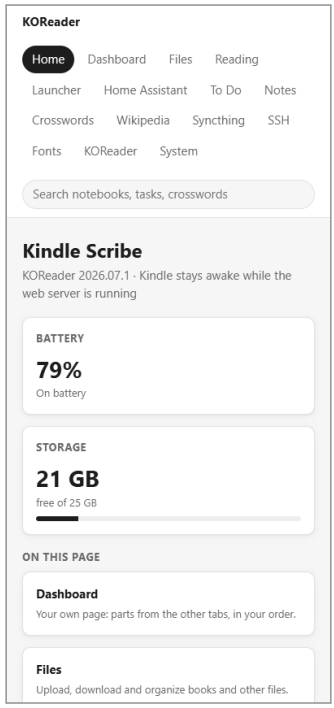

The page on a phone

Keyboard shortcuts

On a computer:

- **/** jumps to the search box.
- **1** to **9** open the first nine tabs shown, in order.
- **Esc** closes a box, or leaves a text field.
- **?** lists the shortcuts.

Search


The search box at the top, beside the title, searches everything at once. Type at least two letters and press Enter:

- **Notebooks**: their names, typed text and handwriting. Each result says the page, and whether it was found in handwriting or in the name.
- **To Do**: task titles, notes and steps (not tasks marked private).

- **Crosswords**: puzzle names and clues, such as "12 Across: ...".
- **On this page**: the page's own tabs, cards and settings by name ("labels" finds the Launcher tab's **Button labels**, "backup" the backup cards).

Tap a result to open it: a notebook in the Notes tab, a task's list in the To Do tab, a card or setting on its tab, scrolled to and outlined for a moment.

Home

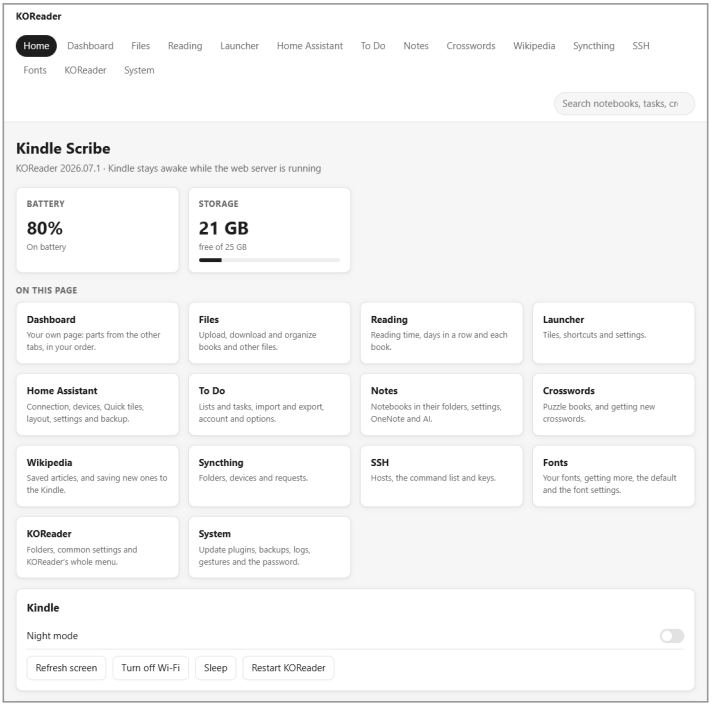

Home

- **The Kindle**: its model, KOReader's version, the **Battery** and the **Storage** left.
- **On this page**: a card for each tab, **Dashboard** first.
- **Kindle**: the Kindle's own controls:
  - **Light** (a slider and on or off) and **Warmth**.
  - **Night mode**.
  - **Refresh screen**.


  - **Turn off Wi-Fi** (the page stops working until Wi-Fi is back).
  - **Sleep**.
  - **Restart KOReader**.
- **Kindle screen**: **Show the screen** shows exactly what the Kindle shows right now, such as the dashboard. It's also a remote:
  - Click the picture to tap the Kindle at that spot (or choose **Click holds** to hold there instead).
  - **Swipe left**, **Swipe right**, **Swipe up** and **Swipe down** swipe across the Kindle; swipe left turns to the next page in a book.
  - **Live** takes a new picture every few seconds.
- **Send to the Kindle**: type something and send it to **The box open on the Kindle** (typed in where its cursor is, as with its keyboard; tick **Then press Enter** to search, add or save at once), as a task to a To Do list (the first line is the title, the rest its notes), or as **Notes: a new page**.
- **Sleep screen**: which app draws the sleep screen, and **Sleep screen updates**.

Updating plugins, backups and the password are on the **System** tab.

Dashboard

Your own page, made of parts from the other tabs, for what you use most. It's saved on the Kindle, so every phone or computer sees the same one.


- **Add a part…** picks one: **A To Do list** (its open tasks, ticked off or starred here, and a box to add one), **Home Assistant: Quick tiles** or **a room** (tiles dark when on; a tap switches one, asking first where the Kindle asks), **Recent notebooks**, **Today's crossword** (**Open on Kindle**), **Saved Wikipedia articles**, **Syncthing status**, **An SSH command** (**Run on the Kindle**: it runs there and the output shows there), **Recent files**, **A favorite folder** (KOReader's Home folder or a folder shortcut), **Kindle controls** and **Kindle screen (remote)**.
- **Edit** lists the parts: drag them or use the arrows to change the order, and × removes one. **Done** goes back.
- Parts for an app that isn't installed are left out.

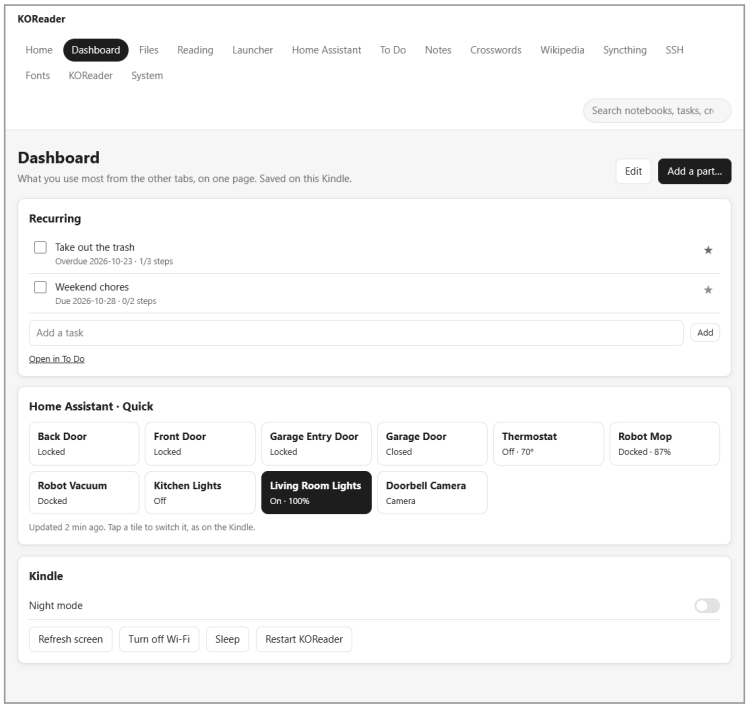

The Dashboard

Files

The Kindle's storage. It opens in the folder you looked at last (the documents folder the first time).

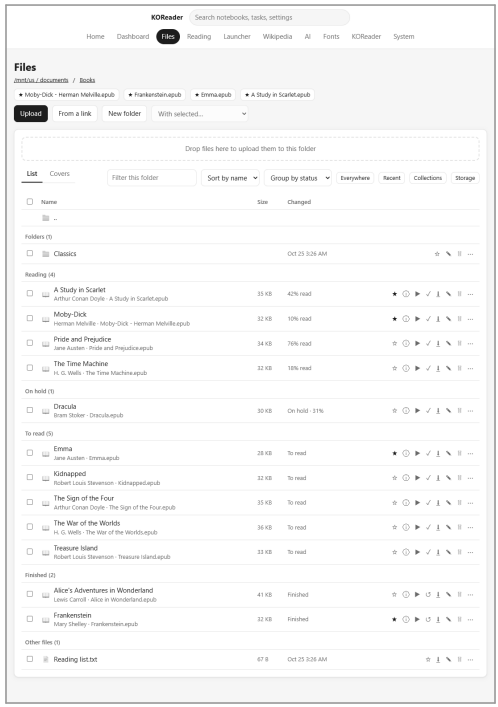


Files, as a list grouped by status

- **Home folder** and your favorite folders, under the folder's name: a click goes straight there. The Home folder is the one set in KOReader (or on the KOReader tab). Favorite files follow, marked ★: a click opens the file's folder with that file picked out.
- ☆ **Favorites**: the star beside a folder or file adds it to your favorites (★); click again to take it off. A favorite folder is a KOReader folder shortcut, and a favorite file goes in KOReader's **Favorites** collection, so they show on the Kindle too, and stars set on the Kindle show here.
- **List** or **Covers**: the list shows names, sizes and dates; **Covers** shows each book's cover, title, author and how far you've read, like a bookshelf. Titles and covers come from KOReader; for a book it hasn't read yet, they appear a few seconds after you open the folder.
- **Sort by** name (or title), date or size, and **Filter this folder** to find a book by its name, title or author.


- **Group by** author, series or status (Reading, On hold, To read, Finished), as the Library groups books on the Kindle. Folders come first and other files last.
- **Everywhere** (or Enter in the filter box) searches every folder by name, title and author. A result opens its folder with the file picked out. ← **Back to this folder** returns to the list.
- **Recent**: the newest files in every folder, such as what you just uploaded.
- **Collections**: KOReader's collections, as on the Kindle, each with its files (× takes one out).
- **Storage**: the free space, and the biggest folders and files.
- **Upload to Home folder** sends books straight to the Home folder, from any folder; **Upload here** (or dropping files on the page) puts them in the folder you're in. Several files at once; a file with the same name is replaced.
- **From a link**: paste a web link to a book (or any file) and the Kindle downloads it into this folder, in the background. The page says when it's saved.
- **New folder**.
- Click a name to open it (pictures, PDFs and text open in the browser; other files download).
- Each file and folder has **Download** (files), **Rename**, **Delete** and ⋯:
  - **Delete** happens straight away, with **Undo** for a few seconds, as in the Library on the Kindle. Once Undo has gone, it's gone for good.
  - ⋯ has **Move to…**, **Copy to…** and **Add to a collection…**, and for a book **Reading**, **On hold** or **Finished** (✓ marks the one it has).
  - **Move to…** and **Copy to…** show your folders: open one, or **Up one folder**, then **Move here** (**Copy here**). **New folder** makes one on the way. A copy whose name is taken there gets " (2)", and a copied book keeps its progress, highlights and notes.
- Books also have:
  - ▶ **Open on the Kindle**: the Kindle opens the book straight away.
  - ✓ **Mark as finished** (or ↺ **Mark as reading**), as KOReader's own. Under each book: how far you've read ("42% read"), **To read** (never opened), **On hold** or **Finished**.

  - ⓘ **Details**, as the book's page in the Library: the cover, title, author, how far you've read and about how long is left, and **Reading**, **On hold** and **Finished** to change it. **Reading**: first read, last read, time reading, days reading it, pace (pages an hour), pages read, highlights and notes. **Book**: series, authors, published, publisher, language, pages, subjects and ISBN. The description. **File**: name, format, size, added, folder and collections. From there: **Open on the Kindle**, **Highlights and notes**, **Add to a collection…**, **Move to…**, **Copy to…**, **Rename from details** (renames the file "Title – Author") and **Delete**.
  - **Highlights and notes**: every highlight and note, chapter by chapter, with **Download as Markdown** or **Download as text**.
- **Drag** files onto a folder, a folder name in the path at the top, or **..** to move them there. Ticked files move together.
- Tick several and use **With selected…**: **Download** (one zip), **Move to…**, **Copy to…**, **Mark as reading**, **Mark as on hold**, **Mark as finished**, **Add to a collection…** (ticks for each collection, or name a new one), **Rename from book details** (shows the new names first) or **Delete** (with Undo).


Moving, renaming and deleting work as on the Kindle: a book's reading progress, highlights, history and collections go with it, and a favorite folder follows when it's moved. The Kindle's library and the Library app update by themselves after each change.

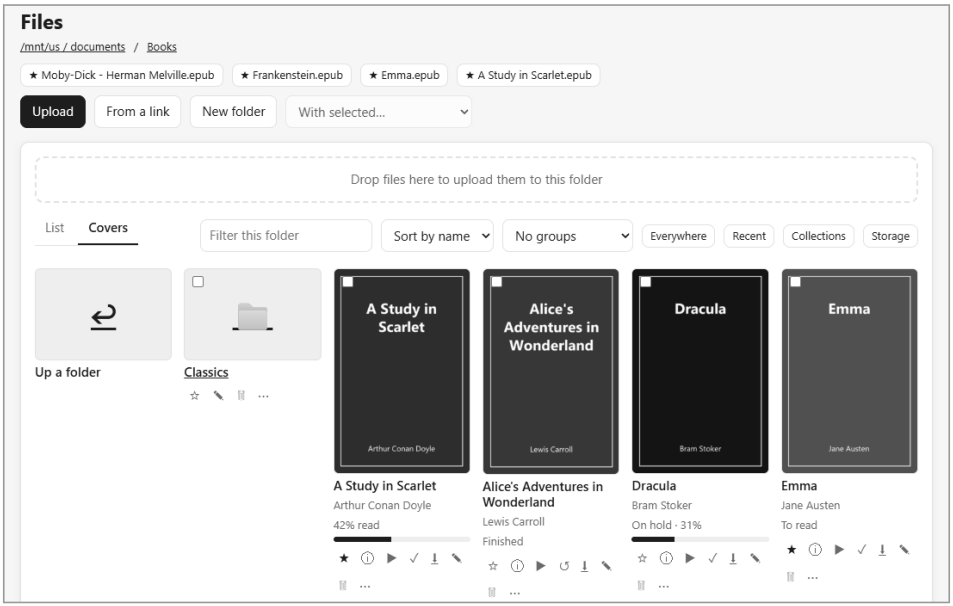


Files, as Covers

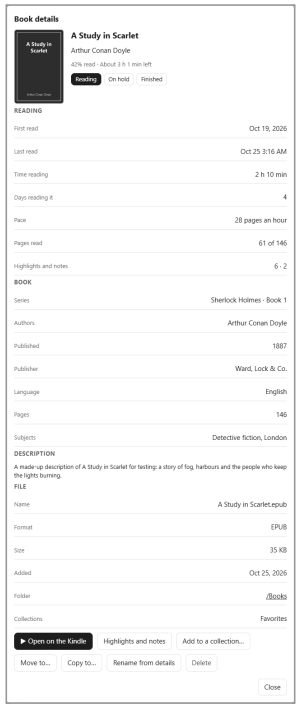

A book's details

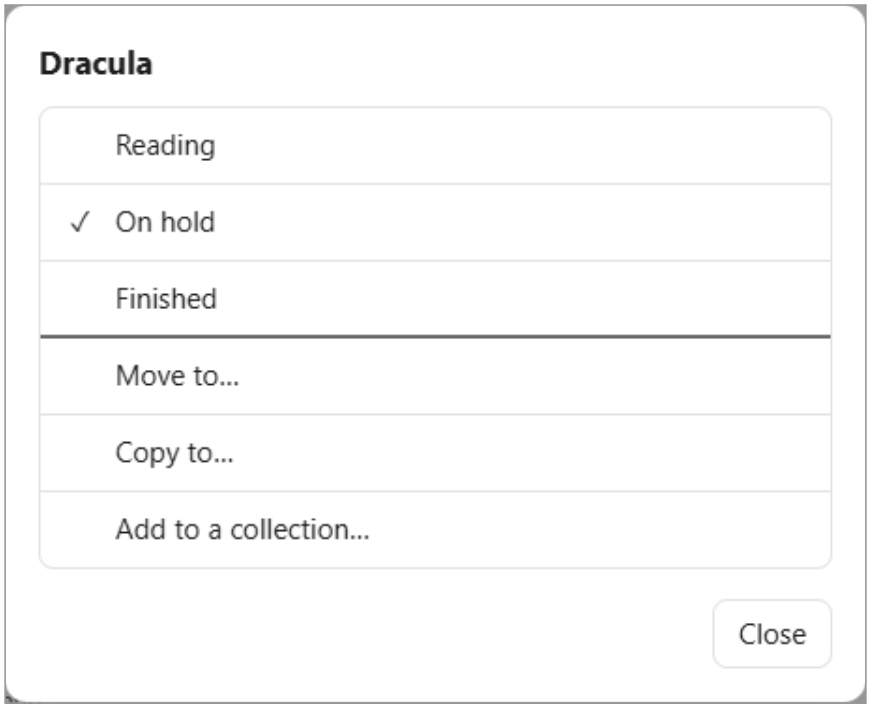


··· for a book

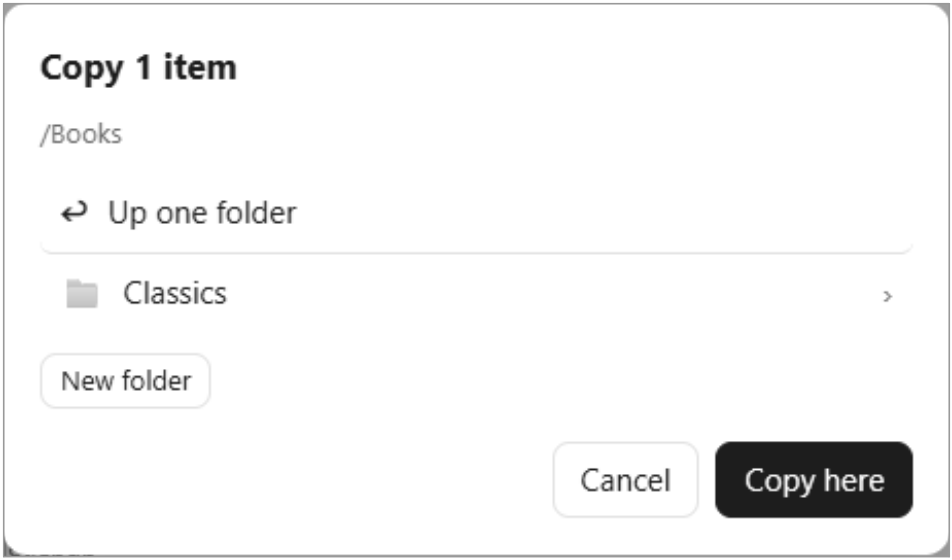

Copy to...: pick a folder

Reading

From KOReader's reading statistics (the Reading statistics plugin must be on). Wikipedia's articles are left out unless **Count Wikipedia articles** is on (the same switch as on the Kindle); OneNote pages read from Notes never count.

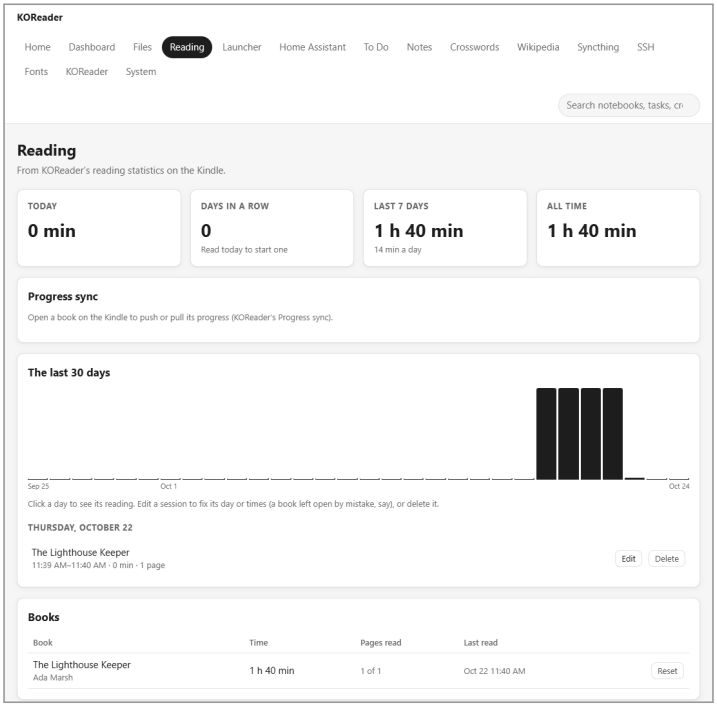

Reading


- **Today**: how long you've read today.
- **Days in a row**: your reading streak.
- **Last 7 days** and **All time**.
- **Progress sync**: for the book open on the Kindle, **Push progress from this device** and **Pull progress from other devices** (KOReader's Progress sync, such as with a CrossInk reader), and **Auto sync**. The messages show on the Kindle.
- **The last 30 days**: a bar for each day (point at one for its date and time). Click a day to see its reading, book by book, with times. Each has:

  - **Edit**: change its day, start or end. Moving keeps it as it was; an earlier end cuts the time after it (a book left open by mistake becomes the minutes you really read); a later end stretches each page's time to fit. It can't overlap other reading.
  - **Delete**: takes it out of the statistics.
- **Books**: each book you've read, with the time spent, the pages read and when you last read it. **Reset** takes all of a book's reading out of the statistics.

The Kindle's **Reading statistics** tile has the same fixes (each book's page lists its sessions), with Undo. Editing and deleting sessions here uses the launcher's code, so the launcher must be installed.

> On the Kindle, KOReader's **Tools > Reading statistics > Settings** has **Max read time per page**: a page left open longer than that counts only that long, so a book left open overnight doesn't add hours.

Launcher

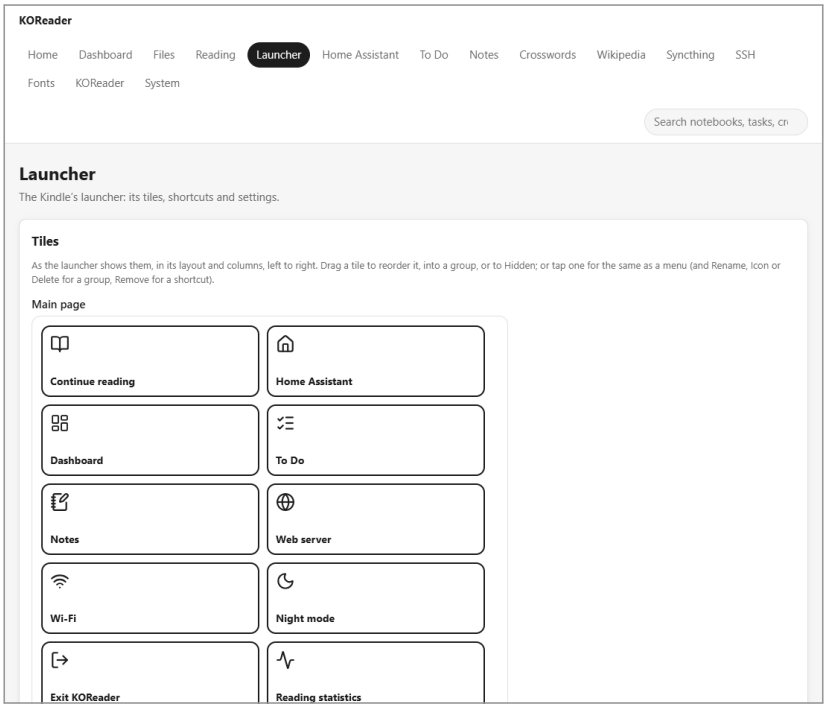

The launcher's tiles

- **Home screen**: drawn as the launcher shows them, in its layout and columns: the **Main page**, each group's page, and **Hidden**. Drag a tile to reorder it, into a group or to Hidden; or tap one for **Move up**, **Move down** and **To** a page, with **Rename**, **Icon** and **Delete group** for a group and **Remove** for a shortcut. **New group** adds one. (Every visual editor here works the same way: drag with a mouse, or tap for the menu on a phone.)
- **Add shortcut**: a Home Assistant screen or room, a To Do view or list, a notebook, a Notes folder, or a KOReader action.
- **Display**: **Layout** (**Tiles**, **Bold tiles**, **Compact**, **List**, **Icons**), **Columns**, **Clock** (**Large** or **Small**), **24-hour clock** (KOReader's own, for every app), **Button labels** (the pop-ups' buttons, in every app, and each app on its own), **At a glance**, **Recent books**, **Recent notebooks**, **Recent crosswords** and **Recent items** (**Separate rows** or **One row**).
- **Quick buttons**: drawn as on the Kindle, in sections: **On the home screen** (the two rows under the clock, then More), **Only in the control center** (the

rest) and **Always in the control center** (the built-ins every control center has; click one to add it to yours). Drag one to reorder, between sections, or into a group's box to put it there; click one for **Remove**, **Move** (to a group), **Out of the group** or **Rename** (a group). Pick a built-in or a shortcut and **Add**, or **New group**. **Show on the home screen** turns the rows under the clock on or off.


- **Widgets sleep screen**: its parts as cards, top to bottom (the clock, your book, To Do today, Home Assistant's alerts, the latest notifications), dragged into order or to **Off**.
- **Weather**: **Weather from** (Automatic, Home Assistant, Open-Meteo or Off), **Place** (**Set** or **Change**: type your town or city, then pick it from the matches; the page looks it up with Open-Meteo's free place search) and **Units** (°F or °C). The Kindle loads the forecast when its Wi-Fi is on. **Test connection** tries Open-Meteo (and the US weather alerts) from the Kindle.
- **Start**: **Open at startup**.
- **Wi-Fi**: **Turn off when idle**.

Home Assistant

Inner tabs:

- **Connection**: the **Internal URL** and **External URL** (**Test connection** tries each on its own from the Kindle); **Sign in with Home Assistant** (its own sign-in page, two-step codes included); or a pasted long-lived token.
- **Devices**: every device by room, with search and **All**, **Shown** and **Hidden** filters. Each has a box for whether it shows on the Kindle and a ★ to make it a Quick tile. **Show all** and **Hide all** act on what the filter shows.
- **Order**: Home drawn as it looks: its sections top to bottom, the shortcut buttons, the Quick tiles and the rooms, each dragged into order or to **Hidden** (or tapped for a menu; **Remove from Quick** for a Quick tile). Then the dashboard's sections, tiles and scenes, cameras, security cameras and **Sleep screen alerts** (**Add…** to pick one).
- **Routines**: make and change routines with a keyboard: a name, then steps (a device and what to do), **Run**, **Delete**.


- **Settings**: the same as on the Kindle: display (with **Start screen**), dashboard (with **Doorbell alerts**: **Ring and motion**, **Ring only** or **Off**), **Weather**, **Keep turned off in On now**, **Wake alerts**, what asks first, camera placeholders and the update interval.
- **Backup**: **Export** saves the Home Assistant settings (not the sign-in) to a file; **Import** puts them back.

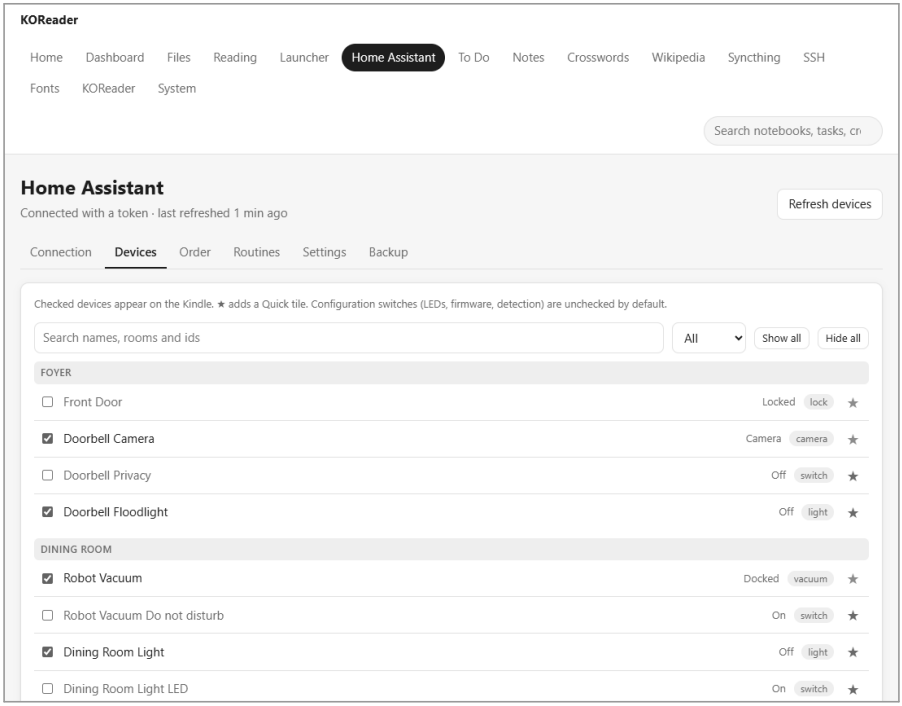

Home Assistant's Devices

To Do

The top says when it last synced and how many changes are waiting; **Sync now** and **Download only** are there.

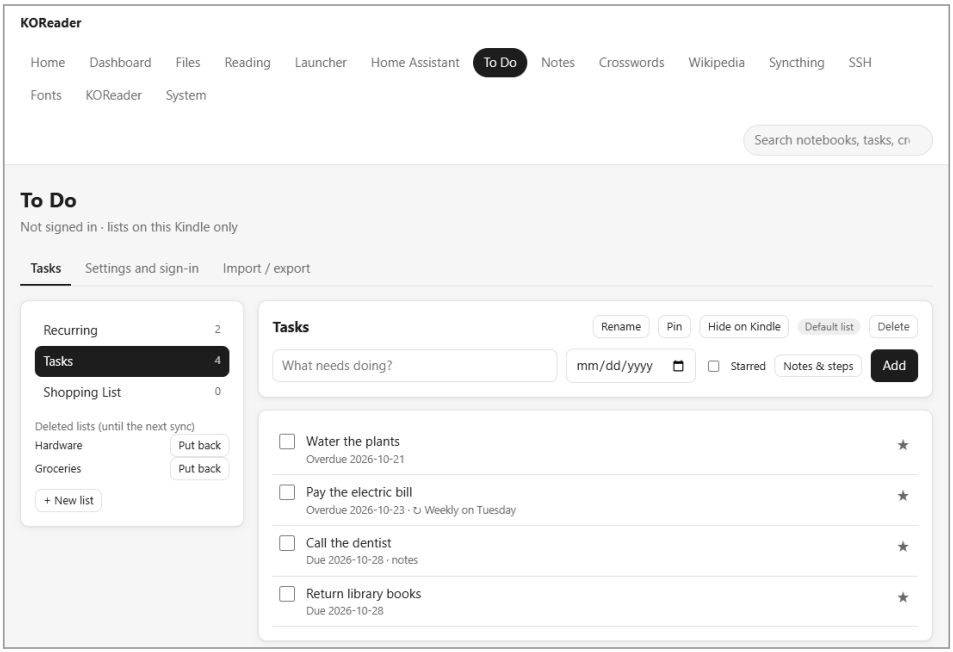

To Do

- **Tasks**: your lists on the left (with **+ New list**, and **Rename**, **Pin**, **Hide on Kindle**, **Make default**, **Delete** for the open list). Add a task with its due date, **Starred**, and **Notes & steps**. Dates in plain words work here too: type "Pay rent Friday 9am" and the page shows what it understood before adding (**Add** or **Keep as typed**). Drag a task onto another list on the left to move it there. Tick tasks off, star them, or click one to change its title, due date, list, notes, steps and **Private** (hidden on the sleep screen and Home, and from search). **Show completed** and **Put back** for deleted ones. A repeating task shows its repeat (↻) with **Skip to current** and **Remove repeat**; repeats are set on the Kindle.
- **Settings and sign-in**: **Home tiles** drawn as To Do's Home has them (Today, Agenda, Starred, Calendar, Search), dragged into order or to **Hidden**; most of the Kindle's settings (the lists' order, the pinned and default list, full refresh and the sleep screen's content stay on the Kindle; the sleep screen itself is chosen on the Home tab, and **Postpone by** offers 1, 2, 3, 7 or 14 days), and the **Microsoft account** card (the same as the Kindle's **Settings > Microsoft**, and on the Notes tab too): the **App ID**, **Sign in** (the page shows the code to

enter, and updates by itself when you're done), **Signed in as** and your account, which apps it's allowed for, **Sign out** and **Test connection**. To Do's own **Test connection** tries To Do from the Kindle.

- **Lists on this Kindle** show in their own group (when signed in), with **+ New list on this Kindle** and **Move to Microsoft To Do** for the open one. Drag a task onto a To Do list to move it there.
- **Import / export**: **Export CSV** saves the lists you tick (all of them to start with) to a spreadsheet file. **Import CSV** adds tasks from one, into the place you pick in **Put the tasks into**: the lists named in the file in To Do, the lists named in the file on this Kindle (made when missing), or everything into one list. So a file exported from lists on this Kindle can go into To Do, and the other way round. **Download template** shows the columns: List, Title, Due, Starred, Notes, Steps.

Fonts


The same as the Kindle's Fonts screen, which uses the same code (it needs the launcher). **Font settings** first, the same as in KOReader's menus:

- **Font for new books** and **Font size for new books** (also on the Kindle's **Settings > KOReader**).
- **Fallback font**: for characters the book's font doesn't have (Chinese, Japanese, symbols…), and **Use more fallback fonts** for KOReader's own list after it. These apply to every book, the open one too.
- **Use the book's own fonts** (fonts that come inside a book) and **Font weight** (thinner or bolder text).
- **Advanced**: **Hinting** and **Kerning**.
- Except the fallback fonts, these are the defaults for books you haven't opened yet: a book you've already opened keeps its own.

Then **Your fonts**: every font KOReader can use for books, each name and a sample line drawn in its own typeface, marked **Built-in** or **Added by you**.

- **Add fonts**: drop TTF or OTF files, or a zip of a family, on the box (or pick them). Anything that isn't a font is turned away. They're kept in the folder KOReader reads your own fonts from (the tab names it).

- **Get from Google Fonts**: type a family's name (such as Lora) and the Kindle downloads its regular, bold and italic styles, as many as the family has, then adds them. It needs Wi-Fi on the Kindle; the tab shows how it's going.
- **Set as default**: the font new books start with (the same setting as **Font for new books** on the Kindle).
- **Remove**: takes out a font you added, with **Undo** for a few seconds. Built-in fonts stay.
- KOReader reads its fonts when it starts, so after a change the tab offers **Restart KOReader**; new or removed fonts show in books after that.

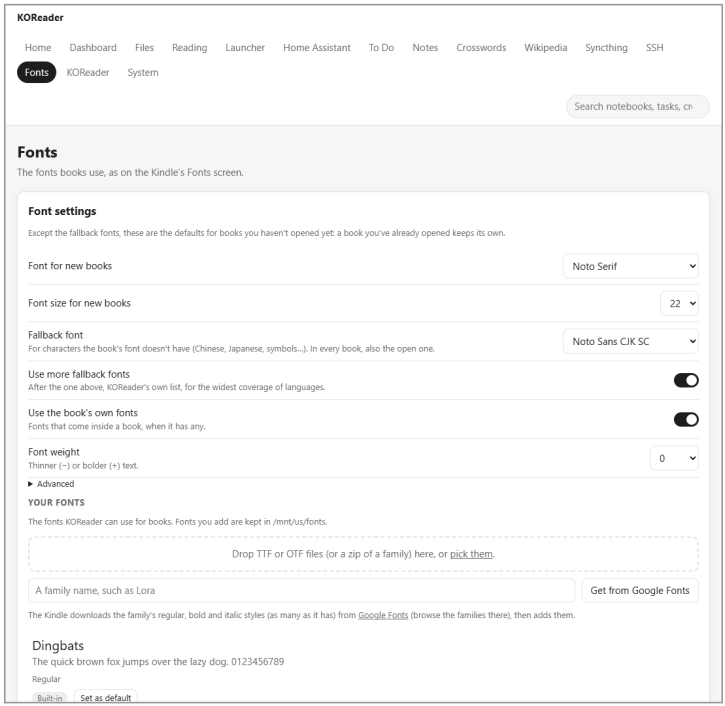

The Fonts tab: font settings, adding fonts, and each font drawn in its own typeface


KOReader

KOReader's own settings, without leaving the launcher on the Kindle:

- **Folders**: the **Home** folder, the **Download folder**, the **Screenshot folder** and the other folders KOReader and its plugins keep. **Change…** opens a folder

picker. **Lock home folder** keeps the library from going above the home folder.

- **Folder shortcuts**: your saved folders. **Add shortcut…** picks a folder and names it; each has **Rename** and **Remove**.
- **Common settings**: the same list as on the Kindle's **Settings > KOReader**: **Sleep after**, **Full refresh**, **Rotation**, **Page turn tap zones**, **Invert page turns**, **Status bar in books** and **Progress sync** (when that plugin is on). The font settings are on the **Fonts** tab. Each changes at once on the Kindle. Without the launcher this card is just **Sleep after**.
- **KOReader's menu**: the same menu as on the Kindle, with its tabs (**Settings**, **Tools**, **Main** and the rest), live from KOReader. While a book is open it's the book's menu, with its own settings.
  - Switches (☐ and ☑) and choices (○ and ◉) change right from the page.
  - Tap a name with **›** to open that part of the menu; the line at the top shows where you are.
  - ⋯ does what holding the item on the Kindle does.
  - A choice that opens a dialog (a list, a slider, a time) opens it on the Kindle. The page then shows the Kindle's screen, so you can finish it with the remote.

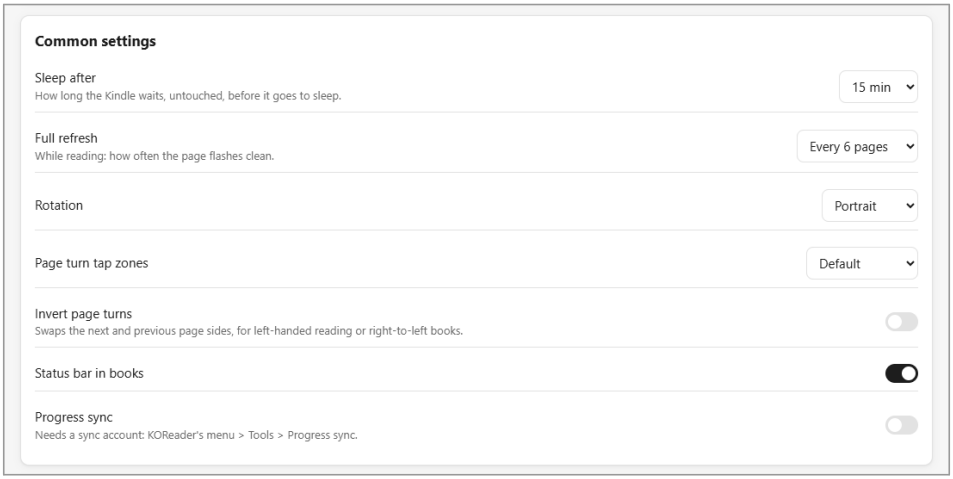

The KOReader tab's common settings


System

- **Problems**: KOReader's crashes and freezes, read from its log, newest first. Tap one for the details. **Stopped without closing** usually means it froze and you restarted the Kindle by holding the power button. A freeze that it recovers from ("KOReader stopped answering") is only noticed while the web server runs. When KOReader ended badly, the launcher also says so the next time you open it.
- **What's installed**: each plugin's version (the date it was made) and **What changed** in its latest updates.
- **Update from GitHub**: the same as the Kindle's Settings > Launcher. Type a repo (owner/repo; this project's own to start with) and its releases and branches show in the list; pick one and **Install**. A branch is the code as it is on it now, not a release. Under it, **Optional apps** lists the apps that version offers (FlashForge, ...) with **Install**, or **Update** and **Remove**; the installed ones are updated with the rest (**Also updates: ...**).
- **Update plugins**: **Install a zip...** installs new versions of the plugins (see Getting started). Everything in the zip is checked first; if anything is wrong, nothing changes. Under **Earlier versions kept**, **Go back** puts a plugin back as it was before its update.
- While either installs, a bar shows how far it is, here and in a pop-up on the Kindle: the upload (or download), then checking and installing a plugin at a time. Then KOReader restarts; don't turn the Kindle off. The web server starts again by itself and this page comes back on its own.
- **Battery**: the level, and KOReader's battery statistics since the last charge (awake, asleep, the last charge, each with how much an hour), what is on now that uses power, and **Reset statistics**. The same as the launcher's Battery screen.
- **Health**: KOReader's memory and the Kindle's free memory, how long KOReader and the Kindle have been running, and:
  - **Detailed logging**: KOReader writes much more to its log, for tracking down a problem. It turns itself off after a day.
  - **Download a diagnostics file**: one zip with the logs, versions, problems, sleep history, memory, battery and network, to send when something

goes wrong. Besides the end of KOReader's log, it has a longer history of it (the last hours, kept across restarts, without the lines for every touch and redraw). No passwords, keys or sign-ins.

- **Network**: Wi-Fi, its signal and the Kindle's address, and the connection check (the same as the Kindle's Settings > Launcher > **Connection check**): tick what to test (your internet connection and each app that's set up), then **Test selected**. Each address shows how long it took, or what went wrong with the exact error. The last results are in the diagnostics file.
- **Sleep and wake**: each time the Kindle slept and woke (and when KOReader started), how long, and the battery at each end. A Kindle that never sleeps, or keeps waking, shows here.
- **Backup**: **Download backup** saves one zip with every app's settings (To Do, Notes and Crosswords, Home Assistant, the launcher, your KOReader gestures, the web server, Wikipedia, Syncthing, and SSH's hosts and commands) and all your notebooks; the card lists them. Wikipedia's saved articles stay out (download them again). **Include keys and sign-ins** adds the sign-ins and keys too: Home Assistant's and Microsoft's sign-ins, the AI keys, SSH's passwords and keys, the web server's HTTPS certificates and keys, and Syncthing's own folder (its device keys and database). Keep that file private. **Restore from a backup...** puts one back (Syncthing stops first); KOReader restarts.
- **Automatic backups**: **Weekly backup** saves a backup on the Kindle once a week (settings and notebooks, without sign-ins), keeping the last 2, 4 or 8. **Back up now** makes one straight away; each has **Download** and **Delete**.
- **Logs**: KOReader's own log and the sleep screen updates' log. **Show the end** shows the latest lines; **Download** saves the whole file. Handy when something goes wrong, or to check that sleep screen updates are working.
- **Gestures**: what each KOReader gesture does, in the library and in a book, the same as the launcher's Gestures screen. To look at only: gestures are changed on the Kindle.
- **Tabs**: the order of the tabs at the top, and which are hidden. Drag a tab to move it, or into **Hidden**; on a phone, tap one for **Move up**, **Move down** and **To Hidden**. Home and System always show. It's kept on the Kindle, so every phone and computer shows the same tabs. **Reset** puts them all back.

- **Password**: set, change or remove the page's password, and **Sign out**.
- **HTTPS**: on or off, the Kindle's own certificate or yours (pasted, or from files), **New certificate** and **Remove yours**. See [HTTPS](#https).

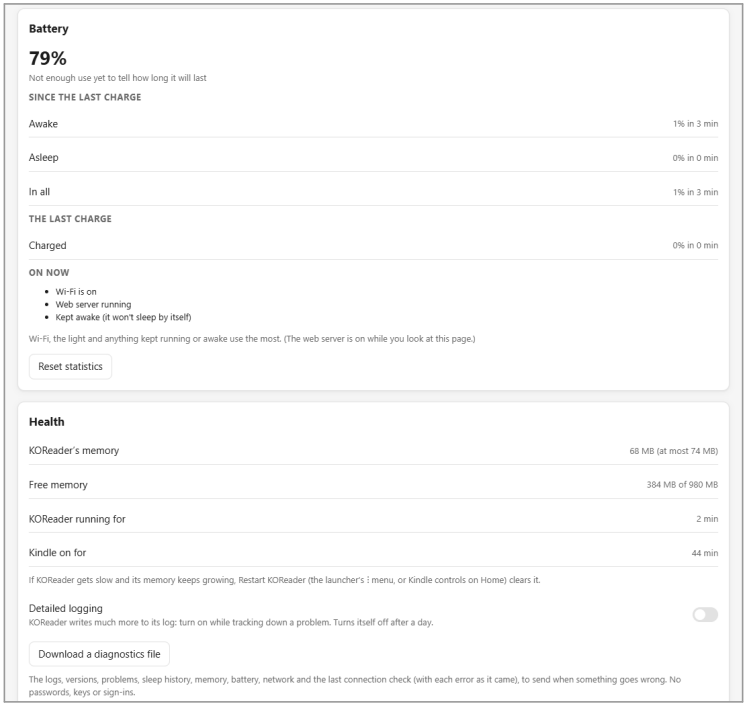

Battery and Health on the System tab

Notes, Crosswords, Wikipedia, Syncthing and SSH

The **Notes**, **Crosswords**, **Wikipedia**, **Syncthing** and **SSH** tabs are covered in their own chapters.

Tips

- Bookmark the address on your phone: it stays the same as long as the Kindle gets the same address from your router.
- Updating plugins, restoring a backup and **Restart KOReader** restart KOReader, which stops the web server. Start it again to keep using the page.
- A password signs out every browser when you change it.

- An upload that stops getting through (a phone gone to sleep, say) is stopped with "Upload failed: the Kindle stopped responding"; upload it again.

Credits

These plugins are built on other people's work. Thank you to:

- **KOReader** (koreader.rocks, AGPL-3.0): the e-book reader these plugins run in, made by the KOReader community. Its own code does much of the work underneath: the screens and menus, gestures, reading statistics, Wikipedia's article download and the SSH client.
- **koreader-syncthing** by jasonchoimtt (github.com/jasonchoimtt/koreader-syncthing, AGPL-3.0): the Syncthing plugin is based on it.
- **Syncthing** (syncthing.net, MPL-2.0): the program that does the syncing, made by the Syncthing project. The release zip includes it, unmodified; its source is at github.com/syncthing/syncthing.
- **Dropbear** (matt.ucc.asn.au/dropbear): the SSH client that comes with KOReader, which the SSH plugin uses.
- **Lucide** (lucide.dev, ISC licence): the icons in every plugin.
- **Noto Sans** (SIL Open Font License) and **Droid Sans Mono** (Apache License 2.0): the fonts in this guide, with symbols from Microsoft's **Segoe UI Symbol**.
- **Wikipedia** and its editors: articles are Wikipedia's, under CC BY-SA.
- **Open-Meteo** (open-meteo.com, CC BY 4.0): the weather forecast and place search without Home Assistant. Weather data by Open-Meteo.com.
- The US **National Weather Service** (weather.gov): weather alerts in the US.
- The crosswords' publishers: puzzles are downloaded from their own websites and belong to them.

Home Assistant, Microsoft To Do, OneNote, Ollama and Claude are their makers' products; these plugins only connect to them.