

6.4.3 Opening adjustment of electronic expansion valve

In case of the controller malfunction or faulty electronic expansion valve coil, electronic expansion valve can be operated with fixed valve opening by using emergency cap.

Caution


If the electronic expansion valve is energized while the coil is removed from valve body, the coil driver with which the valve needle is pushed protrude excessively. In this state, when the valve is restored from emergency operation, the needle may be caught with the driver resulting the valve fully closed. Therefore, be sure not to energize the coil before emergency operation.

[Disenergizing of coil]

○ When controller malfunction


Disconnect the red power supply connector (red : CN5) on the terminal board when removing of controller short circuit connector (SCC1-1 or SCC1-2) to disenergize the electronic expansion valve. (described in the section 6.4.2)

○ When only electronic expansion valve is conducted emergency operation.
Disconnect CN18 on the controller CPU board to disenergize the electronic expansion valve.

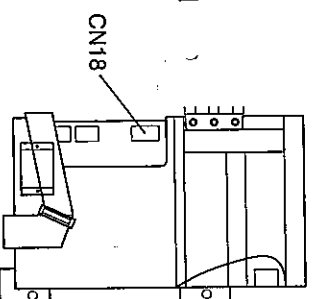

- ① Remove the coil.
- ② Set the emergency cap on the electronic expansion valve body.
- ③ Fully close the electronic expansion valve by turning the minus recessed screw of emergency cap clockwise with miniature driver.
(Tightening torque: approx. 1 kgf · cm The torque is required to tighten the valve softly until the driver stops turning)
- ④ Then slightly open the electronic expansion valve by turning the minus recessed screw of emergency cap counter clockwise for 60°
- ⑤ Apply a loose-free adhesive on the screw.

- ① Remove the coil.
- ② Set the emergency coil cap.
- ③ Fully close.
- ④ Slightly open.

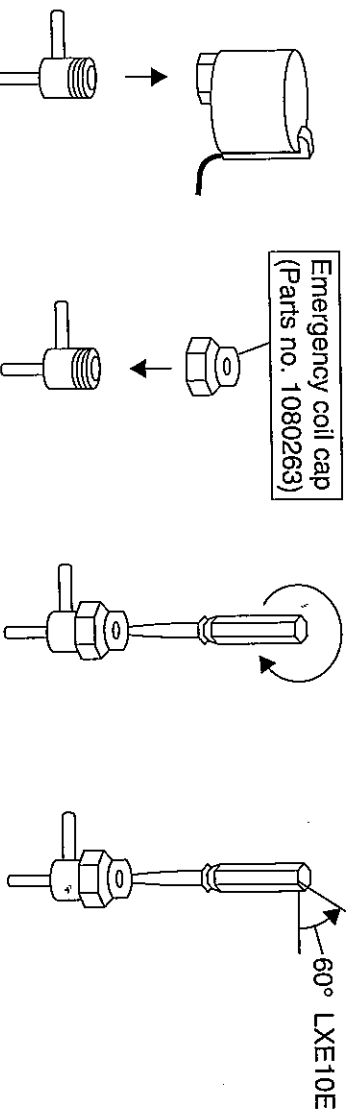

Recommendation *EV opening adjustment during pull-down operation

To shorten the operation hours, it is recommended that the opening be adjusted up to max. 50%.

However if the frost is observed around the comp. body or the super heat is insufficient due to wet operation, close slightly the opening.

