


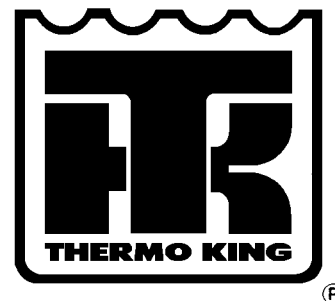

SERVICE BULLETIN



SUBJECT: μ P-A+ Controller Configuration Setting and
Minimum Software Version Requirement

BULLETIN NO. C 010-4

DATE: August 7, 1998

The configuration select function has now been moved into the user "Guarded Access" menu. To change the configuration of the μ P-A+ controller:

NOTE: *To set the configuration block using the μ P-A+ controller keypad, the controller MUST be equipped with software version 05.00.14 or above.*

1. Install a new or remanufactured μ P-A+ controller.
2. Connect unit to 230V or 460V main power and turn Unit On/Off switch ON position.

NOTE: *If power source is not available, operate the controller using battery power. If necessary, connect 12 Vdc battery to battery jack and press [SELECT] key on controller keypad.*

3. a. Determine which security code you must enter to access the Guarded Access submenu.

Code Unit

0007 All units (except those listed for code 0013)

0013 CF-II M32E, M32F, M32G and M32H

- b. Determine which configuration number is required for your unit:

Number	Customer	CF-II Unit Model	Minimum Software Version Required	
02	Sea-Land	M19.7, M19.9	05.00.15 (or above)	
02	Sea-Land	M19.8, M19.10	05.00.19 (or above)	
03	Boyer Alaska	M39.2	05.00.15 (or above)	
03	Toyo	M38	05.00.15 (or above)	
04	Crowley	M39	05.00.16 (or above)	
05	APL, Dole, Genstar	M37.3, M37.5, M37.6, M37.7	05.00.15 (or above)	
06	OOCL	M32E, M32F, M32G, M32H	05.00.18 (or above)	
07	P&O	M40, M40.1	05.00.15 (or above)	
08	Matson	M41, M41.1	05.00.21 (or above)	MGR
09	PIL	M46	05.00.14 (or above)	☐
09	CPV	M37.9	05.00.19 (or above)	
09	Young Brothers	M51	05.00.14 (or above)	SALES
09	Wide Shine	M52, M52.1	05.00.15 (or above)	☐
09	Thermocar	M54	05.00.14 (or above)	
10	OOCL Scroll R404A	M42.1	05.00.15 (or above)	SERVICE
11	P&O Scroll R134a	M42	05.00.13 (or above)	☐
12	Linden Trans	M39.3	05.00.15 (or above)	
13	HMM	M53, M53.1	05.00.17 (or above)	PARTS
14	PIL Scroll R134a	M46.1	05.00.20 (or above)	☐

NOTE: *The μ P-A+ controller must be equipped with the minimum software version (or a more recent version) shown in the table above to properly regulate unit operation. It is NOT necessary to replace a more recent software version (05.00.21 for example) with a previous version (05.00.16 for example).*

4. Press [SELECT] key on controller keypad to enter the MAIN MENU. The display will show "----".
5. Press the [DOWN] arrow key to scroll to "GrAc".
6. Press the [SELECT] key with "GrAc" appearing in the SETPOINT display. The display will show "0000" in the TEMP CODE display with the left digit flashing on and off.
7. Enter Guarded Access code (see step 3a).
 - a. Press and release the [SELECT] key to move the flashing digit to the digit you want to change.
 - b. With the digit you want to change flashing, press the [UP] or [DOWN] arrow key to scroll the digit to the correct number.
 - c. Repeat steps 6a and 6b for each digit you want to change.
8. Press the [ENTER] key with the correct security code entered in the display. The display will show "CId 6 XXXX".
9. Press the [UP] or [DOWN] arrow key to scroll to the "Cb XX" display.
10. Press the [SELECT] key with "Cb XX" appearing in the display to change the configuration number. The EDIT LED will flash.
11. Press the [UP] or [DOWN] arrow key to scroll to the required configuration number (see step 3b).
12. With the required configuration number appearing in the TEMP/CODE display, press [ENTER] key. The display will show "LOAd" for 3 seconds. The controller will then perform a shutdown and restart. After unit start-up, the controller will return to display the current setpoint and controlling air sensor temperature.
13. To verify that the correct configuration block setting was loaded, press the [ENTER] key. The controller will display the application software version, configuration block version and boot block software version currently stored in the microprocessor memory.