


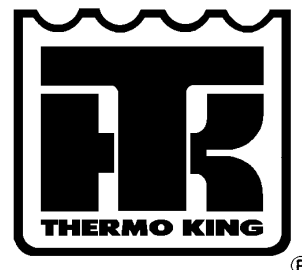

# SERVICE BULLETIN



**SUBJECT:** CRRPS and CSRPS Unit Field Refrigerant Charges

**BULLETIN NO:** C 047

**DATE:** May 30, 2002

The following information is for the recommended field refrigerant charge level in CRRPS and CSRPS models with an MP3000 type controller.

Proper recovery and evacuation procedures must be followed. Refer to CRRPS and / or CSRPS unit maintenance manuals for correct procedures and equipment required.

Due to different types of refrigerant recovery equipment and localized refrigerant charging procedures, the following charge levels have been established for units being repaired and / or recharged at field locations.

**NOTE: The unit serial plate reflects the factory charge level, or the field recommended re-charge level depending on production dates**

## **CRR40PS w/ Standard Receiver Tank**

Factory Charge: 4.9 kg (10.8 lb)

Field Charge: 4.7 kg (10.4 lb)

## **CRR40PS w/ Water Cooled Condenser**

Factory Charge: 5.2 kg (11.5 lb)

Field Charge: 5.0 kg (11.0 lb)

## **CSR40PS**

Factory Charge: 3.6 kg (8.0 lb)

Field Charge: 3.4 kg (7.5 lb)

## **CSR40SL/PS**

Factory Charge: 3.6 kg (8.0 lb)

Field Charge: 3.4 kg (7.5 lb)

## **CSR20SL/PS**

Factory Charge: 3.5 kg (7.7 lb)

Field Charge: 3.3 kg (7.2 lb)

The following units under went a field campaign and have a special charge level:

## **CSR20SL/PS-155, CSR40SL/PS-148 and CSR40SL/PS-167**

Factory Charge: 3.5 kg (7.7 lb)

Field Charge: 3.0 kg (6.6 lb)

MGR



SALES



SERVICE



PARTS



The following valves must be opened / energized before and during recovery / evacuation to ensure all refrigerant is cleared from the system:

**CRR Units (all): Liquid Injection Valve and Liquid Line Solenoid Valve**

**CSR Units (all): Liquid Injection Valve and Warm Gas Bypass Valve**

The valves can be opened / energized two different ways:

1. Use of the 'Manual Function Test' menu to open / energize these valves. By pressing the #5 key on the keypad after selecting the valve you wish to energize, it will increase valve energized time – one press = 5 min, two presses = 10 min, etc

**NOTE: The CRR Liquid Line Solenoid Valve can not be opened / energized with the 'Manual Function Test' menu as it is tied to the compressor operation**

2. Use of a solenoid magnet, P/N 204-1074, to open the valve manually. Unit does not need to be connected to main power connected when using magnet (s)

