



SERVICE BULLETIN



SUBJECT: Setting μ P-G Version 0200 Software for Use on Gensets Equipped with Isuzu or Yanmar Engines

BULLETIN NO. C 043

DATE: November 30, 2000

This bulletin concerns the correct setting of the new "Engine Selection" screen in all units equipped μ P-G controllers and EPROM chips with version "0200" software.

NOTE: The μ P-G controller and EPROM chip are sold separately by Service Parts.

EPROM chip PN 40-751 (now available from Service Parts) is factory programmed with version "0200" software. This software is factory set (Engine Selection screen shows "YAnEN / YES") to control Gensets equipped with a TK 486 (Yanmar) engine. The Engine Selection screen **MUST** be set to "YAnEN / No" when EPROM Chip No. 40-751 is installed on a Genset with a di 2.2 or se 2.2 (Isuzu) engine.

Viewing the Software Version


The software version is stored in the controller memory. To check the software version:

1. Make sure the unit On/Off switch is ON and the LCD display shows the standard display (voltage output).
2. Press the ENTER key for 3 seconds. The display shows the software version ("0100 / rEv" or "0200 / rEv") for 3 seconds.

Setting Version 0200 Software for Use with an Isuzu or Yanmar Engine

NOTE: Version 0100 software does not contain the Engine Select screen and therefore should be only be used on a unit equipped with a di 2.2 or se 2.2 (Isuzu) engine.

1. Make sure the unit On/Off switch is ON and the LCD display shows the standard display (voltage output).
2. Press SELECT key to enter the menu list and scroll to "GUard" in the display.
3. Press SELECT key to access the Guard menu.
4. Enter the current access code "0007" to access the Guard menu. The display will show "GUard / ---".
5. Press the DOWN key until the display shows "YAnEN / YES" (where "YES" means the feature is set for a TK 486 [Yanmar] engine).

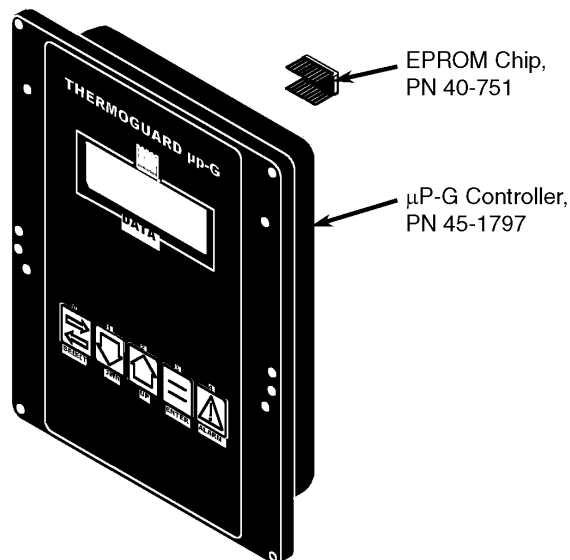

μ P-G Controller and EPROM Chip

6. Press the SELECT key to enter the load Engine Select display. Bottom display flashes "YES".
7. Press the UP or DOWN key to choose the desired engine setting:
 - n0 = di 2.2 or se 2.2 (Isuzu) engine
 - YES = TK 486 (Yanmar) engine
8. When the desired engine setting shows in the bottom display, press the ENTER key. The display flashes "LOAD" and then shows "YAnEN / XXX" (where "XXX" is the new setting).

CAUTION: If a new controller or new software (or chip) has been installed, proceed immediately to "Calibrating the Voltmeter" below.

Voltmeter Calibration

The Voltmeter Calibration feature calibrates the controller to the alternator output. The controller voltmeter should be calibrated whenever a new controller is installed in the unit or when the controller is suspected of displaying inaccurate readings.

NOTE: Version 0100 software does not contain the Voltmeter Calibration screen.

MGR
☐

SALES
☐

SERVICE
☐

PARTS
☐

1. Turn the unit On/Off switch OFF to stop the unit.
2. Disconnect the refrigeration unit from the generator.
3. Turn the unit On/Off switch ON to restart the unit.
4. Check the output voltage at the genset plug. Check the voltage between the three phases. All three phases should be within 3% of each other. Determine the average voltage reading between the three phases.
5. From "GUArD / ---" in the Guard menu, press the DOWN key until the display shows "XXXXX / CAL" (where "XXXXX" is the current voltage reading).
6. Press the SELECT key to enter the load Voltmeter Calibration display. Bottom display flashes "CAL".
7. Press the UP or DOWN key to adjust the top display reading to the average voltage reading determined in step 1.
8. When the correct voltage reading shows in the top display, press the ENTER key. The display flashes "LOAD" and then shows "XXX / CAL" (where "XXX" is the new voltage reading).

